CLA Coupe

Brief overview

Mercedes-Benz



Cockpit - overview



- 1 Door handle
 - Locks the vehicle centrally
 - Unlocks the vehicle centrally
- (2) Seat functions

Adjusts the seat electrically M Memory function and presets

- 1 2 3
- 3 Light switch
- 4 Steering wheel paddle shifters
- 5 Multifunction steering wheel buttons 6 DIRECT SELECT selector lever
- Multimedia system display
- 8 Multimedia system

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Cockpit - overview

Upper control panel

- Selects a DYNAMIC SELECT drive
- program
- ▲ Hazard warning lights
- A ECO start/stop function Parking Assist PARKTRONIC
- (10) Climate control

11) Multimedia system controller

- ★ Favorites button
- 12 (P) Electric parking brake (13) (3) Opens or closes the trunk lid
- Door control panel with controls for power (14) windows and exterior mirror settings



Overhead control panel

- 1 Panoramic sliding sunroof with roller
- ② Buttons for interior lighting and reading light
- (3) (Si Info call* (mbrace System) E.g. for questions on vehicle operation
- (4) Sos SOS button* (mbrace system)
- Breakdown call* (mbrace System)

Note that your vehicle may not be equipped with all features described.

Overview

- 1) Combination switch for turn signals, high-beam headlamps and windshield wipers
- (2) Lever for cruise control/Active Distance Assist DISTRONIC







Lever on the steering wheel

Combination switch – windshield wiper functions


- 1) Single wipe
- Wipes with washer fluid 1 0 Windshield wipers off
- [2] [· · · Intermittent wiping, normal •••• Intermittent wiping, frequent
- Continuous wiping, slow

Continuous wiping, fast

- Combination switch lighting functions
- (1) High-beam headlamps or Adaptive Highbeam Assist
- (2) Turn signal, right 3 High-beam flasher
- 4 Turn signal, left
- MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Activating/deactivating



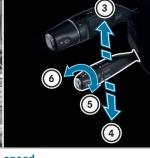

Changing the speed

- 1 Switches on with the current speed or the last set speed
- **Deactivates Active Distance Assist** DISTRONIC
- ③ Increases the speed or stores the current
- 4 Decreases the speed or stores the current
- Increases the specified minimum distance 6 Reduces the specified minimum distance
- Active Distance Assist DISTRONIC maintains a constant speed which has been stored. The lowest speed that can be set is 20 mph (30 km/h).

Active Distance Assist DISTRONIC

You can change the set speed:

- ▶ 1 mph (1 km/h) step: Briefly press the lever up or down.
- 5 mph (10 km/h) step: Press the lever up or down past the pressure point.

When Active Distance Assist DISTRONIC is activated, one or two segments in the set speed range light up in the speedometer.

Using the controller on the DISTRONIC lever, you

can change the specified minimum distance to the vehicle in front. The specified minimum distance depends on the currently driven speed.

Note that your vehicle may not be equipped with all features described.

Climate control



You can adjust climate control using the buttons

on control panel (1). If you change any settings, the lower edge of

display (2) briefly shows the current climate control settings.

Climate control control panel Defrosts the windshield

- Sets climate zones separately
- Activates or deactivates the climate control cooling function.
- Defrosts the rear window
- Reduces the airflow
- Increases the airflow
- **OFF** Completely activates or deactivates climate control.
- AUTO Sets climate control to automatic Air-recirculation mode
- The air in the interior will be recirculated. In air-recirculation mode, the windows can fog up more quickly.
- Residual heat with the engine off Sets the air distribution

MODE Sets the air distribution

Climate control regulates the temperature and

General notes

the humidity in the vehicle interior and filters undesirable substances out of the air. Climate control is only operational when the engine is running. Optimum operation is only achieved when the side windows and the roof are To prevent the windows from fogging up, please

observe the following information: **OFF** Switch off automatic climate control only

- briefly
- Switch on air-recirculation mode only briefly
- A/c Switch on the cooling function. In warm weather, the air inside the vehicle
 - will be cooled. This function also dries the air inside the vehicle.
- If necessary, briefly switch on the windshield defroster.



^{*} Not available in all countries

10 | Starts a dialog (4) 🛨 Cancels a dialog

Operating the Voice Control System



Operating the menu of the on-board computer

1 Scrolls through lists ▼ Selects a submenu or function

Calls up the menu and menu bar \blacksquare

OK Confirms the selected entry

Telephone/media functions

S Accepts a telephone call

Rejects a telephone call Ends a call

Increases the volume ⑦ **| +** |

8 — Decreases the volume

9 Mute function

Voice Control System

Starting a dialog

The Voice Control System allows you to comfortably operate the majority of the multimedia system's functions.

▶ To say a command: Press the 3, button and say a command after the audible signal.

Voice Control System help functions

• General information:

- Say the "Help Voice Control System" command.
- Help for the current function: Say the "Help" command.
- Help for a specific system: Say the help command for the desired system, e.g. "Help telephone".

If you press the 3, button, the possible commands are shown in a help window. You can switch off the display of this help window in the multimedia system. **Examples**

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Navigation commands

"Enter destination" A dialog for entering a destination in the navigation system will be started. Thereafter, say the destination address.

 "Nearest gas station" Many more categories for points of interest are available, e.g. restaurant or tourist attraction. "Navigate to John Doe"

Start route guidance to a contact from your address book.

Telephone commands

"Call John Doe" The telephone number of a stored contact is

"New message" A dialog for entering a text message (SMS) will be started.


Audio commands

"Station Z100" If you are listening to the radio, you can say the name of a station to which you would like to listen.

"Search for music" A dialog in which you can search through your music files will be started.

Note that your vehicle may not be equipped with all features described.

Overview of the multimedia system

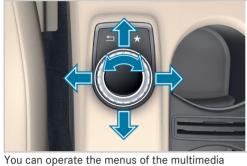

system using the controller.

- Controller: Turn or slide in the direction of the desired entry. Confirm your choice by pressing the controller.



Back button Press and hold: Switches to the basic menu

★ Calls up or changes favorites



Direct buttons for the multimedia system

Radio menu RADIO

MEDIA

Navigation menu NAVI Media menu

Telephone menu TEL

Vehicle/system settings menu

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

(2)

Example image: COMAND **Creating favorites**

- (1) Adds a new favorite
- (2) Renames a selected favorite
- (3) Moves a selected favorite 4 Deletes a selected favorite

For rapid access to functions which are called up frequently, you can create up to 20 favorites.

Adding a pre-defined favorite

- ▶ Press the ★ button. The favorites are displayed.
- Slide the controller down. The menu bar is shown.
- Select Reassign and use the controller to select a category. Select a favorite and store it in the desired
- position.

Adding your own favorite

You can create your own favorites, e.g. telephone numbers or navigation destinations. Example for a telephone number:

Press the TEL button and select Name in the

- Telephone menu. Select a contact and display the telephone number.
- Press and hold the 🖈 button until the favorites are displayed.
- Add a favorite at the desired position.

Operating the multimedia system

Quickly storing radio stations If you are listening to the radio and the Radio

menu is shown in the multimedia system: Press and hold the controller until the station

list is shown.

Select the desired preset in the station list and confirm.

A tone confirms the save.

Note that your vehicle may not be equipped with all features described.

Media

Example image: COMAND Requirement

• Bluetooth[®] is switched on on the mobile phone

- (see the manufacturer's operator's manual). Bluetooth® is switched on on the multimedia
- system.

Searching for a mobile phone

- Press the TEL button on the center console.
- Select Connect Device (1). Audio 20: Select Connect New Device.

on the mobile phone itself.

- Select Connect via Vehicle.
- Select the desired mobile phone. If possible, select the intended usage of the mobile phone (main or secondary phone).
- **COMAND:** Select Search for Phones. Select Start Search.
- Select the desired mobile phone. If your mobile phone is not found, try searching

Authorizing a mobile phone A code is displayed in the multimedia system and on the mobile phone.

If the codes match: If applicable, confirm with

Establishing a Bluetooth® connection

- Yes on the multimedia system.
- Confirm the code on the mobile phone.

Further information Detailed information on Bluetooth® connections

www.mercedes-benz.com/connect

with your mobile phone can be found at:



MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers. Further information on your vehicle

Further information You can find further information on your



1 SD card slot

② USB ports

The USB connection for Apple CarPlay™ and Android Auto™ is marked with the ☐ symbol.



Do not touch the bumper and maintain a distance of around 12 in (30 cm). ➤ To open or close: Kick into the sensor detection area below the bumper.

vehicle at

http://www.mbusa.com If you have any questions, you can optionally also

press the 📞 i button in the overhead control



