

S-Class Coupe

Brief overview

Mercedes-Benz



Cockpit - overview



🗥 WARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

• •	••	•
Cock	nit –	overview
0001		0101101

- (7) Multimedia system display Rocker switches for automatic climate 8 control Multimedia system controller with (9)Seats menu Å Navigation menu NAVI Radio menu RADIO Hazard warning lights Media menu MEDIA Telephone menu TEL Vehicle menu 6 Back button + Shows main functions ⋒∣ 10 С Switches the multimedia system on or off Adjusts the volume VOL Press: switches the sound on or off Lowers or raises the head restraints in the rear compartment Pop Deactivates PARKTRONIC
- (1) Multimedia system touchpad

12 Driving functions

- ECO start/stop function
- ▼▲ DYNAMIC SELECT
- Sehicle level
- Active Parking Assist
- (13) Start/stop button
- (14) (19) Electric parking brake
- (15) Opens or closes the trunk lid
- 6 Door control panel with controls for power windows and exterior mirror settings

17 Door handle

- Locks the vehicle centrally
- Unlocks the vehicle centrally



Overhead control panel

- ① Buttons for interior lighting and reading light
- Use Button for Mercedes me connect*
- (3) (§sos) SOS button*
 (Mercedes-Benz emergency call system)
- Panoramic roof
 Roller sunblind
- ⑤ ☐ MAGIC SKY CONTROL
- * Not available in all countries




Overview

- ① Combination switch for turn signal lamp, high-beam headlamps and windshield wipers
- Lever for electrical steering column adjustment and steering wheel heater

Combination switch – windshield wiper functions	Combination switch – lighting functions

- 1 Single wipe
- 🛱 Wipes with washer fluid
- 1 0 Windshield wipers off
- **2** ••• Intermittent wiping, normal
- 3 Intermittent wiping, frequent
- 4 Continuous wiping, slow
- 5 Continuous wiping, fast
- ① Adaptive Highbeam Assist
- 2 Turn signal lamp, right
- ③ Headlamp flashing
- ④ Turn signal lamp, left

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

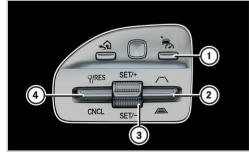

Activating/deactivating

- Activates Active Distance Assist DISTRONIC
- (3) SET/- Active Distance Assist SET/- Activates DISTRONIC with current speed
- (4) MRES Activates with the stored speed/pulls away with Active Distance Assist DISTRONIC
 - CNCL Deactivates Active Distance Assist DISTRONIC



Changing the speed/distance

- Increases the specified minimum distance
 Reduces the specified minimum
- distance

 ③ SET/+

 Increases the speed
- SET/- Reduces the speed

Active Distance Assist DISTRONIC maintains a constant speed which has been stored.

Active Distance Assistant DISTRONIC

The lowest speed that can be set is 12 mph (20 km/h).

You can change the set speed:

- 1 mph (1 km/h) step: briefly press rocker switch ③ up or down.
- 5 mph (10 km/h) step: push rocker switch (3) up or down beyond the pressure point. Using rocker switch (2), you can change the specified minimum distance to the vehicle in front. The specified minimum distance depends

front. The specified minimum distance depends on the currently driven speed. If rocker switch ④ is pressed up twice, Active

Distance Assist DISTRONIC is activated with the speed restriction displayed in the instrument cluster.

Note that your vehicle may not be equipped with all of the features described.

Climate control



Operating possibilities for climate control

You can set automatic climate control using:

- The rocker switches on control panel ① of the center console
- The climate control menu of the multimedia system

Air-conditioning function bar (2) shows the most important settings and the status of automatic climate control.

Automatic climate control panel

- **AUTO** Sets climate control to automatic mode
- **V** Sets the temperature
- Sets the airflow
- At level 0: climate control off
- The air in the vehicle interior is recirculated. In air-recirculation mode, the windows can fog up more quickly.
- Defrosts the windshield
- MENU
 Calls up the climate control menu

 If you press and hold the MENU
 button for approximately 4 seconds, automatic climate control is reset to the basic settings.
- Defrosts the rear window
- A/C Cooling with air dehumidification

Climate control menu of the multimedia system

- To call up the climate control menu: press the MENU rocker switch on the control panel up or down.
- A/C Activates/deactivates the cooling and air dehumidification functions of the automatic climate control
- Climate Mode Changes the air flow
- Air Distribution Sets the air distribution for the driver and front passenger
- Footwell Temperature Adjusts the temperature for the footwell separately
- Rear Operates the automatic climate control in the rear
- SYNC Changes settings for all climate zones in the vehicle simultaneously
- Ionization Freshens the air in the vehicle interior using ionization
- Air Freshener Sets the intensity of the perfume atomizer

- (7) VOL Adjusts the volume
- Press: switches the sound on or off
- (8) [w] Starts a dialog with the Voice Control System or cancels the current Voice Control System voice command
 - ▶ Displays favorites

Operating the menu of the on-board computer

2

1 Back button for the on-board computer

(2) Touch Control for the on-board computer Press: confirms the selection

Operating the multimedia system ③ 🟠 Main menu of the multimedia system (4) Touch Control for the multimedia system Press: confirms the selection 5 **S** Back button for the multimedia system 6 6 Accepts a telephone call

2 Rejects a telephone call Ends a call

3

8

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

The Voice Control System allows you to comfortably operate the majority of the multimedia system's functions.

- To say a voice command: press the w button and speak a voice command after the signal tone.
- If a mobile phone is connected with the vehicle via $\mathsf{Bluetooth}^{(\! \mathbb{R}\!)}$ and you press and hold the wf button, the voice assistant of the mobile phone will be started.

Voice Control System help functions

General information:

Say the "Help Voice Control System" voice command.

- Help for the current function: Say the "Help" voice command.
- Help for a specific system: Say the voice command for the desired system, e.g. "Help telephone".

Examples

Voice commands for Navigation

- "Navigate to Woodward Avenue, Detroit" Starts route guidance to the named address.
- "Navigate to contact John Doe" Starts route guidance to a contact in the address book.
- "Nearest gas station" Further categories are also available: restaurant, parking lot and rest area.

Voice Control System

Voice commands for telephone

"Call Jane Doe"


- Calls the number of a contact in the address book.
- "Latest calls"

Shows the latest calls.

Voice commands for audio mode "Station Z100"

- Calls up stations which are in range or stored stations.
- "Play Moonlight Sonata" Plays the named media file. All tracks available in the system can be used.

Note that your vehicle may not be equipped with all of the features described.

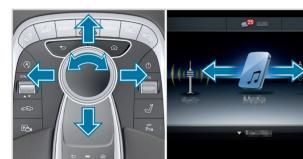

You can operate the multimedia system with the controller, touchpad or Touch Control.

- Controller: turn or slide in the direction of the desired entry.
- Slide to the left or right in order to open a menu.
- Confirm your choice by pressing the controller.



- Touchpad: swipe in the direction of the desired entry.
- Swipe to the left or right in order to open a menu.
- Confirm your selection by pressing.
- Press briefly: returns to the previous display
- Press and hold: calls up main functions
- Calls up main functions 合
- ►► Rapid access to audio sources

Overview of the multimedia system

Favorites

Favorites allow you to quickly call up applications which you use regularly.

- To call up the menu: press the 🟠 button. The main functions are displayed.
- Navigate downwards.
- The favorites bar is shown.
- To create your own favorite: select the desired function in the multimedia system.
- Press and hold the \fbox button until the favorites are displayed.
- Add your own favorites at the desired position. Personalization

You can store your own personal settings for the multimedia system in a user profile.

- To call up the menu: press the button.
 - Select System >> A Personalization.

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.



Zooming the map

Touchpad: move two fingers apart or together.



Controller: turn left or right.



Depending on the audio source to which you are currently listening, you can move to the next radio station or music track.

- To open the access bar: swipe up with two fingers.
- or
- Press the button on the touchpad.
- To select the previous or next station/ music track: using a single finger, swipe up or swipe down.
- To close the access bar: swipe down with two fingers or press \blacktriangleright on the touchpad.



Handwriting recognition

You can enter individual letters.

- To delete c: swipe to the left.
- **To insert a space __**: swipe to the right.

Quickly storing radio stations

If you are listening to the radio and the Radio menu is shown in the multimedia system:

Press and hold the controller or touchpad or the right-hand Touch Control on the multifunction steering wheel. A tone confirms the save.

Note that your vehicle may not be equipped with all of the features described.



Requirement

- Bluetooth[®] is switched on on the mobile phone and visible for other devices (see the manufacturer's operating instructions).
- Bluetooth[®] is switched on on the multimedia system.

Searching for a mobile phone

- Press the TEL button on the center console. Select Devices >> Connect a New Device.
- or
- Select Start Search on System.

The available devices are shown in the display. If your mobile phone is not found, select Search from Device.

Establishing a Bluetooth[®] connection

Further information

Detailed information on Bluetooth[®] connections with your mobile phone can be found at:

www.mercedes-benz.com/connect



MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.



Connecting external media sources

The USB connection for Apple CarPlay[™] and Android Auto[™] is marked with the _____ symbol.

- ① SD card slot
- ② USB ports



HANDS-FREE ACCESS If you carry the KEYLESS-GO key on your person, you will be detected by a sensor.

Do not touch the bumper and maintain a distance of around 12 in (30 cm).

To open or close: kick into the sensor detection area below the bumper.

Further information on your vehicle

Further information

You can obtain further information on your vehicle at:





How-to videos



Operator's . Manuals

Note that your vehicle may not be equipped with all of the features described.