



Mercedes-Benz



COMAND Operator's Manual

As a result of new improvements in equipment and components, some descriptions and illustrations in this operating manual are approximate or may deviate from the features actually included in your COMAND operating unit.

As such, the information, illustrations and descriptions contained in this manual may not be reasonably relied upon in making any claims with respect to the actual performance of the product.

If your COMAND operating unit is equipped with functions which are not described in this operating manual or if you have any questions, please contact any Mercedes-Benz Center for further information.

We recommend that you keep the operating instructions in your vehicle so that you always have them available.

If you sell your vehicle, you should give the operating manual to the new owner.


How to use the COMAND operating manual

Before you take your first drive, please make yourself familiar with the COMAND operating unit and the functions it supports. Read through these operating instructions carefully and, if necessary, refer to the operating instructions of your vehicle.

The operating instructions are divided into 6 chapters:

- **Introduction:** An overview of the operating and display elements as well as explanation of the basic functions
- **Audio:** Information on the radio, tape and CD equipment (CD drive and CD changer) as well as sound settings
- **Telephone:** Explanation of the telephone functions
- **Navigation:** How to enter your destination, selecting your route, route guidance, how to use the route memory, and selecting a detour.
- **Info Services and system settings:** Information on how to request and display service informations, setting language, date/time, tones and day/night display
- **Index:** Search items to help you find exactly what you are looking for

Explanation of symbols used:

Warning notices for the protection of yourself and others are preceded by a  symbol.

Operation – COMAND and telephone



Warning!

In order to avoid distraction which could lead to an accident, system settings should be entered with the vehicle at standstill and system should be operated by the driver only when traffic conditions permit.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car is covering a distance of 50 feet (approximately 14 m) every second.

COMAND supplies you with information to help you select your route more easily and guides you conveniently and safely to your destination. For safety's sake, you should not use some of the functions, such as entering the destination, unless your vehicle is stationary (electronic key in the ignition at position 1).

The navigation system does not supply any information on stop signs, yield signs, traffic regulations or traffic safety rules. This always remains your personal responsibility when you drive.

1 Observe all legal requirements.

Operating safety



Warning!

Any alterations made to electronic components and the software can cause malfunctions.

The radio, amplifier, CD changer, telephone and Voice recognition system are interconnected. Therefore, when one of the components is defective or has not been removed/replaced properly this may impair the function of other components.

These malfunctions might seriously impair the operating safety of your vehicle.

We recommend that you have any service work or alternations on electronic components done in an authorized Mercedes-Benz Center.

Contents

Introduction	1
How to use the COMAND operating manual	1
Operation - COMAND and telephone	2
Operating safety	2
Contents	3
Quick reference - COMAND	8
Multifunction steering wheel, Multifunction display	11
Screen displays	12
Switch the COMAND operating unit on and off	13
Adjusting the volume	14
Selecting beep tones	14
Switching the screen on and off ..	14
Pop-up screen messages when the battery gets low	15
Status window for Tele Aid calls	15

Audio

Contents - Audio	17
Radio operation	18
Quick reference - Radio	18
Menu overview - Radio	20
Switching radio operation on	22
Changing the Radio Band	22
Selecting a station	24
Automatic Station Scan	28
Memory functions	29
Radio playback mute	38
Multifunction steering wheel, Multifunction display	39
Tape operation	40
Quick reference - Tape deck	40
Menu overview - Tape deck	42
Switching tape operation on and off	44
Changing sides	45
Seeking/Skipping tracks	45

Fast forward/rewinding	46
Scanning	47
Repeating tracks	48
Skip blanks	49
Dolby B, Dolby C (noise reduction)	50
Tape playback mute	51
Alarm on serious malfunction ..	51
Notes on tape care	52
Multifunction steering wheel, Multifunction display	55
CD operation	56
Quick reference for CD changer operation (optional)	56
General information on CD playback	58
Loading CDs in the CD changer ..	59
Menu overview - CD operation ..	62
Switching on CD operation	64
Track select	65
Selecting CD's	67

Fast forward / fast backward 69
 CD track scan 70
 Entering, altering and deleting CD names 71
 Selecting playback mode 74
 CD playback mute 76
 Error messages 77
 Tips on caring for your CD's 79
 Multifunction steering wheel, Multifunction display 82
 Sound settings 83
 Adjust sound settings 83

Telephone

Contents - Telephone 91
 Notes 92
 Before you use the telephone 92
 Multifunction steering wheel, Multifunction display 94

Overview of the Multifunction displays 95
 Quick reference - Telephone 96
 Menu overview - Telephone 98
 Switching telephone operation on 100
 Incoming calls 102
 Outgoing calls 106
 Dialing a telephone number 106
 Dialing a number from the phone book 109
 Redial 116
 Dialing from calls list 120
 Speed-dialing (only with COMAND) 121
 Quick-dialing (for the first 10 memory locations) 123
 Notebook 124
 Editing the phone book 125
 SMS function 132
 Emergency call (9-1-1) 136
 Service numbers 139

Navigation

Contents - Navigation 143
 Notes 145
 Before you use the navigation system 145
 Navigation 147
 Quick reference - Navigation 147
 Switching the navigation system on 149
 Changing the Navigation CD 150
 Destination entry 151
 Menu overview - Destination entry 154
 Entering destination address 153
 Continue destination input 158
 Selecting a destination via the map 161
 Entering points of interest 165
 Selecting the last destinations .. 170
 Selecting the route calculation mode and calculating the route .. 171

Route guidance	174	Deviating from the calculated route	201	Entering the vehicle position	212
The principle of route guidance	174	Reaching your destination	201	Calibration	213
Requesting destination and route information	176	Activating audio system	202	Info Services and system settings	
Beginning route guidance	184	Activating audio functions during route guidance	203	Contents - Info Services and system settings	215
Turning onto a street	186	Canceling route guidance	204	Info Services	216
Following the course of the road	187	Destination memory	205	Requesting and displaying Info Services	216
Driving through an intersection	188	Activating the main destination memory menu	205	System settings	219
Changing to map display during route guidance	189	Retrieving a destination from the destination memory	206	Activating the main system settings menu	219
Route guidance with a mixture of map and symbol display	190	Saving the current destination in the destination memory	207	Adjusting the brightness	220
Altering the map scale	191	Saving the current vehicle location in the destination memory	209	Activating Settings menu	221
Selecting map orientation	192	Sorting the destination memory	210	Selecting the language	222
Marking a way point	193	Deleting a destination in the destination memory	211	Set the date and time	223
Selecting a detour during route guidance	196			Switching beep tones on and off	230
Resetting functions during route guidance	200				

Contents

Setting changeover between
day and night display 231
Reset all settings to the factory
settings 232
Auxiliary audio source 233

Index

Index 235

Quick reference – COMAND





- 1 Opens and closes the tape cover and ejects an inserted tape
- 2 Switching telephone operation on, Quick reference, page 100
- 3 Switching radio operation on, Quick reference, page 18
Changing the radio band, page 22
- 4 Switching the CD operation on, Quick reference, page 56
- 5 Switching the tape operation on, Quick reference, page 44
- 6 Press to turn off the screen, Press to switch the screen on again, page 13
- 7 Activating the main detour menu
Selecting a detour during route guidance, page 196
- 8 Switching the navigation system on/off, page 147
Quick reference, page 149
- 9 Repeats current (last) voice instruction
- 10 Radio:
Station selection via number keypad (presets), page 26
Station selection via direct frequency entry, page 27
CD operation:
Selecting tracks, page 65
Selecting CD's, page 67
Telephone:
Entering the unlock code, page 100
Entering a telephone number, page 106
Navigation (Destination input):
Moving the cross hairs according to the corresponding arrows, page 162
- 11 Altering the map scale, page 164 and 191
Subsequent dialing, page 108
- 12 Altering the map scale, page 164 and 191
Subsequent dialing, page 108
- 13 Requesting and displaying Info Services, page 216
Adjust system settings (brightness, language, clock, day/night-display), page 219

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	------------	-----------------------------------	-------

Introduction

10

- 14** Raising  or lowering  the volume for radio, tape and CD for the hands-free operation of the telephone and the voice output during route instruction
- 15** Return to the previous menu
Ending a call, page 119
- 16** Radio:
Automatic seek tuning, page 24
Manual tuning, page 25
Tape deck:
Seeking/Skipping tracks, page 45
Fast forward/rewinding, page 46
CD operation:
Next/previous track, page 65
Fast forward/backward, page 69
- 17** **Turn** to highlight a menu field, list entry or a symbol
Press to activate a submenu, confirm an entry/selection or start a function
- 18** Audio:
Press to mute audio source, press again to cancel mute function
Navigation (voice output):
Press to mute current spoken recommendation,
Press longer than 2 seconds to mute the voice output for the duration of route guidance, page 185
- 19** Switching the COMAND on/off, page 13
- 20** Color screen
- 21** Changing a navigation CD, page 150
- 22** Ejecting a navigation CD

Multifunction steering wheel, Multifunction display



1 Multifunction display

2 Multifunction steering wheel

Turn the electronic key in the steering lock to position 1 or 2. See your vehicle's operating instructions.

Introduction

The steering wheel buttons enable activation and operation of the radio, CD and external audio source (e.g. portable tape deck), the telephone, navigation and Tele Aid. Information such as the radio frequency is shown in the multifunction display.

For more detailed information, refer to “Multifunction steering wheel, multifunction display” in the chapters on the radio, CD, telephone and navigation systems.


Press key:


3  Next system

4  Previous system


Systems which can be activated refer to vehicle operating instructions


5  Next display in the system

6  Previous display in the system

7  Raising the volume

8  Lowering the volume

9  Accept incoming telephone call, page 102
Starts dialing after the selection of a number, page 110, 114

10  End telephone call, End Tele Aid info or
Roadside call, page 102
refuse telephone call, page 102

11

Introduction

Audio

Telephone

Navigation

Info Services and
system settings

Index

Screen displays



Screen displays include:

- Main menus, the radio main menu in the example above
- Lists, e.g. CD names list, page 73
- Input menus, e.g. entering, changing and deleting CD names, page 71
- Selection menus, e.g. selecting playback mode, page 74
- Symbol and map displays in navigation
- Pop-up windows, page 174

Structure of, e.g. a radio main menu:

- 1 Information/status line
Display of the system switched on (FM) and additional information, e.g. 1 (memory location 1) or menu name, e.g. FM Memory

Other system displays:

- AM - AM radio band
- WB - Weather band
- CD - CD operation
- TEL - Telephone
- NAVI - Navigation
- SVC - Info Services and system settings
- AUX - External audio source

- 2 Station frequency, activated functions
- 3 Menu fields which branch off to submenus
- 4 Symbol bar
Reception strength of the mobile phone

Note:

The symbol bar appears in all system main menus as well as in the symbol and map displays in navigation.

Switch the COMAND operating unit on and off



Switch on

Press **PWR**.

The COMAND operating unit is switched on. A warning display is shown.

COMAND switches on with the system which was last active and displays the corresponding menu.

Press the button marked for the equipment you would like to switch on (e.g. **RADIO**).

Note:

If the navigation system was the last system used, there are three different screens which may appear, depending on the last status.

Route guidance was active:

- the symbol display
- the map

Destination entry was active:

- the main destination input menu.


Switch off


Press **PWR**.

The COMAND operating unit will switch off.


Adjusting the volume


Using buttons on the multifunction steering wheel:

Raising the volume - press steering wheel button 

Lowering the volume - press steering wheel button 

On the COMAND operating unit:

Raising the volume - press rocker switch 

Lowering the volume - press rocker switch 

Audio functions for radio and CD operation (CD drive and CD changer):

The volume selected applies to all of the audio functions.

For other audio sources:

Other audio sources are telephone, voice output during route guidance and Voice Recognition System. Refer to separate operating instructions for telephone and voice recognition system. The volume level for voice output in navigation and voice recognition system is the same (altering either affects the other). Telephone volume is adjusted separately.

Altering the listening volume for the telephone affects only the telephone and not navigation or voice recognition system.

Selecting beep tones

To indicate operating steps or error messages acoustically, it is possible to select different beep tones. Beep tones may be switched on and off, page 230.

Acknowledgement beep:

is heard when an entry is accepted


Info beep:


is heard when window displays warn that the battery power is decreasing, page 15.

Alarm beep:

is heard on a serious malfunction (e.g. if the tape cover sticks). This warning can only be switched off by switching the COMAND off.


Switching the screen on and off

Press  to turn off the screen. It is still possible to operate all of the functions.

Press  to switch the screen on again. Information will reappear in the display.

Pop-up screen messages when the battery gets low

To prevent the car battery from running down, the driver will receive two messages to start the engine when battery power gets low. This warning will appear in all of the displays.

It is possible to switch off the warning “Caution. Please turn on ignition. Otherwise system will shut down in 3 minutes” by pressing the rotary/pushbutton . Please, start the engine, refer to the operating instructions of the vehicle.

You can then still operate COMAND.

The next two messages will not disappear until the engine has been started or COMAND has been switched off. It is not possible to operate COMAND while they are on the screen.


First the following warning will appear on the screen: “Caution. Please turn on ignition. Otherwise system will shut down in 10 seconds”. Please, start the engine.

If the engine is not started, COMAND will switch off after 10 seconds. The following message will appear in the display: “Caution. The system will shut down.”. Please, start the engine.

Status window for Tele Aid calls

When the Tele Aid call system is in operation (refer to operating instructions of the vehicle) a pop-up window appears indicating the type of call and status.

During transmission of a Tele Aid call the audio source will be muted until the Tele Aid call is ended.



The window can be cleared by manually by turning or pressing the rotary/pushbutton . It will switch off automatically when the emergency call is completed.

Audio

Contents - Audio	17	Seeking/Skipping tracks	45	Loading CDs in the	
Radio operation	18	Fast forward/rewinding	46	CD changer	59
Quick reference - Radio	18	Scanning	47	Menu overview - CD operation	62
Menu overview - Radio	20	Repeating tracks	48	Switching on CD operation	64
Switching radio operation on ..	22	Skip blanks	49	Track select	65
Changing the Radio Band	22	Dolby B, Dolby C		Selecting CD's	67
Selecting a station	24	(noise reduction)	50	Fast forward / fast backward ...	69
Automatic Station Scan	28	Tape playback mute	51	CD track scan	70
Memory functions	29	Alarm on serious malfunction	51	Entering, altering and	
Radio playback mute	38	Notes on tape care	52	deleting CD names	71
Multifunction steering wheel,		Multifunction steering wheel,		Selecting playback mode	74
Multifunction display	39	Multifunction display	55	CD playback mute	76
Tape operation	40	CD operation	56	Error messages	77
Quick reference - Tape deck ...	40	Quick reference for CD changer		Tips on caring for your CD's	79
Menu overview - Tape deck	42	operation (optional)	56	Multifunction steering wheel,	
Switching tape operation		General information on CD		Multifunction display	82
on and off	44	playback	58	Sound settings	83
Changing sides	45			Adjust sound settings	83


Quick reference – Radio

 


- 1 Switching radio operation on and off, page 22
- 2 Station selection via number keypad (presets), page 26
Station selection via direct frequency entry, page 27
Saving stations, page 29
Selecting stations from the preset menu, FM/AM, page 35
Selecting channels from the WB preset menu, page 36
- 3 Raising  or lowering  the volume, page 14
- 4 Automatic seek tuning, page 24
Manual tuning, page 25
- 5 **Turn** to highlight a function or a menu field, **Press** to perform a function or access a submenu
- 6 Adjust system settings (brightness, language, clock, beep tones), page 230
- 7 Return to previous menu
- 8 Press to mute radio audio, press again to cancel mute function, page 38
- 9 Switching the COMAND on and off, page 13
- 10 Color screen with main radio menu

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	--------------	-----------	------------	-----------------------------------	-------

Menu overview - Radio

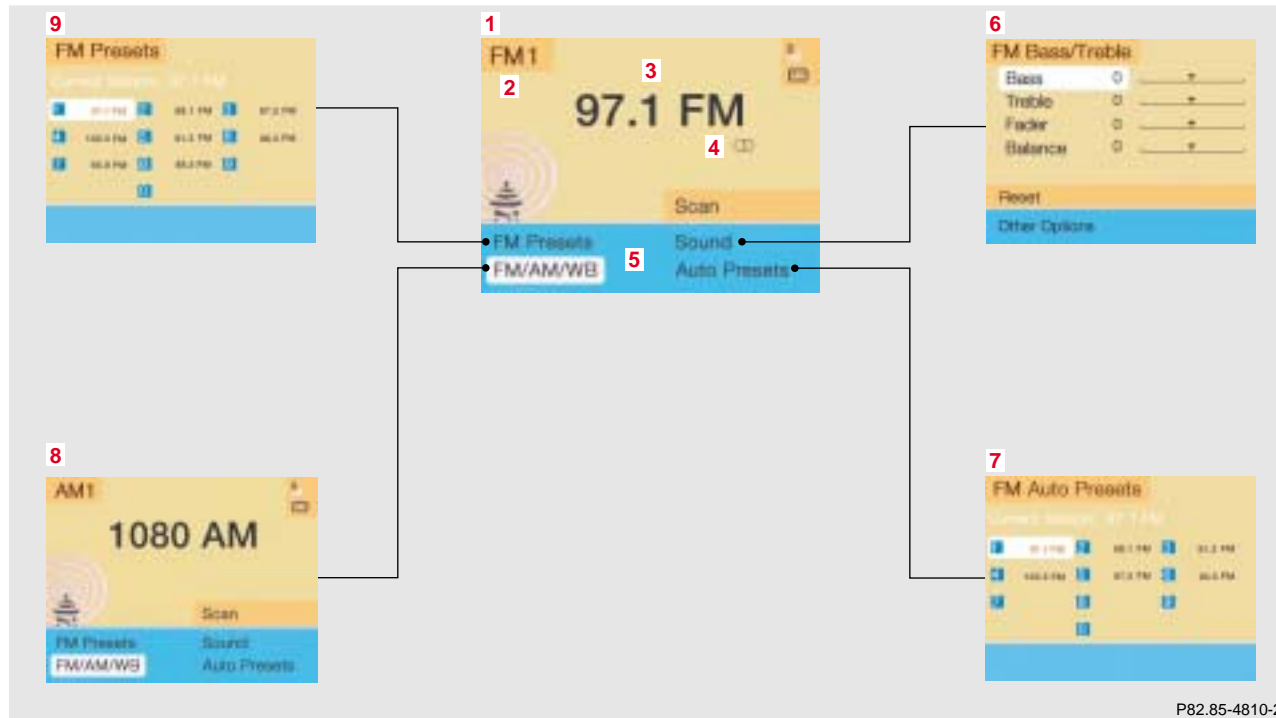

- 1 Main radio menu FM
- 2 Current band (FM) and memory preset selected (1) are displayed
- 3 Current frequency
- 4  symbol indicates stereo reception
- 5 Menu fields to activate submenus
- 6 Main sound settings menu, Adjust sound settings, page 83
- 7 Auto preset
Save stations automatically, FM/AM, page 32
Select a station, page 33
- 8 Main radio menu AM, page 23
Activate Weather band (WB), page 23
- 9 Preset menu
Save stations manually FM, page 29
Save stations manually AM, page 31
Select a station, page 35

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Switching radio operation on and off



Switching on the radio

Press **RADIO**. The radio will switch on.

The station last tuned to will begin to play. On FM and AM frequency will appear in the display.

You can operate the telephone and navigation system while the radio is on.

Switching off the radio


Press **RADIO** while the main radio menu is on the screen.


The following message will appear: "Radio off".

To switch to another system, press the corresponding button.

Changing the Radio Band



You can select the FM-, AM- and WB-band one after the other by repeatedly pressing the rotary/pushbutton  while “FM/AM/WB” is highlighted.

Press the rotary/pushbutton  to confirm the marked menu field “FM/AM/WB”.

The station last tuned to will begin to play. The frequency will appear in the display.


Frequency ranges:

- FM 87.9 – 107.9 FM
- AM 530 – 1710 AM

Radio operation

Weather Band (WB)



Highlight the “FM/AM/WB” menu field and press the rotary/pushbutton  repeatedly until “WB” is displayed in the upper left hand corner of the display.

The channel last tuned to will appear in the display.

If a weather band station cannot be received on this channel an automatic search run of all 7 channels will take place. As soon as a weather band station is received, the search run stops and the channel appears in the display. Two cycles through the 7 channels will be made.

If a weather band station cannot be received on any of the 7 channels the screen message “No WB” appears.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Radio operation

24

Selecting a station

Different functions are available for selecting a station:

- Automatic seek tuning, page 24
- “Seek” tuning at the multifunction steering wheel, page 25
- Manual tuning, page 25
- Station selection via number keypad (presets), page 26
- Station selection via direct frequency entry, page 27
- Automatic Station Scan, page 28
- Station selection from the preset menu, page 35

Automatic seek tuning**FM- and AM-Bands:**


Press **◀** or **▶** on the rocker switch briefly. The next receivable station in the direction of seek (descending/ascending) will be tuned in and begin to play. The station frequency will appear on the screen.


Weather Band (WB):

Press **◀** or **▶** briefly to select the next receivable station. Alternatively press a number key **1** through **0** and that station will be directly selected.

“Seek” tuning at multifunction steering wheel

With station frequency displayed in the multifunction display:

Select next higher frequency preset – press 



Select next lower frequency preset – switch 

Note:

The up/down arrows have different functions depending on which mode the seek function in the multifunction display is programmed to. The two available options are Memory Scan or Frequency Scan. Refer to the vehicle operator’s manual on how to program this option.

Manual tuning (FM, AM)



Press  or  on the rocker switch for longer than 2 seconds. The menu fields will appear in light grey lettering.

FM band:

The frequency displayed will change in the corresponding direction in increments of 0.2 MHz.

AM band (activate via “FM/AM/WB” menu field):

Tuning will take place in increments of 10 kHz.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	------------	-----------------------------------	-------

Radio operation

26

Station selection via number keypad (presets)

Press one of the number keys, such as  briefly.

The radio will tune to the frequency assigned to that memory location. If none has been set by the user, a default frequency will appear.


Note that FM and AM presets are independent and can only be accessed while in the corresponding band.

For WB, tune the radio to the selected channel. The memory preset number will appear in the status line.

Saving stations (FM, AM), page 29 through 33.

The “XX Presets” (XX = FM, AM or WB) menu field provides an overview of which stations have been allocated to which memory presets, page 30.

Station selection via direct frequency entry

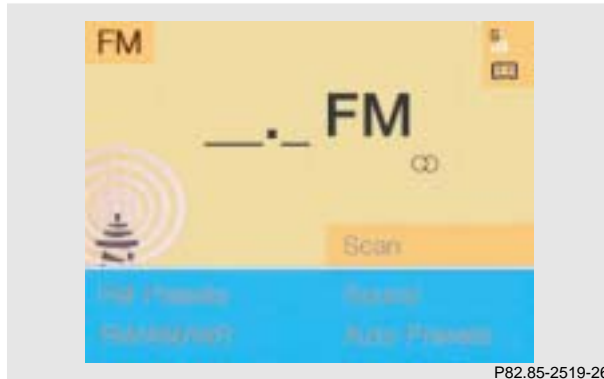

It is possible to set a station by entering the station frequency directly via the number keypad.

Press ***←** (bottom left on the keypad). An input line will appear in the main radio menu.

Use the number keys to enter the desired frequency, e.g. **1 0 2 . 7** for 102.7 FM (FM waveband).

The display in the main radio menu will now indicate the new frequency. The station will begin to play.

Notes:

Frequencies can be entered only for FM and AM. If no entry is completed within 8 seconds, the station last tuned will resume play.

Enter in given frequency range.

Frequency ranges:

- FM 87.9 – 107.9 FM
- AM 530 – 1710 AM

If you enter a frequency that is outside the allowable input range, you will see the display “Invalid input”. Repeat entry with new frequency.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------


Radio operation

28

Automatic Station Scan


P82.85-2520-26

The stations on same band (FM/AM/WB) can be scanned one after the other for 8 seconds each.

Once the “Scan” menu field has been selected, press the rotary/pushbutton  to confirm it.

The scan function will begin, “Scan” will appear in red lettering.

To play a station (end scan function):

If the station you want is being played, press the rotary/pushbutton  again.

The station selected will appear on the screen with the frequency. “Scan” will appear in black lettering again.

Scanning Weather Band (WB)

With the scan function the individual weather stations stored in the memory on 7 channels can be scanned one after the other for 8 seconds each.

The scan function stops automatically when the first station received has been scanned twice.

Memory functions

The following functions are available:

- Saving stations manually, FM, page 29
Saving stations manually, AM, page 31
- Saving stations automatically, FM/AM, page 32
- Selecting stations from the preset menu, FM/AM, page 35
- Selecting channels from the WB preset menu, page 36
- Selecting stations by entering the station frequency in the presets, FM/AM, page 37

Note:

There are 2 memories for each of the FM and AM waveband, standard FM/AM presets and the Auto presets.

The standard FM/AM presets are not affected by the automatic presets. This is a second possibility for storing a station range you are currently receiving.

Saving stations manually, FM



P82.85-2521-26

In the main radio menu:

Press the corresponding number key, e.g. **3**, for longer than 2 seconds. You will hear a confirmation beep if this was switched on before, page 14.

The currently displayed station will be saved in the memory corresponding to for that number key. There are 10 memory presets available. The memory preset selected (0 to 9) will appear in the status line.

Note:

An existing entry is overwritten in the memory list when a new input is given.

Radio operation


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------




P82.85-2968-26

- 1 Preset of the station currently selected
- 2 Frequency of the station currently selected
- 3 Current frequency appears in red lettering, cursor highlights memory preset no. 1
- 4 Memory preset allocated
- 5 Memory preset available

On the memory list:

Use the rotary/pushbutton  to highlight the “FM Presets” menu field in the main radio menu and confirm it. The FM preset memory menu will appear on the screen.

Use the rotary/pushbutton  to move the cursor to the desired memory location.

Press the rotary/pushbutton  or corresponding number key for longer than 2 seconds.

The main radio menu will appear, with the new memory preset number, automatically after 3 seconds or after you press the key **BACK**.

Note:

The standard FM presets are not affected by the automatic presets. This is a second possibility for storing a station range you are currently receiving.

Saving stations manually, AM



Use the “FM/AM/WB” menu field in the main radio menu to activate the AM band.

Use the “AM Presets” menu field to activate the corresponding memory.



Save a station in the same way as described for the FM band, page 29.

Note:

The standard AM presets are not affected by the automatic ones. This is a second possibility for storing a station range you are currently receiving.

Saving stations automatically, FM/AM

Use the "FM/AM/WB" menu field in the main radio menu to activate the desired band.


Use the rotary/pushbutton  to highlight the "Auto Presets" menu field and press the knob for longer than 2 seconds.

While the station is being saved "Searching..." will appear on the screen.



The 10 strongest stations will be searched and stored. The station frequencies available will appear in the memory list.

Select other stations:

Use the rotary/pushbutton  to highlight the memory position and press to confirm.

The main radio menu will appear, for the frequency selected, automatically after 3 seconds or after you press the key **BACK**.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------


Radio operation

Weather band



Use the “WB Presets” menu field in the WB main menu (page 23) to activate the WB Presets.

34

Use the rotary/pushbutton  to highlight the “WB Presets” menu field and press the knob to confirm. This will activate the memory.

Channels 1 to 7 are listed in the memory.



The memory positions of the channels for weather band are fixed and cannot be altered.

Selecting stations from the preset menu, FM/AM



In both cases, the main radio menu will then appear automatically after 3 seconds, indicating the memory preset number.



Use one of the following two ways to select a station from the FM/AM presets:

- Press the corresponding number key (e.g. ) to select the desired station.
- Use the rotary/pushbutton  to highlight a memory preset in the preset list (FM/AM) and press briefly to confirm.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Selecting channels from the WB preset menu

Use the “WB Presets” menu field in the WB main menu (page 23) to activate the WB Presets.

Press the corresponding number key (e.g. ) or use the rotary/pushbutton  to select the desired channel and press briefly to confirm.

The station on this channel will be received.

The main WB menu will then appear automatically after 3 seconds, indicating the memory preset number.

Selecting stations by entering the station frequency in the presets, FM/AM



The station frequency can be entered in FM and AM bands in the corresponding presets list.

To activate the input mode:

Press **[*]**.

An input line will appear on the top line in place of the current station name.

Enter the frequency with the number keys.

The frequency is entered into the input line beginning from the right. After 3 seconds at the most, the station selected will begin to play.

Notes:

Enter in given frequency range.

Frequency ranges:

- FM 87.9 – 107.9 FM
- AM 530 – 1710 AM

If you enter a frequency which is not within the given range, the following message will appear: "Invalid input".


Repeat enter with new frequency.

Radio operation

38

Radio playback mute

Press **MUTE** while listening to the radio.





The radio will be muted and the symbol  will appear on the icon bar.

Cancel radio mute:


Press **MUTE** again.

The symbol will disappear from the icon bar and the station last tuned to will begin to play.

Note:


The mute function will also be cancelled if you switch to a different audio source (e.g. CD) use  or  to select another radio station or use  or  to alter the volume.

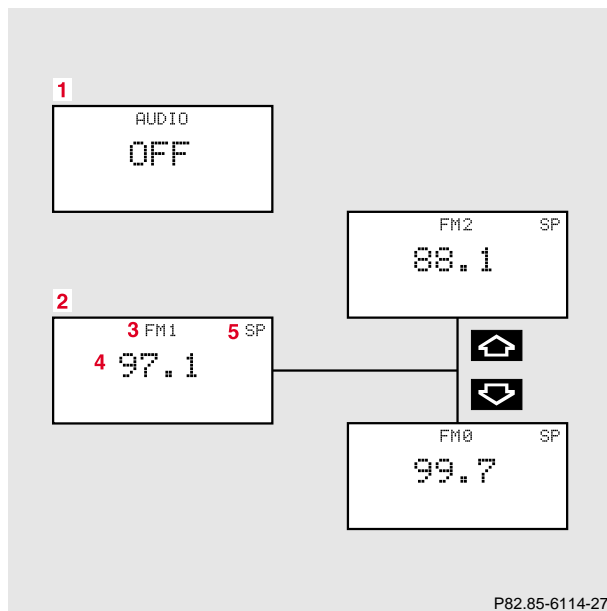

Multifunction steering wheel, Multifunction display






- 1 No audio function has been switched on.
- 2 The radio is switched on.
- 3 Frequency selected as well as the memory preset, if applicable.
- 4 Frequency of the station selected
- 5 Appears only if "Memory" has been selected instead of "Frequency" in the "Individual settings" menu in the instrument cluster. See your vehicle's operating instructions of the instrument cluster.

Press **RADIO** on the COMAND and switch the radio on.

Press  repeatedly, as necessary, until display (2) appears.

Press  or  until the desired station name or frequency appears.


 or  can also be used to select a station frequency which has been saved. This depends on the setting selected in the "Individual settings" menu. See your vehicle's operating instructions of the instrument cluster.







Press  to display the next system.

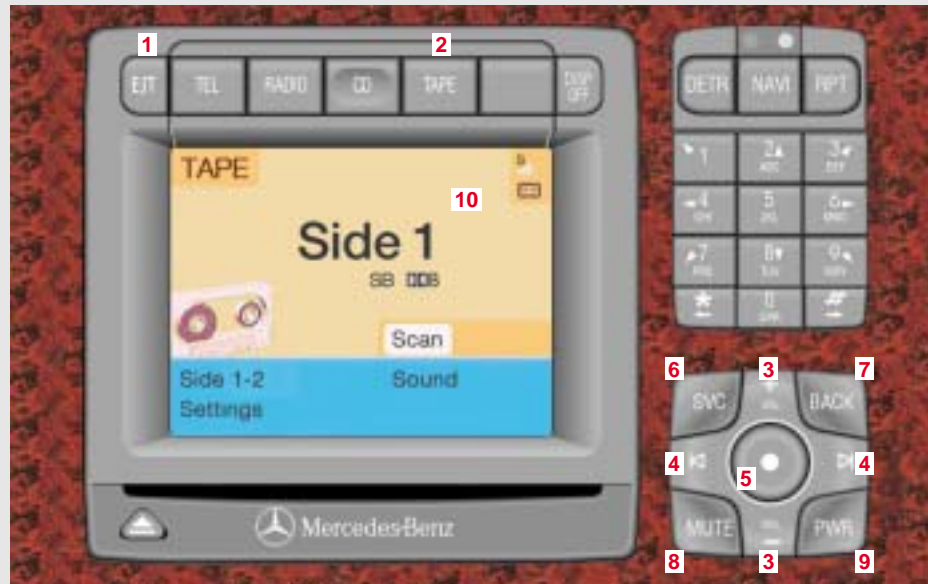Tape operation

40


Quick reference – Tape deck



- 1 Opens and closes the tape cover and ejects an inserted tape
- 2 Switching tape operation on and off, page 44
- 3 Raising  or lowering  the volume, page 14
- 4 Press  briefly: next track, page 45
Press  for longer than 2 seconds: fast forward, page 46
Press  briefly: previous track or beginning of current track, page 45
Press  for longer than 2 seconds: rewind, page 46
- 5 **Turn** to highlight a function or menu field
Press to perform a function or activate a submenu
- 6 Adjust system settings (brightness, language, clock, beep tones), page 230
- 7 Recalls previous menu
- 8 Press to mute tape audio, press again to cancel the mute function, page 51
- 9 Switching the COMAND on and off, page 13
- 10 Color screen with main tape menu

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	--------------	-----------	------------	-----------------------------------	-------

Menu overview – Tape deck

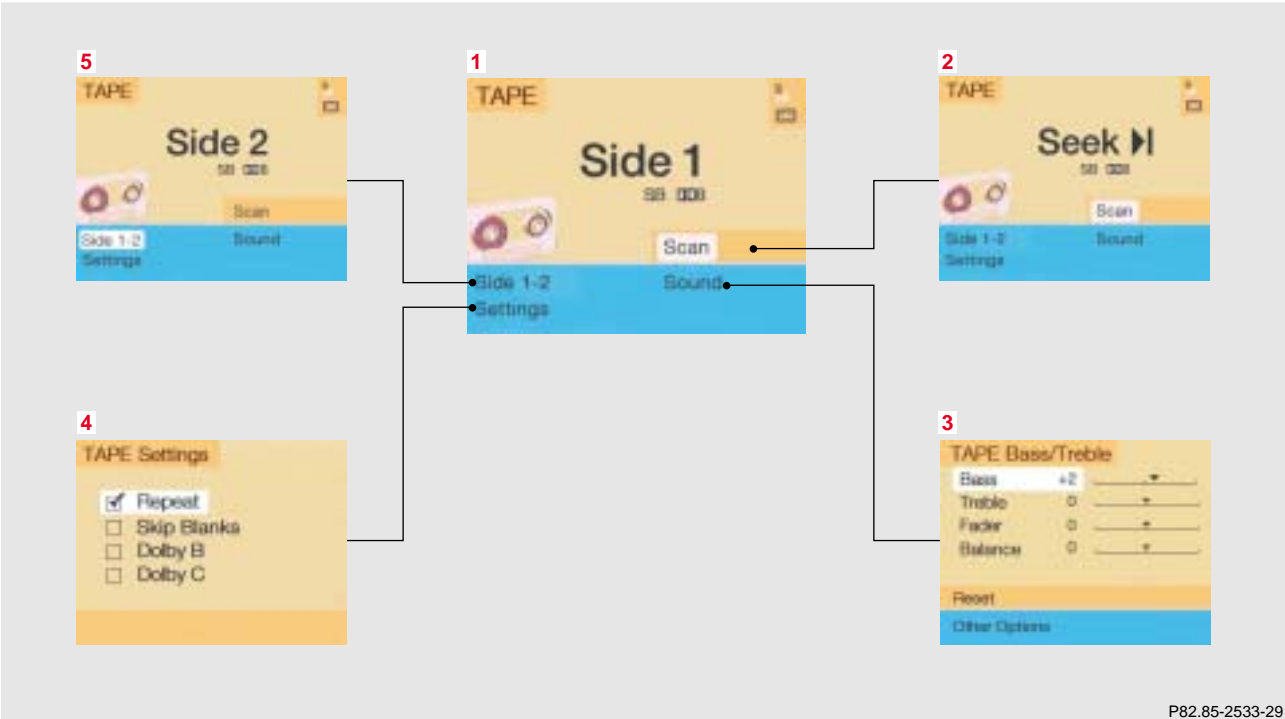


- 1 Main tape menu
- 2 Scan function, scanning tracks, page 47
- 3 Main sound settings menu
Adjust sound settings, page 83
- 4 Tape settings
Repeating tracks, page 48
Skip blanks (fast forwards ignoring blanks),
page 49
Dolby B, Dolby C (noise reduction), page 50
- 5 Main tape menu after changing sides, page 45

Tape operation

44

Switching tape operation on and off

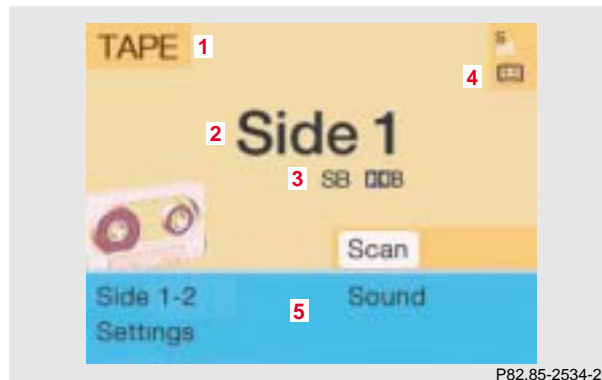

- 1 Status line, tape system switched on
- 2 Side display
- 3 Settings selected, page 48 through 50
- 4 Tape symbol indicates that a tape is inserted in the tape deck
- 5 Menu fields

Inserting/Ejecting a tape

Press **EJT** to open the cassette slot and then insert the tape with the wider portion toward the right.

Tape operation begins:

- automatically
- if you press **TAPE** when a tape is already inserted in the system.

The side which is currently playing will be indicated in the main tape menu with “Side 1” or “Side 2”. The tape slot cover will close if you press **EJT** or automatically after approx. 30 seconds.

To eject a tape, press the **EJT** button and the tape will be presented for removal. After removing the tape, close the opening by pressing **EJT**.

Notes:

Message “No tape” – no tape is inserted. Please insert a tape.

Message “Tape error” – malfunction during playback (e.g. tape jammed). Press **EJT** and remove the tape. Tape side 1 is the side facing up in the cassette slot.

The telephone and navigation functions can be used while a tape is playing.


Switch off tape playback

Press **TAPE** when the main tape menu is on the screen. The message “Tape off” will appear on the screen.

To switch to another system, press the corresponding system button.


Changing sides




Use the rotary/pushbutton  to highlight the “Side 1-2” menu field and confirm your selection. The other side will now begin to play.

The side will change automatically when the end of the tape has been reached. The side currently playing will appear in the main tape menu.

Seeking/Skipping tracks

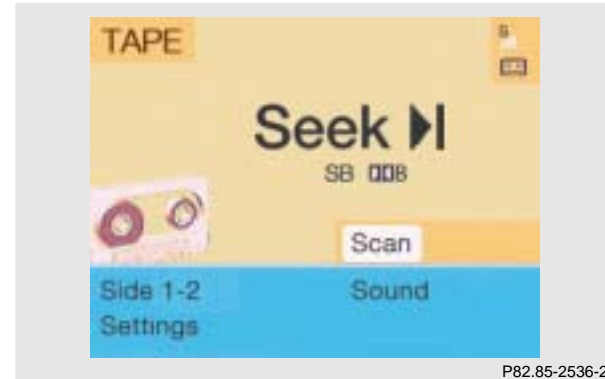

Press  briefly: next track

Press  briefly: previous track or beginning of current track (depending on elapsed playing time)

The tape will wind to the next or previous track. “Seek” will appear on the screen. Playback will then begin.

Note:

The seek tuning function will not work properly unless there is enough blank tape (approx. 2 seconds) separating the individual tracks.

Tape operation


45


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Tape operation

 
Fast forward/rewinding




Press  for longer than 2 seconds: fast forward

Press  for longer than 2 seconds: rewind



One of the following messages will appear on the screen:

“Forward ” (fast forward)

“ Rewind” (rewind).

46


To stop the function:

Press  /  on the rocker switch. Playback will resume.

Note:

When the end/beginning of the tape is reached, winding stops automatically and playback begins. The tape switches automatically to the other side at the end of a fast forward operation.

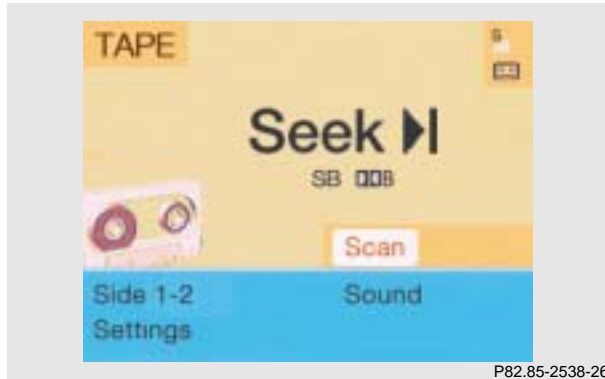


Scanning



The tracks on a tape can be scanned one after the other for 8 seconds each if there is enough blank tape separating the individual tracks (approx. 2 seconds).

Use the rotary/pushbutton  to highlight and confirm the “Scan” function. Scan will begin and “Scan” will appear in red. The message “Seek” will appear on the screen.

To end function:

Press  /  on the rocker switch or press the rotary/pushbutton . Playback then starts.


Note:


At the end of the tape, the tape will automatically switch to the other side and scan will continue.


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Tape operation

Repeating tracks

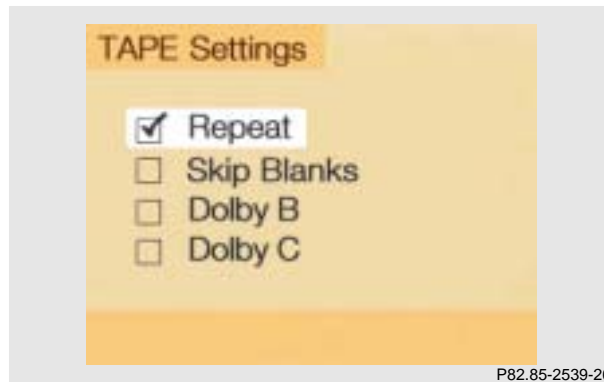


Use the rotary/pushbutton  to highlight the “Settings” menu field and press it to confirm your selection. The Settings menu will now appear.

Press the rotary/pushbutton  to highlight and activate the “Repeat” function (a checkmark will appear).

There are three ways to return to the tape menu:

- automatic return after 8 seconds
- press **BACK**

48

- hold the rotary/pushbutton  longer than 2 seconds

“RPT” will appear below the side display when this function is active.


Notes:

The current track will be repeated continuously after it has played through once.


The “Repeat” function may not work properly if:


- there is not enough blank tape between the individual tracks,
- there is interference noise on the blank tape between the tracks,
- the system does not clearly recognize the end or beginning of a track.

To switch off the function:


In the menu “TAPE Settings” highlight the function “Repeat” with the rotary/pushbutton  and confirm by pressing (no checkmark).

Skip blanks

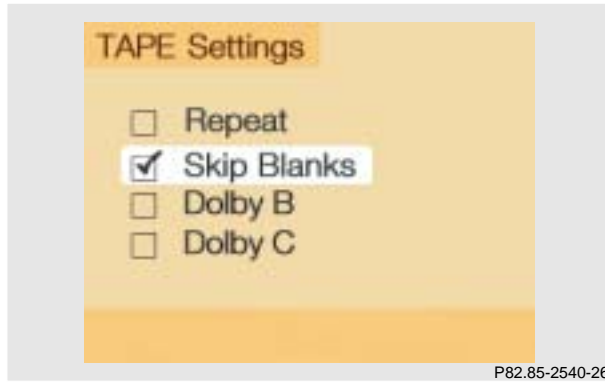

Turn the rotary/pushbutton  to highlight the "Skip blanks" function in the "Settings" menu field and press it to confirm your selection (a checkmark will appear).

There are three ways to return to the tape menu:


- automatic return after 8 seconds
- press **BACK**
- hold the rotary/pushbutton  longer than 2 seconds

If the function is activated "SB" is displayed below the track information.

Note:


If the tape deck does not detect a sound signal for longer than 15 seconds, it will fast forward to the next track. This function will continue after the tape has reached the end and switched to the opposite track.


To switch off the function:

In the menu "TAPE Settings" highlight the function "Skip Blanks" with the rotary/pushbutton  and confirm by pressing (no checkmark).


Tape operation

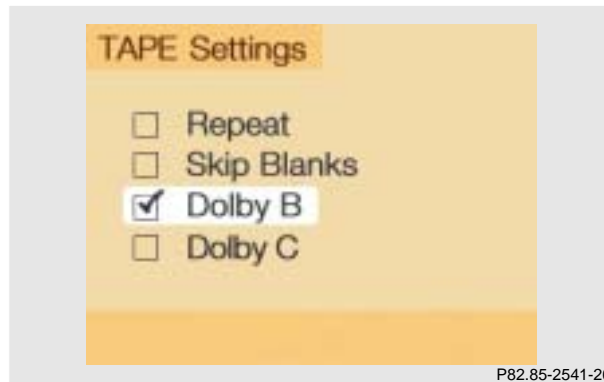

50

Dolby B, Dolby C (noise reduction)

Turn the rotary/pushbutton  to highlight the “Dolby B” or “Dolby C” function and press it to confirm your selection (a checkmark will appear).

There are three ways to return to the tape menu:


- automatic return after 8 seconds
- press **BACK**
- hold the rotary/pushbutton  longer than 2 seconds

The  or  symbol will appear below the side display when this function is active.


Notes:

Dolby B and Dolby C cannot be selected simultaneously.

The functions serve the optimum playback of tapes recorded with Dolby B or Dolby C.


The Dolby noise reduction system is manufactured under licence by Dolby Laboratories Licensing Corporation. The word Dolby and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

Switching the function off:

In the menu “TAPE Settings” highlight the function “Dolby B” or “Dolby C” with the rotary/pushbutton  and confirm by pressing (no checkmark).

Tape playback mute

Press **MUTE**.

The tape will stop playing and the symbol  will appear on the icon bar.

Cancel playback mute:


Press **MUTE** again.

The symbol will disappear from the icon bar and the playback will start again.

Note:

The mute function will also be cancelled if you switch to a different audio source (e.g. CD) use **◀** or **▶** to select another radio station or use **VOL+** or **VOL-** to alter the volume.

Note:


The note “Reminder! Please clean tape head.” appears after 50 hours cassette player operating time. Erase the screen message by pressing the rotary/pushbutton . Insert cleaning cassette.

Alarm on serious malfunction


If, for example, a tape jams, you will hear a beep. You can only switch the beep off by switching COMAND off.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	--------------	-----------	------------	-----------------------------------	-------


Notes on tape care

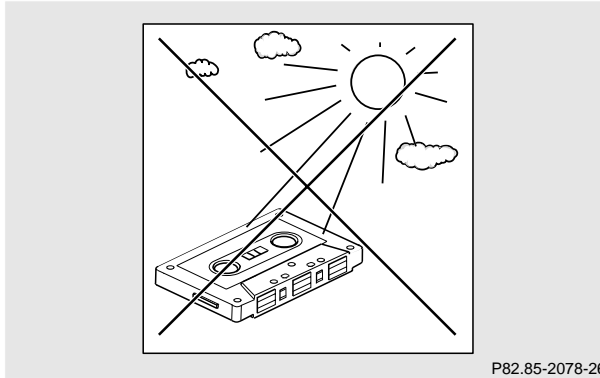


Do not expose the tapes to direct sunlight or high temperatures.

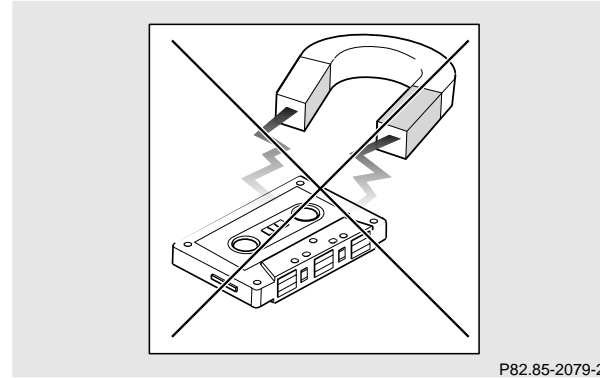

Do not leave tapes near magnetic fields or magnets.

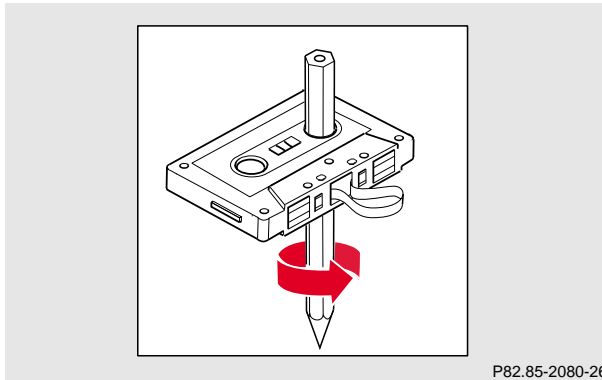

Ensure that the tape is adequately tightened before you insert it into the tape slot.

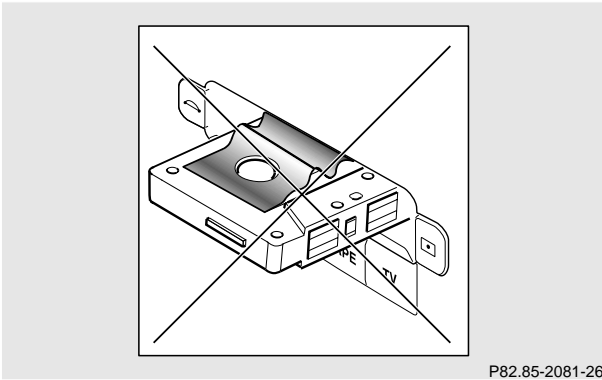


Do not insert a tape if its label is not stuck on properly.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Tape operation

54

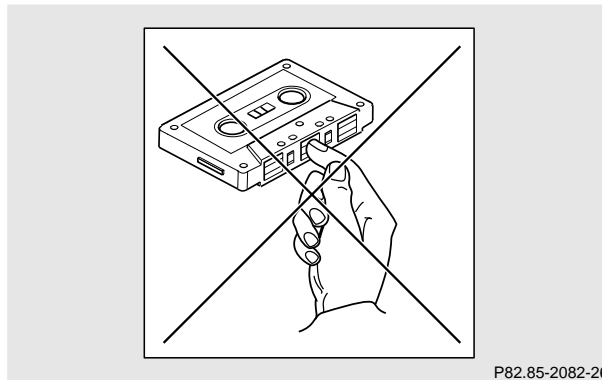


Do not touch the tape.

Note:

It is not possible to use tapes with a playing time of longer than 120 minutes.


The message “Caution. Please clean sound head.” is displayed after 50 hours of playback.

Clear the screen message by pressing the rotary/pushbutton . Insert a high quality cleaning tape.

Note:

For questions concerning the type of tape cleaner to use, contact your Mercedes-Benz Center.

Multifunction steering wheel, Multifunction display

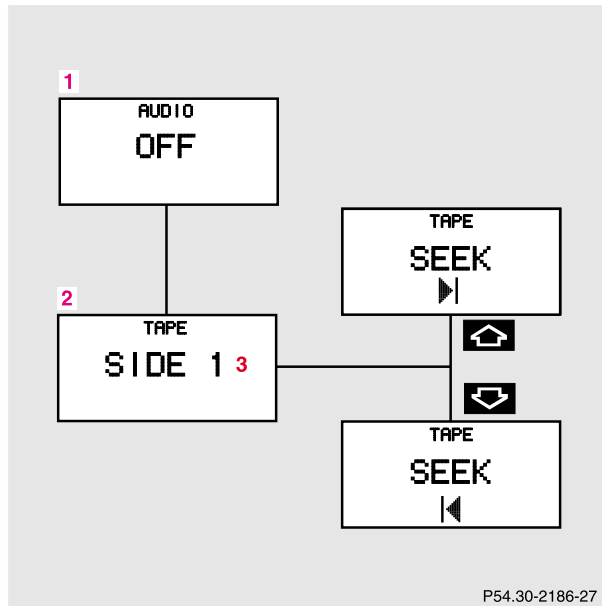

- 1 No audio function has been switched on
- 2 The tape deck is switched on
- 3 Side currently playing

Press **TAPE** on COMAND and switch the tape deck on.

Press repeatedly necessary until display (2) appears.

Press to fast forward to the next track.

Press to rewind to the beginning of the same track, or to go back to the previous track.

Press to display the next system.







Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	--------------	-----------	------------	-----------------------------------	-------

CD operation

56

Quick reference - CD changer operation (optional)



- 1 Switching CD operation on and off, page 64
- 2 Track select, page 66
Selecting CD's, page 67
- 3 Raising  or lowering  the volume, page 14
- 4 Press  briefly: next track, page 65
Press  longer than 2 seconds: fast forward, page 69
Press  briefly: previous track, page 65
Press  longer than 2 seconds: fast backward, page 69
- 5 **Turn** to highlight a function or menu field
Press to perform a function or activate a submenu
- 6 Adjust system settings (brightness, language, clock, beep tones), page 230
- 7 Return to previous menu
- 8 Press to mute CD audio, press again to cancel mute function, page 76
- 9 Switching the COMAND on and off, page 13
- 10 Color screen with main CD menu

General information on CD playback**Warning!**

The CD changer is a Class 1 laser product. There is a danger of invisible laser radiation if the cover is opened or damaged.

Do not remove the cover. The CD changer does not contain any parts which can be serviced by the user. For safety reasons, have any service work performed only by qualified personnel.


Notes:

An 8-cm CD adapter may cause damage to the CD changer and should not be used.




Use only CDs which bear the label shown above. Load the CD changer with 12-cm CDs only, do not use 8-cm CDs.

Loading CDs in the CD changer

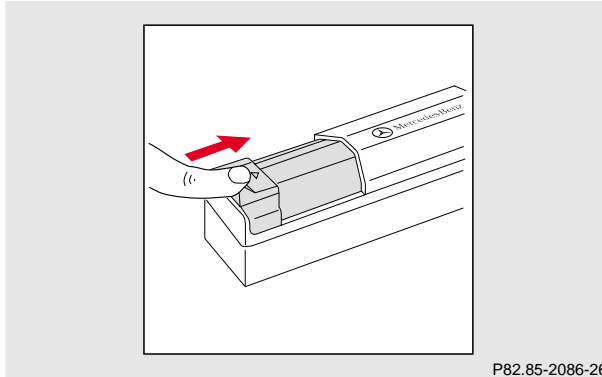

The CD changer is in the trunk. It can accommodate up to 6 CDs.

Open the sliding door by pushing in the direction of the arrow indicated above. Push the door completely open until it locks in the open position.

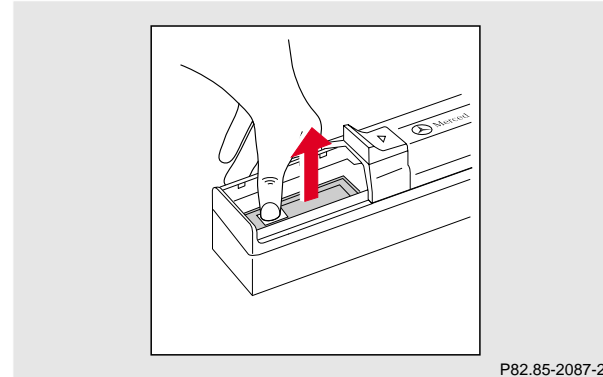

Press the green eject button. The magazine will slide upwards.


Note:

The magazine can be ejected even if COMAND is switched off. However, the eject button will not function if the battery is not connected or drained.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

CD operation


60

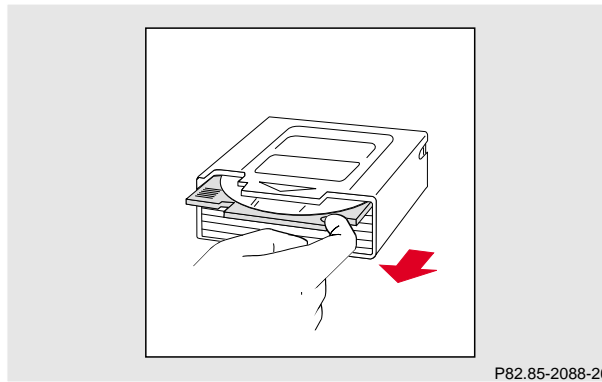


Pull the disk tray forward until it stops.

Note:

Do not attempt to remove the tray from the magazine.

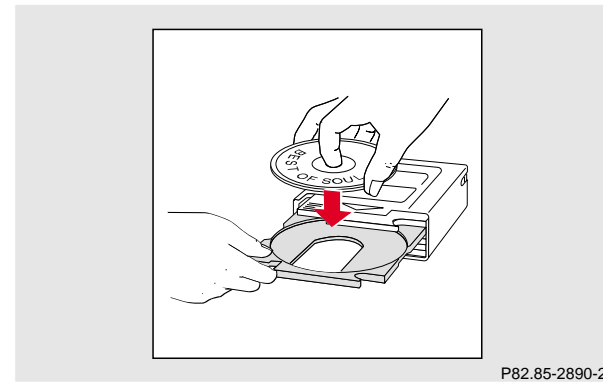


Place a CD in the tray. The CD should be inserted with the label side up.

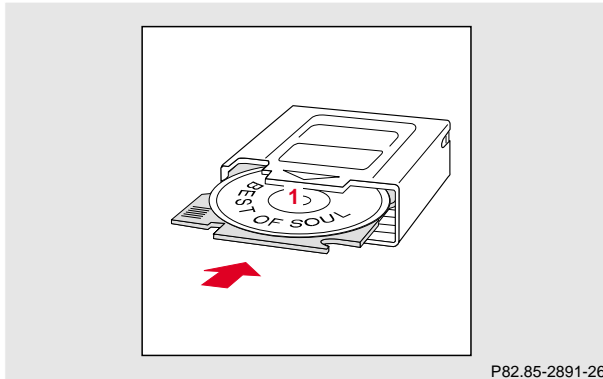

Push the CD magazine into the magazine completely.

- 1 Arrow tip on the rack wall

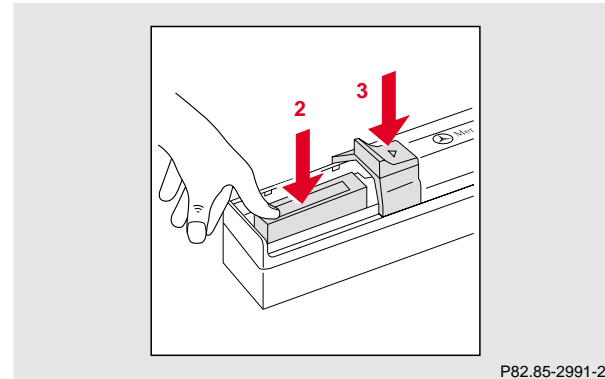

Slide the magazine into the CD changer until it clicks into place (listen for the click). Close the sliding door (3) by pressing gently down on the door release button. Spring pressure gently closes the door.


Note:

Make sure that the tip of the arrow on the side of the magazine (1) is pointing in the direction of the arrow (2).

Do not force the magazine into the changer. If the magazine does not enter smoothly, please, check for proper orientation of the magazine.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	--------------	-----------	------------	-----------------------------------	-------

Menu overview - CD operation

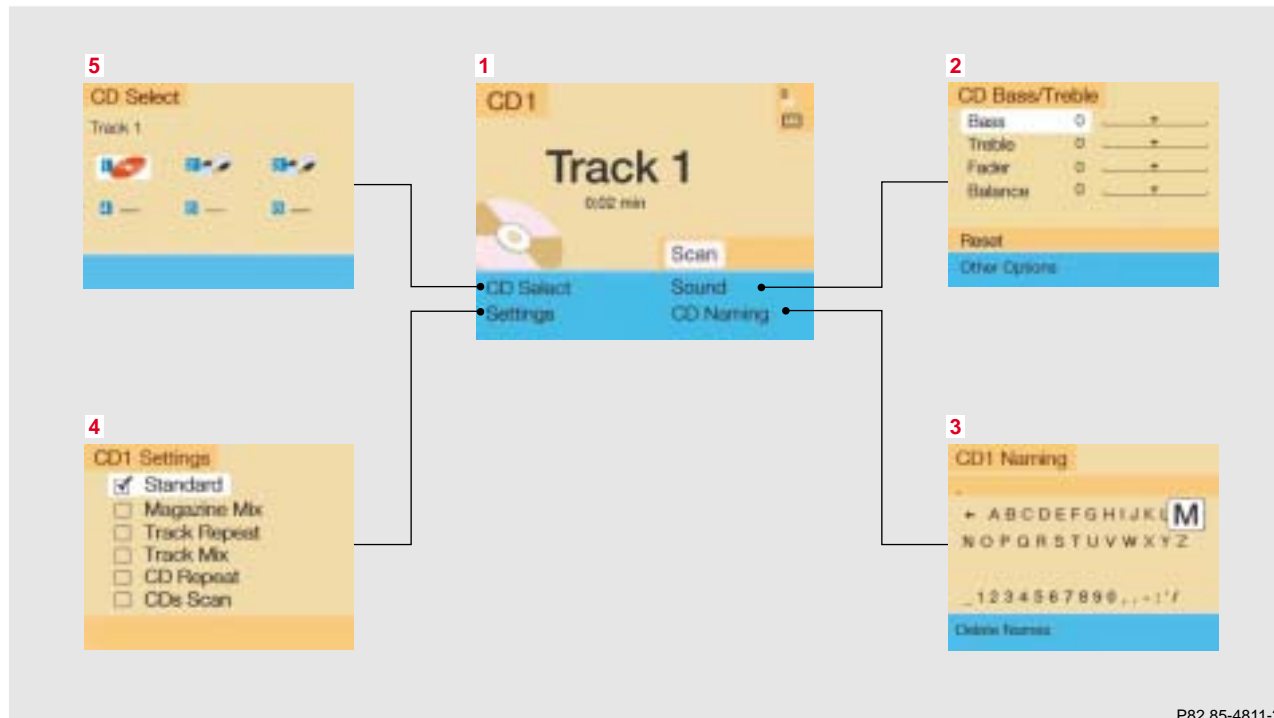


- 1 Main CD menu
Number in the status line indicates the magazine slot which contains a readable audio CD and has been selected
- 2 Main sound settings menu
Adjust sound settings, page 83
- 3 CD Naming menu
Entering, altering and deleting CD names, page 71
- 4 Settings menu
Selecting playback mode, page 74
- 5 CD select menu,
Track select, page 65
Selecting CD's, page 67

CD operation

64

Switching on CD operation

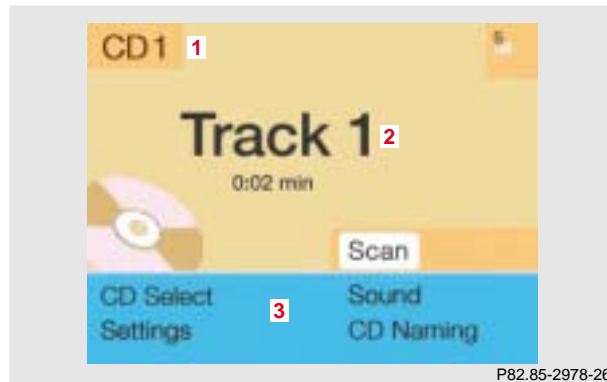

P82.85-2978-26

- 1 CD function with the number of the magazine slot currently playing:
CD changer: CD 1-6
- 2 Track number and elapsed playback time, the name of the CD may appear above this information if the playing CD has been previously named by the user
- 3 Scan function and menu fields to activate menus

Press **CD**.

The main CD menu will appear on the screen.

When you switch to CD operation, the COMAND system will check which component was used last (CD drive or CD changer) and whether or not there are any CDs inserted.

If there is no CD in the component last used, the system will automatically switch to the other component.


CD drive - playback will begin with the first track on the CD

CD changer - playback will begin with the first track on the first CD detected in the magazine

If the CD changer was used last, the following message will appear: "CD loading" when the magazine is changed.

Error messages, page 77.

Track select

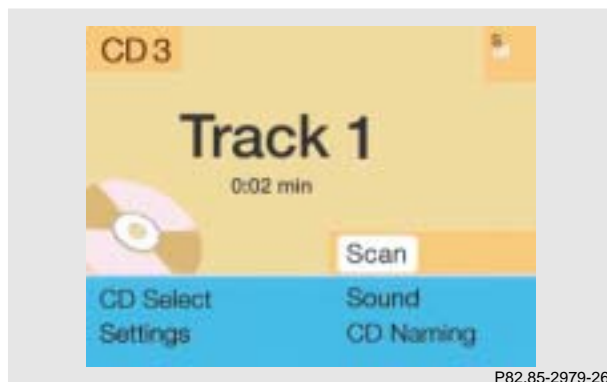

P82.85-2979-26


There are 3 different ways in which you can select CD tracks for CD changer.

Select a track by pressing **◀** / **▶**:

Press **▶** briefly: next track

Press **◀** briefly: previous track (if less than 9 seconds of playing time has elapsed), beginning of the current track (if more than 9 seconds of playing time has elapsed).

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

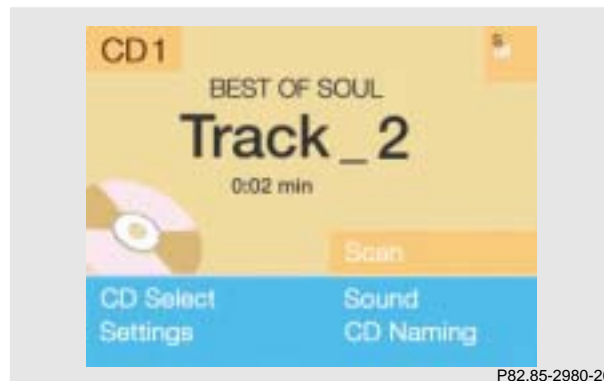

P82.85-2980-26

Select a track using the number keypad:

Press **[*]** and enter the number of the track you wish to select, e.g. **[2]**. The selected track will then begin to play automatically after 3 seconds or immediately after you press **[*]**.

Note:

If you enter a two-digit number, you must enter the second number within 3 seconds. Otherwise, the function will switch off and the screen will return to the previous display.



P82.85-2550-26


Select a track in the "CD Select" menu:

Activate the menu with the "CD Select" menu field.

Press **[*]** and the number key for the track you wish to select, e.g. **[2]**.

The chosen track will be played automatically after 3 seconds or immediately after you press **[*]**.

Selecting CD's

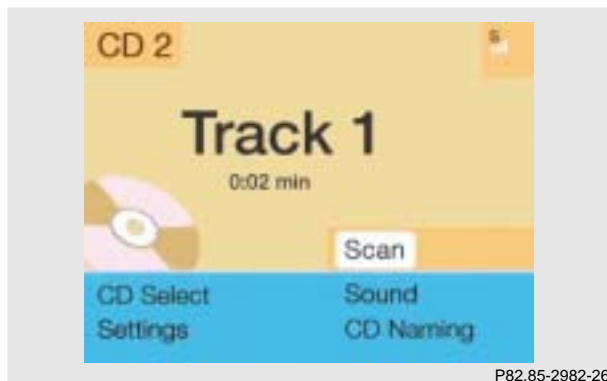

P82.85-2982-26

Selecting a CD with a number key:

Press a number key, e.g. **2** to select the corresponding CD. The following message will appear on the screen: "CD loading". Playback will begin with track 1.

Number keys **1** - **6**: Magazine slots in the CD changer


Messages: "Magazine empty":

There are no audio CDs in a magazine slot in the CD changer.

Other error messages, page 77.

CD operation


68

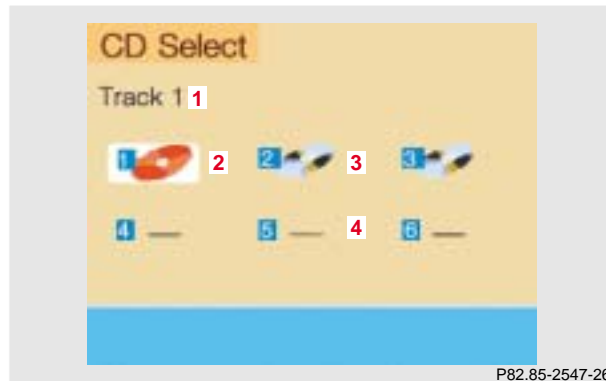


P82.85-2547-26


- 1 Current track and the name of the CD playing if this was entered previously, page 71
- 2 Selected CD, current CD in red color
- 3 Magazine slot contains a CD
- 4 Magazine slot does not contain a CD

Selecting a CD in the “CD select” menu:

Use the rotary/pushbutton  to highlight the “CD Select” menu field in the main CD menu and confirm your selection by pressing.


Use the rotary/pushbutton  to highlight the desired CD in the menu and confirm your selection by pressing. “CD loading ...” will appear middle above the selection places on the screen. Playback will then begin with track 1 of the CD selected.

Note:

If magazine slots are empty, it is not possible to select them with the rotary/pushbutton .

If you select an empty magazine slot with a number key, e.g.  the message “No CD” is displayed.

Fast forward/backward

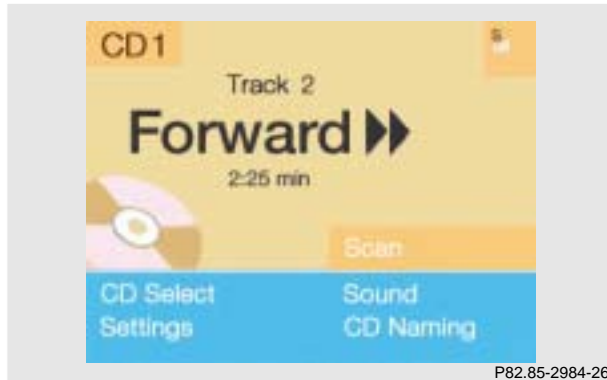

Fast forward:

Press **▶▶** longer than 2 seconds.
Display message: "Forward ▶▶", display shows the current position via the time indicator display.

Fast backward:


Press **◀◀** longer than 2 seconds.
Display message: "◀◀ Reverse", display shows the current position via the time indicator display.
Release the on of the keys to stop the function. Playback will resume.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------


CD operation

70

CD track scan

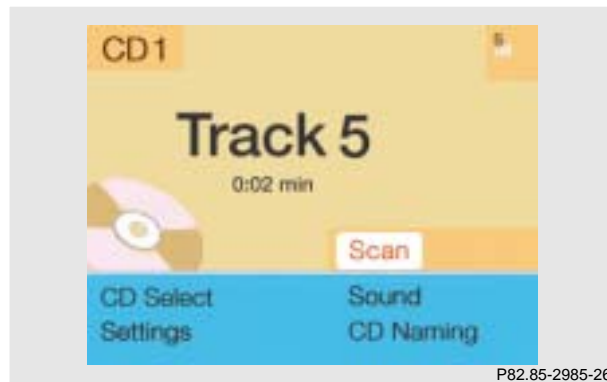




The tracks on a CD can be scanned one after the other for 8 seconds each.

Press the rotary/pushbutton  to activate the “Scan” function when it is highlighted.

Scan will begin and “Scan” will appear in red.


There are three ways to switch the function off:

- Press the rotary/pushbutton  again
- Press  / 
- Switches off automatically when the starting track is reached.

Note:

For the CD changer, it is also possible to scan all of the CDs in the magazine slots 1-6 for 8 seconds each (always track 1). Activate the function “CDs scan” in the “Settings” menu, page 76.

Entering, altering and deleting CD names

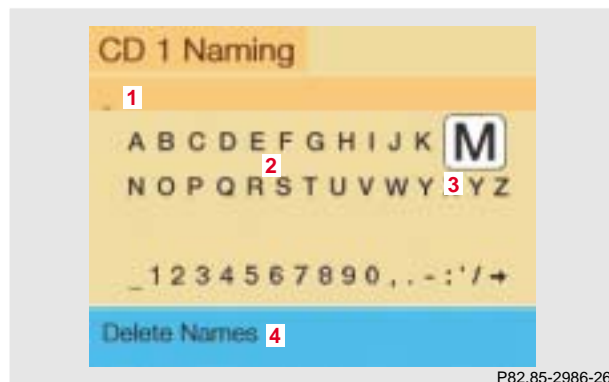


- 1 Input line
- 2 Symbols list (letters, digits, special characters)
- 3 Character selected appears magnified, magnified "M" is starting point
- 4 "Delete Names" function


This function can be used to allocate a name to a CD (e.g. CD title). The name will be recognized and displayed by COMAND after removal and re-insertion of a CD.

CD operation

Naming the CDs inserted in the magazine:


Use the rotary/pushbutton  to highlight the "CD Naming" menu field in the main CD menu and press to confirm your selection.

The "CD Naming" menu will appear on the screen.


Use the rotary/pushbutton  to highlight the desired characters (letters, numbers) and press the knob briefly to confirm. When you have selected a character, it will appear in magnified form (3), and when confirmed it will appear in the input line (1).

The input marker indicates the current position.

Delete the character entered last:

Use the rotary/pushbutton  to highlight the delete symbol (3), then confirm by pressing. The input marker moves to the left as it deletes. Repeat this process as often as desired, then enter the correct character.

Deleting a complete name:


Use the rotary/pushbutton  to highlight the delete symbol (3), then confirm by pressing longer than 2 seconds.


Altering a name:

Delete one character at a time or the entire name. Then enter the new name.

71

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	------------	-----------------------------------	-------

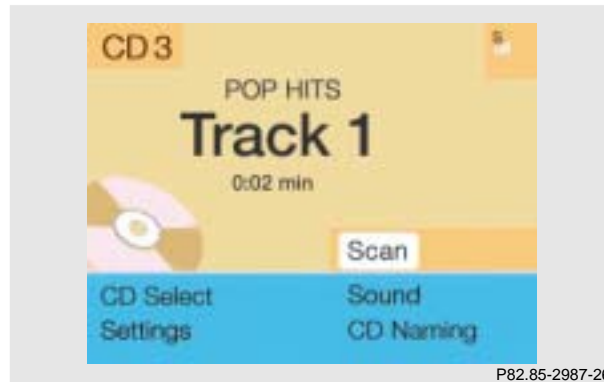

Press the rotary/pushbutton  longer than 2 seconds to confirm the name. The main CD menu will appear on the screen.

The name of the CD currently playing will appear above the track number.

The CD will retain this name even if it is inserted into a different magazine slot.

Notes:


The CD names are saved in the names list in alphabetical order. If the name memory is full, the following message will appear: "Attention, name memory is full; new entry only possible after clearing old one!"

Confirm the message by pressing the menu field marked "OK". The input menu will appear again.

Use the "Delete Names" menu field to clear the memory, page 73.


Delete CD name



Use the rotary/pushbutton  to highlight the “Delete Names” menu field in the “CD Naming” menu and confirm it.


The list of CD names will appear on the screen.

Use the rotary/pushbutton  to highlight the name you wish to delete.


Press the rotary/pushbutton  briefly to delete the name. The following entry will then move up one position.

Press the rotary/pushbutton  longer than 2 seconds to return to the CD main menu.

Paging forward in the name memory:

- Highlight the ▼ symbol and confirm
- Move the cursor with the rotary/pushbutton  above the last page entry and past the ▼ symbol.


Paging backward in the name memory:


- Highlight the ▲ symbol and confirm
- Move the cursor with the rotary/pushbutton  above the first page entry and past the ▲ symbol.

CD operation

74

Selecting playback mode

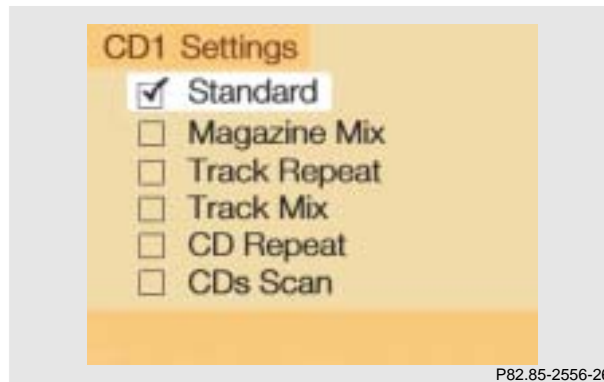

Use the rotary/pushbutton  to highlight the “Settings” menu field in the main CD menu and press to confirm.

The “Settings” menu will appear.
A checkmark indicates the active function.

Selection (1):

The “Standard” function is active (CD playback in ascending order). This function is automatically selected when another CD has been selected.

Selection (2) to (4):

Lettering in black - CD changer in operation,
function can be selected


Lettering in grey - CD drive in operation,
function cannot be selected

No functions displayed - no CD changer connected


Note:

It is only possible to select one playback mode at a time.

Magazine Mix

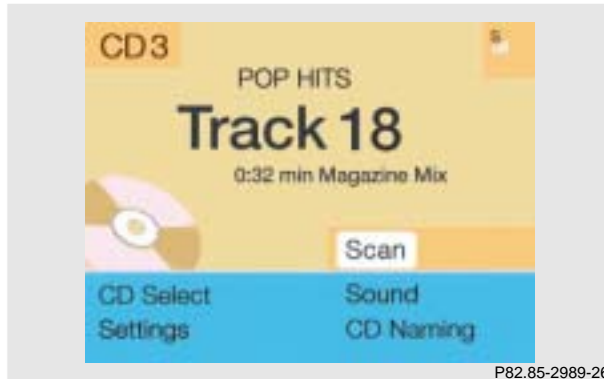

Select the “Magazine mix” function to play all of the tracks of all of the CDs in the magazine slots 1-6 in random order.

Use the rotary/pushbutton  to highlight the “Magazine mix” function and press it to confirm. This function will be marked with a checkmark.

Press **BACK** to return to the main CD menu.

“Magazine mix” will appear in the main CD menu.

Track repeat

Select the “Track Repeat” function to repeat the current track until you switch the function off.

“Track Repeat” will appear in the main CD menu.

Play CD tracks in random order

Select the “Track-Mix” function to play back the tracks on the CD currently selected in random order.

The message “Track-Mix” appears in the CD main menu.



CD repeat

Select the “CD Repeat” function to repeat the current CD until you switch the function off again.


“CD Repeat” will appear in the main CD menu.

CD Scan Function

Select the “CDs scan” function to scan all of the CDs in the magazine slots 1-6 for 8 seconds each (track 1).


The scan function will begin with the CD following the CD currently playing. The scan function will end automatically after all of the CDs have been scanned or if you press  / .


Switching off the function

Use the rotary/pushbutton  to highlight the desired function in the “CD settings” menu and press it to confirm your selection (no checkmark).

The “Standard” function will be activated automatically (checkmark).


CD playback mute

Press  while a CD is being played.





CD operation will be muted and the symbol  appears in the symbol bar.

Cancel playback mute:


Press  once again.

CD operation is switched on again and the symbol  is faded out of the symbol bar.

Note:

The mute function will also be cancelled if you switch to a different audio source (e.g. radio) use  or  to select another radio station or use  or  to alter the volume.

Error messages

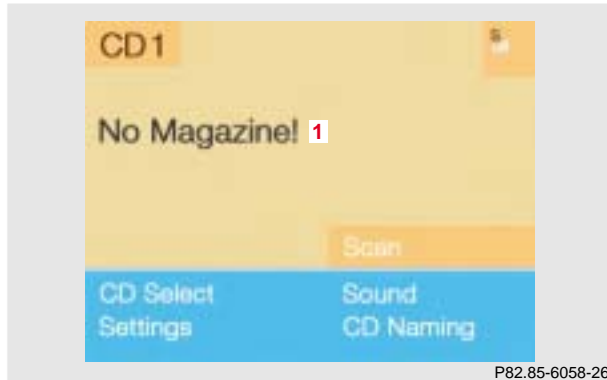

1 CD changer error messages

“No CD changer” - The system cannot detect the CD changer; contact a Mercedes-Benz Center (1)

“No magazine” -There is no magazine inserted in the CD changer; load CDs into the magazine and insert the magazine into the CD changer (1)

“Magazine empty” -There are no CDs in the magazine; load CDs into the magazine and insert the magazine into the CD changer (1)

“Being activated” - The CD changer is not yet ready for operation (1).

“Reading error” - The system cannot read the CD which has been inserted (2), e.g. audio CD

CD operation**78**

“Error” – an error other than those described here has occurred (1, 2)


If an error occurs in the operation of the CD drive or the CD changer, the system will automatically switch to the other component after 3 seconds.

CD operation will resume when the error has been corrected.


If it is not possible to play the CD which has been selected in the CD changer (“Error” message), the system will automatically select the next CD in the magazine.

“Temperature too high” – CD operation will switch off automatically after 3 seconds; press the corresponding key to select a different audio source (1, 2)

Tips on caring for your CDs

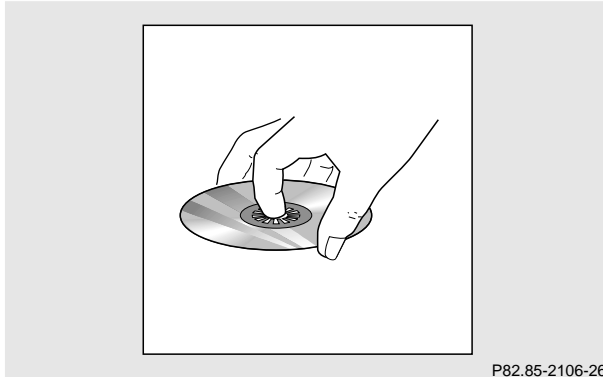

Handle CDs only as illustrated.

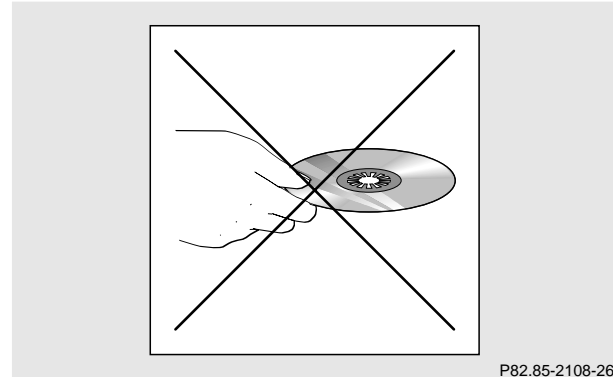

Avoid touching the CD surface with your fingers!


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

CD operation


80



Clean CDs with a dry, lint-free cloth. Wipe them from the inside to the outer edge. **Never** wipe the CD in a circular motion.

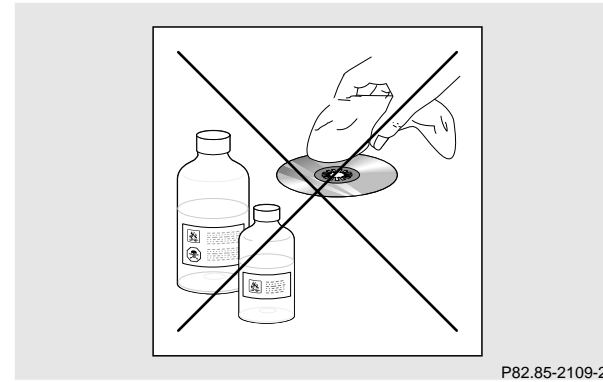


Do not use rubbing alcohol or solvents to clean the CDs.

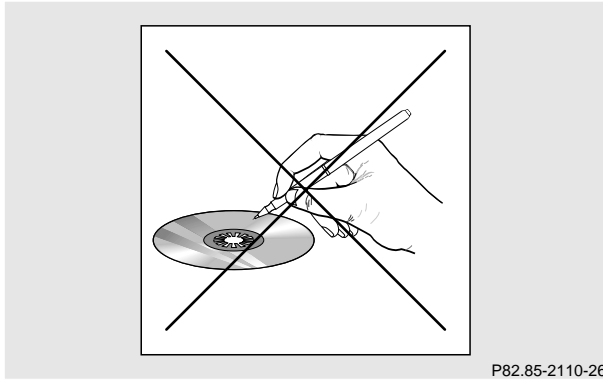

Do not write or put stickers on CDs.

Note:


You can name a CD and then this name will be displayed on the screen when you play it, page 71.

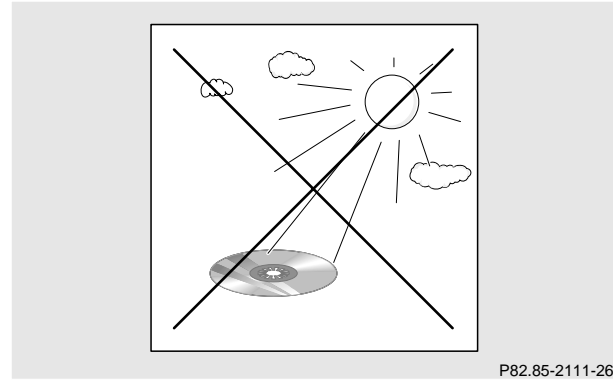

Do not expose the CDs to heat or direct sunlight.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

CD operation

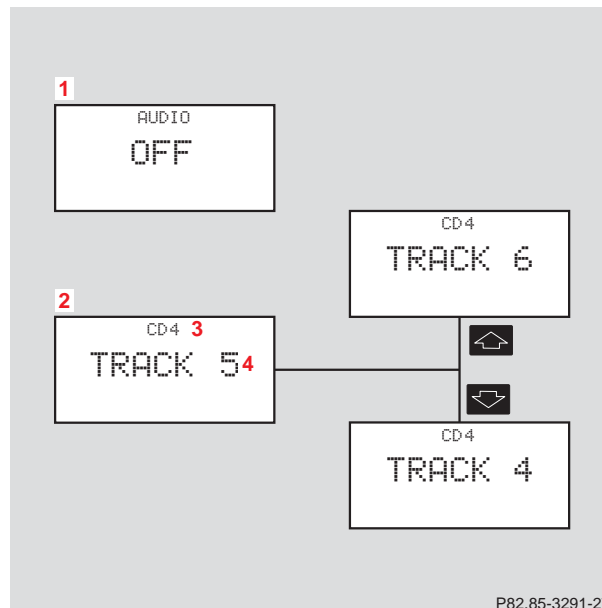Multifunction steering wheel, Multifunction display

82

- 1 No audio system has been switched on.
- 2 The CD unit is switched on.
- 3 The number of the CD currently playing will be displayed.
- 4 Track number being played.

Press **CD** on COMAND to switch the CD unit on.

Press or repeatedly if necessary until display (2) appears.

Press or until the desired track number appears.

Press or to display the next or previous system.

Adjust sound settings

The COMAND system is equipped with a BOSE amplifier.

You can set the sound Bass/Treble and the sound-center (fader and balance) individually or select sound impressions.

See individual audio mode descriptions for instructions on this feature.

Adjustments to the sound have a different effect on the audio and service sources. The predefined sound modes are available for the audio sources only.

The audio sources include:

- Radio (FM, AM, WB)
- Tape deck
- CD changer (optional)

The main menu for the sound is activated in the audio sources through the menu field “Sound”.

Service sources include:

- Telephone
- Voice output in navigation
- Voice recognition system


The main menu for the sound is activated in the menu “NAVI Settings” through the menu field “Sound”.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	--------------	-----------	------------	-----------------------------------	-------

Sound settings

84

Activate main Sound menu

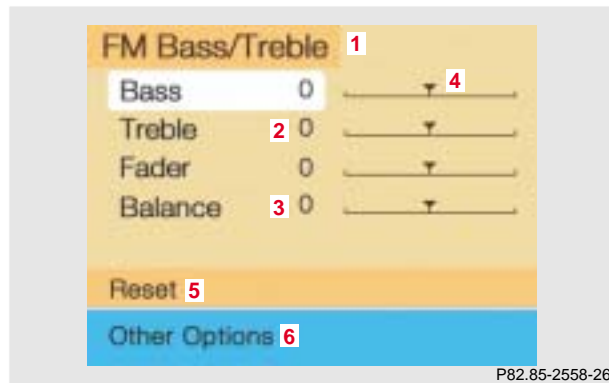

For audio sources:


- 1 Status line, radio (FM) is switched on
Other messages:
AM band is active - "AM Bass/Treble"
WB band is active - "WB Bass/Treble"
CD drive or CD changer is switched on -
"CD Bass/Treble"
- 2 Actual sound settings (Bass/Treble)

- 3 Actual sound-center
Fader: front - back
Balance: left - right
- 4 Slide switch to alter the value
- 5 Reset bass and treble to "0", and the fader/balance to the middle
- 6 Activate predefined sound impressions, page 88


To activate the main sound menu for radio (FM/AM, WB) or CD operation:


Use the rotary/pushbutton  to highlight the main menu field "Sound" and press it to confirm your selection.

The actual settings for sound and fader/balance are displayed. The "Bass" menu field is highlighted whenever "Bass/Treble" menu (FM/AM, WB, TAPE or CD) is first accessed.

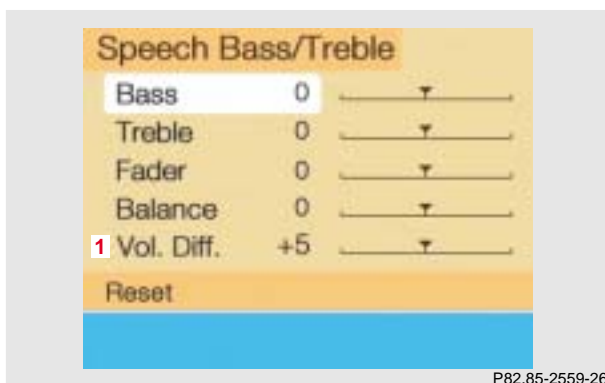

Activate the main sound menu for setting the service sources:

Use the rotary/pushbutton  to highlight the "Settings" menu field in the navigation menu and press to confirm your selection. The menu "NAVI Settings" will now appear.

Use the rotary/pushbutton  to highlight the "Sound" menu field and confirm by pressing.


The actual settings for sound and fader/balance are displayed. The "Bass" menu field is highlighted whenever the "Speech Bass/Treble" menu is first accessed.

- 1 Volume difference
Set the volume difference between language during route guidance and an active audio source.
"0" - The volume of the audio sources is not affected during voice output
"10" - The audio source is set very low during language playback.


Notes:

- No sound impressions is provided for service sources.
- During adjustment of Bass/Treble/Fader/Balance in the "Speech Bass/Treble" menu, COMAND will issue a repetative voice output of "Sample" to allow you to set the settings as you prefer.

Setting Bass/Treble/Fader/Balance

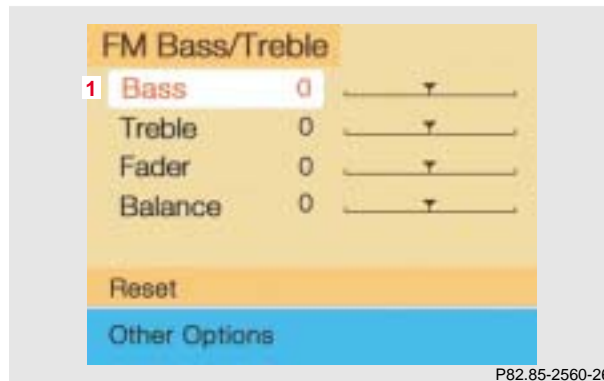


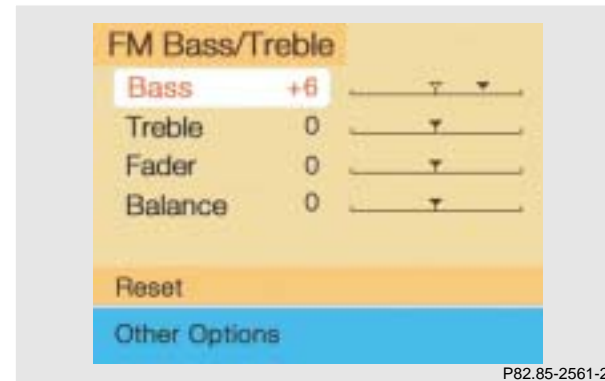
1 Setting mode active

Use the rotary/pushbutton  to move the cursor to the parameter you want to alter and confirm by pressing.


The setting mode is activated.

The activated sound parameter is shown in red.

Turn the rotary/pushbutton  to set the desired value and confirm by pressing. The marked sound feature is shown in black.



There are three ways to return to the main audio menu:

- Press **BACK**
- Hold the rotary/pushbutton  longer than 2 seconds
- Automatic activation after 15 seconds.

To reset the current alteration, set all values to "0":

Use the rotary/pushbutton  to highlight the menu field "Reset" and confirm by pressing.

Notes:

The balance is adjusted to the same setting for the radio (FM/AM, WB) and CD changer.

Adjustments which are made to the navigation system will affect the Voice recognition system and the telephone.

Use the “Reset” menu field to position the balance back to the center of the vehicle, to set the sound linearly and to reset at the same time the sound volume to a defined value.


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Activating sound impressions



In the main sound settings menu, use the rotary/pushbutton **⬤** to highlight the menu field “Other Options” and confirm by pressing.

The “Other Options” menu (FM/AM, WB, TAPE or CD) is activated, the symbol for the actual sound impression is shown.

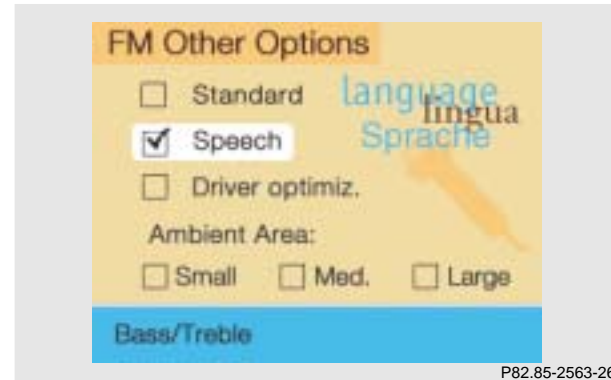


Selecting a new sound impression:

Use the rotary/pushbutton **⬤** to highlight the required sound optimization and confirm by pressing (checkmark appears).

Note:

It is only possible to select one sound optimization at a time.

There are three ways to return to the main audio menu:

- Press **BACK**
- Hold the rotary/pushbutton  longer than 2 seconds

- Automatic activation after 8 seconds.

Note:

The main sound menu is activated through the “Bass/Treble” menu field.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Sound settings

90

Available sound impressions:

- Standard – the sound is set linearly for the center of the vehicle
- Speech – the emphasis is on the spoken word
- Driver optimiz. – the sound is optimized for the driver’s position
- Ambience

Small – small rooms are simulated

Medium – medium-sized rooms are simulated

Large – large rooms are simulated

Note:

Sound impressions are not available for the service sources.

Telephone

Telephone	92	Incoming calls	102	Quick-dialing (for the first 10 memory locations)	123
Before you use the telephone	92	Outgoing calls	106	Notebook	124
Multifunction steering wheel, Multifunction display	94	Dialing a telephone number	106	Editing the phone book	125
Overview of the Multifunction displays	95	Dialing a number from the phone book	109	SMS function	132
Quick reference - Telephone	96	Redial	116	Emergency call	136
Menu overview - Telephone	98	Dialing from calls list	120	Service numbers	139
Switching telephone operation on	100	Speed-dialing (only with COMAND)	121		

Before you use the telephone



Warning!

Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic systems, possibly resulting in an accident and personal injury.

Radio transmitters, such as a portable telephone or a citizens band unit should only be used inside the vehicle if they are connected to an antenna that is installed on the outside of the vehicle.

- Please read this section first before attempting to operate your telephone.
- Always drive with extreme caution when you operate the telephone hands-free.

- Do not stop or park in no-parking areas to use the telephone.
- Close the windows and reduce all outside noise as much as possible when you use hands-free operation.
- If the signal strength is very weak (display in the symbol field of all main menus) you should not make telephone calls. Wait until reception improves.
- A brief disconnection from the cellular network is not a malfunction, as this can occur when the network switches areas.
- If you are required to enter the unlock code when you switch the COMAND operating unit on, enter it to be able to use all of the telephone functions. Enter the unlock code, see page 100.
- If a telephone menu other than the telephone menu is displayed on the COMAND screen, the display will change if an outgoing call is sent out via the multifunction steering wheel.

In the following situations, it is not possible or not yet possible to use the telephone:

- The telephone is already unlocked but is not (yet) registered in the network. The message “No Service” is displayed. The telephone will try to register into the network. If the network is available, the telephone will be ready for use. The above message also appears if the network is no longer available due to weak signals.

The message “No Service” is displayed for 8 seconds if you try to make a call.

- The message “Telephone is being activated. Please wait” appears. The phone is being initialized for use. Select other equipment functions by pressing the corresponding button or wait until the phone is active.
- The message “Error: Phone not connected” is displayed. Please connect the telephone.
- The message “Error: Phone defective” appears. The telephone cannot work because an error has occurred. Please contact a Mercedes-Benz Center.

In the following situation, it is not yet possible to use the functions “Dial number from phone book” or “Speed-dial”.

- The mobile telephone has been plugged into its holder correctly the COMAND operating unit has been switched on and the telephone function download function has been actuated (see telephone section in operator’s manual).

In the following situations it is not possible to make a call and following messages appear:









- “System busy, redial?” – dialing has failed because system is busy.
- “No Service, redial?” – dialing has failed because network cannot be received.
- “Phone off” – Tele Aid is active, the telephone function will switch on automatically after Tele Aid is ended.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Multifunction steering wheel, Multifunction display


- 1 Multifunction display
- 2 Multifunction steering wheel

Turn the electronic key in the steering lock to position 1 or 2.

- 3  Activates next system
- 4  Activates previous system
- 5  Pages backwards through the phone book
- 6  Pages forwards through the phone book
- 7  Raises telephone volume of dial tone/idle tone
- 8  Lowers telephone volume of dial tone/idle tone
- 9  Accepts incoming calls, page 102
Activates the redial memory, page 116
Starts dialing after the selection of a number, page 110, 114
- 10  Ends telephone call, page 102
Refuse call, page 102
Interrupts dialing, the message READY will appear, page 110


If the telephone menu is displayed on at the multifunction display and the telephone operation is switched on at COMAND, changes in COMAND affect the multifunction display.

Overview of the Multifunction displays

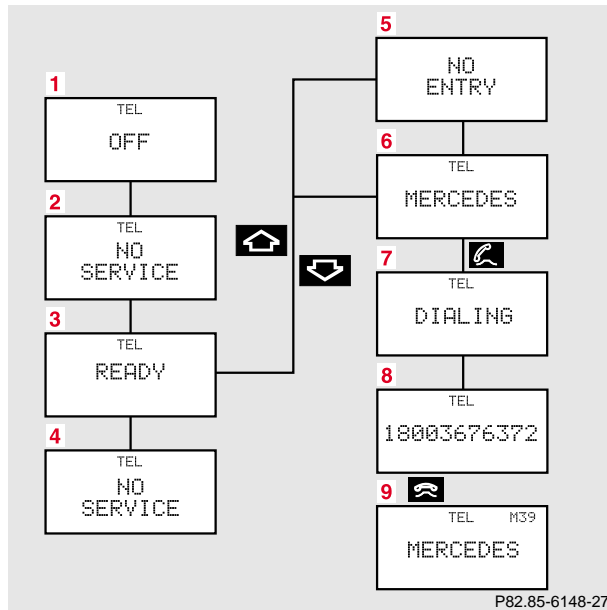

- 1 The telephone is switched on, Telephone operation is activated, page 100
- 2 The system is searching for the corresponding telephone network
- 3 The telephone is ready for use
- 4 The vehicle is currently outside the transmission or reception range
- 5 Phone book is empty and/or has not been loaded into the COMAND telephone memory
- 6 A number selected from the phone book
- 7 Dialing begins
- 8 Dialing is completed and the number is displayed. The display will remain until you end the call
- 9 Number of the memory location and the name stored here


Quick reference – Telephone

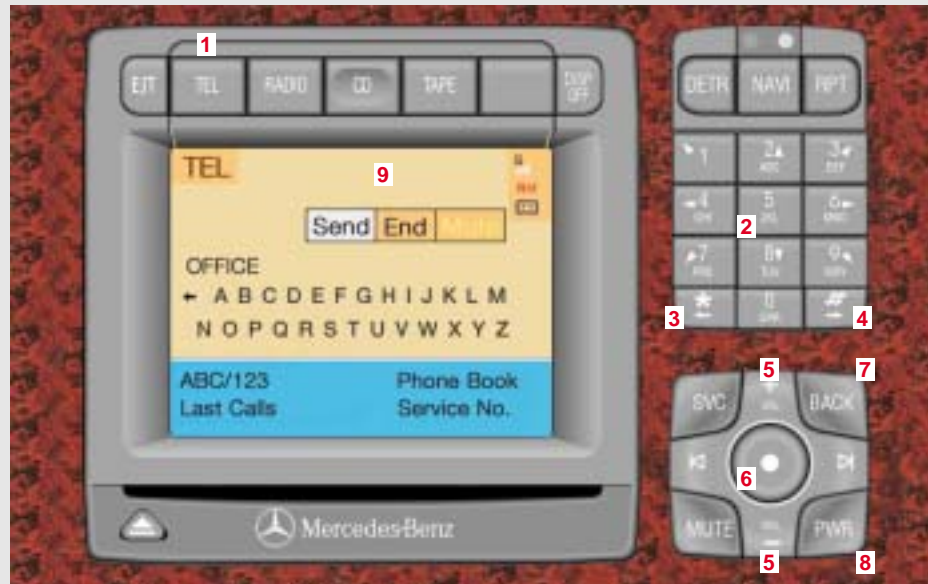


- 1 Switching the telephone on and off, page 100
- 2 Entering the unlock code, page 100
Entering a telephone number, page 106
Speed-dialing (only at COMAND):
Activates number stored in the phone book with a maximum of 2 digits, page 121
Quick-dialing (for the first ten memory locations), page 123
Enter the emergency call, page 123
- 3 Subsequent dialing, page 108
- 4 Subsequent dialing, page 108
- 5 Sets the volume for hands-free operation of the telephone (during a call), page 104
- 6 **Turn** to highlight a menu field, a list entry, or a symbol

- Press** to activate a sub-menu,
Confirms an entry/selection,
Starts dialing when “Send” is highlighted,
Ends the call when “End” is highlighted,
Switches off the microphone of the hands-free telephone when “Mute” is highlighted
- 7 Activates previous menu
Entering a telephone number:
Press **BACK** briefly – the last digit will be deleted
Press **BACK** for longer than two seconds – the whole number will be deleted
 - 8 Switching the COMAND on and off, page 13
 - 9 Color screen with main telephone menu

Menu overview - Telephone

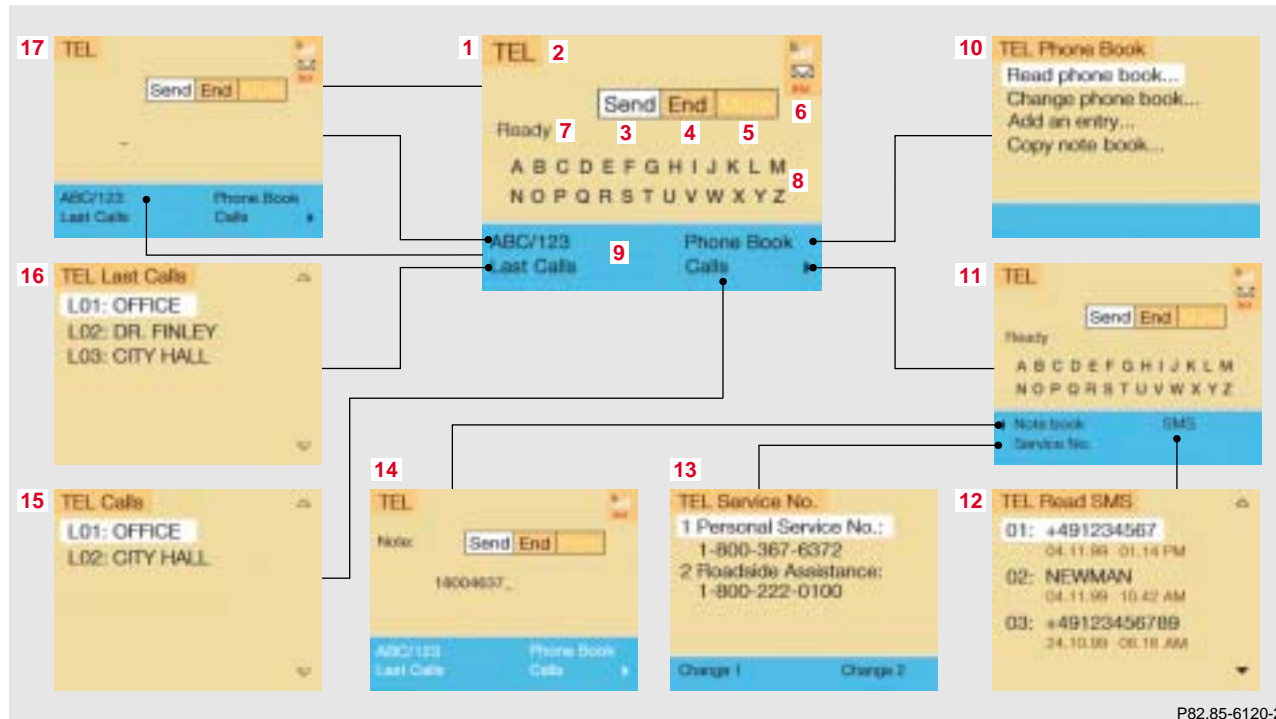

- 1** Main telephone menu
- 2** Telephone system is active
- 3** Accepting calls on COMAND, page 103
Begin dialing, page 107
- 4** Ending a call, page 108
- 5** Microphone mute, page 104
- 6** Reception quality is indicated by up to 5 bars for a connected and functional telephone
 - ☒ - incoming SMS message, page 132
 - ROAM indicator:
 - RM in black - telephone is using a home type system
 - RM in red - telephone is using a non home type system
 - No RM - telephone is using the home system
- 7** Input line
- 8** Alphabet
- 9** Menu fields for activating sub-menus
- 10** “Phone book” selection menu, page 112
 - Can be activated when the input line is empty
 - Phone book with names, page 112
 - Activation according to input of up to 3 letters
- 11** Main telephone menu with other menu fields can be activated via the “▶” symbol
- 12** SMS list, page 133
 - An SMS message can be read or deleted in the sequence menus
- 13** “Service No.” menu, page 139
 - Selecting a service number for an outgoing call or changing a service number
- 14** Notebook, page 124
 - Noting a telephone number during a call
 - Dialing from the notebook
- 15** “Calls” function, page 120
 - The last incoming calls are stored
- 16** Redial memory, the last 10 (L01-L10) numbers dialed are stored
 - L01, last number or name dialed
 - L01-L10 - numbers or names dialed previously, page 108
- 17** Telephone menu for entering telephone numbers, page 106
 - Switch back to the main telephone menu via the “ABC/123” menu field

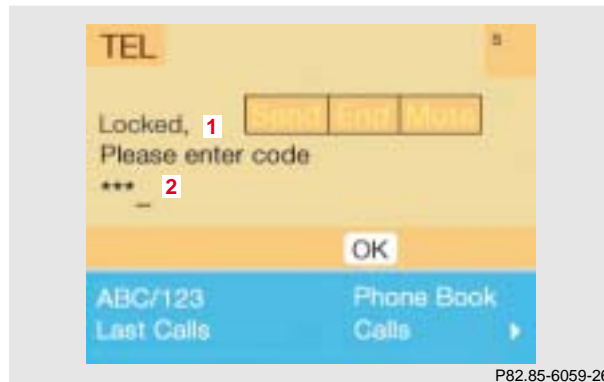Switching telephone operation on

- 1 Status line, telephone not yet logged onto network
- 2 Input line for unlock code

Press **TEL**, the menu for entering the unlock code will appear.

Entering the unlock code

Use the number keys **1** through **0** to enter the unlock code. Asterisks will appear in place of the digits in the input line.

If entered code is correct and the phone is registered in a network, the phone is ready for use.

Notes:

Your unlock code prevents unauthorized persons from using your telephone. Be sure to memorize this code, a three digit number, carefully.


If you enter an incorrect code, the systems returns to the menu for entering the unlock code.

The unlock code must be entered when the telephone is switched on for the first time (if phone is in locked mode), but not if you switch to it from another system (i.e. navigation).

“No Service” – This message will appear in case the phone is not registered in a network or the network is no longer available due to weak signal conditions.

Switching telephone operation off

The phone can be switched by pressing the **TEL** button (when connected to the coiled cord) or the **PWR** button (when in portable mode).

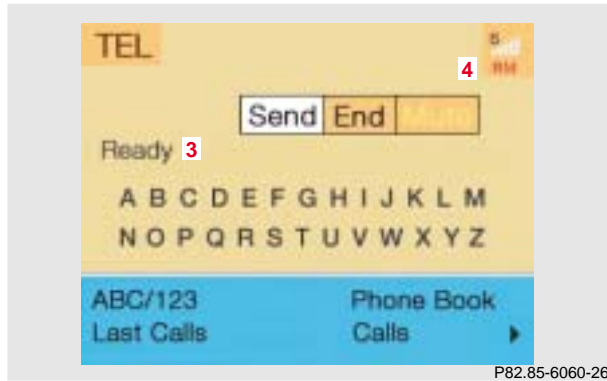

If the phone memory has been downloaded to COMAND, the menu fields “Phone Book”, “Last Calls” and “Calls” will be available. If the memory was not downloaded, the menu fields will be dimmed out.

Outgoing calls, page 106.

- 3 Telephone is ready for operation, the “Send” button is highlighted
- 4 Reception quality is indicated by up to 5 bars, RM will be shown, if you are not in a home system

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------


Incoming calls

Accepting a call using the multifunction steering wheel



- 1 "Call" - the system detects an incoming call, the phone rings


Accepting a call:

Press , audio source is automatically muted.

Refusing a call:


Press .

Ending a call:

Press , audio source is restored.
The main telephone display appears.

Communication between the multifunction display and the COMAND screen:

If different systems are displayed, the changes made to COMAND will have no effect on the driver information display.

Press the COMAND key marked  to switch to the telephone functions.

Accepting calls using COMAND



- 2 “Call” - the system detects an incoming call, the phone rings

If no telephone menu is shown on the screen press **TEL** if the phone is ringing. The above menu appears.

Accepting a call:

Confirm the “Send” button by pressing the rotary/pushbutton **●**. An audio source will switch to mute.

Refusing a call, use one of the three ways:

- Press the rotary/pushbutton **●** to confirm the “End” button
- Press **TEL**
- Press **BACK**.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------




3 “00:01:21 h” – the call time appears

Switching the microphone for the hands-free telephone off:


Use the rotary/pushbutton  to highlight the “Mute” button and confirm by pressing.

Volume set for hands-free operation:

Press  – raising the volume


Press  – lowering the volume

Ending a call, use one of the three ways:

- Press the rotary/pushbutton  to confirm the “End” button
- Press **TEL**
- Press **BACK**.

The main telephone menu will reappear.

Important!


If the menu of a different system is displayed on the COMAND screen and/or the multifunction display, it is possible to accept an incoming call by pressing  on the steering wheel, page 86.

Note:

There is an incoming calls memory list. You can activated the list by using the “Calls” menu field, page 120.

Accepting an incoming call using the mobile telephone handset

The telephone is installed in the storage compartment under the armrest, see your vehicle's operating instructions.

Press the rotary/pushbutton  to confirm the "Send" button.

Remove the telephone from its cradle and conduct your call. Hands-free operation will switch off.

Ending a call:

Put the phone back in its mount.



Warning!

Please be sure to pay attention to the traffic situation at all times. Use the mobile telephone¹ only when the traffic situation allows.

Some jurisdictions prohibit the driver from using a cellular telephone while driving a vehicle. Whether or not prohibited by law, for safety reasons, the driver should not use the cellular telephone while the vehicle is in motion. Stop the vehicle in a safe location before answering or placing a call.

¹ Observe all legal requirements.

Outgoing calls

You can use the following functions:


- Dialing a telephone number, page 106
- Dialing a number from phone book, page 109
- Redial, page 116
- Dialing from calls list, page 120
- Speed-dialing (only with COMAND), page 121
- Quick-dialing (for the first 10 memory locations), page 123
- Emergency call, page 136

Dialing a telephone number**Entering a telephone number**

Press **TEL**. The main telephone menu will appear.

Enter the telephone number with the number keys **1** through **0**. The menu will change when the first digit is entered.


Correcting input:

- Press **BACK** briefly or use the rotary/pushbutton  to highlight the back arrow and confirm by pressing - the last digit will be corrected
- Press **BACK** longer than 2 seconds - the whole entry will be corrected.

Begin dialing




- 1 If the number together with a name is stored in the phone book, the name is displayed on the screen after the “Send” button is pressed.

When the “Send” button is highlighted, press the rotary/pushbutton  and confirm your entry.

Dialing will begin. The “End” button is marked (highlighted).

An active audio source will automatically be muted.

Interrupt dialing, use one of the three ways:

- Press the rotary/pushbutton  to confirm the “End” button
- Press **TEL**
- Press **BACK**.


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Conducting a call







When the call is answered, the call time will appear on the screen.

Ending a call, use one of the three ways:

- Press the rotary/pushbutton  to confirm the “End” button or call has been finished by the other party
- Press **TEL**
- Press **BACK**.


Subsequent dialing:

During a call you can press the number keys  through ,  and  to transmit other DTMF tones.

The numbers dialed will appear in the menu for 10 seconds after the last key is pressed (subsequent dialing display).



Dialing a number from the phone book

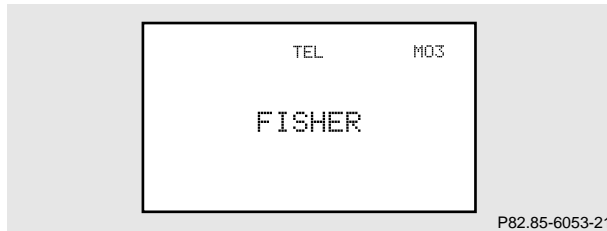Dialing using the multifunction steering wheel





In order to use this feature, the phone book must have previously been downloaded to the COMAND memory. This is performed automatically each time the portable phone is connected to the coiled cord.



The telephone is ready for operation, page 101.

Press  or  as often as necessary until the telephone mode appears in the multifunction display.

If the display ENTER CODE appears, enter the unlock code first, page 100.


Message NO ENTRY will appear when the portable phone has been put into the cradle and no entries are stored in the phone book.


Press  or , to page forwards or backwards through the redial memory in alphabetical order.


If  or  is pressed for longer than 2 seconds, the phone book is scrolled through very quickly.

The name selected will appear in the display.


Note:

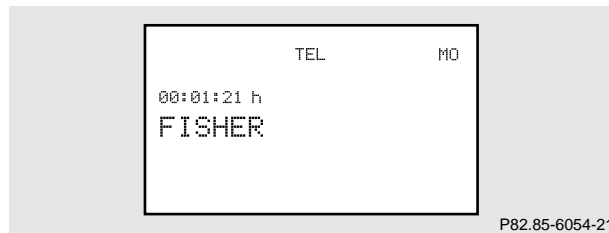

If you do not wish to place a call, press . The process will be cancelled and the message READY will appear.



Press , when the name you want is displayed.
The number will be dialed.
DIALING will appear in the display. The current audio source will be muted automatically.

After dialing has been completed, the name will reappear. It will remain in the display for the duration of the phone call.

Press  to end the call.
The message READY will appear. The audio source will switch on again.

Press  or  to display the next or previous system.


Notes:

Numbers are stored in the telephone book according to memory locations; a memory location starts with “M”.

Memory locations available: M01-M99

Dialing using COMAND

Phone book, names:

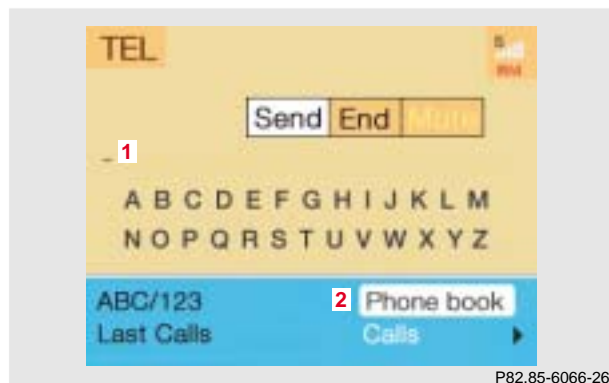


To access the phone book in the main telephone menu:

Use the rotary/pushbutton  to highlight menu field (2) and press it to confirm.


- 1 Input line is empty – activates the “Phone book” selection menu, page 112


When up to 3 letters are entered in the input line the relevant page of the “Phone book” (names) will be opened, page 112.

Use the rotary/pushbutton  to highlight the letters one after the other and press to confirm. The letters will be entered in the input line.

- 2 Activates the “Phone book” selection menu or opens the phone book (names).

Note:

The phone book will also be opened if the rotary/pushbutton  is pressed for longer than 2 seconds after input of the last letter.

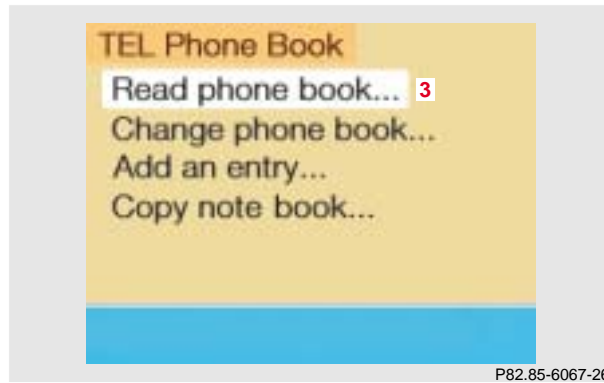


The “Phone book” selection menu will be activated.

3 Opens the first page of the phone book (names)

Press the rotary/pushbutton  and confirm the marked menu field “Read phone book”. The phone book will be opened.

Select the desired entry, see information on the right.

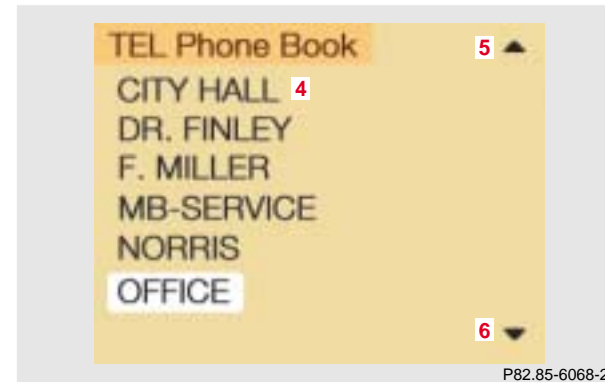


The relevant page of the phone book will be accessed after input of up to 3 letters in the telephone main menu.

4 Marked entry, sorted alphabetically

5 Symbol, page back in the list

6 Symbol, page forward in the list


Note:

The phone book stored in the phone is memory being read downloaded. Use the rotary/pushbutton  to highlight the desired entry and press to confirm.




The main telephone menu will appear with information on the name selected.

Begin dialing:

Press the rotary/pushbutton  (to confirm the “Send” button). The “End” button is highlighted.


Ending a call, use one of the three ways:


- Press the rotary/pushbutton  to confirm the “End” button
- Press **TEL**
- Press **BACK**.

Telephone

114

Phone book, telephone number:

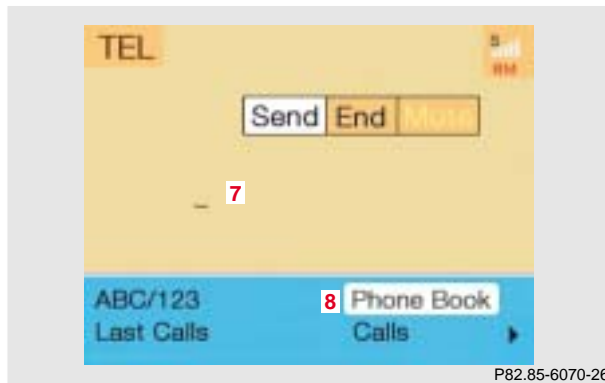

Use the rotary/pushbutton  to highlight the “ABC/123” menu field and press to confirm. The menu for entering the telephone number will appear.


- 7 Input line is empty – activates the “Phone book” selection menu, page 125


When up to 3 digits are entered in the input line to dial the memory location, the relevant page of the “Phone book” (telephone numbers) will be opened, page 115

Use the numerical keys  through  to highlight the digits one after the other and press to confirm. Enter the digits in the input line.


- 8 Activates the “Phone book” selection menu or opens the phone book (telephone numbers)

To activate the “Phone book” selection menu, open the phone book:

Use the rotary/pushbutton  to highlight menu field (8) and press to confirm.

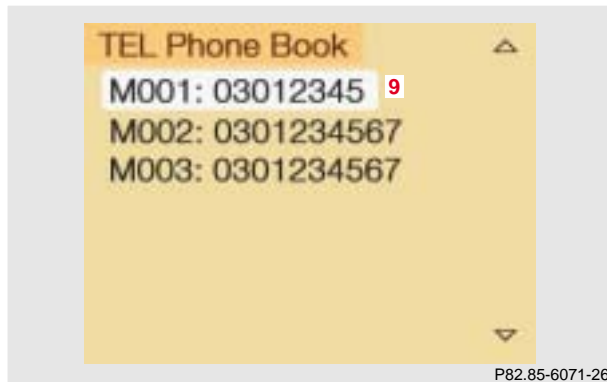




- 9 Entries, sorted according to memory location
Memory locations in the telephone: M01-M09

Use the rotary/pushbutton  to highlight and confirm the desired entry.


The main telephone menu will appear indicating the selected number and memory location.

Begin dialing, page 107
Conducting a call, page 108.

To select the memory location directly:

Enter up to 2 digits using the  through  number keys in the main telephone menu. Use the rotary/pushbutton  to highlight and confirm the “Phone Book” menu field.

The phone book (numbers list), which is stored in the telephone, will be appear.


Use the rotary/pushbutton  to highlight the desired entry and press to confirm.

The main telephone menu will appear indicated the selected phone number.

Begin dialing, ending a call, page 113.

Note:

If there is no entry in the numbers list, the message “No entry in list” appears in the telephone menu.

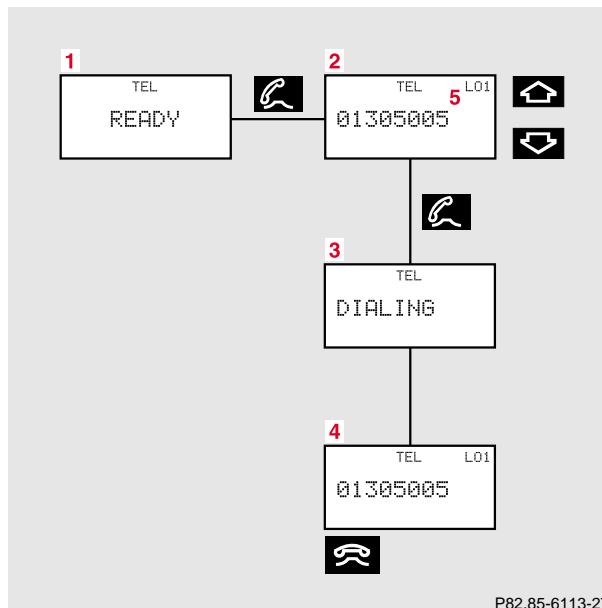

Redial**Dialing using the multifunction steering wheel**

- 1** The telephone is ready for operation
- 2** Number in the redial memory
- 3** Number in the redial memory - dialing has begun
- 4** Dialing is completed
- 5** Memory location number, the last 10 numbers dialed are stored
L01, the number dialed last
L01 to L10, numbers dialed previously


The telephone is switched on.


Press or repeatedly until the corresponding telephone menu (1) appears on the screen.

Press , the redial memory is activated and the last number dialed will appear on the screen.


Press  or , to page forwards or backwards through the redial memory. The number selected will appear on the screen with the corresponding memory location.



Note:


If you do not wish to place a call, press . The process will be cancelled and the display will appear (1).

Press  when the desired number appears in the display (2).
Dialing will begin (3).



When dialing has been completed, the number will remain on the display.


Press  to end the call. The ready entry will appear in the display (1).

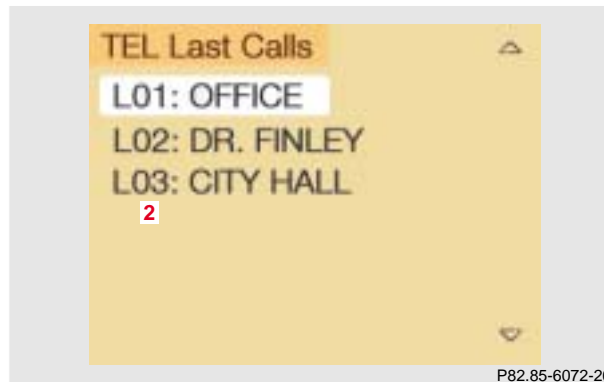
Press  or  to display the next system or previous system.

Dialing with COMAND

- 6 Memory location L01 - L10, the last 10 numbers dialed are stored
 - L01, the last number dialed
 - L01 - L10, the numbers dialed previously
- 7 An empty triangle marks the start of the list
- 8 An empty triangle marks the end of the list

Use the rotary/pushbutton  to highlight and confirm the “Last Calls” menu field in the main telephone menu or press the rotary/pushbutton  when the “Send” button is marked and when there is a blank input line. The redial memory will be activated.


Turn the rotary/pushbutton  to select the desired phone number.

Select the number by pressing the rotary/pushbutton .



The main telephone menu is activated and the phone number or name selected will appear.


Begin dialing:

Press the rotary/pushbutton  to confirm the “Send” button. The “End” button will now be highlighted. The message “Dialing” will appear.


Note:


If the list is empty, the message “No entry in list” will appear.

Ending a call, use one of the three ways:


- Press the rotary/pushbutton  to confirm the “End” button
- Press **TEL**.
- Press **BACK**.

Dialing from calls list


Use the rotary/pushbutton  to highlight and confirm the “Calls” menu field in the main telephone menu. The incoming calls memory will be activated.

Turn the rotary/pushbutton  to select the desired phone number.

Begin dialing:

Press the rotary/pushbutton  (to confirm the “Send” button). The “End” button is highlighted.

Ending a call, use one of the three ways:

- Press the rotary/pushbutton  to confirm the “End” button
- Press **TEL**
- Press **BACK**.

Speed-dialing (only with COMAND)


For all memory locations




When the main telephone menu is on display enter the memory location desired with the number keys, e.g.

▶ 1 → 4 CH. You can enter up to 2 digits.

Begin dialing, use one of the two ways:

- Press the rotary/pushbutton  to confirm the “Send” button. The “End” button will now be highlighted.
- Press the last number key longer than 2 seconds.

Important!

If you enter “1” and press the rotary/pushbutton , the number stored in memory location 1 (default is 9-1-1) will be dialed.

Pressing or holding “1” longer than 2 seconds will also initiate the call.

The 9-1-1 emergency call system is a public service. Using it without due cause is a criminal offense.




P82.85.6076-26

The phone number or name will appear in the menu.

When the call is initiated, the call time will appear on the screen.

Ending a call, use one of the three ways:

- Press the rotary/pushbutton  to confirm the “End” button
- Press **TEL**
- Press **BACK**.

Quick-dialing (for the first 10 memory locations)



The main telephone menu is displayed:

Press **1** through **0** longer than 2 seconds.

Important:

Pressing or holding “1” longer than 2 seconds will initiate the emergency call 9-1-1 (default), page 121.

The phone number or the name stored at this memory location will appear on the screen.

When the call is initiated, the call time will appear on the screen.

Ending the call, page 113.

Notebook

During a conversation you can enter a telephone number in the notebook or edit an existing one.

To open the notebook:

Use the rotary/pushbutton **⬇** to highlight the “▶” symbol and press to confirm.

Then use the rotary/pushbutton **⬇** to highlight the “Notebook” menu field and press to confirm.

To enter the telephone number:

Use the number keys **1** through **0**, or press **#** and *****.

To correct input:

- Press **BACK** briefly or use the rotary/pushbutton **⬆** to highlight the back arrow and confirm by pressing - the last digit will be corrected
- Press **BACK** longer than 2 seconds - the whole entry will be corrected.

To close the notebook and store input:

Press **BACK**.


Dialing a telephone number from the notebook

To open the notebook, see information on the left. When the telephone number in the notebook appears, press the rotary/pushbutton **⬆** and the **☑** symbol to confirm.

Note:

The telephone number in the notebook can be transferred to the phone book, page 115.


Editing the phone book

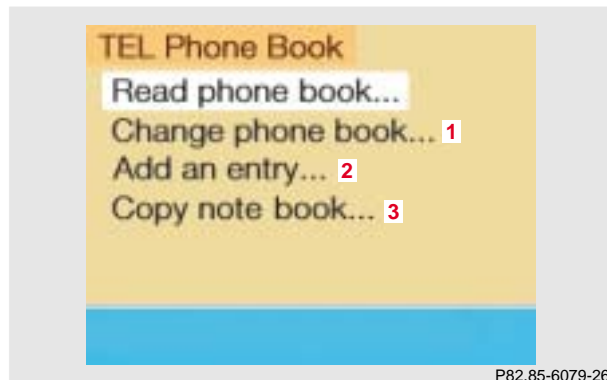

Use the rotary/pushbutton **⬇** to highlight the “Phone book” menu field in the main telephone menu and press to confirm. The “Phone book” selection menu will be activated.

- 1 To change entries in the phone book, page 125
- 2 To add an entry in the phone book, page 130
- 3 To transfer a telephone number from the notebook, page 131

Changing entries in the phone book

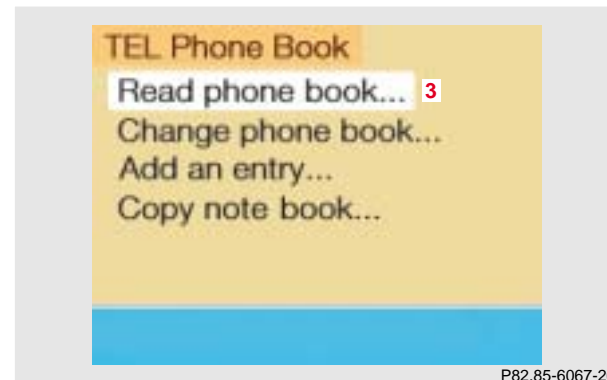

Use the rotary/pushbutton **⬇** to highlight menu field (1) and press to confirm.

The phone book will either display the list of names sorted alphabetically or the list of telephone numbers sorted according to memory location.

To activate the input menu:


Use the rotary/pushbutton **⬇** to highlight the desired entry and press to confirm.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Telephone


126


To change a name:

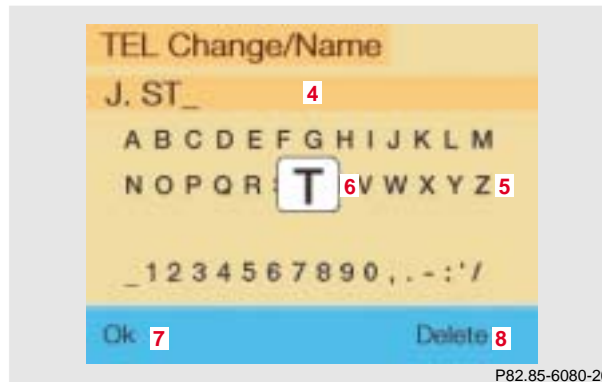

- 4 Phone book entry selected, enter up to 20 characters
- 5 Character list, selection of letters, digits and special characters
- 6 Zoom, character selected appears magnified
- 7 Confirm the changed entry
- 8 Deletes the entry in the phone book, page 129

To correct input:

 - Press **BACK** briefly or use the rotary/pushbutton  to highlight the back arrow and confirm by pressing - the last digit will be corrected
- Press **BACK** longer than 2 seconds - the whole entry will be corrected.

Use the rotary/pushbutton  to highlight the desired character one after the other and press to confirm. A character selected will be displayed magnified (6).

The name will be entered in the input line (4). The input cursor indicates the current input position.


Note:

The characters can also be selected using the numerical keys. Each numerical key has more than one assignment.



Select a character by pressing the key as listed below the corresponding number of times. The character selected (6) will appear magnified.

Button 1:	,	.	-	1	:	'	/	
Button 2:	A	B	C	2	Ä	Å	Æ	Ç
Button 3:	D	E	F	3	É	È		
Button 4:	G	H	I	4	IJ			
Button 5:	J	K	L	5				
Button 6:	M	N	O	6	Ñ	Ö	Ø	Œ
Button 7:	P	Q	R	7				
Button 8:	T	U	V	8	Ü			
Button 9:	W	X	Y	9				
Button 0:	Blank		0					

To adopt the character selected and to enter it in the input line:

- press **↵*** or turn the rotary/pushbutton 
- automatically after 2 seconds.

Select one of the options to store a name changed in the phone book:


- Use the rotary/pushbutton  highlight the “OK” menu field and press it to confirm.
- Press and hold down the rotary/pushbutton  to confirm the last letter of the name.

The menu for entering telephone numbers (page 128) will appear.

If you do not wish to save the changes:

Press **BACK**.

Changing a telephone number:

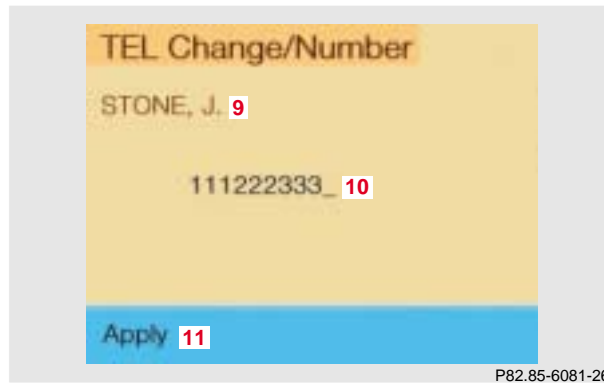

- 9 Current name or name previously changed (brown) will not be displayed if there is no name entry in the phone book for the telephone number concerned.
- 10 Input line, marked when activated
- 11 Telephone number will be stored in the phone book

Enter the telephone number using the numerical keys

▶ 1 through 0 OFF, or press **#** and *****.

To correct input:


- Press **BACK** briefly or use the rotary/pushbutton **◀** to highlight the back arrow and confirm by pressing - the last digit will be corrected
- Press **BACK** longer than 2 seconds - the whole entry will be corrected.

To store the telephone number in the phone book:

Use the rotary/pushbutton **◀** to highlight menu field (11) and press to confirm.

The main telephone menu will be activated.

Deleting an entry in the phone book

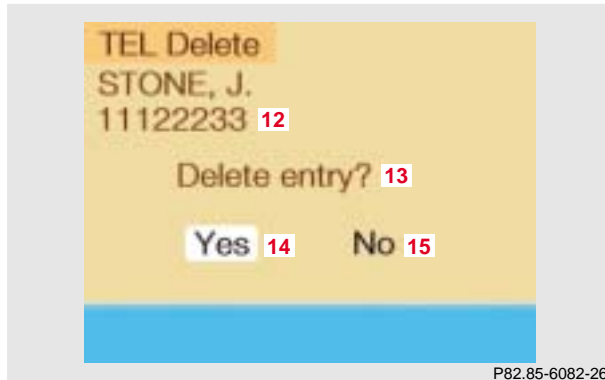

The query will appear after confirmation of the "Delete" menu field in the input menu, page 126.

12 Name and telephone number of the entry to be deleted

13 Query

Note:

Positions (12) and (13) are highlighted in brown.

Use the rotary/pushbutton ● to highlight the menu field and press to confirm:

14 Entry is deleted, the main telephone menu will appear.


15 The entry is not deleted, the menu previously activated will appear.

Telephone

130

Adding an entry to the phone book

To enter the name:

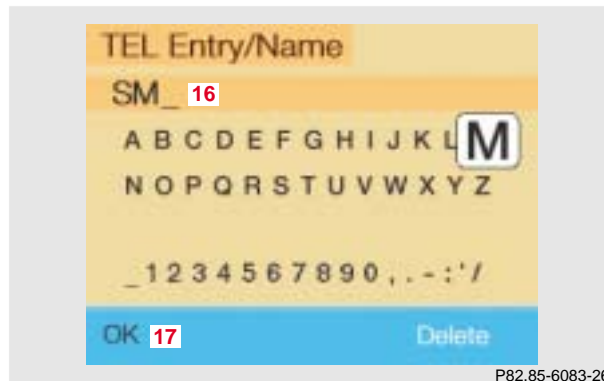

Use the rotary/pushbutton ● to highlight the “Add entry” menu field in the selection menu (page 125) and press to confirm. An input menu will appear.

16 Input line

17 Confirm the name

Note:


The name will also be stored if the last letter of name was confirmed by pressing and holding the rotary/pushbutton ●.

The menu for entering the telephone number will be activated, page 126.

To change a name, page 126.

To correct input, page 126.

Entering and storing a telephone number:

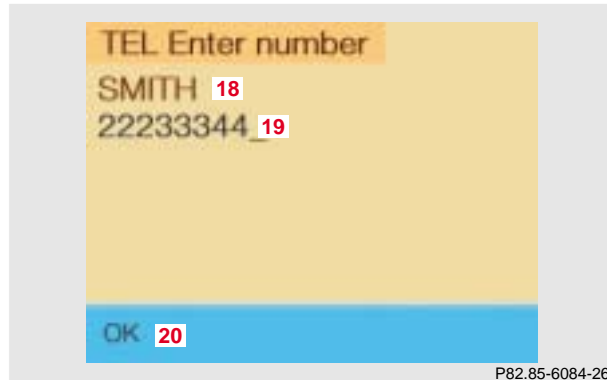


- 18 Name previously entered
- 19 Input line for telephone number
Enter the telephone number using the numerical keys **1** through **0**, or press **#** and *****.
- 20 The telephone number will be filed in the memory selected, the main telephone menu will be activated.

Storing a number in the notebook

After selecting the “Copy notebook” menu field in the “Phone book” selection menu (page 125) the menu for entering the name (page 126) and then the menu for entering the telephone numbers (page 128) will appear.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	------------	-----------------------------------	-------

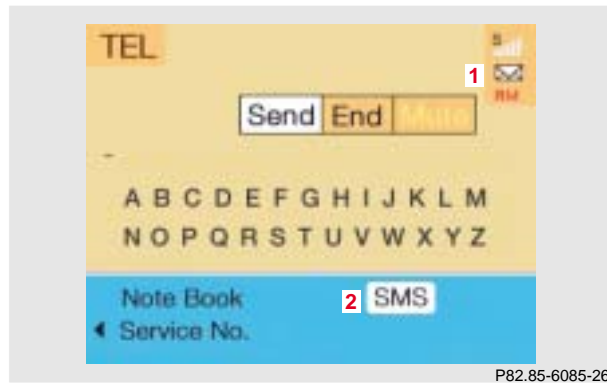
SMS function

This function can be used for receiving, reading and deleting short text messages¹.


Activating the SMS function

Use the rotary/pushbutton  to highlight the “▶” symbol in the main telephone menu and press to confirm. Other menu fields will be displayed.

¹If available from your carrier.

- 1 The  symbol will appear when a new SMS message has arrived.

Note:

When an SMS message arrives the “RM” symbol (roaming mode) may be faded out and the  symbol displayed.

- 2 Activates the SMS list, page 133

Note:

If necessary, SMS messages must be read in by the COMAND unit. The following message will appear: “SMS loading...”. The loading process can take up to 30 seconds.

Reading SMS messages received




Use the rotary/pushbutton **⬇** to highlight the “Reading SMS” menu field and press to confirm.


The list of SMS messages received (up to 10 messages) will be displayed. The messages are sorted according to the time received.

- 3 Current SMS message marked, telephone number or name (if it is in the phone book) will be displayed, date and time will be highlighted in brown


Use the corresponding arrow symbols to page forwards and backwards through the list of messages.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

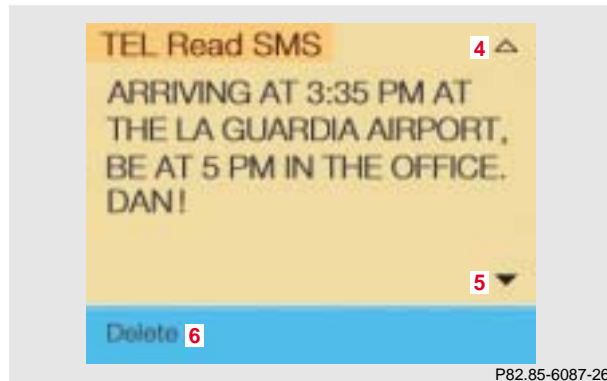



Press the rotary/pushbutton  to page through the list:

- 4 Pages through the list backwards when the symbol is marked
- 5 Pages through the list forwards when the symbol is marked
- 6 Deletes an SMS message, page 135

Use the rotary/pushbutton  to highlight the desired SMS message and press to confirm. The SMS message will be displayed.

Deleting an SMS message

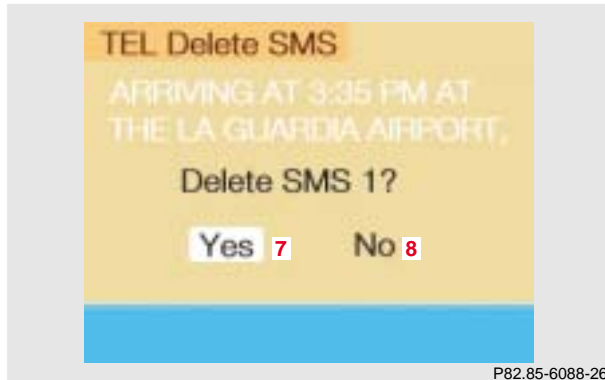

Use the rotary/pushbutton  to highlight the “Delete” menu field and press to confirm.

7 SMS message currently displayed is deleted


If there was only one SMS message:
The main telephone menu will be activated.

If there are other SMS messages:
The next SMS message will be displayed.

After the oldest SMS message has been deleted the current SMS message will be marked in the list displayed.

8 SMS message is not deleted,
the list with the SMS messages received (page 133) will be activated, the SMS message previously marked remains marked

Emergency call**Important!**

If you enter “1” and press the rotary/pushbutton , the number stored in memory location 1 (default is 9-1-1) will be dialed.

Pressing or holding “1” longer than 2 seconds will also initiate the call.

The 9-1-1 emergency call system is a public service. Using it without due cause is a criminal offense.

You can make an emergency call to an emergency rescue station with a mobile communications network.

The emergency call will be placed as long as the corresponding mobile communications network is available. To do this, switch the telephone on, if you have not already done so.

It will also be placed, if the unlock code is not entered.

Emergency calls may not be possible with all mobile phone networks or if certain network services and/or telephone functions are active. Check with your local network operating company.


Note:

This function places a call to the local 9-1-1 provider. It does not initiate a Tele Aid call.

 **Caution!**


It will not be possible to complete the emergency call if the the cellular system is busy. The message “System busy, redial?” appears.

Take appropriate measures to alert an emergency service as soon as possible.

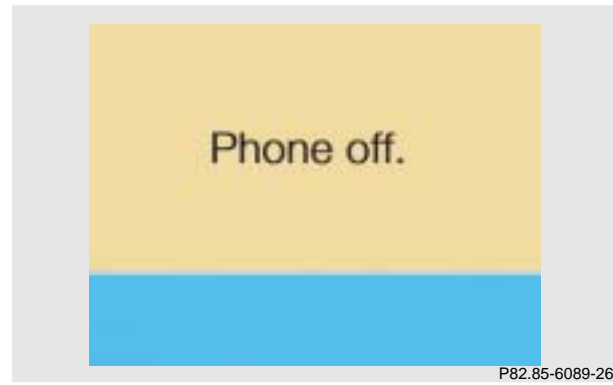

In this case the telephone main menu will disappear and the message “Phone off.” is displayed. After Tele Aid call is ended the telephone main menu will re-appear.
See your vehicle’s operator's manual.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

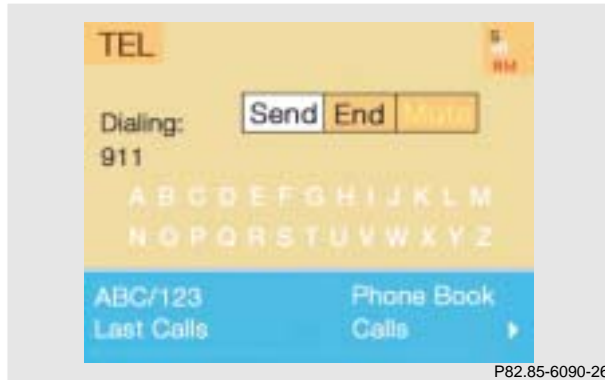Telephone is ready for operation

When the main telephone menu or a memory menu is displayed on the screen, enter the emergency number by pressing **1** for longer than 2 seconds (quick-dialing).

Do not place the emergency call:

Mark the “End” button with the rotary/pushbutton **1** and press to confirm or press **BACK**.

Begin dialing:

After pressing the **1** key longer than 2 seconds the number being dialed will appear. The “End” button is highlighted.

When the call is initiated, the call time will appear in the display.

Ending a call, use one of the three ways:

- Press the rotary/pushbutton **1** to confirm the “End” button
- Press **TEL**
- Press **BACK**.


Notes:


To use this function you must ensure that the number stored in memory location 1 is the number to be dialed in case of emergency.

This function will also be performed if the phone is locked.

Service numbers


Calling a service number

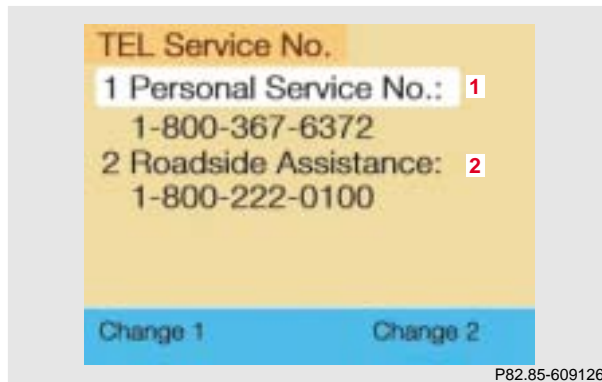


Use the rotary/pushbutton  to highlight the menu field “Service No.” in the main telephone menu and confirm by pressing.

The “Service No.” menu is activated.

- 1 Personal service number
- 2 Number for roadside assistance


Use the rotary/pushbutton  to highlight the service you require in the menu and confirm by pressing. The main telephone menu is activated.

The dialing process starts:

Confirm the “Send” button by pressing the rotary/pushbutton . One of the messages “Personal Service No.” or “Roadside Assistance” appears. The “End” button is highlighted.


After the call has been initiated the length of the call is displayed.

Ending a call, use one of the three ways:


 
- Press the rotary/pushbutton  to confirm the “End” button
- Press **TEL**
- Press **BACK**.


Changing personal service number



Use the rotary/pushbutton  to mark the menu field “Change 1” in the “Service No.” menu and confirm by pressing.


The menu “Change Service No. 1” is activated.

Use the number keys  through  to enter the new service number.

Confirm the new service number by pressing the rotary/pushbutton .

The new service number is now stored in the menu “Service No.”.


Note:


The personal service number is deleted after pressing the rotary/pushbutton  and inserting an empty input line.

Return to the main telephone menu by pressing **BACK**.

Changing the number for roadside assistance



Use the rotary/pushbutton  to highlight the menu field “Change 2” in the “Service No.” menu and confirm by pressing.
The country list “Change Service No. 2” is activated.

Select the new country service number by highlighting the country abbreviation you want with the rotary/pushbutton  and confirm by pressing.

The new service number is now stored in the menu “Service No.”.

Return to the main telephone menu by pressing **BACK**.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Navigation

Contents - Navigation	143	Selecting the last destinations ..	170	Route guidance with a mixture of map and symbol display	190
Notes	145	Selecting the route calculation mode and calculating the route	171	Altering the map scale	191
Before you use the navigation system	145	Route guidance	174	Selecting map orientation	192
Navigation	147	The principle of route guidance	174	Marking a way point	193
Quick reference - Navigation	147	Requesting destination and route information	176	Selecting a detour during route guidance	196
Switching the navigation system on	149	Beginning route guidance	184	Resetting functions during route guidance	200
Changing the Navigation CD	150	Turning onto a street	186	Deviating from the calculated route	201
Destination entry	151	Following the course of the road	187	Reaching your destination	201
Menu overview - Destination entry	151	Driving through an intersection	188	Activating audio system	202
Entering destination address	153	Changing to map display during route guidance	189	Activating audio functions during route guidance	203
Continue destination input	158			Canceling route guidance	204
Selecting a destination via the map	161				
Entering points of interest	165				

Contents - Navigation

Destination memory	205	Saving the current vehicle location in the destination memory	209
Activating the main destination memory menu	205	Sorting the destination memory	210
Retrieving a destination from the destination memory	206	Deleting a destination in the destination memory	211
Saving the current destination in the destination memory	207	Entering the vehicle position	212
		Calibration	213

Before you use the navigation system

The route calculated by COMAND is a recommendation on how to best reach your selected destination.



Warning!

During route guidance, you will not receive any information on traffic lights, stop or yield signs, no parking or no stopping zones, one-way streets, narrow bridges and similar traffic regulation data. Please always strictly observe traffic regulations while driving. Traffic regulations always have priority over any route recommendations given. Study manual and select route before driving, – do not watch display screen or operate buttons while the vehicle is in motion – let voice instructions guide you. – Stop at a safe location before using buttons or making corrections. Drive carefully and always obey traffic laws and road signs even if they contradict system instructions.

For safety's sake you should only enter destinations when the vehicle is stationary. When the vehicle is in motion, a passenger should enter the destination.



Warning!

The CD reader contains a Class 1 laser product. There is a danger of invisible laser radiation if the cover is opened or damaged.

Do not remove the cover. The CD reader does not contain any parts which can be serviced by the user. For safety reasons, have any service work which may be necessary performed only by qualified personnel.

The data stored on the original navigation CD is used for route calculation. Using other navigation CDs might lead to malfunctions.

Because of changes in local traffic patterns and/or incomplete data, errors in calculation may occur. The recommended trip may deviate in this case from the available traffic pattern, because the data material stored on the CD represent the local conditions at the time the CD was produced.

Notes

146

The current vehicle position cannot be displayed exactly in every case. Satellite reception conditions, road conditions, the condition of the vehicle, etc. could cause deviations from the actual situation. In this case enter the current vehicle position manually, page 213.

When the vehicle has been transported by a car train or a ferry, COMAND will require some time to find its exact position. In these cases it is often sufficient to move the vehicle a few yards to receive a complete route recommendation.

The reception of GPS signals can be unreliable or at times even impossible:

- When driving between tall buildings, in parking garages or tunnels, when obstructed by large vehicles and similar structures
- During electrical storms or very heavy rains
- Satellites may be switched off for checking or repair

Changing tires:

We recommend that you have any tire changes done by a Mercedes-Benz Center. Because COMAND operates using measurements taken by wheel revolutions, the tire new size must be entered when the tires are changed, see calibration on page 213.

Travelling abroad:

If you intend to travel through different regions or abroad you will need the respective CD. Contact your Mercedes-Benz Center or the Client Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) for the available CDs.

Remove the actual Navigation CD when you leave a region or cross the border and insert the Navigation CD for the region or country you are now in.

Quick reference – Navigation

 





P82.85-6121-29





Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	-------------------	-----------------------------------	-------


Navigation


148

- 1 Selecting a detour during route guidance, page 196
- 2 Switching the navigation system on, after which either the main destination input menu, the symbol display or the map will appear
- 3 Repeats the current (last) voice instruction
- 4 Selecting a destination via the map, page 161
- 5 During map display:
Press  once - the scale bar appears, page 164 and 191
Press  again - selects a more detailed map scale

If a list is displayed: Removes the window for Number 6 below
- 6 During map display:
Press  once - the scale bar appears, page 164 and 191
Press  again - selects a less detailed map scale


If a list is displayed:
Press  once - a long entry will display in full in a window, page 166
Press  again - removes the window
- 7 Raising  or lowering  the volume of the voice output during route instruction
- 8 Return to the previous menu
- 9 **Turn:** Highlight a menu field, list entry or symbol
Altering the map scale, page 164 and 191

Press: Confirm an entry/selection, start a function or activate a submenu
Activate the map scale bar, page 164 and 191
- 10 Switching the COMAND system on and off, page 13
- 11 Press  briefly:
The current route instruction is muted, page 185

Press  longer than 2 seconds:
The voice output is switched off for the duration of the current route guidance, page 185
- 12 Color screen with map display
- 13 CD slot for navigation CD

Note:
Do not insert radio CD's in this slot.
- 14 Ejects navigation CD

Switching the navigation system on

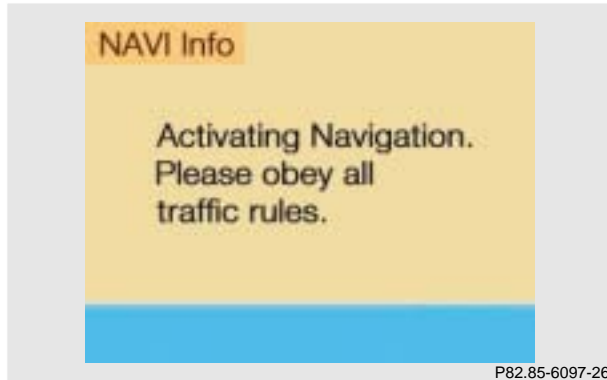

Press **NAVI**.

The following message will appear when COMAND is preparing for navigation startup: "Activating Navigation. Please obey all traffic rules".



One of three displays will appear:

- the main destination input menu, for active destination entry (illustrated above)
- the map display, page 161 when route guidance and the map were previously active and route was not completed
- the symbol display indicating turns, page 161 when route guidance and the symbol display were previously active and not completed.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Navigation

150


Note:

When navigation is preparing for operation, various error messages may appear:

- “Navigation cannot be activated, an error has occurred.”
- “CD-Reading error. Please change CD” – remove the current CD and insert the Navigation CD.
- “No CD. Insert navigation CD” – you did not insert a CD, insert the Navigation CD.

When the error has been corrected COMAND shows the message “Activating Navigation. Please obey all traffic rules”.

To change over to another system press the corresponding key, e.g. **RADIO**.

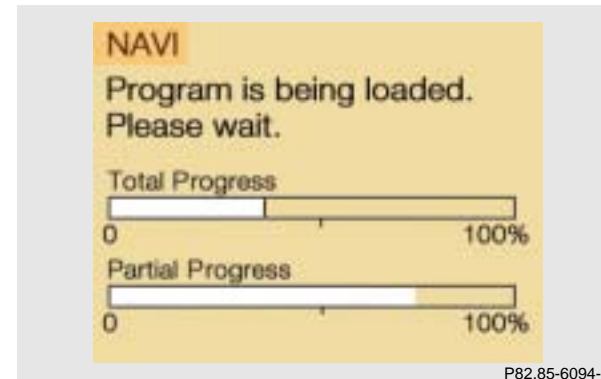Changing the Navigation CD


Press **▲** to eject an inserted navigation CD.
Insert another navigation CD.

The screen above will be displayed. The program stored on the navigation CD is being loaded.

Important!

Do not interrupt the loading process.

Menu overview – Destination entry

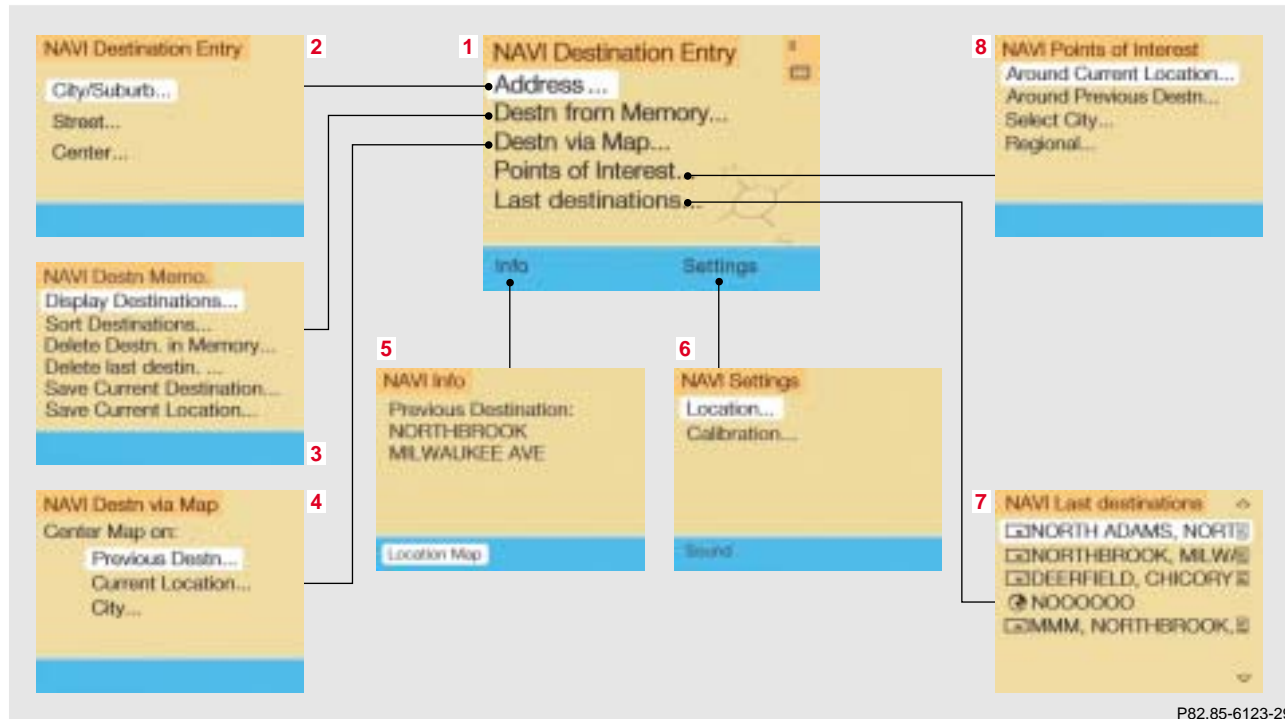

P82.85-6123-29

Destination input


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Destination input**152**

- 1** Main destination input menu, select type of destination entry:
 - Entering destination address, page 153
 - Retrieving a destination from destination memory, page 215
 - Selecting a destination via the map, page 161
 - Entering points of interest, page 165
 - Selecting the last destinations (the last 12 destinations), page 170
- 2** Entering destination address, page 153

- 3** Main destination memory menu, page 205
- 4** Set destination via location on map, page 161
- 5** Details about previous destination
- 6** Entering the vehicle position manually, page 212
System calibration, page 213
- 7** Activates the list of the last 12 destinations for a new calculation
- 8** Points of interest main menu – set destination via point of interest listing, page 165

Entering destination address

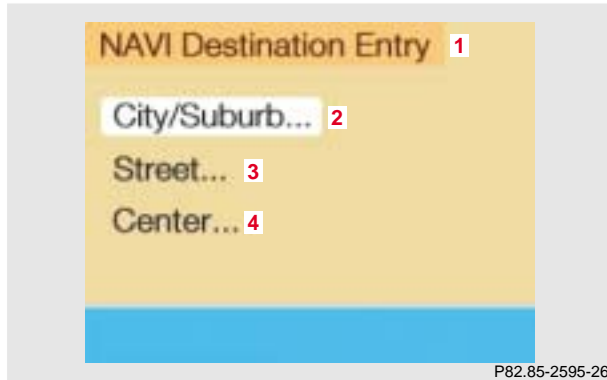

Press the rotary/pushbutton  in the main destination input menu to confirm the "Address..." menu field.

- 1 Info/status line
- 2 Select city/suburb, page 154
No entry: place not yet entered
Entry available: place last entered
- 3 Selecting a street, page 156
Menu field can be selected if a city has been previously selected
- 4 Selecting a city center, page 160
Menu field can be selected if a city has been previously selected


To cancel destination input:


Press **BACK**.

The main destination input menu will appear.

Destination input

Select city/suburb

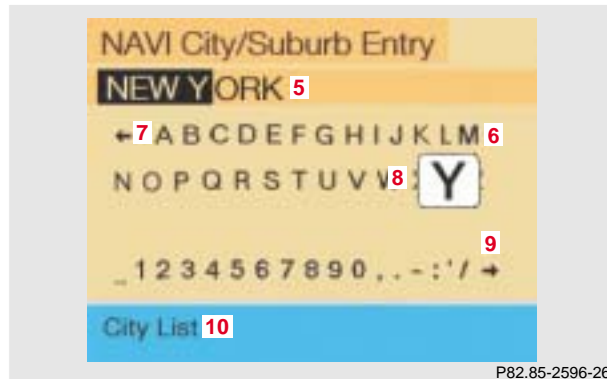

Press the rotary/pushbutton  to confirm the “City/Suburb...” menu field. An entry menu will appear.


- 5 Input line, selected characters are shown inverted; the last city selected is also shown here
- 6 Character set
- 7 Delete symbol, delete the last or all characters
- 8 Zoom, enlarges the currently selected character
- 9 Move the insertion point one position to the right
- 10 Activate the city list


154

Selecting a new destination:


Selections are made from the city list, call up via the menu field (10). First enter in the input line (5) the required destination or adopt the destination last selected.

Entering the destination via the input menu:


Turn the rotary/pushbutton  to select the desired letter from the character set (6), it will appear magnified (8).

 
Press the rotary/pushbutton  to confirm your selection, the letter selected will appear highlighted in the input line (5). The new entry will be completed with additional letters to form one of the city/suburb names available on the list.


Move the insertion point one position to the right:

Use the rotary/pushbutton  to highlight the symbol (9) and confirm by pressing.


Correcting the entry:

To delete the last character entered, use the rotary/pushbutton  to highlight the delete symbol (7) and press to confirm.



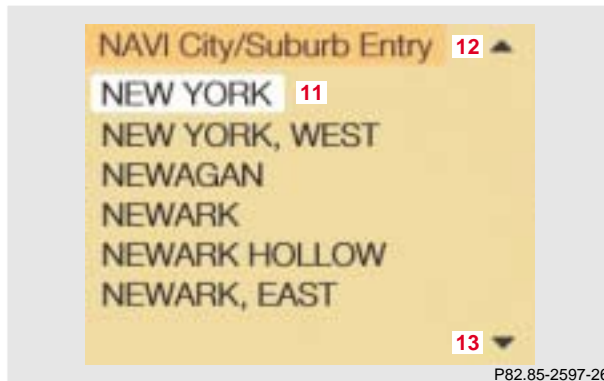To delete all of the characters entered, highlight the delete symbol (7) and press the rotary/pushbutton  for longer than 2 seconds.




To access the list of places:

Press the rotary/pushbutton  for longer than 2 seconds or highlight and confirm menu field (10).

- 11 Selected City/Suburb, already highlighted
- 12 Display to previous page
- 13 Display to next page

The next/previous page can be reached by turning the rotary/pushbutton  past the last/first entry. Turn the rotary/pushbutton  to highlight the desired destination and press it to confirm.

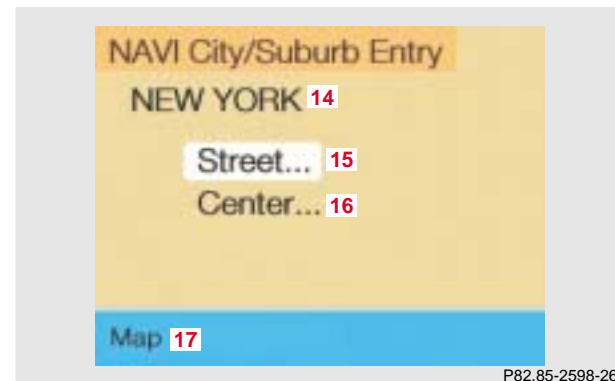

If the destination selected is stored on the CD more than once, a menu will appear so you can confirm the desired place name.


Otherwise, the selection menu illustrated above will appear on the screen.

- 14 City previously selected
- 15 Selecting a street, page 156
- 16 Selecting a city center, page 160
- 17 Activates the map to select a destination, page 161

Destination input

156

Selecting a street

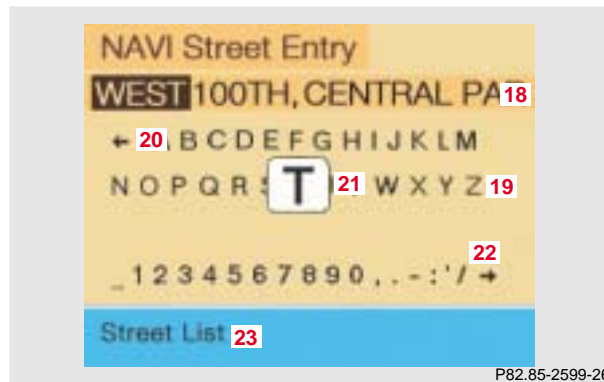

P82.85-2599-26


Press the rotary/pushbutton  to confirm the “Street...” menu field. The street input menu will appear.


- 18** Input line, enter the letters of your desired street destination
- 19** Character set
- 20** Delete symbol
- 21** Zoom, enlarges the currently selected character
- 22** Move the insertion point one position to the right
- 23** Activate the street list

Selecting the street:

The selection is made from the street list, activated via the menu field (23). First enter the desired street in the input line (18).

Enter a street:


Turn the rotary/pushbutton  to select the desired character from the character set (19), the character selected will appear in magnified form (21).


Press the rotary/pushbutton  to confirm your selection, the letter selected will be highlighted in the input line (18), the previous entry will be deleted. The new entry will be completed with additional letters to form one of the street names available on the list.

Move the insertion point one position to the right:


Use the rotary/pushbutton  to highlight the symbol (22) and confirm by pressing.

Correcting the entry:


To delete the last character entered, use the rotary/pushbutton  to highlight the delete symbol (20) and press to confirm.

To delete all of the characters entered, highlight the delete symbol (20) and press the rotary/pushbutton  for longer than 2 seconds.




Press the rotary/pushbutton  for longer than 2 seconds or highlight and confirm menu field (23).
If the street you select is saved on the CD more than once, a menu will appear for you to select the corresponding suburb of entered city.

24 The street entered is highlighted

Call up next/previous page - use the rotary/pushbutton  to highlight symbol (25, 26) and continue to move in the corresponding direction:

25 Previous page


26 Next page

Turn the rotary/pushbutton  to highlight the desired street and press to confirm.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Destination input

Continue destination input

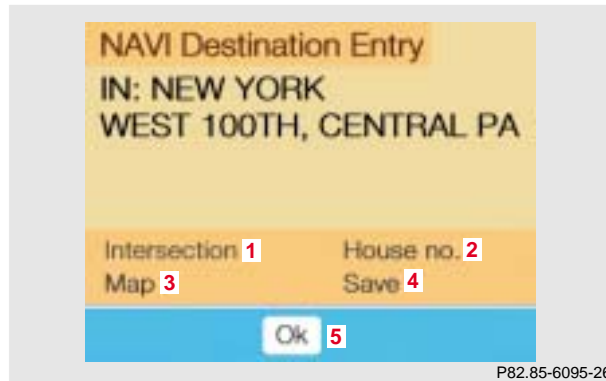


You can define your destination address more precisely by adding an intersection or a house number or by selecting it on the map.

If you do not want to add anything to your destination input, select the route calculation mode and have the route calculated, page 170.

158


Note:


Whether or not there is a menu field for the house number depends on the data stored on the navigation CD you are using.


Use the rotary/pushbutton  to highlight the menu field and press to confirm:

- 1 Selecting an intersection, page 159
- 2 Entering the house number, page 160
- 3 Selecting a destination via the map, page 161
- 4 Saves the destination address in the destination memory, page 207
- 5 Confirms the destination, Select the route calculation mode and the route will be calculated, page 171

Selecting an intersection

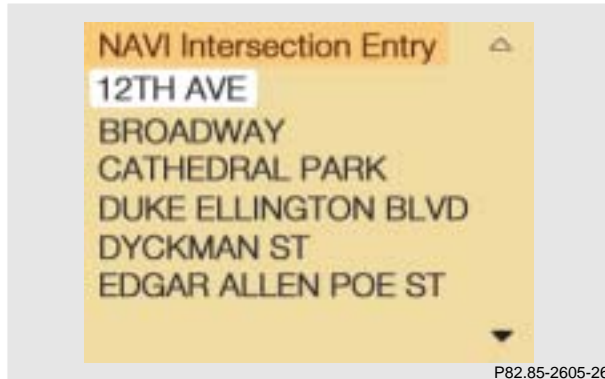

Use the rotary/pushbutton  to highlight the "Intersection" menu field in the menu (page 158) and press to confirm.
A list of roads intersecting with the previously input street will appear.

Use the rotary/pushbutton  to highlight the name of the junction on the list and press to confirm.



To confirm the destination:

Use the rotary/pushbutton  to highlight the "OK" menu field and press it to confirm.


Then select the route calculation mode and calculate the route, page 171.


 
Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Destination input


Entering the house number

In large cities, it is possible to enter a house number to make your destination more precise. It is possible, if the “House no.” menu field (page 158) is shown in black.

Use the rotary/pushbutton  to highlight the “House no.” menu field and press to confirm.


Use the rotary/pushbutton  to highlight the desired digits in the input menu one after the other and press the button to select the digits. Press the rotary/pushbutton  for a longer time to confirm the house number entered.


House numbers usually appear on the list in blocks, e.g. 1 - 5 (odd numbers), 42 - 50 (even numbers) or 1 - 50 (mixed).


Use the rotary/pushbutton  to highlight the desired block and press to confirm.

Then select the route calculation mode and calculate the route, page 170.

160

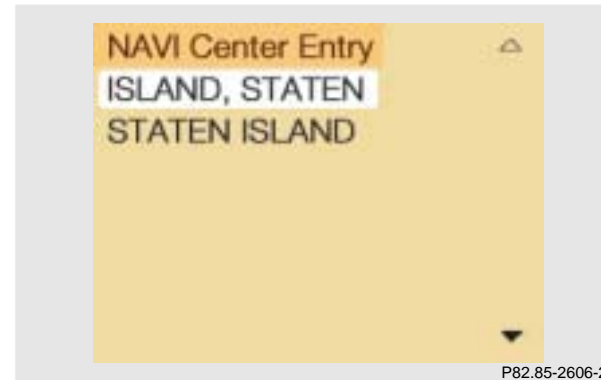
Selecting a city center


Use the rotary/pushbutton  to highlight the “Center” menu field in the main address menu (page 153) or after selecting a city/suburb (page 155) and press to confirm.

Use the rotary/pushbutton  to highlight the desired entry on the list and press to confirm.

Then select the route calculation mode and calculate the route, page 171.

Selecting a destination via the map

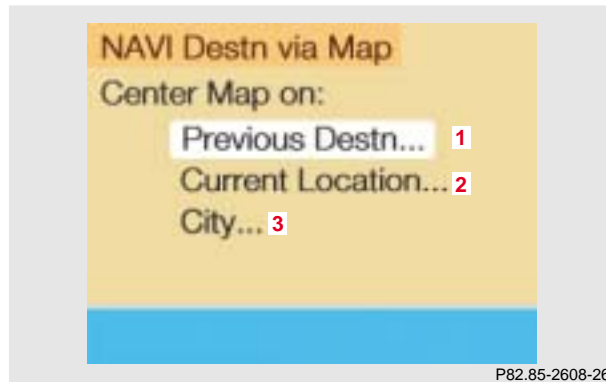

Use the rotary/pushbutton  to highlight the “Destn via Map...” menu field in the main destination input menu and press to confirm.

A selection menu will appear.

The selection menu will not appear if you access the map from the menu (page 158). In this case, the map will appear immediately.

- 1 Activates the map with the center on the previous destination
- 2 Activates the map with the center on the current vehicle position
- 3 Activates the city entry menu, page 153

Use the rotary/pushbutton  to highlight the menu field and press to confirm. The map will appear.

To cancel your selection of the destination via the map:

Press **BACK** twice. The main destination input menu will appear.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

Destination input

162

Moving the cross hairs






- 4 Street name or the name of the symbol (e.g. parking area/ -garage) that the cross hairs are centered on
- 5 Cross hairs to select the destination
- 6 Symbol for current vehicle location
- 7 Current map scale

During destination entry, the map will always appear facing north (north is up). The appearance of the map is dependent on the scale.



Use the number keys **1** through **4**, **6** through **9** according to the corresponding arrows to move the cross hairs around the map:

- 1** - Move to the top left
- 2** - Move up
- 3** - Move to the top right
- 4** - Move to the left
- 6** - Move to the right


-  - Move to the bottom left
-  - Move down
-  - Move to the bottom right

Notes:

Moving the cross hairs out towards the edge of the screen with the cursor keys activates an adjacent section of the map. It may take a few seconds to point to each new map.

Adjacent map sections overlap somewhat so that destinations on the edge of the map can be marked as well.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

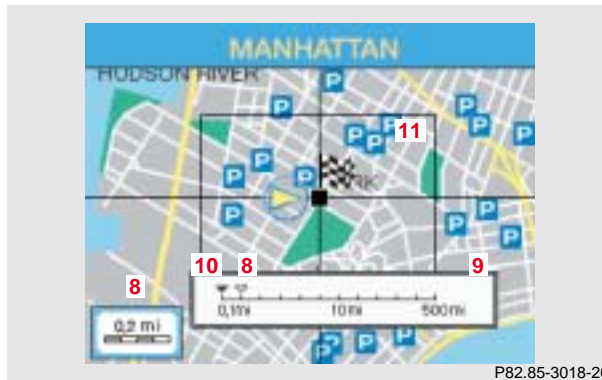Altering the map scale

P82.85-3018-26

Display of the scale bar is activated by either one of two actions:

- Press ***** or **#**
 - Press the rotary/pushbutton **⬇**.
- 8** Current map scale
- 9** Scale bar, 12 different scales are available from 0.1 mi/inch to 500 mi/inch
- 10** New scale
- 11** Square frames enlarged section of the map

Increase the map scale (activates more detailed map):

Press ***** and turn the rotary/pushbutton **⬅** to the left. A square will appear around the cross-hairs, it indicates the new map section.

Reduce the map scale (activates a less detailed map):

Press **#** and turn the rotary/pushbutton **➡** to the right. Press the rotary/pushbutton **⬇** briefly to calculate the new map section. This will take place automatically after 8 seconds.

Note:


To select destinations which are not directly located in the vicinity of the map section on the screen, it is advisable to access the overview map. Then use the number keys to position the cross hairs near the destination. Now switch to the detail map and move the cross hairs to your desired destination.

Confirming destination:


Once the cross hairs mark the desired destination, press the rotary/pushbutton **⬇** longer than 2 seconds.

Then select the route calculation mode and calculate your route, page 171.

Entering points of interest

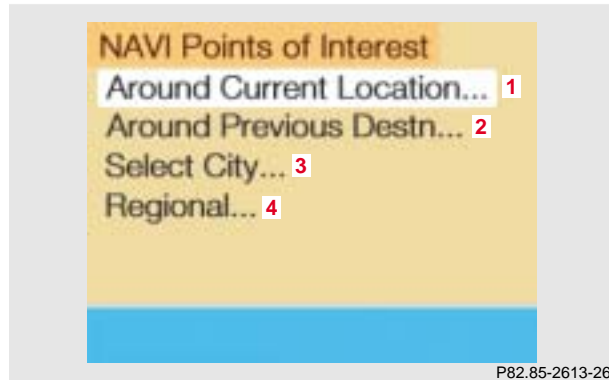

This function allows you to select such points of interest as gas stations, Mercedes-Benz Centers, parking facilities, shopping centers or airports.

Use the rotary/pushbutton  to highlight the “Point of interest...” menu field in the main destination entry menu and press to confirm.

The Point of interest menu will appear.

Confirming the menu field:


- 1 Select a point of interest around the current area of vehicle location, page 166
- 2 Select a point of interest around the previous destination area, page 166
- 3 Select a point of interest in the surrounding area of another city, page 167
- 4 Select a regional point of interest, e.g. airport, page 168

Destination input

166

Selecting points of interest around current area of vehicle location or previous destination area

P82.85-6099-26


Use the rotary/pushbutton  to highlight menu field (1) or (2) in the points of interest menu and press to confirm.

Use the rotary/pushbutton  to highlight the desired category and press to confirm.



Note:


Not all Points of Interest may be listed on the CD.

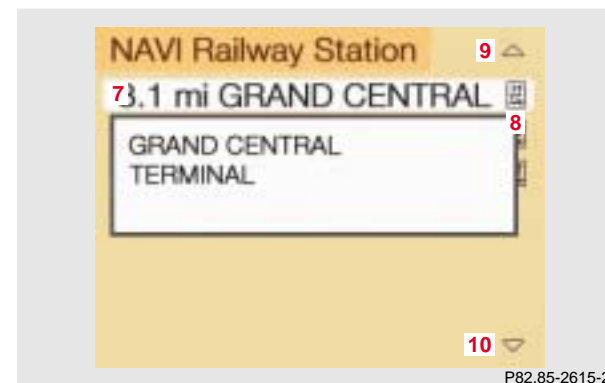- 5 Previous page - available when arrow is solid
- 6 Next page - available when arrow is solid





P82.85-2615-26


- 7 Distance to destination (point to point distance in miles)
- 8 Symbol for a long list entry - press  to display it in full in a window, press  to make it disappear
- 9 Previous page - available when arrow is solid
- 10 Next page - available when arrow is solid

Use the rotary/pushbutton  to highlight the desired destination in the selection list and press to confirm. Then select the route calculation mode and calculate the route, page 171.


Selecting points of interest in the area surrounding another city

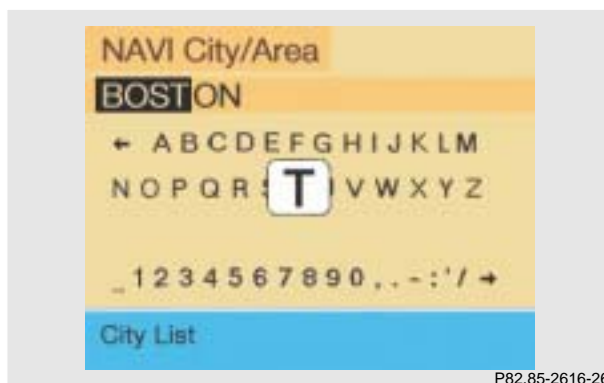

Use the rotary/pushbutton  to highlight the menu field for “Select City ...” in the points of interest menu and press to confirm.

Use the rotary/pushbutton  to highlight the initial letters of the desired city one after the other and press to confirm.


Structure of the input menu, page 154.
Correcting the entry, page 154.

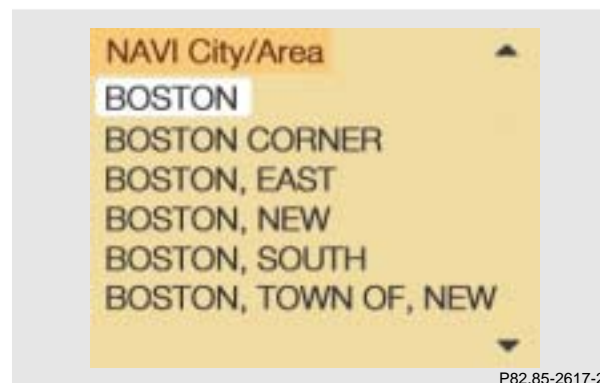


Activating the city list:

Press the rotary/pushbutton  longer than 2 seconds or highlight the “City list” menu field and confirm.

Moving to the next/previous page:

Use the rotary/pushbutton  to highlight the scrolling symbol and turn in the corresponding direction or confirm the symbol by pressing.

Turn the rotary/pushbutton  to highlight the desired destination and press to confirm.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------




If the city/suburb is stored only once on the CD, then the categories list will appear. Otherwise, another menu will appear first in which you must confirm the desired city/suburb again.


Select the desired category, page 166.

Note:

Not all points of interest may be listed on the CD.

Selecting regional destinations

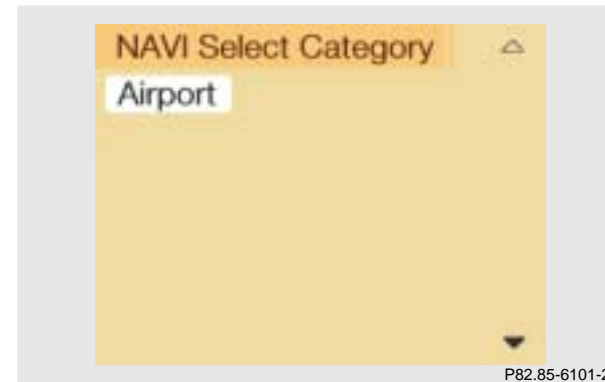


Use the rotary/pushbutton  to highlight the “Regional...” menu field in the points of interest menu and press to confirm.


Use the rotary/pushbutton  to highlight the desired category and press to confirm.

Note:

Not all points of interest may be listed on the CD.

An input menu will appear.

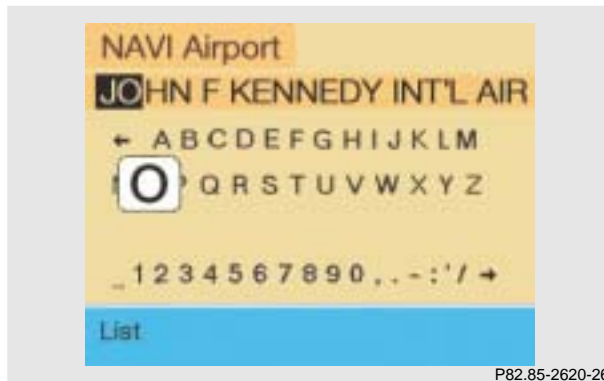


Use the rotary/pushbutton  to highlight the letters of the desired destination one after the other in the input menu and press to confirm.

The input line will automatically be populated with the first matching entry in the list. As subsequent characters are entered, the system will narrow the available list.

Structure of the input menu, page 154.
Correcting the entry, page 154.



Activating the list:

Press the rotary/pushbutton  longer than 2 seconds or highlight the “List” menu field and confirm.


Moving to the next/previous page:

Use the rotary/pushbutton  to highlight the scrolling symbol and turn in the corresponding direction.

Turn the rotary/pushbutton  to highlight the desired destination and press to confirm.

Select the route calculation mode and calculate the route, page 171.


Destination input

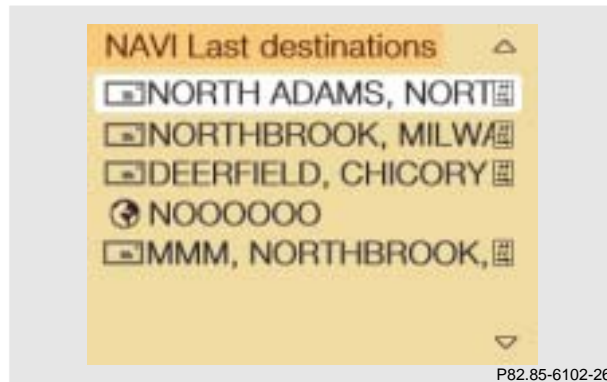Selecting the last destinations

Use the rotary/pushbutton  to highlight the “Last destinations” menu field in the main destination input menu and press to confirm.

A list will be activated. The last 12 destinations entered will be displayed.


170

Use the rotary/pushbutton  to highlight the desired destination and press it to confirm your selection.

The route mode menu will appear.


Select the route calculation mode and calculate the route, page 171.

Selecting the route calculation mode and calculating the route

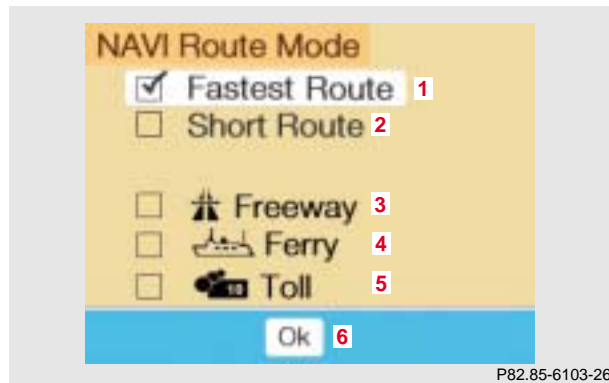

After you have entered your destination, select the route calculation mode and calculate your route.

Route calculation is performed either as the Fastest route (1) or Short route (2) whereby traffic routes (3), (4) and (5) can be included or avoided (several selections are available).

Use the rotary/pushbutton  to highlight the menu field and press the button to confirm your selection:

- 1 Route calculated for optimum driving time, p. 172
- 2 Route calculated for optimum driving route, p. 172

To include /avoid traffic routes, several selections are available:

- 3 Calculate the route using freeways
 Avoid freeways
- 4 Calculate the route using ferry connections, car trains
 Avoid ferry connections, car trains
- 5 Calculate the route using toll roads
 Avoid toll roads
- 6 The route will be calculated with the selected settings.

Calculate the route:

Press the rotary/pushbutton  longer than 2 seconds.


Note:

In the event that no reasonable alternate route for that destination exists, the route will be calculated including freeways, ferries and toll roads even if these selections are to be avoided.

Calculate the route

171

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
------------------------------	-----------------------	---------------------------	----------------------------	---	-----------------------

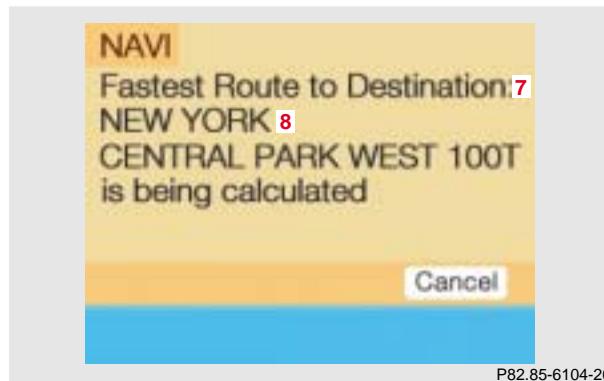


P82.85-6104-26

The menu on the screen indicates:

- 7 The method of calculation
- 8 The destination

You will hear the voice output "The route is being calculated".

To cancel route calculation:

Press **BACK** or press the rotary/pushbutton  to confirm the cancel menu field. The main destination entry menu will appear on the screen.



P82.85-6105-26

After a few seconds, the symbol display will appear:

- 9 The driving route is being calculated, other messages may also appear here during route guidance, page 175
- 10 Arrow indicating the direction to the destination (point to point distance), may also be displayed briefly during route guidance, e.g. if you are driving on roads/road sections that are not stored on the Navigation CD.
- 11 Distance to the destination (point to point distance)



P82.85-2604-26

The arrow indicating your driving direction will appear when the COMAND system has identified the road you are travelling on.

You will hear a message, such as “Please, make the next right turn”.


How route guidance works, page 174.

Calculate the route

173

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

The principle of route guidance

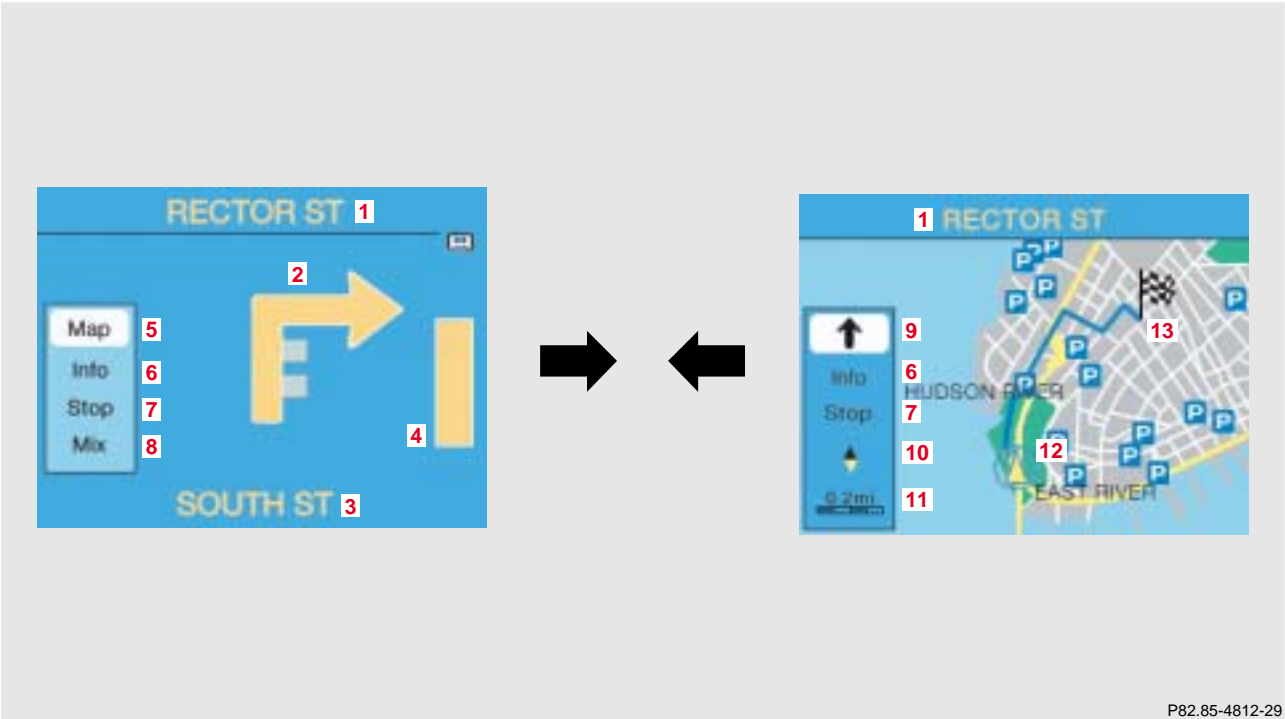


- 1 Name of the street onto which you should turn or distance from destination
- 2 Arrow indicating the driving direction, other symbols are also possible: arrow indicating the direction to the destination, symbol for new calculation of a route or destination flag
- 3 Name of the street on which you are travelling
- 4 The following may be displayed:
 - Distance bar to turn-off
 - Distance to the next turn in miles
 - Messages:
 - “OFF MAP” - the vehicle is located outside of the digitized map area
 - “OFF ROAD” - the vehicle is located on a road which is not digitized
 - “DEST AREA” - the vehicle is approaching the destination, the destination area is not digitized
 - “CALC. ROUTE” - a route is being calculated
 - “NEW ROUTE” - an existing route is being recalculated
 - “NO ROUTE” - system is unable to calculate a route
- 5 Activates the map
- 6 Selects the destination and route information screen, page 176
- 7 Marking a way point, page 193

- 8 Mixture of map and symbol display, page 190
- 9 Activates the symbol display
- 10 Selecting map orientation: North orientation (North-up) or direction of travel at the top (Heading-up), page 192
- 11 Current map scale
- 12 Symbol for the current vehicle location with respect to route
- 13 Destination flag

Route guidance is visual with screen displays and acoustic with voice outputs.

You can select the following screen displays during route guidance:

- Symbol display - always appears after a route has been calculated
- Map display - activate the map with menu field (5), switch back with menu field (9)
- Mix - before the vehicle makes a turn the COMAND switches automatically to the symbol display, and the map is displayed again once the turn has been completed


In the map display, menu fields (6), (7), (9) and (10) are removed after 15 seconds. Turn the rotary/pushbutton  to display the menu field again.

Route guidance


175

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	------------	-----------------------------------	-------

Requesting destination and route information

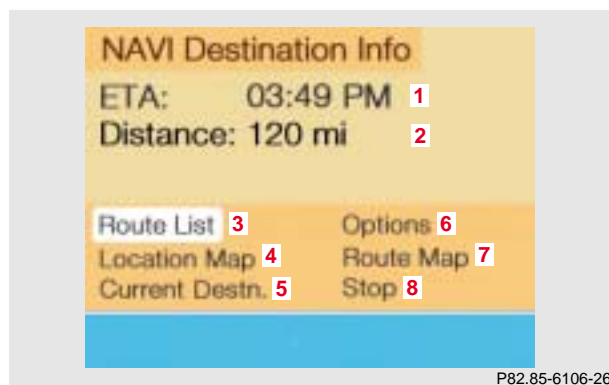

After the route has been calculated, it is possible to request destination and route information.

Use the rotary/pushbutton  to highlight the “Info” menu field in the symbol display or on the map and press to confirm.

1 Estimated time of arrival

2 Distance from destination

Use the rotary/pushbutton  to highlight the menu field and press it to confirm:

3 Displays the route list, page 177

4 Displays the location map, page 179

5 Displays current destination, page 180

6 Requests the route mode, page 181

7 Activates the route map, page 182


8 Displays stop-over, page 183

Route guidance is switched off:



The last destination driven to will appear in line (1).


Displaying the route list



Turn the rotary/pushbutton  to highlight menu field (3) and press to confirm. The following message will appear: "Compiling Route List...".

The route list contains a list of streets which will be travelled or which still lie ahead.

Press  to display long entries in full in a window. Press  again to remove the window from the screen.

Turn the rotary/pushbutton  to move to the next/previous page, move the cursor past the upper/lower scrolling symbol.

Press **BACK** twice to return to the symbol display or the map.

Notes:


The route list is updated during the trip, the display will indicate the streets which remain to be travelled.

If a longer route is calculated to avoid sections of the freeway (page 170), these freeways may still appear on the route list. As the vehicle approaches the freeway, it will be deleted from the list.


Route guidance

178

Activating the route map

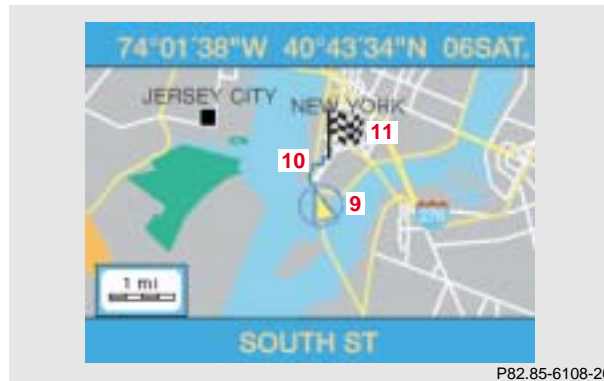

P82.85-6108-26


Turn the rotary/pushbutton  to menu field “Route map” (page 176) and press to confirm. The route map shows the general view for the whole route.


- 9 Current vehicle position
- 10 Route displayed as a blue line
- 11 Destination

The map scale selected depends on the route. The route map faces north.

Press **BACK** twice to return to the symbol display or the map.

Activating the location map

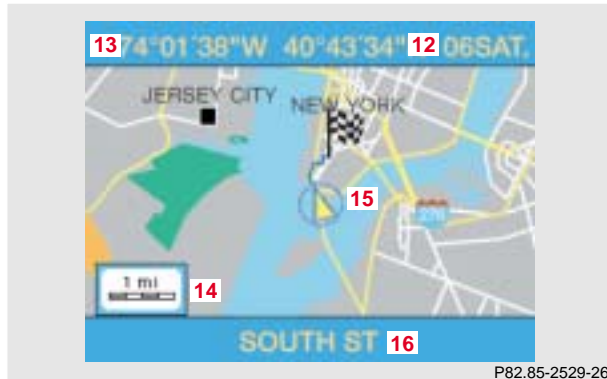

Turn the rotary/pushbutton  to menu field “Location map” (page 176) and press to confirm.

The position map faces north.

- 12 Number of satellites received
- 13 Geographical latitude and longitude for your current position
- 14 Scale of the last activation of the position map, Altering the map scale, page 191
- 15 Current vehicle position in the center of the screen
- 16 Name of the street you are currently travelling on

Press **BACK** twice to return to the symbol display or the map.

Introduction

Audio

Telephone

Navigation

**Info Services and
system settings**


Index


Route guidance

180


Displaying the current destination

Press **BACK** to return to symbol display or the map.

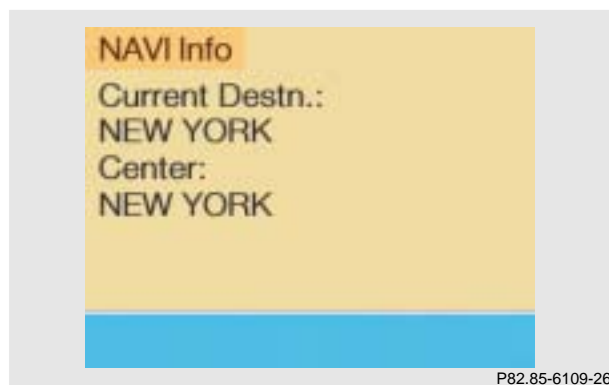

Use the rotary/pushbutton  to highlight the menu field "Current destination" in the menu (page 176) and press it to confirm.

Requesting the route mode

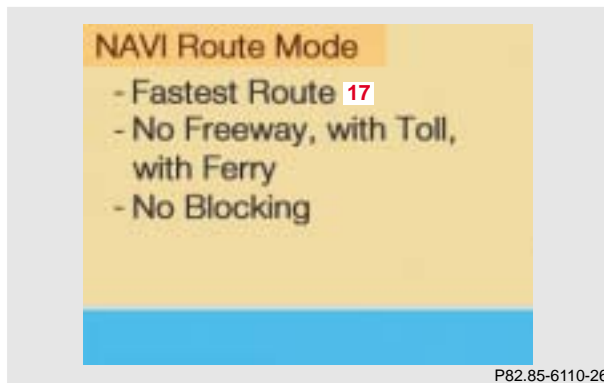

Turn the rotary/pushbutton  to menu field "Options" (page 176) and press to confirm.

17 Indicates settings for the route calculation mode selected for the current route

Selecting the route calculation mode, page 171

Selecting a detour during route guidance, page 196


Marking a way point, page 193


Press **BACK** to return to the symbol display or the map.

The screen will return to this display automatically after 15 seconds.

Route guidance

Activating the route map

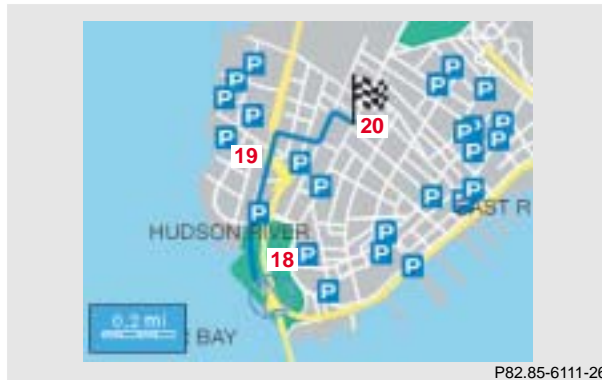

Turn the rotary/pushbutton  to menu field “Route map” (page 176) and press to confirm. The route map shows the general view for the whole route.


182


- 18 Current vehicle position
- 19 Route displayed as a blue line
- 20 Destination

The map scale selected depends on the route. The route map faces north.

Press **BACK** to return to the symbol display or the map.

Displaying a stop-over

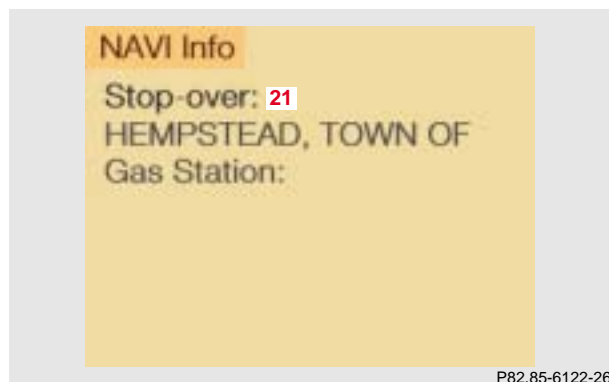


Use the rotary/pushbutton  to highlight the menu field “Stop” in the menu (page 176) and press it to confirm.

- 21 Stop-over
Place, type of stop-over and name

Note:

A stop-over will be displayed if this was previously selected.

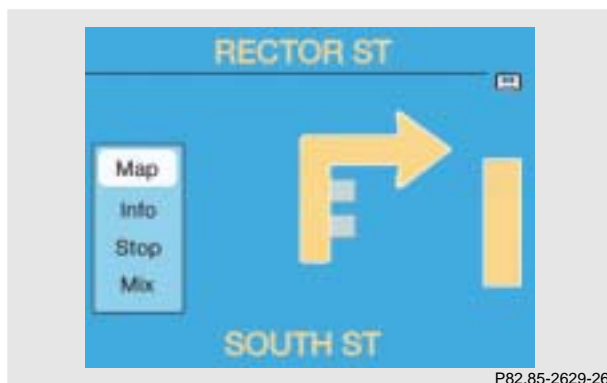Beginning route guidance

After the route has been calculated, the symbol display will appear. If you now are at the turn-off point, you will also hear a voice telling you, e.g. “Please turn right”.

You can select screen display during the journey:

- Symbol display
- Switch between symbol and map display, page 189
- Route guidance with a mixture of map and symbol display, page 190

Voice output during route guidance

During the trip, along with the visual information – symbol or map displays – COMAND also provides all of the necessary spoken route information via voice output.

**Warning!**

Voice output is intended to direct you while driving without diverting your attention from the road and driving. Please always use this feature instead of consulting the screen symbols or map for directions while driving which may cause you to divert your attention from driving which can increase your risk of accident.

Spoken recommendations are given:

- when route guidance begins,
- after the route has been calculated,
- before and during a change in the driving direction,
- when the destination or a way point has been reached.

If an audio source is switched on, e.g. the radio, the voice output is mixed with that of the audio source.

The audio volume differential between Voice output/Audio source can be set individually, page 83. During telephone/Tele Aid operation, navigation voice outputs are muted.

To repeat the current spoken recommendation:

Press **RPT**.

To mute the current spoken recommendation:

Press **MUTE** briefly during a voice output. The next announcement will be heard normally.

Switching the voice output on/off

Press **MUTE** longer than 2 seconds during a voice output.

The following message will appear on the screen: "Voice output is muted."

The voice output will remain muted for the duration of the current route guidance.

Switch the voice output on again:

- Press **RPT**
- Automatically at the end of the current route guidance

Select the language for voice output, see the chapter on Info Services and system settings.

Altering the voice output volume

While you are listening to a spoken recommendation, alter its volume by pressing **VOL+** / **VOL-** on the rocker switch.

This setting will then affect all of following voice outputs.

Note:


During a voice output you can alter the sound level with the steering wheel keys as well:

+ - Increase volume

- - Decrease volume

The minimum sound level depends on the current audio volume.

Turning onto a street

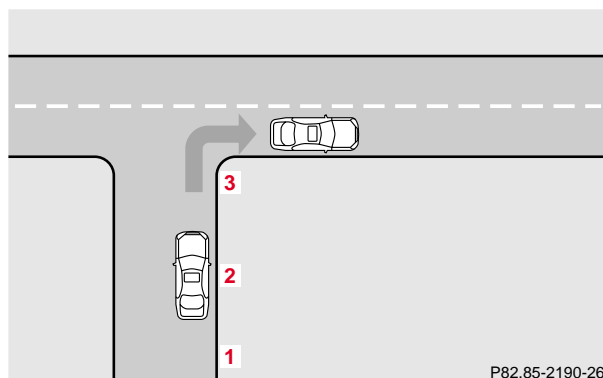


Traffic situation and voice output:

- 1 "Prepare to turn right."
- 2 "Turn right after one quarter mile."
- 3 "Please turn right."

Manual recall of the current voice instruction:

Press **RPT**.

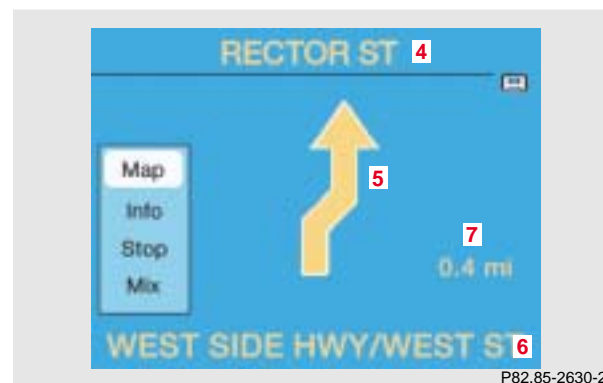


Warning of right turn:

- 4 Name of the street you are to turn onto
- 5 Arrow indicating the driving direction
- 6 Name of the street you are travelling on
- 7 Distance in miles to right turn

Note:


In special situations, e.g. when turning quickly several times in succession or traveling at high speeds, there may be deviations in the accuracy of the voice instructions.

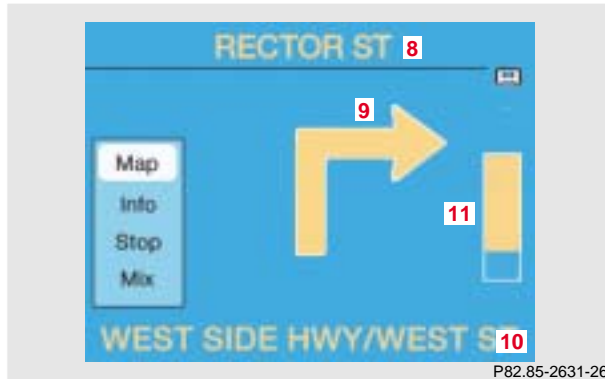

Just before a right turn:


- 8** Name of the street you will turn onto
- 9** Right-turn arrow
- 10** Name of the street you are now driving on
- 11** Distance graph to turning point, is reduced as you approach the intersection

Following the course of the road

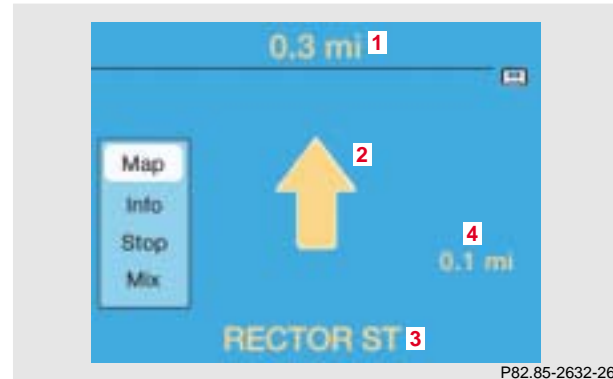

- 1** Distance in miles to destination
- 2** Arrow indicating driving direction
- 3** Name of the street you are currently driving on
- 4** Distance in miles to next turn

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	------------	-----------------------------------	-------

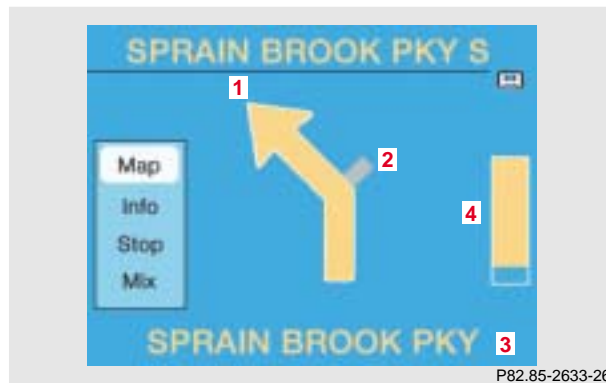Driving through an intersection

- 1 Name of the street onto which the vehicle is to be driven
- 2 Intersection
- 3 Name of the street you are now driving on
- 4 Distance graph to turning point

Before you drive through a intersection you will be informed of the continued route, e.g.

“Prepare to bear left”

“Bear left after one quarter mile”


“Please bear left”.

Notes:


In contrast to actually making a turn onto a street (page 186), the spoken recommendation, e.g. “bear left” will indicate that the course of the road will soon change, or the current road intersects another major road.

In the symbol display the road turn-off (2) indicates the part of the road which is not to be followed.

Changing to map display during route guidance

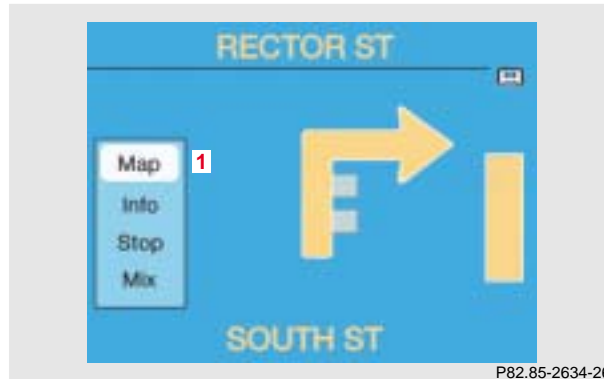

1 Activate map display


Confirm the menu field “Map” by pressing the rotary/pushbutton . The map is activated in last scale you selected.



2 Last scale selected


Altering the map scale, page 164

3 Return to symbol display

When you activate the map, this menu field is highlighted automatically, activate symbol display by pressing the rotary/pushbutton .

4 Actual vehicle location

5 Name of the street you will turn onto

After 6 seconds, the left-hand menu bar will disappear except for the scale. To recall the menu bar to the screen, press the rotary/pushbutton .

Route guidance

189

Introduction

Audio

Telephone

Navigation

Info Services and
system settings

Index


Route guidance with a mixture of map and symbol display



Mix:

Before a turn-off, the symbol display is activated automatically from the map display. After you have made the turn, the map is displayed again.


Switching the mix function on:

Use the rotary/pushbutton  to highlight the menu field "Mix" in the symbol display and confirm by pressing. "Mix" is shown in red.



The symbol display is activated before you have to make the turn e.g. a U-turn. After you have made the U-turn, the display switches back to the map.

Switching the mix function off:

Use the rotary/pushbutton  to highlight the menu field "Mix" in the map or symbol display and confirm by pressing. "Mix" is shown in black.

Altering the map scale



To activate the scale bar (2), select one of the following methods:

- Press **#** or **+***
- Use the rotary/pushbutton **⬅** to highlight the scale menu field (1) and confirm by pressing.

- 1 Current map scale
- 2 Scale bar
- 3 New scale



Increase the map scale (activate a more detailed map):
Press **+*** and turn the rotary/pushbutton **⬅** to the left.

Reduce the map scale (activate a less detailed map):
Press **#** and turn the rotary/pushbutton **➡** to the right.

Note:

A division mark corresponds to an available scale.
There are 12 different scales ranging from 0.1 miles/
inch to 500 miles/inch.



Route guidance

191

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
------------------------------	-----------------------	---------------------------	----------------------------	---	-----------------------


Selecting map orientation



- 1 Select map orientation:
 - North arrow  - The map is displayed facing due north (North-up).
 - Compass needle  (black tip pointing to the north) - The map is displayed facing driving direction pointing up (Heading-up).
- 2 Symbol for the current vehicle position



To select Heading-up:

Use the rotary/pushbutton  to highlight menu field (1) and press to confirm. The symbol (2) points in the driving direction.

To return to North-up:

Use the rotary/pushbutton  to highlight the menu field (1) and press to confirm. The north arrow is displayed again.


Marking a way point



1 Activate Way point menu


During route guidance it is possible to store a way point.

Use the rotary/pushbutton  to highlight button (1) in the symbol display and press to confirm.

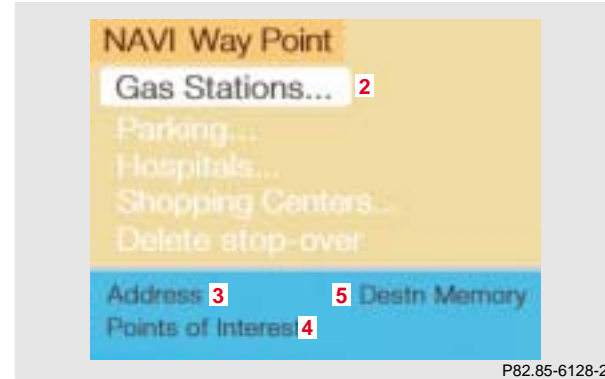

- 2 Select gas station, parking, hospitals or shopping centers from a list.
Not all Way Points may be listed on the CD.
- 3 Activate the Destination entry menu,
Entering destination address, page 153
- 4 Activates the "Point of Interest" menu,
page 165
- 5 Activates the destination memory, page 205

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

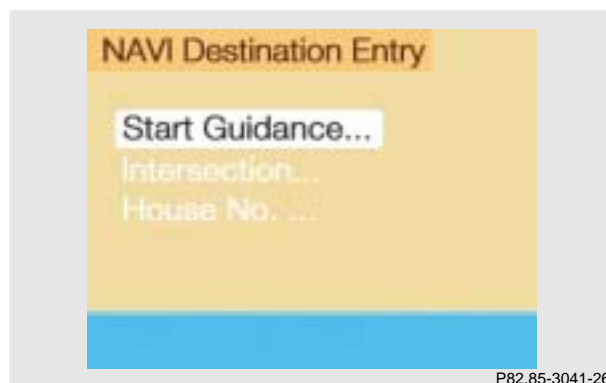


P82.85-3041-26

To begin route guidance:

Press the rotary/pushbutton  to confirm the “Start Guidance ...” menu field.

Note:

After an address has been entered, the “Intersection...” and “House No. ...” menu fields may appear in black, indicating that it is possible to select them.

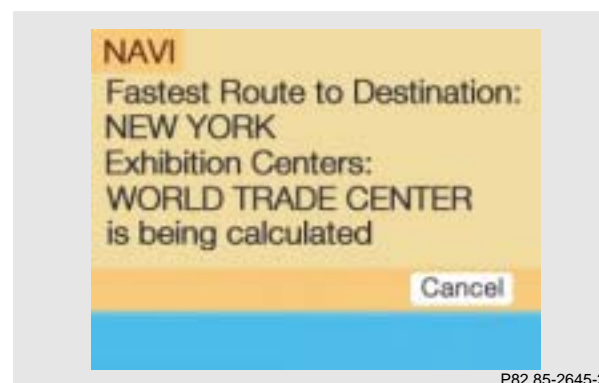

P82.85-2645-26

You will now see information on the screen. Voice output: “The route to your intermediate destination is being calculated”.

Cancel the calculation:

Press the rotary/pushbutton  and confirm the menu field “Cancel”.


Notes:

The previously selected route mode is retained.


After you reach the way point, you will continue to follow the route to the original input destination.

Delete way point



Use the rotary/pushbutton  to highlight the menu field “Stop” in the symbol or map display and confirm by pressing.

Note:

If the menu bar is not visible in the map, turn the rotary/pushbutton  to display it on the screen.

When the menu is activated, the menu field “Delete stop-over” is highlighted.

Press the rotary/pushbutton  to confirm.


To abort cancelling the way point:

Press **BACK** to return to the route guidance.

Note:

It is also possible to delete a way point in the menu (page 200).

Selecting a detour during route guidance

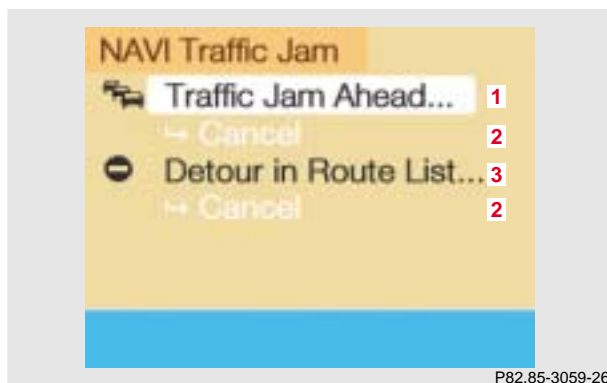


P82.85-3059-26

Press **DETR** while any menu is on the screen during route guidance.

The main detour menu will appear on the screen.

- 1 Route sections ahead can be blocked in order to calculate a detour

Use the rotary/pushbutton  to highlight the menu and confirm by pressing.

- 2 Ends the detour function, the previous route will be calculated

Traffic Jam Ahead/Detour in Route List

not activated:

"Cancel" menu field cannot be selected.

Traffic Jam Ahead/Detour in Route List activated:


"Cancel" menu field is marked.

- 3 Sections of the route can be blocked in the route list, page 198

Note:

Traffic jams are identified by the driver, not by the navigation system.

Traffic jam ahead

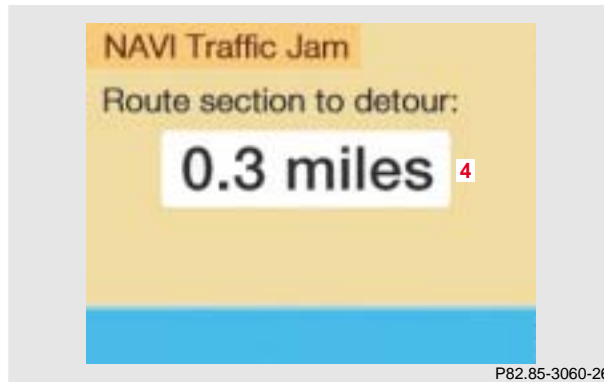



Press the rotary/pushbutton  to confirm the “Traffic Jam Ahead...” menu field highlighted in the main detour menu.


- 4 The window is marked when it appears, indicates the length of the blocked route section in km or m, reasonable sections of road are suggested

Minimum/maximum length of detour is governed by the logical grouping of route sections. If additional detour segments are required after the original detour, they must be requested individually.

Enter the length of the road section you want to block.

Increase the blocked section:
Turn the rotary/pushbutton  to the right.

Decrease the blocked section:
Turn the rotary/pushbutton  to the left.


To calculate the detour:
Press the rotary/pushbutton  to confirm your selection.

The route will be re-calculated. An information menu will appear on the screen.


Then route guidance will continue.

Note:

The “Traffic Jam Ahead...” menu field can also be selected during the course of a detour. The current block to be avoided will then be cancelled.

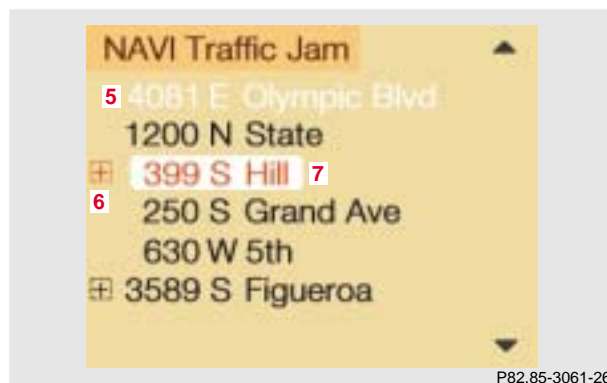Detour in route list

P82.85-3061-26

Turn the rotary/pushbutton  to highlight the “Detour in Route List...” menu field in the main detour menu and press it to confirm.


The following message will appear: “The route list is being calculated”.

Then the route list will appear on the screen.

Activating the detour function:


Press the rotary/pushbutton . The street marked will appear in red.

- 5 Street cannot be blocked off
- 6 “+” symbol – Street contains several sections which can be blocked off

Press  to access the detailed route list, page 199

- 7 Blocked street will appear in red

Press  to display longer entries in a window in full.


Press  to remove the window from the screen.



The detailed route list will appear on the screen:

8 “-” symbol – Street sections for one street are on display


To block off several streets/street sections:

Turn the rotary/pushbutton  to the right. With each turn the following street name will appear in red.

To cancel the blocks:

Turn the rotary/pushbutton to the left. The street name will return to black lettering.

To return to the route list:


Press  – the “+” symbol appears in front of the street name.

The blocking function is still active.

Cancelling the blocks, do not re-calculate the route:

Press **BACK**. The detour menu will appear on the screen.

Ending the blocking function, recalculate the route with the blocks selected:

Press the rotary/pushbutton .

The route will be recalculated using the previously selected route calculation mode. A corresponding message will appear on the screen.

The symbol display will now appear on the screen and route guidance will continue.

Resetting functions during route guidance



Press **BACK** during route guidance.

Use the rotary/pushbutton **OK** to highlight the desired menu field and press it to confirm.

- 1 Delete a way point
- 2 Cancels a detour (traffic jam ahead)
Selecting a detour during route guidance, page 196

- 3 Cancels a detour (road sections blocked in the route list), page 198
- 4 Resets all functions

The route will be recalculated using the previously selected calculation mode. The corresponding information will appear on the screen.

Then the symbol display will appear and route guidance will continue.

Note:

Menu fields (2) and (3) are not available if no detour has been selected.

Deviating from the calculated route



P82.85-2647-26

If you deviate from a recommended route, the system automatically calculates a new route from the current vehicle location to the requested destination.

If applicable, the message: “NEW ROUTE” will appear on the screen along with an arrow outline indicating the driving direction.

After the new calculation has been completed, route guidance will continue. The arrow indicating the driving direction will appear as usual.

Reaching your destination



P82.85-2648-26

When you reach the destination you will see the destination flag in the display.

You will hear the voice output “You have reached your destination”.

The main destination input menu is then activated and you can now enter another destination.

Note:

When you approach and arrive at way points, you will hear acoustic notices and this will also be shown in the display.

Route guidance

201

[Introduction](#)


[Audio](#)

[Telephone](#)

[Navigation](#)

[Info Services and
system settings](#)

[Index](#)

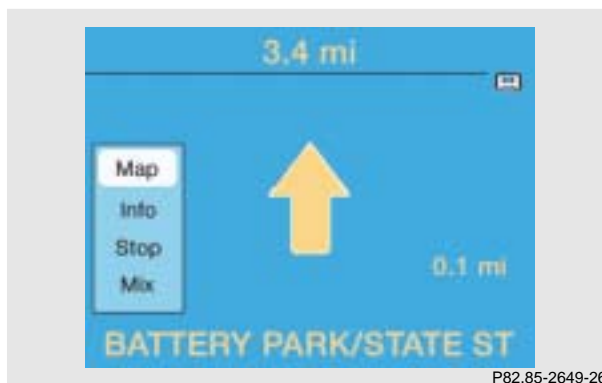Activating audio system

P82.85-2649-26

During route guidance (the symbol or map display is shown), it is possible to select another COMAND system by pressing the corresponding buttons.

The corresponding main menu will appear and e.g. audio playback will be started. Route guidance and the navigation's voice output remain active.

The voice output is added to the audio playback. The volume levels for voice output and audio playback can be adjusted individually, page 83.



P82.85-2650-26


Press e.g. **RADIO**.

The main radio menu will appear, the system will tune into the station played last.

Selecting a station, page 24.

Press **NAVI** to return to the Navigation system.

Activating audio functions during route guidance

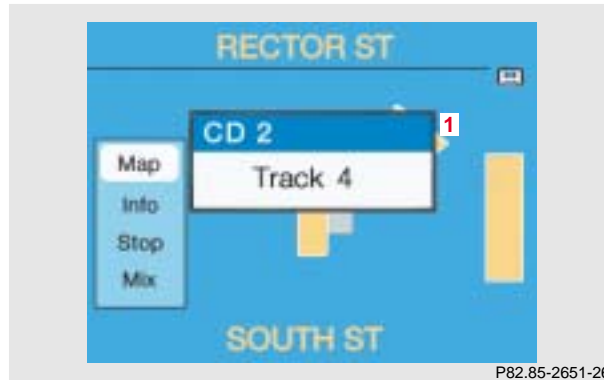

While the symbol or map display is active, it is possible to operate an audio source in the background under limited conditions without having to activate the corresponding system.

- 1 The window is shown in the symbol or map display with the active audio source indicated

The window is removed:

- Automatically after 3 seconds
- Press **BACK**.

The radio is on

- Select the memorized station from the respective memory (FM, AM or WB) with the number keys **1** through **9**
- Press the rocker switch **◀** / **▶** once: Station seek is performed
- Hold the rocker switch **◀** / **▶** longer than 2 seconds: a manual search is started in the direction you selected (frequency ranges FM, AM or WB)

The tape is on:

- Press the rocker switch **◀** / **▶** once: Skip backwards/forwards
- Hold the rocker switch **◀** / **▶** longer than 2 seconds: Rewind/fast forward


The CD is on:


- Select CD with numbers key **1** through **6**
- Press the rocker switch **◀** / **▶** briefly: Select previous/next track
- Hold the rocker switch **◀** / **▶** longer than 2 seconds: Skip backwards/forwards

Cancelling route guidance




If you want to cancel route guidance press **NAVI** while the map or the symbol is being displayed.

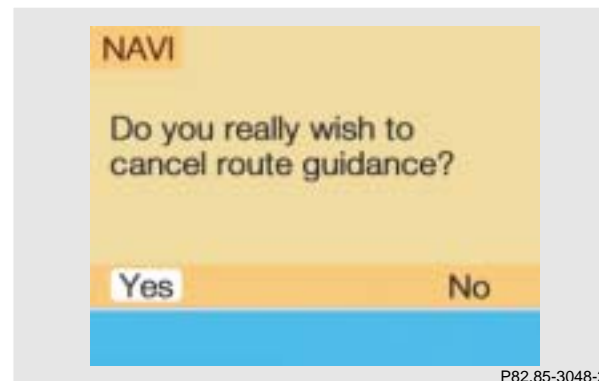

Press the rotary/pushbutton  if you want to cancel route guidance.

The main destination input menu will appear.


Continue route guidance:

Press **BACK** or turn the rotary/pushbutton  to highlight the menu field "No" and press to confirm.

The map or the symbol display will be reactivated.


Activating the main destination memory menu




Use the rotary/pushbutton  to highlight the “Destn Memory” menu field in the main destination input menu and press to confirm.



- 1 Info/status line
- 2 Activates the destination list, page 205
- 3 Sorting the destinations, page 210
- 4 Deleting a destination in the destination memory, page 211
- 5 Deleting the last destination
- 6 Saving the current destination, page 207
- 7 Saving the current vehicle location with a name, page 209

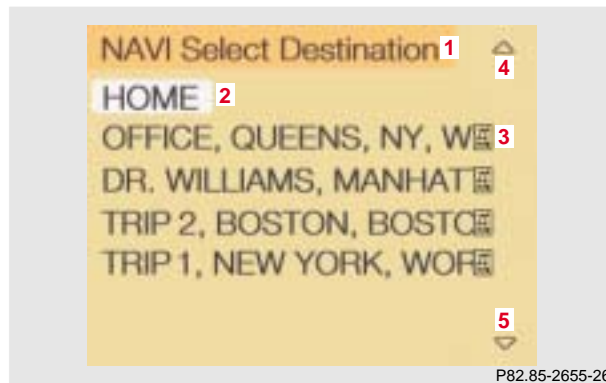
Destination memory

Retrieving a destination from the destination
memory

Turn the rotary/pushbutton  to highlight the “Display Destinations...” menu field and press to confirm.


206


- 1 Info/status line
- 2 Highlighted entry
- 3 Press the  key - a long entry will display in full in a window, press  again to remove the window
- 4 Previous page
An empty triangle marks the start of the list
- 5 Next page
An empty triangle marks the end of the list

Use the rotary/pushbutton  to highlight the desired entry and press to confirm.

Select the route calculation mode and calculate the route, page 171.


Saving the current destination in the destination memory

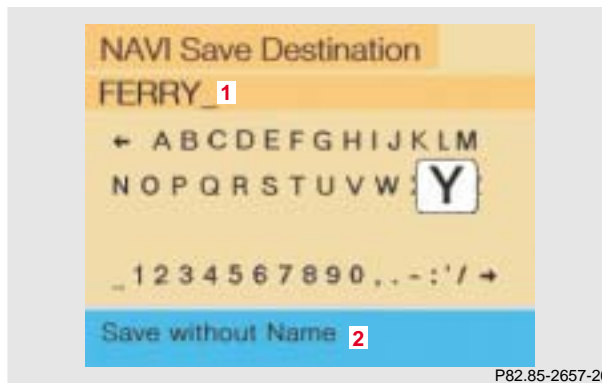

Use the rotary/pushbutton  to highlight the “Save current Destination...” menu field in the main destination memory menu and press to confirm.


- 1 Name entered
- 2 Saves the destination without entering a name

Save the destination with a name:

Turn the rotary/pushbutton  to highlight the desired letter in the alphabet and press to confirm, the letter selected will appear in the input line. Enter the other letters.


Hold the rotary/pushbutton  longer than 2 seconds to confirm the name entered. This will activate the destination memory.

Note:


If the destination memory is full, a corresponding message will appear. Press the rotary/pushbutton . This will activate the destination memory.



Deleting a destination in the destination memory, page 211.

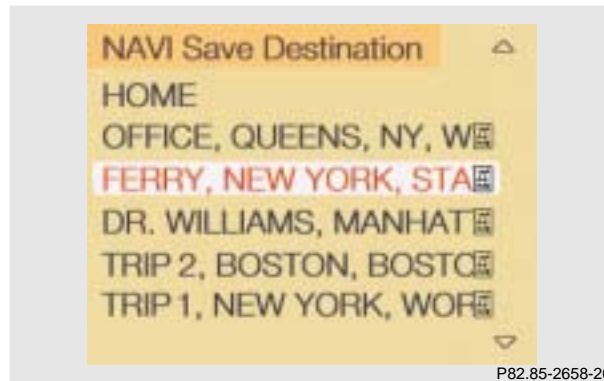
Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------



Save the destination without entering a name:

Turn the rotary/pushbutton  to highlight the “Save without Names” menu field and press to confirm.

In the user sorted list, the newly input location is highlighted and in red. Using the rotary/pushbutton , the entry can be located anywhere in the list. Use the rotary/pushbutton  to move the entry to the desired point in the list and then confirm by pressing. Entry will change from red to black.

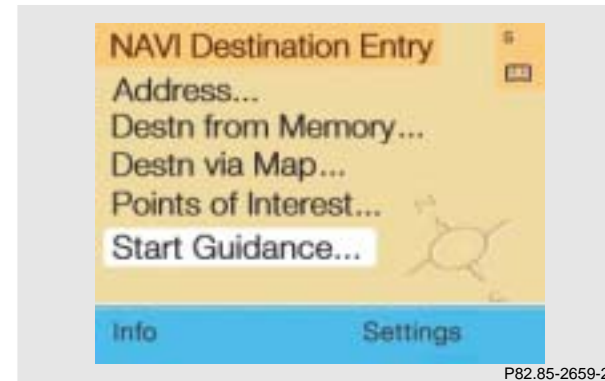


The main destination input menu is activated, the menu field “Start Guidance...” is highlighted.

Note:

The destination can also be saved directly after it is entered during the selection of the route.

Saving the current vehicle location in the destination memory

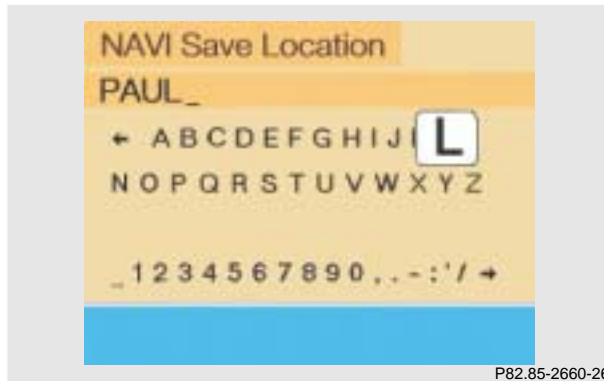

Using this function it is possible to save the current vehicle position in the memory. You will have to name it to be able to retrieve it at a later date.

Turn the rotary/pushbutton to highlight the “Save Current Location...” menu field in the main destination memory menu and press to confirm.

An input menu will appear.

Save the destination with a name, page 207.

Press the rotary/pushbutton longer than 2 seconds to store the destination.


In the user sorted list, the newly input location is highlighted and in red. Using the rotary/pushbutton, the entry can be located anywhere in the list. Use the rotary/pushbutton to move the entry to the desired point in the list and then confirm by pressing. Entry will change from red to black.

Press the rotary/pushbutton to confirm.

The main destination input menu is activated.


Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------


Sorting the destination memory

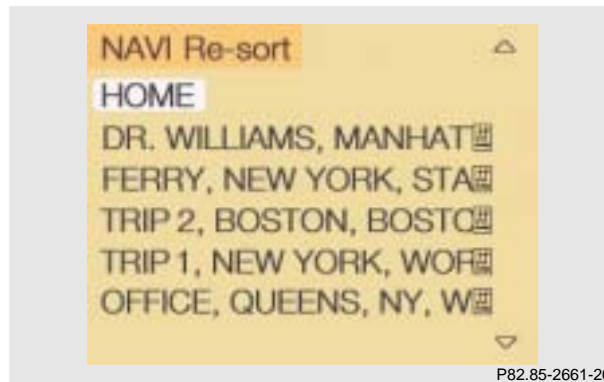

Activate the destination list:

Turn the rotary/pushbutton  to highlight the "Sort Destinations..." menu field and press to confirm.

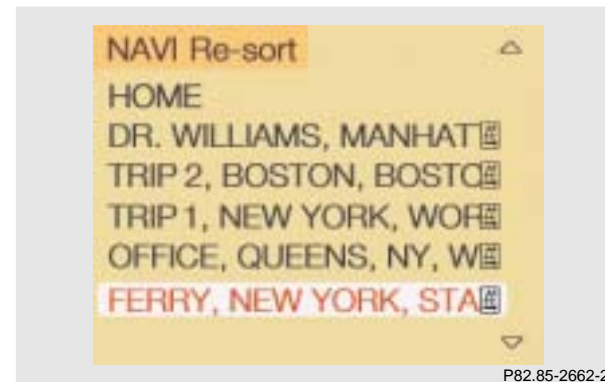


Use the rotary/pushbutton  to highlight the desired entry and press to confirm.

The entry is now shown in red.

Use the rotary/pushbutton  to move the entry to the desired position.


Press the rotary/pushbutton  to save the entry at that location. The entry is shown in black, the main destination memory menu for saving destinations is reactivated automatically.

Deleting a destination in the destination memory

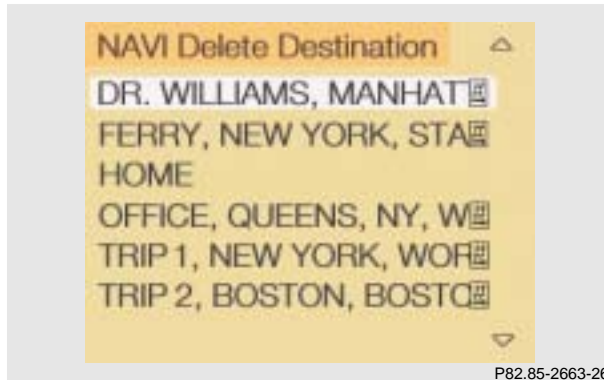

Use the rotary/pushbutton **⬇** to highlight the “Delete Destination...” menu field in the main destination memory menu and press to confirm.

The first entry is highlighted.

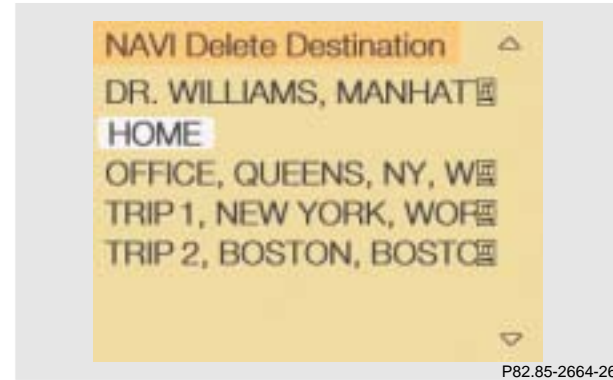

Use the rotary/pushbutton **⬇** to highlight the desired entry and press to confirm.

The entry will be deleted from the list, any subsequent entries move up one position.


The delete function is still active.


If you do not wish to delete any more entries, press **BACK**. The main destination input menu will then reappear on the screen.

Entering the vehicle position


It is only necessary to enter the vehicle position when the system is not able to position itself automatically with the GPS.


It is only possible to enter the vehicle position in connection with a crossroad.

Use the rotary/pushbutton  to highlight the menu field “Settings” in the main destination input menu and confirm by pressing.

In the “Settings” menu (page 213) use the rotary/pushbutton  to select the menu field “Location...”. This activates the menu for entering the location.


Now enter the city/suburb and street in the menu and select the required entries from the respective lists. See page 153 for how to enter a destination address.


After you have selected the street, you will see a prompt for the intersection. Highlight the appropriate cross street with the rotary/pushbutton  and confirm by pressing.

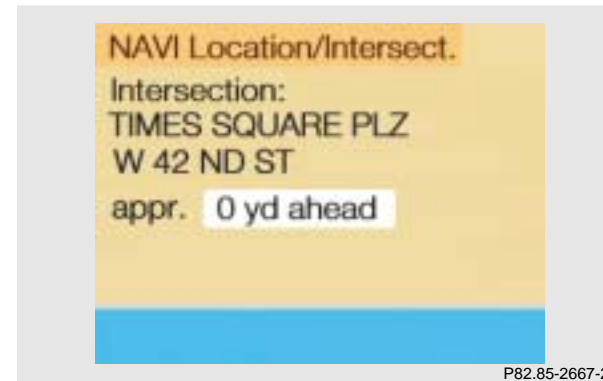


P82.85-2667-26


Set the vehicle's current position in the following menu.

Actual position is in front of a junction:
Turn the rotary/pushbutton  to the right.


Actual position is behind a junction:
Turn the rotary/pushbutton  to the left.


Press the rotary/pushbutton  to accept selected position. The message “Chosen location accepted” will be displayed and will automatically disappear in 3 seconds.

Calibration

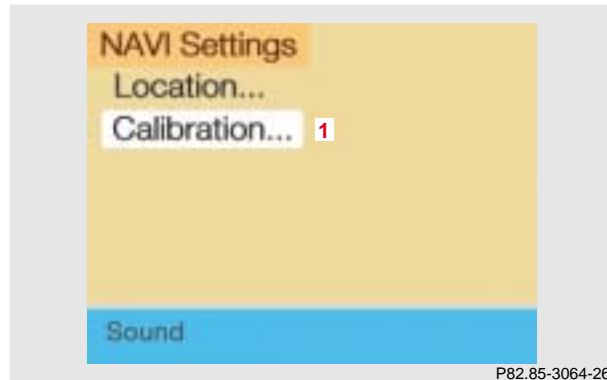



In order to ensure an exact fix on position, COMAND must be calibrated to new tires every time tires are changed.


Highlight the menu field “Settings” in the main destination input menu with the rotary/pushbutton  and confirm. A menu of options will appear.

Highlight the menu field “Calibration” with the rotary/pushbutton  and confirm by pressing:

- 1 Activates the entry menu “Calibration”

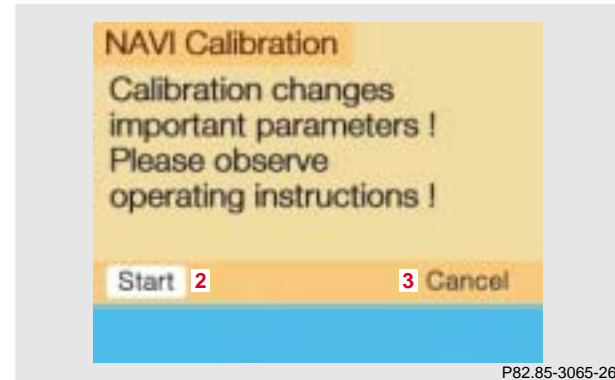

Highlight the desired menu field with the rotary/pushbutton  and confirm by pressing:

- 2 Enter the tread depth and the tire type, page 214 press the rotary/pushbutton  to start
- 3 Return to the main destination input menu




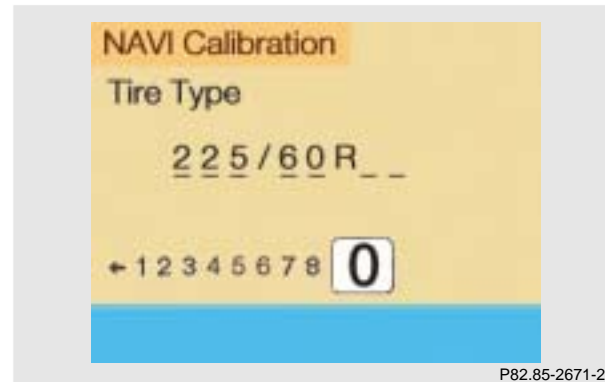
P82.85-3066-26

Enter the tread depth in the options menu.

For change of front tires:


- 4 tread depth \geq 4mm (3/16 in.)
- 5 tread depth $<$ 4mm (3/16 in.)


Highlight the proper menu field with the rotary/pushbutton  and confirm by pressing.



P82.85-2671-26

Enter the new tire type in the following menu.


Enter the appropriate digits one by one into the entry line. Mark by turning the rotary/pushbutton  and confirm your choice by pressing.

Confirm entry by keeping the rotary/pushbutton  depressed for 2 seconds. The main destination input menu will appear.

Info Services and system settings

Info Services	216
Requesting and displaying Info Services	216
System settings	219
Activating the main system settings menu	219
Adjusting the brightness	220
Activating Settings menu	221
Selecting the language	222
Set the date and time	223
Switching beep tones on and off	230
Setting changeover between day and night display	231
Reset all settings to the factory settings	232
Auxiliary audio source	233

Requesting and displaying Info Services

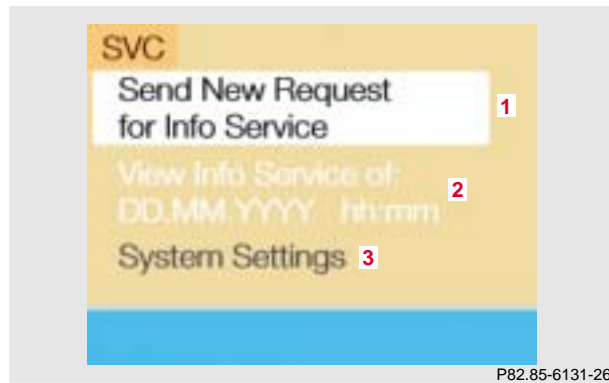


Press **SVC** in any menu.
The main service menu will appear.

- 1 New information service is requested from provider, page 217

Note:

The characters are displayed in light grey during active request transmission.

- 2 Shows date and time of the message, a list (page one) of all received messages will appear, move to the next message by pressing the rotary/pushbutton 

Info Services categories include news, weather, stocks, sports and reminders. Choices can be selected via www.MBUSA.com or by calling 1-800-FOR-MERCEdes.


Note:

If no information is available, the characters are displayed in light grey.

- 3 The main system settings menu will appear, page 219

Note:

Before you can use Info Services, TeleAid must be activated at the Response center and Info Services selected.

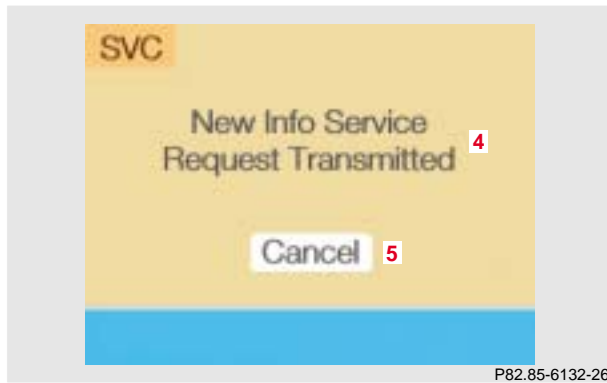

4 This message appears, a beep tone will be heard if there is a new incoming message

There are three ways to switch to a main menu (e.g. radio main menu) before the **SVC** key was pressed:

- Press the rotary/pushbutton ●
- Press **BACK**
- automatically after 15 seconds.


5 Cancels the request

Note on (4):

In the following situations it is not possible to make a request and the following messages appear:

- “Data Connection Cannot be Established” – request has failed because Response Center cannot be accessed
- “No Cellular Connection Available” – vehicle may be in a cellular weak signal area
- “Cellular System Busy” – request has failed because cellular system is busy, try again later
- “Data transmission failure” – request has failed because a data transfer error has occurred, try again
- “Tele Aid Call in Progress!” – request has failed because SOS or Roadside call is in progress.
- “Tele Aid. Please visit workshop” - a hardware error has been detected. Contact M-B Center.
- “To subscribe to information services dial phone number” – you have not yet subscribed to service
- “No information available at this time. Press SVC button later” – no new information is available

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
--------------	-------	-----------	------------	--	-------

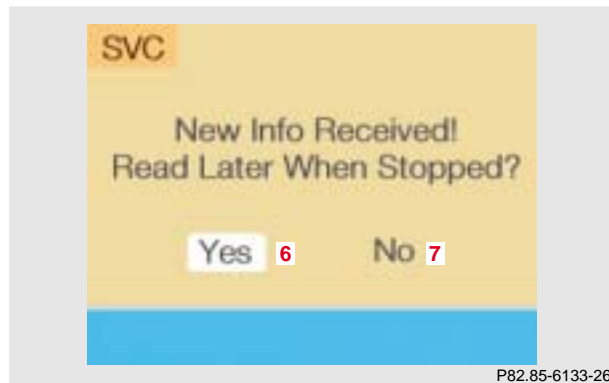

- 7 Switches back to the main menu (e.g. radio main menu)

- 6 Displays the new message


There is more than one message:

Move to the next message by pressing the rotary/pushbutton .

To activate the main service menu, page 216:

Press **BACK**.

Activating the main system settings menu

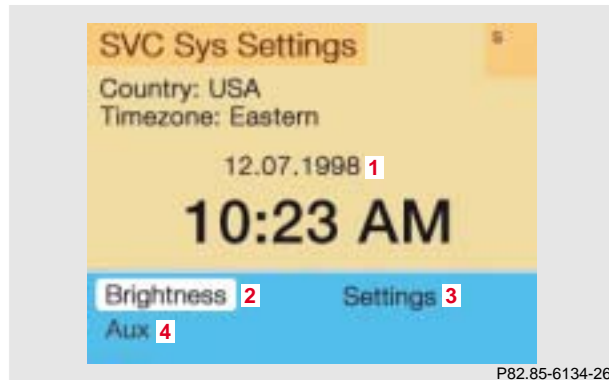

Press **SVC** in any menu.
The main system settings menu is loaded.

- 1 Information on the date, time
Format depends on the time format selected,
to select the time format, page 229
- 2 Adjusting the brightness, page 220
- 3 Accessing the settings menu, page 221
- 4 Switching on an external audio source, e.g. a tape
deck, page 233

- 5 Country setting,
the time zone can also be displayed


Note on (5):


Information is shown if the clock has been set to GPS reception and if a country, e.g. USA, Canada and time zone was selected, page 226.

Setting the clock with GPS reception, page 224.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------


Adjusting the brightness

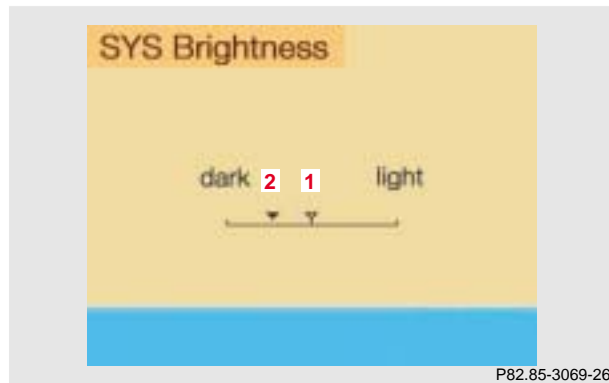


Use the rotary/pushbutton  to highlight the “Brightness” menu field and press to confirm. The Brightness menu will appear.

- 1 Previous setting
- 2 Current setting


To darken the screen:

Turn the rotary/pushbutton  to the left, the triangle (2) moves to the left.


To brighten the screen:

Turn the rotary/pushbutton  to the right, the triangle (2) moves to the right.


To confirm the new setting:

Press the rotary/pushbutton .
The main system settings menu will now appear.


Activating Settings menu

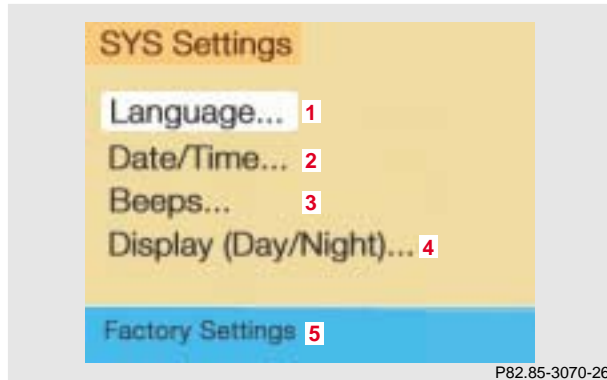


- 1 Selects the language, page 222
- 2 Sets the date and time, page 223
- 3 Switches the beep tones on and off, page 230
- 4 Setting changeover between day and night display, page 231
- 5 Activates factory settings, page 232

Use the rotary/pushbutton  to highlight the “Settings” menu field in the main system settings menu and press to confirm.

The settings menu will appear.

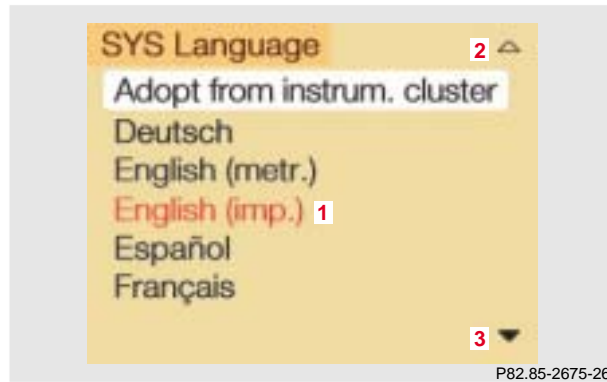Selecting the language

Press the rotary/pushbutton  to confirm the highlighted “Language...” menu field in the settings menu.

The languages list will appear.

- 1** Current language setting appears in red
- 2** Page back, if the arrow is filled in
- 3** Page forward for more languages

Use the rotary/pushbutton  to highlight the desired language and press to confirm.

The message “Loading the xx language” will be displayed.

The language selected will be loaded.

You will hear the corresponding voice output.

Note:

The language affects the menu text displays and the voice output during route guidance.

After the language has been loaded, the main system settings menu will appear with the display text in the language selected.

List of languages:

- “Adopt from Instrument Cluster” – the system will use the same language as is set in instrument cluster
- “Deutsch”
- “English (metric)” – distance measured in km, speed in km/h
- “English (imperial)” – distance measured in yards, miles, speed in mph
- “Español“
- “Français“
- “Italiano“
- “Nederlands“

Set the date and time

COMAND is equipped with an integrated clock. Press **SVC** to display the current time. The clock is used e.g. for indicating the estimated time of arrival at the destination, page 176.

There are several ways to set the time:


- With GPS reception, page 224
Set the time in 30 minute steps, page 225
Set the time by selecting a country and the time zone, page 226
- Without GPS reception, page 224
Set the date and time manually, page 228


Note:

The clock must always be reset if the COMAND system was disconnected or if the vehicle battery was discharged.

Introduction	Audio	Telephone	Navigation	Info Services and system settings	Index
---------------------	--------------	------------------	-------------------	--	--------------

With GPS reception

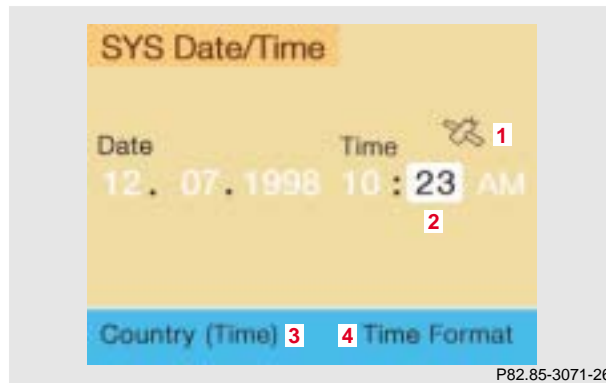

Use the rotary/pushbutton  to highlight the “Date/Time ...” menu field in the “Settings” menu (page 221) and press to confirm.

- 1 GPS symbol indicates GPS time reception
- 2 Setting the clock to a 30 minute increments, Activating the setting mode, page 225
- 3 Selecting the country and time zone, page 226
- 4 Selecting the time format, page 229

Without GPS reception




- 5 Setting the date and time manually, page 228


Note:

If GPS time is not available, the GPS symbol (1) will not appear in the display.


GPS reception: setting the time in 30 minute increments

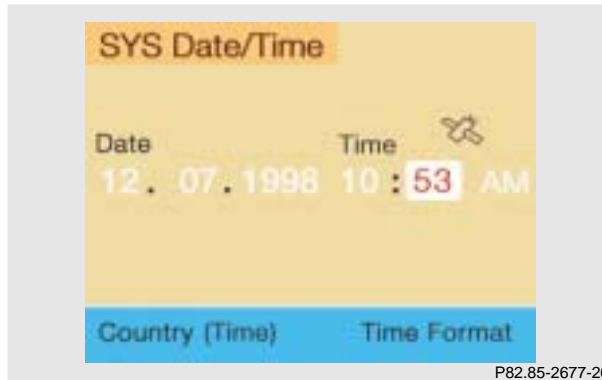


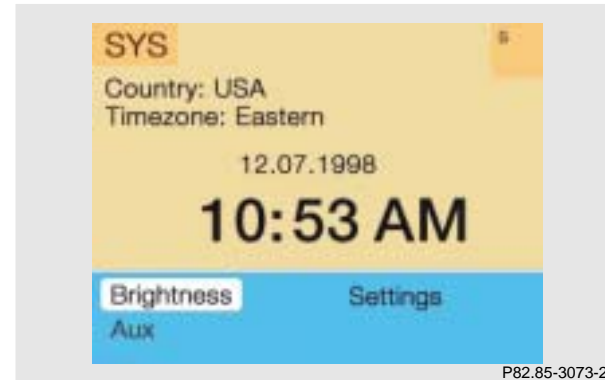
Activating the setting mode:

Press the rotary/pushbutton . The minutes will appear in red lettering.


Altering the time to a 30 minute increments:

Setting the clock ahead - Turn the rotary/pushbutton  to the right, the time will move back 30 minutes with each click.


Setting the clock back - Turn the rotary/pushbutton  to the left, the time will move back 30 minutes with each click.



Canceling the setting mode:


Press the rotary/pushbutton . The minutes will appear in black lettering.


To activate the main System settings menu, either:

- Press **BACK**
- Press the rotary/pushbutton  longer than 2 seconds.


 

The new time will appear in the display.

Selecting the country and the time zone

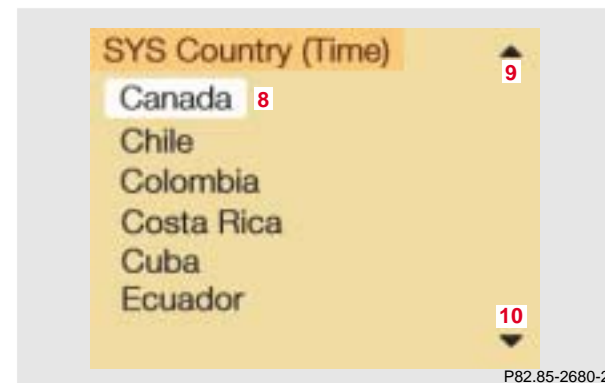

Use the rotary/pushbutton  to highlight the “Country (Time)” menu field in the “Date/Time” menu and press it to confirm.

An input menu will appear.


- 6 Use the rotary/pushbutton  to highlight the initial letters for the country name one after the other and press to confirm
- 7 To access country list, use the rotary/pushbutton  to highlight this menu field and press to confirm or press the rotary/pushbutton  until the zoom disappears.

8 Highlighted country, entered previously

9 Move to previous page,
Arrow is empty – start of list

10 Move to next page,,
Arrow is empty – end of list


Use the rotary/pushbutton  to highlight the desired country and press to confirm.

To move to the next/previous page, highlight the ▼ or ▲ symbol with the rotary/pushbutton  and confirm by pressing.




P82.85-2686-26


For countries with several time zones (e.g. Canada, USA):

After you have confirmed the country, the “Timezone” menu is activated. Highlight the zone you want with the rotary/pushbutton  and confirm by pressing.




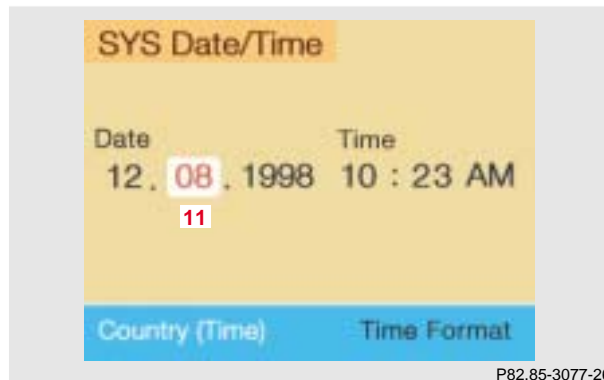
P82.85-3076-26

In the next menu, press the rotary/pushbutton  to set the menu field “Automatic S/W time”.


“Automatic S/W time” menu field - there is change of time in this country/timezone and the dates of time changes are known. Checkmark  indicates that automatic time change is active.

“Summer time” menu field - the dates of time changes are unknown, the change to the winter time must be made manually, page 228.

Press the rotary/pushbutton  longer than 2 seconds. The settings are adopted, and the main system menu is displayed.


Set the date and time manually


If the clock has been disconnected from the vehicle battery for any reason or if the dates of the change between summer and winter time are not available in advance, it will be necessary to set the clock manually.


Use the rotary/pushbutton  to highlight the “Date/Time ...” menu field in the “Settings” menu (page 221) and press to confirm.

- 11** Setting the day, month, year, hours, minutes, when the menu appears on the screen, the day is highlighted automatically.


Activate the setting mode:

Press the rotary/pushbutton . The day is shown in red.

Move the day forwards – turn the rotary/pushbutton  to the right.

Move the day back – turn the rotary/pushbutton  to the left.

Exiting from the setting mode:

Press the rotary/pushbutton . The day is shown in black, the cursor moves to the month indicating.


Adopting a date and time:


Press the rotary/pushbutton  longer than 2 seconds. The main System settings menu will appear.

Note:

If an entry is not accepted, the message “Invalid input” will appear.

Selecting the time format

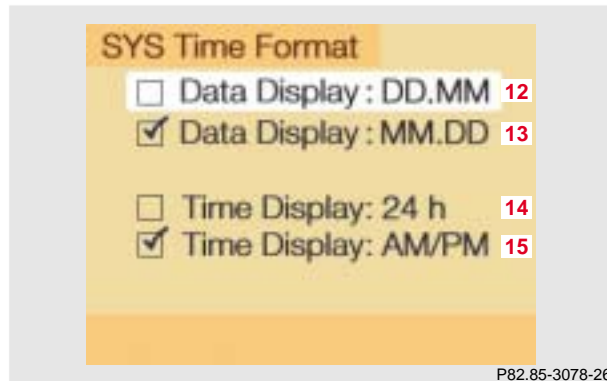

In the “Date/Time” menu use the rotary/pushbutton  to highlight the “Time Format” menu field and press to confirm.

The time format menu will appear.


- Setting is active
- Setting is not active

- 12 Date displayed in day, month format
- 13 Date displayed in month, day format
- 14 Time displayed in 24 hour format
- 15 Time displayed in 12 hour format (AM and PM), in the main menu for system settings and in the “Date/Time” menu the abbreviations AM or PM are shown after the time.


To alter the setting:


Use the rotary/pushbutton  to highlight an entry and press to confirm (a checkmark will appear).

You can confirm your selection in one of the following ways:

- Hold the rotary/pushbutton  longer than 2 seconds – this activates the main menu for system settings
- Press **BACK** – this activates the “Date/Time” menu.

Switching beep tones on and off

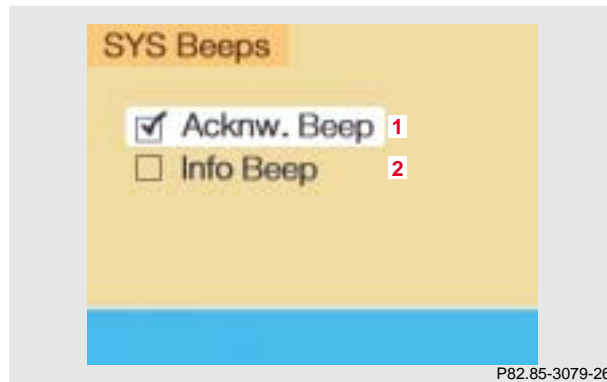

Use the rotary/pushbutton  to highlight the “Beeps...” menu field in the settings menu and press to confirm.

The beeps menu will appear.


- Tone is switched on
- Tone is switched off

- 1 Acknowledgement beep – acknowledges a function or the selection of an entry
Factory setting is off.
- 2 Info beep – is heard where information is provided to the user, e.g. navigation turn is approaching.


To alter the setting:


Turn the rotary/pushbutton  to highlight the desired beep and press to confirm. The beep selected will be switched off or on accordingly.

You can confirm your selection in one of the following ways:

- Hold the rotary/pushbutton  longer than 2 seconds - this activates the main menu for system settings
- Press **BACK** - this activates the “Date/Time” menu.

Setting changeover between day and night display

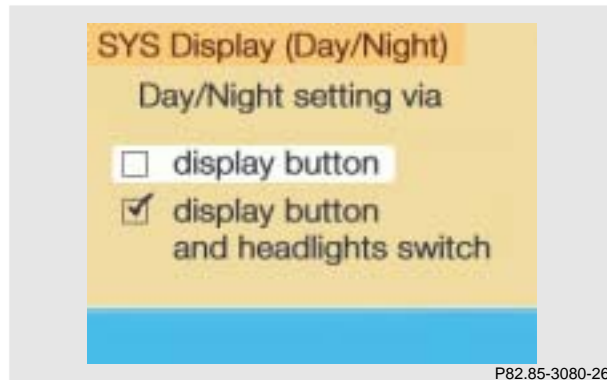



In the settings menu (page 221) highlight the menu field “Display (Day/Night)” with the rotary pushbutton  and confirm by pressing. The menu “Display (Day/Night)” will appear.



- Setting active
- Setting not active


Note:


The setting (2) is active when calling up for the first time. A change is stored and becomes active when COMAND is switched on again.


- 1 Changeover of the day/night display by pressing 
- 2 Changeover of the day/night display by pressing  and headlights switch

Note:

You can change over between day display, night display and screen switched off by repeatedly pressing . Press  again to switch on the screen.


If the setting (2) is selected the night display is automatically switched on together with the headlights. It is possible to change over to the day display by pressing .

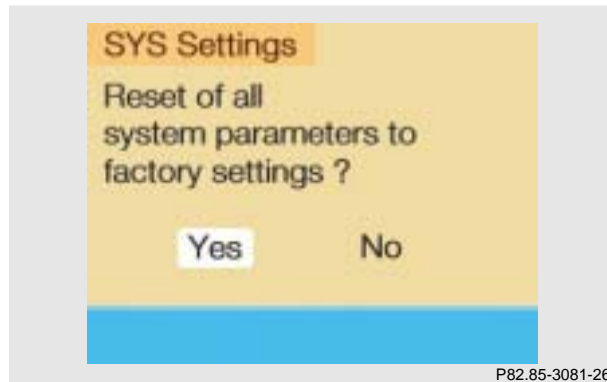Reset all settings to the factory settings

Use the rotary/pushbutton  to highlight the “Factory settings” menu field in the settings menu and press to confirm.

An inquiry menu will appear.


To accept the factory settings:

Press the rotary/pushbutton  confirm the “Yes” menu field). A screen with the factory settings is shown for a few seconds. The main menu for system settings is reactivated.

The factory settings are:

- Acknowledgement beep - off
- Info beep - off
- Language - English (imp.)
- Time display - AM/PM
- Date display - MM.DD (MM - month, DD - day)

If you do not wish to reset settings:

Use the rotary/pushbutton  to highlight “No” and press to confirm. This activates the main menu for system settings.

Auxiliary audio source

Connecting an auxiliary audio source

We recommend that any auxiliary audio unit be installed and connected by a Mercedes-Benz Center.

The auxiliary audio source (e.g. CD changer) will be installed in the glove compartment of your vehicle and connected to the socket available for this purpose. You will require a separate connecting cable for this.


Refer to the separate operating instructions for information on how to operate the auxiliary audio source (e.g. CD changer).


Notes:

Traffic radio announcements and voice output during route guidance can also be heard while the auxiliary audio source is switched on.

The telephone can be used while the auxiliary audio source is in operation.

Switching on auxiliary audio source on/off

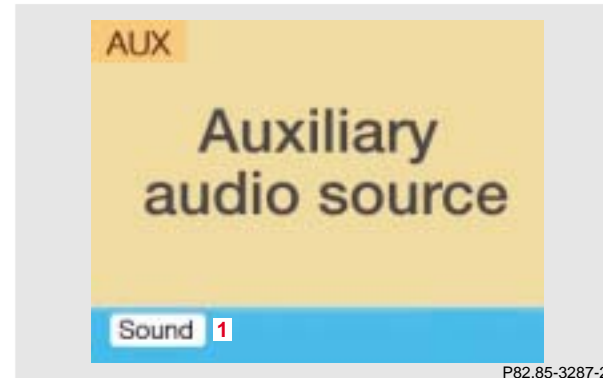

Turn the rotary/pushbutton  to highlight the “Aux” menu field in the main System settings menu and press to confirm.

1 Adjusting sound settings, page 83

Note:


The values selected for the auxiliary audio source sound are independent of those selected for the COMAND audio sources.

 
System settings

234

When this menu is activated, the auxiliary audio source, e.g. a tape deck, will switch on if it has been connected to the COMAND system.

To mute the external audio source:

Press **MUTE**. The symbol  will appear in the symbol bar.

To cancel mute function, press **MUTE** again. The symbol  will disappear from the symbol bar.

To switch off the external audio source:

Press e.g. **RADIO**. The COMAND audio source selected will switch on.

Adjusting the volume level of an auxiliary audio source.

- Adjust volume of vehicle radio to a comfortable listening level.
- Connect adapter cable to portable tape deck and to vehicle (socket in glove box).
- Press “SVC” button on COMAND unit.
- Select “AUX:” setting on COMAND unit.
- Press play on portable tape deck.
- Adjust the volume on the portable tape deck so that the audio system output is at or near the same comfortable level previously set in radio mode.
- Volume can now be adjusted using either COMAND or volume controls on multifunction steering wheel.

Note:

Only the volume setting of the tape player can be controlled using the COMAND system.

A

Accepting a call (using the multifunction steering wheel).....	102
Accepting calls using COMAND.....	103
Activating the location map.....	179
Activating the route map.....	178
Acknowledgement beep.....	15
Adjusting the brightness.....	220
Adjusting the volume.....	14
Alarm beep.....	14
Altering the map scale.....	164, 191
Altering the voice output volume.....	185
AM (Ante Meridiem).....	229
Audio sources.....	83
Automatic Station Scan.....	28
Auxiliary audio source, Switching on/off.....	233

B

Beep tones, Switching on/off.....	230
BOSE amplifier.....	83

C

Calibration.....	213
Canceling route guidance.....	204
CDs scan.....	76
CD track scan.....	70
Changing to map display during route guidance.....	189
City list.....	155
COMAND (Cockpit Management and Data System).....	2
Compass needle.....	192
Cross hairs.....	162
Current map scale.....	164, 178
Current vehicle position.....	179, 182

D

Date and Time, Setting.....	223
Day/Night display.....	231
Delete CD name.....	73
Destination address, Entering.....	153
Destination memory, Sorting.....	220
Destination, Selecting via the map.....	161
Destination, Reaching your.....	201
Destination, Saving in the memory.....	217
Deviating from the calculated route.....	201

Dialing a number from the phone book	109
Displaying the route list	177
Distance bar	175
Dolby B, Dolby C	50
Dolby Laboratories Licensing Corporation	50

E

Emergency call	121
Entering CD names	71
Entering destination address	153
Entering the house number	160
Entering the station frequency in the presets	37

F

Factory settings	232
FM, AM	23
Frequency ranges	23, 27
Fast forward/rewinding	46, 69
Function "RPT"	48
Function "SB"	49

G

Geographical latitude and longitude of your current position	179
GPS reception, set the time	225
GPS-signals	146

H

Heading-up	192
House numbers, Entering	160

I

Information/status line	12
Increase the map scale	164, 191
Info beep	14, 230

L

Last destination, Activating	170
List of languages	222
Lists	12

M

Map display	178
Map orientation, Selecting	192
Map scale, Current	164, 191
Map scale, Reduce	164, 191
Map scale, Increasing	164, 191
Menus	12
Message “Activating Navigation. Please obey all traffic rules!”	149, 150
Message “Attention, name memory is full; new entry only possible after cleaning an old one!” ..	72
Message “Being activated”	77
Message “CALC. ROUTE”	175
Message “Caution. Please turn on ignition. Otherwise system will shut down in 3 minutes”	15
Message “Caution. Please turn on ignition. Otherwise system will shut down in 10 seconds”	15
Message “Caution. The system will shut down.”	15
Message “CD changer: No CD”	68
Message “CD loading”	64, 68
Message “CD-Reading error. Please change CD”	150
Message “Cellular System Busy”	217
Message “Compiling Route List”	177
Message “Data Connection Cannot be Established”	217

Message “Data transmission failure”	217
Message “DEST AREA”	175
Message “Error”	78
Message “Error: Phone defective”	93
Message “Error: Phone not connected”	93
Message “Forward”, “Rewind”	46, 69
Message “Magazine empty”	77
Message “Navigation cannot be activated, an error has ocured”	150
Message “NEW ROUTE”	175, 201
Message “No CD. Insert navigation CD”	150
Message “No CD changer”	77
Message “No Cellular Connection Available”	217
Message “No information available at this time. Press SVC button later.”	217
Message “No magazine”	77
Message “NO ROUTE”	175
Message “No Service”	93, 100
Message “No Service, redial?”	93
Message “OFF MAP”	175
Message “OFF ROAD”	175
Message “Reading error”	77
Message “Ready”	109
Message “Seek”	47
Message “System busy, redial?”	93, 137

- Message “Tele Aid Call in Progress!” 217
 Message “Tele Aid. Please visit workshop” 217
 Message “Telephone is being activated.
 Please wait” 93
 Message “Temperature too high” 78
 Message “To subscribe to information services
 dial phone number” 217
 Message “Voice output is muted” 185
 Mix 175, 190
 Mobile telephone handset 105
 Moving the cross hairs 162
 Multifunction steering wheel, multifunction
 display (telephone) 94
 Multifunction steering wheel, multifunction
 display (CD) 82
 Multifunction steering wheel, multifunction
 display (radio) 39
 Multifunction steering wheel, multifunction
 display (tape) 55
- N**
- Navigation system 145
 North-up 192
- Notebook 124
 Number keypad 8
 Number of satellites received 179
- Q**
- Quick-dialing 123
- P**
- Personal Service Number 140
 Phone book 109, 111
 Phone book, Editing the
 PM (Post Meridien) 229
 Points of interest 166
 Pop-up window 15
 Principle of route guidance 174
- R**
- Radio station frequency, Entering 37
 Radio station, Selecting 24
 Radio stations, Deleting in the memory 35
 Radio stations, Scanning 28

Radio stations, Saving automatically, AM	32	Saving the current vehicle position	209
Radio stations, Saving manually, AM	31	Scale bar	164, 191
Radio stations, Saving manually, FM	29	Selecting a destination via the map	161
Reaching your destination	201	Selecting a detour	196
Reception quality	101	Selecting an intersection	159
Redial	116	Selecting a station	24
Reduce the map scale	164, 191	Selecting the route calculation mode and calculating the route	171
Repeat tracks	48	Selecting CD's	67
Requesting the route mode	181	Selecting map orientation	192
ROAM indicator	99, 132	Selecting the previous destination	170
Route guidance with a mixture of map and symbol display	190	Selecting the time format	229
Route list, Displaying	177	Selecting/avoiding specific traffic routes	171
Route map, Activating	178	Service numbers	139
Route mode, Requesting	181	Service sources	83
Route, Fastest	175	Set the date and time	223
Route, Short	175	Setting Bass/Treble/Fader/Balance	86
		Setting the date and time manually	228
S		Short route	171
Saving stations automatically, AM	32	SMS function	132
Saving stations manually, AM	31	SMS message, Reading an	133
Saving stations manually, FM	29	SMS message, Deleting an	135
Saving the current destination	207	Sorting destination memory	210
		Sound impressions	83

Speed-dialing (only at COMAND)	121
Station selection via direct frequency entry	27
Switching beep tones on and off	230
Switch the COMAND operating unit on and off	13
Switch off screen	14
Switch the microphone off	104
Switching the voice output on/off	185
Symbol display	178
System	12

T

Time zones	226
Track repeat.....	75

U

Unlock code	100
-------------------	-----

V

Voice output, Switching on/off	185
Voice output “Bear left after one quarter mile”	188

Voice output during route guidance	184
Voice output “Please bear left”	188
Voice output “Please turn right”	184, 186
Voice output “Prepare to bear left”	188
Voice output “Prepare to turn right”	186
Voice output “The route is being calculated”	172
Voice output “The route to your intermediate destination is being calculated”	194
Voice output “Turn right after one quarter mile”	186
Voice output “You have reached your destination”	201
Voice recognition system.....	14, 83
Volume difference	85

W

Weather band (WB)	23
Way point	181, 193

We reserve the right to modify the technical details of the COMAND system as given in the data and illustrations of this Operator's Manual. Reprinting, translation and copying, even of excerpts, is not permitted without our prior authorization in writing.

Title illustration no. P82.85-6056-26

Press time 0 5 /01/00
MBUSA/TI
Printed in USA