



COMAND Operator's Manual



Mercedes-Benz

We reserve the right to modify
the technical details
of the COMAND system as given
in the data and illustrations
of this Operator's Manual.

Press time: 02/23/2004

Reprinting, translation and copying,
even of excerpts, is not permitted
without prior authorization in writing.

Title illustration no. P00.01-2899-31

Welcome to COMAND!

Please make yourself familiar with your COMAND control unit and read the instructions in this manual before operating the COMAND system. This will help you derive a greater benefit from the system. Please also follow the instructions and warnings contained in this manual. Ignoring them could result in damage to the vehicle or personal injury to you or others.

The asterisk* identifies optional equipment. Depending on model, version and configuration, your COMAND system equipment may differ. Therefore, you may find explanations for optional equipment not installed in your vehicle. If you have any questions about the operation of any equipment, your authorized Mercedes-Benz Center will be glad to demonstrate the proper procedures.

We continuously strive to improve our product and ask for your understanding that we reserve the right to make changes in design and equipment. Therefore, information, illustrations and descriptions in this manual might differ from the equipment installed in your vehicle. As such, the information, illustrations and descriptions contained in this manual may not be reasonably relied upon in making any claims with respect to the actual performance of the product.

These operating instructions form an integral part of the vehicle and should therefore always be kept inside the vehicle and passed on to the new owner if the vehicle is sold.

We extend our best wishes for many miles of safe, pleasurable driving.

Mercedes-Benz USA, LLC

A DaimlerChrysler Company

Contents

Introduction	7	Audio	33	Satellite radio*	59
Where to find it	7	Radio operation	34	Important notes	60
Symbols	8	Opening the Audio menu	34	Subscribing	61
Operating safety	9	Selecting an audio source	34	Subscribing to satellite radio	61
At a glance	11	Muting	34	Satellite radio operation	62
Radio operating elements	12	Switching to radio operation	35	Switching on	62
CD operating elements	14	Changing the Radio band	35	Changing the program category	63
Satellite radio* operating elements	16	Selecting a station	36	Selecting a station	63
Telephone* operating elements	18	Memory functions	40	Memory functions	65
Navigation operating elements	20	CD operation	44	Displaying information	66
Service operating elements	22	General Information on		Displaying service information	67
Menu system	24	CD operation	44	Station list updates	67
Quick reference COMAND	27	Tips on caring for your CDs	45	Sound settings	67
Switching the COMAND control		Loading CDs	45		
unit on and off	27	Switching to CD operation	49		
Volume	27	Switching on	50	Telephone*	69
Balance and fader	29	Selecting a CD		Important notes	70
Bass and Treble	30	(CD changer* only)	51	Telephone operation	74
Sound functions*	30	Track select	52	Switching telephone operation on	74
		Fast forward/reverse	54	Switching telephone operation off	74
		Muting	55	Emergency call “911”	75
		Playback mode	55	Entering codes	77
		AUX operation	58	Switching to telephone operation	78

Contents

Incoming call	80	Destination input	100	Last destinations and destination memory	134
Outgoing calls	81	Activating the Enter street menu	100	Last destinations memory	134
Active call	85	Selecting the state/province	101	Destination memory	135
Phone book	88	Entering destination address	102	POIs (Points of Interest)	138
		Selecting home address	113	Entering POIs	138
		Route guidance	115	Selecting a POI on the map	141
Navigation	91	Starting route guidance	115	Entering a POI by phone number	142
Important notes	92	Route calculation	115	Today's plan	144
Navigation DVD	93	Recalculating an existing route	115	Adding a destination to today's plan	144
Route guidance after the vehicle has been transported	94	Voice instructions	116	Software Updates	147
Trip interruption during route guidance	95	Navigation displays	117		
Navigation main menu	96	Arriving at destination	119		
Activating the Navigation main menu	96	Cancelling route guidance	120		
Setting the routing mode	98	During route guidance	121		
Saving current location	99	Displaying the soft keys	121	Service	151
		Info menu	122	Service main menu	152
		Selecting a detour	123	Activating the Service main menu	152
		Stopover function	125	SMS*	153
		Saving the current location	128	SMS Received list	153
		Defining route guidance displays	128	Reading SMS message received	154

Tele Aid* 155
 Emergency call system..... 155
 Roadside Assistance..... 155
 Information..... 156

Glossary 165

Index 167

System settings..... 159
System settings 160
 Selecting the time zone 160
 Selecting the language 161
 Switching verification and
 notification tones on and off 162
 Making display settings 163
 Resetting all settings to
 the factory settings 164

Contents

▼ Where to find it

This Operator's Manual is designed to provide support information for you, the COMAND operator. Each chapter has its own guide color to provide fast access to information.

At a glance

Here you will find an overview of all COMAND control elements and system components. If you are operating COMAND for the first time or if you have rented or borrowed the vehicle, this is the chapter you should read first.

Audio

Here you will find all the information on how to use the radio, CD player and CD changer*.

Satellite radio*

This chapter provides information on how to select a station and a program category.

Telephone*

Here you can learn in detail about the many functions of the telephone, how to initiate an emergency call and use the phone book.

Navigation

This chapter provides detailed information on the following topics:

- Destination input
- Route guidance including detour
- Last destinations and destination memory
- POIs
- Today's plan

Service

Here you will find all the information about:

- SMS*
- Tele Aid*

System settings

This chapter provides information on how to adjust COMAND system settings.

Directories

The glossary explains the most important technical terms.

The table of contents and index directory will help you quickly locate the information you need.

Introduction

Symbols

▼ Symbols

You will find the following symbols in these operating instructions:

- * The asterisk identifies optional equipment. Since not all models have the same standard equipment, your COMAND system equipment may deviate from some descriptions and illustrations.

Warning



Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.



Highlights hazards that may result in damage to your COMAND.



Helpful hints or further information you may find useful.

- ▶ This symbol points to instructions for you to follow.
- ▶ A number of these symbols appearing in succession indicates a multiple-step procedure.
 - ▷▷ The continuation symbol marks an interrupted procedure which will be continued on the next page.
 - (▷ page 9) This symbol tells you where to look for further information on this subject.
 - > This symbol is used in the glossary. It indicates that the term immediately following the symbol is also explained in the glossary.
 - Display Messages, menu items or soft key names appearing in the COMAND color display are printed in the type shown here.

▼ Operating safety

Warning



Any alterations made to electronic components and the software can cause malfunctions.

The radio, amplifier, CD changer*, satellite radio*, telephone* and navigation module are interconnected. When one of the components is not operational or has not been removed/replaced properly, the function of other components may be impaired.

This condition might seriously impair the operating safety of your vehicle.

We recommend that you have any service work on electronic components carried out only by qualified personnel.

Warning



In order to avoid distraction which could lead to an accident, the driver should enter system settings with the vehicle at a standstill and operate the system only when road, weather and traffic conditions permit.

Bear in mind that at a speed of just 30 mp/h (approximately 50 km/h), your car is covering a distance of 44 feet (approximately 14 m) every second.

COMAND supplies you with information to help you select your route more easily and guide you conveniently and safely to your destination. For safety reasons, we encourage the driver to stop the vehicle in a safe place before answering or placing a call, or consulting the COMAND screen to read navigational maps, instructions, or downloaded information.

While the navigation system provides directional assistance, the driver must remain focused on safe driving behavior, including attention to traffic and street signs, and should utilize the system's audio cues while driving.

The navigation system does not supply any information on stop signs, yield signs, traffic regulations or traffic safety rules. This always remains your personal responsibility when you drive. DVD maps do not cover all areas nor all routes within an area.

Introduction

At a glance

Radio operating elements

CD operating elements

Satellite radio* operating elements

Telephone* operating elements

Navigation system operating elements

Service operating elements

Menu system

Quick reference COMAND

At a glance

Radio operating elements

▼ Radio operating elements



At a glance

Radio operating elements

	Function	Page
①	Audio menu	34
②	Soft keys (multifunction keys)	
③	Color display with Radio main menu	35
④	1 - 0 , *	
	Station selection	38
	Saving stations manually	40
	Selecting a station from the preset memory	43
⑤	Push the joystick to ◀ , ▶ , ▲ , ▼	
	Function selection ▲ and ▼	
	e.g. Automatic seek tuning	37
	◀ and ▶ e.g. Manual tuning	37
	Press OK to confirm	

	Function	Page
⑥	MUTE Muting	34
⑦	Volume control	28
⑧	PWR Switching on and off	27
⑨,	-SEEK and SEEK+	
⑩	Automatic seek tuning	37
	Manual tuning	37

At a glance

CD operating elements

▼ CD operating elements



P82.86-4147-31US

At a glance

CD operating elements

	Function	Page
①	Audio menu	34
②	Soft keys (multifunction keys)	
③	Color screen with CD changer* main menu	49
	The status bar indicates CD status information	49
④	1 - 0 , *	
	Selecting a CD (CD changer* only)	51
	Track select	52
⑤	Push the joystick to ◀ and ▶	
	Selecting a CD (CD changer* only)	51
	Push the joystick to ▲ and ▼	
	Track select	52
	Press OK to confirm	

	Function	Page
⑥	EJECT	
	Ejecting/loading a CD into the CD drive	45
	i	
	There are two EJECT buttons. One is on the display unit. The other is located left of the CD AUDIO slot behind the display.	
	The CD changer* is located in the glove box.	
⑦	MUTE	
	Muting	55
⑧	Volume control	28
⑨	PWR Switching on and off	27

	Function	Page
⑩,	-SEEK and SEEK+	
⑪	Track select	52
	Fast forward/reverse	54

At a glance

Satellite radio* operating elements

▼ Satellite radio* operating elements



	Function	Page
①	Satellite radio main menu	62
	Switching satellite operation on and off	62
②	Soft keys (multifunction keys)	
③	Color screen with Satellite radio main menu	62
④	1 - 0 , *	
	Station selection via direct channel entry	64
	Saving stations manually	65
⑤	Push the joystick to ◀, ▶, ▲, ▼	
	Function selection	
	Press OK to confirm	
⑥	MUTE	
	Muting	62

	Function	Page
⑦	Volume control	28
⑧	PWR Switching on and off	27
⑨,	-SEEK and SEEK+	
⑩	Previous or next channel	63

At a glance

Telephone* operating elements

▼ Telephone* operating elements



P82.86-4149-31US

At a glance

Telephone* operating elements


	Function	Page
①	TEL Telephone menu Switching telephone operation on and off	78 74
②	Soft keys (multifunction keys)	
③	Color screen with Telephone menu	
④	1 - 0 , # and * Entering codes • the unlock code • the PIN code Entering a telephone number Subsequent dialing Speed-dialing Quick-dialing	77 77 77 81 82 85 85

	Function	Page
⑤	Push the joystick to ◀, ▶, ▲, ▼ Function selection Press OK to confirm	
⑥	SEND Accepting a call Making a call Redialing	80 82 82
⑦	END Rejecting or ending a call	80, 80
⑧	Volume control	28
⑨	PWR Switching on and off	27

At a glance

Navigation operating elements

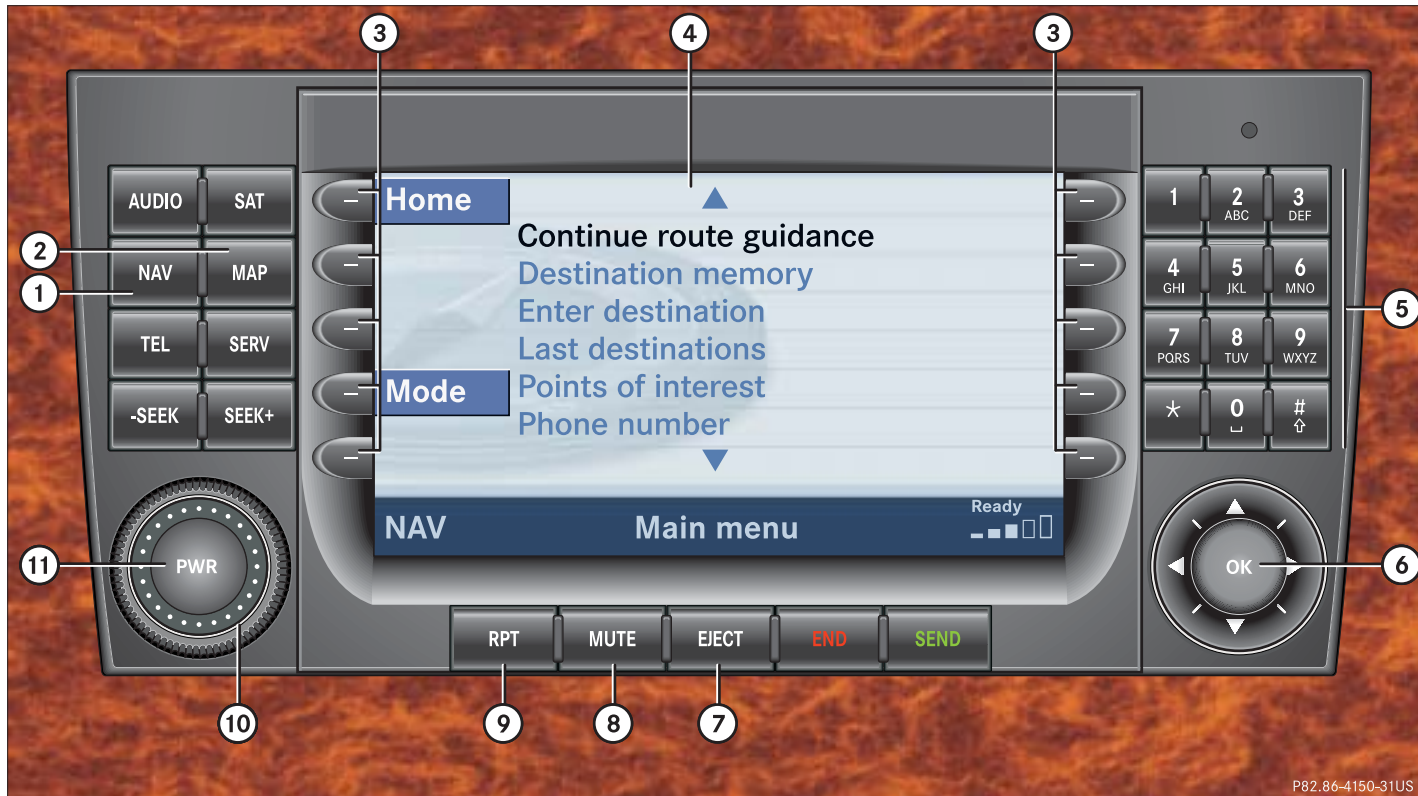

▼ Navigation operating elements



At a glance

Navigation operating elements

	Function	Page
①	NAV Navigation main menu During route guidance: Change over to navigation display Cancelling route guidance	96 117 120
②	MAP Switches to map display Changing the map display (split and full view)	117 119
③	Soft keys (multifunction keys)	
④	Color screen with Navigation main menu	96
⑤	Entering a house number Entering a POI by phone number	103 142

	Function	Page
⑥	Push the joystick to  Function selection, Scrolling on map Press OK to confirm	
⑦	EJECT Updating software/ changing map data  There are two EJECT buttons. One is on the display unit. The other is located left of the DVD NAVIGATION slot behind the display.	147






	Function	Page
⑧	MUTE During a voice instruction: Muting current voice instruction Switching off voice instructions	116 116
⑨	RPT Repeating current voice instruction Switching on voice instructions	116 116
⑩	Volume control	28
⑪	POWER Switching on and off	27

At a glance

Service operating elements

▼ Service operating elements



	Function	Page
①	SERV Service main menu	152
②	Soft keys (multifunction keys)	
③	Color screen with Service main menu  The SMS soft key appears if the vehicle is equipped for phone operation and a Mercedes-Benz specified mobile telephone* is inserted in phone cradle*.	152
④	Push the joystick to  ,  Function selection Press  to confirm	
⑤	 Switching on and off	27

At a glance

Menu system

▼ Menu system

The menu system allows for easy operation of COMAND.

Main menus are provided for the following main functions:

- Audio (radio, CD, CD changer*)
- Satellite radio*
- Telephone*
- Navigation
- Service

Calling up main menus

Main function	Activating main menu
Audio (▷ page 34)	▶ Press AUDIO .
Satellite radio* (▷ page 62)	▶ Press SAT .
Telephone* (▷ page 78)	▶ Press TEL .
Navigation (▷ page 96)	▶ Press NAV .
Service (▷ page 152)	▶ Press SERV .

Menu display

A display may consist of three areas.

Example: FM menu



P82.86-4154-31US

- ① Soft keys area
- ② Main area
- ③ Status bar

The functions currently assigned to the soft keys are displayed in the soft key sections ①.



A maximum of five soft keys may be displayed on each side of the main area ②.

The main area ② shows messages and settings. You can change the settings by operating the system.

The status bar ③ is divided into three areas.

Left side:

The current operating mode is indicated. In this example: Radio

Center:

The status of the current operating mode or other selectable functions are indicated.


In this example:

- FM = current waveband
- 1 = memory location of station, e.g. "1"

Right side:

General status information is indicated independent of the operating mode.

In this example:

- Ready = Telephone* is ready for operation
-  = Reception strength of the mobile phone*

At a glance

Menu system

Menu functions and submenus

Using the soft keys, functions can be switched ON or OFF, or submenus can be called up.

E.g. the radio menu:



- The FM/AM soft key switches between FM and AM band.
- The Scan soft key starts/stops the channel scan.

At a glance

Menu system

In some situations, soft keys may not have any function and are not operational. A soft key without function appears shaded out.

E.g.: Soft keys on the left and right side



P82.86-4156-31US

Exiting from submenus

Use the Back soft key ① to exit a submenu. The display switches to the next higher menu level.

The system does not accept setting modifications which have not been stored. There are exceptions where pressing the Back soft key will also store new settings. These exceptions, whenever applicable, are referenced on the following pages.

▼ Quick reference COMAND



You have the following options to control the system:

- at the COMAND
- at the multifunction steering wheel (refer to vehicle Operator's Manual)

This Operator's Manual describes the control at the COMAND.

Unless otherwise indicated, the descriptions and illustrations refer to the COMAND.

Switching the COMAND control unit on and off

Switching on



For an explanation of starter switch positions, refer to vehicle Operator's Manual.

- ▶ Turn the key in the starter switch to position 1 or 2 if the COMAND was switched off by turning the key in the starter switch to position 0 and removing it.

or

- ▶ Press .

In both cases, the system will activate the operating mode which was active when the system was switched off.



If the key is not in the starter switch in position 1 or 2, the system will automatically stop after around 30 minutes.

Switching off

- ▶ Turn the key in the starter switch to position 0 and pull the key out.

or

- ▶ Press .

Volume

When the audio is playing, the volume knob will adjust the audio volume, and also the volume for telephone and navigation.

During a telephone call (talking or ringing), the volume knob will adjust the telephone voice and ringer volume.


The volume for the navigation announcements can only be changed while an announcement is being made.

When you adjust the volume, the system will automatically store the setting for the current operating mode.



At a glance

Quick reference COMAND

Adjusting the volume

- ▶ At the COMAND, turn the rotary control at the  key.

or

- ▶ Press  or  on the multifunction steering wheel.

The volume is turned up or down depending on the direction of rotation or the key pressed on the multifunctional steering wheel.

The system remembers the volume setting when it is switched off.



When the system is switched on again, the volume may be lower or higher than at the time when the system was switched OFF.

This will be the case when the volume was adjusted to a value outside a certain range when the system was switched off.

Automatic volume control

The automatic volume control feature adjusts the volume depending on:



- vehicle speed (only in vehicles without premium sound system*)

or

- ambient noise inside the vehicle (only in vehicles with premium sound system*)

Balance and fader

Common balance and fader settings apply to the following systems:

- Radio operation
- CD operation (CD )
- CD changer* operation (CD )
- AUX
- Satellite radio*


When you make balance or fader settings, the system will automatically save the settings for the current operating mode and others.

Setting balance and fader

In any audio source operation:

- ▶ Press the Bal/Fad soft key.

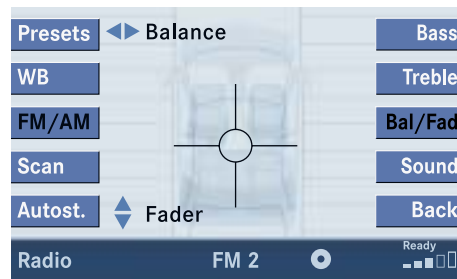

Cross-hairs are displayed. The horizontal hair line indicates the balance setting. The vertical hair line indicates the fader setting. You can now make balance and fader settings.





P82.86-4157-31US

At a glance



Quick reference COMAND


- ▶ Push the joystick to  or .
- Move the cross-hairs horizontally and adjust the balance.

or

- ▶ Push the joystick to  or .
- Move the cross-hairs vertically and adjust the fader.



Push the joystick to  and  to move the cross-hairs simultaneously in vertical and horizontal direction.

- ▶ Press  or the Back soft key.

or



- ▶ Wait until the display changes.
- The new setting is saved.

At a glance

Quick reference COMAND

Bass and Treble

Different bass and treble settings are possible for the following operating modes:

- Radio: FM-, AM- and Weather (WB) bands
- Single CD (CD ) and CD changer* (CD )
- AUX
- Satellite radio*


When you adjust bass or treble, the settings apply to other sources within the group, but not to the other modes. For example, if you adjust the bass while listening to FM, that same bass level applies to AM and Weather band, but not to satellite radio* or CD.

Activating the Bass or Treble menu




In any audio source operation:

- ▶ Press the Bass or Treble soft key.
The Bass or Treble menu will appear.

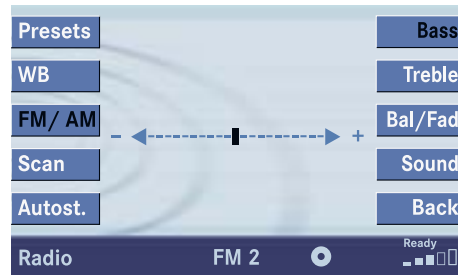Making Bass and Treble settings



P82.86-4158-31US



- ▶ Push the joystick to  or .
Bass or Treble is adjusted.
- ▶ Press  or the Back soft key.
or
- ▶ Wait until the display changes.
The new setting is saved.



Press the Bass or Treble soft key and keep it depressed to move the cursor continuously. Release the soft key to set the current value.

Sound functions*

If your vehicle is equipped with the premium sound system*, the sound functions* will be available for the following operating modes:

- Radio: FM-, AM- and Weather (WB) bands
- Single CD (CD ) and CD changer* (CD )
- AUX
- Satellite radio*

The following sound functions* are available:

- Default Settings:
COMAND sets the default settings (Bass, Treble, Bal/Fad) for the active source mode.
- Standard:
COMAND sets the sound linear for the center of the vehicle.

- Speech:
Playback optimized for language comprehensibility.
- LOGIC7 Surround:
Surround playback.

You can use different sound functions* for the modes mentioned above.

E.g.:

For radio operation the function Standard, for CD operation the function LOGIC7 Surround.



LOGIC7 Surround sound offers a sound quality superior to conventional stereo sound.

If the radio reception is poor, the system should be switched back to standard stereo playback. Switching back to standard stereo playback may improve reception quality.

Activating the sound functions*

In any audio source operation:

- ▶ Activate the main menu for the respective operating mode (▷ page 24).
- ▶ Press the Sound soft key.
The Sound menu will appear.



P82.86-4159-31US

At a glance

Quick reference COMAND

- ▶ Push the joystick to ▲ or ▼ to select the desired function.
- ▶ Press **OK**.
The function is activated.

At a glance

Audio

Radio operation

CD operation

AUX operation

Audio

Radio operation

▼ Radio operation

In chapter “Audio” you will find detailed information regarding

- radio operation
- CD operation (CD drive, CD changer*)
- AUX operation

If you have not done so already, please familiarize yourself with these functions by reading chapter “At a glance”.

Warning



In order to avoid distraction which could lead to an accident, the driver should enter system settings with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

Opening the Audio menu


- ▶ Press **AUDIO**.



P82.86-4160-31US

Audio menu



The **CD**  soft key is available if a CD changer* is connected to the COMAND.

- ▶ If an audio submenu is displayed, press the **Back** soft key until the Audio menu is displayed.

or

- ▶ Press **AUDIO** again.


Selecting an audio source

- ▶ In the Audio menu, press the soft key for the desired audio source.

Muting

Switching On

- ▶ Press **MUTE**.

The system mutes the active audio source and the  symbol is displayed in the status bar. The soft keys on the left side are greyed out in some submenus.

Switching off

- ▶ Press **MUTE** again.

or

- ▶ Turn the rotary control at the **PWR** key to adjust the volume.

or

- ▶ Press **-SEEK** or **SEEK+**.

The soft keys on the left side are selectable again.

Switching to radio operation

- ▶ In the Audio menu, press the Radio soft key.

The Radio main menu will appear. The station last tuned to will begin to play.



P82.86-4154-31US

Radio main menu

- ① Soft key assignment
- ② Main area
- ③ Status bar

Switching back to the Audio menu

- ▶ Press the Back soft key.



The Sound soft key is available if COMAND is equipped with a sound amplifier*.

Changing the Radio band

You can select between FM-, AM- and WB-Band.

AM Band

- ▶ In the FM Radio main menu, press the FM/AM soft key until “AM” is displayed in the status bar.



P82.86-4161-31US

The AM station last tuned to will begin to play. The frequency will appear in the display.

Switching back to FM band

- ▶ Press the FM/AM soft key.

The station last tuned to will begin to play.

Frequency band	Frequency range
FM	87.7 - 107.9 MHz
AM	530 - 1710 kHz

Audio

Radio operation

Weather Band WB

- ▶ In the FM or AM Radio main menu, press the WB soft key.

An automatic scan is starting and the COMAND plays and displays the channel of the first strong WB station.



P82.86-4162-31US



With the number keys **1** - **7** PQRS it is possible to choose a channel.

The message `No channel` will appear if the system could not detect a channel.

Switching back to FM or AM band

- ▶ Press the FM/AM soft key.

or

- ▶ Press the WB soft key

The station last tuned to will begin to play.

Switching back to the Audio menu

- ▶ Press the Back soft key.

The Weather Band WB station will continue to play.

Selecting a station

You can use the following functions:

- Automatic seek tuning (▷ page 37)
- Manual tuning (▷ page 37)
- Station selection from the preset menu (▷ page 38)
- Station selection via direct frequency entry (FM, AM) (▷ page 37)
- Automatic station scan (FM, AM) (▷ page 38)
- Station selection from the FM/AM Autostore presets (▷ page 43)

Automatic seek tuning

- ▶ Press **SEEK** or **SEEK+**.
- or
- ▶ Push the joystick to **▲** or **▼**.

FM- and AM-Bands, Weather Band WB

The radio will tune in to the next receivable station (FM, AM) or channel (WB) with descending/ascending frequency depending on the direction of seek.

WB

Alternatively, you can select the channel directly:

- ▶ Press a number key **1** through **7** POR.S.



The selected channel is not shown in the status line.

Manual tuning (FM, AM)

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press **SEEK** or **SEEK+** longer than 2 seconds.

The function is active.

- ▶ Press **SEEK** or **SEEK+** repeatedly to change the frequency step by step.

or

- ▶ Push the joystick to **◀** or **▶**.

Each handling will change the frequency by one step.

FM Band

The frequency displayed will change in increments of 0.2 MHz.

AM Band

Tuning will take place in increments of 10 kHz.

Audio


Radio operation

Station selection via direct frequency entry (FM, AM)

E.g.: 102.7 MHz in the FM band

- ▶ Activating the desired wave band (▷ page 35).
- ▶ Press *****.

An input line will appear.

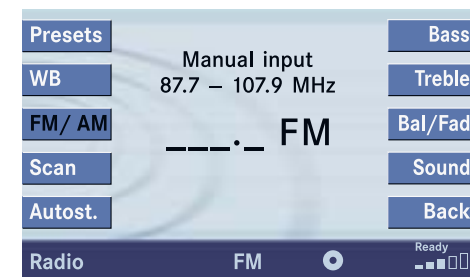

P82.86-4168-31US

Audio

Radio operation

- ▶ Enter the desired frequency with the number keys within 8 seconds, e.g.

 for 102.7 MHz.

The station you have selected will begin to play.

Frequency band	Frequency range
FM	87.7 - 107.9 MHz
AM	530 - 1710 kHz

FM, AM band


Entries outside the frequency range are not accepted. The message **Please observe frequency range 87.7 - 107.9 MHz** will appear briefly.



If you do not make another entry within 8 seconds, the function will be canceled and you will continue listening to the station last tuned to.

Station selection via number keypad (presets)

FM- and AM-Bands

- ▶ Press one of the number keys, such as  briefly.

The radio will tune to the frequency assigned to that memory location. If none has been set by you, the radio will not change the station.



FM and AM presets are independent and can only be accessed while in the corresponding band.

Saving stations for FM and AM ([▷ page 40](#)).

Automatic station scan (FM, AM)

The stations on same band (FM, AM) can be scanned one after the other for 8 seconds each.



In the AM band, two search runs take place. During the first run, stations with good reception are played. During the second run, stations with weaker reception are played.

Start scan function

- ▶ Activate the desired wave band ([▷ page 35](#)).
- ▶ Press the **Scan** soft key.



P82.86-4165-31US

The scan function will begin.

End scan function and play a station

- ▶ Press the Scan soft key again if you hear the desired station.

or

The scan function stops automatically when the first station received has been scanned twice.

Audio

Radio operation

Memory functions

You can use the following functions:

- Saving stations manually (FM, AM)
- Saving stations automatically FM, AM (▷ page 42)
- Selecting a station from the FM/AM preset menu (▷ page 43)
- Selecting a station from the FM/AM Auto presets (▷ page 43)

Saving stations manually (FM, AM)

In the Radio main menu

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press one of the number keys, e.g. **2**_{ABC}, longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 162).

The radio saves the current station at the memory preset selected. The memory preset selected will appear in the status bar, e.g. FM2.




There are 10 presets available (**1** - **9**_{wxyz}, **0**₀).

An existing entry is overwritten in the memory list when a new input is given.

On the memory list

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press the Presets soft key.
The memory Preset menu will appear.

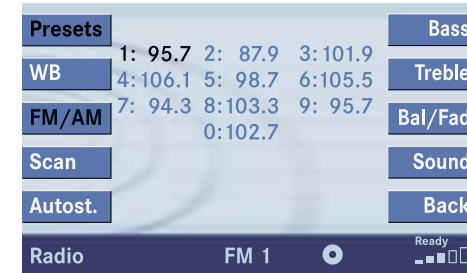

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight the desired memory preset.

- ▶ Press **OK** longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 162).

The current station will be saved at the memory preset selected.

You will see the Radio main menu

- automatically after 8 seconds
- if you press the **Back** soft key.



There are 2 presets for each of the FM and AM waveband

- standard FM/AM presets (saving stations manually) and
- Auto presets (saving stations automatically).

The standard FM/AM presets are not affected by the Auto presets. This is a second option for storing a station range you are currently receiving.

Audio

Radio operation

Saving stations automatically (FM, AM)

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press the *Autost.* soft key.

The autostore preset menu will appear.



- ▶ Press **OK** to start *Begin new search*.

The autostore function is active. The message *Autostore being reloaded will appear*. The radio stores the 10 stations with the strongest signal. The station frequencies available will appear in the memory list.



There are max. 10 presets available (**1** - **9**, **0**) - **WXYZ**, **0**).

The autostore function assigns the stations to the memory locations in the order of their reception quality. The strongest station is available on preset 1. The number of available stations depends on the stations available in the area the vehicle is operated in.

Selecting a station from the preset menu (FM, AM)

- ▶ Activate the FM or AM memory (▷ page 40).

You can use one of the following two ways to select a station from the FM/AM presets

- ▶ Press the corresponding number key, e.g. **3 DEF**, to select the desired station.

or

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight a memory preset in the FM/AM preset list (▷ page 40).

- ▶ Press **OK**.

In both cases, you will see the main radio menu

- automatically after 8 seconds
- if you press the **Back** soft key.

The Radio main menu indicating the memory preset number.

Selecting a station from the FM/AM autostore presets

- ▶ Activate the FM or AM autostore preset menu (▷ page 42).

You can use one of the following two ways to select a station from the FM/AM autostore presets

- ▶ Press the corresponding number key, e.g. **3 DEF**, to select the desired station.

or

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight a memory position.

- ▶ Press **OK**.

In both cases, you will see the main radio menu

- automatically after 8 seconds
- if you press the **Back** soft key.

Audio

CD operation

▼ CD operation

General Information on CD operation

Warning



In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.

Health hazard



The CD drive and CD changer* are Class 1 laser products. There is a danger of invisible laser radiation when you open or damage the cover.

Do not remove the cover. The CD drive and the CD changer* do not contain any parts which can be serviced by the user. For safety reasons, have any necessary service work performed by qualified personnel.



COMPACT
disc
DIGITAL AUDIO

Only use CDs, which bear the label shown and that conform to the compact standard (IEC 60908). You can therefore only use CDs with a maximum thickness of 1.3 mm.



The system may not be able to play CDs with copy protection or copied CDs.



Use only CDs with a diameter of 12 cm, do not use 8-cm CDs.

An 8-cm CD adapter may cause damage to the CD drive and to the CD changer* and **should not** be used.



Your CD drive has been designed to play CDs which correspond to the EN 60908 standard.

If you insert thicker data carriers, e.g. ones that have data on both sides (one side with DVD data, the other side with audio data), they cannot be ejected and will damage the drive.

Tips on caring for your CDs

- Only touch the CD on the sides.
- Avoid touching the CD surface with your fingers.
- Clean the CD with a dry, lint-free cloth. Wipe them from the inside to the outer edge. Never wipe the CD in a circular motion.
- Do not use rubbing alcohol or solvents to clean the CDs.
- Do not expose the CDs to heat or direct sunlight.
- Do not write or put stickers on CD.

Loading CDs**Warning**

In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.

Ejecting/loading a CD into the CD drive

There are two **EJECT** buttons. One is on the display unit. The other is located left of the CD AUDIO slot behind the display, see next page.

Audio

CD operation



- ① Ejecting audio CD
- ② Opening/closing the display unit
- ③ Warning message Press EJECT to close

Warning



The display unit can cause injury if contacted when open. Please close after inserting an audio CD.



Do not place anything on the lowered display panel. Placing objects on the lowered display panel may result in damage to the display or COMAND unit which is not covered by the Mercedes-Benz Limited Warranty.

- ▶ With the COMAND switched on, press **EJECT**.

The display unit moves forward and then tilts down. The CD AUDIO slot is visible.

- ▶ Press the **EJECT** button left of the CD AUDIO slot to eject a CD already loaded.
- ▶ Remove the CD from the slot.
- ▶ Insert a CD into the slot. The CD should be inserted with the label side up.

The COMAND pulls the CD in.



Inserting a second CD with another CD still loaded will cause damage to the CD drive which is not covered by the Mercedes-Benz Limited Warranty.

Audio

CD operation

- ▶ Press **EJECT** on the display unit to return the display unit to its closed position.

The display unit tilts up and then moves to the rear.

Playback begins with track number one.



The message `Press EJECT to close` will appear. If **EJECT** on the display unit is not pressed within 20 seconds, eight successive series of two beep tones will sound to remind you to return the display to its closed position by pressing **EJECT** on the display unit. The active audio source will be muted until the display has been returned to its closed position.

The message `CD error` will appear if there is a media error.


- ▶ Remove the CD or switch to another operation.

Audio

CD operation

Loading CDs into the CD changer*

The CD changer* is located in the glove box. Open panel cover to access the CD changer*.

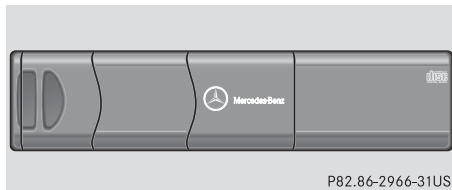

Removing the magazine:

- ▶ Slide the cover of the CD changer* open.
- ▶ Press the green **EJECT** button on the CD changer*.

The magazine will slide out. The message *No magazine* will appear on the COMAND.



You can also slide out the magazine if COMAND is switched off.

However, the **EJECT** button will not function if the vehicle battery is not connected or discharged.

Inserting CDs:

- ▶ Pull the disk tray forward until it stops.
- ▶ Place a CD in the tray. The CD should be inserted with the label side up.
- ▶ Push the CD tray into the magazine completely.
- ▶ Repeat these three steps to load more CDs into the magazine.

Reading the magazine in:

- ▶ Slide the magazine into the CD changer* until it clicks into place (listen for the click).



When you push the magazine in, the arrow on the upper side of the magazine must point in the direction of the CD changer*.

- ▶ Slide the cover of the CD changer* closed.

Switching to CD operation

Playback locations for audio CDs are:

- the CD drive in the COMAND
- the CD changer*.

CD drive



The CD drive is located behind of the display unit (▷ page 46).

CD changer*



The CD changer* can accommodate up to 6 audio CDs. The CD changer* is located in the glove box.

If a CD changer* is connected to the COMAND, the CD soft key is available.

- ▶ In the Audio menu (▷ page 34), press the CD or the CD soft key.



P82.86-4170-31US

CD changer* main menu

- ① CD number or name of the CD currently playing
- ② Track number or name of the track currently playing
- ③ CD - CD changer*
CD - CD drive
Actual track number/max. track number on CD and elapsed playback time
- ④ Symbol for inserted CD



The Magaz. soft key is only assigned when the CD changer* is active.

If the CD changer* has already read the magazine, the Magazine menu will appear (▷ page 52) when you press the Magaz. soft key.


Otherwise the message Magazine scan Please wait will appear first.

Audio

CD operation

Switching on


CD drive

- ▶ Activate the Audio menu (▷ page 34).
- ▶ Press the CD  soft key.

The CD main menu is displayed.

If no audio CD has been inserted, the message `No CD inserted` will appear.

- ▶ Load an audio CD into the CD drive (▷ page 45).

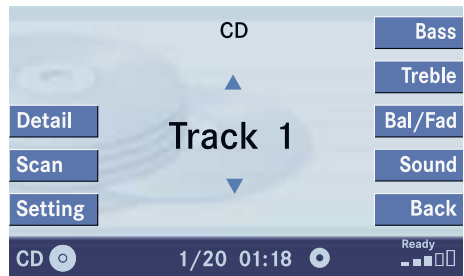

P82.86-4171-31US


CD main menu




The name of the CD and the name of the track played are displayed if the information is available.


CD changer*



The CD  soft key is available if a CD changer* is connected to the COMAND.

- ▶ Activate the Audio menu (▷ page 34).
- ▶ Press the CD  soft key.

The CD changer* main menu will appear. The CD last played is played back.

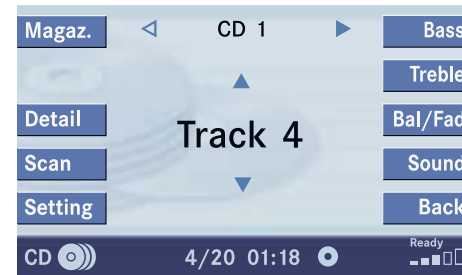

P82.86-4172-31US

CD changer* main menu

If the last played CD is not available, the next available audio CD is played back.



The name of the CD and the name of the track played are displayed if the information is available.

No CD in the magazine:

The message `Magazine empty` will appear.

- ▶ Load audio CDs into the CD changer* (▷ page 48).

Selecting a CD (CD changer* only)

You can select a CD:

- in the CD list (▷ page 51)
- with the number keypad (▷ page 51)
- in the magazine menu (▷ page 52)


In the CD list



Selection is possible if the CD changer* has loaded the magazine (COMAND knows the position of filled and empty slots) and at least two audio CDs are loaded.

The CD list includes all loaded CDs. Only one list entry is visible at a time.

The entry is displayed above the track indication. It shows the number of the CD currently playing.

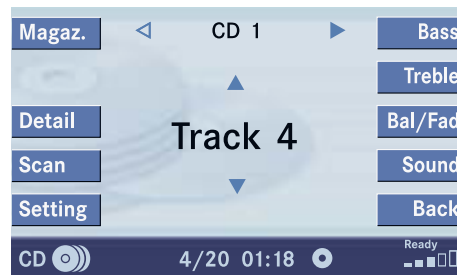

P82.86-4172-31US

Audio

CD operation

- ▶ Push the joystick to ◀ or ▶ to select another CD from the list.

After the CD is loaded, it is played back.

or

- ▶ Do not change the selection.

Playback of the last played CD is continued.

With the number keypad



The number keys **1** - **6** can be used for direct selection.

Keys **1** - **6** magazine slots 1 to 6 of the CD changer*

Audio

CD operation

- ▶ Press a number key, e.g. **2** ABC to select the corresponding CD.

The CD is changed. The selected CD is played back.

The message No CD <number> will appear if a selected slot is empty.

In the Magazine menu

- ▶ Press the **Magaz.** soft key.

The Magazine menu is displayed. If the magazine has not been read in, the message Magazine scan Please wait is displayed first.



P82.86-4173-31US



The name of the CD instead of e.g. CD1 is displayed if the information is available.

- ▶ Push the joystick to **▲** or **▼** to select a CD.
- ▶ Press **OK**.

or

- ▶ Press one of the number keys **1** to **6** MNO.

The CD is changed. The message Loading CD <number> will appear.

Track select

You can select a track:

- with **-SEEK** or **SEEK+** (▷ page 52)
- with the joystick (▷ page 53)
- with the number keypad (▷ page 53)
- with CD track scan (▷ page 53)

With **-SEEK** or **SEEK+**

- ▶ Activate the main CD menu (▷ page 49).

Next track

- ▶ Press **SEEK+**.

The next track is played.

Previous track or start of title (if more than 10 seconds of playing time has elapsed)

- ▶ Press **SEEK-**.
Playback begins.

Select any desired track


- ▶ Press **SEEK-** or **SEEK+** as often as necessary.

With the joystick

- ▶ Push the joystick to **▲** or **▼** to play the next or previous track.

With the number keypad

- ▶ Activate the CD main menu (▷ page 50).
- ▶ Press *****.
An input line will appear in the CD main menu.

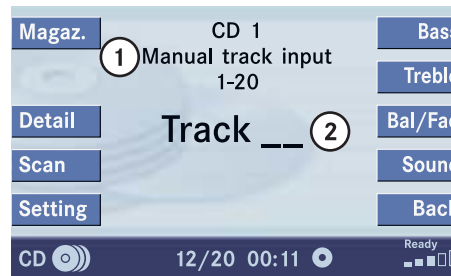

P82.86-4175-31US

① Number of tracks on CD corresponds with the valid number range

② Input line

E.g.: Track 14.

- ▶ Press **1** and **4** in short succession.

Audio

CD operation



Entries higher than the number of tracks available on the CD are not possible.

- ▶ After entering the track number, wait approximately 3 seconds.

The selected track is played. The CD main menu is displayed.

CD track scan


The tracks on a CD can be scanned one after the other for 8 seconds each. The function will switch off automatically when the starting track is reached. You can also manually stop the scan function.

Audio

CD operation

Activating

- ▶ Press the Scan soft key.
Scan will begin.

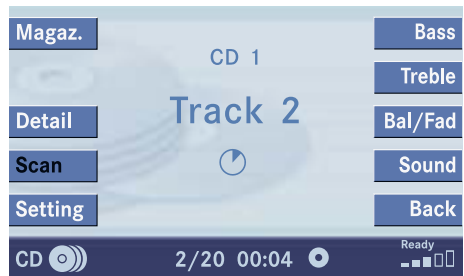

P82.86-4176-31US



When you start the scan function, the playback mode Normal sequence (▷ page 57) is automatically activated.

Ending the function

Scan search is running.

- ▶ Press the Scan soft key.
- or
- ▶ Press **OK**.

Playback will resume with the desired track.

Fast forward/reverse

Fast forward

- ▶ Press **SEEK+** longer than 2 seconds and keep it pressed.

Fast reverse


- ▶ Press **-SEEK** longer than 2 seconds and keep it pressed.

Ending the function

- ▶ Release **SEEK+** or **-SEEK**.
Playback will resume.


Muting**On**

- ▶ Press **MUTE** during playback.

The CD operation is muted and the  symbol is displayed in the status bar. The soft keys on the left side are greyed out in some submenus.

Off

- ▶ Press **MUTE** again.

Playback will resume. The  disappears from the status bar. The soft keys on the left side are selectable again.



COMAND will also deactivate muting if you

- press **AUDIO** to select another audio source
- change the volume
- press either **-SEEK** or **SEEK+**.

Playback mode

The following options are available:

- Normal sequence (▷ page 57)
- Track mix (▷ page 57)
- CD mix (▷ page 57)
- Repeat track (▷ page 57)
- Repeat CD (▷ page 57)



If the CD changer* is connected, the playback modes Repeat CD and CD mix are available additionally.

Audio


CD operation

Activating playback mode

E.g.:

Mode Repeat track

- ▶ Press the Setting soft key.
The setting menu will appear.

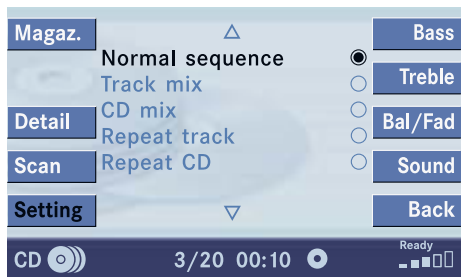

P82.86-4177-31US

CD changer* setting menu

- ▶ Push the joystick to **▲** or **▼** to select the playback mode Repeat track.
- ▶ Press **OK**.

The mode is activated. The CD changer* main menu will then appear. REPEAT TRACK will appear in the status bar.



The playback mode Normal sequence is not displayed in the status bar.

Explanation of the playback modes

- Normal sequence

Tracks are played in ascending order (e.g. 1, 2, 3 and so on). If just one CD is inserted, the first track is played when the last one is over.

If more than one CD is available, the first track of the next CD is played when the last track of the current CD is over. The CDs are changed in normal order.

- Track mix

Tracks are played in random order. If more than one CD is available, the next available CD is played when the current CD is over. The CDs are changed in normal order.

- CD mix (CD changer* only)

At least 4 tracks of any CD are played in random order. Then follows the next available CD. The CDs are changed in random order.

- Repeat track

The system repeats the current track until you switch the function off.

- Repeat CD (CD changer* only)

The system repeats the current CD until you switch the function off.

Audio

AUX operation

▼ AUX operation



An external audio source can be connected to the COMAND.

For further information please contact an authorized Mercedes-Benz Center.

- ▶ Open the Audio menu (▷ page 34).
- ▶ Press the AUX soft key.

The AUX menu is displayed. The external audio source is played back if it is connected and switched to playback.



P82.86-4178-31US



For instructions on how to operate the external audio source, please see the operation manual of the device connected.

At the COMAND, you can set the following for the AUX operation:

- Volume (▷ page 27)
- Balance control and fader (▷ page 29)
- Bass and treble control (▷ page 30)
- Sound functions* (▷ page 30)

Welcome to COMAND!

Please make yourself familiar with your COMAND control unit and read the instructions in this manual before operating the COMAND system. This will help you derive a greater benefit from the system. Please also follow the instructions and warnings contained in this manual. Ignoring them could result in damage to the vehicle or personal injury to you or others.

The asterisk* identifies optional equipment. Depending on model, version and configuration, your COMAND system equipment may differ. Therefore, you may find explanations for optional equipment not installed in your vehicle. If you have any questions about the operation of any equipment, your authorized Mercedes-Benz Center will be glad to demonstrate the proper procedures.

We continuously strive to improve our product and ask for your understanding that we reserve the right to make changes in design and equipment. Therefore, information, illustrations and descriptions in this manual might differ from the equipment installed in your vehicle. As such, the information, illustrations and descriptions contained in this manual may not be reasonably relied upon in making any claims with respect to the actual performance of the product.

These operating instructions form an integral part of the vehicle and should therefore always be kept inside the vehicle and passed on to the new owner if the vehicle is sold.

We extend our best wishes for many miles of safe, pleasurable driving.

Mercedes-Benz USA, LLC

A DaimlerChrysler Company

Contents

Introduction	7	Audio	33	Satellite radio*	59
Where to find it	7	Radio operation	34	Important notes	60
Symbols	8	Opening the Audio menu	34	Subscribing	61
Operating safety	9	Selecting an audio source	34	Subscribing to satellite radio	61
At a glance	11	Muting	34	Satellite radio operation	62
Radio operating elements	12	Switching to radio operation	35	Switching on	62
CD operating elements	14	Changing the Radio band	35	Changing the program category	63
Satellite radio* operating elements	16	Selecting a station	36	Selecting a station	63
Telephone* operating elements	18	Memory functions	40	Memory functions	65
Navigation operating elements	20	CD operation	44	Displaying information	66
Service operating elements	22	General Information on		Displaying service information	67
Menu system	24	CD operation	44	Station list updates	67
Quick reference COMAND	27	Tips on caring for your CDs	45	Sound settings	67
Switching the COMAND control		Loading CDs	45		
unit on and off	27	Switching to CD operation	49	Telephone*	69
Volume	27	Switching on	50	Important notes	70
Balance and fader	29	Selecting a CD		Telephone operation	74
Bass and Treble	30	(CD changer* only)	51	Switching telephone operation on	74
Sound functions*	30	Track select	52	Switching telephone operation off	74
		Fast forward/reverse	54	Emergency call “911”	75
		Muting	55	Entering codes	77
		Playback mode	55	Switching to telephone operation	78
		AUX operation	58		

Contents

Incoming call	80	Destination input	100	Last destinations and destination memory	134
Outgoing calls	81	Activating the Enter street menu	100	Last destinations memory	134
Active call	85	Selecting the state/province	101	Destination memory	135
Phone book	88	Entering destination address	102	POIs (Points of Interest)	138
		Selecting home address	113	Entering POIs	138
		Route guidance	115	Selecting a POI on the map	141
Navigation	91	Starting route guidance	115	Entering a POI by phone number	142
Important notes	92	Route calculation	115	Today's plan	144
Navigation DVD	93	Recalculating an existing route	115	Adding a destination to today's plan	144
Route guidance after the vehicle has been transported	94	Voice instructions	116	Software Updates	147
Trip interruption during route guidance	95	Navigation displays	117		
Navigation main menu	96	Arriving at destination	119		
Activating the Navigation main menu	96	Cancelling route guidance	120		
Setting the routing mode	98	During route guidance	121		
Saving current location	99	Displaying the soft keys	121	Service	151
		Info menu	122	Service main menu	152
		Selecting a detour	123	Activating the Service main menu	152
		Stopover function	125	SMS*	153
		Saving the current location	128	SMS Received list	153
		Defining route guidance displays	128	Reading SMS message received	154

Tele Aid* 155
 Emergency call system..... 155
 Roadside Assistance..... 155
 Information..... 156

Glossary 165

Index 167

System settings..... 159
System settings 160
 Selecting the time zone 160
 Selecting the language 161
 Switching verification and
 notification tones on and off 162
 Making display settings 163
 Resetting all settings to
 the factory settings 164

Contents

▼ Where to find it

This Operator's Manual is designed to provide support information for you, the COMAND operator. Each chapter has its own guide color to provide fast access to information.

At a glance

Here you will find an overview of all COMAND control elements and system components. If you are operating COMAND for the first time or if you have rented or borrowed the vehicle, this is the chapter you should read first.

Audio

Here you will find all the information on how to use the radio, CD player and CD changer*.

Satellite radio*

This chapter provides information on how to select a station and a program category.

Telephone*

Here you can learn in detail about the many functions of the telephone, how to initiate an emergency call and use the phone book.

Navigation

This chapter provides detailed information on the following topics:

- Destination input
- Route guidance including detour
- Last destinations and destination memory
- POIs
- Today's plan

Service

Here you will find all the information about:

- SMS*
- Tele Aid*

System settings

This chapter provides information on how to adjust COMAND system settings.

Directories

The glossary explains the most important technical terms.

The table of contents and index directory will help you quickly locate the information you need.

Introduction

Symbols

▼ Symbols

You will find the following symbols in these operating instructions:

- * The asterisk identifies optional equipment. Since not all models have the same standard equipment, your COMAND system equipment may deviate from some descriptions and illustrations.

Warning



Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.



Highlights hazards that may result in damage to your COMAND.



Helpful hints or further information you may find useful.

- ▶ This symbol points to instructions for you to follow.
- ▶ A number of these symbols appearing in succession indicates a multiple-step procedure.
 - ▷▷ The continuation symbol marks an interrupted procedure which will be continued on the next page.
 - (▷ page 9) This symbol tells you where to look for further information on this subject.
 - > This symbol is used in the glossary. It indicates that the term immediately following the symbol is also explained in the glossary.
 - Display Messages, menu items or soft key names appearing in the COMAND color display are printed in the type shown here.

▼ Operating safety

Warning



Any alterations made to electronic components and the software can cause malfunctions.

The radio, amplifier, CD changer*, satellite radio*, telephone* and navigation module are interconnected. When one of the components is not operational or has not been removed/replaced properly, the function of other components may be impaired.

This condition might seriously impair the operating safety of your vehicle.

We recommend that you have any service work on electronic components carried out only by qualified personnel.

Warning



In order to avoid distraction which could lead to an accident, the driver should enter system settings with the vehicle at a standstill and operate the system only when road, weather and traffic conditions permit.

Bear in mind that at a speed of just 30 mp/h (approximately 50 km/h), your car is covering a distance of 44 feet (approximately 14 m) every second.

COMAND supplies you with information to help you select your route more easily and guide you conveniently and safely to your destination. For safety reasons, we encourage the driver to stop the vehicle in a safe place before answering or placing a call, or consulting the COMAND screen to read navigational maps, instructions, or downloaded information.

While the navigation system provides directional assistance, the driver must remain focused on safe driving behavior, including attention to traffic and street signs, and should utilize the system's audio cues while driving.

The navigation system does not supply any information on stop signs, yield signs, traffic regulations or traffic safety rules. This always remains your personal responsibility when you drive. DVD maps do not cover all areas nor all routes within an area.

Introduction

At a glance

Radio operating elements

CD operating elements

Satellite radio* operating elements

Telephone* operating elements

Navigation system operating elements

Service operating elements

Menu system

Quick reference COMAND

At a glance

Radio operating elements

▼ Radio operating elements



At a glance

Radio operating elements

	Function	Page
①	Audio menu	34
②	Soft keys (multifunction keys)	
③	Color display with Radio main menu	35
④	1 - 0 , *	
	Station selection	38
	Saving stations manually	40
	Selecting a station from the preset memory	43
⑤	Push the joystick to ◀ , ▶ , ▲ , ▼	
	Function selection ▲ and ▼	
	e.g. Automatic seek tuning	37
	◀ and ▶ e.g. Manual tuning	37
	Press OK to confirm	

	Function	Page
⑥	MUTE Muting	34
⑦	Volume control	28
⑧	PWR Switching on and off	27
⑨,	-SEEK and SEEK+	
⑩	Automatic seek tuning	37
	Manual tuning	37

At a glance

CD operating elements

▼ CD operating elements



P82.86-4147-31US

At a glance

CD operating elements

	Function	Page
①	Audio menu	34
②	Soft keys (multifunction keys)	
③	Color screen with CD changer* main menu	49
	The status bar indicates CD status information	49
④	1 - 0 , *	
	Selecting a CD (CD changer* only)	51
	Track select	52
⑤	Push the joystick to ◀ and ▶	
	Selecting a CD (CD changer* only)	51
	Push the joystick to ▲ and ▼	
	Track select	52
	Press OK to confirm	

	Function	Page
⑥	EJECT	
	Ejecting/loading a CD into the CD drive	45
	i	
	There are two EJECT buttons. One is on the display unit. The other is located left of the CD AUDIO slot behind the display.	
	The CD changer* is located in the glove box.	
⑦	MUTE	
	Muting	55
⑧	Volume control	28
⑨	PWR Switching on and off	27

	Function	Page
⑩,	-SEEK and SEEK+	
⑪	Track select	52
	Fast forward/reverse	54

At a glance

Satellite radio* operating elements

▼ Satellite radio* operating elements



P82.86-4148-31US

	Function	Page
①	Satellite radio main menu	62
	Switching satellite operation on and off	62
②	Soft keys (multifunction keys)	
③	Color screen with Satellite radio main menu	62
④	1 - 0 , *	
	Station selection via direct channel entry	64
	Saving stations manually	65
⑤	Push the joystick to ◀, ▶, ▲, ▼	
	Function selection Press OK to confirm	
⑥	MUTE	
	Muting	62

	Function	Page
⑦	Volume control	28
⑧	PWR Switching on and off	27
⑨,	-SEEK and SEEK+	
⑩	Previous or next channel	63

At a glance

Telephone* operating elements

▼ Telephone* operating elements



At a glance

Telephone* operating elements


	Function	Page
①	TEL Telephone menu Switching telephone operation on and off	78 74
②	Soft keys (multifunction keys)	
③	Color screen with Telephone menu	
④	1 - 0 , # and * Entering codes • the unlock code • the PIN code Entering a telephone number Subsequent dialing Speed-dialing Quick-dialing	77 77 77 81 82 85 85

	Function	Page
⑤	Push the joystick to ◀, ▶, ▲, ▼ Function selection Press OK to confirm	
⑥	SEND Accepting a call Making a call Redialing	80 82 82
⑦	END Rejecting or ending a call	80, 80
⑧	Volume control	28
⑨	PWR Switching on and off	27

At a glance

Navigation operating elements

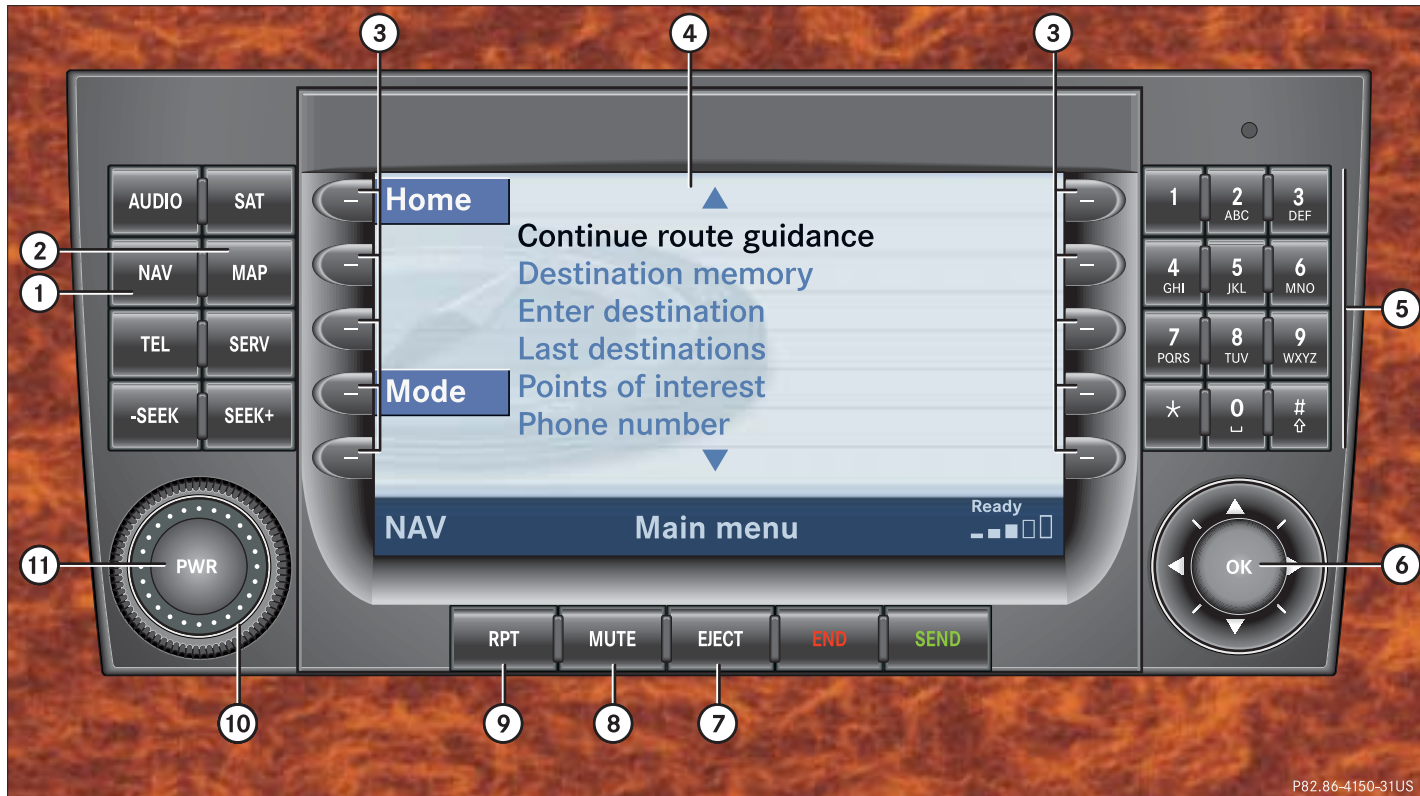

▼ Navigation operating elements



At a glance

Navigation operating elements

	Function	Page
①	NAV Navigation main menu During route guidance: Change over to navigation display Cancelling route guidance	96 117 120
②	MAP Switches to map display Changing the map display (split and full view)	117 119
③	Soft keys (multifunction keys)	
④	Color screen with Navigation main menu	96
⑤	Entering a house number Entering a POI by phone number	103 142

	Function	Page
⑥	Push the joystick to  Function selection, Scrolling on map Press OK to confirm	
⑦	EJECT Updating software/ changing map data  There are two EJECT buttons. One is on the display unit. The other is located left of the DVD NAVIGATION slot behind the display.	147






	Function	Page
⑧	MUTE During a voice instruction: Muting current voice instruction Switching off voice instructions	116 116
⑨	RPT Repeating current voice instruction Switching on voice instructions	116 116
⑩	Volume control	28
⑪	PWR Switching on and off	27

At a glance

Service operating elements

▼ Service operating elements



	Function	Page
①	SERV Service main menu	152
②	Soft keys (multifunction keys)	
③	Color screen with Service main menu  The SMS soft key appears if the vehicle is equipped for phone operation and a Mercedes-Benz specified mobile telephone* is inserted in phone cradle*.	152
④	Push the joystick to  ,  Function selection Press  to confirm	
⑤	 Switching on and off	27

At a glance

Menu system

▼ Menu system

The menu system allows for easy operation of COMAND.

Main menus are provided for the following main functions:

- Audio (radio, CD, CD changer*)
- Satellite radio*
- Telephone*
- Navigation
- Service

Calling up main menus

Main function	Activating main menu
Audio (▷ page 34)	▶ Press AUDIO .
Satellite radio* (▷ page 62)	▶ Press SAT .
Telephone* (▷ page 78)	▶ Press TEL .
Navigation (▷ page 96)	▶ Press NAV .
Service (▷ page 152)	▶ Press SERV .

Menu display

A display may consist of three areas.

Example: FM menu



P82.86-4154-31US

- ① Soft keys area
- ② Main area
- ③ Status bar

The functions currently assigned to the soft keys are displayed in the soft key sections ①.



A maximum of five soft keys may be displayed on each side of the main area ②.

The main area ② shows messages and settings. You can change the settings by operating the system.

The status bar ③ is divided into three areas.

Left side:

The current operating mode is indicated. In this example: Radio

Center:

The status of the current operating mode or other selectable functions are indicated.


In this example:

- FM = current waveband
- 1 = memory location of station, e.g. "1"

Right side:

General status information is indicated independent of the operating mode.

In this example:

- Ready = Telephone* is ready for operation
-  = Reception strength of the mobile phone*

At a glance

Menu system

Menu functions and submenus

Using the soft keys, functions can be switched ON or OFF, or submenus can be called up.

E.g. the radio menu:



- The FM/AM soft key switches between FM and AM band.
- The Scan soft key starts/stops the channel scan.

At a glance

Menu system

In some situations, soft keys may not have any function and are not operational. A soft key without function appears shaded out.

E.g.: Soft keys on the left and right side



P82.86-4156-31US

Exiting from submenus

Use the Back soft key ① to exit a submenu. The display switches to the next higher menu level.

The system does not accept setting modifications which have not been stored. There are exceptions where pressing the Back soft key will also store new settings. These exceptions, whenever applicable, are referenced on the following pages.

▼ Quick reference COMAND



You have the following options to control the system:

- at the COMAND
- at the multifunction steering wheel (refer to vehicle Operator's Manual)

This Operator's Manual describes the control at the COMAND.

Unless otherwise indicated, the descriptions and illustrations refer to the COMAND.

Switching the COMAND control unit on and off

Switching on



For an explanation of starter switch positions, refer to vehicle Operator's Manual.

- ▶ Turn the key in the starter switch to position 1 or 2 if the COMAND was switched off by turning the key in the starter switch to position 0 and removing it.

or

- ▶ Press .

In both cases, the system will activate the operating mode which was active when the system was switched off.



If the key is not in the starter switch in position 1 or 2, the system will automatically stop after around 30 minutes.

Switching off

- ▶ Turn the key in the starter switch to position 0 and pull the key out.

or

- ▶ Press .

Volume

When the audio is playing, the volume knob will adjust the audio volume, and also the volume for telephone and navigation.

During a telephone call (talking or ringing), the volume knob will adjust the telephone voice and ringer volume.


The volume for the navigation announcements can only be changed while an announcement is being made.

When you adjust the volume, the system will automatically store the setting for the current operating mode.



At a glance

Quick reference COMAND

Adjusting the volume

- ▶ At the COMAND, turn the rotary control at the  key.

or

- ▶ Press  or  on the multifunction steering wheel.

The volume is turned up or down depending on the direction of rotation or the key pressed on the multifunctional steering wheel.

The system remembers the volume setting when it is switched off.



When the system is switched on again, the volume may be lower or higher than at the time when the system was switched OFF.

This will be the case when the volume was adjusted to a value outside a certain range when the system was switched off.

Automatic volume control

The automatic volume control feature adjusts the volume depending on:



- vehicle speed (only in vehicles without premium sound system*)

or

- ambient noise inside the vehicle (only in vehicles with premium sound system*)

Balance and fader

Common balance and fader settings apply to the following systems:

- Radio operation
- CD operation (CD )
- CD changer* operation (CD )
- AUX
- Satellite radio*


When you make balance or fader settings, the system will automatically save the settings for the current operating mode and others.

Setting balance and fader

In any audio source operation:

- ▶ Press the Bal/Fad soft key.

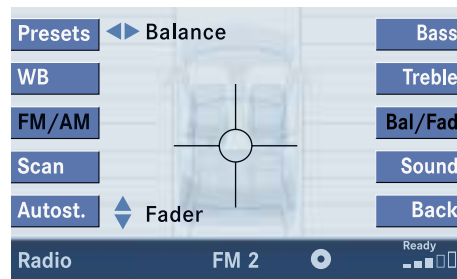

Cross-hairs are displayed. The horizontal hair line indicates the balance setting. The vertical hair line indicates the fader setting. You can now make balance and fader settings.





P82.86-4157-31US

At a glance

Quick reference COMAND



- ▶ Push the joystick to  or .
- Move the cross-hairs horizontally and adjust the balance.


or

- ▶ Push the joystick to  or .

Move the cross-hairs vertically and adjust the fader.



Push the joystick to  and  to move the cross-hairs simultaneously in vertical and horizontal direction.

- ▶ Press  or the Back soft key.

or



- ▶ Wait until the display changes.
- The new setting is saved.

At a glance

Quick reference COMAND

Bass and Treble

Different bass and treble settings are possible for the following operating modes:

- Radio: FM-, AM- and Weather (WB) bands
- Single CD (CD ) and CD changer* (CD )
- AUX
- Satellite radio*


When you adjust bass or treble, the settings apply to other sources within the group, but not to the other modes. For example, if you adjust the bass while listening to FM, that same bass level applies to AM and Weather band, but not to satellite radio* or CD.

Activating the Bass or Treble menu




In any audio source operation:

- ▶ Press the Bass or Treble soft key.
The Bass or Treble menu will appear.

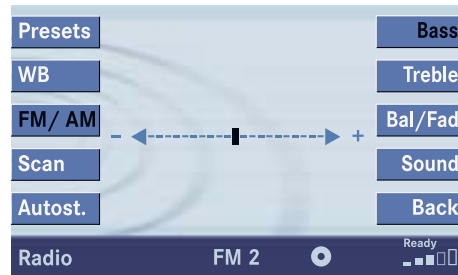Making Bass and Treble settings



P82.86-4158-31US



- ▶ Push the joystick to  or .
Bass or Treble is adjusted.
- ▶ Press  or the Back soft key.
or
- ▶ Wait until the display changes.
The new setting is saved.



Press the Bass or Treble soft key and keep it depressed to move the cursor continuously. Release the soft key to set the current value.

Sound functions*

If your vehicle is equipped with the premium sound system*, the sound functions* will be available for the following operating modes:

- Radio: FM-, AM- and Weather (WB) bands
- Single CD (CD ) and CD changer* (CD )
- AUX
- Satellite radio*

The following sound functions* are available:

- Default Settings:
COMAND sets the default settings (Bass, Treble, Bal/Fad) for the active source mode.
- Standard:
COMAND sets the sound linear for the center of the vehicle.

- Speech:
Playback optimized for language comprehensibility.
- LOGIC7 Surround:
Surround playback.

You can use different sound functions* for the modes mentioned above.

E.g.:

For radio operation the function Standard, for CD operation the function LOGIC7 Surround.



LOGIC7 Surround sound offers a sound quality superior to conventional stereo sound.

If the radio reception is poor, the system should be switched back to standard stereo playback. Switching back to standard stereo playback may improve reception quality.

Activating the sound functions*

In any audio source operation:

- ▶ Activate the main menu for the respective operating mode (▷ page 24).
- ▶ Press the Sound soft key.
The Sound menu will appear.



P82.86-4159-31US

At a glance

Quick reference COMAND

- ▶ Push the joystick to ▲ or ▼ to select the desired function.
- ▶ Press **OK**.
The function is activated.

At a glance

Audio

Radio operation

CD operation

AUX operation

Audio

Radio operation

▼ Radio operation

In chapter “Audio” you will find detailed information regarding

- radio operation
- CD operation (CD drive, CD changer*)
- AUX operation

If you have not done so already, please familiarize yourself with these functions by reading chapter “At a glance”.

Warning



In order to avoid distraction which could lead to an accident, the driver should enter system settings with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

Opening the Audio menu


- ▶ Press **AUDIO**.



P82.86-4160-31US

Audio menu



The **CD**  soft key is available if a CD changer* is connected to the COMAND.

- ▶ If an audio submenu is displayed, press the **Back** soft key until the Audio menu is displayed.

or

- ▶ Press **AUDIO** again.


Selecting an audio source

- ▶ In the Audio menu, press the soft key for the desired audio source.

Muting

Switching On

- ▶ Press **MUTE**.

The system mutes the active audio source and the  symbol is displayed in the status bar. The soft keys on the left side are greyed out in some submenus.

Switching off

- ▶ Press **MUTE** again.

or

- ▶ Turn the rotary control at the **PWR** key to adjust the volume.

or

- ▶ Press **-SEEK** or **SEEK+**.

The soft keys on the left side are selectable again.

Switching to radio operation

- ▶ In the Audio menu, press the Radio soft key.

The Radio main menu will appear. The station last tuned to will begin to play.



P82.86-4154-31US

Radio main menu

- ① Soft key assignment
- ② Main area
- ③ Status bar

Switching back to the Audio menu

- ▶ Press the Back soft key.



The Sound soft key is available if COMAND is equipped with a sound amplifier*.

Changing the Radio band

You can select between FM-, AM- and WB-Band.

AM Band

- ▶ In the FM Radio main menu, press the FM/AM soft key until “AM” is displayed in the status bar.



P82.86-4161-31US

The AM station last tuned to will begin to play. The frequency will appear in the display.

Switching back to FM band

- ▶ Press the FM/AM soft key.

The station last tuned to will begin to play.

Frequency band	Frequency range
FM	87.7 - 107.9 MHz
AM	530 - 1710 kHz

Audio

Radio operation

Weather Band WB

- ▶ In the FM or AM Radio main menu, press the WB soft key.

An automatic scan is starting and the COMAND plays and displays the channel of the first strong WB station.



P82.86-4162-31US



With the number keys **1** - **7** PQRS it is possible to choose a channel.

The message `No channel` will appear if the system could not detect a channel.

Switching back to FM or AM band

- ▶ Press the FM/AM soft key.

or

- ▶ Press the WB soft key

The station last tuned to will begin to play.

Switching back to the Audio menu

- ▶ Press the Back soft key.

The Weather Band WB station will continue to play.

Selecting a station

You can use the following functions:

- Automatic seek tuning (▷ page 37)
- Manual tuning (▷ page 37)
- Station selection from the preset menu (▷ page 38)
- Station selection via direct frequency entry (FM, AM) (▷ page 37)
- Automatic station scan (FM, AM) (▷ page 38)
- Station selection from the FM/AM Autostore presets (▷ page 43)

Automatic seek tuning

- ▶ Press **SEEK** or **SEEK+**.
- or
- ▶ Push the joystick to **▲** or **▼**.

FM- and AM-Bands, Weather Band WB

The radio will tune in to the next receivable station (FM, AM) or channel (WB) with descending/ascending frequency depending on the direction of seek.

WB

Alternatively, you can select the channel directly:

- ▶ Press a number key **1** through **7** POR.S.



The selected channel is not shown in the status line.

Manual tuning (FM, AM)

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press **SEEK** or **SEEK+** longer than 2 seconds.

The function is active.

- ▶ Press **SEEK** or **SEEK+** repeatedly to change the frequency step by step.

or

- ▶ Push the joystick to **◀** or **▶**.

Each handling will change the frequency by one step.

FM Band

The frequency displayed will change in increments of 0.2 MHz.

AM Band

Tuning will take place in increments of 10 kHz.

Audio


Radio operation

Station selection via direct frequency entry (FM, AM)

E.g.: 102.7 MHz in the FM band

- ▶ Activating the desired wave band (▷ page 35).
- ▶ Press *****.

An input line will appear.

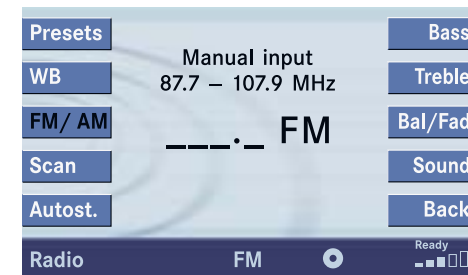

P82.86-4168-31US

Audio

Radio operation

- ▶ Enter the desired frequency with the number keys within 8 seconds, e.g.

 for 102.7 MHz.

The station you have selected will begin to play.

Frequency band	Frequency range
FM	87.7 - 107.9 MHz
AM	530 - 1710 kHz

FM, AM band


Entries outside the frequency range are not accepted. The message **Please observe frequency range 87.7 - 107.9 MHz** will appear briefly.



If you do not make another entry within 8 seconds, the function will be canceled and you will continue listening to the station last tuned to.

Station selection via number keypad (presets)

FM- and AM-Bands

- ▶ Press one of the number keys, such as  briefly.

The radio will tune to the frequency assigned to that memory location. If none has been set by you, the radio will not change the station.



FM and AM presets are independent and can only be accessed while in the corresponding band.

Saving stations for FM and AM ([▷ page 40](#)).

Automatic station scan (FM, AM)

The stations on same band (FM, AM) can be scanned one after the other for 8 seconds each.



In the AM band, two search runs take place. During the first run, stations with good reception are played. During the second run, stations with weaker reception are played.

Start scan function

- ▶ Activate the desired wave band ([▷ page 35](#)).
- ▶ Press the **Scan** soft key.



P82.86-4165-31US

The scan function will begin.

End scan function and play a station

- ▶ Press the Scan soft key again if you hear the desired station.

or

The scan function stops automatically when the first station received has been scanned twice.

Audio

Radio operation

Memory functions

You can use the following functions:

- Saving stations manually (FM, AM)
- Saving stations automatically FM, AM (▷ page 42)
- Selecting a station from the FM/AM preset menu (▷ page 43)
- Selecting a station from the FM/AM Auto presets (▷ page 43)

Saving stations manually (FM, AM)

In the Radio main menu

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press one of the number keys, e.g. **2**_{ABC}, longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 162).

The radio saves the current station at the memory preset selected. The memory preset selected will appear in the status bar, e.g. FM2.




There are 10 presets available (**1** - **9**_{wxyz}, **0**₀).

An existing entry is overwritten in the memory list when a new input is given.

On the memory list

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press the Presets soft key.
The memory Preset menu will appear.

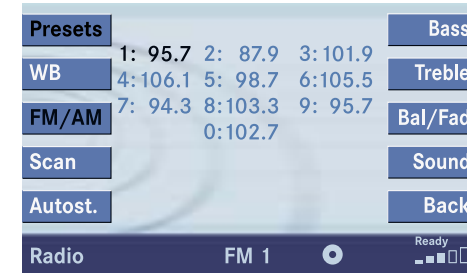

P82.86-4163-31US

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight the desired memory preset.

- ▶ Press **OK** longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 162).

The current station will be saved at the memory preset selected.

You will see the Radio main menu

- automatically after 8 seconds
- if you press the **Back** soft key.



There are 2 presets for each of the FM and AM waveband

- standard FM/AM presets (saving stations manually) and
- Auto presets (saving stations automatically).

The standard FM/AM presets are not affected by the Auto presets. This is a second option for storing a station range you are currently receiving.

Audio

Radio operation

Saving stations automatically (FM, AM)

- ▶ Activate the desired wave band (▷ page 35).
- ▶ Press the *Autost.* soft key.

The autostore preset menu will appear.



P82.86-4164-31US

- ▶ Press **OK** to start *Begin new search*.

The autostore function is active. The message *Autostore being reloaded will appear*. The radio stores the 10 stations with the strongest signal. The station frequencies available will appear in the memory list.



There are max. 10 presets available (1 - 9 WXYZ, 0).

The autostore function assigns the stations to the memory locations in the order of their reception quality. The strongest station is available on preset 1. The number of available stations depends on the stations available in the area the vehicle is operated in.

Selecting a station from the preset menu (FM, AM)

- ▶ Activate the FM or AM memory (▷ page 40).

You can use one of the following two ways to select a station from the FM/AM presets

- ▶ Press the corresponding number key, e.g. **3 DEF**, to select the desired station.

or

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight a memory preset in the FM/AM preset list (▷ page 40).

- ▶ Press **OK**.

In both cases, you will see the main radio menu

- automatically after 8 seconds
- if you press the **Back** soft key.

The Radio main menu indicating the memory preset number.

Selecting a station from the FM/AM autostore presets

- ▶ Activate the FM or AM autostore preset menu (▷ page 42).

You can use one of the following two ways to select a station from the FM/AM autostore presets

- ▶ Press the corresponding number key, e.g. **3 DEF**, to select the desired station.

or

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight a memory position.

- ▶ Press **OK**.

In both cases, you will see the main radio menu

- automatically after 8 seconds
- if you press the **Back** soft key.

Audio

CD operation

▼ CD operation

General Information on CD operation

Warning



In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.

Health hazard



The CD drive and CD changer* are Class 1 laser products. There is a danger of invisible laser radiation when you open or damage the cover.

Do not remove the cover. The CD drive and the CD changer* do not contain any parts which can be serviced by the user. For safety reasons, have any necessary service work performed by qualified personnel.



COMPACT
disc
DIGITAL AUDIO

Only use CDs, which bear the label shown and that conform to the compact standard (IEC 60908). You can therefore only use CDs with a maximum thickness of 1.3 mm.



The system may not be able to play CDs with copy protection or copied CDs.



Use only CDs with a diameter of 12 cm, do not use 8-cm CDs.

An 8-cm CD adapter may cause damage to the CD drive and to the CD changer* and **should not** be used.



Your CD drive has been designed to play CDs which correspond to the EN 60908 standard.

If you insert thicker data carriers, e.g. ones that have data on both sides (one side with DVD data, the other side with audio data), they cannot be ejected and will damage the drive.

Tips on caring for your CDs

- Only touch the CD on the sides.
- Avoid touching the CD surface with your fingers.
- Clean the CD with a dry, lint-free cloth. Wipe them from the inside to the outer edge. Never wipe the CD in a circular motion.
- Do not use rubbing alcohol or solvents to clean the CDs.
- Do not expose the CDs to heat or direct sunlight.
- Do not write or put stickers on CD.

Loading CDs

Warning



In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.

Ejecting/loading a CD into the CD drive



There are two **EJECT** buttons. One is on the display unit. The other is located left of the CD AUDIO slot behind the display, see next page.

Audio

CD operation



- ① Ejecting audio CD
- ② Opening/closing the display unit
- ③ Warning message Press EJECT to close

Warning



The display unit can cause injury if contacted when open. Please close after inserting an audio CD.



Do not place anything on the lowered display panel. Placing objects on the lowered display panel may result in damage to the display or COMAND unit which is not covered by the Mercedes-Benz Limited Warranty.

- ▶ With the COMAND switched on, press **EJECT**.

The display unit moves forward and then tilts down. The CD AUDIO slot is visible.

- ▶ Press the **EJECT** button left of the CD AUDIO slot to eject a CD already loaded.
- ▶ Remove the CD from the slot.
- ▶ Insert a CD into the slot. The CD should be inserted with the label side up.

The COMAND pulls the CD in.



Inserting a second CD with another CD still loaded will cause damage to the CD drive which is not covered by the Mercedes-Benz Limited Warranty.

Audio

CD operation

- ▶ Press **EJECT** on the display unit to return the display unit to its closed position.

The display unit tilts up and then moves to the rear.

Playback begins with track number one.



The message `Press EJECT to close` will appear. If **EJECT** on the display unit is not pressed within 20 seconds, eight successive series of two beep tones will sound to remind you to return the display to its closed position by pressing **EJECT** on the display unit. The active audio source will be muted until the display has been returned to its closed position.

The message `CD error` will appear if there is a media error.


- ▶ Remove the CD or switch to another operation.

Audio

CD operation

Loading CDs into the CD changer*

The CD changer* is located in the glove box. Open panel cover to access the CD changer*.

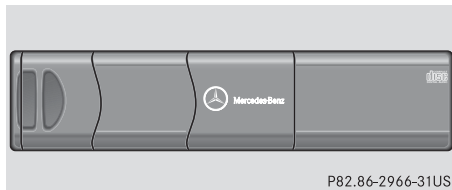

Removing the magazine:

- ▶ Slide the cover of the CD changer* open.
- ▶ Press the green **EJECT** button on the CD changer*.

The magazine will slide out. The message *No magazine* will appear on the COMAND.



You can also slide out the magazine if COMAND is switched off.

However, the **EJECT** button will not function if the vehicle battery is not connected or discharged.

Inserting CDs:

- ▶ Pull the disk tray forward until it stops.
- ▶ Place a CD in the tray. The CD should be inserted with the label side up.
- ▶ Push the CD tray into the magazine completely.
- ▶ Repeat these three steps to load more CDs into the magazine.

Reading the magazine in:

- ▶ Slide the magazine into the CD changer* until it clicks into place (listen for the click).



When you push the magazine in, the arrow on the upper side of the magazine must point in the direction of the CD changer*.

- ▶ Slide the cover of the CD changer* closed.

Switching to CD operation

Playback locations for audio CDs are:

- the CD drive in the COMAND
- the CD changer*.

CD drive



The CD drive is located behind of the display unit (▷ page 46).

CD changer*



The CD changer* can accommodate up to 6 audio CDs. The CD changer* is located in the glove box.

If a CD changer* is connected to the COMAND, the CD soft key is available.

- ▶ In the Audio menu (▷ page 34), press the CD or the CD soft key.



P82.86-4170-31US

CD changer* main menu

- ① CD number or name of the CD currently playing
- ② Track number or name of the track currently playing
- ③ CD - CD changer*
CD - CD drive
Actual track number/max. track number on CD and elapsed playback time
- ④ Symbol for inserted CD



The Magaz. soft key is only assigned when the CD changer* is active.

If the CD changer* has already read the magazine, the Magazine menu will appear (▷ page 52) when you press the Magaz. soft key.


Otherwise the message Magazine scan Please wait will appear first.

Audio

CD operation

Switching on


CD drive

- ▶ Activate the Audio menu (▷ page 34).
- ▶ Press the CD  soft key.

The CD main menu is displayed.

If no audio CD has been inserted, the message *No CD inserted* will appear.

- ▶ Load an audio CD into the CD drive (▷ page 45).

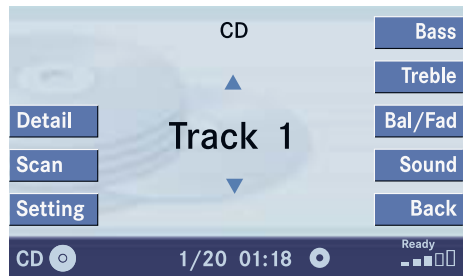

P82.86-4171-31US


CD main menu




The name of the CD and the name of the track played are displayed if the information is available.


CD changer*



The CD  soft key is available if a CD changer* is connected to the COMAND.

- ▶ Activate the Audio menu (▷ page 34).
- ▶ Press the CD  soft key.

The CD changer* main menu will appear. The CD last played is played back.

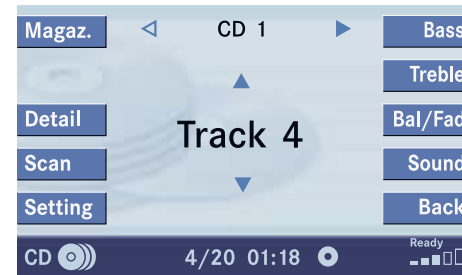

P82.86-4172-31US

CD changer* main menu

If the last played CD is not available, the next available audio CD is played back.



The name of the CD and the name of the track played are displayed if the information is available.

No CD in the magazine:

The message *Magazine empty* will appear.

- ▶ Load audio CDs into the CD changer* (▷ page 48).

Selecting a CD (CD changer* only)

You can select a CD:

- in the CD list (▷ page 51)
- with the number keypad (▷ page 51)
- in the magazine menu (▷ page 52)


In the CD list



Selection is possible if the CD changer* has loaded the magazine (COMAND knows the position of filled and empty slots) and at least two audio CDs are loaded.

The CD list includes all loaded CDs. Only one list entry is visible at a time.

The entry is displayed above the track indication. It shows the number of the CD currently playing.

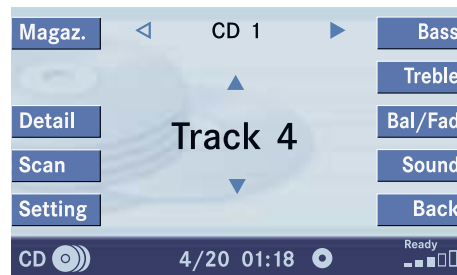

P82.86-4172-31US

Audio

CD operation

- ▶ Push the joystick to ◀ or ▶ to select another CD from the list.

After the CD is loaded, it is played back.

or

- ▶ Do not change the selection.

Playback of the last played CD is continued.

With the number keypad



The number keys **1** - **6** can be used for direct selection.

Keys **1** - **6** magazine slots 1 to 6 of the CD changer*

Audio

CD operation

- ▶ Press a number key, e.g. **2** ABC to select the corresponding CD.

The CD is changed. The selected CD is played back.

The message No CD <number> will appear if a selected slot is empty.

In the Magazine menu

- ▶ Press the **Magaz.** soft key.

The Magazine menu is displayed. If the magazine has not been read in, the message Magazine scan Please wait is displayed first.



P82.86-4173-31US



The name of the CD instead of e.g. CD1 is displayed if the information is available.

- ▶ Push the joystick to **▲** or **▼** to select a CD.
- ▶ Press **OK**.

or

- ▶ Press one of the number keys **1** to **6** MNO.

The CD is changed. The message Loading CD <number> will appear.

Track select

You can select a track:

- with **-SEEK** or **SEEK+** (▷ page 52)
- with the joystick (▷ page 53)
- with the number keypad (▷ page 53)
- with CD track scan (▷ page 53)

With **-SEEK** or **SEEK+**

- ▶ Activate the main CD menu (▷ page 49).

Next track

- ▶ Press **SEEK+**.

The next track is played.

Previous track or start of title (if more than 10 seconds of playing time has elapsed)

- ▶ Press **SEEK-**.
Playback begins.

Select any desired track


- ▶ Press **SEEK-** or **SEEK+** as often as necessary.

With the joystick

- ▶ Push the joystick to **▲** or **▼** to play the next or previous track.

With the number keypad

- ▶ Activate the CD main menu (▷ page 50).
- ▶ Press *****.
An input line will appear in the CD main menu.

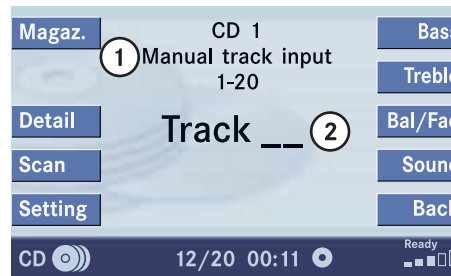

P82.86-4175-31US

① Number of tracks on CD corresponds with the valid number range

② Input line

E.g.: Track 14.

- ▶ Press **1** and **4** in short succession.

Audio

CD operation



Entries higher than the number of tracks available on the CD are not possible.

- ▶ After entering the track number, wait approximately 3 seconds.

The selected track is played. The CD main menu is displayed.

CD track scan


The tracks on a CD can be scanned one after the other for 8 seconds each. The function will switch off automatically when the starting track is reached. You can also manually stop the scan function.

Audio

CD operation

Activating

- ▶ Press the Scan soft key.
Scan will begin.

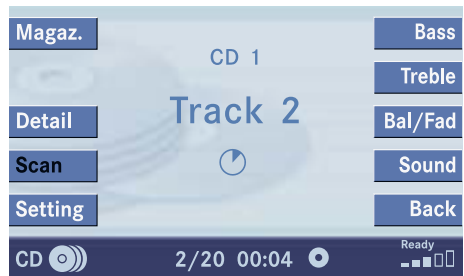

P82.86-4176-31US



When you start the scan function, the playback mode Normal sequence (▷ page 57) is automatically activated.

Ending the function

Scan search is running.

- ▶ Press the Scan soft key.
- or
- ▶ Press **OK**.

Playback will resume with the desired track.

Fast forward/reverse

Fast forward

- ▶ Press **SEEK+** longer than 2 seconds and keep it pressed.

Fast reverse


- ▶ Press **-SEEK** longer than 2 seconds and keep it pressed.

Ending the function

- ▶ Release **SEEK+** or **-SEEK**.
Playback will resume.


Muting**On**

- ▶ Press **MUTE** during playback.

The CD operation is muted and the  symbol is displayed in the status bar. The soft keys on the left side are greyed out in some submenus.

Off

- ▶ Press **MUTE** again.

Playback will resume. The  disappears from the status bar. The soft keys on the left side are selectable again.



COMAND will also deactivate muting if you

- press **AUDIO** to select another audio source
- change the volume
- press either **-SEEK** or **SEEK+**.

Playback mode

The following options are available:

- Normal sequence (▷ page 57)
- Track mix (▷ page 57)
- CD mix (▷ page 57)
- Repeat track (▷ page 57)
- Repeat CD (▷ page 57)



If the CD changer* is connected, the playback modes Repeat CD and CD mix are available additionally.

Audio


CD operation

Activating playback mode

E.g.:

Mode Repeat track

- ▶ Press the Setting soft key.
The setting menu will appear.

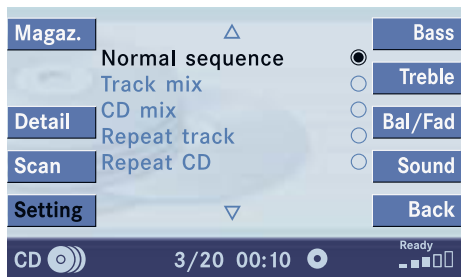

P82.86-4177-31US

CD changer* setting menu

- ▶ Push the joystick to ▲ or ▼ to select the playback mode Repeat track.
- ▶ Press **OK**.

The mode is activated. The CD changer* main menu will then appear. REPEAT TRACK will appear in the status bar.



The playback mode Normal sequence is not displayed in the status bar.

Explanation of the playback modes

- Normal sequence

Tracks are played in ascending order (e.g. 1, 2, 3 and so on). If just one CD is inserted, the first track is played when the last one is over.

If more than one CD is available, the first track of the next CD is played when the last track of the current CD is over. The CDs are changed in normal order.

- Track mix

Tracks are played in random order. If more than one CD is available, the next available CD is played when the current CD is over. The CDs are changed in normal order.

- CD mix (CD changer* only)

At least 4 tracks of any CD are played in random order. Then follows the next available CD. The CDs are changed in random order.

- Repeat track

The system repeats the current track until you switch the function off.

- Repeat CD (CD changer* only)

The system repeats the current CD until you switch the function off.

Audio

AUX operation

▼ AUX operation



An external audio source can be connected to the COMAND.

For further information please contact an authorized Mercedes-Benz Center.

- ▶ Open the Audio menu (▷ page 34).
- ▶ Press the AUX soft key.

The AUX menu is displayed. The external audio source is played back if it is connected and switched to playback.



P82.86-4178-31US



For instructions on how to operate the external audio source, please see the operation manual of the device connected.

At the COMAND, you can set the following for the AUX operation:

- Volume (▷ page 27)
- Balance control and fader (▷ page 29)
- Bass and treble control (▷ page 30)
- Sound functions* (▷ page 30)

Satellite radio*

Important notes

Subscribing

Satellite radio operation

Satellite radio*

Important notes

▼ Important notes

In chapter “Satellite radio”, you will find detailed information regarding

- selecting a station and a program category
- memory functions
- sound adjustments

If you have not done so already, please familiarize yourself with these functions by reading chapter “At a glance”.



Additional optional satellite radio equipment and a subscription to satellite radio service provider are required for the satellite radio operation described here. Feature description is based on preliminary information available at time of printing. At time of printing, no date for the availability of optional equipment required for satellite radio operation had been set. Contact your authorized Mercedes-Benz Center for details and availability for your vehicle.



Note that categories and channels shown in illustrations are dependent on programming content delivered by the service provider. Programming content is subject to change. Therefore, channel and categories shown in illustrations and descriptions contained in this manual may differ from the channels and categories delivered by the service provider.

Satellite radio service may be unavailable or interrupted from time to time for a variety of reasons, such as environmental or topographic conditions and other things we can't control. Service might also not be available in certain places (e.g., in tunnels, parking garages, or within or next to buildings) or near other technologies.



Sirius Satellite Radio provides approximately 100 channels, so called streams, of digital-quality radio, among others music, sports, news, and entertainment commercial-free.

Sirius Satellite Radio uses a fleet of high-power satellites to broadcast 24 hours per day, coast-to-coast.


This diverse, satellite-delivered programming is available for a monthly subscription fee. For more information, call the Sirius Service Center (▷ page 61) or contact www.siriusradio.com.

▼ **Subscribing**

Subscribing to satellite radio

- ▶ Press **SAT** to switch to satellite radio operation.

The Satellite radio main menu will appear and displays the Preview channel. You cannot select any other station.

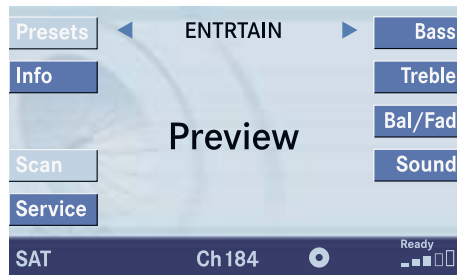

P82.86-4182-31US

- ▶ Press the **Service** soft key to display the Service information display.

The Service information display will appear.



Depending on subscription status, soft keys may or may not appear on the left and right side of the service information display.



Service information display

- ① Phone number of the provider, (SIRIUS) or “Call Service Provider”
 - ② The Electrical Serial Number (ESN) of your satellite receiver
- ▶ Contact satellite radio service provider at the telephone number displayed in the screen.

After the connection is made:

- ▶ Follow the instructions given by the operator.

The activation process may take up to 10 minutes. If it is successful, you will see the display with the message *Acquiring Signal...* (▷ page 62) followed by the Satellite radio main menu (▷ page 62).



Credit card information may be required for your application.

The activation process takes up to approximately 10 minutes.

If a satellite receiver is not installed or not properly installed:

The message *No Satellite Radio* will appear.

Satellite radio*


Satellite radio operation

▼ Satellite radio operation

Switching on

See “Subscribing to satellite radio” for important subscription information (▷ page 61).

- ▶ Press **SAT** to switch to satellite radio operation.

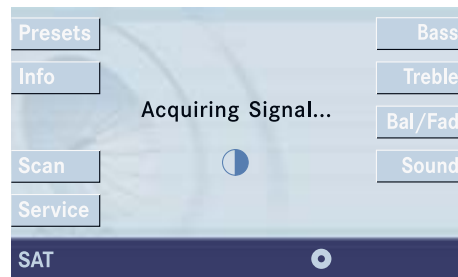


The message will appear at start up or when the signal is not available.



No Satellite receiver:

The message No Satellite Radio will appear in a window.

After the COMAND acquires the signal, the Satellite radio main menu will appear. The station last tuned to will begin to play.

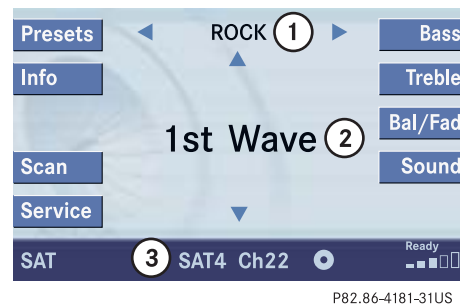

Satellite radio main menu

- ① Program category
- ② Station name
- ③ Memory preset selected if available and channel number



The Sound soft key is available if COMAND is equipped with a sound amplifier*.




You can display ② in full:


- Station information (▷ page 66)

Muting

- ▶ Press **MUTE** while listening to the satellite radio.

The symbol  will appear in the status bar.

- ▶ Press **MUTE** again to resume listening to the current station.

The symbol  will have disappeared.



Muting will also be canceled if you switch to an audio source, e.g. normal radio, or if you alter the volume.

Changing the program category

Satellite radio stations are split up into categories. You can select between various categories such as News, Sports News and Country Music, if available. The category list is sorted alphabetically.

Selecting a program category

- ▶ Push the joystick to **◀** or **▶** while the Satellite radio main menu (▷ page 62) is being displayed.

The previous or next program category (alphabetical order) will appear in the display. The station last tuned in the new category will begin to play.

At the beginning of the category list the category ALL will appear. This category is sorted numerically (by channel numbers) and displays all available channels.

Selecting a station

You can use the following functions:

- Automatic tuning
- Automatic station scan (▷ page 63)
- Station selection via direct channel entry (▷ page 64)
- Station selection from the preset menu (▷ page 66)

Automatic tuning

- ▶ Push the joystick to **▲** or **▼** while the Satellite radio main menu is being displayed.

or

- ▶ Press **-SEEK** or **SEEK+**.

The satellite radio will tune in to the numerically previous or next receivable station in the selected category.

Satellite radio*

Satellite radio operation

Automatic station scan

The stations in the selected category can be scanned in numerical order for 8 seconds each.

- ▶ In the Satellite radio main menu, press the Scan soft key.

The scan function will begin.



P82.86-4184-31US

Satellite radio*

Satellite radio operation

Ending scan function and playing a station


- ▶ Press the Scan soft key again.

The station selected will appear with the station name. Scan will appear in white lettering again.

Station selection via direct channel entry

- ▶ Press *****.

Input line will appear.

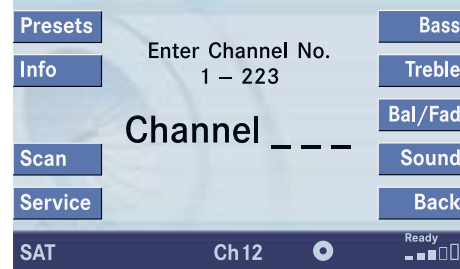

P82.86-4183-31US

- ▶ Enter the desired channel number with the number keys, e.g. **2** **4** for channel 24.

The channel you have selected will begin to play. The corresponding station name will appear, if station is available.

Memory functions



There are 10 presets available.

You can use the following functions:

- Saving stations manually
- Selecting a station from the Satellite preset memory (▷ page 66)
- Selecting a station by entering the channel number (▷ page 64)

Saving station manually

In the Satellite radio main menu

- ▶ Press one of the number keys, e.g. **2** longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 162).

The satellite radio saves the current station at the memory preset selected. The memory preset selected will appear in the status line, e.g. SAT2.

On the memory list

- ▶ In the Satellite radio main menu, press the **Presets** soft key.
The SAT preset memory will appear.

Satellite radio*

Satellite radio operation



P82.86-4185-31US

Satellite preset memory

- ▶ Push the joystick to **▲** or **▼** to select a memory preset.
- ▶ Press **OK** longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 162).

The satellite radio saves the current station at the memory preset selected.

Satellite radio*

Satellite radio operation



An existing entry is overwritten in the memory list when a new input is given.

If the message *Updating station list* appears the presets may be overwritten.

You will see the Satellite radio main menu

- automatically after 8 seconds
- if you press **BACK**.

Selecting a station on the memory list

- ▶ In the Satellite radio main menu, press the **Presets** soft key.

The Satellite preset memory (> page 65) will appear.


- ▶ Push the joystick to **▲** or **▼** to highlight a memory preset.
- ▶ Press **OK**.

The Satellite radio main menu will then appear automatically after 8 seconds, indicating the memory preset number in the status line.

Displaying information

- ▶ In the Satellite radio main menu, press the **Info** soft key.

The information display will appear.

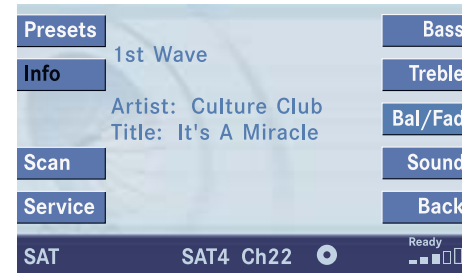

P82.86-4186-31US

You will see (if available)

- the full station name
- additional program information

Switching back to the Satellite radio main menu

- ▶ Press the **Back** soft key.

or

- ▶ Press the **Info** soft key again.


Satellite radio*

Satellite radio operation

Displaying service information

You can call the provider service center for questions or releases, whenever you need.

- ▶ Press the **Service** soft key.
The Service information display will appear.

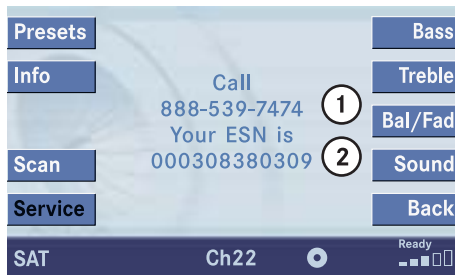

P82.86-4188-31US

- ① Phone number of the provider, (SIRIUS) or “Call Service Provider”
- ② The Electronical Serial Number (ESN) of your satellite receiver

- ▶ Press the **Back** soft key to switch back to the Satellite radio main menu.

Station list updates

While receiving a new channel list the message `Updating station list` will appear.

The station last tuned will be muted until the update is completed. You cannot operate the satellite radio.

After completion of the update, the Satellite radio main menu will appear. The station last tuned to will begin to play.

Sound settings

Refer to chapter “At a glance” on how to adjust sound settings.

- Volume (▷ page 27)
- Balance control and fader (▷ page 29)
- Bass and treble control (▷ page 30)
- Sound functions* (▷ page 30)

Satellite radio*

Telephone*

Important notes

Telephone operation

Telephone*

Important notes

▼ Important notes

In chapter “Telephone”, you will find detailed information regarding the telephone*, including emergency call.

Warning



Some jurisdictions prohibit the driver from using a cellular telephone while driving a vehicle. Whether or not prohibited by law, for safety reasons, the driver should not use the cellular telephone while the vehicle is in motion. Stop the vehicle in a safe location before answering or placing a call.

If you nonetheless choose to use the cellular phone while driving, please use the hands-free device and be sure to pay attention to the traffic situation at all times. Use the cellular phone¹ only when road, weather and traffic conditions permit.

Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to malfunction of the vehicle’s electronic systems, possibly resulting in an accident and personal injury.



Radio transmitters, such as a portable telephone or a citizens band unit should only be used inside the vehicle if they are connected to a separate exterior antenna that has been approved by Mercedes-Benz.

¹ Observe all legal requirements



If you have a Mercedes-Benz specified integrated mobile telephone (TDMA, CDMA or GSM) and the telephone is inserted in the cradle, the telephone functions can be used as follows:

- at the COMAND
- at the multifunction steering wheel

This instruction manual describes the operation at the COMAND. Unless otherwise indicated, the descriptions and illustrations refer to the COMAND.

Operation at the mobile phone is described in separate operating guides. Refer to the vehicle Operator's Manual for operation of the telephone using the multifunction steering wheel.



In certain menus, the COMAND can display date and time of the calls.

The COMAND can display phone number and name of the other party (e.g. if the COMAND detects an incoming call, but also in other menus).

For the number to be displayed, the number information must be transmitted with the incoming call. The same goes for the name display which additionally requires that the caller's number and name are saved in the phone book.

Telephone*

Important notes

- Please read the chapter “Telephone” first before attempting to operate your telephone.
- Please also read the important notes in the telephone operating manual.
- Always drive with extreme caution when you operate the telephone hands-free.
- For safety reasons, you should not use the mobile telephone handset to make a call while driving the vehicle.
If the signal strength is very weak (display in the symbol bar of all menus):
Wait until reception improves before making a call.
- Close the windows and reduce all outside noise as much as possible when you use hands-free operation.

- Also make sure that the air vents are not pointed in the direction of the microphones located in the overhead control panel near the rear view mirror. Adjust air vents and/or reduce blower speed if necessary.
- A brief disconnection from the cellular network is not a malfunction, as this can occur when the network switches areas. The phone will automatically try to sign on to a network again.
- If the message `Please enter Lock-Code` appears, enter the unlock code to enable all telephone functions (▷ page 77). If you do not do so, only the emergency call (911) is available.

GSM mobile phone

- If the message `Please enter PIN-Code` on the mobile phone appears, enter the PIN-code to enable the telephone functions (▷ page 77). If you do not do so, only the emergency (911) call is available on the mobile phone.

In the following situations, it is not possible or not yet possible to use the telephone:

- The telephone is already unlocked but is not or not yet registered in the network.

The message `No Serv` appears in the status bar. The telephone will try to register into an existing network. If the network is available, the telephone will be ready for use.

The above message also appears

- if the network is no longer available due to weak signals

- The message Telephone being activated, please wait appears.

COMAND prepares the telephone for use. Select other system functions, e.g. radio, by pressing the corresponding button or wait until the telephone is active.

- The message Phone not inserted appears.
 - ▶ Please connect the mobile phone.
- The message Phone not available appears.
 - ▶ Please contact an authorized Mercedes-Benz Center.

GSM mobile phone

- If the message Please insert SIM card (Emergency Call 911 only possible with phone) appears:
 - ▶ Insert the SIM card into the mobile phone (Telephone Operating Manual).
- The message Call failed may appear if you place an outgoing call (▷ page 81).
 - ▶ Try again later.

Telephone*

Telephone operation

▼ Telephone operation

Switching telephone operation on

Automatically

The telephone* is automatically activated when the COMAND is switched on. The mobile phone must be inserted in the mobile phone cradle* at the time COMAND is switched on.

Manually

- ▶ Press **TEL**.

The menu to enter the unlock code (▷ page 77) will appear (only if phone has been locked before).

GSM mobile phone

- ▶ Enter the PIN on the mobile phone or at the COMAND.

If no SIM card is in the telephone, the message Please insert SIM card (Emergency Call 911 only possible with phone) appears.

- ▶ Insert a SIM card. Refer to the mobile phone operator's manual.

Switching telephone operation off

- ▶ Switch the COMAND off (▷ page 23) or turn off the engine.

The telephone* is switched off with a time-lag of around 10 minutes. If you make a call within that time, the telephone will be switched off around 10 minutes after you end the call.

or

- ▶ In the Telephone menu (▷ page 78), press **TEL** longer than two seconds.

The message Telephone being deactivated, please wait will appear followed by Phone off.

Emergency call “911”



This function places a call to the local 911 provider. It does not initiate a Tele Aid* call.

You can make an emergency call to an emergency rescue station with a mobile communication network.

The emergency call will be placed as long as the corresponding mobile communication network is available. To do this, switch the telephone on if you have not already done so.

- TDMA or CDMA mobile phone
The emergency call will also be placed if the phone is locked (▷ page 76).
- GSM mobile phone
If no SIM card is in the phone or SIM PIN is not entered, you can only make an emergency call at the mobile phone.

Emergency calls may not be possible with all mobile phone networks or if certain network services and/or telephone functions are active. Check with your local network operating company.

If you cannot make an emergency call, you must initiate rescue measures yourself.

Telephone*

Telephone operation

Warning




The 911 emergency call system is a public service. Using it without due cause is a criminal offense.

Telephone*


Telephone operation

Initiating an emergency call

Telephone is locked

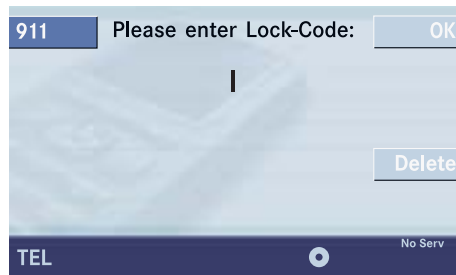


P82.86-4189-31US

- ▶ Press the 911 soft key.
The system opens an inquiry menu prompting if you want to dial a “911” call.
The selection marker in the inquiry menu should be on Yes.
- ▶ If necessary, push the joystick to  to select Yes.


- ▶ Press **OK** to confirm Yes if you want to place the “911” emergency call.
The emergency call will be placed.

- ▶ Wait until the emergency rescue station answers and describe the emergency.

If you do not want to place the emergency call:

- ▶ Push the joystick to  to select No when the inquiry menu appears.
- ▶ Press **OK** to confirm No.

Telephone is ready for operation

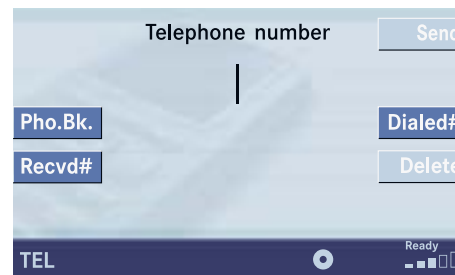

P82.86-4190-31US


- ▶ Press **TEL** repeatedly until the Telephone menu is displayed.
- ▶ Press **9** WXYZ, **1** and **1** one after the other.
- ▶ Press **OK**.
- or
- ▶ Press the Send soft key.
- or
- ▶ Press **SEND**.
The emergency call will be placed.
- ▶ Wait until the emergency rescue station answers and describe the emergency.

Entering codes

TDMA or CDMA mobile phone

Entering the unlock code

- ▶ Use the number keys **1** through **0** to enter the four-digit unlock code.
Asterisks instead of digits will appear in the input line.
- ▶ Press the OK soft key.

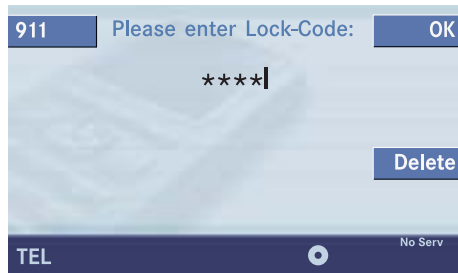

P82.86-4191-31US

If entered code is correct and the phone is registered in a network, the phone is ready for use and the Telephone menu will appear.



Your unlock code prevents unauthorized persons from using your telephone. Be sure to memorize this code, a four digit number, carefully.

If you enter an incorrect code, the system returns to the menu for entering the unlock code.




You must always enter the unlock code when you switch on the telephone the first time (if phone is in locked mode).

Telephone*

Telephone operation

GSM mobile phone

Entering the PIN code

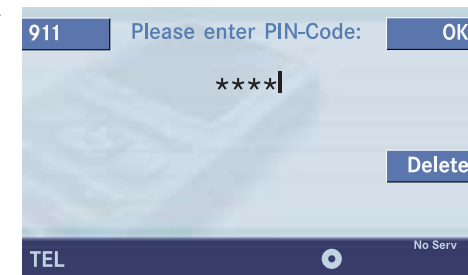

P82.86-4192-31US

- ▶ Enter the four-digit PIN code on the mobile phone. Refer to the mobile phone operator's manual on how to do this.
If no SIM card is in the telephone, the message *Please insert SIM card (Emergency Call 911 only possible with phone)* appears.
- ▶ Insert a SIM card. Refer to the mobile phone operator's manual.

Telephone*

Telephone operation

Entry incorrect:

You will hear a warning sound. The message PIN-Code incorrect will appear.

- ▶ You need to re-enter your PIN code.



If the PIN is entered incorrectly three times in a row, the SIM card will be blocked. The message SIM-card blocked is displayed briefly. After that the message PIN blocked. Please enter PUK on cell phone is displayed.

Entering the PUK

If you enter your PIN incorrectly three times in a row, you need to enter the PUK number.



The PUK number is provided by your telephone service provider.

The PUK can only be entered at the mobile phone. Refer to the mobile phone operator's manual.

Switching to telephone operation

When the COMAND is switched on, you can switch to telephone operation from any other system (e.g. radio):

- ▶ Press **TEL**.


The Telephone menu will appear.



P82.86-4190-31US

Telephone menu

The telephone is ready for operation

Message Ready and the reception strength  are shown on the status bar.

Other messages

- ROAMING

The telephone is using a non home type system

- No Serv

The telephone is not logged into a network

Full screen messages:

Telephone not inserted

- ▶ Plug the mobile phone into the mobile phone cradle*. Refer to the separate mobile phone operator's manual.

Telephone not available

Your vehicle may not have a mobile phone cradle* installed and/or the telephone control unit may not be coded properly. Contact an authorized Mercedes-Benz Center.


Telephone*

Telephone operation

Incoming call

The system detects an incoming call, the phone rings.

Incoming calls are indicated in a window in any system (e.g. radio).

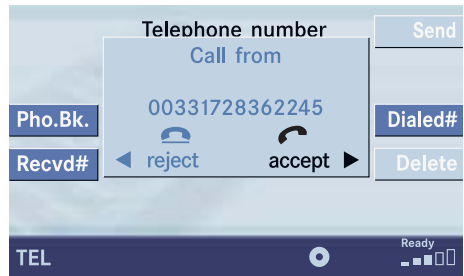

The window shows:

- the caller's number if it is transmitted or
- the caller's name if her or his name and number are saved in the phone book or
- Unknown.

Accepting a call

- ▶ Press **SEND**.

or

- ▶ Press **OK** to confirm accept.

The display will change to the call menu (▷ page 85). In the status bar, the off-hook symbol will appear. An active audio source will be muted. You talk over the hands-free set.

Rejecting a call

- ▶ Press **END**.

or

- ▶ Push the joystick to **◀** to highlight **reject** and then press **OK**.

Setting the volume for hands-free operation

Raising the volume

- ▶ Turn the rotary control on the **PWR** button to the right.

Lowering the volume

- ▶ Turn the rotary control on the **PWR** button to the left.

Ending a call

- ▶ Press **END**.

or

- ▶ Press the **End** soft key.

Outgoing calls


You can use the following functions to make a phone call:

- Dialing a telephone number (▷ page 81)
- Redial (▷ page 82)
- Selecting an entry from the Received calls list (▷ page 83)
- Selecting an entry from the Dialed numbers list (▷ page 83)
- Use speed-dialing (▷ page 85)
- Use quick-dialing (▷ page 85)
- Selecting a phone book entry and dialing the number (▷ page 89)

Dialing a telephone number

Entering a telephone number

- ▶ Open the Telephone menu (▷ page 78).

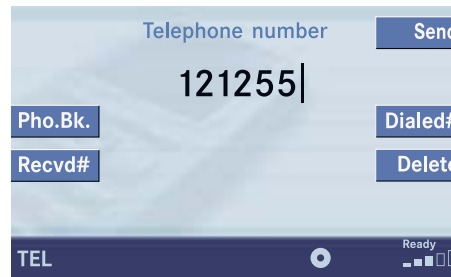

P82.86-4195-31US

- ▶ Use the number keys **1** - **0** to enter the telephone number.

Telephone*

Telephone operation

Deleting the last or several digits:

- ▶ Press the **Delete** soft key once or several times.

Deleting all digits:

- ▶ Press **END**.

or

- ▶ Press and hold **Delete** soft key for more than 2 seconds.

Telephone*

Telephone operation

Begin dialing

When you have entered the telephone number


- ▶ Press **OK**.

or

- ▶ Press **SEND**.

or

- ▶ In the Telephone menu, press the Send soft key.

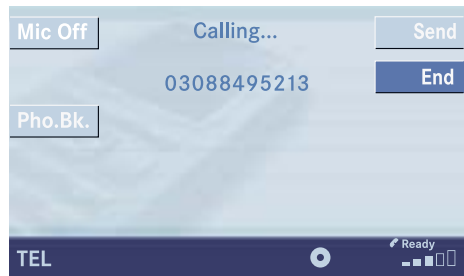

P82.86-4194-31US

Dialing will begin. If a name is associated with the phone number saved in the phone book, the name appears on the screen. In the status bar, the off-hook symbol will appear.

COMMAND will mute an active audio source. If the person called answers the call, the call is active. You talk over the hands-free set.

The message *Call failed* may appear if you place an outgoing call. Try again later.

Subsequent dialing

Transmitting other dial tones:

- ▶ During a call you can press the number keys **1** through **0**, **#**, and *****.

Ending a call

- ▶ Press **END**.

or

- ▶ Press the End soft key.

Redial

- ▶ Press **SEND**.

The telephone dials the number that was dialed last.

or

- ▶ Press the Dialed# soft key.

The Dialed numbers list will appear. The most recently dialed number is highlighted.

- ▶ Press **OK**.

or

- ▶ Press **SEND**.

or

- ▶ Press the Send soft key.

Selecting an entry from the Received calls list

The COMAND automatically generates a list of the last 10 calls received. The list is sorted chronologically with the most recently received call at the top of the list.

Displaying the list

- ▶ In the Telephone menu (▷ page 78), press the *Recvd#* soft key.

The list is displayed and the most recently received call is highlighted.



P82.86-4196-31US

Received calls list

The status bar shows:

- the caller's name if her or his name and number are stored in the phone book
- the message *Unknown* if no entry is available
- the telephone number

You can select the following functions:

- Changing the list display
- Selecting an entry and begin dialing
- Ending a call (▷ page 82)

Telephone*

Telephone operation

Changing the list display

- ▶ Press the 123 soft key.
The display changes to numbers.
- or
- ▶ Press the ABC soft key.
The display changes to names.

Selecting an entry and begin dialing

- ▶ Push the joystick to ▲ or ▼ to select the desired entry.
- ▶ Press **OK**.
- or
- ▶ Press **SEND**.
- or
- ▶ Press the *Send* soft key.
The telephone dials the number.

Telephone*

Telephone operation

Selecting an entry from the Dialed numbers list

The COMAND automatically generates a list of the last 10 numbers dialed. The list is sorted chronologically with the most recently dialed number at the top of the list.

Displaying the list

- ▶ In the Telephone menu (▷ page 78), press the *Dialed#* soft key.

The list is displayed and the most recently dialed number is highlighted.



Dialed numbers list

The status bar shows:

- the caller's name if her or his name and number are stored in the phone book
- the message *Unknown* if no entry is available
- the telephone number

You can select the following functions:

- Changing the list display (▷ page 83)
- Selecting an entry and begin dialing (▷ page 83)
- Ending a call (▷ page 82)

Toggling between lists

- ▶ Push the joystick to ◀ or ▶ to select the desired list.

Missed calls

If there are one or more missed calls available on the mobile phone, a corresponding message will appear.

- ▶ Press the *Back* soft key or press **OK** to return to the Telephone menu.

Speed-dialing

For all memory locations

At the mobile phone you can save telephone numbers in the speed-dialing memory and use them. Refer to the mobile phone operator's manual.

You can also use speed-dialing at the COMAND (only mobile phone memory locations 1-99).

You can enter up to 2 digits.

- ▶ Open the Telephone menu (▷ page 78).

Memory locations with up to two digits:

- ▶ Use the number keys **1** to **9** WXYZ to enter the memory location number.

- ▶ Press **OK**.

or

- ▶ Press **SEND**.

or

- ▶ Press the Send soft key.

The telephone dials the saved number.

Ending a call (▷ page 82).

Quick-dialing

Quick dialing can be used on memory locations 1-9.

- ▶ Open the Telephone menu (▷ page 78).

- ▶ Press one of the number keys **1** - **9** WXYZ longer than 2 seconds.

The telephone dials the saved number.


Ending a call (▷ page 82).

Telephone*

Telephone operation

Active call

If the person called or you answer a call, the call is active. The call indication is displayed.

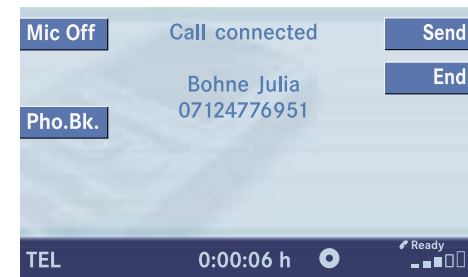

P82.86-4198-31US

Call menu

You talk over the hands-free set. You can set the volume for the hands-free operation (▷ page 80).

The status bar indicates the call time and the off-hook symbol.

Telephone*

Telephone operation

The following functions can be used during a call:

- Ending an active call
- Switch on/off hands-free microphone
- Setting the volume for hands-free operation (▷ page 80)

Ending an active call

▶ Press **END**.

or

▶ Press the End soft key.

The Telephone menu will appear.

Switching hands-free microphone on/off (available if microphone is switched on)

The microphone status is indicated by the status of the Mic Off or the Mic On soft key.

Microphone status	Soft key status
On	Mic Off
Off	Mic On

▶ Press the Mic Off soft key.

The microphone is switched on. The soft key status changes accordingly.

▶ Press the Mic On soft key.

The microphone is switched off. The soft key status changes accordingly.

When the microphone is off, the other party cannot hear you. You can still hear your partner.

Three-way calling

When a call is active and you receive a second call on your mobile phone, a tone representing a second caller can be heard. You can accept the second call, toggle between the active (first) and the second call and make a conference.

Accepting a second call

▶ Press **SEND**.

You now have two calls, the second call is active. The formerly active call is put on hold.

Toggling between the active and the waiting call

TDMA, CDMA

▶ Press **SEND**.

The active call is put on hold and the call formerly on hold is now active.

GSM

- ▶ Use the number key **2**_{ABC} and then press **SEND**.

The active call is put on hold and the call formerly on hold is now active.

Ending the active call

TDMA, CDMA

- ▶ Press **END**.

Both calls will be ended, but the on-hold call will call back.

GSM

- ▶ Press **END**.

The active call will be ended, the call formerly on hold is active.

Making a conference call

TDMA, CDMA

When a first call is active a second call can be placed to make a conference call.

During an active call:

- ▶ Use the number keys **1** to **9**_{WXYZ} to enter the telephone number of the party that you would like to conference in.

- ▶ Press **SEND**.

Dialing will begin. If the person called answers the call, the call is active, the formerly active call is put on hold.

- ▶ Press **SEND** again to make all calls active and have the conference call.

GSM

To make a conference between to calls (one that is active and one on hold):

- ▶ Use the number key **2**_{ABC} and then press **SEND**.

Ending a conference call

- ▶ Press **END**.

Telephone*

Telephone operation

Phone book

The phone book contains all entries

- of the internal memory of the mobile phone (TDMA, CDMA and GSM mobile phone), entries can be marked with symbols
- of the SIM card (GSM mobile phone)

Displaying the phone book

- ▶ In the Telephone menu (▷ page 78), press the **Pho. Bk.** soft key.

The phone book will appear.



P82.86-4199-31US

The first entry found is at the top of the list and highlighted.

Phone book entry	Status bar shows
A phone number	Unknown
A name for a phone number	The phone number
Several numbers	Several Numbers

Entries marked with symbols have been imported into the phone book from the internal memory of the mobile phone.

Usable phone number categories:

- Symbol : Cell number
- Symbol : Home number
- Symbol : Work number

And additional categories:

- Symbol : Fax number
- Symbol : Pager number
- Symbol : Main number

You can select the following functions:

- Changing the phone book display at the COMAND
- Selecting a phone book entry and dialing the number (▷ page 89)

Changing the phone book display

- ▶ Open the phone book (▷ page 88).
- ▶ Press the 123 soft key.

The display changes to numbers. The status bar displays the name of the marked entry.

or

- ▶ Press the ABC soft key.

The display changes to names. The status bar displays the number of the marked entry.

Selecting a phone book entry and dialing the number

- ▶ Open the phone book (▷ page 88).

The list of phone book entries with names starting with a certain letter is displayed.

Changing the initial letters

- ▶ Push the joystick to ◀ or ▶ one or several times.

With every push of the button the display changes to the next possible letter. At the end of the letter list follows the category Others.

Telephone*

Telephone operation

Category Others:

Here, all entries without names or with names starting with a special character (e.g. * or #) are put together.



If you hold one of the buttons, scrolling is accelerated.

Selecting an entry

- ▶ Change the initial letter if required.
- ▶ Push the joystick to ▼ or ▲ to select a list entry.
- ▶ Press the Detail soft key to see all information about the entry.

Telephone*

Telephone operation

Begin dialing

▶ Press **OK**.

or

▶ Press **SEND**.

or

▶ Press the Send soft key.

Navigation

Important notes

Navigation main menu

Destination input

Route guidance

During route guidance

Last destinations and destination memory

POIs

Today's plan

Software updates

Navigation

Important notes

▼ Important notes

Warning



For safety reasons, you should only enter a destination when the vehicle is stationary. When the vehicle is in motion, a passenger should enter the destination. Study manual and select route before driving.

Do not watch display screen or operate buttons while the vehicle is in motion - let voice instructions guide you. Stop at a safe location before using buttons or making corrections.

Traffic regulations always have priority over any route recommendations given.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car is covering a distance of 44 feet (approximately 14 m) every second.

The route calculated by COMAND is a recommendation on how to best reach your selected destination.

During route guidance, you will not receive any information on

- Traffic lights
- Stop and yield signs
- Parking or stopping zones
- One-way streets
- Narrow bridges
- Similar traffic regulation data

You should therefore always strictly observe traffic regulations while driving. Drive carefully and always obey traffic laws and road signs even if they contradict COMAND instructions.

Warning



The Navigation DVD module contains a Class 1 laser product. There is a danger of invisible laser radiation if the cover is opened or damaged.

Do not remove the cover. The Navigation DVD module does not contain any parts serviceable by the user. For safety reasons, have any necessary service work performed by qualified personnel.

The display unit can cause injury if contacted when open. Return the display unit after inserting a Navigation DVD to its closed position (▷ page 147).

Navigation DVD

COMAND calculates the route with the help of data that is stored on the navigation DVD.

Only use Mercedes-Benz navigation DVDs. Using other navigation DVDs or CDs will cause malfunctions and/or damage.

Because of changes in local traffic patterns (e.g. road works) and/or incomplete data, errors in calculation may occur.

As a result, the recommended route may deviate from the ideal route. The data stored on the DVD only reflects local conditions at the time of DVD production. DVD maps do not cover all areas nor all routes within an area.



GPS (Global Positioning System) signals received make it possible to determine the current vehicle position.

Deviations from the actual position may occur

- if the reception of GPS signals is disturbed e.g. in parking garages and tunnels
- if road conditions are bad
- depending on the vehicle's condition

Loading/ejecting a DVD

DVDs are loaded and ejected at the DVD Navigation slot. The DVD Navigation slot is located behind the display unit.



There are two **EJECT** buttons. One is on the display unit. The other is located left of the DVD NAVIGATION slot behind the display (▷ page 147).

- ▶ Open the display unit to get access to the DVD Navigation slot as described in "Starting an update" (▷ page 148).

Navigation

Important notes

Route guidance after the vehicle has been transported

If your vehicle has been transported (e.g. by a car, train or ferry) the system may make navigation announcements which do not correspond to the vehicle's position. The system needs to redetermine its position.

Determining the location after the vehicle has been transported


The system will need some time to determine its location after the car has been transported. The time required for the system to do so varies from case to case.

- ▶ Switch the COMAND on.
- ▶ Activate the Navigation main menu (▷ page 96).

The navigation DVD needs to be in the DVD NAVIGATION slot (▷ page 147).

- ▶ Drive and press **MAP**.

Drive until the position or the road indicated correspond to the real circumstances. The system is now correctly adjusted.

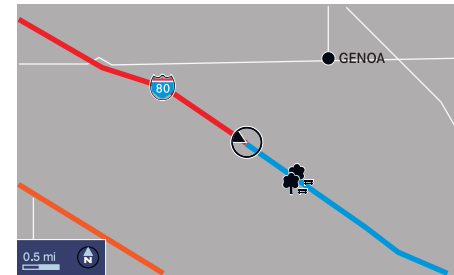

P82.86-2854-31US

Trip interruption during route guidance



Trip interruption means the vehicle is parked and COMAND is switched off.

Trip continuation means the vehicle is moving and COMAND is switched on again.

The following applies if you interrupt your trip and continue later on:

- Trip is continued within 2 hours:
The system will automatically resume route guidance.
- Trip is continued after more than 2 hours:
 - ▶ Press **OK** and confirm Continue route guidance in the Navigation main menu (▷ page 96).

Navigation


Navigation main menu

▼ Navigation main menu

Activating the Navigation main menu

- ▶ Press **NAV**.

The Navigation main menu or the current navigation screen (e.g. map screen) will appear.

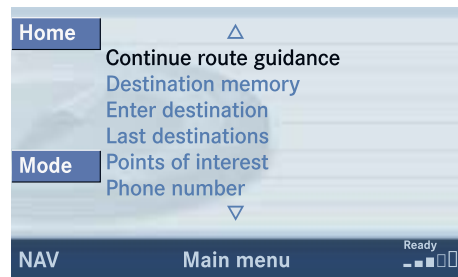

P82.86-4201-31US

Navigation main menu



If route guidance is active, a message appears instead asking you whether you wish to cancel route guidance (▷ page 120).

If route guidance has been interrupted for more than 2 hours, the entry **Continue route guidance** will be on top of the list.

- ▶ Push the joystick to **▲** or **▼** to select a menu item.
- ▶ Press **OK**.

or

- ▶ Press one of the soft keys.

The selected menu or the function of the selected soft key appears.

Selectable Menu Items

- **Continue route guidance:** Resumes interrupted or aborted route guidance.



This menu item appears if you:

- have aborted route guidance (▷ page 120)
- have interrupted your journey and continue it after more than 2 hours

- **Destinations memory**
You can select destinations from the Destinations Memory (▷ page 136).
- **Enter destination**
Activates the Enter street menu (▷ page 100).
- **Last destinations**
You can select last destinations from the Last destinations memory (▷ page 134).
- **Points of interest:**
Brings you to the Select point category menu (▷ page 138).

POIs are e.g. gas stations, parking facilities or airports.
- **Phone number:**
You can select a POI by phone number. Brings you to the Enter POI phone number menu (▷ page 142).
- **Today's Plan:**
You can select destinations from the Today's Plan list one after the other or sort destinations as Bestway or Round trip (▷ page 144).

Available soft keys

- **Home soft key:**
You can edit the home address and start route guidance (▷ page 113).
- **Mode soft key:**
You can edit the routing mode for the next route guidance (▷ page 98).

Navigation

Navigation main menu


Setting the routing mode

The COMAND calculates the route as Fastest route.

Minimizing traffic routes

- ▶ Press the Mode soft key
 - in the Navigation main menu (▷ page 96)
 - in the Start route guidance menu (▷ page 115)
 - in the Info menu (▷ page 122).

The Edit routing mode menu will appear.

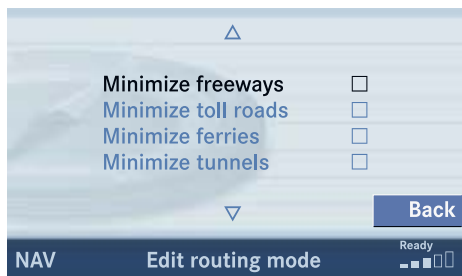

P82.86-4202-31US

Selectable traffic routes

- **Minimize freeways:**
The system calculates the route with/without minimizing freeways.
- **Minimize toll roads:**
The system calculates the route with/without minimizing roads.
- **Minimize ferries:**
The system calculates the route with/without minimizing ferry connections.
- **Minimize tunnels:**
The system calculates the route with/without minimizing tunnels.

Option	Symbol
On	<input checked="" type="checkbox"/>
Off	<input type="checkbox"/>

- ▶ Push the joystick to **▲** or **▼** to select a routing mode.
- ▶ Press **OK**.
Switches the option on or off. You can switch on more than one option.
- ▶ Press the Back soft key to confirm.
The setting is saved. The previous navigation screen will appear.

Saving current location

- ▶ Press **MAP**.


The full view of the map appears. You will see the vehicle's current position.



If route guidance is not active and the Navigation main menu was displayed last, you need to press the button twice.

- ▶ Press any soft key.

The soft key displays will appear.

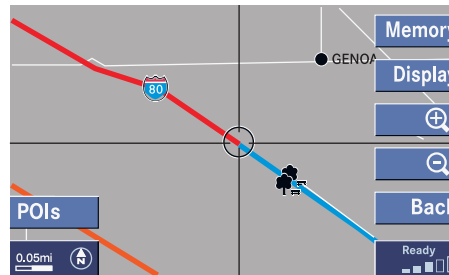

P82.86-4200-31US

- ▶ Press the Memory soft key.

The system saves the current position as a destination in the Last destinations memory (▷ page 134).

Navigation

Navigation main menu



Such destinations are marked in the Last destinations memory with ●.

For permanent storage you can save the destination in the regular Destination memory (▷ page 135).


Navigation

Destination input

▼ Destination input


Activating the Enter street menu

- ▶ Activating the Navigation main menu (▷ page 96).

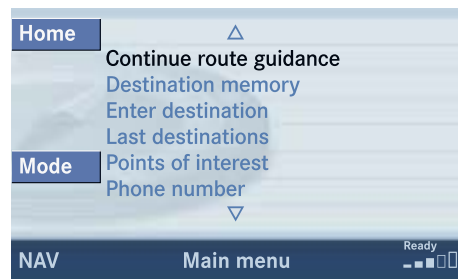

P82.86-4201-31US

- ▶ Push the joystick to ▲ or ▼ to select the menu item Enter destination.
- ▶ Press **OK**.
The Enter street menu will appear.

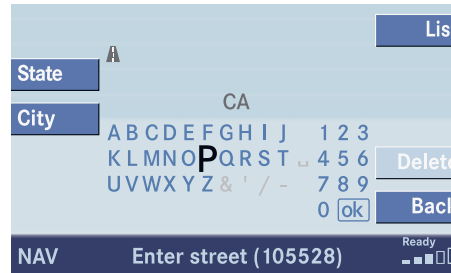

P82.86-4203-31US

Enter street menu

You can use the following functions

- entering a street name or accepting a street name if already available (▷ page 102).
 - changing the state/province (▷ page 101).
- or
- entering a city (▷ page 107).

Available soft keys:

- **State soft key:**
Brings you to the Select state/province menu (▷ page 101).



The currently set state is identified by the state code in the middle of the screen.

If the vehicle location is in Canada, this soft key appears as Province.

- **City soft key:**
Brings you to the Enter city menu (▷ page 107).
- **List soft key:**
Brings you to a list of streets beginning with the previously input letters.
- **Delete soft key:**
The character last entered is deleted.
- **Back soft key:**
Returns you to the previous menu.


Selecting the state/province



Use the State list for selecting states in the USA and the Province list for selecting provinces in Canada.

- ▶ Press the State soft key
 - in the Enter street menu (▷ page 100)
 - in the Enter city menu (▷ page 107).

The Select state/province menu will appear.

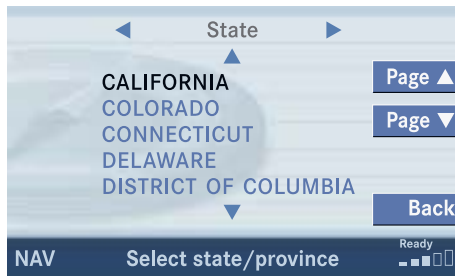

P82.86-4204-31US

Select state/province menu

- ▶ Push the joystick to ▲ or ▼ to select a state.
- ▶ Press **OK**.
The Enter street menu will reappear and shows the new state code in the middle of the screen.

toggling between State and Province list

You can toggle between states in the USA and provinces in Canada.

- ▶ Push the joystick to ◀ or ▶.



If you have already calculated a route, you can toggle to the Last list, which contains up to 5 last selected states or provinces.

State of Hawaii

When on the mainland, you cannot choose destinations in Hawaii, because these are in a database separate from the USA/Canada.

Navigation

Destination input

Similarly, when in Hawaii, you cannot choose mainland destinations. The message You must change the state or province in order to use that destination will appear in this case, if such a destination is selected from the last destinations memory (▷ page 134), the destination memory (▷ page 136) or as home address (▷ page 113).

- ▶ Choose another state or province.
The warning message This selection will restart the system. Previous destinations may not be available, and today's plan will be erased. Do you wish to continue? will appear.
- ▶ Press **OK** to restart.



After such a restart, Today's Plan entries are all deleted. Destinations in the previous area (for example in Last Destinations) are kept so that you can access and delete them.

Navigation

Destination input

Entering destination address

Entering a street

- ▶ In the Enter street menu (▷ page 100) push the joystick to , , or to select the characters. After each selection, press .

- ▶ Push the joystick to or to select characters diagonally.

or

- ▶ Press one of the number keys to and to enter digits.



If you enter the first character, the State and City soft keys disappear.

The status bar shows the number of current matches.



P82.86-4205-31US



For quicker input, COMAND offers available characters from the character set based on your selections and the names of the streets stored on the navigation DVD. The character selected appears magnified.

Greyed out characters are not available and cannot be selected.

- ▶ Press the Delete soft key if necessary.

The character last entered by the system is deleted.

Back to the previous menu

- ▶ Press the Back soft key.

Confirming a street (menu)

- ▶ Press longer than 2 seconds.

or

- ▶ Select the symbol. Push the joystick to , , or to do so.

- ▶ Press .




If there is only one match for the entered street name, the symbol is highlighted automatically.

or

- ▶ Press the List soft key.

The street list will appear. You can now select a street.

Selecting a street

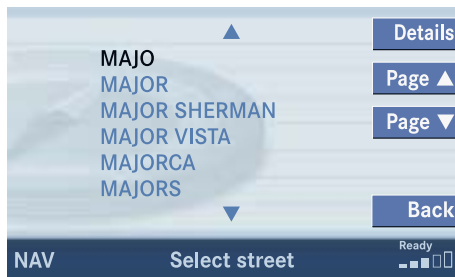

P82.86-4206-31US

Select street list

- ▶ Push the joystick to ▲ or ▼ to select a street.

Available soft keys:

- ▶ Press the Details soft key to see all information about the street entry.
- ▶ Use the Page ▼ and Page ▲ soft keys to display the next or previous page.
- ▶ Press the Back soft key to return to the previous menu.

Confirming a street (list)

- ▶ Press **OK** to confirm your selection.

The Enter house number menu will appear.


Navigation

Destination input

Entering a house number



You can enter an intersection instead of the house number. You cannot enter both.

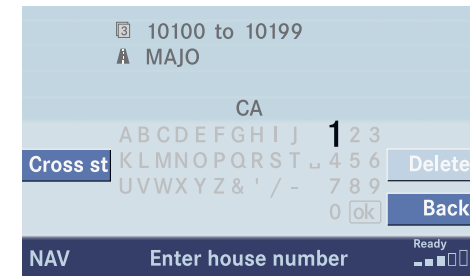

P82.86-4207-31US

Enter house number menu

The first line shows the available house number range.

Navigation

Destination input

You can use the following functions

- entering the house number
- selecting an intersection to that street (▷ page 106).

- ▶ Press the appropriate number keys **0**, **1** to **9**.


or

- ▶ Push the joystick to **▶**, **◀**, **▲** or **▼** to select the numbers. After each selection, press **OK**.
- ▶ Push the joystick to **↘** or **↙** to select numbers diagonally.



For quicker input, COMAND offers available numbers from the number set based on your selections and the house numbers stored on the navigation DVD. The number selected appears magnified.

Greyed out numbers are not available and cannot be selected.

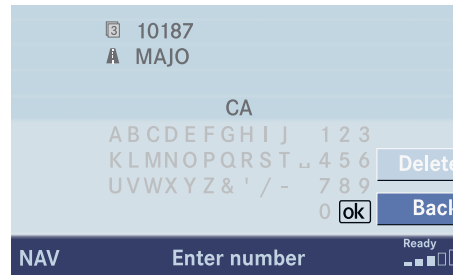

P82.86-4208-31US

Confirming a house number

- ▶ Press **OK** longer than 2 seconds.
- or
- ▶ Select the **OK** symbol. Push the joystick to **▶**, **◀**, **▲** or **▼** to do so.
 - ▶ Press **OK**.



Each option is possible as long as the entered house number is available from the information stored on the DVD.



If there is only one match for the entered house number, the **OK** symbol is highlighted automatically.

The Select city list (▷ page 105) will appear.


or

The Start route guidance menu (▷ page 115) will appear, if the entered address information (street name and house number) is unique in the selected state or province.

or

The Enter city menu will appear if more than 7 cities share the entered address information (street name and house number).

Confirming a city

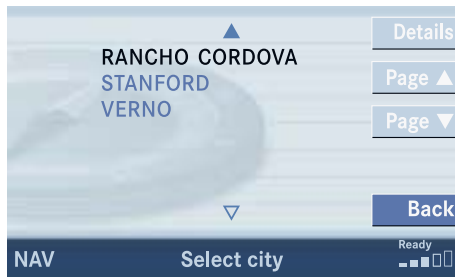

P82.86-4209-31US

Select city list

- ▶ Push the joystick to ▲ or ▼ to select a city.

Available soft keys:

- ▶ Press the Details soft key to see all information about the city entry.
- ▶ Use the Page ▼ and Page ▲ soft keys to display the next or previous page (if available).
- ▶ Press the Back soft key to return to the previous menu.

- ▶ Press **OK** to confirm your selection. The Start route guidance menu (▶ page 115) will appear.

Entering an intersection

You can enter an intersection with the previously entered street.

- ▶ In the Enter house number menu (▶ page 103), press the Cross st soft key.



P82.86-4210-31US

Navigation

Destination input

- ▶ Push the joystick to ▶, ◀, ▲ or ▼ to select the characters. After each selection, press **OK**.

- ▶ Push the joystick to ↘ or ↙ to select characters diagonally.

or

- ▶ Press one of the number keys **1** to **9** and **0**.



The status bar shows the number of current matches.

Navigation

Destination input



For quicker input, COMAND offers available characters from the character set based on your selections and the names of the streets stored on the navigation DVD. The character selected appears magnified.

Greyed out characters are not available and cannot be selected.

- ▶ Press the Delete soft key if necessary.

The character last entered is deleted.

Back to the previous menu

- ▶ Press the Back soft key.

Confirming a cross street (menu)

- ▶ Press **OK** longer than 2 seconds to confirm your entry.

or

- ▶ Select the **OK** symbol. Push the joystick to **▶**, **◀**, **▲** or **▼** to do so.


- ▶ Press **OK**.

or

- ▶ Press the List soft key.

The Select cross street list will appear. You can now select a street.

Selecting a cross street

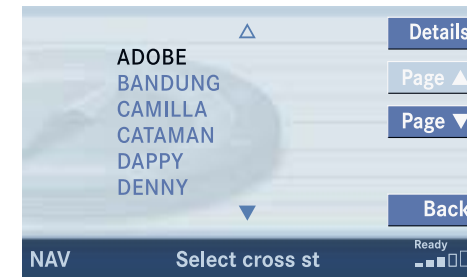

P82.86-4211-31US

- ▶ Push the joystick to **▲** or **▼** to select a city.

Available soft keys:

- ▶ Press the Details soft key to see all information about the street entry.
- ▶ Use the Page ▼ and Page ▲ soft keys to display the next or previous page.
- ▶ Press the Back soft key to return to the previous menu.


Confirming a cross street (list)

- ▶ Press **OK** to confirm.

The Start route guidance menu (▷ page 115) will appear.

Entering a city

- ▶ Press the City soft key in the Enter street menu (▷ page 100).

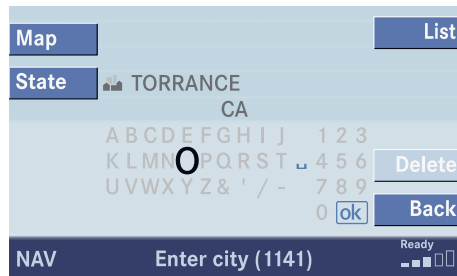

P82.86-4212-31US

Enter city menu

The most recently entered destination is shown in the upper area.

You can now

- entering a city name or
- accepting the city name shown

Available soft keys:

- Map soft key: Brings you to the destination input directly above the map (▷ page 111).
- State soft key: Brings you to the state/province selection (▷ page 101).



The currently set state is identified by the state code in the middle of the screen.

If the vehicle location is in Canada, this soft key appears as Province.

- List soft key: Brings you to a list of cities with the previously input street.
- Delete soft key: The character last entered or the character last accepted by the system is deleted.
- Back soft key: Returns you to the previous menu.

Navigation


Destination input

- ▶ In the Enter city menu push the joystick to **▶**, **◀**, **▲** or **▼** to select the characters. After each selection, press **OK**.
 - ▶ Push the joystick to **↘** or **↙** to select characters diagonally.
- or
- ▶ Press one of the number keys **1** to **9** and **0**.



If you enter the first character, the Map and State soft keys and a city name already available disappear.

The status bar shows the number of current matches.

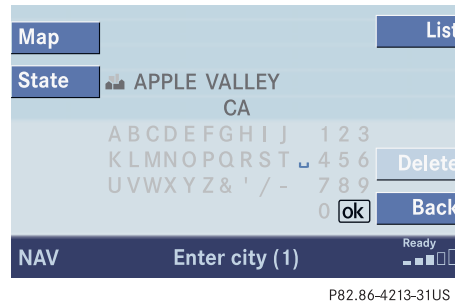

For quicker input, COMAND offers available characters from the character set based on your selections and the names of the cities stored on the navigation DVD. The character selected appears magnified.

Greyed out characters are not available and cannot be selected.

- ▶ Press the Delete soft key if necessary.
The character last entered is deleted.

Back to the previous menu

- ▶ Press the Back soft key.

Confirming a city (menu)

- ▶ Press **OK** longer than 2 seconds.

or

- ▶ Select the **OK** symbol. Push the joystick to **▶**, **◀**, **▲** or **▼** to do so.
- ▶ Press **OK**.




If there is only one match for the entered city name, the **OK** symbol is highlighted automatically.

or

- ▶ Press the List soft key.
The city list will appear. You can now select a city.

Selecting a city

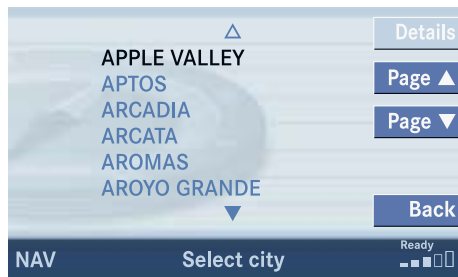

- ▶ Push the joystick to ▲ or ▼ to select a city.

Available soft keys:

- ▶ Press the Details soft key to see all information about the city entry.
- ▶ Use the Page ▼ and Page ▲ soft keys to display the next or previous page.
- ▶ Press the Back soft key to return to the previous menu.
- ▶ Press **OK** to confirm your selection.
The Enter street menu will appear. You can now enter a street.


Navigation

Destination input

Entering a parking

The Start route guidance menu will appear after entering a destination address.

Here you can select a parking nearby.

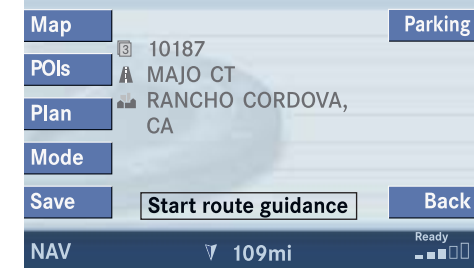

Start route guidance menu

- ▶ Press the Parking soft key.
The Parking lot selection map is displayed.
- or
The message No parking near the destination will appear.

Navigation

Destination input

Selecting a parking lot

The map is displayed and shows the destination and the available parking lots.

One of the parking lot is spotlighted. The name belonging to it is shown on the status bar.



P82.86-4217-31US

- ▶ Use the Next or Prev. soft key to select a parking lot on the map.

- ▶ Press the Details soft key to see more information about the parking lot.
- ▶ Press **OK**.

The Start route guidance menu will appear (▶ page 115).

Selecting a destination using the map

- ▶ Press **MAP**.
- ▶ Push the joystick to **◀**, **▶**, **▲**, **▼**, **↙**, **↘**.

or

- ▶ Press the Map soft key, e.g. in the Start route guidance menu (▷ page 115).


The map is shown in full view and cross-hairs appear.



The system automatically places the cross-hairs on the current destination address.

If soft key displays are hidden:

- ▶ Press any soft key.
The soft key displays will appear.

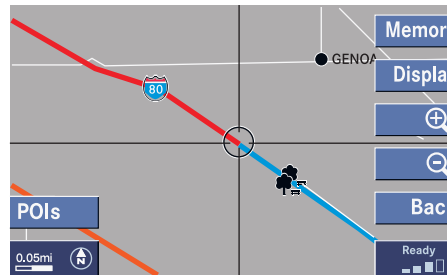

P82.86-4200-31US



MAP was pressed:

If no soft key is selected within approx. 8 seconds, the soft key display will disappear again.

Available soft keys









The POIs, Memory and Display soft keys are available if the Map soft key was pressed.

- POIs soft key:
Spotlight a POI if POIs are on the map (▷ page 141).
- Memory soft key:
Set a memory point and saved it in the Last destinations memory (▷ page 99).
- Display soft key:
The Map view display will appear. (▷ page 128).
- Soft key **⊕**:
Enlarge visible map section.
- Soft key **⊖**:
Reduce visible map section.

Navigation

Destination input

- ▶ Push the joystick to , , ,  to move the cross-hairs.
- ▶ Push the joystick to  or  to move the cross-hairs diagonally.

This allows you to select your destination.

- ▶ Release the button.

If the system is able to assign a street name to the selected location, it is displayed on the status bar.

- ▶ Press .

The system uses the point at the center of the cross-hairs as destination.

The Start route guidance menu will appear (▷ page 115).



If you press the Back soft key, your selection will be discarded. The system then uses the data of the previous destination.



If a POI is close to the center of the cross-hairs, a selection list will appear. You can now select between a POI and the address destination.

Selecting home address

- ▶ Activate the Navigation main menu (▷ page 96).
- ▶ Press the Home soft key.

The message No home address available! Please enter home address will appear.

- ▶ Press the Change soft key to edit a home address.

or

The actual home address is shown.


Here you can use the following functions

- changing to the map (▷ page 111)
- setting the routing mode (▷ page 98)
- editing home address (▷ page 113)
- starting route guidance (▷ page 115)

Editing home address

- ▶ Press the Change soft key.

The Change home address menu will appear.

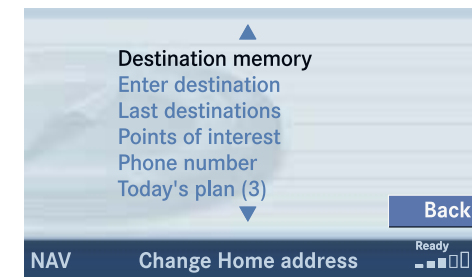

P82.86-4218-31US

You can use the following functions


- selecting a destination from the Destination memory (▷ page 136)
- entering destination address (▷ page 102)

Navigation

Destination input

- selecting a destination from the Last destinations memory (▷ page 134)
- selecting a Point of Interest (▷ page 138)
- entering a POI by phone number (▷ page 142)
- selecting a destination from the Today's plan memory (▷ page 144)

After entering the address the screen may look as follows

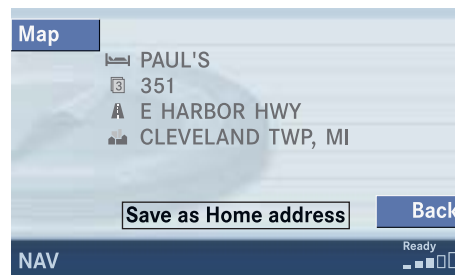

P82.86-4219-31US

- ▶ Press **OK**.


The home address is saved.

The Start route guidance menu will appear (▷ page 115).

▼ Route guidance

Starting route guidance

Route guidance can be started if the destination input is complete and Start route guidance is displayed at the bottom of the main area.

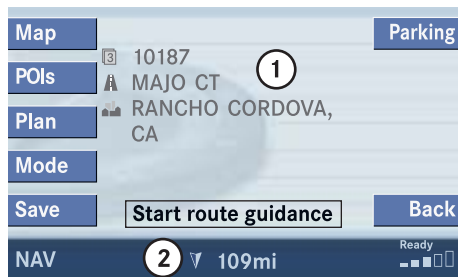

P82.86-4220-31US


Start route guidance menu

- ① Destination address
- ② Arrow indicates the direction to the destination and the distance to the destination (as the crow flies)

- ▶ Press **OK**.

Route calculation and route guidance begins.

Route calculation

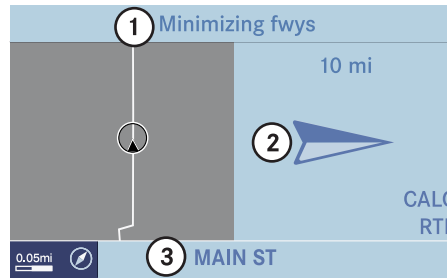

P82.86-4221-31US

- ① Routing mode
Setting the routing mode (▷ page 98)
- ② Arrow indicate the direction of the destination, the distance to destination and CALC RTE indication
- ③ The road you are currently driving on

Route calculation can take some time, depending on the distance to the destination and the routing mode.

During route calculation, an arrow pointing towards the destination, the distance to the destination (as the crow flies) and CALC RTE are displayed.

Route guidance begins when route calculation is complete.

Recalculating an existing route

The system will calculate a new route during active route guidance if the driver does not follow the route guidance.

Navigation

Route guidance

Voice instructions

Warning



Voice instructions are intended to direct you while driving without diverting your attention from the road and driving.

Always use this feature instead of consulting the map display for directions. Consulting the map displays for directions may cause you to divert your attention from driving and increase the risk of an accident.

After route calculation, the system assists route guidance using pictorial displays (> page 117) and voice instructions.

Repeating current voice instructions

If you have not understood a navigation announcement, you can at any time have a current announcement repeated.

- ▶ Press **RPT**.

The current navigation announcement is repeated.

Switching voice instructions On/Off

Switching off

- ▶ Press **MUTE** during a navigation announcement.

The message Voice announcements muted will appear briefly.

Further route guidance takes place using only the symbols in the display.

If a new route guidance cycle is started, the announcements are automatically switched on again.

Switching on again

- ▶ Press **RPT**.

Navigation

Route guidance

Navigation displays


The navigation displays are only visible while route guidance is active.

To switch to the navigation display from another display, e.g. from CD operation:

► Press **NAV** or **MAP**.

Two examples are shown below:

Display example 1:

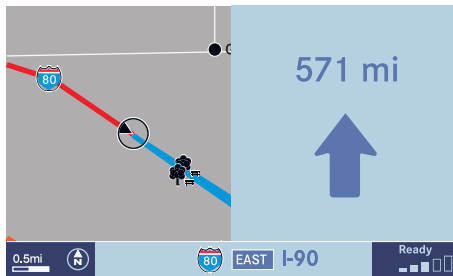

P82.86-4222-31US

The road you are currently driving on is shown on the status bar, in this case EAST I-90. The indication 571 mi is the distance to the next driving maneuver.


If the GPS position display (▷ page 130) is active, the GPS data are shown instead of the street name.



Using the control system, the display unit can be changed between km or miles (see your vehicle's Operator's Manual).

- When the display unit is set to miles, the COMAND will indicate distances in miles (mi) or feet (ft).
- When the display unit is set to km, the COMAND will indicate distances in kilometers (km) or meters (m).

Important map symbols:

- Current vehicle location and direction of travel 
If the map orientation Heading Up (▷ page 130) is chosen, the arrow will always point upward.
- The remaining route section is highlighted in blue color.




The colored highlight only appears when the system has completed the route calculation.


Navigation

Route guidance

Display example 2:

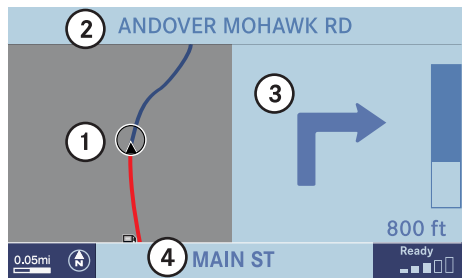


P82.86-4223-31US

- ① Current vehicle location and direction of travel , remaining route section
- ② Name of the road you are to turn onto
- ③ Symbol for the next driving maneuver, distance bar and distance to the next driving maneuver
- ④ The road you are currently driving on

On the right side of the display, the symbol for the next driving maneuver is indicated (here: right turn).

On the very right side next to turn symbol is the distance bar. It indicates the distance to the next driving maneuver (here: 800 ft).

The status bar shows the name of the street after the driving maneuver, if available, here: MAIN ST

The destination is marked with a flag  on the map, an intermediate destination is marked with a flag showing the letter S.



Using the control system, the display unit can be changed between km or miles (see your vehicle's Operator's Manual).

- When the display unit is set to miles, the COMAND will indicate distances in miles (mi) or feet (ft).
- When the display unit is set to km, the COMAND will indicate distances in kilometers (km) or meters (m).

- ▶ Press any soft key.

The soft key displays appear.



If no other action is taken within approx. 8 seconds, the soft key displays will disappear again.

Altering the map scale



The current map scale is indicated on the left side of the status bar.

- ▶ Press the  or  soft key.

The map section is zoomed in or zoomed out. A bar indicating the map scale appears on the status bar.

Selecting map orientation

A symbol is shown on the bottom left side of the status bar.

- Heading Up :
Dynamic map alignment, map is displayed facing driving direction pointing up
- or
- North Up :
Map is displayed facing north

You can select the map orientation (▷ page 130).

Changing the map display

While route guidance is active, you can switch between split view and full view.

- Split view:
The map is shown on the left side and information on the next maneuver on the right.
- or
- Full view:
Full view of the map.

- ▶ Press **MAP**.

The display changes with every push of the button.

Navigation

Route guidance



If GPS display (▷ page 130) is active, information on your current position is shown on the status bar.

Arriving at destination



When you reach the destination, you will see the destination flag. Route guidance ends.

Navigation

Route guidance

Cancelling route guidance

- ▶ In navigation mode, press **NAV**.
The inquiry menu Cancel route guidance? will appear.
- ▶ Press **OK** to confirm Yes.
Route guidance is cancelled. The Navigation main menu appears.



You can continue route guidance from the Navigation main menu (> page 96).

Continuing route guidance

- ▶ Push the joystick to **▶** to select No.
- ▶ Press **OK**.

▼ During route guidance


During route guidance you can use the soft keys to activate additional menus and displays and make settings.

The soft key displays will automatically disappear after a few seconds.

Displaying the soft keys



- ▶ During route guidance, press any soft key.

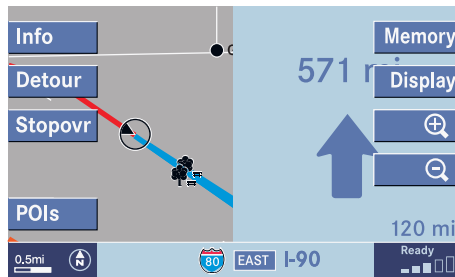The soft key displays will appear.



P82.86-4225-31US

Available soft keys


- Info soft key:
Brings you to the Info menu
(▷ page 122).
- Detour soft key:
Brings you to the Traffic Jam function
(▷ page 123).
- Stopovr soft key:
Brings you to the stopover destination
function (▷ page 125).
- POIs soft key:
Brings you to the POI function
(▷ page 141).
- Memory soft key:
Brings you to the save current location
function (▷ page 99).
- Display soft key:
Brings you to the Display menu
(▷ page 128).
- Soft key :
Enlarge visible map section
(▷ page 119).
- Soft key :
Reduce visible map section
(▷ page 119).

Navigation

During route guidance

Info menu

- ▶ Display the soft keys.
- ▶ Press the **I n f o** soft key.
The Info menu will appear.

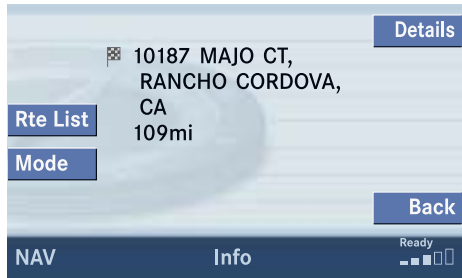

Info menu



If a stopover destination has been entered:

The estimated time of arrival and the remaining distance to the stopover destination are displayed.

When the stopover destination is reached, the system indicates estimated time of arrival and remaining distance to the main destination.

Available soft keys

- **Rte L i s t** soft key:
Shows a list of the route.
- **Mode** soft key:
Brings you to the route mode selection menu (▷ page 98).
- **Detai l s** soft key:
See all information about the destination.

Displaying the route list

- ▶ Press the **Rte L i s t** soft key.

The list of the remaining roads/route sections appears.

The road currently travelled on is at the top of the list.

- ▶ Push the joystick to **▼** or **▲** to scroll through the list.
- ▶ Use the **Page ▼** and **Page ▲** soft keys to display the next or previous page.



Depending on the distance to the destination, it may take a few moments before the route list is completed.

The list will only be complete when the route is completely calculated.

Selecting a detour

The detour function blocks a route section ahead. If possible, the system will calculate a detour. You can adjust the length of the route section to be blocked.



If the system does not allow you to block a route section, the message Complete detour not possible is displayed.


Traffic jams are identified by the driver, not by the COMAND.

Switching on

- ▶ Activate the soft key display (▷ page 121).
- ▶ Press the Detour soft key.



If you have already placed a block on a route section, the Detour menu will appear instead of the map (▷ page 124).

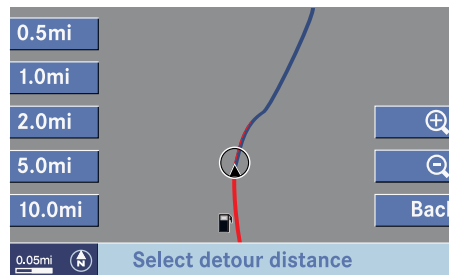

P82.86-4227-31US

You can now enter the length of the route section to be blocked.

- ▶ Press one of the left distance soft keys.


The system calculates a new route around the blocked route section.

Navigation

During route guidance

Switching off (remove detour)

- ▶ Activate the soft key display (▷ page 121).
- ▶ Press the Detour soft key.

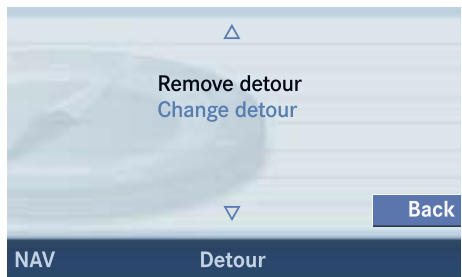

P82.86-4228-31US

- ▶ Push the joystick to ▲ or ▼ to select Remove detour.
- ▶ Press **OK**.
The blocked route section is deleted.
The system calculates the new route.

Changing the blocked route section

- ▶ Activate the soft key display (▷ page 121).
- ▶ Press the Detour soft key.
- ▶ Use ▲ or ▼ to select item Change detour.


- ▶ Press **OK**.
You can now change the length of the route section to be blocked.
- ▶ Press one of the left distance soft keys.
The system calculates a new route around the blocked route section.

Stopover function

This function allows you to select an intermediate destination while route guidance is active. A stopover destination may be a gas station or a restaurant or any other place. When the route to the stopover destination is calculated, the system calculates the route from the stopover destination to the main destination.

Entering a stopover destination

- ▶ Activate the soft key display (▷ page 121).
- ▶ Press the Stopover soft key.
The map is displayed in full view.
or
The Stopover still active menu will appear (▷ page 127) if a stopover already exists.

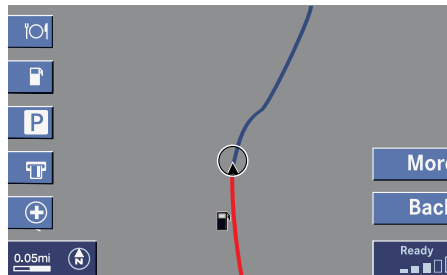

P82.86-4229-31US

Available soft keys

After pressing a softkey on the left side, a corresponding list (▷ page 126) or, if a POI is close by, the map will appear with one POI spotlighted (▷ page 141).


- soft key:
Shows a list of restaurants or the map with one restaurant spotlighted.
- soft key:
Shows a list of filling stations or the map with one filling station spotlighted.

Navigation

During route guidance

- soft key:
Shows a list of parking facilities or the map with one parking facility spotlighted.
- soft key:
Shows a list of ATMs or the map with one ATM spotlighted.
- soft key:
Shows a list of hospitals or the map with one hospital spotlighted.

If you press this soft key the following warning message will appear:

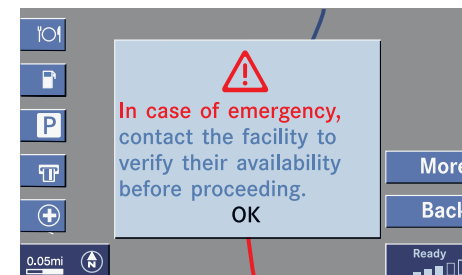

P82.86-4230-31US

Navigation

During route guidance

- More soft key:
If you press this soft key, the Navigation main menu (▷ page 96) will appear. Enter stopover will appear on the status bar.
You can now enter an stopover destination by
 - selecting one from the destination memory (▷ page 135)
 - typing one in the Enter street menu (▷ page 100)
 - selecting one in the Last destinations memory (▷ page 134)
 - selecting a Point of interest (▷ page 138)
 - entering a POI by phone number (▷ page 142)
 - selecting one in the Today's plan memory (▷ page 144)

- ▶ Press a soft key, e.g. **POI**.

One of the following displays will appear

- a list with restaurants (see below)
- the map with one restaurant spotlighted if the POI is close by.

Select a POI on the map (▷ page 141).



The arrows indicate the direction of the destination. The distances indicated are straight line distances to the destination.

Selecting a POI in a list

- ▶ Push the joystick to **▼** or **▲** to select an entry.
- ▶ Use the Page soft keys to scroll page-wise through the list (if available).
- ▶ Press the Details soft key if required. Details on the destination are shown.
- ▶ After you have selected a destination, press **OK**.

The Start route guidance menu will appear (▷ page 115).


- ▶ Press **OK**.

The system calculates the route to the selected stopover destination. After that, the route to the main destination is also calculated from the stopover destination.

Deleting or replacing a stopover destination

- ▶ Activate the soft key display (▷ page 121).
- ▶ Press the Stopover soft key.

The menu for deleting or changing a stopover destination will appear.

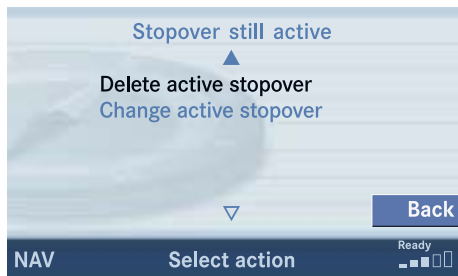

P82.86-4233-31US



If no stopover destination has been entered, the full view map appears instead of the menu. You can now enter a stopover destination (▷ page 125).

- ▶ Push the joystick to ▲ or ▼ to select Delete active stopover.
- ▶ Press **OK**.

The stopover destination last input is deleted. The system calculates the route to the main destination.

Navigation

During route guidance

or

- ▶ Push the joystick to ▲ or ▼ to select Change active stopover.
- ▶ Press **OK**.

The stopover destination is deleted and you can enter a new stopover destination (▷ page 125).

Navigation

During route guidance

Saving the current location

The system can save the current position as a destination in the Last destinations memory (▷ page 134).

- ▶ Press any soft key to activate the soft key display. Press the Memory soft key.

The current location is saved.




Such destinations are marked in the Last destinations memory with ● (▷ page 134).

If a destination is to be saved for later or repeated use, the current location can be stored in the standard destination memory (▷ page 135).

Defining route guidance displays

- ▶ Activate the soft key display (▷ page 121).
- ▶ Press the Display soft key.
The Settings menu will appear.

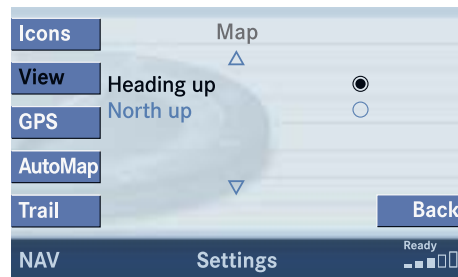

Settings menu

You can now use the soft keys to activate other menus.

- Icons soft key:
Brings you to the POI Icons display settings (▷ page 129).
- View soft key:
Brings you to the map orientation settings (▷ page 130).
- GPS soft key:
Brings you to the GPS display settings (▷ page 130).
- Automap soft key:
Brings you to the Split screen settings (▷ page 131).
- Trail soft key:
Brings you to the Trail settings (▷ page 132).

Setting POI Icons displays


You can set which POIs are shown as symbols on the map.



You will see the symbols only if the map scale is in the zoomed in scales. Altering the map scale (> page 119).

- ▶ In the Settings menu, press the I icons soft key.

The available options are displayed.

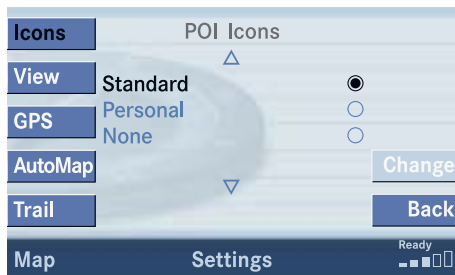

P82.86-4236-31US

- ▶ Push the joystick to ▲ or ▼ to select an option.

- ▶ Press **OK**.

The option is activated ●.

- Standard option:

The map shows the default symbols.

- Personal option:

You can determine the symbols which are displayed. The following section explains the further operation.



The Change soft key becomes available if the Personal option is chosen.

- None option:

No symbols are shown on the map.

Navigation

During route guidance

Setting personal symbol display

- ▶ After selecting the Personal option, press the Change soft key.

The list of available symbols is displayed.

Meaning	Symbol
Selected	<input checked="" type="checkbox"/>
Unselected	<input type="checkbox"/>

- ▶ Push the joystick to ▲ or ▼ to select a list entry.

- ▶ Press **OK**.

The symbol is activated or deactivated depending on its previous state. You may also activate more than one symbol.

Navigation


During route guidance

- ▶ Press the Back soft key to confirm and return to the map.

Setting map view

- ▶ In the Settings menu (▶ page 128), press the View soft key.

The available options are displayed.

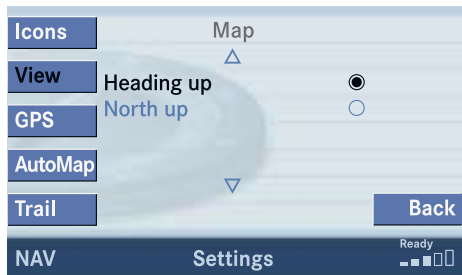

P82.86-4235-31US

You can select the following map orientations:

- **Heading Up**
Dynamic map alignment, map is displayed facing driving direction pointing up
- **North Up**
Map is displayed facing north

Option	Symbol
On	●
Off	○

Changing map view

- ▶ Use the joystick to ▲ or ▼ to select the deactivated option.
- ▶ Press **OK**.
The orientation is changed.
- ▶ Press the Back soft key to confirm and return to the map.



A symbol is shown on the bottom left side of the status bar.


- **North symbol** (⬆):
Map is displayed facing north
- **Compass symbol** (⬆):
Dynamic map alignment, map is displayed facing driving direction pointing up

Switching the GPS info setting on/off

When the GPS info setting is active, the following data are displayed on the status bar:

- your current position in the form of coordinates
- the number of satellites currently received
- the height above the sea level

- ▶ In the Settings menu (▷ page 128), press the GPS soft key. The options On and Off are displayed.

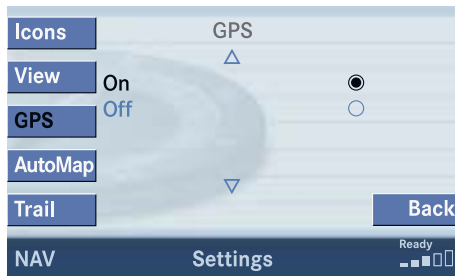

P82.86-4237-31US

The symbol ● indicates the present setting.

- ▶ Use the joystick to ▲ or ▼ to select the option with the symbol ○.
- ▶ Press button OK. Depending on the previous setting, the GPS is switched on or off.
- ▶ Press the Back soft key to confirm and return to the map.

Automatic map toggling

You can set the change from map to split view.




- Map Shows the full screen as a map.
- Split screen Uses the right hand part of the screen to show maneuver icons and/or intersection zooms.

Navigation

During route guidance

- ▶ In the Settings menu (▷ page 128), press the AutoMap soft key. The available options are displayed.

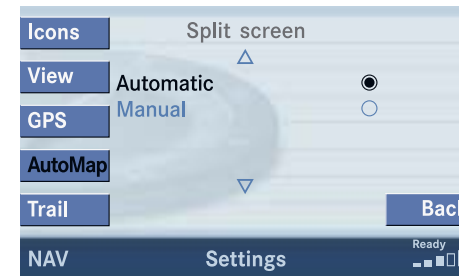

P82.86-4238-31US

You can select the following options:

- Automatic The system automatically switches to split view whenever it announces a driving maneuver. When the driving maneuver is completed, the system reverts to the full view.

Navigation

During route guidance

- Manual
If you choose this option, the system only switches to split screen by pressing **MAP**.

The symbol ● indicates the present setting.

- ▶ Move the **OK** joystick in ▲ or ▼ direction to select the option with the symbol ○.
- ▶ Press button **OK**.
The option is changed.
- ▶ Press the Back soft key to confirm and return to the map.


Trail settings

With this function is active, the COMAND records a trail every time the vehicle is in an OFF ROAD area (more than 0.25 miles away from a digitized road).

The system places trail dots on the screen until it matches to a digitized road again.

- ▶ In the Settings menu (▷ page 128), press the Trail soft key.

The options On and Off are displayed.

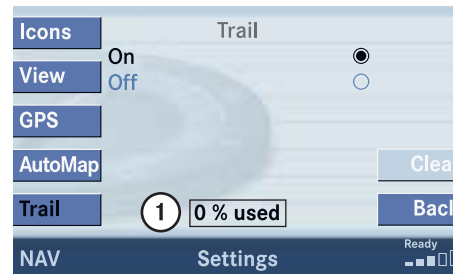

P82.86-4239-31US

- ① Percentage of used memory

The symbol ● indicates the present setting.



- ▶ Move the **OK** joystick in ▲ or ▼ direction to select the option with the symbol ○.
- ▶ Press **OK**.
Depending on the previous setting, the Trail is switched on or off.
- ▶ Press the Back soft key to confirm and return to the map.

Delete a trail

If there is a trail in memory, you can delete it.

- ▶ Press the Cl ear soft key.

The message Are you sure you want to clear all trails? will appear in a window.

- ▶ Push the joystick to  to select Yes.
- ▶ Press .

The trail is deleted.

If you don't want to delete a trail

- ▶ Press  to confirm No.

Navigation

Last destinations and destination memory

▼ Last destinations and destination memory

Last destinations memory

The Last destinations memory automatically saves last destinations to which you have started route guidance. The memory can save a maximum of 50 destinations.

You can save your current position as a destination in the memory (▷ page 99). Such destinations are marked with ●.




The home address is not saved in the last destinations memory.

Activating the last destination memory

- ▶ Activate the Navigation main menu (▷ page 96).
- ▶ Push the joystick to ▼ to select menu item Last destinations.
- ▶ Press **OK**.

The last destinations list is displayed. The most recent destination is at the top of the list.

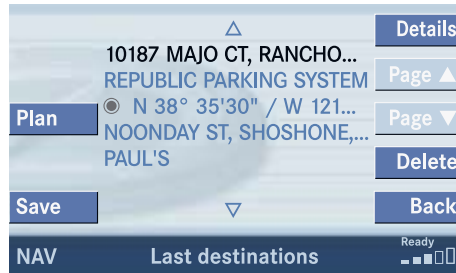

P82.86-4249-31US

Selecting a destination from the last destinations memory

- ▶ Push the joystick to ▼ or ▲ to select an entry.
- ▶ Use the Page soft keys to scroll page-wise through the list (if available).

Now you can

- start route guidance to the selected entry (▷ page 135)
- add the selected entry to today's plan (▷ page 144)
 - ▶ Press the **Plan** soft key.
- save the selected entry in the destination memory
 - ▶ To do this, press the **Save** soft key. Further operation is explained in chapter "Saving destination in the destination memory" (▷ page 135)
- view details on the selected entry (if available)
 - ▶ Press the **Details** soft key.
- delete the selected entry (▷ page 135)

Starting route guidance to a last destination

- ▶ Select a destination from the Last destinations memory.

- ▶ Press **OK**.

The Start route guidance menu will appear (▷ page 115).

Deleting a destination from the last destinations memory

- ▶ Select a destination from the Last destinations memory.

- ▶ Press the Delete soft key.

An inquiry menu appears asking if the destination selected is to be deleted from the Last destinations memory.

- ▶ Push the joystick to **◀** to select Yes.

- ▶ Press **OK** to confirm if you want to delete.

The destination is deleted.

Destination memory

In the destination memory, you can save destinations under freely assignable names. The memory can save a maximum of 200 destinations.

Saving a destination in the destination memory

- ▶ In the Start route guidance menu (▷ page 115), press the Save soft key.

or

- ▶ Select a destination in the Last destinations memory (▷ page 134) and press the Save soft key.

or

- ▶ Select a destination in the Today's plan memory (▷ page 144) and press the Save soft key.



You can now

- save the destination under a new name or



If a POI is used, the POI name appears as default.

- confirm the given destination name

- ▶ Press **OK**.

The message The address was saved as <name> will appear.

After that, the Start route guidance menu, the Last destinations memory or the Today's plan memory reappear.

Navigation

Last destinations and destination memory

Create a new name

- ▶ Push the joystick to , , or to select the characters. After each selection, press .
- ▶ Push the joystick to or to select characters diagonally.
- ▶ Press to confirm the entry.


The message The address has been saved as <name> will appear.

After that, the Start route guidance menu, the Last destinations memory or the Today's plan memory reappear.

Activating the destination memory

- ▶ Activate the Navigation main menu (▷ page 96).
- ▶ Push the joystick to or to select menu item Destination memory.
- ▶ Press .

The destination memory will appear. The destination memory is sorted in alphabetical order.

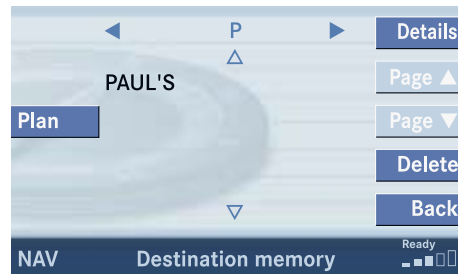

Selecting a destination from the destination memory

Activating the listing for the desired letter

- ▶ Activate the destination memory.
- ▶ Push the joystick to or until the listing for the desired letter appears.

With every push of the joystick the display changes to the next possible letter.

or

- ▶ Press to of the 12-button keypad. Press a key once or several times in quick succession until the listing for the desired letter appears.



E.g.: Key

Press 1 x = access to listing for letter J

Press 2 x = access to listing for letter K

Press 3 x = access to listing for letter L

Category Others

At the end of the letter list follows the category *Others*.

- ▶ Press ***** to access.

Category *Others* includes entries without names or names starting with a special character (e.g. +, !, * etc.).

Selecting a destination

- ▶ Push the joystick to **▲** or **▼** to select a destination in the listing.
- ▶ Use the Page soft keys to scroll page-wise through the list (if available).

Now you can

- start route guidance to the selected destination
- add the selected entry to today's plan (▷ page 144)
 - ▶ Press the Plan soft key.
- view details on the selected destination (if available)
 - ▶ To do this, press the Details soft key.
- delete the selected destination

Starting route guidance to a destination from the destination memory

- ▶ Select a destination from the destination memory.
- ▶ Press **OK**.
The Start route guidance menu will appear (▷ page 115).

Deleting a destination in the destination memory

- ▶ Select a destination from the destination memory.
- ▶ Press the Delete soft key.
A prompt message appears.
- ▶ Push the joystick to **◀** to select Yes.
- ▶ Press **OK**.
The system deletes the navigation entry from the destination memory.

Navigation

POIs (Points of Interest)

▼ POIs (Points of Interest)

This function allows you to select Points of Interest such as gas stations, parking facilities or shopping centers.



You can also select a POI

- in the Start route guidance menu (▷ page 109) or during route guidance (▷ page 121)
- on the map (▷ page 141)
- by entering a phone number (▷ page 142).

Entering POIs

- ▶ Activating the Navigation main menu (▷ page 96).
- ▶ Push the joystick to to select menu item Points of Interest.
- ▶ Press **OK**.

The Select POI category menu will appear.

Selecting a POI category




P82.86-4240-31US

Select POI category menu

Available soft keys

- Name soft key:
Brings you to the Enter POI menu (▷ page 140).
 - Details soft key:
Shows all information about the POI category.
 - Page ▼ and Page ▲ soft keys:
Use the Page ▼ and Page ▲ soft keys to display the next or previous page.
 - Back soft key:
Returns you to the previous menu.
- ▶ Push the joystick to ▼ or ▲ to select the desired POI category.
- ▶ Press **OK**.
The Find menu will appear.

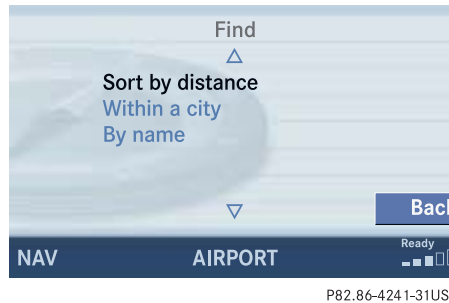

Find menu

You can select between the following menu items:

- Sort by distance:
The Select POI list will appear.
- Within a city:
The Enter city menu will appear (▷ page 140). Select a Point of Interest around any location.
- By name:
The Enter POI menu will appear (▷ page 140).

Navigation

POIs (Points of Interest)

- ▶ Press **OK** to confirm Sort by distance.
The Select POI list will appear.

Selecting a POI



Select POI list

The list shows the available POIs with direction, distance and name. The nearest POI is on top of the list.

- ▶ Press the Details soft key if required.
Details on the POI are shown.

Navigation

POIs (Points of Interest)

- ▶ Push the joystick to **▼** or **▲** to select the desired POI.

- ▶ Press **OK**.

The Start route guidance menu will appear (▷ page 115).

Entering a city

- ▶ In the Find menu, push the joystick to **▼** to select menu item **W i t h i n a c i t y**.

- ▶ Press **OK**.

The Enter city menu will appear (▷ page 107).

- ▶ Enter the city and press **OK** to confirm.

A list showing the available POIs within the entered city will appear.

- ▶ Select the desired POI from the list and press **OK** to confirm.

The Start route guidance menu will appear (▷ page 115).

Entering a POI by name

- ▶ In the Select POI category menu, press the **Name** softkey.

or

- ▶ In the Find menu, push the joystick to **▼** to select menu item **By name**.

The Enter POI menu will appear.



P82.86-4244-31US

Enter POI menu



If menu item **By name** is chosen, the corresponding category symbol will appear in first line.

- ▶ Enter the POI name and press **OK** to confirm.

A list showing the entered POI name will appear.

- ▶ Press **OK**.

The Start route guidance menu will appear (▷ page 115).

Selecting a POI on the map


- ▶ Press **MAP**.
The full view of the map will appear.
Your current position and the special destinations are indicated by symbols.



You can define which symbols will be shown on the map (▷ page 129).

- ▶ Press any soft key.
The soft key displays will appear.
- ▶ If required, move the map pushing the joystick to , , , , or .

- ▶ Press the POI s soft key.
One of the POI is spotlighted. The name belonging to it is shown on the status bar.

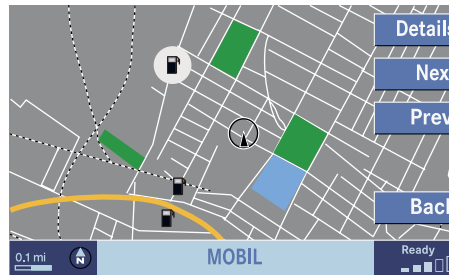

P82.86-4231-31US

- ▶ Use the Next or Prev. soft key to select the desired POI.

Navigation

POIs (Points of Interest)



- ▶ Press the Details soft key if required.
Details on the POI selected are shown.
- ▶ Press **OK**.
The Start route guidance menu will appear (▷ page 115).

Navigation

POIs (Points of Interest)


Entering a POI by phone number

If a phone number is associated with a POI, the number can be used to select a destination and making a call. The database uses phone numbers in the USA and Canada.

- ▶ Activating the Navigation main menu (▷ page 96).
 - ▶ Push the joystick to  to select menu item Phone number.
 - ▶ Press .
- The Enter POI phone number menu will appear.




 
The menu always appears with the “1” prefix in first line.

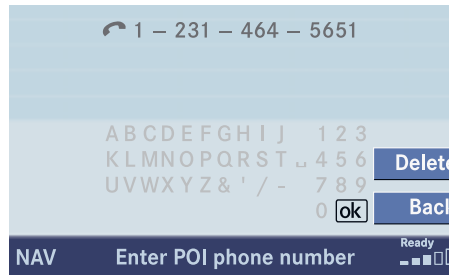




 



P82.86-4245-31US




Numbers not available for entry are greyed out.

- ▶ Use the number keys  through  to enter the phone number.

or

- ▶ Push the joystick to , ,  or  to select the numbers. After each selection, press .
- ▶ Push the joystick to  or  to select numbers diagonally.

When the number is complete, the  field is highlighted.

- ▶ Press .

The Start route guidance menu will appear (▷ page 115).



Multiple matches to a phone number can occur if several businesses share a number, or if a central number is used to cover multiple locations. In these cases, you will see a list to choose among them.

Dialing the POI phone number*

- ▶ Press the Cal I soft key in the Route guidance menu.



The Cal I soft key is visible if vehicle is equipped for phone operation and Mercedes-Benz specified mobile telephone* is inserted in phone cradle*.

Dialing will begin. In the status bar, the off-hook symbol will appear. If the person called answers the call, the call is active. You talk over the hands-free set.

- ▶ Press **END** to end the call.

Navigation

Today's plan

▼ Today's plan

The today's plan memory can be used to save destinations for which routes can be calculated one after the other. The memory can save a maximum of 18 destinations.

Adding a destination to today's plan

You can add a destination to today's plan

- from the Route guidance menu
 - from the Last destinations memory and
 - from the Destination memory.
- ▶ Press the Plan soft key in the corresponding menu.

The message The <address> has been added to today's plan. will appear briefly.



The message Today's plan is full. You must delete an entry before saving a new one. will appear if the maximum of 18 destinations is saved.

Activating today's plan

- ▶ Activate the Navigation main menu (▷ page 96).
- ▶ Push the joystick to ▼ to select menu item Today's plan.



The menu item Today's plan is available if destinations are added to today's plan.

The number of saved entries is shown.

- ▶ Press **OK**.

The today's plan memory will appear. The most recent added destination is at the top of the list.



P82.86-4246-31US

Today's plan memory


Available soft keys

- **Bestway soft key:**
Sorts entries to obtain the most efficient route through all the destinations (▷ page 145).
- **Rnd trip soft key:**
Sorts entries to obtain a route that circles through all the destinations and eventually ends at the starting position (▷ page 145).
- **Del. all soft key:**
Deletes all entries.
- **Save soft key:**
Saves an entry to the destination memory.
- **Details soft key:**
Shows the entry in full.
- **Page ▼ and Page ▲ soft keys (if available):**
Use the Page ▼ and Page ▲ soft keys to display the next or previous page.
- **Back soft key:**
Returns you to the previous menu.

Best way

- ▶ Press the Bestway soft key in the today's plan memory.

The today's plan memory is sorted to obtain the most efficient route through all the destinations.

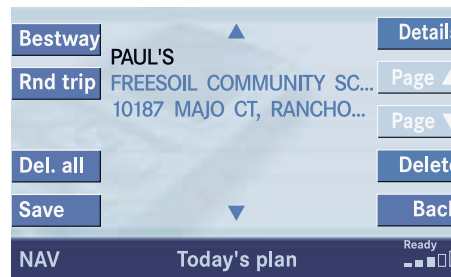

P82.86-4247-31US

Round trip

- ▶ Press the Rnd trip soft key in the today's plan memory.

The today's plan memory is sorted to obtain a route that circles through all the destinations.

Navigation

Today's plan

The current vehicle location is placed at the bottom of today's plan as Starting position entry.



The Starting position can be represented by e.g. a parking lot or an off road location.




P82.86-4248-31US




Navigation

Today's plan

Display details for starting position

- ▶ Push the joystick to  to select Starting position.
- ▶ Press the Details soft key.
The address information will appear.

Selecting a destination from the today's plan

- ▶ Activate the today's plan.
 - ▶ Push the joystick to  or  to select an entry.
 - ▶ Use the Page soft keys to scroll page-wise through the list (if available).
 - ▶ Press .
- The Start route guidance menu will appear (▷ page 115).








When you reach the destination, route guidance ends and the system deletes the today's plan entry.

Saving a today's plan entry in the destination memory




- ▶ Activate the today's plan.
- ▶ Press the Save soft key.
The Destination memory input menu will appear (▷ page 135).

Deleting a today's plan entry

- ▶ Activate the today's plan.
- ▶ Push the joystick to  or  to select an entry.
- ▶ Press the Delete soft key.
A prompt message will appear.
- ▶ Push the joystick to  to select Yes.
If you do not want to delete the entry:
 - ▶ Press  to confirm No.
- ▶ Press .

The system deletes the destination in the today's plan. The entries below the destination deleted move up by one position.

Deleting all the today's plan entries

- ▶ Activate the today's plan.
- ▶ Press the Delete All soft key.
A prompt message will appear.
- ▶ Push the joystick to  to select Yes.
If you do not want to delete the entries:
 - ▶ Press  to confirm No.
- ▶ Press .

The system deletes all the destination entries in the today's plan.

▼ Software Updates



Navigation

Software Updates

- ① Ejecting DVD
- ② Opening/closing the display unit
- ③ Warning message Press EJECT to close

You can update the system with a new navigation DVD. The new DVD may include new maps and/or new device software.

Warning



The display unit can cause injury if contacted when open. Please close after inserting a navigation DVD.



Do not place anything on the lowered display panel. Placing objects on the lowered display panel may result in damage to the display or COMAND unit which is not covered by the Mercedes-Benz Limited Warranty.



Updating may take several minutes. During updating, the operation of COMAND is restricted. You cannot switch off the system.

Starting an update

DVDs are loaded and ejected at the navigation module.



The navigation module is located behind the display unit of the COMAND (> page 147).



There are two **EJECT** buttons. One is on the display unit ②. The other is located left of the DVD NAVIGATION slot ① behind the display.

- ▶ Switch the COMAND on (> page 27).

Ejecting

- ▶ Press **EJECT**.

The display unit moves forward and then tilts down. The DVD NAVIGATION slot is visible.

- ▶ Press the **EJECT** button left of the DVD NAVIGATION slot.

The navigation module ejects the DVD. The message No DVD in drive. Please insert Navigation DVD. will appear.

- ▶ Remove the DVD from the slot.

Loading

- ▶ Insert the new navigation DVD into the DVD slot with the label side up.

The message `Navigation is initializing. Please wait.` will appear.

- ▶ Press `EJECT` on the display unit to return the display unit to its closed position.

The display unit tilts up and then moves to the rear.



Inserting a second DVD with another DVD still loaded will cause damage to the DVD drive which is not covered by the Mercedes-Benz Limited Warranty.

After that, the COMAND loads the software on the DVD.

Shortly after that, the progress bar appears. After some time, the progress bar reaches 100%.

The update is completed. You can now operate the navigation system again.



The message `Press EJECT to close` will appear. If `EJECT` on the display unit is not pressed within 20 seconds, eight successive series of two beep tones will sound to remind you to return the display to its closed position by pressing `EJECT` on the display unit.

Navigation

150

Service

Service main menu

SMS*

Tele Aid*

Service

Service main menu

▼ Service main menu


Activating the Service main menu

- ▶ Press **SERV**.

The Service main menu will appear.



If a service submenu is displayed, you need to press the **Back** soft key.

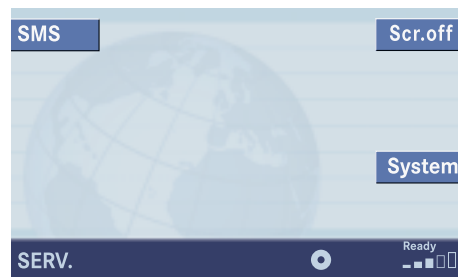

P82.86-4252-31US

Service main menu

You can use the soft keys to open other menus

- **SMS soft key*:**
Opens the SMS Inbox Folder (▷ page 153).



The SMS soft key is visible if vehicle is equipped for phone operation and Mercedes-Benz specified mobile telephone* is inserted in phone cradle*.

- **Scr.off soft key:**
 - ▶ Press the **Scr.Off** soft key.
The screen is switched off.
 - ▶ Press any soft key or button.
The screen is switched on again.

- **System soft key:**
Switches to the system settings (▷ page 160).


▼ SMS*



The functions described here apply if your vehicle is equipped with mobile phone cradle* and a Mercedes-Benz specified mobile phone*.

With the SMS Received list, you can receive SMS messages provided that SMS messaging is available from your mobile phone service provider.



If you have received new SMS messages,  is displayed on the status bar. Additionally, a message received tone is played.




If another system is active (e.g. radio), a window with the message Received a new SMS appears when SMS message is coming in.

SMS Received list

- ▶ Activate the Service main menu (▷ page 152).
- ▶ Press the SMS soft key.
The Received list will appear.

Service

SMS*

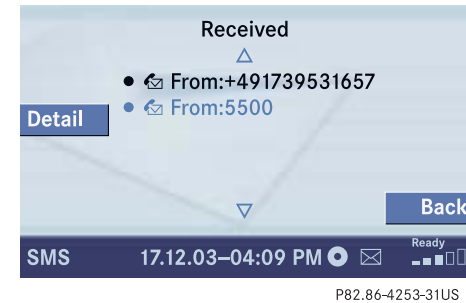


If the message Empty appears, there are no SMS messages.

The status bar shows date and time of the message.

One line is provided for each message.

Symbol ● = Message unread

Symbol  = SMS message

Service

SMS*

- ▶ Press the **Detail** soft key.

The list entry will appear in full in a window.

Line-by-line scrolling through the SMS Received list:

- ▶ Push the joystick to **▲** or **▼** to highlight the desired message.

Back to the Service main menu:

- ▶ Press the **Back** soft key.

Reading SMS message received

- ▶ In the SMS Received (▷ page 153) list, push the joystick to **▲** or **▼** to highlight the desired message.

- ▶ Press **OK**.

The message is displayed. In the status bar, the name or the phone number of the sender will appear.

Line-by-line scrolling through the message text:

- ▶ Push the joystick to **▲** or **▼**.

Back to the SMS Received list:

- ▶ Press the **Back** soft key.

▼ Tele Aid*

Tele Aid* incorporates the following functions:

- Emergency call system
- Roadside Assistance
- Information

Emergency call system

For certain emergency situations, the system automatically triggers an emergency call. An emergency call can also be triggered manually by pressing the corresponding button. Refer to your vehicle Operator's Manual for additional information.

If the system initiates an emergency call, **Connecting** and the 📞 symbol will appear on the status bar. All active connections are terminated.



During the emergency call, **Call Connected** appears on the status bar. No operation from COMAND is possible, so you cannot disconnect the emergency call.

Roadside Assistance


Roadside Assistance will assist if technical problems with your vehicle are experienced.

Roadside Assistance can be requested manually by pressing the corresponding button. Refer to your vehicle Operator's Manual for additional information.

Upon request of Roadside Assistance, the system initiates the call to the Assistance. **Connecting** and the 📞 symbol will appear on the status bar. All active connections are terminated except Emergency call.

Service

Tele Aid*

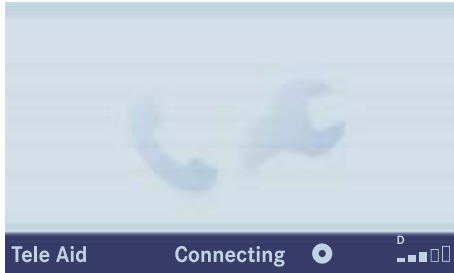

If the connection is made, the message **Call Connected** appears on the status bar.

During activation of a Roadside Assistance call, it is not possible to switch to another application, but you can initiate an Emergency call, if necessary.


Terminating the connection


- ▶ Press **END**.

COMAND reverts to the system last active before Tele Aid was activated.

Information

A call to the Response Center will be initiated by pressing the corresponding button. Information regarding the operation of your vehicle, the nearest authorized Mercedes-Benz Center or Mercedes-Benz USA products and services is available to you. Refer to your vehicle Operator's Manual for additional information.

When an information call is initiated, **Connecting** and the  symbol will appear on the status bar. All active connections are terminated except Emergency call and Roadside Assistance call.

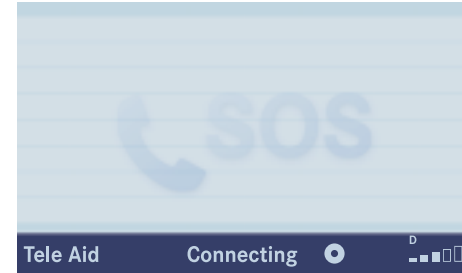

When the connection is made, the message **Call Connected** appears on the status bar.

During activation of an Information call, it is possible to switch to another application and initiate an Emergency call or Roadside Assistance call, if necessary.

Terminating the connection

- ▶ Press **END**.

COMAND reverts to the system last active before Tele Aid was activated.

Service

158

System settings

System settings

System settings

System settings

▼ System settings

Activating the System settings menu

- ▶ Press **SERV**.
- ▶ In the Service main menu (▷ page 152), press the System soft key.



P82.86-4257-31US

System settings menu

In the System settings menu you can:


- select the time zone and daylight savings time settings
- select the language (▷ page 161)
- switch verification and notification tones on and off (▷ page 162)
- adjust display settings (▷ page 163)
- reset all settings to the factory settings (▷ page 164)

Selecting the time zone

You can select the applicable time zone and daylight saving time settings.

- ▶ In the System settings menu, press the Time soft key.

The available time zones are shown.

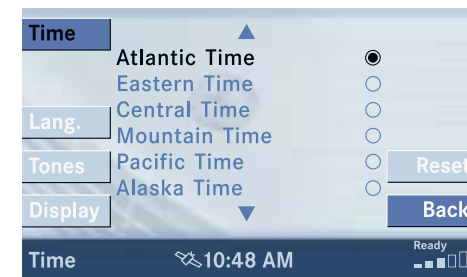


P82.86-4258-31US

- ▶ Push the joystick to **▲** or **▼** to select the time zone.

- ▶ Press **OK**.

You can now select the daylight saving time settings.

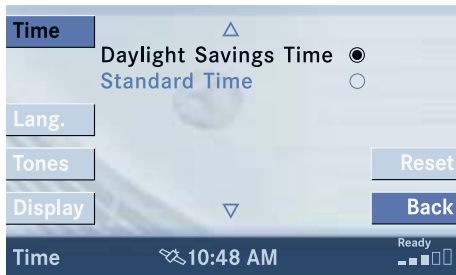

P82.86-4259-31US

Option	Symbol
Time change selected	●
Time change not selected	○

- ▶ Push the joystick to ▲ or ▼ to select the desired entry.
Dayl ight Savi ngs Ti me:
Changes from summer to winter time automatically.
Standard Ti me:
No time conversion is made. The change to winter time must be made manually.
- ▶ Press **OK**.
The System settings menu will appear.
The setting is saved.


System settings

System settings

Selecting the language

The language affects the menu text displays and the voice output during route guidance.

- ▶ In the System settings menu (▷ page 160), press the Lang. soft key.
The languages list will appear.

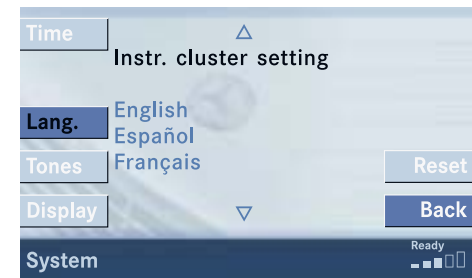

P82.86-4260-31US

System settings

System settings


Option Instr. cluster setting
COMAND will use the same language as is set in instrument cluster.

- ▶ Push the joystick to ▲ or ▼ to select the desired language.
- ▶ Press **OK**.

The System settings menu will appear with the display text in the language selected.

Switching verification and notification tones on and off

- ▶ In the System settings menu, press the Tones soft key.
The Tones menu will appear.

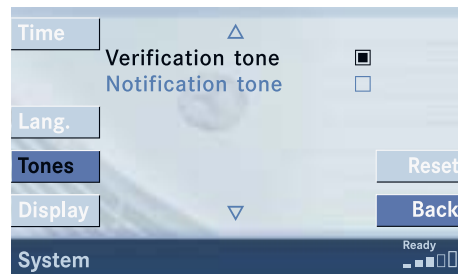

P82.86-4261-31US

Option	Symbol
Tone activated	<input checked="" type="checkbox"/>
Tone deactivated	<input type="checkbox"/>

- ▶ Push the joystick to ▲ or ▼ to select an entry.
- ▶ Press **OK**.


The respective tones are activated or deactivated. You hear the tone when you activate it.

- ▶ Press the Back soft key.

The System settings menu will appear.
The setting is saved.

Making display settings

- ▶ In the System settings menu, press the Display soft key.

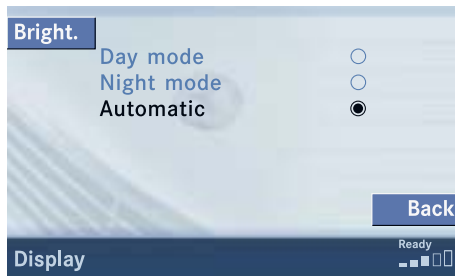

P82.86-4263-31US

Option	Symbol
Display mode selected	●
Display mode not selected	○

You can use the following functions:

- set the display dimming characteristics
- adjust the display brightness

Setting the display dimming characteristics

- ▶ Push the joystick to ▼ or ▲ to select an entry.

Day mode

The display is continuously set to daylight design.

Night mode

The display is continuously set to night-time design.

Automatic

The display changes depending on the ambient light sensor in the vehicle.

System settings

System settings

- ▶ Press **OK**.

The setting is applied. The System settings menu will appear.

Adjusting the display brightness

- ▶ Press the Bright. soft key.



P82.86-4262-31US

- ▶ Push the joystick to ◀ or ▶ direction to adjust the brightness.

System settings

System settings

or

- ▶ Press the Bright soft key longer than 2 seconds.

The display brightness changes gradually. When the slider reaches the end of the left or right border, it starts moving into the opposite direction.

- ▶ Release the Bright soft key.

Confirming the setting

- ▶ Press the Back soft key.

or

- ▶ Press **OK**.

The brightness setting is applied.


Resetting all settings to the factory settings



All your personal data, e.g. Last destination entries or Radio main menu preset entries, will be deleted.

- ▶ In the System settings menu, press the Reset soft key.

The Reset inquiry menu will appear. No is highlighted.

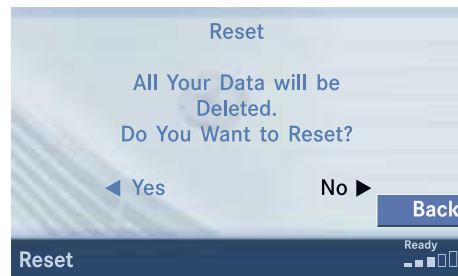

P82.86-4265-31US

If you do not wish to reset to the factory settings

- ▶ Press the Back soft key or press **OK**.

The System settings menu will appear.

Accepting the factory settings

- ▶ Push the joystick to **◀** or **▶** direction to select Yes.

- ▶ Press **OK**.

The message All data has been reset. COMMAND will now restart. will appear.



The factory settings are:

Time - Atlantic Time

Language - Instrument cluster

Verification tone - On

Notification tone - On

Display setting - Automatic

Audio source

This includes the systems radio and CD (CD drive in the control unit, CD changer*).

Balance

Defines sound-center left/right.

COMAND

(Cockpit Management and Data System)

Information and operating center for vehicle sound and communications systems, including the radio and CD player, as well as for other optional equipment (CD changer*, telephone*, etc.).

DVD

(Digital Versatile Disc)

Digital storage medium for storing large amounts of data.

Emergency call

This function places a call to a local 911 provider. It does not initiate a ->Tele Aid* call. Please note that the 911 emergency call system is a public service. Using it without due cause is a criminal offense.

Fader

Defines sound-center front/back.

GPS

(Global Positioning System)

Satellite-based system for relaying geographic location information to and from vehicles equipped with special receivers. Employs DVD digital maps for navigation.

Heading Up

Dynamic map alignment, map is displayed facing driving direction pointing up.

LOGIC7 Surround

Playback method resulting in an improved spatial listening experience compared to conventional stereo playback.

Navigation DVD

Contains all available destination addresses (town, road, intersection, house number, special destinations) and the digital map material for a country or a region for destination entry, route calculation and destination guidance at time of DVD production. DVD maps do not cover all areas nor all routes within an area.

North Up

The map is displayed facing north during route guidance.

Glossary

PIN code

Your PIN code prevents unauthorized persons from using your GSM mobile phone. The PIN code is a number string, which you have to enter when switching on the telephone.

Provider

is the network operator who makes available (provides) telephone services

Roaming

For this function, the telephone uses the telephone network of a contract partner. There are home type and non-home type systems. The ROAMING indicator in the COMAND display indicates that a call is being made using a non-home type system.

Service source

This includes the systems telephone* and navigation (voice output during destination guidance)

SMS

(Short Message Service)

With this function you can receive and read short text messages (if SMS service is provided by your provider)

Soft keys

Keys that activate different functions. Function of key depends on the selected operating mode.

Tele Aid*

(Telematic Alarm Identification on Demand)

The Tele Aid system consists of three types of response: automatic and manual emergency, roadside assistance, and information. Tele Aid is initially activated by completing a subscriber agreement and placing an acquaintance call. Refer also to the vehicle operating instructions.

The Tele Aid system is operational provided that the vehicle's battery is charged, properly connected, not damaged, and cellular and GPS coverage is available.

Unlock code

Your unlock code prevents unauthorized persons from using your telephone. The unlock code is a number string, which you have to enter when switching on the telephone, if you have locked the phone before or the setting of the phone lock is automatically.

Voice output

During a trip, apart from visual informations (symbol or map displays), COMAND also provides all of the necessary spoken route information via voice output.

A

- Accepting
 - call 80
- Activating
 - destination memory 136
 - Enter street menu 100
 - last destinations 134
 - Navigation main menu 96
 - Service main menu 152
 - System settings menu 160
 - today's plan 144
- Active call 85
- Activating
 - sound functions* 31
- Adding
 - destination to today's plan 144
- Adjust
 - balance/fader 29
- Adjusting
 - display brightness 163
 - volume 28

- Altering
 - map scale 119
- AM Band 35
- Arriving
 - at destination 119
- Automatic map toggling 131

B

- Balance control 29
- Bass 30
- Begin dialing 82

C

- CALC RTE 115
- CALL CONNECTED 155, 156
- CALL FAILED 73, 82
- Calling up
 - main menus 24
- Cancelling
 - route guidance 120
- CD
 - loading
 - into the COMAND 45

- Repeat track 56
- Track mix 57
- track select 52
- CD changer*
 - CD mix 57
 - Repeat CD 57
- CD operation 44
 - fast forward/reverse 54
 - general information 44
 - playback mode 55
 - switching to CD operation 49
- Changing
 - map display 119
- COMAND
 - switching off 27
 - switching on 27
- CONNECTING 155, 156
- CONTINUE ROUTE GUIDANCE 96
- Current vehicle location 117
- D**
 - Destination input 100
 - Destination memory 135

Index

Dialing
subsequent dialing 82

Displaying
phone book 88
route list 122

E

Emergency call "911" 75
Emergency call system 155

Ending
call 80, 82

Entering
city 107
destination address 102
house number 103
parking 109
PIN-code 77
PUK 78
telephone number 81
the unlock code 77

F

Frequency range 35

G

GPS 93

H

Hands-free microphone
switching on/off 86

I

Important notes
telephone* 70
Incoming call 80
Information 156

L

Loading
CD
into the COMAND 45
CDs
into the CD changer* 48
Loading/ejecting
navigation DVD 93
LOGIC7 Surround 31

M

Making
a conference call 87
display settings 163
Map orientation
Heading Up 119
North Up 119
Memory
destination memory 135
last destinations 134
Memory functions
radio operation 40
Menu
functions 25
main area 24
soft keys area 24
status bar 24
Menu display 24
Menu system 24
Muting
CD operation 55
satellite radio* operation 62

N

- Navigation
 - Important notes 92
- Navigation displays 117
- Navigation DVD 93
 - loading/ejecting 93
- NAVIGATION IS INITIALIZING. PLEASE WAIT. 149
- NO SERV 79
- NO SERV. 72

O

- Opening
 - the Audio menu 34
- Operating elements
 - CD 14
 - navigation 20
 - radio 12
 - Satellite radio* 16
 - service 22
 - telephone* 18
- Outgoing calls 81

P

- Phone book 88
- PHONE NOT AVAILABLE 73
- PHONE NOT INSERTED 73
- PHONE OFF 74
- PIN BLOCKED. PLEASE ENTER PUK ON CELL PHONE 78
- PIN-code
 - entering 77
- PIN-CODE INCORRECT 78
- PLEASE ENTER LOCK-CODE 72
- PLEASE INSERT SIM CARD (EMERGENCY CALL 911 ONLY POSSIBLE WITH PHONE) 73, 74, 77
- Program category 63
- PUK
 - entering 78

Q

- Quick-dialing 85

R

- Radio operation
 - muting 34

- Radio station
 - saving station manually 40
- Reading
 - SMS message received 154
- Recalculating 115
- Redial 82
- Rejecting
 - call 80
- Resetting
 - all settings to the factory settings 164
- Roadside Assistance 155
- ROAMING 79
- Route calculation 115
- Route guidance 115

S

- Satellite radio*
 - important notes 60
 - memory functions 65
- Satellite radio* operation
 - automatic tuning 63

Index

- Saving
 - current location 128
 - destination 135
 - radio station 40
- Selecting
 - an audio source 34
 - CD (CD changer* only) 51
 - city 109
 - cross street 106
 - detour 123
 - map orientation 119
 - satellite radio* station 63
 - street 103
 - time zone 160
- Setting
 - display dimming characteristics 163
 - map view 130
 - POI Icons displays 129
 - routing mode 98
- SIM-CARD BLOCKED 78
- SMS 153
- Software Updates 147
- Sound functions* 30
- Speed-dialling 85
- Starting
 - route guidance 115
- Station
 - radio station
 - Station selection via number key-pad (presets) 38
 - satellite radio* station
 - station selection via direct channel entry 64
- Subscribing
 - to satellite radio* 61
- Subsequent dialing 82
- Switching
 - the GPS info setting on/off 130
 - to CD operation 49
 - to telephone* operation 78
- Switching off
 - COMAND 27
 - hands-free microphone 86
 - telephone operation 74
- Switching on
 - CD operation
 - CD changer* 50
 - CD drive in the COMAND 50
 - COMAND 27
 - hands-free microphone 86
 - satellite radio* operation 62
 - telephone operation 74
- T**
 - Tele Aid* 155
 - TELEPHONE BEING ACTIVATED, PLEASE WAIT. 73
 - TELEPHONE BEING DEACTIVATED, PLEASE WAIT 74
 - TELEPHONE NOT AVAILABLE 79
 - TELEPHONE NOT INSERTED 79
 - The unlock code
 - entering 77
 - Three-way calling 86
 - Traffic routes
 - minimizing 98
 - Trail settings 132
 - Treble 30

V

Voice instructions 116

Volume

adjusting

at the COMAND 28

automatic volume control 28

W

Weather Band WB 36

Index

172

Index

174

Index

176

Order-No. 6515 6682 13 Part-No. 209 584 97 82 US Edition A 02/04