

Order-No. 6515 6770 13 Part-No. 251 584 79 71 US Edition B 2007

COMAND Operator's Manual ML-Class / GL-Class / R-Class



## COMAND Operator's Manual



Mercedes-Benz

We reserve the right to modify  
the technical details  
of the COMAND system as given  
in the data and illustrations  
of this Operator's Manual.

Press time: 03/20/2006

Reprinting, translation and copying,  
even of excerpts, is not permitted  
without prior authorization in writing.

Title illustration no. P00.01-2982-31

## **Welcome to COMAND!**

Please make yourself familiar with your COMAND control unit and read the instructions in this manual before operating the COMAND system. This will help you derive a greater benefit from the system. Please also follow the instructions and warnings contained in this manual. Ignoring them could result in damage to the vehicle or personal injury to you or others.

The asterisk \* identifies optional equipment. Depending on model, version and configuration, your COMAND system equipment may differ. Therefore, you may find explanations for optional equipment not installed in your vehicle. If you have any questions about the operation of any equipment, your authorized Mercedes-Benz Center will be glad to demonstrate the proper procedures.

We continuously strive to improve our product and ask for your understanding that we reserve the right to make changes in design and equipment. Therefore, information, illustrations and descriptions in this manual might differ from the equipment installed in your vehicle. As such, the information, illustrations and descriptions contained in this manual may not be reasonably relied upon in making any claims with respect to the actual performance of the product.

These operating instructions form an integral part of the vehicle and should therefore always be kept inside the vehicle and passed on to the new owner if the vehicle is sold.

We extend our best wishes for many miles of safe, pleasurable driving.

Mercedes-Benz USA, LLC

A DaimlerChrysler Company



**Introduction** . . . . . 7  
 Where to find it . . . . . 7  
 Symbols . . . . . 8  
 Operating safety. . . . . 9

**At a glance** . . . . . 11  
 Radio operating elements . . . . . 12  
 Single CD operating elements . . . . . 14  
 CD changer\* operating elements. . . . . 16  
 MP3 CD operating elements . . . . . 18  
 Satellite radio\* operating elements . . . 20  
 Telephone\* operating elements. . . . . 22  
 Navigation operating elements . . . . . 24  
 Service operating elements . . . . . 26  
 Multifunction steering wheel . . . . . 28  
     Selecting the multifunction display 29  
     Audio search function. . . . . 30  
 Menu system . . . . . 31  
 Quick reference COMAND . . . . . 34  
     Switching the COMAND control  
     unit on and off . . . . . 34

Volume . . . . . 35  
 Balance and fader. . . . . 36  
 Bass and Treble . . . . . 37  
 Sound functions\* . . . . . 38  
 Rear view camera\* . . . . . 39

**Audio** . . . . . 41  
 Audio operation . . . . . 42  
     Opening the Audio menu . . . . . 42  
     Selecting an audio source . . . . . 43  
     Muting . . . . . 43  
 Radio operation . . . . . 44  
     Switching to radio operation. . . . . 44  
     Changing the Radio band . . . . . 44  
     Selecting a station . . . . . 45  
     Memory functions. . . . . 49  
 CD operation . . . . . 52  
     General information on  
     CD operation . . . . . 52  
     Tips on caring for your CDs . . . . . 53  
     Loading/Ejecting a CD. . . . . 53

CD changer\* operation . . . . . 56  
     Switching to CD changer\* mode . . 56  
     Accessing the CD changer\* . . . . . 56  
     Retracting the CD changer\* . . . . . 56  
     Loading CDs . . . . . 56  
     Ejecting CDs . . . . . 59  
 CD operation . . . . . 61  
     Switching to CD operation . . . . . 61  
     Switching on . . . . . 62  
     Selecting a CD (CD changer\* only). 63  
     Track select . . . . . 64  
     Fast forward/reverse . . . . . 66  
     Muting. . . . . 67  
     Playback mode . . . . . 67  
 MP3 CD operation . . . . . 70  
     Safety instructions . . . . . 70  
     Tips on data storage media . . . . . 70  
     Tips on caring for your MP3 CDs . . 71  
     Tips on creating MP3 CDs . . . . . 71  
     Tips on creating MP3 tracks. . . . . 73  
     Tips on copyright . . . . . 73  
     Switching to MP3 CD mode . . . . . 74

## Contents

Loading a MP3 CD . . . . .	74
Ejecting a MP3 CD . . . . .	74
MP3 main menu . . . . .	75
Selecting a folder . . . . .	76
Track select . . . . .	78
Fast forward/reverse . . . . .	80
Muting. . . . .	80
Playback options. . . . .	80
AUX operation . . . . .	82

<b>Rear Audio/Video*</b> . . . . .	83
Rear Audio operation* . . . . .	84
Connecting headsets . . . . .	84
Selecting the audio source . . . . .	85
Switching off. . . . .	86
Adjusting the volume . . . . .	86
Rear Seat Entertainment (RSE) operation* . . . . .	87
General information on CD/DVD operation . . . . .	87
Permissible CDs/DVDs. . . . .	88

DVD playback requirements . . . . .	89
Operating the Rear Seat Entertainment* (RSE) . . . . .	89
Connecting headsets . . . . .	92
Switching the rear monitor on and off . . . . .	92
Loading/ejecting CDs. . . . .	93
Connecting external video sources. . . . .	95
Adjusting the headset volume . . . . .	96
Adjusting the display brightness. . . . .	96
Switching to CD mode . . . . .	97
Switching to MP3 CD mode . . . . .	99
Switching to DVD mode . . . . .	102
Switching to AUX mode . . . . .	108
System settings . . . . .	109
RSE audio playback through speakers. . . . .	111
Muting on/off. . . . .	111
Setting bass and treble. . . . .	112
Monitor off /on. . . . .	112
Replacing remote batteries. . . . .	113

<b>Satellite radio*</b> . . . . .	115
Important notes . . . . .	116
Subscribing. . . . .	117
Subscribing to satellite radio . . . . .	117
Satellite radio operation. . . . .	118
Switching on . . . . .	118
Changing the program category . . . . .	119
Selecting a station . . . . .	119
Memory functions. . . . .	121
Displaying information . . . . .	122
Displaying service information . . . . .	123
Station list updates. . . . .	123
Sound settings . . . . .	123

<b>Telephone*</b> . . . . .	125
Important notes . . . . .	126
Telephone operation. . . . .	130
Switching telephone operation on . . . . .	130
Switching telephone operation off . . . . .	130
Emergency call "911" . . . . .	131

## Contents

Entering codes . . . . .	133	Destination input . . . . .	156	Stopover function . . . . .	188
Switching to telephone operation	134	Activating the Enter street menu .	156	Saving the current location. . . . .	191
Incoming call . . . . .	136	Selecting the state/province . . . .	157	Defining route guidance displays .	191
Outgoing calls. . . . .	137	Entering destination address . . . .	158	Last destinations and destination	
Active call. . . . .	141	Selecting home address. . . . .	169	memory . . . . .	197
Phone book. . . . .	144	Displaying the compass screen . .	170	Last destinations memory . . . . .	197
<hr/>					
<b>Navigation*</b> . . . . .	147	Route guidance . . . . .	173	Destination memory . . . . .	198
Important notes . . . . .	148	Starting route guidance . . . . .	173	POIs (Points of Interest) . . . . .	201
Navigation DVD . . . . .	149	Route calculation . . . . .	173	Entering POIs . . . . .	201
Route guidance after the vehicle		Recalculating an existing route. . .	173	Selecting a POI on the map . . . . .	204
has been transported . . . . .	150	Voice instructions. . . . .	174	Entering a POI by phone number .	205
Trip interruption during route		Navigation displays. . . . .	175	Today's plan . . . . .	207
guidance. . . . .	151	Partially digitized areas/unverified		Adding a destination	
Navigation main menu . . . . .	152	roads. . . . .	178	to today's plan . . . . .	207
Activating the Navigation		Arriving at destination . . . . .	183	Software Updates. . . . .	210
main menu . . . . .	152	Cancelling route guidance . . . . .	183	<hr/>	
Setting the routing mode . . . . .	154	During route guidance . . . . .	184	<b>Service</b> . . . . .	213
Saving current location. . . . .	155	Displaying the soft keys . . . . .	184	Service main menu. . . . .	214
		Info menu . . . . .	185	Activating the Service main menu	214
		Selecting a detour . . . . .	186		

## Contents

SMS* . . . . .	215
SMS Received list . . . . .	215
Reading SMS message received . . . . .	216
Tele Aid* . . . . .	217
Emergency call system . . . . .	217
Roadside Assistance . . . . .	217
Information . . . . .	218

---

<b>System settings</b> . . . . .	219
System settings . . . . .	220
Selecting the time zone . . . . .	220
Selecting the language . . . . .	221
Switching verification and notification tones on and off . . . . .	222
Selecting display settings . . . . .	223
Selecting Voice control* settings . . . . .	224
Resetting all settings to the factory settings . . . . .	227

---

<b>Glossary</b> . . . . .	229
---------------------------	-----

---

<b>Index</b> . . . . .	235
------------------------	-----

### ▼ Where to find it

This Operator's Manual is designed to provide support information for you, the COMAND operator. Each chapter has its own guide color to provide fast access to information.

#### At a glance

Here you will find an overview of all COMAND control elements and system components. If you are operating COMAND for the first time or if you have rented or borrowed the vehicle, this is the chapter you should read first.

#### Audio

Here you will find all the information on how to use the radio, CD player (CD, MP3 CD), CD changer\* (CD, MP3 CD) and AUX operation.

#### Rear Audio/Video\*

Here you can learn about the rear audio\* functions and the rear seat entertainment\* operation.

#### Satellite radio\*

This chapter provides information on how to select a station and a program category.

#### Telephone\*

Here you can learn in detail about the many functions of the telephone, how to initiate an emergency call and use the phone book.

#### Navigation

This chapter provides detailed information on the following topics:

- Destination input
- Route guidance including detour

- Last destinations and destination memory
- POIs
- Today's plan

#### Service

Here you will find all the information about:

- SMS\*
- Tele Aid\*

#### System settings

This chapter provides information on how to adjust COMAND system settings.

#### Directories

The glossary explains the most important technical terms.

The table of contents and index directory will help you quickly locate the information you need.

# Introduction

## Symbols

### ▼ Symbols

You will find the following symbols in these operating instructions:

- \* The asterisk identifies optional equipment. Since not all models have the same standard equipment, your COMAND system equipment may deviate from some descriptions and illustrations.

#### Warning



Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

#### Environmental Note



Environmental notes provide tips on environmental protection.



Highlights hazards that may result in damage to your COMAND.



Helpful hints or further information you may find useful.

- ▶ This symbol points to instructions for you to follow. A number of these symbols appearing in succession indicates a multiple-step procedure.

▷▷ The continuation symbol marks an interrupted procedure which will be continued on the next page.

(▷ page 9) This symbol tells you where to look for further information on this subject.

-> This symbol is used in the glossary. It indicates that the term immediately following the symbol is also explained in the glossary.

Display Messages, menu items or soft key names appearing in the COMAND color display are printed in the type shown here.

#### ▼ Operating safety

##### Warning



Any alterations made to electronic components and the software can cause malfunctions.

The radio, amplifier, CD changer\*, satellite radio\*, telephone\* and navigation module are interconnected. When one of the components is not operational or has not been removed/replaced properly, the function of other components may be impaired.

This condition might seriously impair the operating safety of your vehicle.

We recommend that you have any service work on electronic components carried out only by qualified personnel.

##### Warning



In order to avoid distraction which could lead to an accident, the driver should enter system settings with the vehicle at a standstill and operate the system only when road, weather and traffic conditions permit.

Bear in mind that at a speed of just 30 mp/h (approximately 50 km/h), your car is covering a distance of 44 feet (approximately 14 m) every second.

COMAND supplies you with information to help you select your route more easily and guide you conveniently and safely to your destination. For safety reasons, we encourage the driver to stop the vehicle in a safe place before answering or placing a call, or consulting the COMAND screen to read navigational maps, instructions, or downloaded information.

While the navigation system provides directional assistance, the driver must remain focused on safe driving behavior, including attention to traffic and street signs, and should utilize the system's audio cues while driving.

The navigation system does not supply any information on stop signs, yield signs, traffic regulations or traffic safety rules. This always remains your personal responsibility when you drive. DVD maps do not cover all areas nor all routes within an area.



## **At a glance**

**Radio operating elements**

**Single CD operating elements**

**CD changer\* operating elements**

**MP3 CD operating elements**

**Satellite radio\* operating elements**

**Telephone\* operating elements**

**Navigation system operating elements**

**Service operating elements**

**Multifunction steering wheel**

**Menu system**

**Quick reference COMAND**

## At a glance

### Radio operating elements

#### ▼ Radio operating elements



	Function	Page
①	Audio menu	42
②	Soft keys (multifunction keys)	
③	Color display with Radio main menu	44
④	<b>1 - 0</b> , <b>*</b>	
	Station selection	45
	Saving stations manually	49
	Selecting a station from the preset memory	51
⑤	<b>Push</b> the joystick to <b>◀, ▶, ▲, ▼</b>	
	Function selection <b>▲</b> and <b>▼</b>	
	e.g. Automatic seek tuning	46
	<b>◀</b> and <b>▶</b>	
	e.g. Manual tuning	46
	<b>Press</b> <b>OK</b> to confirm	

	Function	Page
⑥	<b>MUTE</b>	
	Muting	43
⑦	Volume control	35
⑧	<b>PWR</b> Switching on and off	34
⑨	<b>-SEEK</b> and <b>SEEK+</b>	
	Automatic seek tuning	46
	Manual tuning	46

## At a glance


### Single CD operating elements

#### ▼ Single CD operating elements



P82.86-5214-31US

	Function	Page
①	Audio menu	42
②	Soft keys (multifunction keys)	
③	Color screen with single CD main menu  The status bar indicates CD status information	61
④	<b>1</b> - <b>0</b> , <b>*</b>  Track select	64
⑤	<b>Push</b> the joystick to <b>▲</b> and <b>▼</b>  Track select  <b>Press</b> <b>OK</b> to confirm	64

	Function	Page
⑥	<b>EJECT</b>  Ejecting/loading a CD into the CD drive    There are two <b>EJECT</b> buttons. One is on the display unit. The other is located left of the CD AUDIO slot behind the display.	53
⑦	<b>MUTE</b>  Muting	67
⑧	Volume control	35
⑨	<b>PWR</b> Switching on and off	34
⑩	<b>-SEEK</b> and <b>SEEK+</b>  Track select	64
	Fast forward/reverse	66

## At a glance

### CD changer\* operating elements

#### ▼ CD changer\* operating elements




P82.86-5215-31US

## CD changer\* operating elements

The CD changer\* is located in the glove box. To access, press the CDC release button ⑩ in the glove box to lower the changer\*.

The CD changer\* can accommodate up to 6 audio or MP3 CDs.

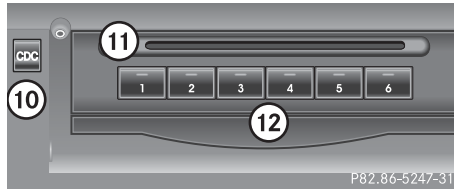

	Function	Page
①	Audio menu	42
②	Soft keys (multifunction keys)	
③	Color screen with CD changer* main menu	61
	The status bar indicates CD status information	61

	Function	Page
④	<b>1</b> - <b>0</b> , <b>*</b> Track select	64
⑤	<b>Push</b> the joystick to <b>◀</b> and <b>▶</b> Selecting an audio CD or MP3 CD <b>Push</b> the joystick to <b>▲</b> and <b>▼</b> Track select or Selecting a CD in the magazine menu <b>Press</b> <b>OK</b> to confirm	63 64 64
⑥	<b>MUTE</b> Muting	67
⑦	Volume control	35
⑧	<b>PWR</b> Switching on and off	34

	Function	Page
⑨	<b>-SEEK</b> and <b>SEEK+</b> Track select Skip track Fast forward/reverse	64 65 66
⑩	CDC release button Accessing the CD changer*	56
⑪	CD changer* slot	
⑫	Magazine compartment buttons Loading CDs, Ejecting CDs	56, 59

## At a glance

### MP3 CD operating elements

#### ▼ MP3 CD operating elements



P82.86-5214-31US

	Function	Page
①	Audio menu	42
②	Soft keys (multifunction keys)	
③	Color screen with MP3 main menu  The status bar indicates MP3 CD status information	75
④	<b>1</b> - <b>0</b> , <b>*</b>  Track select	79
⑤	<b>Push</b> the joystick to <b>◀</b> and <b>▶</b>  Selecting a folder  <b>Push</b> the joystick to <b>▲</b> and <b>▼</b>  Track select or  Activating playback mode  Selecting a folder  <b>Press</b> <b>OK</b> to confirm	76       78 81 77

	Function	Page
⑥	<b>EJECT</b>  Ejecting/loading a MP3 CD into the CD drive  <b>i</b>  There are two <b>EJECT</b> buttons. One is on the display unit. The other is located left of the CD AUDIO slot behind the display.	53
⑦	<b>MUTE</b>  Muting	80
⑧	Volume control	35
⑨	<b>PWR</b> Switching on and off	34
⑩	<b>-SEEK</b> and <b>SEEK+</b>  Fast forward/reverse	80

## At a glance

### Satellite radio\* operating elements

#### ▼ Satellite radio\* operating elements



P82.86-5217-31US

	Function	Page
①	Satellite radio main menu	118
	Switching satellite operation on and off	118
②	Soft keys (multifunction keys)	
③	Color screen with Satellite radio main menu	118
④	<b>1</b> - <b>0</b> , <b>*</b>	
	Station selection via direct channel entry	120
	Saving stations manually	121
⑤	<b>Push</b> the joystick to <b>◀, ▶, ▲, ▼</b>	
	Selecting a category, Selecting a station	
	<b>Press</b> <b>OK</b> to confirm	
⑥	<b>MUTE</b>	
	Muting	119

	Function	Page
⑦	Volume control	35
⑧	<b>PWR</b> Switching on and off	34
⑨	<b>-SEEK</b> and <b>SEEK+</b>	
	Previous or next channel	119

## At a glance

### Telephone\* operating elements

#### ▼ Telephone\* operating elements



P82.86-5681-31US

	Function	Page
①	<b>TEL</b>	
	Telephone menu	134
	Switching telephone operation on and off	130
②	Soft keys (multifunction keys)	
③	Color screen with Telephone menu	
④	<b>1 - 0</b> , <b>#</b> and <b>*</b>	
	Entering the unlock code	133
	Entering a telephone number	137
	Subsequent dialing	138
	Speed-dialing	141
	Quick-dialing	141

	Function	Page
⑤	<b>Push</b> the joystick to <b>◀, ▶, ▲, ▼</b>	
	Function selection <b>Press OK</b> to confirm	
⑥	<b>SEND</b>	
	Accepting a call	136
	Making a call	138
	Redialing	138
⑦	<b>END</b>	
	Rejecting or ending a call	136, 136
⑧	Volume control	35
⑨	<b>PWR</b> Switching on and off	34

## At a glance

### Navigation operating elements




#### ▼ Navigation operating elements



P82.86-5219-31US

## Navigation operating elements

	Function	Page
①	<b>NAV</b> Navigation main menu During route guidance: Change over to navigation display Cancelling route guidance	152  175 183
②	<b>MAP</b> Switches to map display Changing the map display (split and full view)	175 177
③	Soft keys (multifunction keys)	
④	Color screen with Navigation main menu	152
⑤	Entering a house or street number Entering a POI by phone number	159 205

	Function	Page
⑥	<b>Push</b> the joystick to  Function selection, Scrolling on map <b>Press</b>  to confirm	
⑦	<b>EJECT</b> Updating software/ changing map data  There are two <b>EJECT</b> buttons. One is on the display unit. The other is located left of the DVD NAVIGATION slot behind the display.	210






	Function	Page
⑧	<b>MUTE</b> During a voice instruction: Muting current voice instruction Switching off voice instructions	174 174
⑨	<b>RPT</b> Repeating current voice instruction Switching on voice instructions	174 174
⑩	Volume control	35
⑪	<b>PWR</b> Switching on and off	34

## At a glance

### Service operating elements

#### ▼ Service operating elements




	Function	Page
①	 Service main menu	214
②	Soft keys (multifunction keys)	
③	Color screen with Service main menu  The SMS soft key appears if the vehicle is equipped for phone operation and a Mercedes-Benz specified mobile telephone* is inserted in phone cradle*.	214
④	<b>Push</b> the joystick to  , Function selection <b>Press</b>  to confirm	
⑤	 Switching on and off	34

## At a glance

### Multifunction steering wheel

#### ▼ Multifunction steering wheel

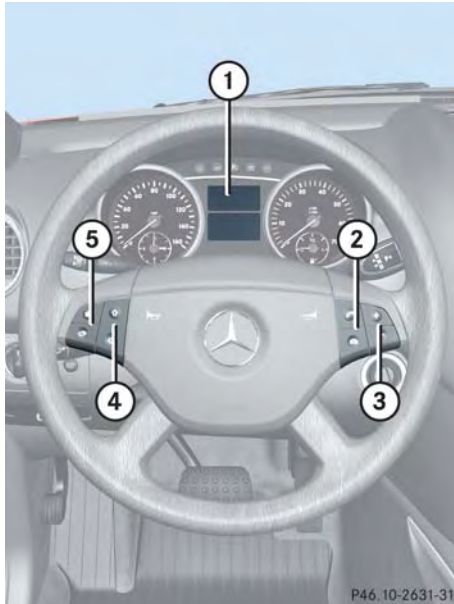



ML class illustrated

Function	Page
① Multifunction display	
② Making calls:	
Accepting calls, Redialing	136
Ending or rejecting calls	138
③ Volume setting	
Volume down	35
Volume up	35
④ Radio mode:	
Next station (automatic seek tuning via frequency or via memory presets)	46
Previous station (automatic seek tuning via frequency or via memory presets)	46

Function	Page
Single CD and CD changer* mode:	
Next track	64
Previous track	64
MP3 CD mode:	
Next track	78
Previous track	78
Satellite radio* mode	
Next station	119
Previous station	119
Telephone* mode	
Next list entry	145
Previous list entry	145
⑤ Multifunction display menu change:	
forward	
back	29

- ▶ Switch the multifunction display to the respective system if you wish to operate the system using the buttons on the multifunction steering wheel.

**Selecting the multifunction display**


- ▶ On the multifunction steering wheel, press  or  repeatedly until one of the following, Radio, Single CD or MP3 CD, CD changer\*, Satellite radio\*, Telephone\* or AUX/Rear Seat Entertainment\* display appears in the multifunction display of the instrument cluster.

**Radio operation**



- ① Waveband
- ② Station frequency

**Single CD/ CD changer\*operation**

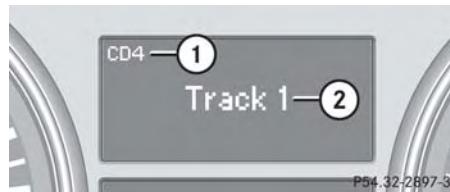

- ① Current CD
- ② Current track

**MP3 CD operation**



- ① MP3 mode
- ② Current MP3 track

**Satellite radio\* operation**




- ① SAT mode and preset channel number
- ② Channel name

## At a glance

### Multifunction steering wheel

#### Telephone\* operation

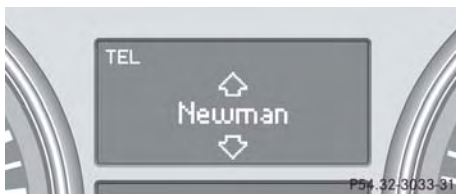


#### List with a phone book entry

On display will appear either:

- the main display with the READY message
  - a list with either a phone book entry or one of the last 10 outgoing calls
- ▶ In order to close the list display, press .
- This switches to the telephone main display.

#### AUX or Rear Seat Entertainment\* operation

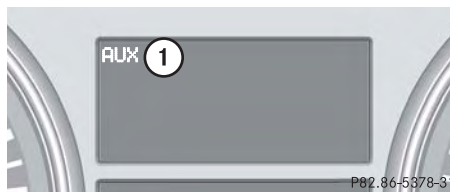

#### ① AUX mode

#### Audio search function

This allows you to choose whether the radio automatic seek tuning function selects stations via frequency or memory preset (▷ page 46).

- frequenc.  
The radio will tune by frequency.
  - memory  
The radio will tune by preset stations.
- ▶ On the multifunction steering wheel, press or repeatedly until the Settings... menu appears in the multifunction display of the instrument cluster.

- ▶ Press .

A collection of submenus appears in the multifunction display.

- ▶ Press repeatedly to select the Vehicle submenu.
- ▶ Press and select Audio search function.
- ▶ Select frequenc. or memory by pressing or .



Memory is set as factory setting.

### ▼ Menu system

The menu system allows for easy operation of COMAND.

Main menus are provided for the following main functions:

- Audio (AM/FM radio, CD, CD changer\*, MP3 CD, AUX, Rear Audio\*)
- Satellite radio\*
- Telephone\*
- Navigation
- Service

### Calling up main menus

Main function	Activating main menu
Audio (▷ page 42)	▶ Press <b>AUDIO</b> .
Satellite radio*	▶ Press <b>SAT</b> .
Telephone*	▶ Press <b>TEL</b> .
Navigation (▷ page 152)	▶ Press <b>NAV</b> .
Service (▷ page 214)	▶ Press <b>SERV</b> .

### Menu display

A display may consist of three areas.

Example: FM menu



P82.86-4154-31US

- ① Soft keys area
- ② Main area
- ③ Status bar

The functions currently assigned to the soft keys are displayed in the soft key sections ①.

## At a glance

### Menu system



A maximum of five soft keys may be displayed on each side of the main area ②.

The main area ② shows messages and settings.

You can change the settings by operating the system.

The status bar ③ is divided into three areas.

Left side:

The current operating mode is indicated. In this example: Radio

Center:

The status of the current operating mode or other selectable functions are indicated.


In this example:

- FM = current waveband
- 1 = memory location of station, e.g. "1"

Right side:

General status information is indicated independent of the operating mode.

In this example:

- Ready = Telephone\* is ready for operation
-  = Reception strength of the mobile phone\*

### Menu functions and submenus

Using the soft keys, functions can be switched ON or OFF, or submenus can be called up.

E.g. the radio menu:



P82.86-4155-31US

- The FM/AM soft key switches between FM and AM band.
- The Scan soft key starts/stops the channel scan.

In some situations, soft keys may not have any function and are not operational. A soft key without function appears shaded out.

E.g.: Soft keys on the left and right side



P82.86-4156-31US

### Exiting from submenus

Use the Back soft key ① to exit a submenu. The display switches to the next higher menu level.

The system does not accept setting modifications which have not been stored. There are exceptions where pressing the Back soft key will also store new settings. These exceptions, whenever applicable, are referenced on the following pages.

## At a glance

### Quick reference COMAND

#### ▼ Quick reference COMAND



You have the following options to control the system:

- at the COMAND
- at the multifunction steering wheel (refer to vehicle Operator's Manual)

This Operator's Manual describes the control at the COMAND.

Unless otherwise indicated, the descriptions and illustrations refer to the COMAND.

#### Switching the COMAND control unit on and off

##### Switching on



For an explanation of starter switch positions, refer to vehicle Operator's Manual.

- ▶ Turn the key in the starter switch to position 1 or 2 if the COMAND was switched off by turning the key in the starter switch to position 0 and removing it.

or

- ▶ Press .

In both cases, the system will activate the operating mode which was active when the system was switched off.



If the key is not in the starter switch in position 1 or 2, the system will automatically stop after around 30 minutes.

##### Switching off

- ▶ Turn the key in the starter switch to position 0 and pull the key out.

or

- ▶ Press .

## Volume




When the audio is playing, the volume knob will adjust the audio volume, and also the volume for telephone and navigation.

During a telephone call (talking or ringing), the volume knob will adjust the telephone voice and ringer volume.

The volume for the navigation announcements can only be changed while an announcement is being made.

When you adjust the volume, the system will automatically store the setting for the current operating mode.

## Adjusting the volume

- ▶ At the COMAND, turn the rotary control at the  key.
- or
- ▶ Press  or  on the multifunction steering wheel.

The volume is turned up or down depending on the direction of rotation or the key pressed on the multifunctional steering wheel.

The system remembers the volume setting when it is switched off.



When the system is switched on again, the volume may be lower or higher than at the time when the system was switched OFF.

This will be the case when the volume was adjusted to a value outside a certain range when the system was switched off.

## Automatic volume control

The automatic volume control feature adjusts the volume depending on:

- vehicle speed (only in vehicles without premium sound system\*)
- or
- ambient noise inside the vehicle (only in vehicles with premium sound system\*)





This function is active all the time and can not be turned on and off.

## At a glance

### Quick reference COMAND

#### Balance and fader

Common balance and fader settings apply to the following systems:

- Radio operation
- CD operation (CD )
- CD changer\* operation (CD )
- MP3 CD operation
- AUX
- Satellite radio\*

When you make balance or fader settings, the system will automatically save the settings for the current operating mode and others.


#### Setting balance and fader

In any audio source operation:

- ▶ Press the Bal/Fad soft key.


Cross-hairs are displayed. The horizontal hair line indicates the balance setting. The vertical hair line indicates the fader setting. You can now make balance and fader settings.

For ML class:

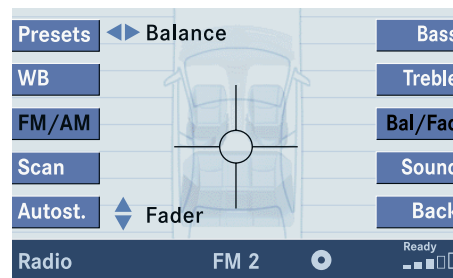



P82.86-4157-31US

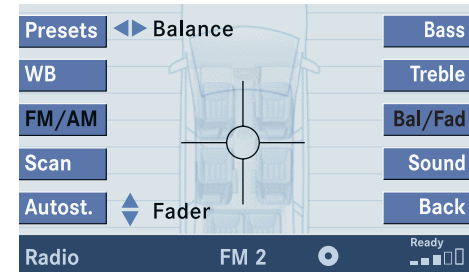For R and GL class:



P82.86-5523-31US

- ▶ Push the joystick to  or .
- Move the cross-hairs horizontally and adjust the balance.

or

- ▶ Push the joystick to  or .

Move the cross-hairs vertically and adjust the fader.





Push the joystick to and to move the cross-hairs simultaneously in vertical and horizontal direction.

- ▶ Press or the Back soft key.

or

- ▶ Wait until the display changes.

The new setting is saved.

#### Bass and Treble

Different bass and treble settings are possible for the following operating modes:

- Radio: FM-, AM- and Weather (WB) bands
- Single CD (CD ) and CD changer\* (CD )
- MP3 CD operation
- AUX
- Satellite radio\*


When you adjust bass or treble, the settings apply to other sources within the group, but not to the other modes. For example, if you adjust the bass while listening to FM, that same bass level applies to AM and Weather band, but not to satellite radio\* or CD/MP3 CD.

#### Activating the Bass or Treble menu

In any audio source operation:

- ▶ Press the Bass or Treble soft key.  
The Bass or Treble menu will appear.

#### Setting Bass and Treble

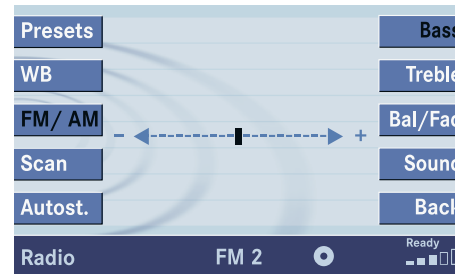

P82.86-4158-31US

- ▶ Push the joystick to or .

Bass or Treble is adjusted.

- ▶ Press or the Back soft key.

or

- ▶ Wait until the display changes.

The new setting is saved.





Press the Bass or Treble soft key and keep it depressed to move the cursor continuously. Release the soft key to set the current value.

## At a glance

### Quick reference COMAND

#### Sound functions\*

If your vehicle is equipped with the premium sound system\*, the sound functions\* will be available for the following operating modes:

- Radio: FM-, AM- and Weather (WB) bands
- Single CD (CD ) and CD changer\* (CD )
- MP3 CD operation
- AUX
- Satellite radio\*

The following sound functions\* are available:

- **Default Settings:**  
COMAND sets the default settings (Bass, Treble, Bal/Fad) for the active source mode.
- **Standard:**  
COMAND sets the sound linear for the center of the vehicle.
- **Speech:**  
Playback optimized for language comprehensibility.
- **LOGIC7 Surround:**  
Surround playback.

You can use different sound functions\* for the modes mentioned above.

E.g.:

For radio operation the function Standard, for CD operation the function LOGIC7 Surround.



LOGIC7 Surround sound offers a sound quality superior to conventional stereo sound.

If the radio reception is poor, the system should be switched back to standard stereo playback. Switching back to standard stereo playback may improve audio quality.

#### Activating the sound functions\*

In any audio source operation:

- ▶ Activate the main menu for the respective operating mode (▷ page 31).

- ▶ Press the Sound soft key.

The Sound menu will appear.



P82.86-4159-31US

- ▶ Push the joystick to ▲ or ▼ to select the desired function.

- ▶ Press **OK**.

The function is activated.

#### Rear view camera\*

The Rear view camera is activated by shifting into reverse gear. The area behind the vehicle appears in the COMAND screen if COMAND is already switched on. If COMAND is switched on while in reverse, the Rear view camera display will appear immediately following the COMAND start-up screens.

#### Switch back to the COMAND operating mode

- ▶ Shift into P, N or D.

or

- ▶ Press **AUDIO**, **NAV**, **MAP**, **SERV**, **TEL**, **SAT** while in reverse to activate the corresponding main menu (▷ page 31).

#### i

The following audio sources remain available while the Rear view camera is activated:

- FM/AM radio, Weather band WB
- CD (CD drive, CD changer\*)
- MP3 CD
- AUX (RSE, if equipped)
- Satellite radio\*
- Telephone (ringing, talking)
- Navigation announcements

For additional information about the Rear view camera please refer to the separate Operator's Manual.



## **Audio**

**Audio operation**

**Radio operation**

**CD operation**

**CD changer\* operation**

**MP3 CD operation**

**AUX operation**

## Audio

### Audio operation

#### ▼ Audio operation

In chapter “Audio” you will find detailed information regarding

- radio operation
- CD operation (CD drive, CD changer\*)
- MP3 CD operation
- AUX operation

If you have not done so already, please familiarize yourself with these functions by reading chapter “At a glance”.

#### Warning




In order to avoid distraction which could lead to an accident, the driver should enter system settings with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

#### Opening the Audio menu

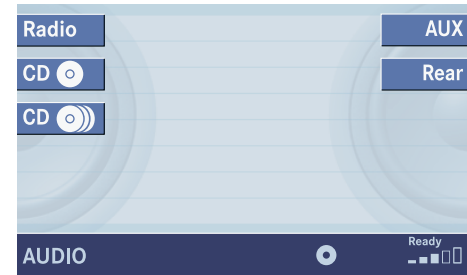

- ▶ Press **AUDIO**.




P82.86-5224-31US

#### Audio menu



The CD  or the MP3  soft key is available, depending on the medium inserted in the CD AUDIO slot.

The CD  soft key is available if a CD changer\* is connected to the COMAND.

- ▶ If an audio submenu is displayed, press the Back soft key until the Audio menu is displayed.

or

- ▶ Press **AUDIO** again.


#### Selecting an audio source

- ▶ In the Audio menu, press the soft key for the desired audio source.

#### Muting

##### Switching on

- ▶ Press **MUTE**.




The system mutes the active audio source and the  symbol is displayed in the status bar. The soft keys on the left side are greyed out in some submenus.

##### Switching off

- ▶ Press **MUTE** again.



COMAND will also deactivate muting if you

- Press **AUDIO**, **SAT**, **-SEEK**, **SEEK+**
- Change the volume at COMAND or the multifunction steering wheel
- Operate the joystick
- Press any keypad button except **#** 
- Press  or  at the multifunction steering wheel if the audio menu is selected.

## Audio


### Radio operation

#### ▼ Radio operation

##### Switching to radio operation

- ▶ In the Audio menu, press the Radio soft key.

The Radio main menu will appear. The station last tuned to will begin to play.

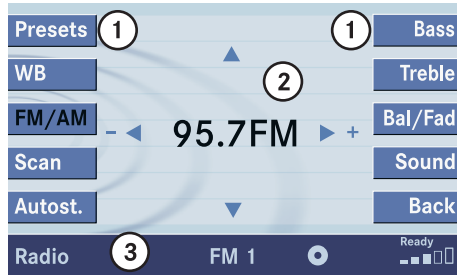

P82.86-4154-31US

##### Radio main menu

- ① Soft key assignment
- ② Main area
- ③ Status bar

Switching back to the Audio menu

- ▶ Press the Back soft key.



The Sound soft key is available if COMAND is equipped with a sound amplifier\*.

##### Changing the Radio band

You can select between FM-, AM- and WB-Band.

##### AM Band

- ▶ In the FM Radio main menu, press the FM/AM soft key until “AM” is displayed in the status bar.



P82.86-4161-31US

The AM station last tuned to will begin to play. The frequency will appear in the display.

##### Switching back to FM band

- ▶ Press the FM/AM soft key.


The station last tuned to will begin to play.

Frequency band	Frequency range
FM	87.7 - 107.9 MHz
AM	530 - 1710 kHz

### Weather Band WB

- ▶ In the FM or AM Radio main menu, press the WB soft key.

An automatic scan is starting and the COMAND plays and displays the channel of the first strong WB station.

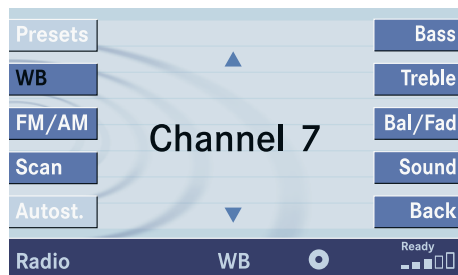

P82.86-4162-31US



With the number keys **1** - **7** it is possible to choose a channel.

The message **No channel** will appear if the system could not detect a channel.

Switching back to FM or AM band

- ▶ Press the FM/AM soft key.

or

- ▶ Press the WB soft key

The station last tuned to will begin to play.

Switching back to the Audio menu

- ▶ Press the Back soft key.

The Weather Band WB station will continue to play.

### Selecting a station

You can use the following functions:

- Automatic seek tuning (▷ page 46)
- Manual tuning (▷ page 46)
- Station selection via direct frequency entry (FM, AM) (▷ page 47)
- Preset station selection via number keypad (▷ page 48)
- Automatic station scan (FM, AM) (▷ page 48)
- Station selection from the FM/AM preset menu (▷ page 51)
- Station selection from the FM/AM Autostore presets (▷ page 51)

## Radio operation

### Automatic seek tuning

#### Via memory presets



Memory must be activated in the Audio search function menu, which appears in the multifunction display.

Access this menu from the Settings... menu via the Vehicle submenu (▷ page 30). For additional information refer to separate Operator's Manual instructions.

#### FM- and AM-Bands

- ▶ Press **-SEEK** or **SEEK+**.

or

- ▶ Push the joystick to **▲** or **▼**.

The radio will tune to the frequency assigned to the next memory location. If none has been set by you, the radio will not change the station.

### Via frequency



Frequenc. must be activated in the Audio search function menu, which appears in the multifunction display.

Access this menu from the Settings... menu via the Vehicle submenu (▷ page 30). For additional information refer to separate Operator's Manual instructions.

- ▶ Press **-SEEK** or **SEEK+**.

or

- ▶ Push the joystick to **▲** or **▼**.

The radio will tune to the next receivable station (FM, AM) or channel (WB) of descending/ascending frequency depending on the direction of seek.

### WB direct channel selection

- ▶ Press a number key **1** through **7** PQRS.



The selected channel is not shown in the status line.



### Manual tuning (FM, AM)

- ▶ Activate the desired wave band (▷ page 44).
- ▶ Press **-SEEK** or **SEEK+** longer than 2 seconds.

The function rapidly scans the frequencies.

- ▶ Press **-SEEK** or **SEEK+** repeatedly to change the frequency step by step.

or

- ▶ Push the joystick to  or .

Each push of the joystick will change the frequency by one step.

### FM Band


The frequency displayed will change in increments of 0.2 MHz.

### AM Band


Tuning will take place in increments of 10 kHz.

### Station selection via direct frequency entry (FM, AM)


E.g.: 102.7 MHz in the FM band

- ▶ Activate the desired wave band (▷ page 44).
- ▶ Press .

An input line will appear.

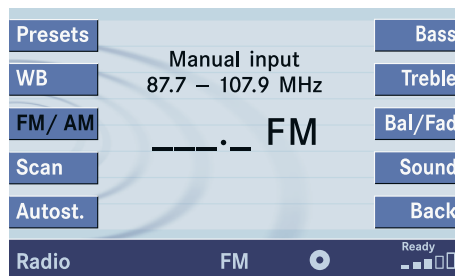

P82.86-4168-31US

- ▶ Enter the desired frequency with the number keys within 8 seconds, e.g.  for 102.7 MHz.

The station you have selected will begin to play.

Frequency band	Frequency range
FM	87.7 - 107.9 MHz
AM	530 - 1710 kHz

### FM, AM band

Entries outside the frequency range are not accepted. The message Please observe frequency range 87.7 - 107.9 MHz will appear briefly.



 
If you do not make another entry within 8 seconds, the function will be canceled and you will continue listening to the station last tuned to.

## Audio

### Radio operation

#### Preset station selection via number keypad

##### *FM- and AM-Bands*

- ▶ Press one of the number keys, such as  briefly.

The radio will tune to the frequency assigned to that memory location. If none has been set by you, the radio will not change the station.



FM and AM presets are independent and can only be accessed while in the corresponding band.

Saving stations for FM and AM (▷ page 49).

#### Automatic station scan (FM, AM)

The stations on the same band (FM, AM) can be scanned one after the other for 8 seconds each.



In the AM band, two search runs take place. During the first run, stations with good reception are played. During the second run, stations with weaker reception are played.

##### *Start scan function*

- ▶ Activate the desired wave band (▷ page 44).
- ▶ Press the **Scan** soft key.



P82.86-4165-31US

The scan function will begin.

##### *End scan function and play a station*

- ▶ Press the **Scan** soft key again if you hear the desired station.

or

The scan function stops automatically when the first station received has been scanned twice.

## Memory functions

You can use the following functions:

- Saving stations manually (FM, AM)
- Saving stations automatically FM, AM (▷ page 50)
- Selecting a station from the FM/AM preset menu (▷ page 51)
- Selecting a station from the FM/AM Auto presets (▷ page 51)

## Saving stations manually (FM, AM)

### In the Radio main menu

- ▶ Activate the desired wave band (▷ page 44).
- ▶ Press one of the number keys, e.g. **2** ABC, longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 222).

The radio saves the current station at the memory preset selected. The memory preset selected will appear in the status bar, e.g. FM2.



There are 10 presets available (**1** - **9** WXYZ, **0** ⏪).

An existing entry is overwritten in the memory list when a new input is given.

## On the memory list

- ▶ Activate the desired wave band (▷ page 44).
- ▶ Press the Presets soft key.

The memory Preset menu will appear.



P82.86-4163-31US

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight the desired memory preset.

## Audio

### Radio operation

- ▶ Press **OK** longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 222).

The current station will be saved at the memory preset selected.

You will see the Radio main menu

- automatically after 8 seconds
- if you press the **Back** soft key.



There are 2 presets for each of the FM and AM waveband

- standard FM/AM presets (saving stations manually) and
- Auto presets (saving stations automatically).

The standard FM/AM presets are not affected by the Auto presets. This is a second option for storing a station range you are currently receiving.

### Saving stations automatically (FM, AM)

- ▶ Activate the desired wave band (▷ page 44).
- ▶ Press the **Autost.** soft key.

The autostore preset menu will appear.



- ▶ Press **OK** to start **Begin new search**.

The autostore function is active. The message **Autostore being reloaded** will appear. The radio stores the 10 stations with the strongest signal. The station frequencies available will appear in the memory list.



There are max. 10 presets available (**1** - **9** **wxyz**, **0** **\_**).

The autostore function assigns the stations to the memory locations in the order of their reception quality. The strongest station is available on preset 1. The number of available stations depends on the stations available in the area the vehicle is operated in.

### Selecting a station from the preset menu (FM, AM)

- ▶ Activate the FM or AM memory (▷ page 49).

You can use one of the following two ways to select a station from the FM/AM presets

- ▶ Press the corresponding number key, e.g. **3 DEF**, to select the desired station.

or

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight a memory preset in the FM/AM preset list (▷ page 49).

- ▶ Press **OK**.

In both cases, you will see the main radio menu

- automatically after 8 seconds
- if you press the **Back** soft key.

The Radio main menu indicating the memory preset number.

### Selecting a station from the FM/AM autostore presets

- ▶ Activate the FM or AM autostore preset menu (▷ page 50).

You can use one of the following two ways to select a station from the FM/AM autostore presets

- ▶ Press the corresponding number key, e.g. **3 DEF**, to select the desired station.

or

- ▶ Push the joystick to **◀**, **▶** or **▲**, **▼** to highlight a memory position.

- ▶ Press **OK**.

In both cases, you will see the main radio menu

- automatically after 8 seconds
- if you press the **Back** soft key.

## Audio

### CD operation

#### ▼ CD operation

##### General information on CD operation

##### Warning



In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.

##### Health hazard



The CD drive and CD changer\* are Class 1 laser products. There is a danger of invisible laser radiation when you open or damage the cover.

Do not remove the cover. The CD drive and the CD changer\* do not contain any parts which can be serviced by the user. For safety reasons, have any necessary service work performed by qualified personnel.



Only use CDs, which bear the label shown and that conform to the compact standard (IEC 60908). You can therefore only use CDs with a maximum thickness of 1.3 mm.



The system may not be able to play CDs with copy protection or copied CDs.



Use only CDs with a diameter of 12 cm, do not use 8-cm CDs.

An 8-cm CD adapter may cause damage to the CD drive and to the CD changer\* and **should not** be used.



Your CD drive has been designed to play CDs which correspond to the IEC 60908 standard.

If you insert thicker data carriers, e.g. ones that have data on both sides (one side with DVD data, the other side with audio data), they cannot be ejected and will damage the drive.

### Tips on caring for your CDs

- Avoid touching the CD surface with your fingers.
- Clean the CD with a dry, lint-free cloth. Wipe them from the inside to the outer edge. Never wipe the CD in a circular motion.
- Do not use rubbing alcohol or solvents to clean the CDs.
- Do not expose the CDs to heat or direct sunlight.
- Do not write or put stickers on CD.

### Loading/Ejecting a CD

#### Warning



In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.

### Loading a CD into the CD drive



There are two **EJECT** buttons. One is on the display unit. The other is located left of the CD AUDIO slot behind the display, see next page.



The CD drive can accommodate either audio or MP3 CDs (▷ page 70).

# Audio

## CD operation



- ① Ejecting audio CD
- ② Opening/closing the display unit
- ③ Warning message Press EJECT to close

**Warning**

The display unit can cause injury if contacted when open. Please close after inserting an audio CD.



Do not place anything on the lowered display panel (i.e. do not attempt to use as a shelf). Placing objects on the lowered display panel may result in damage to the display or COMAND unit which is not covered by the Mercedes-Benz Limited Warranty.

- ▶ With the COMAND switched on, press **EJECT**.

The display unit moves forward and then tilts down. The CD AUDIO slot is visible.

- ▶ Press the **EJECT** button left of the CD AUDIO slot to eject a CD already loaded.
- ▶ Remove the CD from the slot.
- ▶ Insert a CD into the slot. The CD should be inserted with the label side up.

The COMAND pulls the CD in.



Inserting a second CD with another CD still loaded will cause damage to the CD drive which is not covered by the Mercedes-Benz Limited Warranty.

- ▶ Press **EJECT** on the display unit to return the display unit to its closed position.

The display unit tilts up and then moves to the rear.

Playback begins with track number one.



The message Press EJECT to close will appear. If **EJECT** on the display unit is not pressed within 20 seconds, eight successive series of two beep tones will sound to remind you to return the display to its closed position by pressing **EJECT** on the display unit. The active audio source will be muted until the display has been returned to its closed position. If you do not do so, the COMAND returns the display unit to its closed position.

The message CD error will appear if there is a media error.

- ▶ Remove the CD or switch to another operation.

## Audio

### CD changer\* operation

#### ▼ CD changer\* operation

The CD changer\* can play audio or MP3 CDs. When playing MP3 CDs, only the first 99 tracks will be played back in successive order. After that, playback will begin with track 1 of the MP3 CD. Folder selection is not possible.

Multi session CDs include mixed file types (e.g. MP3 and audio CD) in either successive or random order on the disc. Audio tracks will be played back first, followed by MP3 tracks until 99 tracks are reached.

Refer to additional MP3 information:

- Permissible MP3 CDs (▷ page 71)
- Permissible file systems (▷ page 71)
- Permissible MP3 formats (▷ page 73)
- Permissible bit and scan rates (▷ page 73)

Refer to additional CD information:

- General information on CD operation (▷ page 52)

#### Switching to CD changer\* mode

- ▶ Activate the CD changer\* main menu (▷ page 61).

or


- ▶ Load a CD into the CD changer\* (▷ page 57).

#### Accessing the CD changer\*

The CD changer\* is located in the glove box.

- ▶ Open the glove box.
- ▶ Press the chrome CDC button ①.

The CD changer\* lowers and becomes accessible.

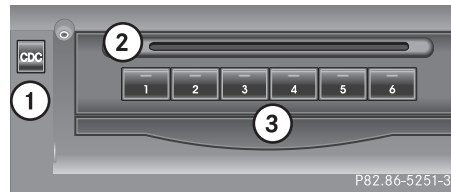

- ① CD changer\* release button
- ② CD slot
- ③ Magazine compartement buttons

#### Retracting the CD changer\*

- ▶ By hand, lift the CD changer\* into the stowed position.

A click is heard when fully retracted.

#### Loading CDs

#### Warning



In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.



The CD changer\* can accommodate up to 6 audio CDs or MP3 CDs (▷ page 58).

## CD changer\* operation



For more information see General Information on CD operation (▷ page 52).

The CD changer\* has a built-in magazine which can hold up to six CDs. The CD changer\* has six magazine compartment buttons ③ for controlling the loading procedure. LEDs in the buttons indicate the status of the corresponding magazine compartment.

- Button LED off:  
Magazine compartment empty
- Button LED continuously red:  
Magazine compartment loaded with a CD
- Button LED flashes green:  
CD changer requesting CD to be loaded
- Button LED flashes red:  
CD is loading

The status of a magazine compartment can also be seen when selecting a CD in the Magazine menu (▷ page 64).

The CD slot ② for loading CDs into the CD changer\* is located above the buttons ③.


Loading options:

- Loading a single magazine compartment
- Loading all six magazine compartments

#### Loading a single magazine compartment



Loading a magazine slot will stop the playback of a CD in the changer.

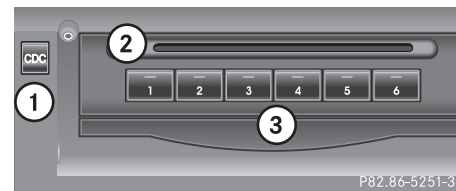

- ① CD changer\* release button
- ② CD slot
- ③ Magazine compartment buttons

- ▶ Access the CD changer\* (▷ page 56).
- ▶ Briefly press the button ③ of the empty magazine compartment to be loaded.
- ▶ Wait until the LED in the button ③ flashes green.  
This indicates that the CD changer\* requests a CD.

▷▷

## Audio

### CD changer\* operation


- ▶ Insert an audio CD or a MP3 CD into the CD slot ② within approx. 15 seconds. Insert the CD face up.

The CD is pulled in. The red LED in the corresponding magazine compartment button ③ lights up continuously. The system starts playing the CD.

The loading procedure is completed.

- ▶ Retract the CD changer\* (▷ page 56).

#### Loading all six magazine compartments

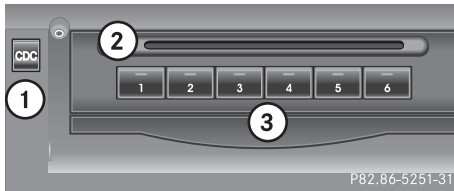

- ① CD changer\* release button
- ② CD slot
- ③ Magazine compartement buttons

Initial situation: all magazine compartments empty.

The CD changer\* loads all magazine compartments beginning with compartment 1.

- ▶ Access the CD changer\* (▷ page 56).
- ▶ Press and hold the button ③ of an empty magazine compartment for more than 2 seconds.

The LEDs of all magazine compartment buttons ③ briefly light up green several times.

- ▶ Wait until the LED in the first magazine compartment button ③ flashes green.

This indicates that the CD changer\* requests a CD.

- ▶ Insert an audio CD or a MP3 CD into the CD slot ② within approx. 15 seconds. Insert the CD face up.

The CD is pulled in. The magazine compartment is loaded.

The red LED in the corresponding magazine compartment button ③ lights up continuously.

The CD changer\* then requests insertion of the next CD. The LED in the corresponding magazine compartment button ③ flashes green.

- ▶ Repeat the last step until all six magazine compartments are loaded.

The system plays the sixth CD. The LEDs in all magazine compartment buttons ③ light up red continuously.

The loading procedure is completed.

- ▶ Retract the CD changer\* (▷ page 56).




If, for example, only compartments 1 through 4 are to be loaded instead of all six compartments, simply do not insert the fifth CD into the slot ②. The CD changer\* attempts to load the fifth CD, yet aborts the loading procedure. The system automatically plays the last (fourth) CD.

### Ejecting CDs

The following options are available:

- Ejecting one CD
- Ejecting all CDs (▷ page 60)

### Ejecting one CD

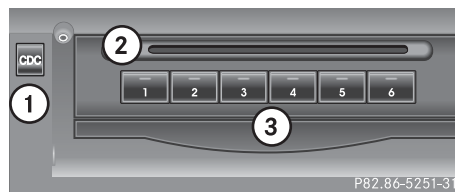

- ① CD changer\* release button
- ② CD slot
- ③ Magazine compartment buttons

- ▶ Access the CD changer\* (▷ page 56).
- ▶ Briefly press the appropriate magazine compartment button ③.  
The button LED ③ flashes red. The CD changer\* ejects the CD.
- ▶ Within 15 seconds, remove the CD from the slot ②.  
The CD will be pulled in again if it is not removed from the slot within approx. 15 seconds. The system starts playing the CD again.  
The ejection process is completed.
- ▶ Retract the CD changer\* (▷ page 56).

### CD changer\* operation




If you are listening to a CD in the CD changer\* and you eject another CD from the changer:

- While ejecting the CD, the system interrupts CD playback.
- The CD you were last listening to starts from the beginning once the ejection procedure is completed.

If you eject the CD you are currently listening to:

- The next available audio CD is played.
- If there are no other CDs available, the system switches to the audio source listened to before CD changer\* mode.

#### Ejecting all CDs

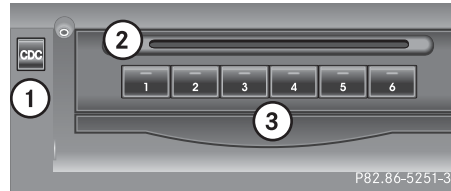

- ① CD changer\* release button
- ② CD slot
- ③ Magazine compartment buttons

- ▶ Access the CD changer\* (▷ page 56).
- ▶ Press and hold the button of a loaded magazine compartment ③ for more than 2 seconds.

The button LEDs of all loaded magazine compartments will briefly flash red, several times.

The CD changer\* ejects the CDs one after another.

- ▶ Within 15 seconds, remove each CD from the slot ②.

The CD will be pulled in again if it is not removed from the slot within approx. 15 seconds. The system starts playing the CD again.

The ejection procedure is completed when all CDs are removed, or when the procedure is aborted by the CD changer\*.

- ▶ Retract the CD changer\* (▷ page 56).

## ▼ CD operation

### Switching to CD operation

Playback locations for audio CDs are:

- the CD drive in the COMAND
- the CD changer\*.

### CD drive



The CD drive is located behind of the display unit (▷ page 54).

### CD changer\*



The CD changer\* can accommodate up to 6 audio or MP3 CDs. The CD changer\* is located in the glove box.

If a CD changer\* is connected to the COMAND, the CD soft key is available.

- ▶ In the Audio menu (▷ page 42), press the CD or the CD soft key.



P82.86-4170-31US

### CD changer\* main menu

- ① CD number or name of the CD currently playing
- ② Track number or name of the track currently playing
- ③ CD - CD changer\*  
CD - CD drive  
Actual track number/max. track number on CD and elapsed playback time
- ④ Symbol for inserted CD



The Magaz. soft key is only assigned when the CD changer\* is active.


If the CD changer\* has already read the CDs, the Magazine menu will appear (▷ page 64) when you press the Magaz. soft key.

## Audio

### CD operation

#### Switching on


##### CD drive

- ▶ Activate the Audio menu (▷ page 42).
- ▶ Press the CD  soft key.

The CD main menu is displayed.

If no audio CD has been inserted, the message No CD inserted will appear.

- ▶ Load an audio CD into the CD drive (▷ page 53).

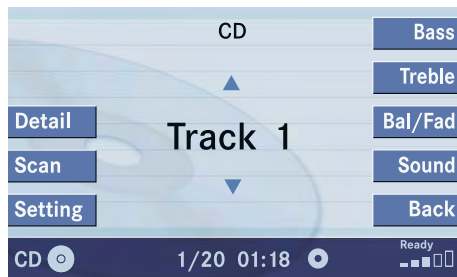

P82.86-5225-31US


##### CD main menu




The name of the CD and the name of the track played are displayed if the information is available.


##### CD changer\*



The CD  soft key is available if a CD changer\* is connected to the COMAND.

- ▶ Activate the Audio menu (▷ page 42).
- ▶ Press the CD  soft key.

The CD changer\* main menu will appear. The CD last played is played back.

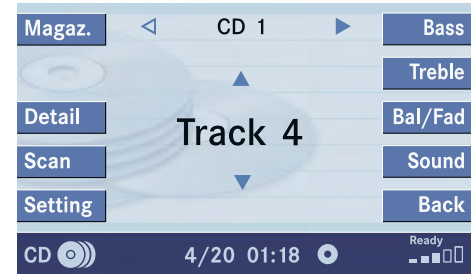

P82.86-4172-31US

##### CD changer\* main menu

If the last played CD is not available, the next available audio or MP3 CD is played back.



The name of the CD and the name of the track played are displayed if the information is available.

No CD in the CD changer\*:

The message Magazine empty will appear.

- ▶ Load audio or MP3 CDs into the CD changer\* (▷ page 56).

**Selecting a CD (CD changer\* only)**

You can select a audio or MP3 CD:


- in the CD list (▷ page 63)
- with the number keypad (▷ page 63)
- in the magazine menu (▷ page 64)

**In the CD list**

Selection is only possible if at least two audio or MP3 CDs have been loaded into the changer.

The CD list includes all loaded CDs. Only one list entry is visible at a time.

The entry is displayed above the track indication. It shows the number of the CD currently playing.

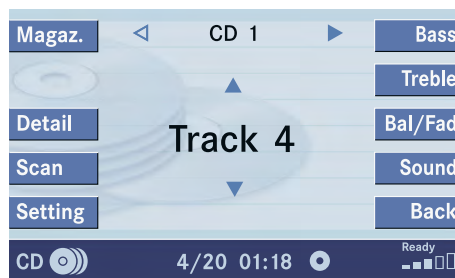

P82.86-4172-31US

- ▶ Push the joystick to ◀ or ▶ to select another CD from the list.

Loading CD <number> is displayed.

After the CD is loaded, playback begins.

**With the number keypad**

The number keys **1** - **6** can be used for direct selection.

Keys **1** - **6** magazine slots 1 to 6 of the CD changer\*

## Audio

### CD operation

- ▶ Press a number key, e.g. **2** ABC to select the corresponding CD.

Loading CD 2 is displayed.

The CD is changed. The selected CD is played back.

The message No CD <number> will appear if a selected slot is empty.

#### In the Magazine menu

- ▶ Press the **Magaz.** soft key.

The Magazine menu is displayed.



P82.86-4173-31US



The name of the CD instead of e.g. CD1 is displayed if the information is available.

- ▶ Push the joystick to **▲** or **▼** to select a CD.
- ▶ Press **OK**.

or

- ▶ Press one of the number keys **1** to **6** MNO.

The CD is changed. The message Loading CD <number> will appear.

### Track select

You can select a track:

- with **-SEEK** or **SEEK+** (▷ page 64)
- with the joystick (▷ page 65)
- with the number keypad (▷ page 65)
- with CD track scan (▷ page 66)

With **-SEEK** or **SEEK+**

- ▶ Activate the main CD menu (▷ page 61).

#### Next track

- ▶ Press **SEEK+**.

The next track is played.

**Previous track or start of title (if more than 10 seconds of playing time has elapsed)**

- ▶ Press **-SEEK**.

Playback begins.

**Select any desired track**

- ▶ Press **-SEEK** or **SEEK+** as many times as necessary.


**With the joystick**

- ▶ Push the joystick to **▲** or **▼** to play the next or previous track.

**With the number keypad**

- ▶ Activate the CD main menu (▷ page 62).
- ▶ Press **\***.

An input line will appear in the CD main menu.

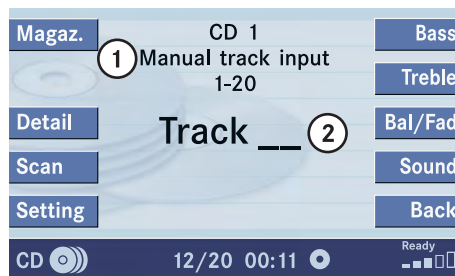

P82.86-4175-31US

- ① Number of tracks on CD corresponds with the valid number range
  - ② Input line
- E.g.: Track 14.

- ▶ Press **1** and **4** in short succession.

### i

Entries higher than the number of tracks available on the CD are not possible.

During MP3 CD playback

- CD drive
  - You can select the tracks of the current folder (▷ page 79).
- CD changer\*:
  - You can select the first 99 tracks of a MP3 CD.

- ▶ After entering the track number, wait approximately 3 seconds.

The selected track is played. The CD main menu is displayed.

## Audio


### CD operation

#### CD track scan

The tracks on a CD can be scanned one after the other for 8 seconds each. The function will switch off automatically when the starting track is reached. You can also manually stop the scan function.

#### Activating

- ▶ Press the Scan soft key.  
Scan will begin.

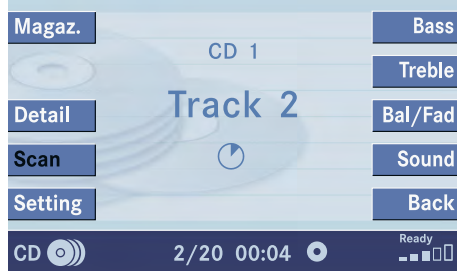

P82.86-4176-31US



When you start the scan function, the playback mode *Normal sequence* (▶ page 68) is automatically activated.

#### Ending the function

Scan search is running.

- ▶ Press the Scan soft key.
- or
- ▶ Press **OK**.

Playback will resume with the desired track.

#### Fast forward/reverse

##### Fast forward

- ▶ Press and hold **SEEK+** for more than 2 seconds.

##### Fast reverse

- ▶ Press and hold **-SEEK** for more than 2 seconds.


##### Ending the function

- ▶ Release **SEEK+** or **-SEEK**.  
Playback will resume.

## Muting


**On**

- ▶ Press **MUTE** during playback.

The CD operation is muted and the  symbol is displayed in the status bar. The soft keys on the left side are greyed out in some submenus.




**Off**

- ▶ Press **MUTE** again.

Playback will resume. The  disappears from the status bar. The soft keys on the left side are selectable again.



COMAND will also deactivate muting if you

- Press **AUDIO**, **SAT**, **SEEK**, **SEEK+**
- Change the volume at COMAND or the multifunction steering wheel
- Operate the joystick
- Press any keypad button except 
- Press  or  at the multifunction steering wheel if the audio menu is selected.

## Playback mode

The following options are available:

- Normal sequence (▷ page 68)
- Track mix (▷ page 68)
- CD mix (▷ page 69)
- Repeat track (▷ page 69)
- Repeat CD (▷ page 69)



If the CD changer\* is connected, the playback modes Repeat CD and CD mix are available additionally.

## Audio

### CD operation


#### Activating playback mode

E.g.:

Mode Repeat track

- ▶ Press the Setting soft key.

The setting menu will appear.

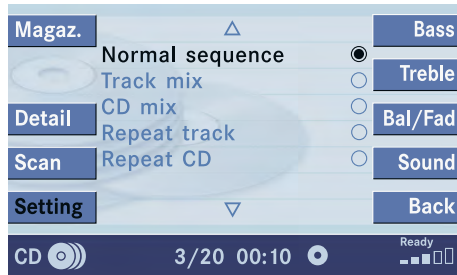

#### CD changer\* setting menu

- ▶ Push the joystick to ▲ or ▼ to select the playback mode Repeat track.

- ▶ Press **OK**.

The mode is activated. The CD changer\* main menu will then appear. REPEAT TRACK will appear in the status bar.



The playback mode Normal sequence is not displayed in the status bar.

#### Explanation of the playback modes

- Normal sequence

Tracks are played in ascending order (e.g. 1, 2, 3 and so on). If just one CD is inserted, the first track is played when the last one is over.

If more than one CD is available, the first track of the next CD is played when the last track of the current CD is over. The CDs are changed in normal order.

- Track mix

Tracks are played in random order. If more than one CD is available, the next available CD is played when the current CD is over. The CDs are changed in normal order.

- CD mix (CD changer\* only)

At least 4 tracks of any CD are played in random order. Then follows the next available CD. The CDs are changed in random order.

- Repeat track

The system repeats the current track until you switch the function off.

- Repeat CD (CD changer\* only)

The system repeats the current CD until you switch the function off.

### View track detail

At any time during playback an expanded view of a track title can be displayed in the CD main menu via a separate window.

▶ Press the Detail soft key.

### To cancel

▶ Press the Detail soft key again.

or

The window will automatically disappear in approx. 5 seconds.

## Audio

### MP3 CD operation

#### ▼ MP3 CD operation

##### Safety instructions

##### Warning



In order to avoid distraction which could lead to an accident, the driver should insert CDs with the vehicle at a standstill and operate the audio system only if permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car covers a distance of 44 feet (approximately 14 m) every second.

##### Warning



The CD drive is a Class 1 laser products. There is a danger of invisible laser radiation when you open or damage the cover.

Do not remove the cover. The CD drive does not contain any parts which can be serviced by the user. For safety reasons, have any necessary service work performed by qualified personnel.

##### Tips on data storage media



Do not attach labels of any type to the CD. They may become detached and damage the drive.



Your CD drive has been designed to play CDs which correspond to the IEC 60908 standard. Therefore only CDs not exceeding a thickness of 1.3 mm can be used.

If you insert thicker data carriers, e.g. ones that have data on both sides (one side with DVD data, the other side with audio data), they will become stuck and damage the drive.

Do not play single CDs (80mm) with an adapter. An adapter could become stuck and damage the drive. Only use 12 cm diameter CDs.

**Tips on caring for your MP3 CDs**

- Only touch the CD on the edges.
- Clean the CD with a dry, lint-free cloth. Wipe the CD a straight line from the center. Never wipe the CD in a circular motion.
- Do not use rubbing alcohol or solvents to clean CDs.
- Do not expose the CDs to cold, heat or direct sunlight.
- Do not write or put labels on CDs.

**Tips on creating MP3 CDs**

CDs, software and hardware for writing audio data to CDs vary widely. Therefore, we cannot guarantee that COMAND will be able to play every user-written CD. Problems may also be encountered during playback of user-written CDs with a storage capacity of more than 700 MB.

**Permissible MP3 CDs**

In MP3 mode COMAND can read CD-R and CD-RW CDs.

**Permissible file systems**

The permitted file system for COMAND is ISO9660/Joliet for CD-R and CD-RW.

**Multi session CDs**

Multi session CDs include mixed file types (e.g. MP3 and audio CD) in either successive or random order on the disc. In MP3 mode, COMAND will integrate audio CD tracks into the disc's folder structure. The CD audio track folder will appear first followed by folders containing MP3 tracks.

### MP3 CD operation

#### File structure

When creating a MP3 CD, you can organize MP3 tracks into folders. A folder can also contain additional folders.

A CD may have a maximum of 255 folders in total.

A maximum of 255 tracks are permissible per folder.

Mathematically a maximum of 65025 tracks would result. However, this amount is usually not reached since MP3 requires approx. 1 MB storage per minute recorded.

#### Track names and folder names

When creating an MP3 CD, you can assign names to the MP3 tracks and folders. COMAND uses these names in MP3 mode for the corresponding display.

Please note the following when assigning folder and track names:

- Track and folder names must contain at least 1 character.
- Track names may contain up to fifty characters. If a name exceeds this character limit, COMAND will not be able to display it in full.
- Track names must have the extension “mp3”.

- A period must appear between the track name and the file extension.

Example of a correct track name:  
Track1.mp3

In the example, the track name contains six characters, followed by a period and the file extension “mp3”.

Empty folders or folders containing data other than MP3 tracks will not be displayed by COMAND.

If MP3 or audio CD files are stored in the root directory itself, the root directory also counts as a folder. COMAND will then display the root directory name as a folder name.



COMAND does not support ID3tags.

### Tips on creating MP3 tracks

#### Permissible MP3 formats

COMAND supports the MPEG1 AudioLayer3 format.



In everyday speech, this format has been replaced by the designation “MP3”.

#### Permissible bit and scan rates

- Fixed and variable bit rates up to 320 kbps
- Scan rates from 24 kHz - 48 kHz



It is recommended to use MP3 tracks with a bit rate of 128 kbps or higher and with a scan rate of 44.1 kHz or higher. Lower rates may impair quality. This is particularly true if the sound function LOGIC7 Surround has been activated.

### Tips on copyright

The music tracks that you can create for play back in MP3 mode are generally copyright-protected under applicable international and national laws.

In many countries, the reproduction of copyrighted material is not permitted, even if only for personal use, without the express prior consent of the copyright holder.

Please check the current copyright laws for your country and comply with them.

These restrictions do not apply for example to your own compositions and recordings, or for recordings for which authorization has been obtained from the copyright holder.

### MP3 CD operation

#### Switching to MP3 CD mode



A MP3 CD is played in the same drive as a audio CD. The CD drive is located behind of the display unit.

- ▶ Activate the MP3 CD main menu (▷ page 75).

or

- ▶ Load a MP3 CD into the CD drive (▷ page 53).

#### Loading a MP3 CD

Loading a MP3 CD into the CD drive is the same as described for audio CDs.

- ▶ Load a MP3 CD (▷ page 53).

After inserting a MP3 CD into the CD drive the COMAND loads the data. It may take a while to load the data, depending on the number of folders and tracks.

After loading, COMAND plays the MP3 CD.


#### Ejecting a MP3 CD

Ejecting a MP3 CD out of the CD drive is the same as described for audio CDs.

- ▶ Eject a MP3 CD (▷ page 53).

### MP3 main menu

- ▶ Activate the Audio menu (> page 42).

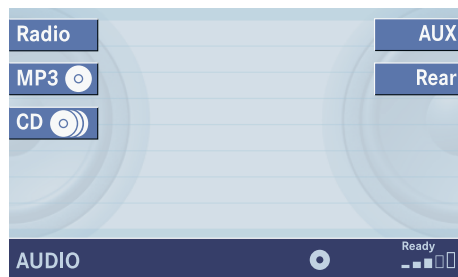

P82.86-5226-31US


- ▶ Press the MP3 soft key.



The MP3 soft key is visible if a MP3 CD is already loaded. If not, the CD soft key will appear. In this case, load a MP3 CD first.

It may take a while to load the data depending on the number of folders and tracks.

If the MP3 CD is loaded, the MP3 main menu will appear.

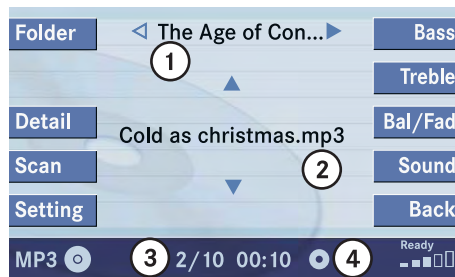

P82.86-5227-31US

### MP3 main menu

- ① Current folder
- ② Current MP3 track
- ③ Track number within the current folder/number of tracks in current folder
- ④ Elapsed playback time of the current track

If the MP3 can not be read, the message CD error will appear.



On MP3 tracks with variable bit rates, the elapsed track time displayed may deviate from the actual time elapsed.

## Audio

### MP3 CD operation

#### Selecting a folder

If the MP3 tracks are organized into folders on the CD, you can select a folder from the COMAND control unit.

The following options are available:

- Selecting via the MP3 main menu
- Selecting via the folder list


#### Selecting via the MP3 main menu



The folder list only contains folders in which MP3 or audio CD tracks are stored.

After inserting a MP3 CD, the COMAND loads the data. After loading, you can use this function.

Only one folder can be viewed at a time.

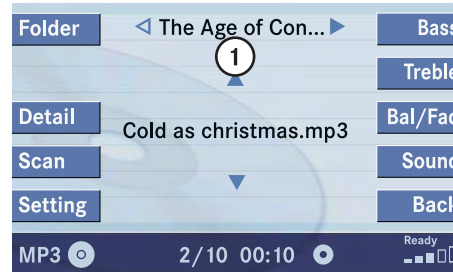

P82.86-5229-31US

① Current folder

- ▶ Activate the MP3-CD main menu. (▷ page 75).
- ▶ Push the joystick to ◀ or ▶ to select a folder.
- ▶ Wait approx. 3 seconds.

The COMAND changes the folder and loads the data from the new folder. It may take a while to load the data, depending on the number of folders and tracks.

Playback of the first track of the selected folder will begin.

The track list displays the tracks of the selected folder.


### Selecting via the folder list



The folder list only contains folders in which MP3 or audio CD tracks are stored.

After inserting a MP3 CD the COMAND begins loading the data. The Folder soft key may be greyed out during that time. Once loaded the folder soft key is available.

- ▶ In the MP3 main menu (▷ page 75), press the Folder soft key. The folder list appears.

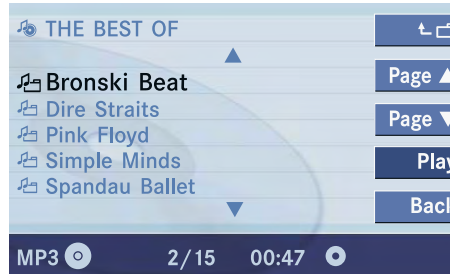

P82.86-5660-31US



- Folder contains MP3 tracks
- Folder contains subfolders
- MP3 CD name

- ▶ Push the joystick to ▼ or ▲ to select a folder.
- ▶ Press **OK**.

COMAND changes the folder and loads the data from the new folder. It may take a while to load the data depending on the number of folders and tracks.

If a Folder icon folder was selected:

A list of MP3 tracks appears.

If a Folder icon folder was selected:

The next level of the folder structure will appear.

- ▶ Push the joystick to ▼ or ▲ to select a track or another folder. Repeat until desired track or folder appears.

The Play soft key is available if a track is selected or the selected folder contains only tracks and no subfolders:

When pressed, playback of the highlighted track or the first track in the selected folder will begin.

To go up one level in the folder structure:

- ▶ Press the Folder icon soft key.

## Audio

### MP3 CD operation

#### Track select

You can select a track:

- by using **▼** or **▲** in the track list
- with **SEEK-** or **SEEK+**
- with the number keypad
- with Scan



If there are tracks on the MP3 CD that can not be read, you will not see any error messages. The audio output will be muted and a search will begin to the next readable position.

#### In the track list

The track list includes all tracks of the MP3 CD or currently selected folder. Only one list entry is visible at a time.



P82.86-5229-31US

① Current folder

- ▶ Activate the MP3 main menu (▷ page 75).

- ▶ Push the joystick **▼** or **▲** to move forward or backward through the track list.
- ▶ Press **OK**.

#### Using Skip track

- ▶ Activate the MP3 main menu (▷ page 75).

#### Forward

- ▶ Press **SEEK+**.

The next track from the track list is played.



If the last track in a folder is playing, the first track is selected.

**Backward**


- ▶ Press **-SEEK**.

If the track has been playing for more than approx. 10 seconds, the track is replayed from the start. If the playing time is shorter, the previous track is played.

**With the number keypad**

The tracks of the current folder can be selected with this function.

- ▶ Activate the MP3 main menu (▷ page 75).
- ▶ In short succession, press button **\*** and the number key of the desired track, e.g. 8.

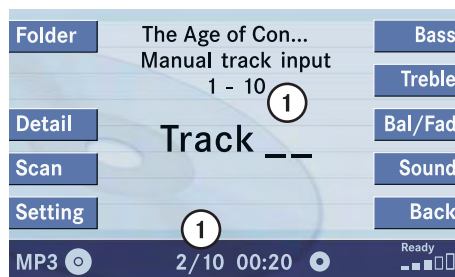

P82.86-5231-31US

- ① Number of tracks in the current folder (10 tracks)



If the current folder contains less than 10 tracks, the system will only recognize the first digit entered and play the appropriate track.

After your entry the selected track is played and visible.

**Using MP3 track scan**

The tracks of the current folder can be scanned one after the other for 8 seconds each. Subfolders are not considered.

The function will switch off automatically when the beginning track is reached.

You can also manually stop the scan search.

**Starting the scan search**

- ▶ Activate the MP3 main menu (▷ page 75).
- ▶ Press the **Scan** soft key.



When you start the scan search, the playback mode **Normal sequence** (▷ page 81) is automatically activated.

## Audio

### MP3 CD operation

#### Ending the scan function

Scan search is running.

- ▶ Press the Scan soft key.

or

- ▶ Press **OK**.

The last scanned track is played.


#### Fast forward/reverse

- ▶ Activate the MP3 main menu (▷ page 75).
- ▶ Press and hold **-SEEK** or **SEEK+**.
- ▶ To stop release **-SEEK** or **SEEK+**.

### Muting

#### On


- ▶ Press **MUTE** during playback.

The MP3 CD operation is stopped and the  symbol is displayed in the status bar. The soft keys on the left side are greyed out in the MP3 main menu.

#### Off




- ▶ Press **MUTE** again.

Playback will resume.

The  disappears from the status bar. The soft keys on the left side are selectable again.



COMAND will also deactivate muting if you

- Press **AUDIO**, **SAT**, **-SEEK**, **SEEK+**
- Change the volume at COMAND or the multifunction steering wheel
- Operate the joystick
- Press any keypad button except **#** 
- Press  or  at the multifunction steering wheel if the audio menu is selected.

### Playback options

The following options are available:

- Normal sequence (▷ page 81)
- CD mix (▷ page 81)
- Repeat track (▷ page 81)
- Repeat folder (▷ page 81)


**Changing the playback option**

E.g.:

Option CD mix

- ▶ Activate the MP3 main menu (▷ page 75).
- ▶ Press the Setting soft key.

Option	Symbol
Function active	●
Function not active	○

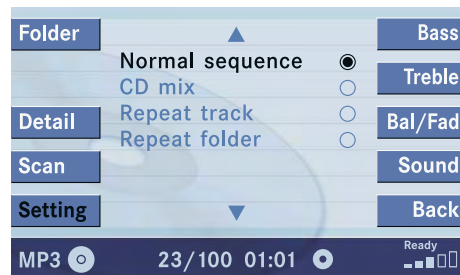

P82.86-5232-31US

**Setting menu**

- ▶ Push the joystick to ▲ or ▼ to select the playback mode CD mix.

- ▶ Press **OK**.

The option is activated. The MP3 main menu will reappear.

**Explanation of the playback options**

- Normal sequence (normal setting)

The tracks of the current folder are played in order on the disc.

If the current folder contains sub-folders:

The sub-folders and their tracks are played in order on the disc.

**i** After selecting, the following playback options are displayed on the status bar.

- CD mix

All tracks of the MP3 CD are played in random order.

- Repeat track

The system repeats the current track until you switch the function off.

- Repeat folder

The system repeats the tracks of the current folder until you switch the function off.

**View track detail**

At any time during playback an expanded view of a track title can be displayed in the MP3 CD main menu via a separate window.

- ▶ Press the Detail soft key.

**To cancel**

- ▶ Press the Detail soft key again.

or


The window will automatically disappear in approx. 5 seconds.

## Audio

### AUX operation

#### ▼ AUX operation

An external audio source can be connected to the COMAND via the 1/8" socket located inside the glovebox.

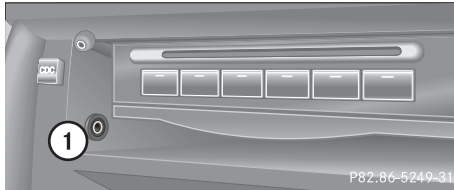

#### ML class illustrated


① 1/8" socket



Vehicles equipped with a Rear Seat Entertainment\* (▷ page 87) system do not include the 1/8" AUX socket. The audio signal from the Rear Seat Entertainment\* system is the permanent AUX source.

- ▶ Open the Audio menu (▷ page 42).
- ▶ Press the AUX soft key.

The AUX menu is displayed. The external audio source is played back if it is connected and switched to playback.

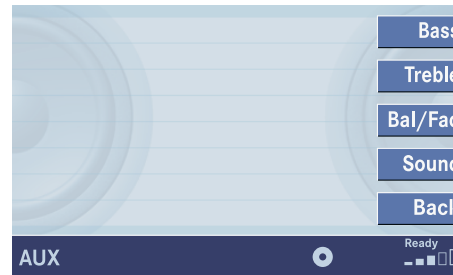

#### AUX menu



For instructions on how to operate the external audio source, please see the operation manual of the device connected.

At the COMAND, you can set the following for the AUX operation:

- Volume (▷ page 35)
- Balance control and fader (▷ page 36)
- Bass and treble control (▷ page 37)
- Sound functions\* (▷ page 38)

**Rear Audio/Video\***

**Rear Audio operation\***

**Rear Seat Entertainment (RSE) operation\***

## Rear Audio/Video\*

### Rear Audio operation\*

#### ▼ Rear Audio operation\*

#### Warning



The driver should not operate any of the Rear Audio features at the Rear climate control panel while driving the vehicle under any circumstances. These features can distract the driver from traffic conditions and should only be operated by the rear seat occupants.

Similarly, the driver should not wear a Rear Audio headset while operating the vehicle under any circumstances. The use of a headset while driving the vehicle could drastically impair the ability to react to audible traffic conditions (e.g. emergency sirens from police/fire/ambulance, another driver's horn, etc).

#### Warning



When not in use, headsets should be stored in a safe location (e.g. one of the vehicle's storage compartments) so that they are not loose within the passenger compartment during braking, vehicle maneuvers or a traffic accident. Objects moving within the passenger compartment could cause serious personal injury to vehicle occupants.

#### Warning



Due to a potential choking hazard, wired headset usage by children should only occur with adult supervision.




Only use 32 Ohm headsets.

For further information please contact an authorized Mercedes-Benz Center.

#### Connecting headsets

Both 1/8" sockets ① are located in the Rear climate control panel at the back of the center console. You can connect one headset to each socket.

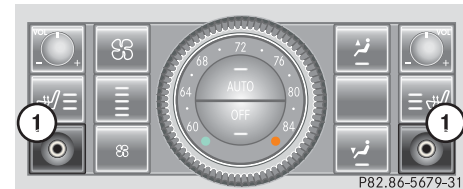

① 1/8" sockets

- ▶ Gently push the headset connector into the socket ①.

The following functions are available when using the Rear Audio feature

- Select the audio source
- Switch off
- Adjust headset volume

#### Selecting the audio source



You can select different audio sources for the COMAND and the Rear Audio operation\*. The selected audio source for the COMAND will playback through the speakers while the selected audio source for the Rear Audio will playback through the headset(s). The Rear Audio source is the same for both headset sockets.


- ▶ At the COMAND open the Audio menu (▷ page 42).
- ▶ Press the **Rear** soft key.  
The Rear menu will appear.






P82.86-5245-31US



#### Rear menu



The factory setting is **Off** , so you can not hear an audio source via the headset.

If a MP3 CD is loaded into the CD drive, **MP3**  will appear instead of **CD** .


The **CD**  and **SAT** options are available if a CD changer\* and a satellite radio\* equipment (with subscription to satellite radio service provider) are connected to the COMAND.

- ▶ Push the joystick to  or  to select the audio source you want.



In vehicles equipped with a Rear Seat Entertainment\* system (▷ page 87) the audio signal from the Rear Seat Entertainment system is the permanent AUX source.



An audio source, e.g. **CD**  for CD drive, will appear greyed out, if e.g. there is no CD loaded in the slot.

Loading a CD (▷ page 53).

- ▶ Press **OK**.

The audio source is selected. Playback begins.



Voice instruction during route guidance, telephone ringing or a caller's voice is not heard via the headset.

## Rear Audio/Video\*

### Rear Audio operation\*

#### Switching off

- ▶ Push the joystick ▲ or ▼ to select Off.
- ▶ Press **OK**.

The Rear Audio operation\* is switched off.


- ▶ To switch on again, select an audio source and press **OK**.

#### Adjusting the volume



Both volume knobs are located in the Rear climate control panel at the back of the center console. There are two possible positions for each knob, in or out. Volume adjustment is only possible when the knob is out.

- ▶ If the position of the volume knob ① is in, push it in and then release.
- ▶ Turn the knob to the desired volume level.

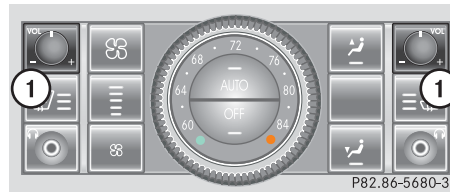

- ① Volume knobs

## ▼ Rear Seat Entertainment (RSE) operation\*

**Warning**

The RSE CD/DVD player is a Class 1 laser product. There is a danger of invisible laser radiation when you open or damage the cover.

Do not remove the cover. The RSE CD/DVD player does not contain any parts which can be serviced by the user. For safety reasons, have any necessary service work performed by qualified personnel.

**Warning**

When not in use, headsets or external video sources should be stored in a safe location (e.g. one of the vehicle's storage compartments) so that they are not loose within the passenger compartment during braking, vehicle maneuvers or a traffic accident. Objects moving within the passenger compartment could cause serious personal injury to vehicle occupants.

**Warning**

Due to a potential choking hazard, wired headset usage by children should only occur with adult supervision.

**General information on CD/DVD operation****Tips on caring for your DVDs**

- Treat DVDs with care to prevent malfunctions during playback.
- Do not scratch, touch or soil your DVDs.
- Do not attach labels to or write on your DVDs.
- From time to time, clean your DVDs with a commercially available cleaning cloth. Never wipe circularly, but in a straight line from inside to outside.
- After use, put your DVDs into the DVD box.
- Protect your DVDs from high temperatures and direct sunlight.

### Rear Seat Entertainment (RSE) operation\*



Your RSE CD/DVD player has been designed to play CDs/DVDs which correspond to the IEC 60908 standard. You can therefore only use CDs with a maximum thickness of 1.3 mm.

If you insert thicker data carriers, e.g. ones that have data on both sides (one side with DVD data, the other side with audio data), they cannot be ejected and will damage the drive.



CDs, software and hardware for writing data to CDs vary widely. Therefore, we cannot guarantee that the system will be able to play every user-written CD.



The system may not be able to play copied CDs or those with copy protection.



Do not attach labels of any type to the CD. They may become detached and damage the drive.



Do not play single CDs (80mm) with an adapter. An adapter could become stuck and damage the drive. Only use 12 cm diameter CDs.

#### Multi session discs

With multi session discs, the content of the first session determines how the RSE CD/DVD player treats the CD.

For example, if the first session contains data in audio CD format and the second session contains data in MP3 format, the RSE CD/DVD player will treat the CD as a conventional audio CD.

#### Permissible CDs/DVDs

The following file and disc formats can be played in the RSE CD/DVD player:

- Audio CD which bears the below label



- CD-R and CD-RW containing MP3 files or CDDA files with title text.
- DVD-Video which bears the below label



- DVD-R, DVD+R, DVD-RW and DVD+RW containing video content.

Tips on creating MP3 CDs (▷ page 71)

Tips on copyright (▷ page 73)

#### DVD playback requirements



Some DVDs may not comply with the NTSC or PAL TV playback standards. Sound, picture and other playback problems may occur when you play such DVDs.

The RSE CD/DVD player can playback video DVDs meeting the following requirements:

- Correct regional code
- NTSC or PAL TV standard

The appropriate information is usually given either on the DVD or the DVD box. The factory setting of the RSE CD/DVD player is regional code 1. The setting can be changed at an authorized Mercedes-Benz Center. This will allow you to playback video DVDs with other regional codes, as long as they comply with the NTSC or PAL TV standard.

#### Operating the Rear Seat Entertainment\* (RSE)

You can operate the RSE via

- the Remote control and
  - the button panel at the front on the two rear monitors.
- ▶ Point the remote control with the infrared transmitter ① at the receiver diode ② on one of the two rear monitors.

#### Switching between the rear monitors

- ▶ Move the left/right monitor switch ③ on the right side of the remote control to switch between the left monitor and the right monitor.

#### Soft key selection via remote control

- ▶ Turn the thumb wheel up or down.

You navigate through the soft keys. The corresponding soft key on the selected rear monitor changes its color.



- ▶ Press the thumb wheel.

The function is selected.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Remote control

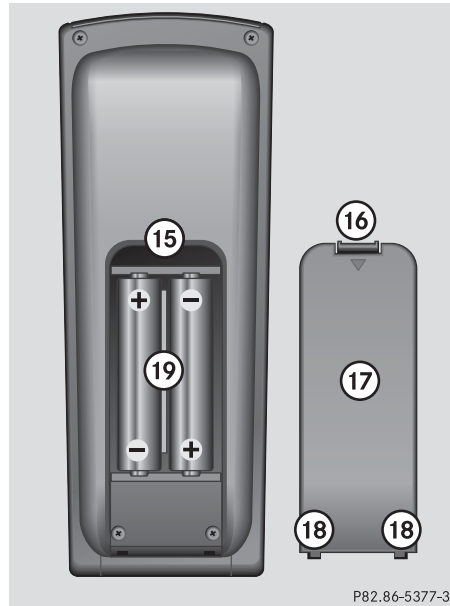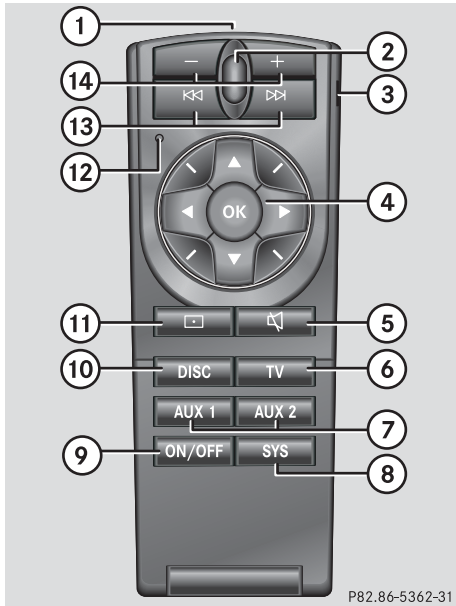



#### Rear monitor



 







#### RSE CD/DVD player



### Rear Seat Entertainment (RSE) operation\*

	Function	Page
	<b>Remote control</b>	
①	Infrared transmitter	
②	Thumb wheel. Turn to select a soft key and press to confirm	96
③	Left/right monitor switch	
④	 Function selection Press <b>OK</b> to confirm	
⑤	 Muting	111
⑥	<b>TV</b> Not available. Message No TV	
⑦	<b>AUX 1</b> or <b>AUX 2</b> Switching to the external video source, if connected or AUX menu	108 108
⑧	<b>SYS</b> System menu	109

	Function	Page
⑨	<b>ON/OFF</b> Switching on and off	92
⑩	<b>DISC</b> Switching to the mode corresponding to the inserted CD	
⑪	 Monitor off/on	112
⑫	<b>LED</b>	113
⑬	 Track select (CD, MP3 CD) 97, 101 Fast forward/reverse (CD, MP3 CD, DVD) 98, 101, 107 Scene/chapter skip (DVD) 107	
⑭	Adjusting the headset volume  Volume down  Volume up	96
⑮	Battery compartment	
⑯	Retainer clip	
⑰	Cover	

	Function	Page
⑱	Locating lugs	
⑲	Batteries - 2 Type AAA 1.5 V	
	<b>Rear monitor</b>	
⑳	Infrared receiver diode	
㉑	 Switching monitor on and off	92
㉒	 Adjusting the display brightness	96
㉓	 Adjusting the headset volume	96
㉔	Headset connector socket	92
	<b>RSE CD/DVD player</b>	
㉕	CD/DVD slot	94
㉖	Video socket and two audio (L - left, R - right) sockets	95
㉗	 Eject button	94

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Connecting headsets

The two rear monitors are located at the back of the front seats.

A 1/8" socket ② is located in the button panel at the front of each monitor. You can connect one headset to each socket.



Only use 32 Ohm headsets.

For further information please contact an authorized Mercedes-Benz Center.

- ▶ Gently push the headset connector into the socket ②.



Rear monitor, R class illustrated

- ① ON/OFF button
- ② 1/8" socket

#### Switching the rear monitor on and off

##### Switching on



The RSE system can be switched on from the monitors regardless of key (in, out) or starter switch (0, 1, 2) positions. For an explanation of starter switch positions, please refer to the vehicle Operator's Manual.

- ▶ Press **ON/OFF** button ① on one or both of the monitors.

or

With the key inserted in the starter switch in any position (0, 1, 2):

- ▶ Set the remote control L/R monitor switch to the side you wish to control.
- ▶ Press **ON/OFF** button ⑨ on the remote control (▷ page 90).



If the system is being used while the key is out or inserted in position 0, the system will switch off after approx. 30 minutes.

In all cases, one of the following messages will appear on the monitor  
Please wait, loading disc...

The RSE CD/DVD player will load the CD which was in the drive when the system was switched off. The corresponding menu will appear on the rear monitors and playback will begin.

Drive empty

- ▶ Load a CD into the RSE CD/DVD player.

#### Switching off

- ▶ Press **ON/OFF** on the rear monitor or press **ON/OFF** on the remote control again.
- or
- ▶ Turn the key in the starter switch to position 0 and pull the key out.

The message **Vehicle key removed. Please confirm by pressing OK so that the device continues operating. will appear for approx. 10 seconds. If no action is taken the system will turn off. If OK is selected via the remote the system will continue to operate for approx. 30 minutes.**


#### Loading/ejecting CDs

ML and GL class

The RSE CD/DVD player is located under the right rear seat.

R class

The RSE CD/DVD player is located at the front of the middle row console.

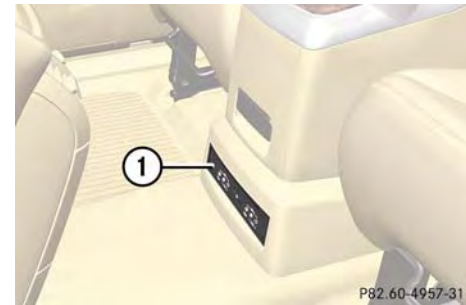

**R class illustrated**

- ① RSE CD/DVD player

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*



#### ① CD/DVD slot

The system is already switched on (▷ page 92).

- ▶ Slide the protective cover open.
- ▶ Insert a CD into the slot ①. The CD should be inserted with the label side up.

The RSE CD/DVD player pulls the medium in.




Inserting a second CD with another CD still loaded will cause damage to the RSE CD/DVD player which is not covered by the Mercedes-Benz Limited Warranty.


The message `Please wait, loading disc...` will appear on the rear monitor. It may take a while to load the data.

After loading, the player plays the loaded medium and the corresponding menu will appear on the rear monitor.

#### Ejecting a CD from the RSE CD/DVD player



- ① CD/DVD slot
- ②  Eject button

- ▶ Slide the protective cover open.
- ▶ Press .

The message `Press any key to continue...` will appear.

- ▶ Within 10 seconds, remove the medium from the slot ①.

The medium will be pulled in again if it is not removed from the slot within approx. 10 seconds. The RSE CD/DVD player starts playing the medium again.

After removing the medium, the message `Drive empty` will appear.

#### Connecting external video sources

Two external video sources can be connected to the RSE CD/DVD player via the video and audio (L - left, R - right) sockets located on the front panel.



① Video socket

② Audio (L - left, R - right) sockets

- ▶ Gently push the video and audio connectors of the external video source into the AUX 1 and AUX 2 sockets ① and ②.

The external video source is played back on the monitor switched to the corresponding AUX source.



For instructions on how to operate the external video sources, please see the operation manual of the device connected.



When not in use, external video sources should be stored in a safe location (e.g. one of the vehicle's storage compartments) so that they are not loose within the passenger compartment during braking, vehicle maneuvers or a traffic accident. Objects moving within the passenger compartment could cause serious personal injury to vehicle occupants.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Adjusting the headset volume



After connecting the headsets (▷ page 92) you can adjust the volume.

#### With the remote control

- ▶ Press or as often as necessary to adjust the volume.

A window will appear indicating the current volume level.

#### At the monitor

- ▶ Press or as often as necessary to adjust the volume.

A window will appear indicating the current volume level.

#### Adjusting the display brightness

#### At the monitor

- ▶ Press or .

The display brightness changes gradually.

#### With the remote control

- ▶ Adjust the display brightness in the System menu (▷ page 110).


**Switching to CD mode**

An audio CD is loaded in the RSE CD/DVD player and it is switched on.

Loading a CD (▷ page 93).  
Switching on (▷ page 92).

- ▶ Set the L/R monitor switch on the remote to the side you wish to control.
- ▶ Press **DISC** on the remote.

The CD menu will appear on the display. Playback begins with track 1.

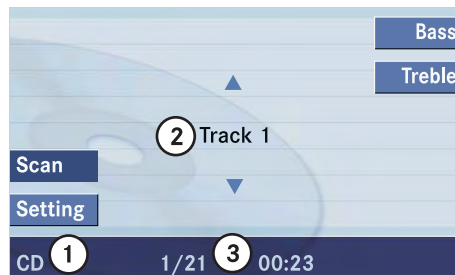**CD menu**

- ① CD mode
- ② Current track
- ③ Current track number/max. track number on CD and elapsed playback time



The name of the CD and the name of the track played are displayed if the information is available.

**Track select**

- ▶ Press **▲** or **▼** to play the next or previous track.
- or
- ▶ Press **▶▶** to play the next track.
  - ▶ Press **◀◀** to play the previous track or start of title (if more than 10 seconds of playing time has elapsed).  
Playback begins.

**CD track scan**

The tracks on a CD can be scanned one after the other for 8 seconds each.

**Starting the function**

- ▶ Turn the thumb wheel to highlight the Scan soft key and press to select.  
Scan will begin.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Ending the function

The function will switch off automatically when the beginning track is reached.

or

- ▶ Press the thumb wheel to select the Scan soft key again if the scan search is running.

#### Fast forward/reverse

##### Fast forward

- ▶ Press and hold **▶▶** for more than 2 seconds.

##### Fast reverse

- ▶ Press and hold **◀◀** for more than 2 seconds.


#### Ending the function

- ▶ Release **▶▶** or **◀◀**.  
Playback will resume.

#### Playback mode

- ▶ Turn the thumb wheel to highlight the Setting soft key and press to select.

The setting menu will appear.

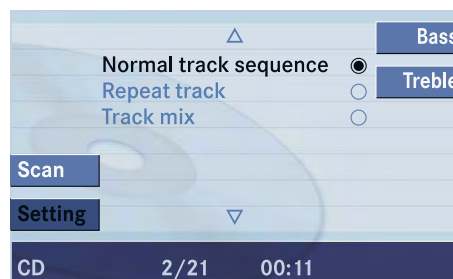

P82.86-5366-31US

The following options are available:

- Normal track sequence  
Tracks are played in ascending order (e.g. 1, 2, 3 and so on). The first track is played when the last one has ended.

- Repeat track

The system repeats the current track until you switch the function off.

- Track mix

Tracks are played in random order.

- ▶ Press **▲** or **▼** to select the desired option.

- ▶ Press **OK**.

The mode is activated. The CD main menu will then appear. The playback modes TRACK MIX and REPEAT TRACK will appear in the status bar.

Setting Bass and treble (▶ page 112).

**Switching to MP3 CD mode**


An MP3 CD is loaded in the RSE CD/DVD player and it is switched on.

Loading a CD (▷ page 93).

Switching on (▷ page 92).

- ▶ Set the L/R monitor switch on the remote to the side you wish to control.
- ▶ Press **DISC** on the remote.

The MP3 CD menu will appear on the display. Playback begins with track 1.

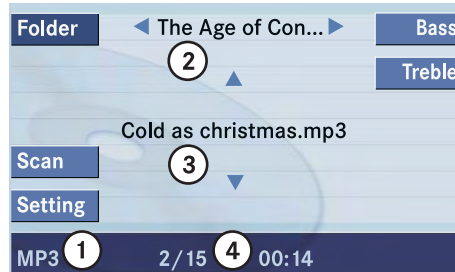

P82.86-5367-31US

**MP3 CD menu**

- ① MP3 mode
- ② Current folder
- ③ Track list
- ④ Track number within the current folder/number of tracks in current folder and elapsed playback time of the current track

**Selecting a folder**

If the MP3 tracks are organized into folders on the CD, you can select a folder from the remote control.

The following options are available:

- Selecting via MP3 main menu
- Selecting via folder list

**Selecting via MP3 main menu**

- ▶ Press **◀** or **▶** to select a folder.

The RSE CD/DVD player changes the folder and loads the data from the new folder. It may take a while to load the data, depending on the number of folders and tracks.

Playback of the first track of the selected folder will begin.


## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Selecting via folder list

- ▶ Turn the thumb wheel to highlight the Folder soft key and press to select.

The folder list will appear.

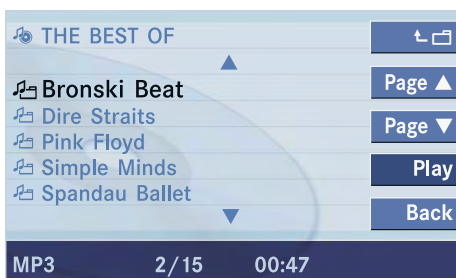

P82.86-5368-31US



- Folder contains MP3 tracks
- Folder contains subfolders
- MP3 CD name

- ▶ Press **▲** or **▼** to select the desired folder.
- ▶ Press **OK**.  
The Folder's track list appears.
- ▶ To play the first track of the selected folder, press the thumb wheel to select the Play soft key.

#### Track select

- ▶ Press **▲** or **▼** to move forward or backward through the track list.
- ▶ Press the thumb wheel to select the Play soft key.  
Playback begins.
- ▶ Press **▶▶** to play the next track from the track list.
- ▶ Press **◀◀** to play the previous track in the track list or replay the track from the start (if the track has been playing for more than approx. 10 seconds).  
Playback begins.

#### MP3 track scan

The tracks of the current folder can be scanned one after the other for 8 seconds each. Subfolders are not considered.

The function will switch off automatically when the beginning track is reached.





#### Starting the function

- ▶ Turn the thumb wheel to highlight the Scan soft key and press to select.  
Scan will begin.

#### Ending the function

- The function will switch off automatically when the beginning track is reached.
- or
- ▶ Press the thumb wheel to select the Scan soft key again.

**Fast forward/reverse**

- ▶ Press and hold  or .
- ▶ To stop release  or .

**Playback mode**

- ▶ Turn the thumb wheel to highlight the Setting soft key and press to select.

The setting menu will appear. The following options are available:

- Normal sequence

The tracks of the current folder are played in order.

If the current folder contains sub-folders:

The subfolders and their tracks are played in order.



After selecting, the following playback options are displayed on the status bar.

- Repeat track

The system repeats the current track until you switch the function off.

- Repeat folder



The system repeats the tracks of the current folder in order until you switch the function off.

- Folder mix

All tracks of the current folder are played in random order.

- CD-ROM mix

All tracks of the MP3 CD are played in random order.

- ▶ Press  or  to select the desired option.

- ▶ Press .

The mode is activated. The MP3 CD menu will then appear.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Switching to DVD mode

A DVD is loaded in the RSE CD/DVD player and it is switched on.

Loading a CD (▷ page 93).  
Switching on (▷ page 92).

- ▶ Set the L/R monitor switch on the remote to the side you wish to control.
- ▶ Press **DISC** on the remote.  
Playback begins.

#### Displaying the soft keys during playback

- ▶ Turn or press the thumb wheel.  
The soft keys and the status bar are displayed.



- ① DVD mode
- ② T:1 - Track/film no.1 is played back  
S:1 - Scene/chapter 1 is played back  
0:00:26 - Elapsed playing time

#### To remove the soft key display

The soft keys and the status bar disappear after approx. 10 seconds.

or

- ▶ Turn the thumb wheel to highlight the Full scn. soft key and press to select.

#### Soft key functions



Depending on the DVD, not all functions are available at any time.

- Pause or Play soft key:  
Switches the Pause function on or off.
- Stop soft key:  
Stops the DVD playback and displays a menu (▷ page 103).
- Full scn. soft key:  
The soft key display disappears.
- Menu soft key:  
Displays the menu on the DVD, if available.
- Setting soft key:  
Displays the Setting menu (▷ page 104).


- **Tone soft key:**  
Brings you to the tone menu, where you can set Bass and Treble (▷ page 107).
- **Bright., Contr. and Color soft keys:**  
Allow you to adjust brightness, contrast and color (▷ page 107).

#### Pause function

- ▶ Turn the thumb wheel to highlight the **Pause** soft key and press to confirm.  
DVD playback is paused. The picture stands still. The **Pause** soft key changes to **Play**.
- ▶ To resume playback, press the thumb wheel to confirm the **Play** soft key.  
Playback of the DVD will resume.

#### Stopping DVD playback

- ▶ Turn the thumb wheel to highlight the **Stop** soft key and press to confirm.  
DVD playback stops. The following menu will appear.

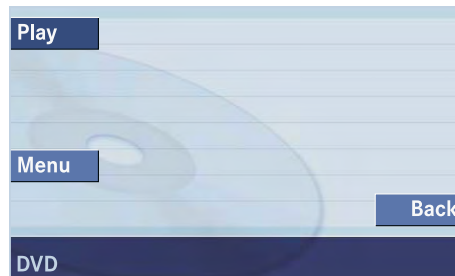

P82.86-5370-31US

- ▶ To restart playback, press the thumb wheel to select the **Play** soft key.  
The DVD is played from the beginning.



While DVD playback is stopped, you can press the **Menu** soft key. The menu on the DVD is displayed, if available.

#### Displaying full screen

- ▶ Turn the thumb wheel to highlight the **Full scrn.** soft key and press to confirm.  
The soft keys disappear. The full screen will appear.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Activating DVD menu

The DVD menu is the menu on the DVD. The structure of the menu may vary depending on the DVD and allows certain settings or actions.

For example, multilingual DVDs allow the DVD language to be selected in the menu.

Activating the DVD menu is possible by selecting the Menu soft key

- while the soft keys are displayed (▷ page 102) or
- after stopping the DVD playback (▷ page 103).
- ▶ Turn the thumb wheel to highlight the Menu soft key and press to confirm.

The highest level of the DVD menu is displayed, if available.

#### Selecting an item from the DVD menu

- ▶ Use **▶**, **◀**, **▲** or **▼** to select a menu item.
- ▶ Press **OK**.

The RSE CD/DVD player will perform the action defined by the menu item selected.




A DVD menu may contain several sub-menus or include an item for closing the DVD menu. Submenus may include a menu item to go up one level in the menu.

#### Activating Setting menu

- ▶ Turn the thumb wheel to highlight the Setting soft key and press to select.

The Setting menu will appear.

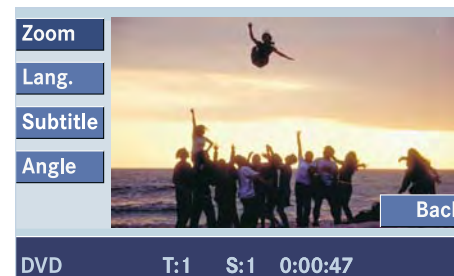

P82.86-5371-31US

Setting options:

- 4:3, 16:9 or Zoom soft key:  
You can change the aspect ratio.
- Lang. soft key:  
You can change the DVD language.

- **Subtitle soft key:**  
You can display and switch between the subtitles.
- **Angle soft key:**  
You can change the camera view, if possible.
- **Back soft key:**  
Switches back to the soft key display.

### ***Changing the aspect ratio***

You can manually change the aspect ratio during playback of the DVD.

- ▶ Turn the thumb wheel to highlight the top left soft key. Press the thumb wheel in succession to scroll to each ratio.

Possible aspect ratios are: 4:3, 16:9 and Zoom.

The soft key indicates the aspect ratio to which you will change when you press the thumb wheel.



Zoom is useful to watch movies in cinematic aspect ratio. You can use this function to reduce the width of the black bars at the top and bottom.

### ***Changing the DVD language***



You can only change the DVD language if the DVD supports several languages.

Some DVDs allow the language to be selected exclusively in the menu on the DVD.

- ▶ In the Setting menu (▷ page 104), turn the thumb wheel to highlight the Lang. soft key and press to select.

The language list is displayed. The content of the list depends on which languages the DVD supports.

- ▶ Use ▲ or ▼ to select a language.
- ▶ Press OK.

The selected language is set.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Displaying and switching between subtitles



These functions are available only if the DVD supports subtitles. When you insert a DVD, subtitles may be switched off.

Some DVDs allow the subtitling function to be selected only from the menu on the DVD.

- ▶ In the Setting menu (▷ page 104), turn the thumb wheel to highlight the **Subtitle** soft key and press to select.

The subtitles list will appear. The content of the list depends on the DVD.

- ▶ Use **▲** or **▼** to select a subtitle.
- ▶ Press **OK**.

The selected subtitles are active.

or

- ▶ Use **▲** to select list entry **None**.
- ▶ Press **OK**.  
Subtitling is switched off.

#### Changing the camera view



You can only change the camera view if several camera views are stored on the DVD. The number of available camera views depends on the DVD.

Some DVDs supporting different camera views do not offer a switch option. In this case, select the camera view in the Settings menu.

- ▶ In the Setting menu (▷ page 104), turn the thumb wheel to highlight the **Angle** soft key and press to select.


A list of the available camera views will appear.

- ▶ Use **▲** or **▼** to select the desired camera view.
- ▶ Press **OK**.  
The selected camera view is active.

#### Adjusting the tone

- ▶ Turn the thumb wheel while the soft keys are displayed (▷ page 102) to highlight the **Tone** soft key and press to select.

A submenu will appear.

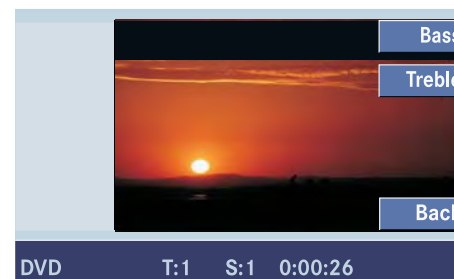

P82.86-5372-31US

### Adjusting bass and treble

- ▶ Turn the thumb wheel to highlight the Bass or Treble soft key and press to select.

A bar will appear at the top of the screen.

- ▶ Press  or .

The respective setting is changed.

### Adjusting brightness, contrast and color

- ▶ Turn the thumb wheel while the soft keys are displayed (▷ page 102) to highlight the Brightn., Contr. or Color soft key and press to select.

A bar will appear at the top of the screen.

- ▶ Press  or .

The respective setting is changed.


### Scene/chapter skip


If the movie is divided into chapters or scenes, you can skip them while the movie is playing. Some DVDs will not allow this in certain portions of the movie (e.g. during screen credits, age restriction and/or parental advisories).



Chapter/scene selection may also be possible in the menu on the DVD (▷ page 104).


- ▶ Press  or .

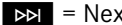
 = Next chapter or scene

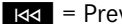
 = Previous chapter or scene or beginning of scene if scene has been playing for more than 10 seconds.

A window will appear at the top of the screen indicating the scene number.

### Fast forward/reverse

- ▶ Press and hold  or  during DVD playback.

 = fast forward

 = fast reverse

- ▶ Release the button to stop fast forward/reverse.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Switching to AUX mode

- ▶ Set the L/R monitor switch on the remote to the side you wish to control.
- ▶ Press **AUX1** or **AUX2** on the remote.

If an external video source is not connected the AUX menu appears. You can set bass and treble for the AUX operation (▷ page 112).



P82.86-5373-31US

AUX menu

If an external video source is connected (▷ page 95) and switched to playback the AUX menu will only appear briefly.

Playback begins automatically.

If the external video source is disconnected during playback the system switches back to the AUX menu.




For instructions on how to operate the external video sources, please see the operation manual of the device connected.

#### Displaying the soft keys during playback

- ▶ Turn or press the thumb wheel.

The soft keys and the status bar are displayed.

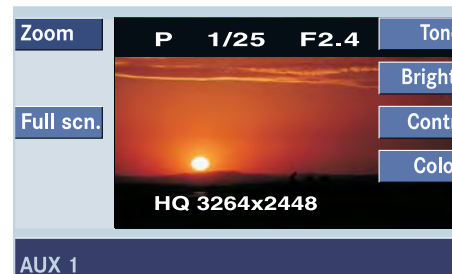

P82.86-5374-31US

#### To remove the soft key display

The soft keys and the status bar disappear after approx. 10 seconds.

or

- ▶ Turn the thumb wheel to highlight the **Full scn.** soft key and press to select.

### Soft key functions

- 4:3, 16:9 or Zoom soft key:  
You can change the aspect ratio.
- Full scn. soft key:  
The soft key display disappears.
- Tone soft key:  
Brings you to the tone menu, where you can set Bass and Treble (▷ page 107).
- Bright., Contr. and Color soft keys:  
Allow you to adjust brightness, contrast and color (▷ page 107).

### Changing the aspect ratio

You can manually change the aspect ratio during playback. To do this, use the top left soft key. The soft key changes each time you press the thumb wheel.

Possible aspect ratios are: 4:3, 16:9 and Zoom.

The soft key indicates the aspect ratio to which you will change when you press the thumb wheel.

- ▶ Turn the thumb wheel to highlight the top left soft key and press the thumb wheel in succession until the desired aspect ratio is set.

### Displaying full screen


- ▶ Turn the thumb wheel to highlight the Full scn. soft key and press to select.

The soft keys disappear. The full screen will appear.

### System settings

You can set the settings for both monitors separately. To switch between monitors (▷ page 90).

- ▶ Press **SYS** on the remote.  
The System menu will appear.

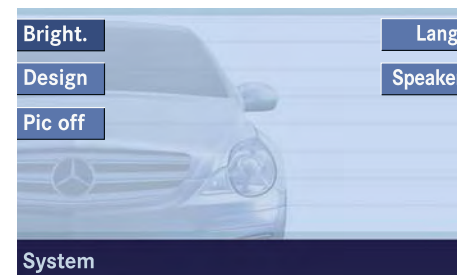


P82.86-5375-31US




ML class illustrated

### Rear Seat Entertainment (RSE) operation\*



You can use the following functions:

- **Bright.** soft key:  
Adjusts the display brightness.
- **Design** soft key:  
Sets the display dimming characteristics.
- **Pic off** soft key:  
Switches the monitor off and on. This is also possible by pressing  on the remote (▷ page 112).
- **Lang.** soft key:  
Selects the language for the menu text displays.
- **Speaker** soft key:  
Selects the source of the speakers (▷ page 111).

#### Adjusting the display brightness

- ▶ Turn the thumb wheel to highlight the **Bright.** soft key and press to select.
- ▶ Press  or  direction to adjust the brightness.
- ▶ Press .  
The setting is applied. The System menu will appear.

#### Setting the display dimming characteristics


- ▶ Turn the thumb wheel to highlight the **Design** soft key and press to select.
- ▶ Press  or  to select an entry.  
**Day Mode**  
The display is continuously set to daylight design.

#### Night Mode

The display is continuously set to night-time design.

#### Automatic



The display changes depending on the ambient light sensor in the vehicle.

- ▶ Press .  
The setting is applied. The System menu will appear.


#### Switching the monitor on and off

- ▶ Turn the thumb wheel to highlight the **Pic off** soft key and press to select.  
The monitor is switched off.
- ▶ Press the thumb wheel again.  
The monitor is switched on again.

**Selecting the language**

- ▶ Turn the thumb wheel to highlight the Lang. soft key and press to select.  
The languages list will appear.
- ▶ Press  or  to select the desired language.




or

- ▶ Select `Instrument cluster`.  
The display will use the same language as is set in instrument cluster.
- ▶ Press .  
The setting is applied. The System menu will appear.

**Selecting the source of the speakers**

If two audio sources (eg audio CD and AUX 2) are playing back simultaneously, one at the left monitor the other at the right monitor, you can select which source can be played through the vehicle speakers via the COMAND AUX channel.

At the COMAND, you can set the volume, bass and treble, balance and fader and sound functions\* (▷ page 82).

- ▶ Turn the thumb wheel to highlight the `Speaker` soft key and press to select.
- ▶ Press  or  to select `Left source` or `Right source`.
- ▶ Press .





The setting is applied. The System menu will appear.

**RSE audio playback through speakers**

RSE is set to playback

- ▶ At the COMAND open the Audio menu (▷ page 42).
- ▶ Press the AUX soft key.  
Playback begins.

**Muting on/off**

- ▶ Press  during playback (CD or MP3 CD mode, DVD mode).  
The respective operation is muted and the  symbol is displayed in the status bar of the corresponding main menu.
- ▶ Press  again.  
Playback will resume.  
The  disappears from the status bar.

## Rear Audio/Video\*

### Rear Seat Entertainment (RSE) operation\*

#### Setting bass and treble

- ▶ In the CD menu (▷ page 97), MP3 CD menu (▷ page 99) or AUX menu (▷ page 108) turn the thumb wheel to highlight the Bass or Treble soft key and press to select.



P82.86-5376-31US

- ▶ Press ◀ or ▶.  
Bass or Treble is adjusted.
- ▶ Press OK or wait until the display changes.  
The new setting is saved.



Press ◀ or ▶ and keep it depressed to move the slider continuously. Release the soft key to set the current value.

#### Monitor off /on

- ▶ Press [Monitor Off] on remote.  
The monitor is switched off.
- ▶ Press [Monitor On] on remote again.  
The monitor is switched on again.

**Replacing remote batteries****Warning**

Keep batteries out of the reach of children. Immediately seek medical help if a child swallows a battery. Batteries are not to be short-circuited, dismantled or thrown into fire.

**Environmental Note**

Batteries contain materials that can harm the environment if disposed of improperly. Recycling of batteries is the preferred method of disposal. Many states require sellers of batteries to accept old batteries for recycling.

The remote control is operated with two batteries type AAA 1.5 V. If you press any button on the remote and the LED does not light or is red in color, discharged batteries are most likely the cause.

- ▶ Remove the cover (17) of the battery compartment (15) on the back of the remote control.
  - ▶ Press the retainer clip (16) in the direction of the arrow and remove the cover (17).
- ▶ Remove batteries (19).

- ▶ Insert the new batteries. Please make sure you insert the batteries in the correct polarity direction (+/-).

Left battery:

Plus (+) must point upward.

Right battery:

Plus (+) must point downward.

- ▶ Insert the cover (17) with the location lugs (18) into the battery compartment (15) and then snap the retainer clip (16) into the compartment.



## **Satellite radio\***

**Important notes**

**Subscribing**

**Satellite radio operation**

## Satellite radio\*

### Important notes

#### ▼ Important notes

In chapter “Satellite radio”, you will find detailed information regarding

- selecting a station and a program category
- memory functions
- sound adjustments

If you have not done so already, please familiarize yourself with these functions by reading chapter “At a glance”.



Optional satellite radio equipment and a subscription to satellite radio service provider are required for the satellite radio operation described here.



Note that categories and channels shown in illustrations are dependent on programming content delivered by the service provider. Programming content is subject to change. Therefore, channel and categories shown in illustrations and descriptions contained in this manual may differ from the channels and categories delivered by the service provider.

Satellite radio service may be unavailable or interrupted from time to time for a variety of reasons, such as environmental or topographic conditions and other things we can't control. Service might also not be available in certain places (e.g., in tunnels, parking garages, or within or next to buildings) or near other technologies.



Sirius Satellite Radio provides approximately 100 channels, so called streams, of digital-quality radio, among others music, sports, news, and entertainment commercial-free.

Sirius Satellite Radio uses a fleet of high-power satellites to broadcast 24 hours per day, coast-to-coast, in the contiguous U.S.

This diverse, satellite-delivered programming is available for a monthly subscription fee. For more information, call the Sirius Service Center (▷ page 117) or contact [www.siriusradio.com](http://www.siriusradio.com).

### ▼ Subscribing

#### Subscribing to satellite radio

- ▶ Press **SAT** to switch to satellite radio operation.


The Satellite radio main menu will appear and displays the Weather channel. You cannot select any other station.



- ▶ Press the **Service** soft key to display the Service information display.
- The Service information display will appear.



Depending on subscription status, soft keys may or may not appear on the left and right side of the service information display.

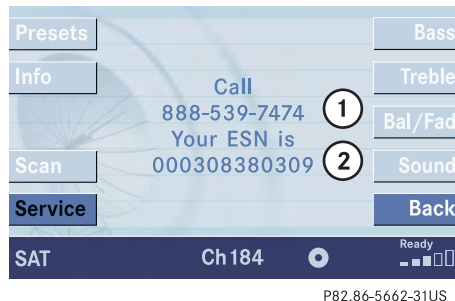

#### Service information display

- ① Phone number of the provider, (SIRIUS) or “Call Service Provider”
  - ② The Electronical Serial Number (ESN) of your satellite receiver
- ▶ Contact satellite radio service provider at the telephone number displayed in the screen.

After the connection is made:

- ▶ Follow the instructions given by the operator.

The activation process may take up to 10 minutes. If it is successful, you will see the display with the message *Acquiring Signal...* (> page 118) followed by the Satellite radio main menu (> page 118).



Credit card information may be required for your application.

The activation process takes up to approximately 10 minutes.

If a satellite receiver is not installed or not properly installed:

The message *No Satellite Radio* will appear.

## Satellite radio\*

### Satellite radio operation

#### ▼ Satellite radio operation

##### Switching on

See “Subscribing to satellite radio” for important subscription information (▷ page 117).

- ▶ Press **SAT** to switch to satellite radio operation.




The message will appear at start up or when the signal is not available.



No Satellite receiver:

The message No Satellite Radio will appear in a window.

After the COMAND acquires the signal, the Satellite radio main menu will appear. The station last tuned to will begin to play.

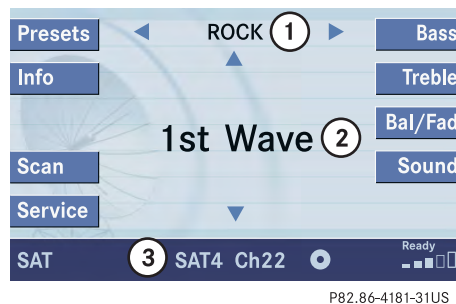

#### Satellite radio main menu

- ① Program category
- ② Station name
- ③ Memory preset selected if available and channel number



The Sound soft key is available if COMAND is equipped with a sound amplifier\*.




You can display ② in full:


- Station information (▷ page 122)

#### Muting

- ▶ Press **MUTE** while listening to the satellite radio.




The symbol  will appear in the status bar.

- ▶ Press **MUTE** again to resume listening to the current station.

The symbol  will have disappeared.






COMAND will also deactivate muting if you

- Press **AUDIO**, **SAT**, **-SEEK**, **SEEK+**
- Change the volume at COMAND or the multifunction steering wheel
- Operate the joystick
- Press any keypad button except **#** 
- Press  or  at the multifunction steering wheel if the audio menu is selected.

#### Changing the program category

Satellite radio stations are split up into categories. You can select between various categories such as News, Sports News and Country Music, if available. The category list is sorted alphabetically.

#### Selecting a program category




- ▶ Push the joystick to  or  while the Satellite radio main menu ( page 118) is being displayed.

The previous or next program category (alphabetical order) will appear in the display. The station last tuned in the new category will begin to play.



At the beginning of the category list the category ALL will appear. This category is sorted numerically (by channel numbers) and displays all available channels.

#### Selecting a station

You can use the following functions:

- Automatic tuning
- Automatic station scan ( page 120)
- Station selection via direct channel entry ( page 120)
- Station selection from the preset menu ( page 122)

#### Automatic tuning

- ▶ Push the joystick to  or  while the Satellite radio main menu is being displayed.

or

- ▶ Press **-SEEK** or **SEEK+**.

The satellite radio will tune in to the numerically previous or next receivable station in the selected category.

## Satellite radio\*

### Satellite radio operation

#### Automatic station scan

The stations in the selected category can be scanned in numerical order for 8 seconds each.

- ▶ In the Satellite radio main menu, press the Scan soft key.

The scan function will begin.



P82.86-4184-31US

#### Ending scan function and playing a station

- ▶ Press the Scan soft key again.

The station selected will appear with the station name. Scan will appear in white lettering again.

#### Station selection via direct channel entry

- ▶ Press **\***.

Input line will appear.



P82.86-4183-31US

- ▶ Enter the desired channel number with the number keys, e.g. **2** **4** for channel 24.

The channel you have selected will begin to play. The corresponding station name will appear, if station is available.

## Satellite radio\*

### Satellite radio operation

#### Memory functions



There are 10 presets available.

You can use the following functions:

- Saving stations manually
- Selecting a station from the Satellite preset memory (▷ page 122)
- Selecting a station by entering the channel number (▷ page 120)

#### Saving station manually

##### *In the Satellite radio main menu*


- ▶ Press one of the number keys, e.g. **2** ABC, longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 222).

The satellite radio saves the current station at the memory preset selected. The memory preset selected will appear in the status line, e.g. SAT2.

##### *On the memory list*

- ▶ In the Satellite radio main menu, press the Presets soft key.
- The SAT preset memory will appear.

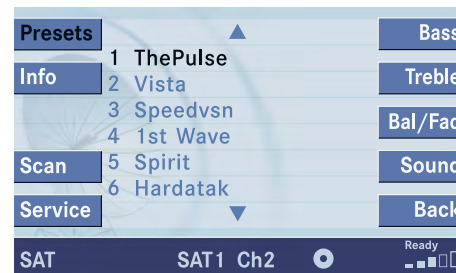

P82.86-4185-31US

#### Satellite preset memory

- ▶ Push the joystick to **▲** or **▼** to select a memory preset.
- ▶ Press **OK** longer than 2 seconds.

You will hear a verification beep if the beep tones option was activated in the system settings (▷ page 222).

The satellite radio saves the current station at the memory preset selected.

## Satellite radio\*

### Satellite radio operation



An existing entry is overwritten in the memory list when a new input is given.

If the message *Updating station list* appears the presets may be overwritten.

You will see the Satellite radio main menu

- automatically after 8 seconds
- if you press **BACK**.

#### Selecting a station on the memory list

- ▶ In the Satellite radio main menu, press the **Presets** soft key.

The Satellite preset memory (▷ page 121) will appear.

- ▶ Push the joystick to **▲** or **▼** to highlight a memory preset.
- ▶ Press **OK**.

The Satellite radio main menu will then appear automatically after 8 seconds, indicating the memory preset number in the status line.

#### Displaying information

- ▶ In the Satellite radio main menu, press the **Info** soft key.

The information display will appear.



P82.86-4186-31US

You will see (if available)

- the full station name
- additional program information

Switching back to the Satellite radio main menu

- ▶ Press the **Back** soft key.

or


- ▶ Press the **Info** soft key again.

#### Displaying service information

You can call the provider service center for questions or releases, whenever you need.

- ▶ Press the *Service* soft key.

The Service information display will appear.

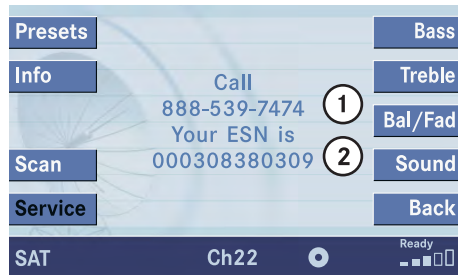

P82.86-4188-31US

- ① Phone number of the provider, (SIRIUS) or “Call Service Provider”
- ② The Electrical Serial Number (ESN) of your satellite receiver

- ▶ Press the *Back* soft key to switch back to the Satellite radio main menu.

#### Station list updates

While receiving a new channel list the message *Updating station list* will appear.

The station last tuned will be muted until the update is completed. You cannot operate the satellite radio.

After completion of the update, the Satellite radio main menu will appear. The station last tuned to will begin to play.

#### Sound settings

Refer to chapter “At a glance” on how to adjust sound settings.

- Volume (▷ page 35)
- Balance control and fader (▷ page 36)
- Bass and treble control (▷ page 37)
- Sound functions\* (▷ page 38)



## Telephone\*

Important notes

Telephone operation

## Telephone\*

### Important notes

#### ▼ Important notes

In chapter “Telephone”, you will find detailed information regarding the telephone\*, including emergency call.

#### Warning



Some jurisdictions prohibit the driver from using a cellular telephone while driving a vehicle. Whether or not prohibited by law, for safety reasons, the driver should not use the cellular telephone while the vehicle is in motion. Stop the vehicle in a safe location before answering or placing a call.

If you nonetheless choose to use the cellular phone while driving, please use the hands-free device and be sure to pay attention to the traffic situation at all times. Use the cellular phone<sup>1</sup> only when road, weather and traffic conditions permit.

Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to malfunction of the vehicle’s electronic systems, possibly resulting in an accident and personal injury.

<sup>1</sup> Observe all legal requirements

#### Warning



Radio transmitters, such as a portable telephone or a citizens band unit should only be used inside the vehicle if they are connected to a separate exterior antenna that has been approved by Mercedes-Benz.



If you have a Mercedes-Benz specified integrated mobile telephone (TDMA, CDMA or GSM) and the telephone is inserted in the cradle, the telephone functions can be used as follows:

- at the COMAND
- at the multifunction steering wheel

This instruction manual describes the operation at the COMAND. Unless otherwise indicated, the descriptions and illustrations refer to the COMAND.

Operation at the mobile phone is described in separate operating guides. Refer to the vehicle Operator's Manual for operation of the telephone using the multifunction steering wheel.



In certain menus, the COMAND can display date and time of the calls.

The COMAND can display phone number and name of the other party (e.g. if the COMAND detects an incoming call, but also in other menus).

For the number to be displayed, the number information must be transmitted with the incoming call. The same goes for the name display which additionally requires that the caller's number and name are saved in the phone book.

## Telephone\*

### Important notes

- Please read the chapter “Telephone” first before attempting to operate your telephone.
- Please also read the important notes in the telephone operating manual.
- Always drive with extreme caution when you operate the telephone hands-free.
- For safety reasons, you should not use the mobile telephone handset to make a call while driving the vehicle.
- If the signal strength is very weak (display in the symbol bar of all menus):  
Wait until reception improves before making a call.
- Close the windows and reduce all outside noise as much as possible when you use hands-free operation.
- Also make sure that the air vents are not pointed in the direction of the microphones located in the overhead control panel near the rear view mirror. Adjust air vents and/or reduce blower speed if necessary.
- A brief disconnection from the cellular network is not a malfunction, as this can occur when the network switches areas. The phone will automatically try to sign on to a network again.
- If the message `Enter Unlock Code` appears, enter the unlock code to enable all telephone functions (▷ page 133). If you do not do so, only the emergency call (911) is available.

#### GSM mobile phone

- If the message `Please enter PIN-Code` on the mobile phone appears, enter the PIN-code to enable the telephone functions (▷ page 133). If you do not do so, only the emergency (911) call is available on the mobile phone.

In the following situations, it is not possible or not yet possible to use the telephone:

- The telephone is already unlocked but is not or not yet registered in the network.

The message `No Serv` appears in the status bar. The telephone will try to register into an existing network. If the network is available, the telephone will be ready for use.

The above message also appears

- if the network is no longer available due to weak signals

- The message Telephone being activated, please wait appears. COMAND prepares the telephone for use. Select other system functions, e.g. radio, by pressing the corresponding button or wait until the telephone is active.
- The message Phone not inserted appears.
  - ▶ Please connect the mobile phone.
- The message Phone not available appears.
  - ▶ Please contact an authorized Mercedes-Benz Center.

#### GSM mobile phone

- If the message Please insert SIM card (Emergency Call 911 only possible with phone) appears:
  - ▶ Insert the SIM card into the mobile phone (Telephone Operating Manual).
- The message Call failed may appear if you place an outgoing call (▷ page 137).
  - ▶ Try again later.

## Telephone\*

### Telephone operation

#### ▼ Telephone operation

##### Switching telephone operation on

###### *Automatically*

The telephone\* is automatically activated when the COMAND is switched on. The mobile phone must be inserted in the mobile phone cradle\* at the time COMAND is switched on.

###### *Manually*

- ▶ Press **TEL**.

The menu to enter the unlock code (▷ page 133) will appear (only if phone has been locked before).

##### GSM mobile phone

- ▶ Enter the PIN on the mobile phone or at the COMAND.

If no SIM card is in the telephone, the message `Please insert SIM card (Emergency Call 911 only possible with phone)` appears.

- ▶ Insert a SIM card. Refer to the mobile phone operator's manual.

##### Switching telephone operation off

- ▶ Switch the COMAND off (▷ page 34) or turn off the engine.

The telephone\* is switched off with a time-lag of around 10 minutes. If you make a call within that time, the telephone will be switched off around 10 minutes after you end the call.

or

- ▶ In the Telephone menu (▷ page 134), press **TEL** longer than two seconds.

The message `Telephone being deactivated, please wait` will appear followed by `Phone off`.

#### Emergency call “911”



This function places a call to the local 911 provider. It does not initiate a Tele Aid\* call.

You can make an emergency call to an emergency rescue station with a mobile communication network.

The emergency call will be placed as long as the corresponding mobile communication network is available. To do this, switch the telephone on if you have not already done so.

- TDMA or CDMA mobile phone

The emergency call will also be placed if the phone is locked (▷ page 132).

- GSM mobile phone

If no SIM card is in the phone or SIM PIN is not entered, you can only make an emergency call at the mobile phone.

Emergency calls may not be possible with all mobile phone networks or if certain network services and/or telephone functions are active. Check with your local network operating company.

If you cannot make an emergency call, you must initiate rescue measures yourself.

#### Warning




The 911 emergency call system is a public service. Using it without due cause is a criminal offense.

# Telephone\*

## Telephone operation

### Initiating an emergency call

If Telephone is locked

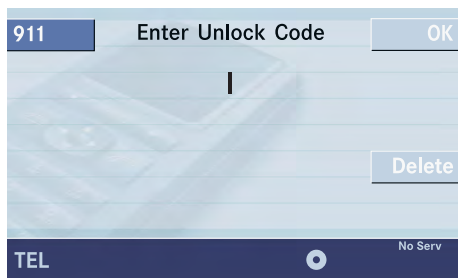


P82.86-5663-31US

- ▶ Press the 911 soft key.

The system opens an inquiry menu prompting if you want to dial a “911” call.

The selection marker in the inquiry menu should be on Yes.


- ▶ If necessary, push the joystick to  to select Yes.

- ▶ Press **OK** to confirm Yes if you want to place the “911” emergency call.

The emergency call will be placed.


- ▶ Wait until the emergency rescue station answers and describe the emergency.

If you do not want to place the emergency call:

- ▶ Push the joystick to  to select No when the inquiry menu appears.

- ▶ Press **OK** to confirm No.

If Telephone is ready for operation

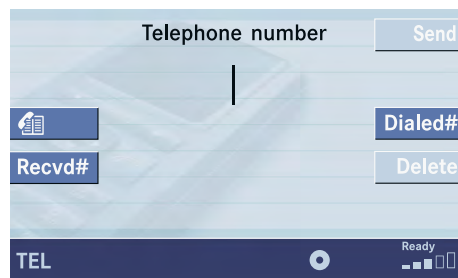

P82.86-5664-31US

- ▶ Press **TEL** repeatedly until the Telephone menu is displayed.

- ▶ Press **9** **1** and **1** one after the other.

- ▶ Press **OK**.

or

- ▶ Press the Send soft key.

or

- ▶ Press **SEND**.

The emergency call will be placed.


- ▶ Wait until the emergency rescue station answers and describe the emergency.

## Entering codes

## TDMA or CDMA mobile phone

**Entering the unlock code**

- ▶ Use the number keys **1** through **0** to enter the four-digit unlock code.  
Asterisks instead of digits will appear in the input line.
- ▶ Press the OK soft key.

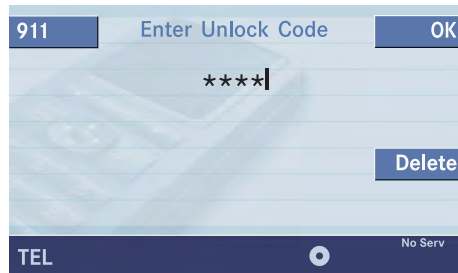

P82.86-5665-31US

If entered code is correct and the phone is registered in a network, the phone is ready for use and the Telephone menu will appear.



Your unlock code prevents unauthorized persons from using your telephone. Be sure to memorize this code, a four digit number, carefully.

If you enter an incorrect code, the system returns to the menu for entering the unlock code.




You must always enter the unlock code when you switch on the telephone the first time (if phone is in locked mode).



If COMAND is switched on while in reverse in vehicles equipped with Rear view camera\*, the enter unlock code screen will appear after deactivating the Rear view camera (▷ page 39).

## GSM mobile phone

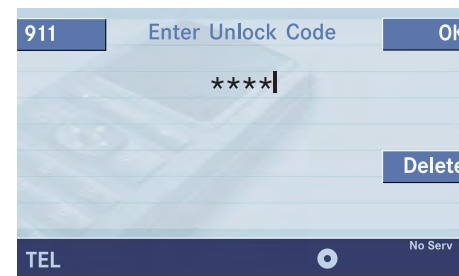**Entering the unlock code**

P82.86-5665-31US

- ▶ Use the number keys **1** through **0** to enter the four-digit unlock code.  
Asterisks instead of digits will appear in the input line.
- ▶ Press the OK soft key.  
If entered code is correct and the phone is registered in a network, the phone is ready for use and the Telephone menu will appear.

## Telephone\*

### Telephone operation

If no SIM card is in the telephone, the message `Please insert SIM card (Emergency Call 911 only possible with phone)` appears.

- ▶ Insert a SIM card. Refer to the mobile phone operator's manual.

Entry incorrect:

You will hear a warning sound. The message `Code incorrect` will appear.

- ▶ You need to re-enter your code.



If the code is entered incorrectly three times in a row, the SIM card will be blocked. The message `SIM-card blocked` is displayed briefly. After that the message `PIN blocked`. Please enter PUK on cell phone is displayed.

### Entering the PUK

If you enter your code incorrectly three times in a row, you need to enter the PUK number.



The PUK number is provided by your telephone service provider.


The PUK can only be entered at the mobile phone. Refer to the mobile phone operator's manual.

### Switching to telephone operation

When the COMAND is switched on, you can switch to telephone operation from any other system (e.g. radio):

- ▶ Press **TEL**.


The Telephone menu will appear.

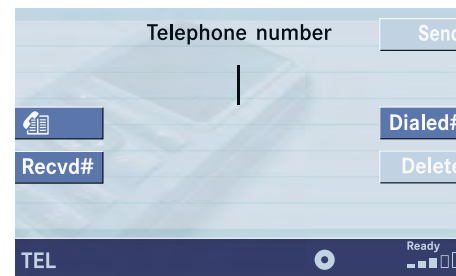

P82.86-5664-31US

### Telephone menu

The telephone is ready for operation

Message Ready and the reception strength  are shown on the status bar.

Other messages

- ROAMING

The telephone is using a non home type system

- No Serv

The telephone is not logged into a network

Full screen messages:

Phone not inserted

- ▶ Plug the mobile phone into the mobile phone cradle\*. Refer to the separate mobile phone operator's manual.

Phone not available

Your vehicle may not have a mobile phone cradle\* installed and/or the telephone control unit may not be coded properly. Contact an authorized Mercedes-Benz Center.


# Telephone\*

## Telephone operation

### Incoming call

The system detects an incoming call, the phone rings.

Incoming calls are indicated in a window in any system (e.g. radio).

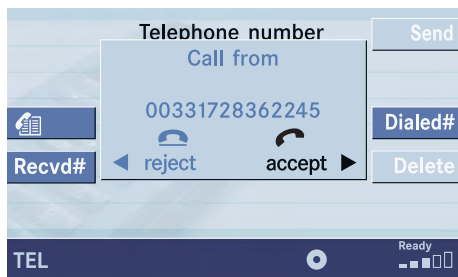

P82.86-5666-31US

The window shows:

- the caller's number if it is transmitted or
- the caller's name if her or his name and number are saved in the phone book or
- Unknown.

### Accepting a call

- ▶ Press **SEND**.

or

- ▶ Press **OK** to confirm accept.

The display will change to the call menu (▷ page 141). In the status bar, the off-hook symbol will appear. An active audio source will be muted. You talk over the hands-free set.

### Rejecting a call

- ▶ Press **END**.

or

- ▶ Push the joystick to **◀** to highlight **reject** and than press **OK**.



In vehicles equipped with Rear view camera\*, the window will appear over the Rear view camera display. After accepting or rejecting a call, the Rear view camera is fully visible until deactivated (▷ page 39).

### Setting the volume for hands-free operation

Raising the volume

- ▶ Turn the rotary control on the **PWR** button to the right.

Lowering the volume

- ▶ Turn the rotary control on the **PWR** button to the left.

### Ending a call

- ▶ Press **END**.

or

- ▶ Press the End soft key.

### Outgoing calls


You can use the following functions to make a phone call:

- Dialing a telephone number (▷ page 137)
- Redial (▷ page 138)
- Selecting an entry from the Received calls list (▷ page 139)
- Selecting an entry from the Dialed numbers list (▷ page 139)
- Use speed-dialing (▷ page 141)
- Use quick-dialing (▷ page 141)
- Selecting a phone book entry and dialing the number (▷ page 145)

### Dialing a telephone number

#### Entering a telephone number

- ▶ Open the Telephone menu (▷ page 134).

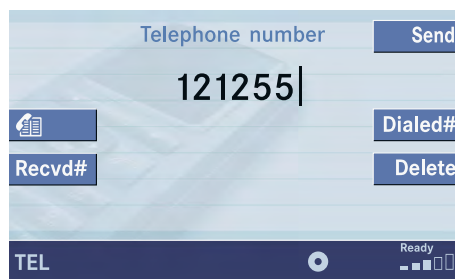

P82.86-5668-31US

- ▶ Use the number keys **1** - **0** to enter the telephone number.

Deleting the last or several digits:

- ▶ Press the **Delete** soft key once or several times.

Deleting all digits:

- ▶ Press **END**.

or

- ▶ Press and hold **Delete** soft key for more than 2 seconds.

# Telephone\*

## Telephone operation

### Begin dialing

When you have entered the telephone number


▶ Press **OK**.

or

▶ Press **SEND**.

or

▶ In the Telephone menu, press the Send soft key.

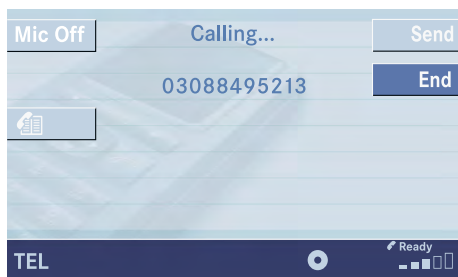

P82.86-5667-31US

Dialing will begin. If a name is associated with the phone number saved in the phone book, the name appears on the screen. In the status bar, the off-hook symbol will appear.

COMAND will mute an active audio source. If the person called answers the call, the call is active. You talk over the hands-free set.

The message *Call failed* may appear if you place an outgoing call. Try again later.

### Subsequent dialing

Transmitting other dial tones:

▶ During a call you can press the number keys **1** through **0**, **#**, and **\***.

### Ending a call

▶ Press **END**.

or

▶ Press the End soft key.

### Redial

▶ Press **SEND**.

or

▶ Press the Dialed# soft key.

The Dialed numbers list will appear. The most recently dialed number is highlighted.

▶ Push the joystick **▲** or **▼** to select the desired entry.

To dial the selected number:

▶ Press **OK**.

or

▶ Press **SEND**.

or

▶ Press the Send soft key.

### Selecting an entry from the Received calls list

The COMAND automatically generates a list of the last 10 calls received. The list is sorted chronologically with the most recently received call at the top of the list.

#### Displaying the list

- ▶ In the Telephone menu (▷ page 134), press the **Recvd#** soft key.

The list is displayed and the most recently received call is highlighted.



P82.86-4196-31US

#### Received calls list

The status bar shows:

- the caller's name if her or his name and number are stored in the phone book
- the message **Unknown** if no entry is available
- the telephone number

You can select the following functions:

- Changing the list display
- Selecting an entry and begin dialing
- Ending a call (▷ page 138)

#### Changing the list display

- ▶ Press the **123** soft key.  
The display changes to numbers.
- or
- ▶ Press the **ABC** soft key.  
The display changes to names.

#### Selecting an entry and begin dialing

- ▶ Push the joystick to **▲** or **▼** to select the desired entry.
- ▶ Press **OK**.
- or
- ▶ Press **SEND**.
- or
- ▶ Press the **Send** soft key.  
The telephone dials the number.

## Telephone\*

### Telephone operation

#### Selecting an entry from the Dialed numbers list

The COMAND automatically generates a list of the last 10 numbers dialed. The list is sorted chronologically with the most recently dialed number at the top of the list.

#### Displaying the list

- ▶ In the Telephone menu (▷ page 134), press the *Dialed#* soft key.

The list is displayed and the most recently dialed number is highlighted.



#### Dialed numbers list

The status bar shows:

- the caller's name if her or his name and number are stored in the phone book
- the message *Unknown* if no entry is available
- the telephone number

You can select the following functions:

- Changing the list display (▷ page 139)
- Selecting an entry and begin dialing (▷ page 139)
- Ending a call (▷ page 138)

#### Toggling between lists

- ▶ Push the joystick to ◀ or ▶ to select the desired list.

#### Missed calls

If there are one or more missed calls available on the mobile phone, a corresponding message will appear.

- ▶ Press the *Back* soft key or press **OK** to return to the Telephone menu.

## Speed-dialing

### *For all memory locations*

At the mobile phone you can save telephone numbers in the speed-dialing memory and use them. Refer to the mobile phone operator's manual.

You can also use speed-dialing at the COMAND (only mobile phone memory locations 1-99).

You can enter up to 2 digits.

- ▶ Open the Telephone menu (▷ page 134).

Memory locations with up to two digits:

- ▶ Use the number keys **1** to **9** WXYZ to enter the memory location number.

- ▶ Press **OK**.

or

- ▶ Press **SEND**.

or

- ▶ Press the Send soft key.

The telephone dials the saved number.

Ending a call (▷ page 138).

### Quick-dialing

Quick dialing can be used on memory locations 1-9.

- ▶ Open the Telephone menu (▷ page 134).

- ▶ Press one of the number keys **1** - **9** WXYZ longer than 2 seconds.

The telephone dials the saved number.


Ending a call (▷ page 138).

## Telephone\*

### Telephone operation

#### Active call

If the person called or you answer a call, the call is active. The call indication is displayed.

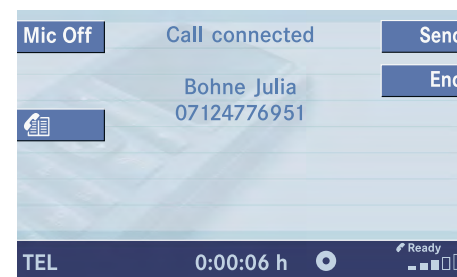

P82.86-5669-31US

#### Call menu

You talk over the hands-free set. You can set the volume for the hands-free operation (▷ page 136).

The status bar indicates the call time and the off-hook symbol.

## Telephone\*

### Telephone operation

The following functions can be used during a call:

- Ending an active call
- Switch on/off hands-free microphone
- Setting the volume for hands-free operation (▷ page 136)

#### Ending an active call

▶ Press **END**.

or

▶ Press the End soft key.

The Telephone menu will appear.

#### Switching hands-free microphone on/off (available if microphone is switched on)

The microphone status is indicated by the status of the Mic Off or the Mic On soft key.

Microphone status	Soft key status
On	Mic Off
Off	Mic On

▶ Press the Mic Off soft key.

The microphone is switched on. The soft key status changes accordingly.

▶ Press the Mic On soft key.

The microphone is switched off. The soft key status changes accordingly.

When the microphone is off, the other party cannot hear you. You can still hear your partner.

#### Three-way calling

When a call is active and you receive a second call on your mobile phone, a tone representing a second caller can be heard. You can accept the second call, toggle between the active (first) and the second call and make a conference.

#### Accepting a second call

▶ Press **SEND**.

You now have two calls, the second call is active. The formerly active call is put on hold.

#### Toggling between the active and the waiting call

TDMA, CDMA

▶ Press **SEND**.

The active call is put on hold and the call formerly on hold is now active.

GSM

- ▶ Use the number key **2**<sub>ABC</sub> and then press **SEND**.

The active call is put on hold and the call formerly on hold is now active.

### ***Ending the active call***

TDMA, CDMA

- ▶ Press **END**.

Both calls will be ended, but the on-hold call will call back.

GSM

- ▶ Press **END**.

The active call will be ended, the call formerly on hold is active.

### ***Making a conference call***

TDMA, CDMA

When a first call is active a second call can be placed to make a conference call.

During an active call:

- ▶ Use the number keys **1** to **9**<sub>WXYZ</sub> to enter the telephone number of the party that you would like to conference in.
- ▶ Press **SEND**.

Dialing will begin. If the person called answers the call, the call is active, the formerly active call is put on hold.

- ▶ Press **SEND** again to make all calls active and have the conference call.

### ***Ending a conference call***

- ▶ Press **END**.

# Telephone\*


## Telephone operation

### Phone book

The phone book contains all entries

- of the internal memory of the mobile phone (TDMA, CDMA and GSM mobile phone)
- of the SIM card (GSM mobile phone)

### Displaying the phone book

- ▶ In the Telephone menu (> page 134), press the  soft key.

The phone book will appear.






P82.86-4199-31US

The first entry found is at the top of the list and highlighted.




Phone book entry	Status bar shows
A phone number	Unknown
A name for a phone number	The phone number
Several numbers	Several Numbers

Entries marked with symbols have been imported into the phone book from the internal memory of the mobile phone.

Usable phone number categories:

- Symbol : Cell number
- Symbol : Home number
- Symbol : Work number

And additional categories:

- Symbol : Fax number
- Symbol : Pager number
- Symbol : Main number

You can select the following functions:

- Changing the phone book display at the COMAND
- Selecting a phone book entry and dialing the number (▷ page 145)

### Changing the phone book display

- ▶ Open the phone book (▷ page 144).
- ▶ Press the 123 soft key.

The display changes to numbers. The status bar displays the name of the marked entry.

or

- ▶ Press the ABC soft key.

The display changes to names. The status bar displays the number of the marked entry.

### Selecting a phone book entry and dialing the number

- ▶ Open the phone book (▷ page 144).

The list of phone book entries with names starting with a certain letter is displayed.

### Changing the initial letters

- ▶ Push the joystick to ◀ or ▶ one or several times.

With every push of the button the display changes to the next possible letter. At the end of the letter list follows the category Others.

Category Others:

Here, all entries without names or with names starting with a special character (e.g. \* or #) are put together.



If you hold one of the buttons, scrolling is accelerated.

### Selecting an entry

- ▶ Change the initial letter if required.
- ▶ Push the joystick to ▼ or ▲ to select a list entry.
- ▶ Press the Detail soft key to see all information about the entry.

## Telephone\*

### Telephone operation

#### *Begin dialing*

▶ Press **OK**.

or

▶ Press **SEND**.

or

▶ Press the Send soft key.

## **Navigation\***

**Important notes**

**Navigation main menu**

**Destination input**

**Route guidance**

**During route guidance**

**Last destinations and destination memory**

**POIs**

**Today's plan**

**Software updates**

### Important notes

#### ▼ Important notes

##### Warning



For safety reasons, you should only enter a destination when the vehicle is stationary. When the vehicle is in motion, a passenger should enter the destination. Study manual and select route before driving.

Do not watch display screen or operate buttons while the vehicle is in motion - let voice instructions guide you. Stop at a safe location before using buttons or making corrections.

Traffic regulations always have priority over any route recommendations given.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your car is covering a distance of 44 feet (approximately 14 m) every second.

The route calculated by COMAND is a recommendation on how to best reach your selected destination.

During route guidance, you will not receive any information on

- Traffic lights
- Stop and yield signs
- Parking or stopping zones
- One-way streets
- Narrow bridges
- Similar traffic regulation data

You should therefore always strictly observe traffic regulations while driving. Drive carefully and always obey traffic laws and road signs even if they contradict COMAND instructions.

##### Warning



The Navigation DVD module contains a Class 1 laser product. There is a danger of invisible laser radiation if the cover is opened or damaged.

Do not remove the cover. The Navigation DVD module does not contain any parts serviceable by the user. For safety reasons, have any necessary service work performed by qualified personnel.

The display unit can cause injury if contacted when open. Return the display unit after inserting a Navigation DVD to its closed position (▷ page 210).

### Navigation DVD

COMAND calculates the route with the help of data that is stored on the navigation DVD.

Only use Mercedes-Benz navigation DVDs. Using other navigation DVDs or CDs will cause malfunctions and/or damage.

Because of changes in local traffic patterns (e.g. road works) and/or incomplete data, errors in calculation may occur.

As a result, the recommended route may deviate from the ideal route. The data stored on the DVD only reflects local conditions at the time of DVD production. DVD maps do not cover all areas nor all routes within an area.



GPS (Global Positioning System) signals received make it possible to determine the current vehicle position.

Deviations from the actual position may occur

- if the reception of GPS signals is disturbed e.g. in parking garages and tunnels
- if road conditions are bad
- depending on the vehicle's condition

### Loading/ejecting a DVD

DVDs are loaded and ejected at the DVD Navigation slot. The DVD Navigation slot is located behind the display unit.



There are two **EJECT** buttons. One is on the display unit. The other is located left of the DVD NAVIGATION slot behind the display (> page 210).

- ▶ Open the display unit to get access to the DVD Navigation slot as described in "Starting an update" (> page 211).

## Navigation\*

### Important notes


#### Route guidance after the vehicle has been transported

If your vehicle has been transported (e.g. by a car, train or ferry) the system may make navigation announcements which do not correspond to the vehicle's position. The system needs to redetermine its position.

#### Determining the location after the vehicle has been transported

The system will need some time to determine its location after the car has been transported. The time required for the system to do so varies from case to case.

- ▶ Switch the COMAND on.
- ▶ Activate the Navigation main menu (▷ page 152).  
The navigation DVD needs to be in the DVD NAVIGATION slot (▷ page 210).
- ▶ Drive and press **MAP**.  
Drive until the position or the road indicated correspond to the real circumstances. The system is now correctly adjusted.

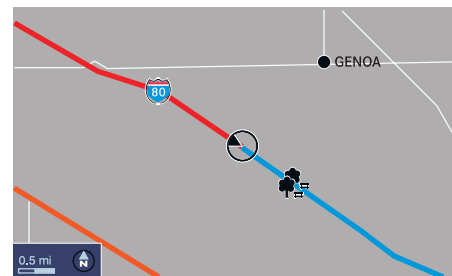

P82.86-2854-31US

### Trip interruption during route guidance



Trip interruption means the vehicle is parked and COMAND is switched off.

Trip continuation means the vehicle is moving and COMAND is switched on again.

The following applies if you interrupt your trip and continue later on:

- Trip is continued within 2 hours:  
The system will automatically resume route guidance.
- Trip is continued after more than 2 hours:
  - ▶ Press **OK** and confirm Continue route guidance in the Navigation main menu (▷ page 152).

## Navigation\*


### Navigation main menu

#### ▼ Navigation main menu

##### Activating the Navigation main menu

- ▶ Press **NAV**.

The Navigation main menu or the current navigation screen (e.g. map screen) will appear.

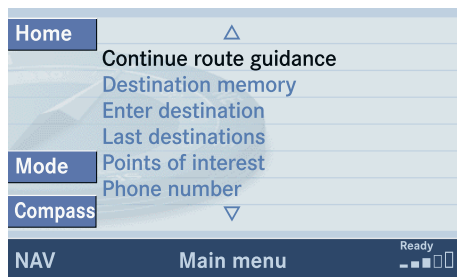

P82.86-5233-31US

#### Navigation main menu



If route guidance is active, a message appears instead asking you whether you wish to cancel route guidance (▷ page 183).

If route guidance has been interrupted for more than 2 hours, the entry **Continue route guidance** will be on top of the list.

- ▶ Push the joystick to **▲** or **▼** to select a menu item.

- ▶ Press **OK**.

or

- ▶ Press one of the soft keys.

The selected menu or the function of the selected soft key appears.

#### Selectable Menu Items

- **Continue route guidance:** Resumes interrupted or aborted route guidance.



This menu item appears if you:

- have aborted route guidance (▷ page 183)
- have interrupted your journey and continue it after more than 2 hours

- **Destination memory**  
You can select destinations from the Destination Memory (▷ page 199).
- **Enter destination**  
Activates the Enter street menu (▷ page 156).
- **Last destinations**  
You can select last destinations from the Last destinations memory (▷ page 197).
- **Points of interest:**  
Brings you to the Select point category menu (▷ page 201).  
  
POIs are e.g. gas stations, parking facilities or airports.
- **Phone number:**  
You can select a POI by phone number. Brings you to the Enter POI phone number menu (▷ page 205).
- **Today's Plan:**  
You can select destinations from the Today's Plan list one after the other or sort destinations as Bestway or Round trip (▷ page 207).

#### Available soft keys

- **Home soft key:**  
You can edit the home address and start route guidance (▷ page 169).
- **Mode soft key:**  
You can edit the routing mode for the next route guidance (▷ page 154).
- **Compass soft key:**  
You can display direction of travel, altitude and steering angle of the vehicle (▷ page 171).

## Navigation\*

### Navigation main menu


#### Setting the routing mode

The COMAND calculates the route as Fastest route.

#### Minimizing traffic routes

- ▶ Press the Mode soft key
  - in the Navigation main menu (▷ page 152)
  - in the Start route guidance menu (▷ page 173)
  - in the Info menu (▷ page 185).

The Edit routing mode menu will appear.

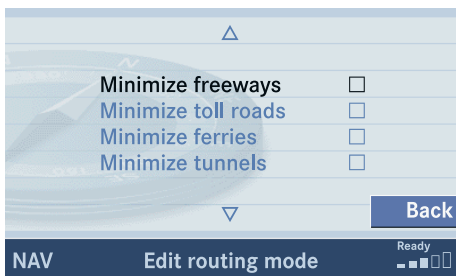

P82.86-4202-31US

#### Selectable traffic routes


- Minimize freeways:  
The system calculates the route with/without minimizing freeways.
- Minimize toll roads:  
The system calculates the route with/without minimizing toll roads.
- Minimize ferries:  
The system calculates the route with/without minimizing ferry connections.
- Minimize tunnels:  
The system calculates the route with/without minimizing tunnels.

Option	Symbol
On	<input checked="" type="checkbox"/>
Off	<input type="checkbox"/>

- ▶ Push the joystick to **▲** or **▼** to select a routing mode.
- ▶ Press **OK**.  
Switches the option on or off. You can switch on more than one option.
- ▶ Press the Back soft key to confirm.  
The setting is saved. The previous navigation screen will appear.

### Saving current location


- ▶ Press **MAP**.  
The full view of the map appears. You will see the vehicle's current position.
- ▶ Press any soft key.  
The soft key displays will appear.

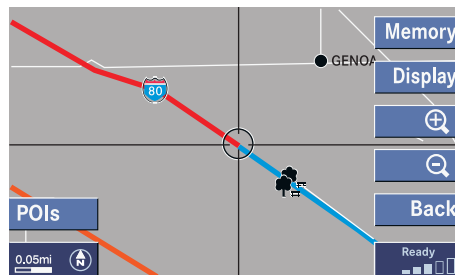

P82.86-4200-31US

- ▶ Press the **Memory** soft key.  
The system saves the current position as a destination in the **Last destinations memory** (▷ page 197).



Such destinations are marked in the **Last destinations memory** with .

For permanent storage you can save the destination in the regular **Destination memory** (▷ page 198).


## Navigation\*

### Destination input

#### ▼ Destination input


##### Activating the Enter street menu

- ▶ Activating the Navigation main menu (▷ page 152).

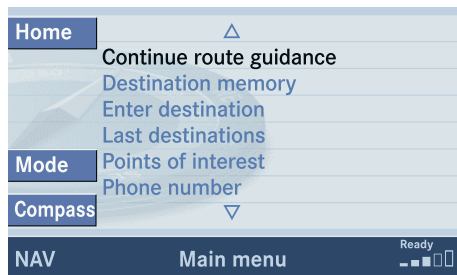

P82.86-5233-31US

- ▶ Push the joystick to ▲ or ▼ to select the menu item Enter destination.
- ▶ Press **OK**.  
The Enter street menu will appear.

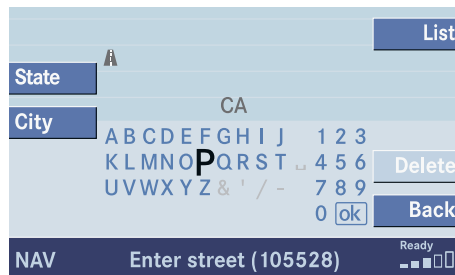

P82.86-4203-31US

##### Enter street menu

You can use the following functions

- entering a street name or accepting a street name if already available (▷ page 158).
  - changing the state/province (▷ page 157).
- or
- entering a city (▷ page 163).

Available soft keys:

- **State soft key:**  
Brings you to the Select state/province menu (▷ page 157).



The currently set state is identified by the state code in the middle of the screen.

If the vehicle location is in Canada, this soft key appears as Province.

- **City soft key:**  
Brings you to the Enter city menu (▷ page 163).
- **List soft key:**  
Brings you to a list of streets beginning with the previously input letters.
- **Delete soft key:**  
The character last entered is deleted.
- **Back soft key:**  
Returns you to the previous menu.


### Selecting the state/province



Use the State list for selecting states in the USA and the Province list for selecting provinces in Canada.

- ▶ Press the *State* soft key
  - in the Enter street menu (▷ page 156)
  - in the Enter city menu (▷ page 163).

The Select state/province menu will appear.

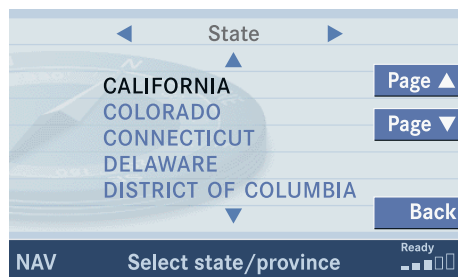

P82.86-4204-31US

### Select state/province menu

- ▶ Push the joystick to ▲ or ▼ to select a state.
- ▶ Press **OK**.  
The Enter street menu will reappear and shows the new state code in the middle of the screen.

### toggling between State and Province list

You can toggle between states in the USA and provinces in Canada.

- ▶ Push the joystick to ◀ or ▶.



If you have already calculated a route, you can toggle to the Last list, which contains up to 5 last selected states or provinces.

### State of Hawaii

When on the mainland, you cannot choose destinations in Hawaii, because these are in a database separate from the USA/Canada. Similarly, when in Hawaii, you

cannot choose mainland destinations. The message *You must change the state or province in order to use that destination will appear in this case, if such a destination is selected from the last destinations memory (▷ page 197), the destination memory (▷ page 199) or as home address (▷ page 169).*

- ▶ Choose another state or province.  
The warning message *This selection will restart the system. Last destinations may not be available, and today's plan will be erased. Do you wish to continue? will appear.*
- ▶ Push the joystick to ◀ to select Yes.
- ▶ Press **OK** to restart.



After such a restart, Today's Plan entries are all deleted. Destinations in the previous area (for example in Last Destinations) are kept so that you can access and delete them.

## Navigation\*

### Destination input

#### Entering destination address

##### Entering a street

- ▶ In the Enter street menu (▷ page 156) push the joystick to , , or to select the characters. After each selection, press .
- ▶ Push the joystick to or to select characters diagonally.


or

- ▶ Press one of the number keys to and to enter digits.



If you enter the first character, the State and City soft keys disappear.

The status bar shows the number of current matches.

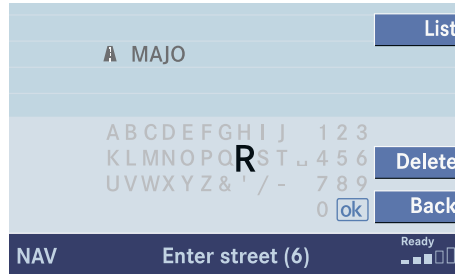

P82.86-4205-31US



For quicker input, COMAND offers available characters from the character set based on your selections and the names of the streets stored on the navigation DVD. The character selected appears magnified.

Greyed out characters are not available and cannot be selected.

- ▶ Press the Delete soft key if necessary.

The character last entered by the system is deleted.

Back to the previous menu

- ▶ Press the Back soft key.

##### Confirming a street (menu)

- ▶ Press longer than 2 seconds.

or

- ▶ Select the symbol. Push the joystick to , , or to do so.

- ▶ Press .



If there is only one match for the entered street name, the symbol is highlighted automatically.

## Navigation\*


### Destination input

or

- ▶ Press the **List** soft key.

The street list will appear. You can now select a street.

#### Selecting a street

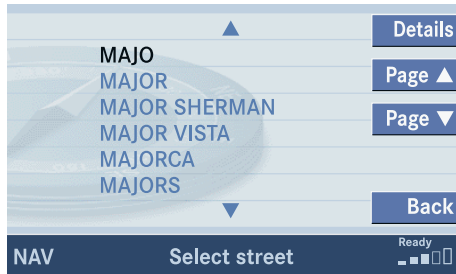

P82.86-4206-31US

#### Select street list

- ▶ Push the joystick to ▲ or ▼ to select a street.

Available soft keys:

- ▶ Press the **Details** soft key to see all information about the street entry.
- ▶ Use the **Page ▼** and **Page ▲** soft keys to display the next or previous page.
- ▶ Press the **Back** soft key to return to the previous menu.

#### Confirming a street (list)

- ▶ Press **OK** to confirm your selection.

The Enter house number menu will appear.

#### Entering a house number



You can enter an intersection instead of the house number. You cannot enter both.



P82.86-5234-31US

#### Enter house number menu

The first line shows the available house number range.

## Navigation\*

### Destination input

You can use the following functions

- entering the house number
- entering any house number by pressing the Any # soft key
- selecting an intersection to that street (▷ page 162).

- ▶ Press the appropriate number keys

0, 1 to 9

or

- ▶ Push the joystick to , , or to select the numbers. After each selection, press .

- ▶ Push the joystick to or to select numbers diagonally.


or

- ▶ Press the Any # soft key to select the available address range of the chosen street.



For quicker input, COMAND offers available numbers from the number set based on your selections and the house numbers stored on the navigation DVD. The number selected appears magnified.

Greyed out numbers are not available and cannot be selected.

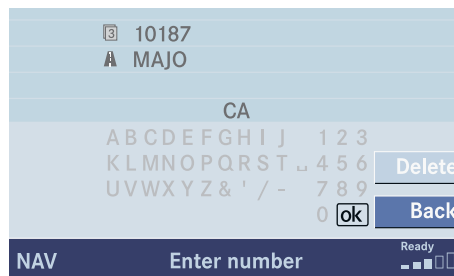

P82.86-4208-31US

### Confirming a house number

- ▶ Press longer than 2 seconds.

or

- ▶ Select the symbol. Push the joystick to , , or to do so.

- ▶ Press .



Each option is possible as long as the entered house number is available from the information stored on the DVD.



If there is only one match for the entered house number, the symbol is highlighted automatically.

The Select city list (▷ page 161) will appear.


or

The Start route guidance menu (▷ page 173) will appear, if the entered address information (street name and house number) is unique in the selected state or province.

or

The Enter city menu will appear if more than 7 cities share the entered address information (street name and house number).

### Confirming a city

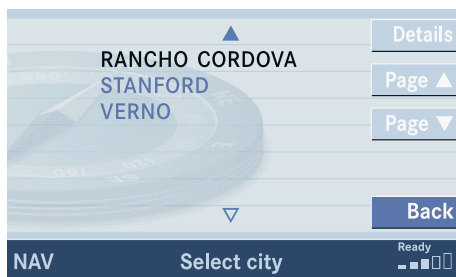

P82.86-4209-31US

### Select city list

- ▶ Push the joystick to ▲ or ▼ to select a city.

Available soft keys:

- ▶ Press the Details soft key to see all information about the city entry.
- ▶ Use the Page ▼ and Page ▲ soft keys to display the next or previous page (if available).
- ▶ Press the Back soft key to return to the previous menu.
- ▶ Press OK to confirm your selection.

The Start route guidance menu (▷ page 173) will appear.

### Entering a cross street

You can enter a cross street with the previously entered street.

- ▶ In the Enter house number menu (▷ page 159), press the Cross st soft key.



P82.86-4210-31US

- ▶ Push the joystick to ►, ◀, ▲ or ▼ to select the characters. After each selection, press OK.
- ▶ Push the joystick to ↘ or ↙ to select characters diagonally.

## Navigation\*

### Destination input

or

- ▶ Press one of the number keys **1** to **9** and **0**.



The status bar shows the number of current matches.



For quicker input, COMAND offers available characters from the character set based on your selections and the names of the streets stored on the navigation DVD. The character selected appears magnified.

Greyed out characters are not available and cannot be selected.

- ▶ Press the **Delete** soft key if necessary.

The character last entered is deleted.

Back to the previous menu

- ▶ Press the **Back** soft key.

#### Confirming a cross street (menu)

- ▶ Press **OK** longer than 2 seconds to confirm your entry.

or

- ▶ Select the **OK** symbol. Push the joystick to **▶**, **◀**, **▲** or **▼** to do so.

- ▶ Press **OK**.

or

- ▶ Press the **List** soft key.

The **Select cross street** list will appear. You can now select a street.

#### Selecting a cross street



P82.86-4211-31US

- ▶ Push the joystick to **▲** or **▼** to select a city.

Available soft keys:

- ▶ Press the **Details** soft key to see all information about the street entry.
- ▶ Use the **Page ▼** and **Page ▲** soft keys to display the next or previous page.
- ▶ Press the **Back** soft key to return to the previous menu.


### Confirming a cross street (list)

- ▶ Press **OK** to confirm.

The Start route guidance menu (▷ page 173) will appear.

### Entering a city

- ▶ Press the **City** soft key in the Enter street menu (▷ page 156).

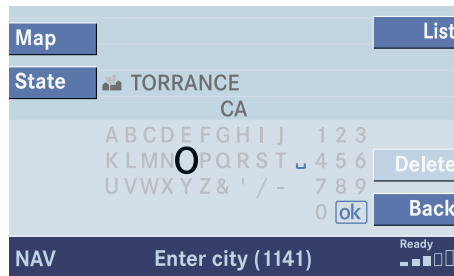

P82.86-4212-31US

### Enter city menu

The most recently entered destination is shown in the upper area.

You can now

- enter a city name or
- accept the city name shown

Available soft keys:

- **Map** soft key:  
Brings you to the destination input directly above the map (▷ page 167).
- **State** soft key:  
Brings you to the state/province selection (▷ page 157).

### i

The currently set state is identified by the state code in the middle of the screen.

If the vehicle location is in Canada, this soft key appears as **Province**.

- **List** soft key:  
Brings you to a list of cities with the previously input street.
- **Delete** soft key:  
The character last entered or the character last accepted by the system is deleted.
- **Back** soft key:  
Returns you to the previous menu.

## Navigation\*

### Destination input

- ▶ In the Enter city menu push the joystick to , , or to select the characters. After each selection, press .
- ▶ Push the joystick to or to select characters diagonally.


or

- ▶ Press one of the number keys to and .



If you enter the first character, the Map and State soft keys and a city name already available disappear.

The status bar shows the number of current matches.

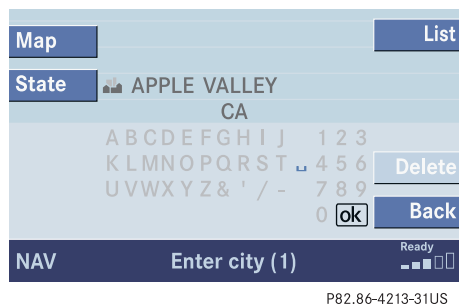

For quicker input, COMAND offers available characters from the character set based on your selections and the names of the cities stored on the navigation DVD. The character selected appears magnified.

Greyed out characters are not available and cannot be selected.

- ▶ Press the Delete soft key if necessary.

The character last entered is deleted.

Back to the previous menu

- ▶ Press the Back soft key.

#### Confirming a city (menu)

- ▶ Press longer than 2 seconds.

or

- ▶ Select the symbol. Push the joystick to , , or to do so.

- ▶ Press .



If there is only one match for the entered city name, the symbol is highlighted automatically.

## Navigation\*

### Destination input

or

- ▶ Press the **List** soft key.

The city list will appear. You can now select a city.

#### Selecting a city



P82.86-4214-31US

- ▶ Push the joystick to **▲** or **▼** to select a city.

Available soft keys:


- ▶ Press the **Details** soft key to see all information about the city entry.
- ▶ Use the **Page ▼** and **Page ▲** soft keys to display the next or previous page.
- ▶ Press the **Back** soft key to return to the previous menu.
- ▶ Press **OK** to confirm your selection.

The **Enter street** menu will appear. You can now enter a street.

#### Enter parking

The **Start route guidance** menu will appear after entering a destination address.

Here you can select parking nearby.

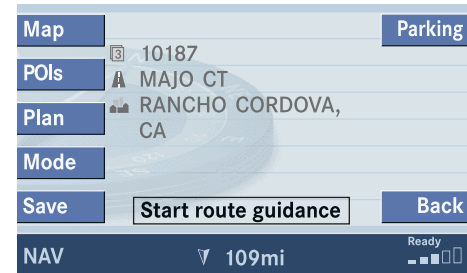

P82.86-4215-31US

#### Start route guidance menu

- ▶ Press the **Parking** soft key.

The **Parking lot selection map** is displayed.

or

The message **No parking near the destination** will appear.

## Navigation\*

### Destination input

#### *Selecting a parking lot*

The map is displayed and shows the destination and the available parkings lots.

One of the parking lot is spotlighted. The name belonging to it is shown on the status bar.



P82.86-4217-31US

- ▶ Use the **Next** or **Prev** . soft key to select a parking lot on the map.

- ▶ Press the **Details** soft key to see more information about the parking lot.

- ▶ Press **OK**.

The **Start route guidance** menu will appear (▶ page 173).

### Selecting a destination using the map



Select a destination using the map when the vehicle is stationary. If you choose to confirm a selected destination by pressing **OK** while the vehicle is in motion, the message It is not possible to set a destination via map during driving will appear in the display.

- ▶ Press **MAP**.
- ▶ Push the joystick to **◀**, **▶**, **▲**, **▼**, **↘**, **↙**.

or

- ▶ Press the Map soft key, e.g. in the Start route guidance menu (▷ page 173).

The map is shown in full view and cross-hairs appear.




The system automatically places the cross-hairs on the current destination address.

If soft key displays are hidden:

- ▶ Press any soft key.

The soft key displays will appear.

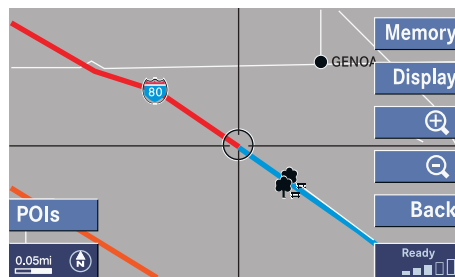

P82.86-4200-31US



**MAP** was pressed:

If no soft key is selected within approx. 8 seconds, the soft key display will disappear again.

Available soft keys











The POIs, Memory and Display soft keys are available if the Map soft key was pressed.



- POIs soft key: Spotlight a POI if POIs are on the map (▷ page 204).
- Memory soft key: Set a memory point and saved it in the Last destinations memory (▷ page 155).

## Navigation\*

### Destination input

- Display soft key:  
The Map view display will appear.  
(▷ page 191).
- Soft key :  
Enlarge visible map section.
- Soft key :  
Reduce visible map section.
- Back soft key:  
Returns you to the previous menu.
- ▶ Push the joystick to , , ,  to move the cross-hairs.
- ▶ Push the joystick to  or  to move the cross-hairs diagonally.

This allows you to select your destination.

- ▶ Release the button.  
If the system is able to assign a street name to the selected location, it is displayed on the status bar.  
If a street name can not be assigned, COMAND increases the zoom by one increment each time  is pressed until a street name can be selected.
- ▶ Press .  
The system uses the point at the center of the cross-hairs as destination.  
The Start route guidance menu will appear (▷ page 173).



If you press the Back soft key, your selection will be discarded. The system then uses the data of the previous destination.



If a POI is close to the center of the cross-hairs, a selection list will appear. You can now select between a POI and the address destination.

### Selecting home address

- ▶ Activate the Navigation main menu (▷ page 152).
- ▶ Press the Home soft key.

The message **No home address available! Please enter home address** will appear.

- ▶ Press the Change soft key to edit a home address.

or

The actual home address is shown.


Here you can use the following functions

- changing to the map (▷ page 167)
- setting the routing mode (▷ page 154)
- editing home address (▷ page 169)
- starting route guidance (▷ page 173)

### Editing home address

- ▶ Press the Change soft key.

The Change home address menu will appear.

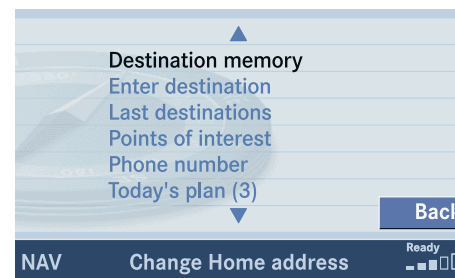

P82.86-4218-31US

You can use the following functions


- selecting a destination from the Destination memory (▷ page 199)
- entering destination address (▷ page 158)

## Navigation\*

### Destination input

- selecting a destination from the Last destinations memory (▷ page 197)
- selecting a Point of Interest (▷ page 201)
- entering a POI by phone number (▷ page 205)
- selecting a destination from the Today's plan memory (▷ page 207)

After entering the address the screen may look as follows

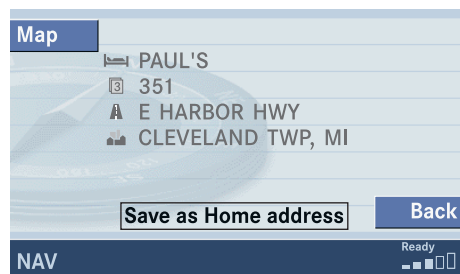

P82.86-4219-31US

- ▶ Press **OK**.  
The home address is saved.  
The Start route guidance menu will appear (▷ page 173).

### Displaying the compass screen

If your vehicle is equipped with Navigation

- ▶ Activate the Navigation main menu (▷ page 152).

or

- ▶ Activate the Info menu (▷ page 185).
- ▶ Press the **Compass** soft key.

The Compass screen will appear.

If your vehicle is not equipped with Navigation

- ▶ Press **NAV** or **MAP**.

The Compass screen will appear.

To cancel the compass screen in vehicles with Navigation


- ▶ Press any soft key, then press the Back soft key.

or

- ▶ Press **NAV** or **MAP**.

To cancel the Compass screen in vehicles without Navigation

- ▶ Press the **AUDIO**, **SAT**, **TEL** or **SERV** buttons.

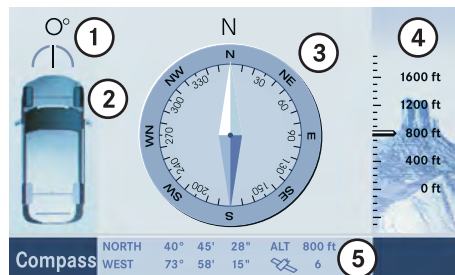

P82.86-5235-31US

### Compass screen

- ① Pointer shows the steering angle on a half circle scale in degrees
- ② Steering icon shows the position of the vehicle wheels
- ③ Dynamic compass displays the driving direction at the top of the screen, the white arrow always points to North

If your vehicle is equipped with Navigation

- ④ Height indication, the scale scrolls as the the vehicle's altitude changes
- ⑤ Status bar shows GPS coordinates, height above sea level and the number of currently received satellites

### i

Compass screen is activated during route guidance:

COMAND continues to provide route guidance via voice instructions (▷ page 174). The Navigation screens are visible in the instrument cluster multifunction display.

### i

Keep in mind, steering angle ① and the steering icon ② are approximations.

## Navigation\*

### Destination input

Additional information for ①, ③ and ④

Indication	Remarks and value range
① Steering angle	Pointer shows to the left -35° to 0° Pointer shows to the right 0° to +35°
③ Dynamic compass card	0° to 360°

Indication	Remarks and value range
④ Height above the sea level	<b>i</b> The white indicator is fixed, the scale scrolls as vehicle altitude changes Scale range: The display unit is set to miles -328 ft to 19680 ft The display unit is set to km -100 m to 6000 m




Using the control system, the display unit can be changed between km or miles (see your vehicle's Operator's Manual).

- When the instrument cluster multifunction display is set to miles, the COMAND will indicate distances in miles (mi) or feet (ft)
- When the instrument cluster multifunction display is set to kilometers, the COMAND will indicate distances in kilometers (km) or meters (m)

### ▼ Route guidance

#### Starting route guidance

Route guidance can be started if the destination input is complete and **Start route guidance** is displayed at the bottom of the main area.

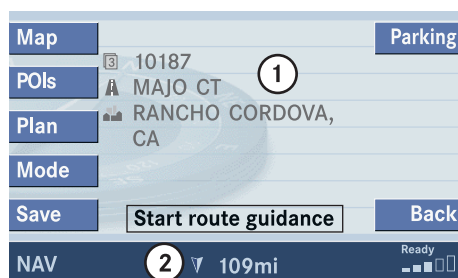


#### Start route guidance menu

- ① Destination address
- ② Arrow indicates the direction to the destination and the distance to the destination (as the crow flies)

- ▶ Press **OK**.

Route calculation and route guidance begins.

#### Route calculation

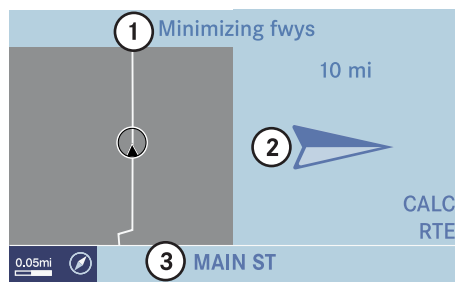

- ① Routing mode  
Setting the routing mode (▷ page 154)
- ② Arrow indicates the direction of the destination, the distance to destination and CALC RTE indication
- ③ The road you are currently driving on

Route calculation can take some time, depending on the distance to the destination and the routing mode.

During route calculation, an arrow pointing towards the destination, the distance to the destination (as the crow flies) and CALC RTE are displayed.

Route guidance begins when route calculation is complete.

#### Recalculating an existing route

The system will calculate a new route during active route guidance if the driver does not follow the route guidance.

## Navigation\*

### Route guidance

#### Voice instructions

##### Warning



Voice instructions are intended to direct you while driving without diverting your attention from the road and driving.

Always use this feature instead of consulting the map display for directions. Consulting the map displays for directions may cause you to divert your attention from driving and increase the risk of an accident.

After route calculation, the system assists route guidance using pictorial displays (▷ page 175) and voice instructions.

#### Repeating current voice instructions

If you have not understood a navigation announcement, you can at any time have a current announcement repeated.

- ▶ Press **RPT**.

The current navigation announcement is repeated.

#### Switching voice instructions On/Off

##### Switching off

- ▶ Press **MUTE** during a navigation announcement.

The message *Voice announcements muted* will appear briefly.

Further route guidance takes place using only the symbols in the display.

If a new route guidance cycle is started, the announcements are automatically switched on again.

##### Switching on again

- ▶ Press **RPT**.

### Navigation displays


The navigation displays are only visible while route guidance is active.

To switch to the navigation display from another display, e.g. from CD operation:

► Press **NAV** or **MAP**.

Two examples are shown below:

Display example 1:

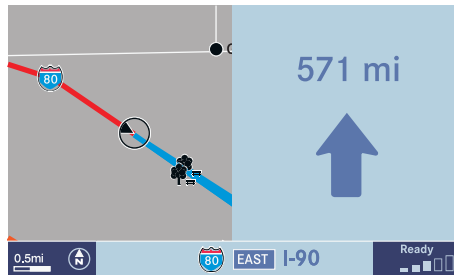

P82.86-4222-31US

The road you are currently driving on is shown on the status bar, in this case EAST I-90. The indication 571 mi is the distance to the next driving maneuver.



Using the control system, the display unit can be changed between km or miles (see your vehicle's Operator's Manual).

- When the instrument cluster multifunction display is set to miles, the COMAND will indicate distances in miles (mi) or feet (ft)
- When the instrument cluster multifunction display is set to kilometers, the COMAND will indicate distances in kilometers (km) or meters (m)

Important map symbols:

- Current vehicle location and direction of travel
  - If the map orientation Heading Up (> page 193) is chosen, the arrow will always point upward.
- The remaining route section is highlighted in blue color.




The colored highlight only appears when the system has completed the route calculation.

## Navigation\*

### Route guidance

Display example 2:

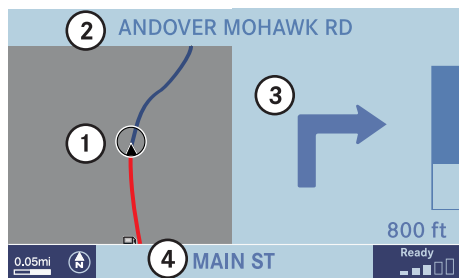

P82.86-4223-31US

- ① Current vehicle location and direction of travel (📍), remaining route section
- ② Name of the road you are to turn onto
- ③ Symbol for the next driving maneuver, distance bar and distance to the next driving maneuver
- ④ The road you are currently driving on

In the right half of the display, the symbol for the next driving maneuver is indicated (here: right turn).

On the very right side of the display next to the turn symbol is the distance bar. It indicates the distance to the next driving maneuver (here: 800 ft).

The status bar shows the name of the street after the driving maneuver, if available, here: MAIN ST

The destination is marked with a flag 🚩 on the map, an intermediate destination is marked with a flag showing the letter S.



If full view of map is displayed:

Status bar ④ indicates one of the following depending on which option is selected in the Display in Map screen (▷ page 194)

- the estimated time of arrival and the distance to destination
- GPS coordinates of the current position or
- the road you are currently driving on



Using the control system, the display unit can be changed between km or miles (see your vehicle's Operator's Manual).

- When the instrument cluster multifunction display is set to miles, the COMAND will indicate distances in miles (mi) or feet (ft)
- When the instrument cluster multifunction display is set to kilometers, the COMAND will indicate distances in kilometers (km) or meters (m)

- ▶ Press any soft key.

The soft key displays appear.



If no other action is taken within approx. 8 seconds, the soft key displays will disappear again.

### Altering the map scale

The current map scale is indicated on the left side of the status bar.

- ▶ Press the or soft key.

The map section is zoomed in or zoomed out. A bar indicating the map scale appears on the status bar.

### Selecting map orientation

A symbol is shown on the bottom left side of the status bar.

- Heading Up :  
Dynamic map alignment, map is displayed facing driving direction pointing up

or

- North Up :  
Map is displayed facing north

You can select the map orientation (▷ page 193).

### Changing the map display

While route guidance is active, you can switch between split view and full view.

- Split view:  
The map is shown on the left side and information on the next maneuver on the right.

or

- Full view:  
Full view of the map.

- ▶ Press **MAP**.

The display changes with every push of the button.



Depending on which option is selected in the Display in Map screen (▷ page 194), the status bar indicates

- the estimated time of arrival and the distance to destination
- GPS coordinates of the current position or
- the road you are currently driving on

## Navigation\*

### Route guidance

#### Partially digitized areas/unverified roads

Usually COMAND guides you through fully digitized areas on verified roads for as long as possible. Route guidance is conducted in the usual manner, i.e. with navigation announcements and route guidance displays, map or split screen.

The DVD map may contain areas that are only partially digitized with unverified roads although they are within a digitized region.

#### Warning



Due to incomplete digitization, the route shown on the map may differ from the actual road/traffic situation.

If you follow the route shown on the map, for example, it is possible that you could drive the wrong way down a one-way street, that a street cannot be driven on or that the road is of questionable quality.

When using route guidance on a unverified road in a partially digitized area, you must therefore be sure to observe all relevant traffic regulations and the course of the road.

Drive carefully and keep in mind that all relevant traffic regulations and the course of the road always take priority over the route shown on the map.

#### Verified roads

- include information about the road's average speed, turning restrictions, or whether it is a one-way street
- are typically roads within a metropolitan area, interstate freeways or major roads connecting cities
- enable reasonably accurate route calculation and selection

#### Unverified roads

- are roads which lack the expected road's average speed and other attributes
- could be smaller city streets and roads either named incorrectly, have no name or the name is shown in the wrong location
- may not enable reasonably accurate route calculation and selection

### Route guidance in these areas

When you are

- entering a partially digitized area
- or
- starting route guidance within such an area,

the navigation system will inform you that turn by turn guidance cannot be provided with corresponding navigation displays and voice announcements.



Displayed or audible distance to the beginning of such an area is an estimation. The actual distance may differ.

### Warning



If the origin and destination are located very close to each other, the system may not provide the shortest path to the destination when you are travelling in an unverified area. In most cases you will be directed to a verified road closest to the destination. This may appear to be a long and inconvenient route but it is safer. At your own risk, you may choose to drive on the unverified roads to the destination.

### Map display

Within these areas the display shows a split screen with the map on the left-hand side and a direction arrow on the right side pointing to the destination instead of the symbol for the next driving maneuver (▷ page 180).

### Route presentation


Usually the map highlights the active route on verified roads with a blue line.

After route calculation, the route may contain unverified road sections. Here, the exact route guidance is suppressed and these route sections will appear as blue dotted lines. This type of line e.g. connects two verified road sections, which are displayed as blue lines or connects the end of a verified road with a stopover or destination located on an unverified road.

# Navigation\*


## Route guidance

Display examples are shown below:

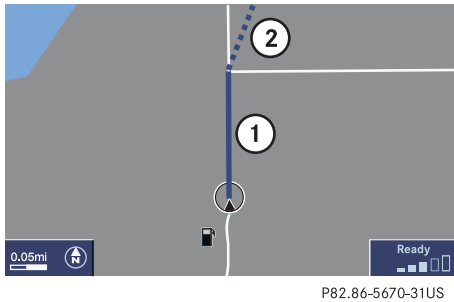

- ① Road section known to the system
- ② Route section between the end of a verified road and the destination on an unverified road

If the vehicle approaches a stopover or a destination located on a unverified road, the blue dotted line will disappear and a red dotted line will appear. The line is your dynamic reference, it moves with the current vehicle location.

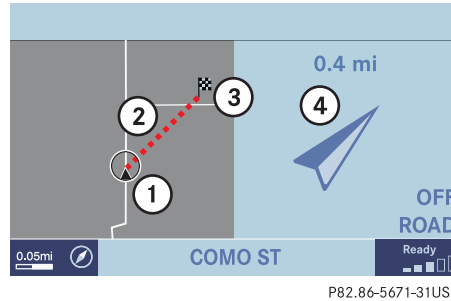

- ① Current vehicle location and direction of travel
- ② Reference line guides you to ③
- ③ Destination on an unverified road
- ④ Arrow indicates the direction of the destination, the distance to destination and OFF ROAD indication

### i

Stopover and destination are located on unverified roads:

The map highlights the route section between a stopover and a destination with a blue dotted line first. After the vehicle reaches the stopover, then the red dotted line will appear.

This type of line will also appear if you are currently travelling on a unverified road

- to guide you back to a verified road
- or

- to guide you to a stopover or destination located on a unverified road too.

If the vehicle reaches a verified road again, the red dotted line will disappear and route guidance will simply continue in the usual manner.



Destinations and stopovers located in unverified roads are entered in exactly the same way as they are in verified roads. Please refer to enter a destination address (▷ page 158) or a stopover (▷ page 188).

### Voice instructions



Usually, if you are travelling on unverified roads, COMAND will not generate usual navigation announcements.

The system inform you in the following cases:

After route calculation

- Vehicle is on a verified road, destination is on a unverified road

Your destination is located in an area where turn by turn guidance cannot be provided. Guidance will stop if you reach this area.

- Vehicle is on an unverified road

You are currently travelling in an area where turn by turn guidance cannot be provided. Use the directional arrow to guide you.



During route guidance, you will also hear this message if you press **RPT**.

Approaching an unverified road section or a stopover or destination on a unverified road (series of messages):

You will be entering an area where turn by turn guidance cannot be provided.

You are about to enter an area where turn by turn guidance cannot be provided.

Use the directional arrow to guide you.

## Navigation\*

### Route guidance

#### OFF ROAD

##### Warning




The COMAND navigation system may direct you to off-road routes that your vehicle may not be capable of traversing through without damaging your tires, wheels or vehicle. It is the driver's sole responsibility to determine the suitability of the route. Off-road routes may be of varying conditions and their appropriateness for use may be affected by various factors such as time of day, time of year and immediate weather conditions that cannot be judged or taken into consideration by the COMAND system.

If there is no road shown on map at the current position, the vehicle is OFF ROAD. COMAND is able to guide you to an OFF ROAD destination or from an OFF ROAD location.

COMAND will inform you with the OFF ROAD indication and the direction arrow pointing to the destination. Corresponding announcements may be audible.



An OFF ROAD destination is not itself recorded on the map. You can enter an OFF ROAD destination using the map, for example (> page 167).

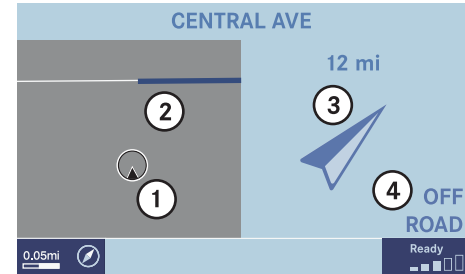

P82.86-5672-31US


- ① Current vehicle OFF ROAD location and direction of travel
- ② Road known to the system, name is shown above
- ③ Arrow indicates the direction of the destination and the distance to destination
- ④ OFF ROAD indication

As soon as the vehicle is back on a road known to the system, route guidance continues in the usual way.

### OFF MAP

If the vehicle position is outside the area covered by the digital map, then the vehicle is on a OFF MAP location. COMAND is also able to guide you to a destination from such a location.

COMAND will inform you with the OFF MAP indication and the direction arrow pointing to the destination.

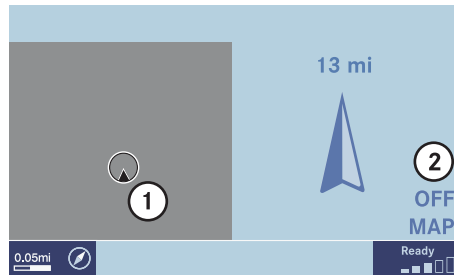


P82.86-5673-31US

- ① Current vehicle OFF MAP location and direction of travel
- ② Arrow indicates the direction of the destination and the distance to destination
- ③ OFF MAP indication

As soon as the vehicle is back on a road known to the system, route guidance continues in the usual way.

### Arriving at destination

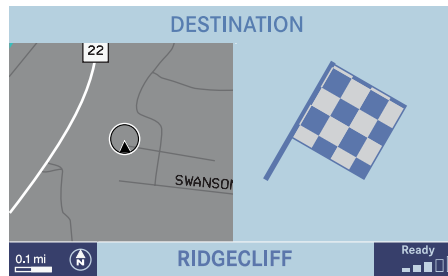

P82.86-4224-31US

When you reach the destination, you will see the destination flag. Route guidance ends.

### Cancelling route guidance

- ▶ In navigation mode, press **NAV**.

The inquiry menu **Cancel route guidance?** will appear.

- ▶ Press **OK** to confirm Yes.

Route guidance is cancelled. The Navigation main menu appears.



You can continue route guidance from the Navigation main menu (> page 152).

### Continuing route guidance

- ▶ Push the joystick to **▶** to select No.
- ▶ Press **OK**.

## Navigation\*

### During route guidance

#### ▼ During route guidance


During route guidance you can use the soft keys to activate additional menus and displays and make settings.

The soft key displays will automatically disappear after a few seconds.

#### Displaying the soft keys



- ▶ During route guidance, press any soft key.

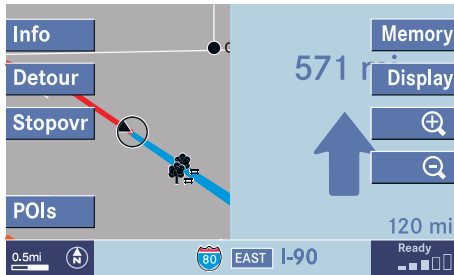The soft key displays will appear.



P82.86-4225-31US

#### Available soft keys

- **Info soft key:**  
Brings you to the Info menu (▷ page 185).
- **Detour soft key:**  
Brings you to the Traffic Jam function (▷ page 186).
- **Stopovr soft key:**  
Brings you to the stopover destination function (▷ page 188).
- **POIs soft key:**  
Brings you to the POI function (▷ page 204).
- **Memory soft key:**  
Brings you to the save current location function (▷ page 155).
- **Display soft key:**  
Brings you to the Display menu (▷ page 191).
- **Soft key **:  
Enlarge visible map section (▷ page 177).
- **Soft key **:  
Reduce visible map section (▷ page 177).

### Info menu

- ▶ Display the soft keys.
- ▶ Press the *Info* soft key.

The Info menu will appear.



P82.86-5236-31US

### Info menu



If a stopover destination has been entered:

The estimated time of arrival and the remaining distance to the stopover destination are displayed.

When the stopover destination is reached, the system indicates estimated time of arrival and remaining distance to the main destination.

### Available soft keys

- **Compass** soft key:  
Displays direction of travel, altitude and steering angle of the vehicle (> page 171).
- **Rte List** soft key:  
Shows a list of the route.
- **Mode** soft key:  
Brings you to the route mode selection menu (> page 154).

- **Details** soft key:  
See all information about the destination.

### Displaying the route list

- ▶ Press the *Rte List* soft key.

The list of the remaining roads/route sections appears.

The road currently travelled on is at the top of the list.

- ▶ Push the joystick to or to scroll through the list.
- ▶ Use the *Page* and *Page* soft keys to display the next or previous page.



Depending on the distance to the destination, it may take a few moments before the route list is completed.

The list will only be complete when the route is completely calculated.

## Navigation\*

### During route guidance

#### Selecting a detour

The detour function blocks a route section ahead. If possible, the system will calculate a detour. You can adjust the length of the route section to be blocked.



If the system does not allow you to block a route section, the message Complete detour not possible is displayed.


Traffic jams are identified by the driver, not by the COMAND.

#### Switching on

- ▶ Activate the soft key display (▷ page 184).
- ▶ Press the Detour soft key.



If you have already placed a block on a route section, the Detour menu will appear instead of the map (▷ page 187).

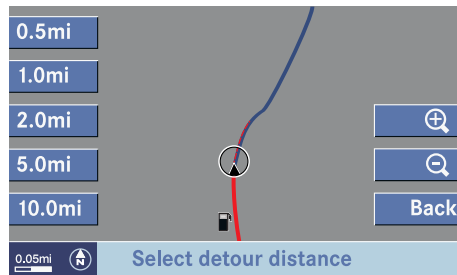

You can now enter the length of the route section to be blocked.

- ▶ Press one of the left distance soft keys.

The system calculates a new route around the blocked route section.

### Switching off (remove detour)

- ▶ Activate the soft key display (▷ page 184).
- ▶ Press the Detour soft key.



P82.86-4228-31US

- ▶ Push the joystick to ▲ or ▼ to select Remove detour.
- ▶ Press **OK**.  
The blocked route section is deleted.  
The system calculates the new route.

### Changing the blocked route section

- ▶ Activate the soft key display (▷ page 184).
- ▶ Press the Detour soft key.
- ▶ Use ▲ or ▼ to select item Change detour.

- ▶ Press **OK**.  
You can now change the length of the route section to be blocked.
- ▶ Press one of the left distance soft keys.  
The system calculates a new route around the blocked route section.

## Navigation\*

### During route guidance

#### Stopover function

This function allows you to select an intermediate destination while route guidance is active. A stopover destination may be a gas station or a restaurant or any other place. When the route to the stopover destination is calculated, the system calculates the route from the stopover destination to the main destination.


#### Entering a stopover destination

▶ Activate the soft key display (▷ page 184).

▶ Press the **Stopover** soft key.

The map is displayed in full view.  
or

The Stopover still active menu will appear (▷ page 190) if a stopover already exists.

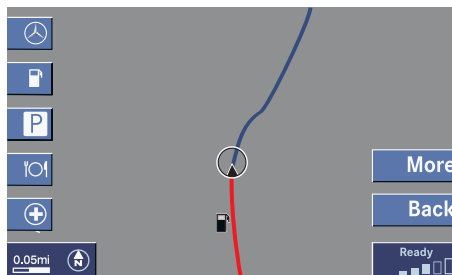

#### Available soft keys

After pressing a softkey on the left side, a corresponding list (▷ page 189) or, if a POI is close by, the map will appear with one POI spotlighted (▷ page 204).

- soft key: Shows a list of Mercedes-Benz Centers near your location.
- soft key: Shows a list of filling stations or the map with one filling station spotlighted.

- soft key: Shows a list of parking facilities or the map with one parking facility spotlighted.
- soft key: Shows a list of restaurants or the map with one restaurant highlighted.
- soft key: Shows a list of hospitals or the map with one hospital spotlighted.

If you press this soft key the following warning message will appear:



- More soft key:  
If you press this soft key, the Navigation main menu (▷ page 152) will appear. Enter stopover will appear on the status bar.  
You can now enter an stopover destination by
  - selecting one from the destination memory (▷ page 198)
  - typing one in the Enter street menu (▷ page 156)
  - selecting one in the Last destinations memory (▷ page 197)
  - selecting a Point of interest (▷ page 201)
  - entering a POI by phone number (▷ page 205)
  - selecting one in the Today's plan memory (▷ page 207)

- ▶ Press a soft key, e.g. **POI**.  
One of the following displays will appear
  - a list with restaurants (see below)
  - the map with one restaurant spotlighted if the POI is close by.
 Select a POI on the map (▷ page 204).



P82.86-4232-31US

The arrows indicate the direction of the destination. The distances indicated are straight line distances to the destination.

Selecting a POI in a list

- ▶ Push the joystick to **▼** or **▲** to select an entry.
- ▶ Use the Page soft keys to scroll page-wise through the list (if available).
- ▶ Press the **Details** soft key if required. Details on the destination are shown.
- ▶ After you have selected a destination, press **OK**.

The Start route guidance menu will appear (▷ page 173).

- ▶ Press **OK**.

The system calculates the route to the selected stopover destination. After that, the route to the main destination is also calculated from the stopover destination.

## Navigation\*

### During route guidance

#### Deleting or replacing a stopover destination

- ▶ Activate the soft key display (▷ page 184).
- ▶ Press the Stopover soft key.

The menu for deleting or changing a stopover destination will appear.



P82.86-4233-31US



If no stopover destination has been entered, the full view map appears instead of the menu. You can now enter a stopover destination (▷ page 188).

- ▶ Push the joystick to ▲ or ▼ to select Delete active stopover.
- ▶ Press OK.

The stopover destination last input is deleted. The system calculates the route to the main destination.

or

- ▶ Push the joystick to ▲ or ▼ to select Change active stopover.
- ▶ Press OK.

The stopover destination is deleted and you can enter a new stopover destination (▷ page 188).

### Saving the current location

The system can save the current position as a destination in the Last destinations memory (▷ page 197).

- ▶ Press any soft key to activate the soft key display. Press the Memory soft key.

The current location is saved.



Such destinations are marked in the Last destinations memory with ● (▷ page 197).

If a destination is to be saved for later or repeated use, the current location can be stored in the standard destination memory (▷ page 198).

### Defining route guidance displays

- ▶ Activate the soft key display (▷ page 184).
- ▶ Press the Display soft key.  
The Settings menu will appear.



### Settings menu

You can now use the soft keys to activate other menus.

- Icons soft key:  
Brings you to the POI Icons display settings (▷ page 192).
- View soft key:  
Brings you to the map orientation settings (▷ page 193).
- Map soft key:  
Brings you to the Display in Map settings (▷ page 195).
- Automap soft key:  
Brings you to the Split screen settings (▷ page 195).
- Trail soft key:  
Brings you to the Trail settings (▷ page 196).

## Navigation\*

### During route guidance

#### Setting POI Icons displays


You can set which POIs are shown as symbols on the map.



You will see the symbols only if the map scale is in the zoomed in scales. Altering the map scale (> page 177).

- ▶ In the Settings menu, press the **Icons** soft key.

The available options are displayed.

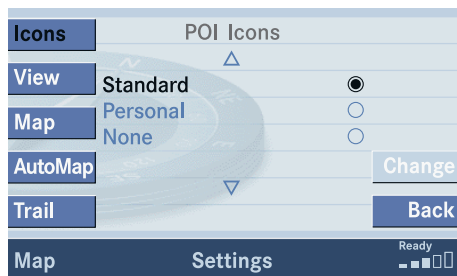

P82.86-4236-31US

- ▶ Push the joystick to **▲** or **▼** to select an option.

- ▶ Press **OK**.

The option is activated .

- Standard option:

The map shows the default symbols.

- Personal option:

You can determine the symbols which are displayed. The following section explains the further operation.



The **Change** soft key becomes available if the **Personal** option is chosen.

- None option:

No symbols are shown on the map.

#### Setting personal symbol display

- ▶ After selecting the **Personal** option, press the **Change** soft key.

The list of available symbols is displayed.

Meaning	Symbol
Selected	<input checked="" type="checkbox"/>
Unselected	<input type="checkbox"/>

- ▶ Push the joystick to **▲** or **▼** to select a list entry.

- ▶ Press **OK**.

The symbol is activated or deactivated depending on its previous state. You may also activate more than one symbol.

- ▶ Press the **Back** soft key to confirm and return to the map.

### Setting map view

- ▶ In the Settings menu (▷ page 191), press the View soft key.

The available options are displayed.



P82.86-4235-31US

You can select the following map orientations:

- **Heading Up**  
Dynamic map alignment, map is displayed facing driving direction pointing up

- **North Up**  
Map is displayed facing north

Option	Symbol
On	<input checked="" type="radio"/>
Off	<input type="radio"/>

### Changing map view

- ▶ Use the joystick to **▲** or **▼** to select the deactivated option.
- ▶ Press **OK**.  
The orientation is changed.
- ▶ Press the **Back** soft key to confirm and return to the map.

### i

A symbol is shown on the bottom left side of the status bar.

- **North symbol** (📍):  
Map is displayed facing north
- **Compass symbol** (🧭):  
Dynamic map alignment, map is displayed facing driving direction pointing up


## Navigation\*

### During route guidance

#### Display in Map

- ▶ In the Settings menu (▷ page 191), press the Map soft key.

The available options are displayed.

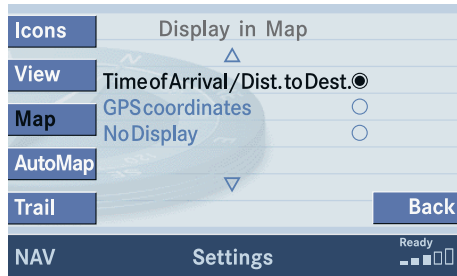

The symbol ● indicates the present setting.

You can select the following map information:

- Time of Arrival/Dist. to Dest.

The status bar displays the estimated time of arrival and the distance to destination. If a stopover destination is active, the corresponding stopover time and distance information are displayed.

- GPS coordinates

The status bar displays the following data:

- your current position in the form of coordinates
- the number of satellites currently received
- the height above sea level

- No display

The status bar displays the road you are currently driving on.



If the split screen is active the road name will appear on the status bar.

- ▶ Use the joystick to ▲ or ▼ to select the option with the symbol ○.
- ▶ Press button **OK**.  
The selected option is activated.
- ▶ Press the **Back** soft key to confirm and return to the map.


### Automatic map toggling

You can set the change from map to split view.



- **Map**  
Shows the full screen as a map.
- **Split screen**  
Uses the right hand part of the screen to show maneuver icons and/or intersection zooms.

- ▶ In the Settings menu (> page 191), press the **Automap** soft key. The available options are displayed.

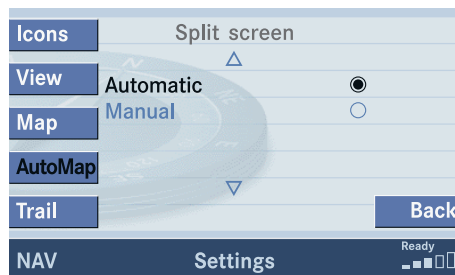

P82.86-4238-31US

You can select the following options:

- **Automatic**  
The system automatically switches to split view whenever it announces a driving maneuver. When the driving maneuver is completed, the system reverts to the full view.

- **Manual**  
If you choose this option, the system only switches to split screen by pressing **MAP**.

The symbol indicates the present setting.

- ▶ Move the **OK** joystick in or direction to select the option with the symbol .
- ▶ Press button **OK**.  
The option is changed.
- ▶ Press the **Back** soft key to confirm and return to the map.

## Navigation\*

### During route guidance


#### Trail settings

With this function is active, the COMAND records a trail every time the vehicle is in an OFF ROAD area (more than 0.25 miles away from a digitized road).

The system places trail dots on the screen until it matches to a digitized road again.

- ▶ In the Settings menu (▶ page 191), press the Trail soft key.

The options On and Off are displayed.

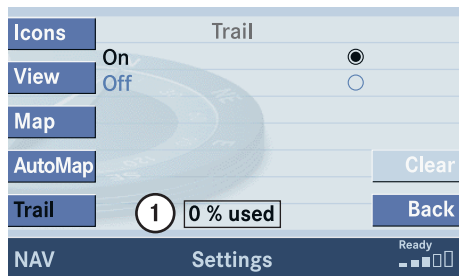

P82.86-4239-31US

- ① Percentage of used memory

The symbol ● indicates the present setting.

- ▶ Move the OK joystick in ▲ or ▼ direction to select the option with the symbol ○.
- ▶ Press OK.

Depending on the previous setting, the Trail is switched on or off.

- ▶ Press the Back soft key to confirm and return to the map.

#### Delete a trail

If there is a trail in memory, you can delete it.

- ▶ Press the Clear soft key.

The message Are you sure you want to clear all trails? will appear in a window.

- ▶ Push the joystick to ◀ to select Yes.
  - ▶ Press OK.  
The trail is deleted.
- If you don't want to delete a trail
- ▶ Press OK to confirm No.

## ▼ Last destinations and destination memory

### Last destinations memory

The Last destinations memory automatically saves last destinations to which you have started route guidance. The memory can save a maximum of 50 destinations.

You can save your current position as a destination in the memory (▷ page 155). Such destinations are marked with ●.




The home address is not saved in the last destinations memory.

### Activating the last destination memory

- ▶ Activate the Navigation main menu (▷ page 152).
- ▶ Push the joystick to ▼ to select menu item Last destinations.
- ▶ Press OK.

The last destinations list is displayed. The most recent destination is at the top of the list.

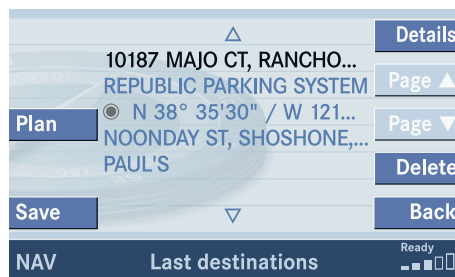

P82.86-4249-31US

### Selecting a destination from the last destinations memory

- ▶ Push the joystick to ▼ or ▲ to select an entry.
- ▶ Use the Page soft keys to scroll page-wise through the list (if available).

Now you can

- start route guidance to the selected entry (▷ page 198)
- add the selected entry to today's plan (▷ page 207)
  - ▶ Press the Plan soft key.
- save the selected entry in the destination memory
  - ▶ To do this, press the Save soft key. Further operation is explained in chapter "Saving destination in the destination memory" (▷ page 198)
- view details on the selected entry (if available)
  - ▶ Press the Details soft key.
- delete the selected entry (▷ page 198)

## Last destinations and destination memory

### Starting route guidance to a last destination

- ▶ Select a destination from the Last destinations memory.
- ▶ Press **OK**.

The Start route guidance menu will appear (▶ page 173).

### Deleting a destination from the last destinations memory

- ▶ Select a destination from the Last destinations memory.
- ▶ Press the Delete soft key.

An inquiry menu appears asking if the destination selected is to be deleted from the Last destinations memory.

- ▶ Push the joystick to **◀** to select Yes.
- ▶ Press **OK** to confirm if you want to delete.

The destination is deleted.

### Destination memory

In the destination memory, you can save destinations under freely assignable names. The memory can save a maximum of 200 destinations.

### Saving a destination in the destination memory


- ▶ In the Start route guidance menu (▶ page 173), press the Save soft key.

or

- ▶ Select a destination in the Last destinations memory (▶ page 197) and press the Save soft key.

or

- ▶ Select a destination in the Today's plan memory (▶ page 207) and press the Save soft key.

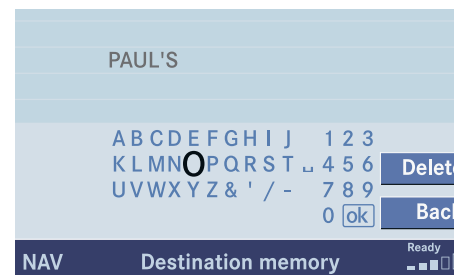

P82.86-4250-31US

You can now

- save the destination under a new name or



If a POI is used, the POI name appears as default.

- confirm the given destination name

- ▶ Press **OK**.

The message The address was saved as <name> will appear.

After that, the Start route guidance menu, the Last destinations memory or the Today's plan memory reappear.

## Last destinations and destination memory

### Create a new name

- ▶ Push the joystick to **▶**, **◀**, **▲** or **▼** to select the characters. After each selection, press **OK**.
- ▶ Push the joystick to **↘** or **↙** to select characters diagonally.
- ▶ Press **OK** to confirm the entry.

The message *The address has been saved as <name> will appear.*

After that, the Start route guidance menu, the Last destinations memory or the Today's plan memory reappear.

### Activating the destination memory

- ▶ Activate the Navigation main menu (▷ page 152).
- ▶ Push the joystick to **▲** or **▼** to select menu item *Destination memory*.
- ▶ Press **OK**.

The destination memory will appear. The destination memory is sorted in alphabetical order.



P82.86-4251-31US

### Selecting a destination from the destination memory

Activating the listing for the desired letter

- ▶ Activate the destination memory.
- ▶ Push the joystick to **◀** or **▶** until the listing for the desired letter appears.

With every push of the joystick the display changes to the next possible letter.

or

- ▶ Press **2** <sub>ABC</sub> to **9** <sub>WXYZ</sub> of the 12-button keypad. Press a key once or several times in quick succession until the listing for the desired letter appears.



E.g.: Key **5** <sub>JKL</sub>

Press 1 x = access to listing for letter J

Press 2 x = access to listing for letter K

Press 3 x = access to listing for letter L

### Last destinations and destination memory

#### Category Others

At the end of the letter list follows the category Others.

- ▶ Press **\*** to access.

Category Others includes entries without names or names starting with a special character (e.g. +, !, \* etc.).

#### Selecting a destination

- ▶ Push the joystick to **▲** or **▼** to select a destination in the listing.
- ▶ Use the Page soft keys to scroll page-wise through the list (if available).

#### Now you can

- start route guidance to the selected destination
- add the selected entry to today's plan (▷ page 207)
  - ▶ Press the Plan soft key.
- view details on the selected destination (if available)
  - ▶ To do this, press the Details soft key.
- delete the selected destination

#### ***Starting route guidance to a destination from the destination memory***

- ▶ Select a destination from the destination memory.
- ▶ Press **OK**.

The Start route guidance menu will appear (▷ page 173).

#### ***Deleting a destination in the destination memory***

- ▶ Select a destination from the destination memory.
- ▶ Press the Delete soft key.  
A prompt message appears.
- ▶ Push the joystick to **◀** to select Yes.
- ▶ Press **OK**.

The system deletes the navigation entry from the destination memory.

### ▼ POIs (Points of Interest)

This function allows you to select Points of Interest such as gas stations, parking facilities or shopping centers.



You can also select a POI


- in the Start route guidance menu (▷ page 165) or during route guidance (▷ page 184)
- on the map (▷ page 204)
- by entering a phone number (▷ page 205).

#### Entering POIs

- ▶ Activating the Navigation main menu (▷ page 152).
- ▶ Push the joystick to to select menu item Points of interest.
- ▶ Press .

The Select POI category menu will appear.

#### Selecting a POI category

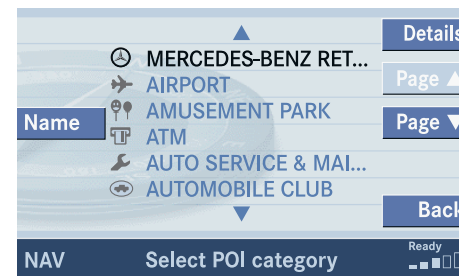

P82.86-4240-31US


#### Select POI category menu

## Navigation\*

### POIs (Points of Interest)

Available soft keys

- Name soft key:  
Brings you to the Enter POI menu (▷ page 203).
  - Details soft key:  
Shows all information about the POI category.
  - Page ▼ and Page ▲ soft keys:  
Use the Page ▼ and Page ▲ soft keys to display the next or previous page.
  - Back soft key:  
Returns you to the previous menu.
- ▶ Push the joystick to ▼ or ▲ to select the desired POI category.
- ▶ Press **OK**.
- The Find menu will appear.

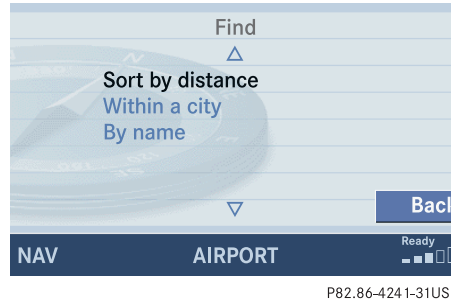

#### Find menu

You can select between the following menu items:

- Sort by distance:  
The Select POI list will appear.
- Within a city:  
The Enter city menu will appear (▷ page 203). Select a Point of Interest around any location.
- By name:  
The Enter POI menu will appear (▷ page 203).

- ▶ Press **OK** to confirm Sort by distance.

The Select POI list will appear.

#### Selecting a POI



#### Select POI list

The list shows the available POIs with direction, distance and name. The nearest POI is on top of the list.

- ▶ Press the **Details** soft key if required.
- Details on the POI are shown.

- ▶ Push the joystick to ▼ or ▲ to select the desired POI.

- ▶ Press OK.

The Start route guidance menu will appear (▷ page 173).

### Entering a city

- ▶ In the Find menu, push the joystick to ▼ to select menu item Within a city.

- ▶ Press OK.

The Enter city menu will appear (▷ page 163).

- ▶ Enter the city and press OK to confirm.

A list showing the available POIs within the entered city will appear.

- ▶ Select the desired POI from the list and press OK to confirm.

The Start route guidance menu will appear (▷ page 173).

### Entering a POI by name

- ▶ In the Select POI category menu, press the Name softkey.

or

- ▶ In the Find menu, push the joystick to ▼ to select menu item By name.

The Enter POI menu will appear.



### Enter POI menu



If menu item By name is chosen, the corresponding category symbol will appear in first line.

- ▶ Enter the POI name and press OK to confirm.

A list showing the entered POI name will appear.

- ▶ Press OK.

The Start route guidance menu will appear (▷ page 173).

## Navigation\*

### POIs (Points of Interest)

#### Selecting a POI on the map

- ▶ Press **MAP**.

The full view of the map will appear. Your current position and the special destinations are indicated by symbols.




You can define which symbols will be shown on the map (▷ page 192).

- ▶ Press any soft key.
- ▶ If required, move the map pushing the joystick to **◀**, **▶**, **▲**, **▼**, **↖** or **↘**.

- ▶ Press the **POIs** soft key.

One of the POI is spotlighted. The name belonging to it is shown on the status bar.

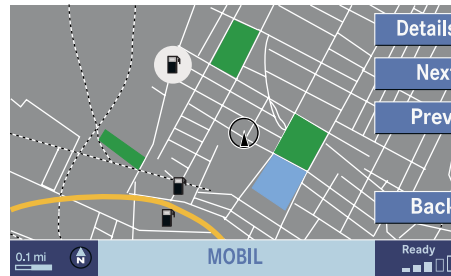

P82.86-4231-31US

- ▶ Use the **Next** or **Prev.** soft key to select the desired POI.

- ▶ Press the **Details** soft key if required.



Details on the POI selected are shown.

- ▶ Press **OK**.

The Start route guidance menu will appear (▷ page 173).

#### Entering a POI by phone number


If a phone number is associated with a POI, the number can be used to select a destination and making a call. The database uses phone numbers in the USA and Canada.

- ▶ Activating the Navigation main menu (▷ page 152).
- ▶ Push the joystick to  to select menu item Phone number.
- ▶ Press .

The Enter POI phone number menu will appear.



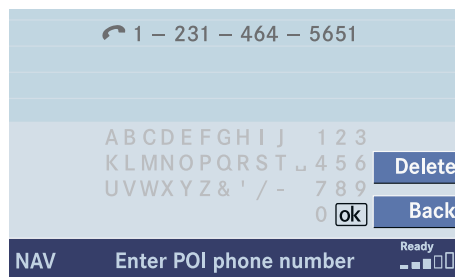

The menu always appears with the “1” prefix in first line.






 



P82.86-4245-31US

 


Numbers not available for entry are greyed out.

- ▶ Use the number keys  through  to enter the phone number.

or

- ▶ Push the joystick to , ,  or  to select the numbers. After each selection, press .
- ▶ Push the joystick to  or  to select numbers diagonally.

When the number is complete, the  field is highlighted.

- ▶ Press .

The Start route guidance menu will appear (▷ page 173).



Multiple matches to a phone number can occur if several businesses share a number, or if a central number is used to cover multiple locations. In these cases, you will see a list to choose among them.

## Navigation\*

### POIs (Points of Interest)

#### *Dialing the POI phone number\**

- ▶ Press the **Call** soft key in the Route guidance menu.



The **Call** soft key is visible if vehicle is equipped for phone operation and Mercedes-Benz specified mobile telephone\* is inserted in phone cradle\*.

Dialing will begin. In the status bar, the off-hook symbol will appear. If the person called answers the call, the call is active. You talk over the hands-free set.

- ▶ Press **END** to end the call.

### ▼ Today's plan

The today's plan memory can be used to save destinations for which routes can be calculated one after the other. The memory can save a maximum of 18 destinations.

#### Adding a destination to today's plan

You can add a destination to today's plan

- from the Route guidance menu
  - from the Last destinations memory and
  - from the Destination memory.
- ▶ Press the Plan soft key in the corresponding menu.

The message The <address> has been added to today's plan. will appear briefly.



The message Today's plan is full. You must delete an entry before saving a new one. will appear if the maximum of 18 destinations is saved.

#### Activating today's plan

- ▶ Activate the Navigation main menu (▶ page 152).
- ▶ Push the joystick to ▼ to select menu item Today's plan.



The menu item Today's plan is available if destinations are added to today's plan.

The number of saved entries is shown.

- ▶ Press **OK**.

The today's plan memory will appear. The first destination added is at the top of the list.



P82.86-4246-31US

#### Today's plan memory

## Navigation\*

### Today's plan

#### Available soft keys


- **Bestway soft key:**  
Sortes entries to obtain the most efficient route through all the destinations (▷ page 208).
- **Rnd trip soft key:**  
Sortes entries to obtain a route that circles through all the destinations and eventually ends at the starting position (▷ page 208).
- **Del. all soft key:**  
Deletes all entries.
- **Save soft key:**  
Saves an entry to the destination memory.
- **Details soft key:**  
Shows the entry in full.
- **Page ▼ and Page ▲ soft keys (if available):**  
Use the Page ▼ and Page ▲ soft keys to display the next or previous page.

- **Delete soft key:**  
Deletes the selected entry.
- **Back soft key:**  
Returns you to the previous menu.

#### Best way

- ▶ Press the **Bestway** soft key in the today's plan memory.

The today's plan memory is sorted to obtain the most efficient route through all the destinations.

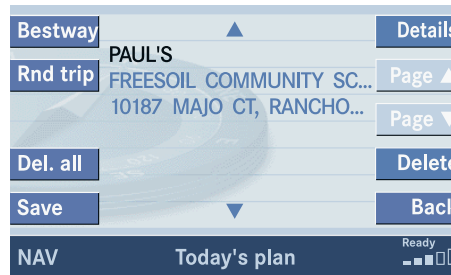

P82.86-4247-31US

#### Round trip

- ▶ Press the **Rnd trip** soft key in the today's plan memory.

The today's plan memory is sorted to obtain a route that circles through all the destinations.

The current vehicle location is placed at the bottom of today's plan as **Starting position** entry.




The Starting position can be represented by e.g. a parking lot or an off road location.






P82.86-4248-31US

**Display details for starting position**

- ▶ Push the joystick to  to select Starting position.
- ▶ Press the Details soft key.  
The address information will appear.

**Selecting a destination from the today's plan**

- ▶ Activate the today's plan.
  - ▶ Push the joystick to  or  to select an entry.
  - ▶ Use the Page soft keys to scroll page-wise through the list (if available).
  - ▶ Press .
- The Start route guidance menu will appear (▷ page 173).








When you reach the destination, route guidance ends and the system deletes the today's plan entry.

**Saving a today's plan entry in the destination memory**




- ▶ Activate the today's plan.
- ▶ Press the Save soft key.  
The Destination memory input menu will appear (▷ page 198).

**Deleting a today's plan entry**

- ▶ Activate the today's plan.
- ▶ Push the joystick to  or  to select an entry.
- ▶ Press the Delete soft key.  
A prompt message will appear.
- ▶ Push the joystick to  to select Yes.  
If you do not want to delete the entry:
  - ▶ Press  to confirm No.
- ▶ Press .

The system deletes the destination in the today's plan. The entries below the destination deleted move up by one position.

**Deleting all the today's plan entries**

- ▶ Activate the today's plan.
- ▶ Press the Del . all soft key.  
A prompt message will appear.
- ▶ Push the joystick to  to select Yes.  
If you do not want to delete the entries:
  - ▶ Press  to confirm No.
- ▶ Press .

The system deletes all the destination entries in the today's plan.

# Navigation\*

## Software Updates

### ▼ Software Updates



- ① Ejecting DVD
- ② Opening/closing the display unit
- ③ Warning message Press EJECT to close

You can update the system with a new navigation DVD. The DVD may include new map/road information.

### Warning



The display unit can cause injury if contacted when open. Please close after inserting a navigation DVD.



Do not place anything on the lowered display panel (i.e. do not use as a shelf). Placing objects on the lowered display panel may result in damage to the display or COMAND unit which is not covered by the Mercedes-Benz Limited Warranty.



Updating may take several minutes. During updating, the operation of COMAND is restricted. You cannot switch off the system.

### Starting an update

DVDs are loaded and ejected at the navigation module.



The navigation module is located behind the display unit of the COMAND (▷ page 210).



There are two EJECT buttons. One is on the display unit ②. The other is located left of the DVD NAVIGATION slot ① behind the display.

- ▶ Switch the COMAND on (▷ page 34).

### Ejecting

- ▶ Press EJECT.

The display unit moves forward and then tilts down. The DVD NAVIGATION slot is visible.

- ▶ Press the EJECT button left of the DVD NAVIGATION slot.

The navigation module ejects the DVD. The message No DVD in drive. Please insert Navigation DVD. will appear.

- ▶ Remove the DVD from the slot.

#### *Loading*

- ▶ Insert the new navigation DVD into the DVD slot with the label side up.

The message `Navigation is initializing. Please wait.` will appear.

- ▶ Press **EJECT** on the display unit to return the display unit to its closed position.

The display unit tilts up and then moves to the rear.



Inserting a second DVD with another DVD still loaded will cause damage to the DVD drive which is not covered by the Mercedes-Benz Limited Warranty.

After that, the COMAND loads the software on the DVD.

Shortly after that, the progress bar appears. After some time, the progress bar reaches 100%.

The update is completed. You can now operate the navigation system again.



The message `Press EJECT to close` will appear. If **EJECT** on the display unit is not pressed within 20 seconds, eight successive series of two beep tones will sound to remind you to return the display to its closed position by pressing **EJECT** on the display unit.

If you do not do so, the COMAND returns the display unit to its closed position.

**Service**

**Service main menu**

**SMS\***

**Tele Aid\***

## Service

### Service main menu

#### ▼ Service main menu


##### Activating the Service main menu

- ▶ Press **SERV.**

The Service main menu will appear.



If a service submenu is displayed, you need to press the **Back** soft key.

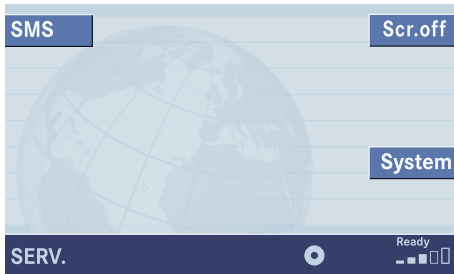

P82.86-4252-31US

#### Service main menu

You can use the soft keys to open other menus

- **SMS soft key\***:  
Opens the SMS Inbox Folder  
(▷ page 215).



The SMS soft key is visible if vehicle is equipped for phone operation and Mercedes-Benz specified mobile telephone\* is inserted in phone cradle\*.

- **Scr.off soft key**:
  - ▶ Press the **Scr.off** soft key.  
The screen is switched off.
  - ▶ Press any soft key or button.  
The screen is switched on again.

- **System soft key**:  
Switches to the system settings  
(▷ page 220).


## ▼ SMS\*



The functions described here apply if your vehicle is equipped with mobile phone cradle\* and a Mercedes-Benz specified mobile phone\*.

With the SMS Received list, you can receive SMS messages provided that SMS messaging is available from your mobile phone service provider.



If you have received new SMS messages,  is displayed on the status bar. Additionally, a message received tone is played.



If another system is active (e.g. radio), a window with the message *Received* a new SMS appears when SMS message is coming in.

**SMS Received list**


- ▶ Activate the Service main menu (▷ page 214).

- ▶ Press the SMS soft key.

The Received list will appear.



If there is no SMS message, the SMS soft key appears greyed out.

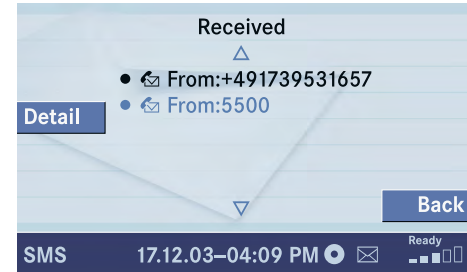


P82.86-4253-31US

The status bar shows date and time of the message.

One line is provided for each message.

Symbol ● = Message unread

Symbol  = SMS message

- ▶ Press the **Detail** soft key.

The list entry will appear in full in a window.

Line-by-line scrolling through the SMS Received list:

- ▶ Push the joystick to **▲** or **▼** to highlight the desired message.

Back to the Service main menu:

- ▶ Press the **Back** soft key.

#### Reading SMS message received

- ▶ In the SMS Received (▷ page 215) list, push the joystick to **▲** or **▼** to highlight the desired message.

- ▶ Press **OK**.

The message is displayed. In the status bar, the name or the phone number of the sender will appear.

Line-by-line scrolling through the message text:

- ▶ Push the joystick to **▲** or **▼**.

Back to the SMS Received list:

- ▶ Press the **Back** soft key.

## ▼ Tele Aid\*


Tele Aid\* incorporates the following functions:

- Emergency call system
- Roadside Assistance
- Information

### Emergency call system

For certain emergency situations, the system automatically triggers an emergency call. An emergency call can also be triggered manually by pressing the corresponding button. Refer to your vehicle Operator's Manual for additional information.

If the system initiates an emergency call, `Connecting call` and the 📞 symbol will appear on the status bar. All active connections are terminated.

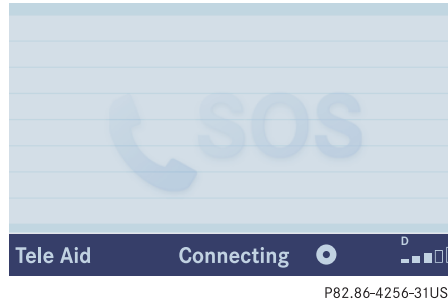

During the emergency call, `Call Connected` appears on the status bar. No operation from COMAND is possible, so you cannot disconnect the emergency call.

### Roadside Assistance


Roadside Assistance will assist if technical problems with your vehicle are experienced.

Roadside Assistance can be requested manually by pressing the corresponding button. Refer to your vehicle Operator's Manual for additional information.

Upon request of Roadside Assistance, the system initiates the call to the Assistance. `Connecting call` and the 📞 symbol will appear on the status bar. All active connections are terminated except Emergency call.

## Service

### Tele Aid\*

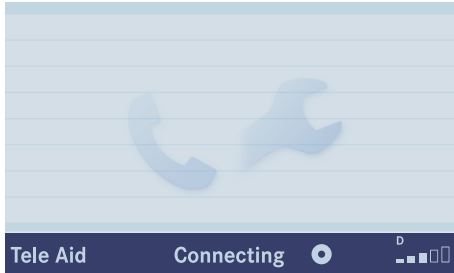

P82.86-4255-31US

If the connection is made, the message **Call Connected** appears on the status bar.

During activation of a Roadside Assistance call

- it is possible to switch to navigation
- you can initiate an Emergency call.


#### Terminating the connection


- ▶ Press **END**.

COMAND reverts to the system last active before Tele Aid was activated.

#### Information

A call to the Response Center will be initiated by pressing the corresponding button. Information regarding the operation of your vehicle, the nearest authorized Mercedes-Benz Center or Mercedes-Benz USA products and services is available to you. Refer to your vehicle Operator's Manual for additional information.

When an information call is initiated, **Connecting call** and the  symbol will appear on the status bar. All active connections are terminated except Emergency call and Roadside Assistance call.

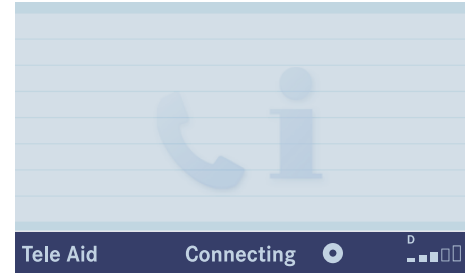

P82.86-4254-31US

When the connection is made, the message **Call Connected** appears on the status bar.

During activation of an Information call

- it is possible to switch to navigation
- you can initiate an Emergency call or Roadside Assistance call.

#### Terminating the connection

- ▶ Press **END**.

COMAND reverts to the system last active before Tele Aid was activated.

**System settings**

**System settings**

## System settings

### System settings

#### ▼ System settings

##### Activating the System settings menu

- ▶ Press **SERV**.
- ▶ In the Service main menu (▷ page 214), press the **System** soft key.



P82.86-5237-31US

System settings menu

In the System settings menu you can:


- select the time zone and daylight savings time settings
- select the language (▷ page 221)
- switch verification and notification tones on and off (▷ page 222)
- adjust display settings (▷ page 223)
- activate and deactivate the Voice control system\* help window (▷ page 224)
- start Voice control system\* individualization (▷ page 225)
- reset all settings to the factory settings (▷ page 227)

##### Selecting the time zone

You can select the applicable time zone and daylight saving time settings.

- ▶ In the System settings menu, press the **Time** soft key.

The available time zones are shown.

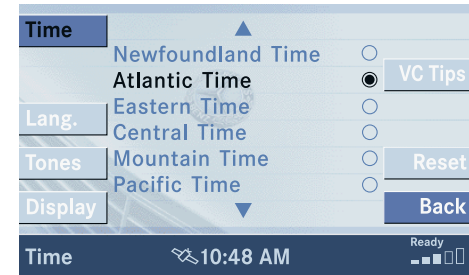


P82.86-5675-31US

- ▶ Push the joystick to **▲** or **▼** to select the time zone.

- ▶ Press **OK**.

You can now select the daylight saving time settings.

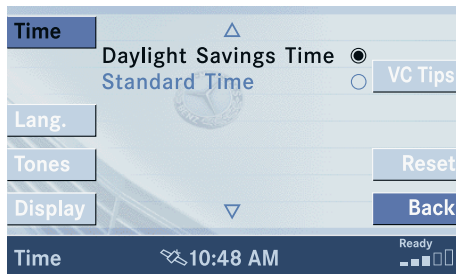

P82.86-5239-31US

Option	Symbol
Time change selected	●
Time change not selected	○

- ▶ Push the joystick to ▲ or ▼ to select the desired entry.

Daylight Savings Time:  
Changes from summer to winter time.

Standard Time:  
Changes from winter to summer time.

- ▶ Press OK.

The System settings menu will appear.  
The setting is saved.

## System settings

### System settings

#### Selecting the language

The language affects the menu text displays and the voice output during route guidance.

- ▶ In the System settings menu (▷ page 220), press the Lang. soft key.

The languages list will appear.



P82.86-5240-31US

## System settings

### System settings

- ▶ Select Instr. cluster setting.  
COMAND will use the same language as is set in instrument cluster.


or

- ▶ Push the joystick to ▲ or ▼ to select the desired language.
- ▶ Press OK.

The System settings menu will appear with the display text in the language selected.

#### Switching verification and notification tones on and off

- ▶ In the System settings menu, press the Tones soft key.  
The Tones menu will appear.

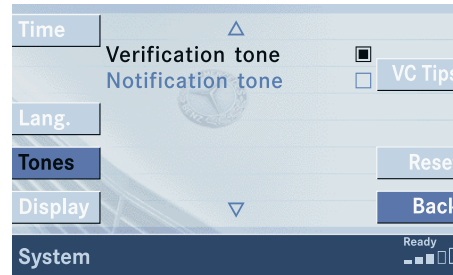

P82.86-5241-31US

Option	Symbol
Tone activated	<input checked="" type="checkbox"/>
Tone deactivated	<input type="checkbox"/>

- ▶ Push the joystick to ▲ or ▼ to select an entry.

- ▶ Press OK.


The respective tones are activated or deactivated. You hear the tone when you activate it.

- ▶ Press the Back soft key.

The System settings menu will appear. The setting is saved.

### Selecting display settings

- ▶ In the System settings menu, press the Display soft key.

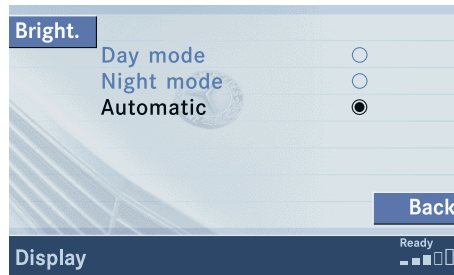

P82.86-4263-31US

Option	Symbol
Display mode selected	●
Display mode not selected	○

You can use the following functions:

- set the display dimming characteristics
- adjust the display brightness

### Setting the display dimming characteristics

- ▶ Push the joystick to ▼ or ▲ to select an entry.

Day mode

The display is continuously set to daylight design.

Night mode

The display is continuously set to night-time design.

Automatic

The display changes depending on the ambient light sensor in the vehicle.


## System settings

### System settings

- ▶ Press **OK**.  
The setting is applied. The System settings menu will appear.

### Adjusting the display brightness

- ▶ Press the **Bright.** soft key.

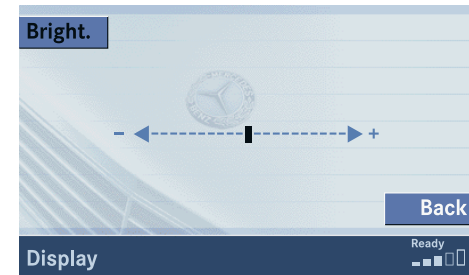

P82.86-4262-31US

- ▶ Push the joystick to ◀ or ▶ direction to adjust the brightness.

## System settings

### System settings

or

- ▶ Press the **Bright.** soft key longer than 2 seconds.

The display brightness changes gradually. When the slider reaches the end of the left or right border, it starts moving into the opposite direction.

- ▶ Release the **Bright.** soft key when the desired brightness is reached.

#### Confirming the setting

- ▶ Press the **Back** soft key.

or

- ▶ Press **OK**.

The brightness setting is applied.

#### Selecting Voice control\* settings


Use this function to:

- Activate/deactivate the voice control help screen
- Start or delete voice control individualization

#### Activating/deactivating the help screen

- ▶ Open the System settings menu (▶ page 220).
- ▶ Press the **VC Tips** soft key.

The Voice control menu will appear.

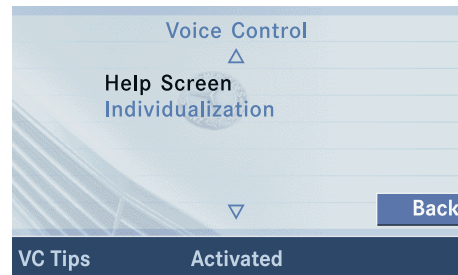


P82.86-5242-31US

- ▶ Push the joystick to **▲** to select the **Help Screen** menu item.

The status bar shows you whether the help screen is activated or deactivated.

- ▶ Press **OK**.

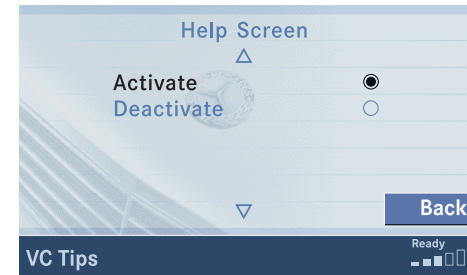


The menu to activate or deactivate the help screen will appear.



P82.86-5243-31US



In this display example, the help screen is activated.



- ▶ Push the joystick to  or  to select an entry.
- ▶ Press .
 

This will activate or deactivate the help screen.

The help screen (VC Tips) will now be displayed if you:



- Press button  to activate the Voice Control System.
- Press button .
- Call up various dialogs.

### Voice control individualization


The individualization function is used to adapt the voice control to your own voice and to therefore improve speech recognition. This does not affect speech recognition of other users.

Individualization consists of two stages. The first stage involves training digits, while the second stage trains specific commands.

- ▶ Open the System settings menu (▷ page 220).
- ▶ Press the VC Tips soft key.
 

The Voice control menu will appear.
- ▶ Push the joystick to  to select the Individualization menu item.
- ▶ Press .
 

The Individualization menu will appear.

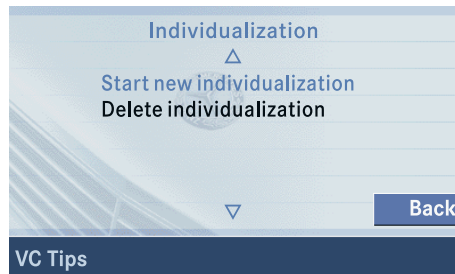



P82.86-5244-31US

### Starting individualization



You can only activate the individualization function when the car is stationary. If the car is moving, the following message will appear:  
Individualization only possible when car is stationary.

- ▶ Push the joystick to  to select menu item Start new individualization.
- ▶ Press .

The individualization process starts.

The system now guides you through the individualization process using a dialog, all operations are voice inputs.

## System settings

### System settings

After completion of the first stage, the system prompts you to save the data of the first stage.

If you do not save the first stage:

- Individualization is cancelled,
- Data from an existing first stage remains unchanged.

If you save the first stage:

- Data from an existing first stage is over-written but is not saved until the second stage is started.

If you do not start the second stage:

- Data from the first stage remains unchanged,
- The individualization process is finished.



If you later decide to start the second stage, you must restart the individualization process from the beginning of the first stage.

After completion of the second stage, the system prompts you to save the data of the second stage.

If you do not save the second stage:

- Individualization is cancelled,
- Data from an existing second stage remains unchanged.

If you save the second stage:

- Data from an existing second stage is deleted and all new data is saved,
- Individualization is finished.

## System settings

### System settings

#### Canceling individualization

You can cancel individualization at any time during either the first or second stage. All existing data remains unchanged.


- ▶ During any individualization stage, press the **Cancel** soft key.  
Individualization is cancelled.

#### Deleting individualization



This function is not available if no individualization data has been saved.

- ▶ In the Individualization menu, push the joystick to **▼** to select menu item **Delete individualization**.

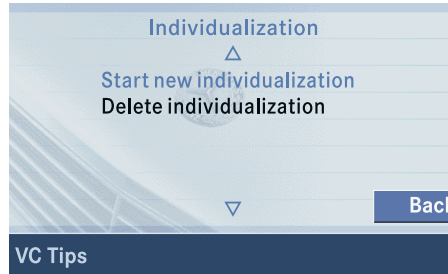

P82.86-5244-31US

- ▶ Press **OK**.  
A prompt appears, which asks if you really want to delete the data.
- ▶ Press **OK** to confirm **Yes**.  
The individualization is deleted.

#### Resetting all settings to the factory settings




All your personal data, e.g. Last destination entries or Radio main menu preset entries, will be deleted.

- ▶ In the System settings menu, press the **Reset** soft key.  
The Reset inquiry menu will appear. No is highlighted.

## System settings

### System settings

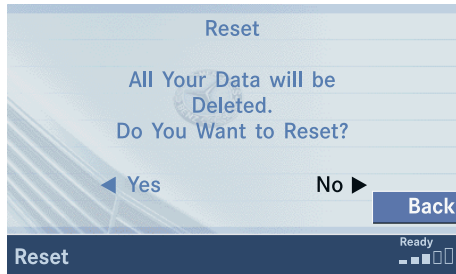

P82.86-4265-31US

If you do not wish to reset to the factory settings

- ▶ Press the Back soft key or press **OK**.

The System settings menu will appear.

#### ***Accepting the factory settings***

- ▶ Push the joystick to **◀** or **▶** direction to select Yes.

- ▶ Press **OK**.

The inquiry Do you really want to reset? will appear.

- ▶ Select Yes.

The message All data has been reset. COMAND will now restart. will appear.



The factory settings are:

Time - Central Time

Language - Instrument cluster

Verification tone - On

Notification tone - On

Display setting - Automatic

**Aspect ratio**

Width and height proportions of a video screen or signal - usually either 4:3 (NTSC) or 16:9 for widescreen DVDs.

**Audio source**

This includes the systems radio and CD (CD drive in the control unit, CD changer\*).

**Autostore**

Enters the stations with the best reception (signal strength) into the autostore memory in order of their reception quality (from strong to weak).

**Balance**

Defines sound-center left/right.

**Bit rate (MP3)**

Measurement of transmission speed. Indicates the number of ->bits transmitted per time unit.

**CD**

(Compact Disc)  
Digital storage medium in disc form.

**CDDA**

(Compact Disc Digital Audio)  
File type for a conventional audio ->CD-ROM.

**CD-R**

(CD Recordable)  
->CD which can be written to once, read many times but not deleted.

**CD-ROM**

(CD Read Only Memory)  
->CD which can only be read.

**CD-RW**

(CD Rewritable)  
->CD which can be read, written and deleted.

**CD text**

Additional information which may be included on ->CD (e.g. track name, CD title).

**COMAND**

(Cockpit Management and Data System)  
Information and operating center for vehicle sound and communications systems, including the radio and CD player, as well as for other optional equipment (CD changer\*, telephone\*, etc.).

**Coordinates**

Indicate the geographical position on the earth's surface.

## Glossary

### DVD

(Digital Versatile Disc)

Digital storage medium for storing large amounts of data, e.g. movies.

### DVD-R

(Digital Versatile Disc Recordable)

->DVD which can be written to once and read many times.

### DVD+R

(Digital Versatile Disc Recordable)

->DVD which can be written to once and read many times.

### DVD-RW

(Digital Versatile Disc Rewritable)

->DVD which can be read and written to many times.

### DVD+RW

(Digital Versatile Disc Rewritable)

->DVD which can be read and written to many times.

### DVD Video

(Digital Versatile Disc Video)

Prerecorded disc containing video content that can be read many times but not written to.

### Emergency call

This function places a call to a local 911 provider. It does not initiate a

->Tele Aid\* call. Please note that the 911 emergency call system is a public service. Using it without due cause is a criminal offense.

### Fader

Defines sound-center front/back.

### Folder

Alternative designation for songs/tracks. Data saved on a storage medium can be grouped into folders for improved organization. Can be likened to a filing cabinet containing a number of folders, each of which holds a number of documents.

### GPS

(Global Positioning System)

Satellite-based system for relaying geographic location information to and from vehicles equipped with special receivers. Employs DVD digital maps for navigation.

### GSM

(Global System for Mobile Communication)

A standard network protocol used throughout the world for digital cellular communication

### Heading Up

Dynamic map alignment, map is displayed facing driving direction pointing up.

### ID3 tag

Additional information which may be included in MP3 files (e.g. title, artist, album).

**ISO9660**

A standard file system for recording data on CDs.

**Joliet**

Standard for recording data on CDs; an extension of ISO 9660.

**LOGIC7 Surround**

Playback method resulting in an improved spatial listening experience compared to conventional stereo playback.

**MP3**

The term used in everyday speech for ->MPEG1 Audio Layer 3.

**MPEG1 Audio Layer 3**

A means of compressing digital audio data.

**Multi session**

A method for recording data, e.g. for CDs. Data is written to the CD in a number of sessions.

**Navigation DVD**

Contains all available destination addresses (town, road, intersection, house number, special destinations) and the digital map material for a country or a region for destination entry, route calculation and destination guidance at time of DVD production. DVD maps do not cover all areas nor all routes within an area.

**North Up**

The map is displayed facing north during route guidance.

**NTSC (National Television System Committee)**

A TV and video standard for USA and Canada. This standard uses a composite video signal, in which all information - red, blue, and green signals (and sometimes audio signals as well) are mixed together.

**PAL (Phase Alternation Line)**

A TV and video standard for most countries in western and middle Europe. The PAL standard uses a higher image resolution and a lower picture frequency than the NTSC standard.

**POI (Point of Interest)**

Points of Interest include service stations, rest areas, parking lots, hospitals, sight-seeing points, etc.

**Provider**

is the network operator who makes available (provides) telephone services

**PUK (Personal Unblocking Key)**

must be entered if the wrong PIN was entered three consecutive times.

### **Regional code**

The regional code prevents video DVDs from being played on DVD players not having the same code as the ->DVD.

The factory setting of the Rear Seat Entertainment\* CD/DVD player is code 1. It can only play back video DVDs also having code 1 or no code.

### **Roaming**

For this function, the telephone uses the telephone network of a contract partner. The ROAMING indicator in the COMAND display indicates that a call is being made using a contract partner.

### **Root directory**

The uppermost directory on a storage medium.

### **Scan rate (MP3)**

Indicates the frequency at which voltage samples are taken during the conversion of an analog signal into a digital signal. The analog-to-digital converter converts the samples into digital signals.

### **Service source**

This includes the systems telephone\* and navigation (voice output during destination guidance)

### **SIM**

(Subscriber Identity Module)  
Card provided by the GSM telephone service provider. Necessary for accessing a mobile communication network.

### **SMS**

(Short Message Service)  
With this function you can receive and read short text messages (if SMS service is provided by your provider)

### **Soft keys**

Keys that activate different functions. Function of key depends on the selected operating mode.

### **Subtitle**

A textual representation of the spoken audio in a video program.

### **Tele Aid\***

(Telematic Alarm Identification on Demand)

The Tele Aid system consists of three types of response: automatic and manual emergency, roadside assistance, and information. Tele Aid is initially activated by completing a subscriber agreement and placing an acquaintance call. Refer also to the vehicle operating instructions.

The Tele Aid system is operational provided that the vehicle's battery is charged, properly connected, not damaged, and cellular and GPS coverage is available.

### **Unlock code**

Your unlock code prevents unauthorized persons from using your telephone. The unlock code is a number string you must enter when switching on the telephone if you have locked the phone before turning it off or if the phone is set to lock automatically.

### **Voice output**

During a trip, apart from visual informations (symbol or map displays), COMAND also provides all of the necessary spoken route information via voice output.

### **WB**

Weather Band



**A****Accepting**

call ..... 136

**Activating**

destination memory ..... 199

DVD menu ..... 104

Enter street menu ..... 156

last destinations ..... 197

Navigation main menu ..... 152

Service main menu ..... 214

Setting menu (DVD mode) ..... 104

System settings menu ..... 220

the help screen ..... 224

today's plan ..... 207

**Active call** ..... 141

**Actvating**

sound functions\* ..... 39

**Adding**

destination to today's plan ..... 207

**Adjust**

balance/fader ..... 36

**Adjusting**

brightness, contrast and color .... 107

display brightness ..... 223

display brightness (rear seat

entertainment\*) ..... 96, 110

headset volume (rear audio

operation\*) ..... 86

headset volume (rear seat

entertainment\*) ..... 96

tone (DVD mode) ..... 106

volume ..... 35

**Altering**

map scale ..... 177

**AM Band** ..... 44

**Arriving**

at destination ..... 183

**Audio search function** ..... 30

**Automatic map toggling** ..... 195

**AUX operation** ..... 82

**B**

**Balance control** ..... 36

**Bass** ..... 37

**Begin dialing** ..... 138

**C**

**CALC RTE** ..... 173

**CALL CONNECTED** ..... 217, 218

**CALL FAILED** ..... 129, 138

**Calling up**

main menus ..... 31

**Cancelling**

route guidance ..... 183

**CD**

fast forward/reverse ..... 66

general information ..... 52

loading

into the COMAND ..... 53

playback mode ..... 67

playback mode (rear seat

entertainment\*) ..... 98

## Index

- Repeat track ..... 68
- switching to CD operation..... 61
- Track mix ..... 68
- track select..... 64
- CD changer\***
  - accessing ..... 56
  - CD mix ..... 69
  - ejecting CDs..... 59
  - loading CDs..... 56
  - playback options..... 67
  - Repeat CD..... 69
  - retracting ..... 56
  - selecting a CD..... 63
- CD/DVD**
  - general information..... 87
- Changing**
  - aspect ratio..... 105
  - camera view ..... 106
  - DVD language..... 105
  - map display..... 177
- CODE INCORRECT** ..... 134
- COMAND**
  - switching off ..... 34
  - switching on ..... 34
- Compass function** ..... 170
- CONNECTING** ..... 217, 218
- Connecting**
  - external video sources (rear seat entertainment\*) ..... 95
  - headsets (rear audio operation\*) ... 84
  - headsets (rear seat entertainment\*). 92
- CONTINUE ROUTE GUIDANCE**..... 152
- Current vehicle location** ..... 175
- D**
- Destination input** ..... 156
- Destination memory** ..... 198
- Dialing**
  - subsequent dialing ..... 138
- Displaying**
  - full screen ..... 103, 109
  - phone book ..... 144
  - route list ..... 185
  - soft keys during playback... 102, 108
  - the compass screen ..... 170
- Displaying and switching**
  - between subtitles ..... 106
- DRIVE EMPTY (rear seat entertainment\*)** ..... 93
- DVD**
  - playback requirements (rear seat entertainment\*) ..... 89
- E**
- Ejecting**
  - CD
    - at the CD changer\* ..... 59
    - at the COMAND ..... 53
    - at the RSE CD/DVD player ..... 94
  - MP3 CD
    - at the CD changer\* ..... 59
    - at the COMAND..... 74
  - navigation DVD
    - at the COMAND ..... 149
- Emergency call “911”** ..... 131
- Emergency call system** ..... 217
- Ending**
  - call..... 136, 138
- ENTER UNLOCK CODE**..... 128

**Entering**

- city ..... 163
- destination address ..... 158
- house number..... 159
- parking ..... 165
- PUK..... 134
- telephone number..... 137
- unlock code
  - GSM mobile phone ..... 133
  - TDMA or CDMA mobile phone... 133

**F**

**Frequency range** ..... 44

**G**

**GPS** ..... 149

**H**

**Hands-free microphone**

switching on/off ..... 142

**Headsets**

- adjusting volume (rear audio operation\*) ..... 86
- connecting (rear audio operation\*) . 84
- connecting (rear seat entertainment\*) ..... 92

**I**

**Important notes**

telephone\* ..... 126

**Incoming call** ..... 136

**Information**..... 218

**L**

**Loading**

- CD
  - into the CD changer\* ..... 56
  - into the COMAND ..... 53
  - into the RSE CD/DVD player..... 93

**MP3 CD**

- into the CD changer\* ..... 56
- into the COMAND ..... 74
- navigation DVD
  - into the COMAND ..... 149

**LOGIC7 Surround**..... 38

**M**

**Making**

- a conference call..... 143
- display settings..... 223

**Map orientation**

- Heading Up ..... 177
- North Up..... 177

**Memory**

- destination memory ..... 198
- last destinations ..... 197

**Memory functions**

radio operation ..... 49

**Menu**

- functions ..... 32
- main area ..... 31
- soft keys area ..... 31
- status bar ..... 31

**Menu display** ..... 31

**Menu system** ..... 31

**Monitor off /on (rear seat**

**entertainment\*)** ..... 112

**MP3 CD**

- CD mix ..... 81
- fast forward/reverse..... 80
- loading (see CD) ..... 74
- MP3 track scan ..... 79
- playback options..... 80
- Repeat folder ..... 81
- Repeat track ..... 81
- selecting a folder ..... 76
- selecting a folder (rear seat entertainment\*) ..... 99

## Index

switching to MP3 CD mode. . . . . 74  
track select. . . . . 78

### Muting

CD operation. . . . . 67  
MP3 CD operation. . . . . 80  
satellite radio\* operation . . . . . 119

**Muting (rear seat entertainment\*).** 111

## N

### Navigation

Important notes . . . . . 148

**Navigation displays** . . . . . 175

**Navigation DVD** . . . . . 149

loading/ejecting . . . . . 149

**NAVIGATION IS INITIALIZING. PLEASE WAIT.** . . . . . 212

**NO SERV** . . . . . 135

## O

**OFF MAP** . . . . . 183

**OFF ROAD** . . . . . 182

### Opening

the Audio menu. . . . . 42

### Operating elements

CD. . . . . 14

CD changer\* . . . . . 16

MP3 CD. . . . . 18

navigation . . . . . 24

radio . . . . . 12

Satellite radio\* . . . . . 20

service. . . . . 26

telephone\* . . . . . 22

**Outgoing calls.** . . . . 137

## P

**Partially digitized areas.** . . . . 178

**Phone book.** . . . . . 144

**PHONE NOT AVAILABLE** . . . . . 129

**PHONE NOT INSERTED** . . . . . 129

**PHONE OFF.** . . . . . 130

**PIN BLOCKED. PLEASE ENTER PUK**

**ON CELL PHONE.** . . . . . 134

### PIN-code

entering. . . . . 133

### Playback options

CD. . . . . 67

### PLEASE INSERT SIM CARD

**(EMERGENCY CALL 911 ONLY**

**POSSIBLE WITH PHONE)** 129, 130, 134

**PLEASE WAIT, LOADING DISC...**

**(rear seat entertainment\*)** . . . . . 93, 94

**PRESS ANY KEY TO CONTINUE...**

**(rear seat entertainment**

**operation\*)** . . . . . 94

**Program category.** . . . . . 119

### PUK

entering. . . . . 134

## Q

**Quick-dialing.** . . . . . 141

## R

### Radio operation

muting. . . . . 43

### Radio station

saving station manually. . . . . 49

### Reading

SMS message received. . . . . 216

**Rear Audio operation\*** . . . . . 84

**Rear monitor (rear seat**

**entertainment\*)** . . . . . 90

<b>Rear Seat Entertainment (RSE)</b>	
<b>operation*</b> .....	87
<b>Recalculating</b> .....	173
<b>Redial</b> .....	138
<b>Rejecting</b>	
call .....	136
<b>Remote control (rear seat entertainment*)</b> .....	90
<b>Replacing</b>	
batteries (remote control) .....	113
<b>Resetting</b>	
all settings to the factory settings ..	227
<b>Roadside Assistance</b> .....	217
<b>ROAMING</b> .....	135
<b>Route calculation</b> .....	173
<b>Route guidance</b> .....	173
OFF MAP .....	183
OFF ROAD .....	182
unverified roads .....	178
verified roads .....	178
<b>RSE CD/DVD player (rear seat entertainment*)</b> .....	90

## S

<b>Satellite radio*</b>	
important notes .....	116
memory functions .....	121
<b>Satellite radio* operation</b>	
automatic tuning .....	119
<b>Saving</b>	
current location .....	191
destination .....	198
radio station .....	49
<b>Selecting</b>	
an audio source .....	43
CD (CD changer* only) .....	63
city .....	165
cross street .....	162
detour .....	186
folder (MP3 CD) .....	76
folder (rear seat entertainment*) ..	99
frequency (audio search function) ..	30
map orientation .....	177
memory (audio search function) ..	30
multifunction display .....	29
satellite radio* station .....	119

source of the speakers .....	111
street .....	159
the audio source (rear audio operation*) .....	85
time zone .....	220
via folder list .....	76
Voice control* settings .....	224
<b>Setting</b>	
bass and treble (rear seat entertainment*) .....	112
display dimming characteristics ..	223
map view .....	193
POI Icons displays .....	192
routing mode .....	154
<b>SIM-CARD BLOCKED</b> .....	134
<b>SMS</b> .....	215
<b>Software Updates</b> .....	210
<b>Sound functions*</b> .....	38, 39
<b>Speed-dialling</b> .....	141
<b>Starting</b>	
individualization .....	225
route guidance .....	173
<b>Station</b>	
satellite radio* station	
station selection via direct	
channel entry .....	120

## Index

### Subscribing

to satellite radio\* . . . . . 117

**Subsequent dialing** . . . . . 138

### Switching

between the rear monitors  
(rear seat entertainment\*) . . . . . 89

to AUX mode (rear seat  
entertainment\*) . . . . . 108

to CD mode (rear seat  
entertainment\*) . . . . . 97

to CD operation. . . . . 61

to DVD mode (rear seat  
entertainment\*) . . . . . 102

to MP3 CD mode. . . . . 74

to MP3 CD mode (rear seat  
entertainment\*) . . . . . 99

to telephone\* operation . . . . . 134

### Switching off

COMAND. . . . . 34

hands-free microphone. . . . . 142

rear audio operation\* . . . . . 86

telephone operation . . . . . 130

the rear monitor\* . . . . . 93

### Switching on

CD operation

CD changer\* . . . . . 62

CD drive in the COMAND. . . . . 62

COMAND. . . . . 34

hands-free microphone. . . . . 142

satellite radio\* operation . . . . . 118

telephone operation . . . . . 130

the rear monitor\* . . . . . 92

## T

**Tele Aid\*** . . . . . 217

**TELEPHONE BEING ACTIVATED,  
PLEASE WAIT.** . . . . . 129

**TELEPHONE BEING DEACTIVATED,  
PLEASE WAIT** . . . . . 130

**TELEPHONE NOT INSERTED** . . . . . 135

### The unlock code

entering. . . . . 133

**Three-way calling** . . . . . 142

**Track select** . . . . . 64

### Traffic routes

minimizing. . . . . 154

**Traffic settings**. . . . . 196

**Treble**. . . . . 37

## U

### Unlock code

GSM mobile phone . . . . . 133

TDMA or CDMA mobile phone . . . . 133

**Unverified roads**. . . . . 178

## V

**Verified roads**. . . . . 178

**Voice control individualization** . . . 225

**Voice instructions** . . . . . 174

### Volume

adjusting

at the COMAND. . . . . 35

Rear audio\* headsets . . . . . 86

Rear Seat Entertainment\*

headsets . . . . . 96

automatic volume control . . . . . 35

## W

**Weather Band WB** . . . . . 45