



Operator's Manual  
S-Class



Mercedes-Benz



Order No. 6515 2261 13 Part No. 221 584 69 82 USA Edition C 2008

S-Class

S 450 4MATIC (Canada only)

S 550

S 550 4MATIC

S 600

S 63 AMG

S 65 AMG

Our company and staff congratulate you on the purchase of your new Mercedes-Benz.

Your selection of our product is a demonstration of your trust in our company name. Furthermore, it exemplifies your desire to own an automobile that will be as easy as possible to operate and provide years of service.

Your Mercedes-Benz represents the efforts of many skilled engineers and craftsmen. To help assure your driving pleasure, and also the safety of you and your passengers, we ask you to make a small investment of time:

- Please read this manual carefully, then return it to your vehicle where it will be handy for your reference.
- Please follow the recommendations contained in this manual. They are designed to acquaint you with the operation of your Mercedes-Benz.
- Please pay attention to the warnings and cautions contained in this manual. They are designed to help improve the safety of the vehicle operator and occupants.

We extend our best wishes for many miles of safe, pleasurable driving.

Mercedes-Benz USA, LLC  
A DaimlerChrysler Company

## Contents

<b>Introduction</b> .....	13	<b>At a glance</b> .....	23	Panic alarm .....	66
Product information.....	13	Exterior view.....	24	Activating.....	66
Operator's Manual.....	14	Cockpit.....	26	Deactivating.....	66
Service and warranty information ..	14	Instrument cluster .....	28	Driving safety systems .....	67
Important notice for California		Control systems .....	30	ABS.....	67
retail buyers and lessees of		Center console .....	32	Adaptive Brake .....	68
Mercedes-Benz automobiles .....	15	Upper part .....	32	Adaptive Brake Lights	
Maintenance .....	15	Overhead control panel .....	33	(S 600 and S 65 AMG, USA only)....	69
Roadside Assistance .....	15	Driver's door control panel.....	34	BAS.....	69
Change of address or ownership....	16	Rear door control panel.....	35	BAS Plus* .....	70
Operating your vehicle outside the		Storage compartments.....	36	EBP .....	72
USA or Canada.....	16	Rear passenger compartment .....	38	ESP® .....	72
Where to find it.....	17			Four wheel electronic traction	
Symbols.....	18	<b>Safety and Security</b> .....	39	system (4MATIC) with the ESP® .....	76
Operating safety .....	19	Occupant safety .....	40	PRE-SAFE® Brake* (vehicles with	
Proper use of the vehicle .....	19	Air bags.....	42	DISTRONIC Plus* only) .....	77
Problems with your vehicle.....	20	Occupant Classification System .....	47	Anti-theft systems .....	82
Reporting safety defects.....	21	Seat belts.....	52	Immobilizer .....	82
Reporting safety defects .....	21	Active head restraints.....	56	Anti-theft alarm system .....	82
Vehicle data recording.....	22	Preventive occupant safety		Canceling the alarm.....	83
Information regarding electronic		(PRE-SAFE®).....	57		
recording devices.....	22	Children in the vehicle .....	58		
		Override switch for rear passenger			
		compartment .....	64		

## Contents

<b>Control systems</b> .....	85	Channel update .....	115	Audio AUX.....	129
COMAND operating safety .....	86	Calling SIRIUS Service Center .....	115	Video AUX.....	130
COMAND introduction .....	87	COMAND audio CD/ audio DVD/MP3 .....	116	COMAND video DVD .....	132
Availability of functions while the vehicle is in motion .....	87	Safety precautions .....	116	Automatic picture fade-out .....	132
Switching COMAND on or off .....	87	Notes about MP3 mode .....	116	Notes about video DVD operation	132
COMAND components .....	87	Notes about audio DVD operation	118	Notes about handling DVDs .....	133
Operating COMAND .....	92	Notes about CDs/DVDs.....	119	Functional limitations.....	133
Main menus of COMAND .....	98	Notes about handling CDs/DVDs	120	Inserting or ejecting DVDs .....	133
COMAND FM/AM radio .....	102	Inserting CDs and DVDs.....	120	Submenu overview of video DVD .	134
Submenu overview .....	102	Inserting a PCMCIA card .....	121	Switching to video DVD mode.....	134
Switching to radio mode .....	103	Ejecting CDs and DVDs.....	122	Hiding/showing the DVD control menu .....	135
Switching wavebands.....	103	Ejecting a PCMCIA card .....	122	Hiding/showing the menu system .....	135
Selecting stations/channels .....	103	Submenu overview .....	123	Fast forward/rewind.....	135
Saving stations .....	106	Switching to audio CD, audio DVD or MP3 mode.....	124	Selecting the DVD medium.....	135
Station name display.....	107	Stop function .....	125	Stop playback .....	136
COMAND satellite radio .....	108	Pause function .....	125	Pause playback .....	136
Submenu overview .....	108	Selecting CD/DVD/MP3 media...	126	Selecting scene/chapter .....	136
Introduction to satellite radio .....	109	Selecting a track .....	126	Selecting film/track.....	137
Switching to satellite radio .....	109	Fast forward/rewind .....	127	Screen settings.....	137
Main satellite radio menu .....	111	Selecting a folder .....	127	DVD menu.....	138
Selecting program category .....	111	Setting the audio format .....	128	Stopping the film or skipping to the beginning/end of a scene.....	138
Tuning in channels .....	112	Playback options.....	128	Switching to the next highest DVD menu level .....	139
Saving channels .....	114	COMAND AUX .....	129		
Show program info .....	115	Audio and Video AUX jacks.....	129		

## Contents

Back to the film.....	139	COMAND address book .....	167	Entering a destination from the	
Setting the language and		Bluetooth® settings.....	180	list of last destinations.....	225
audio format .....	139	SMS messages		Entering a destination	
Subtitles and camera angles.....	140	(Short Message Service).....	183	from the map.....	225
Interactive content.....	140	COMAND navigation.....	187	Entering a stopover.....	226
COMAND telephone* .....	141	Safety precautions.....	187	COMAND navigation system	
Safety precautions .....	141	COMAND navigation (introduction) ....	188	(Point of interest entry) .....	229
General notes.....	141	Map software.....	188	Entering a POI in the	
Switching telephone on or off .....	143	Updating the map software.....	188	surrounding area .....	229
Activating telephone mode .....	144	Updating process.....	188	Entering a POI in the	
Telephone keypad.....	144	Loading a DVD into the		surroundings of a given city.....	229
“911” emergency call.....	145	DVD changer.....	189	Entering a POI in	
Entering the PIN.....	146	Updating .....	190	a different region .....	229
Entering the PIN2.....	147	General notes .....	192	Designating a POI category.....	230
Entering the PUK/PUK2.....	147	Input restrictions .....	193	Entering a POI from the map .....	236
Entering the unlock code .....	147	Navigation system menu overview	194	COMAND navigation system	
Telephone submenu overview .....	148	Calling up the map display and		(route guidance).....	237
Main telephone menu .....	149	switching to navigation mode .....	195	Route guidance.....	237
Mailbox .....	149	Basic settings .....	198	Examples of displays and	
Call lists .....	150	COMAND navigation system		announcements for	
Incoming call.....	152	(entering a destination) .....	202	a driving maneuver .....	237
Making an outgoing call .....	153	Entering a destination by the		Example of a display	
Functions during a single-call		address.....	202	without driving maneuvers.....	239
connection .....	155	Entering a destination from the		Destination or destination area	
Transferring a call .....	157	destination memory.....	223	reached .....	239
COMAND phone book.....	158			Partially digitized areas.....	240

## Contents

Off-road and off-map .....	241	COMAND navigation system	Setting interior lighting
Navigation announcements .....	243	(last destinations) .....	delayed switch-off .....
COMAND navigation system		Saving a destination permanently	Extending or retracting rear
(during route guidance) .....	244	in the destination memory .....	window sunshade .....
Cancel route guidance .....	244	Saving the vehicle position in	Trunk opening-height
Continuing cancelled		the list of last destinations .....	restriction* on/off .....
route guidance .....	244	Saving the crosshair position in	COMAND automatic climate control .
Route browser .....	244	the list of last destinations .....	Setting temperature .....
Displaying info .....	245	Deleting one of	Adjusting air distribution .....
Displaying route information .....	246	the last destinations .....	Adjusting air volume .....
Detour function .....	246	COMAND system settings .....	Central climate control menu via
COMAND navigation system		System settings menu overview...	COMAND .....
(real-time traffic) .....	248	Display settings .....	Operating rear climate control*
Real-time traffic notifications		Time settings .....	from the front .....
in the map .....	248	Voice Control settings .....	COMAND seats .....
Displaying real-time		Setting the system language .....	Operating seats via COMAND .....
traffic reports .....	249	Assigning the favorite button .....	Lumbar support .....
Example message .....	250	Reset .....	Multicontour seats*, front .....
COMAND navigation system		COMAND vehicle menu .....	Drive-dynamic multicontour
(destination memory) .....	251	Setting night security illumination	seats*, front .....
Saving a destination in		Locator lighting on/off .....	Instrument cluster control system .....
the destination memory .....	251	Exterior mirror	Multifunction display .....
Deleting a destination		convenience settings .....	Multifunction steering wheel .....
from the destination memory .....	253	Automatic locking on/off .....	Menus .....
Own address .....	254	Activating easy-entry/exit feature	Trip menu .....
		Setting interior ambient lighting...	Navi menu .....

## Contents

Audio menu.....	294	Voice Control address book .....	330	Voice Control individualization .....	355
AMG menu.....	296	COMAND address book overview .	330		
Telephone* menu.....	299	Operation with address book			
Assistance* menu.....	303	not open (global).....	330	<b>Controls in detail</b> .....	357
Service menu .....	304	Operation with address book		Locking and unlocking .....	358
Settings menu.....	305	open (local).....	331	SmartKey.....	358
Voice Control.....	308	Operating and using address book	331	SmartKey with KEYLESS-GO* .....	361
Operating safety.....	308	Available commands with the		Checking batteries in the	
Voice Control introduction.....	309	address book not open .....	331	SmartKey or SmartKey with	
Spelling.....	310	Available commands with the		KEYLESS-GO* .....	366
Command types.....	310	address book open .....	333	Loss of the SmartKey or	
Active System .....	310	Voice Control radio.....	334	SmartKey with KEYLESS-GO* .....	366
Controls .....	311	Radio operation .....	334	Opening doors from the inside .....	367
Symbols .....	312	Radio commands .....	334	Power closing assist	
Voice Control telephone .....	313	Voice Control CD/		for doors and trunk lid .....	368
Telephone operation .....	313	DVD changer/MP3.....	338	Automatic central locking.....	368
Telephone commands .....	314	Operation.....	338	Locking and unlocking from	
Voice Control navigation.....	320	Commands.....	339	the inside.....	369
Important notes .....	320	Voice Control command list .....	340	Starter switch positions .....	370
Navigation operation.....	321	Command list.....	340	SmartKey.....	370
Navigation commands.....	321	Voice Control troubleshooting.....	352	SmartKey with KEYLESS-GO* .....	371
Dialog for entering		Help function .....	352	Seats .....	373
a complete address.....	322	Help commands.....	352	Seat adjustment .....	373
Commands for entering parts of		Help window .....	352	Seat heating .....	377
an address .....	327	Entering digits and spelling.....	352	Seat ventilation* .....	378
		What to do if ... ..	353	Head restraints .....	379



## Contents

Multicontour seats*, rear .....	383	High beam.....	403	Turning off the engine.....	424
Easy-entry/exit feature .....	384	Headlamp cleaning system .....	403	Releasing seat belts.....	425
Steering wheel.....	386	Corner-illuminating lamps .....	404	Automatic transmission.....	426
Steering wheel adjustment.....	386	Hazard warning flasher .....	405	Gear selector lever.....	426
Heated steering wheel* .....	387	Interior lighting.....	406	Shifting procedure .....	429
Mirrors.....	388	Door entry lamps .....	407	Transmission positions .....	430
Interior rear view mirror .....	388	Trunk lamp .....	407	Driving tips.....	433
Exterior rear view mirrors.....	388	Windshield wipers.....	408	Gear ranges .....	435
Power folding exterior rear		Switching on/off		Automatic shift program .....	436
view mirrors .....	389	windshield wipers.....	408	Steering wheel gearshift control ..	438
Auto-dimming rear view mirrors ...	390	Intermittent wiping.....	409	Manual shift program	
Activating exterior rear		Single wipe.....	409	(S 63 AMG and S 65 AMG only) ...	440
view mirror parking position.....	391	Wiping with windshield		Emergency operation	
Memory function.....	392	washer fluid.....	409	(Limp-Home Mode) .....	443
Storing positions into memory .....	393	Power windows.....	410	Instrument cluster .....	444
Recalling positions from memory .	393	Opening and closing		Adjusting instrument cluster	
Storing exterior rear view		power windows .....	410	display illumination .....	444
mirror parking position.....	394	Rear side window sunshades* .....	412	Coolant temperature gauge .....	444
Fastening the seat belts.....	395	Summer opening feature.....	412	Tachometer.....	445
Proper use of seat belts .....	397	Convenience closing feature .....	413	Outside temperature indicator .....	445
Seat belt height adjustment		Driving and parking.....	416	Fuel gauge .....	445
automatically.....	397	Starting the engine.....	416	Driving systems .....	446
Seat belt height adjustment		Driving off .....	419	Cruise control .....	446
manually.....	398	Turn signals.....	420	DISTRONIC Plus* .....	451
Lighting.....	399	Problems while driving .....	420	Airmatic .....	468
Exterior lamp switch.....	399	Parking.....	421	Active Body Control (ABC)* .....	470

## Contents

Parktronic system* .....	472	Trunk .....	511	Cigarette lighters .....	537
Park Assist* .....	476	Opening trunk .....	511	Power outlet .....	538
Advanced Parking Guidance* .....	481	Closing trunk .....	512	Floormats* .....	538
Rear View Camera* .....	487	Trunk emergency release.....	516	Telephone* .....	539
Night View Assist* .....	491	Valet locking .....	517	Tele Aid.....	542
Blind Spot Assist* .....	495	Power tilt/sliding sunroof.....	518	Garage door opener.....	551
Air vents .....	498	Opening and closing		Infrared reflecting windshield .....	556
Opening and closing air vents .....	500	power tilt/sliding sunroof.....	518		
Ventilated storage compartment		Synchronizing .....	520		
(Canada only).....	500	Panorama roof with power		<b>Operation</b> .....	557
Automatic climate control .....	501	tilt/sliding panel* .....	521	The first 1000 miles (1500 km).....	558
Deactivating climate		Roller sunblinds .....	521	Driving instructions .....	559
control system .....	503	Opening and closing panorama		Drive sensibly – save fuel .....	559
Operating climate control system		roof with power tilt/sliding panel..	522	Drinking and driving.....	559
in automatic mode .....	503	Synchronizing .....	524	Pedals.....	559
Setting temperature.....	504	Loading and storing.....	525	Power assistance.....	559
Adjusting air volume .....	504	Roof rack* .....	525	Brakes .....	560
Front defroster.....	504	Loading instructions .....	525	Driving off .....	562
Rear window defroster.....	506	Storage compartments .....	526	Parking .....	562
Maximum cooling MAXCOOL		Cupholders .....	530	Tires.....	563
(USA only) .....	506	Trunk .....	532	Hydroplaning .....	563
Air recirculation mode.....	506	Useful features .....	534	Tire traction .....	564
Residual engine heat and		Sun visors .....	534	Tire speed rating.....	564
ventilation .....	509	Vanity mirror in rear.....	534	Winter driving instructions.....	565
Rear passenger compartment		Rear window sunshade .....	535	Standing water .....	566
climate control* .....	509	Ashtrays.....	536	Passenger compartment.....	567

## Contents

Driving abroad.....	567	Checking tire inflation pressure ...	592	<b>Practical hints</b> .....	627
Control and operation of radio transmitters.....	567	Tire labeling.....	598	What to do if ...? .....	628
Catalytic converter.....	568	Load identification .....	601	Lamps in instrument cluster .....	628
Emission control.....	568	DOT, Tire Identification Number (TIN) ..	602	Air bag off indicator lamp.....	640
Coolant temperature .....	569	Maximum tire load .....	603	Vehicle status messages in the multifunction display.....	642
At the gas station.....	570	Maximum tire inflation pressure ..	603	Where will I find ...? .....	705
Refueling .....	570	Uniform Tire Quality Grading Standards (U.S. vehicles) .....	604	First aid kit.....	705
Check regularly and before a long trip.....	572	Tire ply material .....	606	Vehicle jack, vehicle tool kit, luggage bowl, Minispare wheel ....	705
Engine compartment.....	573	Tire and loading terminology .....	606	Unlocking/locking in an emergency..	708
Hood .....	573	Rotating tires .....	609	Unlocking the vehicle.....	708
Engine oil.....	575	Winter driving .....	610	Locking the vehicle .....	709
Transmission fluid level .....	578	Winter tires .....	610	Resetting activated head restraints...	710
Active Body Control* (ABC*) fluid level.....	579	Snow chains.....	611	Head restraints (standard) .....	710
Coolant level .....	579	Maintenance.....	612	Luxury head restraints* .....	711
Windshield washer system and headlamp cleaning system .....	580	Maintenance service indicator message.....	612	Replacing SmartKey batteries .....	712
Tires and wheels .....	582	Calling up the maintenance service indicator display.....	613	Replacing bulbs .....	714
Important guidelines .....	582	Resetting the maintenance service indicator.....	614	Bulbs.....	715
Tire care and maintenance .....	583	Vehicle care.....	615	Replacing bulbs for front lamps ...	717
Direction of rotation .....	585	Cleaning and care of vehicle .....	615	Replacing wiper blades.....	721
Loading the vehicle .....	585			Placing wiper arms in vertical position .....	721
Recommended tire inflation pressure .....	590			Removing wiper blades .....	722
				Installing wiper blades .....	722

## Contents

Flat tire .....	723	<b>Technical data</b> .....	745	Fuels, coolants, lubricants, etc.....	764
Preparing the vehicle .....	723	Parts service.....	746	Capacities.....	764
Mounting the spare wheel.....	723	Warranty coverage .....	747	Engine oils .....	769
Batteries .....	729	Loss of Service and Warranty		Engine oil additives.....	769
Disconnecting starter battery .....	731	Information Booklet .....	747	Air conditioning refrigerant .....	769
Removing starter battery .....	732	Identification labels .....	748	Brake fluid .....	769
Charging battery .....	732	Layout of poly-V-belt drive.....	750	Premium unleaded gasoline.....	770
Reinstalling starter battery.....	733	S 450 4MATIC, S 550 and		Fuel requirements.....	770
Reconnecting starter battery .....	733	S 550 4MATIC.....	750	Gasoline additives.....	771
Jump starting.....	734	S 63 AMG .....	750	Coolants .....	771
Towing the vehicle.....	737	S 600 and S 65 AMG .....	750	Windshield washer system and	
Towing with front wheels raised...	738	Engine .....	751	headlamp cleaning system .....	774
Towing with all wheels		Rims and tires .....	754		
on the ground.....	739	Same size tires .....	755		
Installing towing eye bolt .....	740	Mixed size tires.....	757		
Fuses .....	741	Spare wheel .....	759		
Fuse boxes in		Electrical system .....	760		
engine compartment.....	742	Main dimensions and weights .....	762		
Fuse boxes in		Main dimensions.....	762		
passenger compartment .....	743	Weights.....	763		
Emergency engine shut-down .....	744				
				<b>Index</b> .....	775



▼ **Product information**

Please observe the following in your own best interest:

We recommend using Genuine Mercedes-Benz Parts as well as conversion parts and accessories explicitly approved by us for your vehicle model.

We have tested these parts to determine their reliability, safety and special suitability for Mercedes-Benz vehicles.

We are unable to make an assessment for other products and therefore cannot be held responsible for them, even if in individual cases an official approval or authorization by governmental or other agencies should exist. Use of such parts and accessories could adversely affect the safety, performance or reliability of your vehicle. Please do not use them.

Genuine Mercedes-Benz Parts as well as conversion parts and accessories approved by us are available at any authorized Mercedes-Benz Center where you will receive comprehensive information, also on permissible technical modifications, and where proper installation will be performed.

## Introduction

### Operator's Manual

This Operator's Manual contains a great deal of useful information. We urge you to read it carefully and familiarize yourself with the vehicle before driving.

For your own safety and longer service life of the vehicle, we urge you to follow the instructions and warnings contained in this manual. Ignoring them could result in damage to the vehicle or personal injury to you or others. Vehicle damage caused by failure to follow instructions is not covered by the Mercedes-Benz Limited Warranty.

Your vehicle may have some or all of the equipment described in this manual. Therefore, you may find explanations for optional equipment not installed in your vehicle. If you have any questions about the operation of any equipment, any authorized Mercedes-Benz Center will be glad to demonstrate the proper procedures.

We continuously strive to improve our product, and ask for your understanding that we reserve the right to make changes in design and equipment. Therefore, information, illustrations and descriptions in this Operator's Manual might differ from your vehicle.

Optional equipment is also described in this manual, including operating instructions wherever necessary. Since they are special-order items, the descriptions and illustrations herein may vary slightly from the actual equipment of your vehicle.

If there are any equipment details that are not shown or described in this Operator's Manual, any authorized Mercedes-Benz Center will be glad to inform you of correct care and operating procedures. The Operator's Manual and Maintenance Booklet are important documents and should be kept with the vehicle.

### Service and warranty information

The Service and Warranty Information Booklet contains detailed information about the warranties covering your Mercedes-Benz, including:

- New Vehicle Limited Warranty
- Emission System Warranty
- Emission Performance Warranty
- California, Maine, Massachusetts, and Vermont Emission Control System Warranty (California, Maine, Massachusetts, and Vermont only)
- State Warranty Enforcement Laws (Lemon Laws)

### **Important notice for California retail buyers and lessees of Mercedes-Benz automobiles**

Under California law you may be entitled to a replacement of your vehicle or a refund of the purchase price or lease price, if Mercedes-Benz USA, LLC and/or its authorized repair or service facilities fail to fix one or more substantial defects or malfunctions in the vehicle that are covered by its express warranty after a reasonable number of repair attempts. During the period of 18 months from original delivery of the vehicle or the accumulation of 18 000 miles (approximately 29 000 km) on the odometer of the vehicle, whichever occurs first, a reasonable number of repair attempts is presumed for a retail buyer or lessee if one or more of the following occurs:

- (1) the same substantial defect or malfunction results in a condition that is likely to cause death or serious bodily injury if the vehicle is driven, that defect or malfunction has been subject to repair two or more times, and you have directly notified Mercedes-Benz USA, LLC in writing of the need for its repair,
- (2) the same substantial defect or malfunction of a less serious nature than category (1) has been subject to repair four or more times and you have directly notified us in writing of the need for its repair, or
- (3) the vehicle is out of service by reason of repair of the same or different substantial defects or malfunctions for a cumulative total of more than 30 calendar days.

Written notification should not be sent to a dealer, it should be addressed to:  
Mercedes-Benz USA, LLC  
Customer Assistance Center  
One Mercedes Drive  
Montvale, NJ 07645-0350

### **Maintenance**

The Maintenance Booklet describes all the necessary maintenance work which should be performed at regular intervals.

Always have the Maintenance Booklet with you when you take the vehicle to an authorized Mercedes-Benz Center for service. The service advisor will record each service in the booklet for you.

### **Roadside Assistance**

The Mercedes-Benz Roadside Assistance Program provides factory trained technical help in the event of a breakdown. Calls to the toll-free Roadside Assistance number

**1-800-FOR-MERCEdes (in the USA)**  
**1-800-387-0100 (in Canada)**

will be answered by Mercedes-Benz Customer Assistance Representatives 24 hours a day, 365 days a year.



## Introduction

### Operator's Manual

For additional information refer to the Mercedes-Benz Roadside Assistance Program brochure (in the USA) or the Roadside Assistance section of the Service & Warranty Information booklet (in Canada) in your vehicle literature portfolio.

#### **Change of address or ownership**

If you change your address, be sure to send in the "Change of Address Notice" found in the Service and Warranty Information Booklet, or simply call the Mercedes-Benz Customer Assistance Center (in the USA) at 1-800-FOR-MERCEdes, or Customer Service (in Canada) at 1-800-387-0100. This will assist us in contacting you in a timely manner should the need arise.

If you sell your Mercedes, please leave all literature with the vehicle to make it available to the next operator.

If you bought this vehicle used, be sure to send in the "Notice of Purchase of Used Car" found in the Service and Warranty Information Booklet, or call the Mercedes-Benz Customer Assistance Center (in the USA) at 1-800-FOR-MERCEdes, or Customer Service (in Canada) at 1-800-387-0100.

#### **Operating your vehicle outside the USA or Canada**

If you plan to operate your vehicle in foreign countries, please be aware that:

- service facilities or replacement parts may not be readily available,
- unleaded gasoline for vehicles with catalytic converters may not be available; the use of leaded fuels will damage the catalyts,
- gasoline may have a considerably lower octane rating, and improper fuel can cause engine damage.

Certain Mercedes-Benz models are available for delivery in Europe under our European Delivery Program. For details, consult an authorized Mercedes-Benz Center or write to:

In the USA:

Mercedes-Benz USA, LLC  
European Delivery Department  
One Mercedes Drive  
Montvale, NJ 07645-0350

In Canada:

Mercedes-Benz Canada, Inc.  
European Delivery Department  
98 Vanderhoof Avenue  
Toronto, Ontario M4G 4C9

▼ **Where to find it**

This Operator's Manual is designed to provide comprehensive support information for you, the vehicle operator. Each section has its own reference color.

**At a glance**

Here you will find an overview of your vehicle's interior and exterior main features.

**Safety and Security**

Here you will find descriptions of the safety and security features of your vehicle.

**Control systems**

Here you will find detailed information about the operation of the COMAND system, instrument cluster control system and Voice Control.

**Controls in detail**

Here you will find detailed information about the equipment installed in your vehicle. This section also describes technical innovations.

**Operation**

Here you will find all the information you need for the proper operation of your vehicle.

**Practical hints**

This section provides fast assistance for dealing with problems you may encounter.

**Technical data**

All important technical data for your vehicle can be found in this section.

**Indexes**

The table of contents and the index are designed to help you find information quickly and easily.

The following publications are part of your vehicle documentation:

- this Operator's Manual
- the Maintenance Booklet

Separate operating instructions will be provided as required depending on the equipment options installed in your vehicle.

## Introduction

### Symbols

Trademarks:

- Bluetooth® is a registered trademark of Bluetooth SIG Inc.
- ESP® and PRE-SAFE® are registered trademarks of DaimlerChrysler.
- HomeLink® is a registered trademark of Prince, a Johnson Controls Company.
- LOGIC7® is a registered trademark of Harman International Industries, Incorporated.
- SIRIUS and related marks are trademarks of SIRIUS Satellite Radio Inc.


The following symbols are found in this Operator's Manual:


- \* Optional equipment is identified with an asterisk. Since standard equipment varies between models, the descriptions and illustrations in this manual may differ slightly from the actual equipment of your vehicle.

#### Warning!



Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

 Highlights hazards that may result in damage to your vehicle.

 Helpful hints or further information you may find useful.

- ▶ This symbol points to instructions for you to follow.
- ▶ A number of these symbols appearing in succession indicates a multiple-step procedure.
- ▷ page This symbol tells you where to look for further information on a topic.
- ▷▷ This continuation symbol marks a warning which is continued on the next page.
- ▷▷ This continuation symbol marks a procedure which is continued on the next page.
- > This symbol is used to indicate cross-references to term definitions.
- Display* Words appearing in the multi-function display and COMAND display are printed in the type shown here.

## ▼ Operating safety

### Warning!



Work improperly carried out on electronic components and associated software could cause them to cease functioning. Because the vehicle's electronic components are interconnected, any modifications made may produce an undesired effect on other systems. Electronic malfunctions could seriously impair the operating safety of your vehicle.

Contact an authorized Mercedes-Benz Center for repairs or modifications to electronic components.

Other improper work or modifications on the vehicle could also have a negative impact on the operating safety of the vehicle.

Some safety systems only function while the engine is running. You should therefore never turn off the engine while driving.

### Warning!



Heavy blows against the vehicle underbody or tires/wheels, for example when running over an obstacle, road debris or a pothole, may cause serious damage and impair the operating safety of your vehicle. If you feel a sudden significant vibration or ride disturbance, or you suspect that damage to your vehicle has occurred, you should turn on your hazard warning flashers, carefully slow down, and drive with caution to an area which is a safe distance from the road.

Inspect the vehicle underbody and tires/wheels for possible damage. If the vehicle appears unsafe, have it towed to the nearest authorized Mercedes-Benz Center or other qualified maintenance or repair facility for further inspection or repairs.

## Proper use of the vehicle

Proper use of the vehicle requires that you are familiar with the following information and rules:

- the safety precautions in this manual
- the “Technical data” section in this manual
- traffic rules and regulations
- motor vehicle laws and safety standards

### Warning!



Various warning labels are attached to your vehicle. These warning labels are intended to make you and others aware of various risks. You should not remove any of these warning labels unless explicitly instructed to do so by information on the label itself. Removal of any of these labels may cause you and others to be unaware of certain risks which may result in an accident and/or personal injury.

## Introduction

### Problems with your vehicle

If you should experience a problem with your vehicle, particularly one that you believe may affect its safe operation, we urge you to immediately contact an authorized Mercedes-Benz Center to have the problem diagnosed and corrected if required. If the matter is not handled to your satisfaction, please discuss the problem with the Mercedes-Benz Center management, or if necessary contact us at one of the following addresses:

In the USA:

Customer Assistance Center  
Mercedes-Benz USA, LLC  
One Mercedes Drive  
Montvale, NJ 07645-0350

In Canada:

Customer Relations Department  
Mercedes-Benz Canada, Inc.  
98 Vanderhoof Avenue  
Toronto, Ontario, M4G 4C9

▼ **Reporting safety defects**

For the USA only:

The following text is published as required of manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 pursuant to the “National Traffic and Motor Vehicle Safety Act of 1966.”

**Reporting safety defects**

---

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Mercedes-Benz USA, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Mercedes-Benz USA, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA Headquarters, 1200 New Jersey Avenue, SE, West Building, Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

## Introduction

### Vehicle data recording

#### Information regarding electronic recording devices

---

(Including notice pursuant to California Code § 9951)

Please note that your vehicle is equipped with devices that can record vehicle systems data and, if equipped with the Tele Aid system, may transmit some data in certain accidents.

This information helps, for example, to diagnose vehicle systems after a collision and to continuously improve vehicle safety. DaimlerChrysler may access the information and share it with others

- for safety research or vehicle diagnosis purposes
- with the consent of the vehicle owner or lessee
- in response to an official request by law enforcement or other government agency
- for use in dispute resolution involving DaimlerChrysler, its affiliates or sales/service organization and/or
- as otherwise required or permitted by law.

Please check the Tele Aid subscription service agreement for details regarding the information that may be recorded or transmitted via that system.

## At a glance

Exterior view

Cockpit

Instrument cluster

Control systems

Center console

Overhead control panel

Driver's door control panel

Rear door control panel

Storage compartments


Rear passenger compartment





## At a glance

### Exterior view

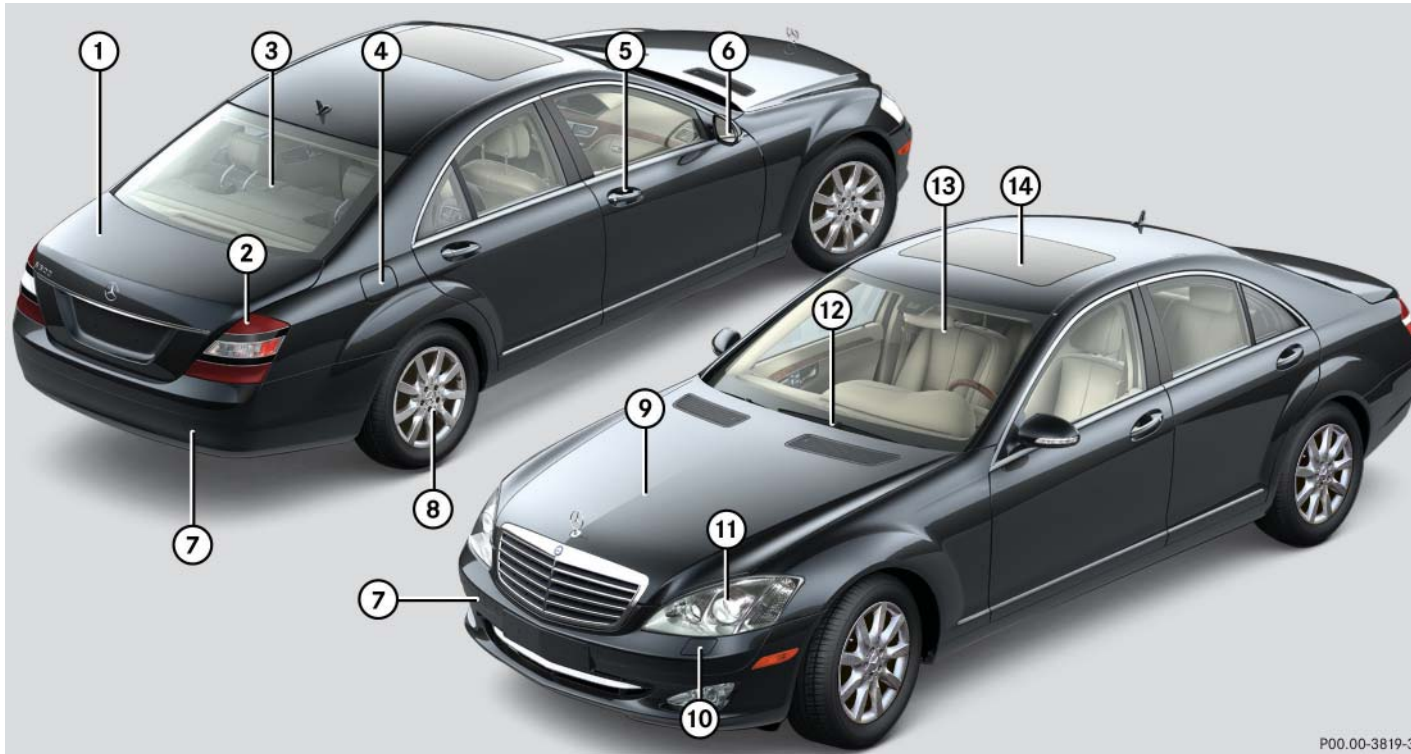

P00.00-3819-31


Item	Page
① Trunk	
• Unlocking	511
• Opening and closing	511
• Minispare wheel	723
• Vehicle tool kit	705
② Rear lamps	715
③ Rear window, defrosting	506
④ Fuel filler flap	570
Gasoline	770
⑤ Doors	
• Locking and unlocking	358
• Opening and closing	358

Item	Page
⑥ Exterior rear view mirror	388
Parking position	391
⑦ Towing the vehicle	737
⑧ Rims and tires	754
• Checking tire inflation pressure	592
• Minispare wheel	707
• Flat tire	723
⑨ Hood, opening	573
Engine oil	575
Coolant	579

Item	Page
⑩ Headlamp cleaning system	403
⑪ Front lamps	715
⑫ Windshield wipers	408
Wiper blades, replacing	721
Wiper blades, cleaning	622
⑬ Window, cleaning	622
⑭ Roofs	
• Power tilt/sliding sunroof	518
• Panorama roof with power tilt/sliding panel*	521

## At a glance


### Cockpit

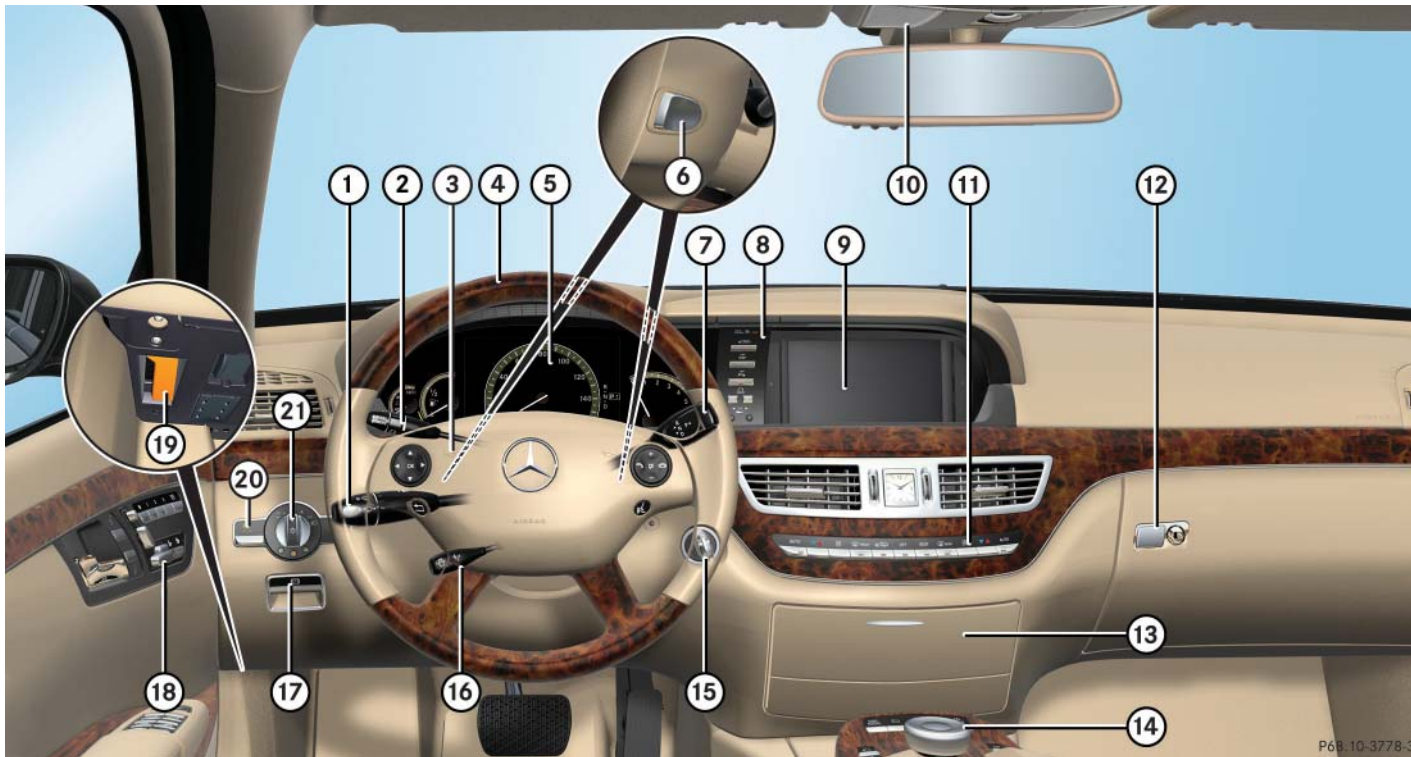






 
Item	Page	Item	Page	Item	Page
① <b>Combination switch</b>		⑧ <b>Control panel with</b>		⑫ Glove box lock	526
• High beam	403	• Front passenger front air bag indicator lamp	51	⑬ Cover of compartment with	
• Corner-illuminating lamps	404	• Vehicle level control switch	469, 471	• CD/DVD changer	120
• Windshield wipers	408	• Electronic Stability Program (ESP®) switch	74	• PCMCIA card slot	121
• Turn signals	420	• Parktronic* /Park Assist* deactivation switch	475, 480	⑭ Center console, lower part	30
② <b>Lever for</b>		• Swivel COMAND display	89	⑮ Starter switch	370
• Cruise control	447	• COMAND/instrument cluster display illumination	444	KEYLESS-GO* start/stop button	371
• DISTRONIC Plus*	451	⑨ COMAND display	87	⑯ Steering wheel adjustment	386
③ Horn		⑩ Overhead control panel	33	Heated steering wheel*	387
④ Multifunction steering wheel	288	⑪ Automatic climate control	501	⑰ Electronic parking brake	422
⑤ Instrument cluster	28	Center console, upper part	32	⑱ Door control panel	34
⑥ Steering wheel gearshift control	438			⑲ Hood lock release	573
⑦ Gear selector lever for automatic transmission	416			⑳ Night View Assist*	491
				㉑ Exterior lamp switch	399

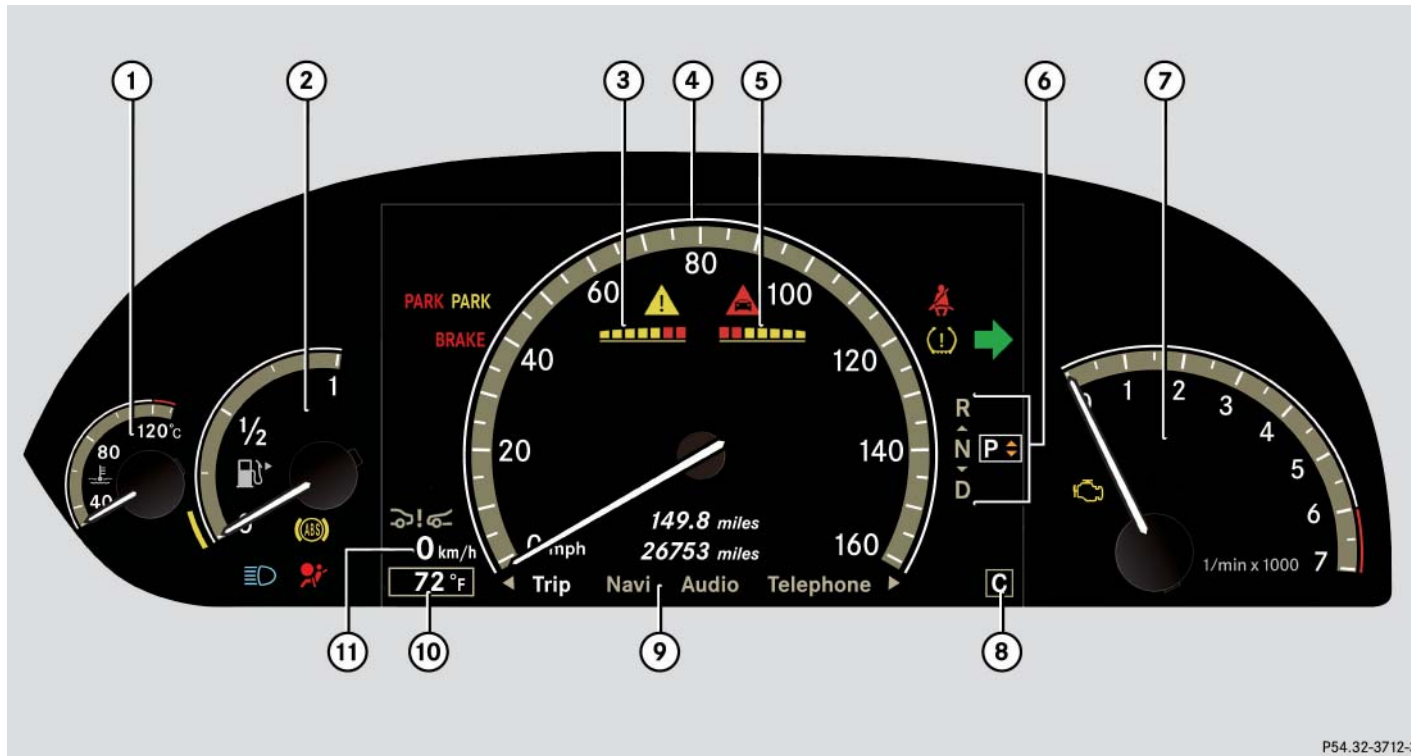

## At a glance


 
### Instrument cluster



P54.32-3712-31

Item	Page
① Coolant temperature gauge	444
② <b>Fuel gauge with:</b>	
Fuel tank reserve warning lamp	683
 High beam headlamp indicator lamp	403
 ABS indicator lamp	628
 SRS indicator lamp	637
③ Parktronic* /Park Assist* warning indicator for left front area	474, 479
④ <b>Multifunction display with:</b>	
Speedometer	
 Electronic parking brake warning or indicator lamps	630
 USA only	
 Canada only	


Item	Page
 Brake warning lamp	629
USA only	
 Canada only	
 Seat belt telltale	635
 Combination low tire pressure/TPMS malfunction telltale, USA only	638
Low tire pressure* telltale, Canada only	
 Left turn signal indicator lamp	420
 Right turn signal indicator lamp	420
 ESP® warning lamp	634
 Distance warning lamp* <sup>1</sup>	79, 454, 634

Item	Page
⑤ Parktronic* /Park Assist* warning indicator for right front area	474, 479
⑥ Gear position/range indicator	435
⑦ <b>Tachometer with:</b>	
 Engine malfunction indicator lamp	632
⑧ Selected program mode indicator	437
⑨ Main menu for control system, multifunction display	287
⑩ Outside temperature	445
⑪ <b>Display with:</b>	
Additional speedometer	306
 PRE-SAFE® Brake* indicator	303









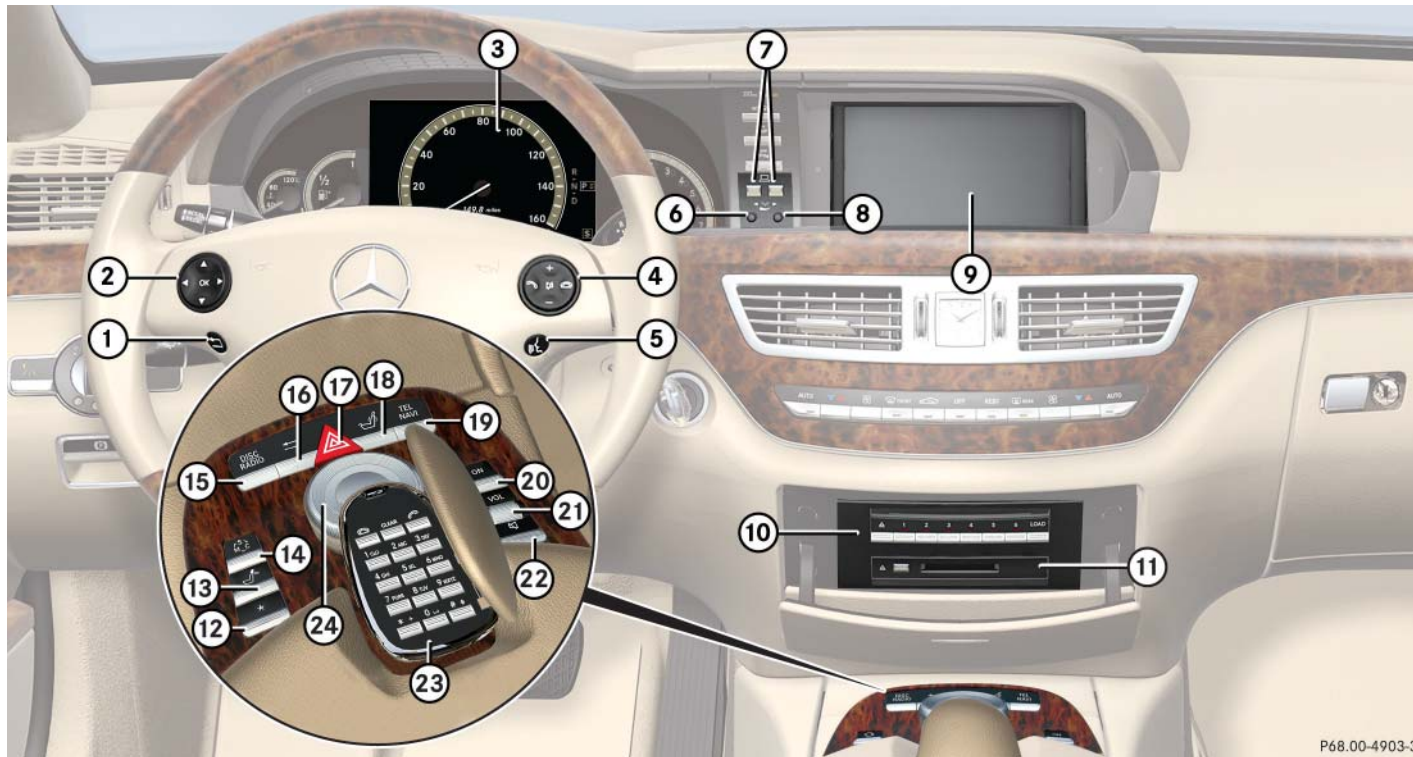

 
<sup>1</sup> Vehicles without DISTRONIC Plus\*: Warning lamp without function. It illuminates when the ignition is on. It should go out when the engine is running.


## At a glance

### Control systems

 

P68.00-4903-31

 Item	Page
①  to cancel Voice Control back	311 288
②  to scroll up	
 to scroll down	
 to scroll to the right	
 to scroll to the left	
 to confirm selection	
③ Multifunction display	287
④  to take a call to dial to redial	299
 to end a call to reject an incoming call	299
 to increase volume	
 to decrease volume	
 to mute	

Item	Page
⑤  to activate Voice Control to accept a call	311 152
⑥ Instrument cluster illumination	444
⑦ Swivel COMAND display	89
⑧ COMAND display illumination	89
⑨ COMAND display	88
⑩ CD/DVD changer	120
⑪ PCMCIA card slot	121
⑫ Favorite button	263
⑬ Rear head restraints retract button	381
⑭ Program mode selector switch for:	
• automatic transmission shift program	436
• suspension tuning of Airmatic or ABC*	468 470


Item	Page
⑮ Shortcut button for:	
• CD/DVD	124
• radio	103
⑯ Back button	96
⑰ Hazard warning flasher	405
⑱ Seat menu	282
⑲ Shortcut button for:	
• telephone*	141
• navigation	195
⑳ COMAND on/off button	88
㉑ Volume control	98
㉒ Mute button	98
㉓ Telephone keypad	144
㉔ COMAND controller	90



## At a glance


### Center console

#### Upper part

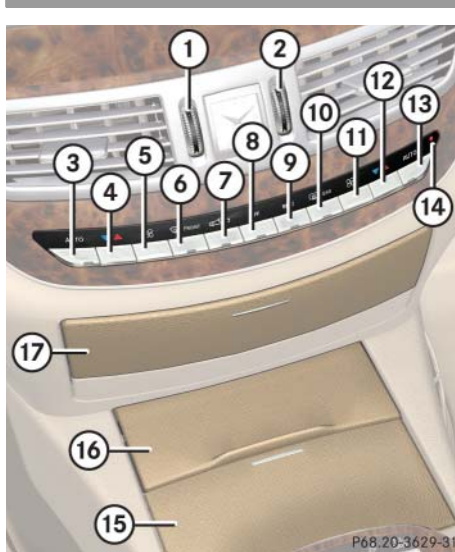

Item	Page	Item	Page
① Thumbwheel for air volume control for left center air vent	500	⑪ Manual fan speed adjustment, right	504
② Thumbwheel for air volume control for right center air vent	500	⑫ Temperature control, right	504
③ AUTO mode for air distribution and volume, left	503	⑬ AUTO mode for air distribution and volume, right	503
④ Temperature control, left	504	⑭ Alarm system indicator lamp	83
⑤ Manual fan speed adjustment, left	504	⑮ Cupholder	530
⑥ Front defroster	504	⑯ Cover of compartment with:	
⑦ Air recirculation	506	• Ashtray	536
⑧ Climate control on/off	503	• Lighter	537
⑨ Residual engine heat and ventilation (REST)	509	⑰ Cover of compartment with:	
⑩ Rear window defroster	506	• CD/DVD changer	120
		• PCMCIA card slot	121

▼ Overhead control panel

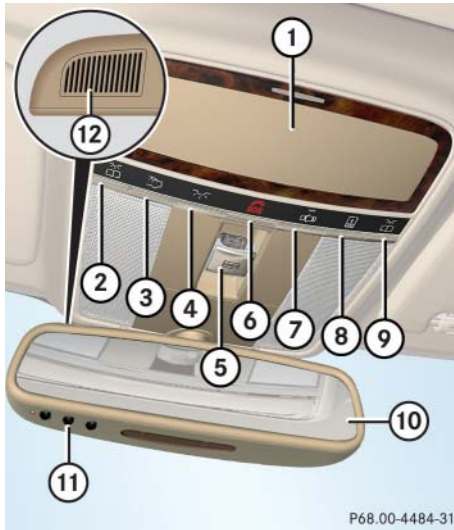


Item	Page
① Eyeglasses compartment	527
② Left reading lamp on/off	406
③ Rear interior lighting on/off	406
④ Front interior lighting on/off	406
⑤ Power tilt/sliding sunroof switch or panorama roof with power tilt/sliding panel*	518 521
⑥ Tele Aid (emergency call system) button	542
⑦ Interior lighting control	406

Item	Page
⑧ Opening/closing rear roller sunblinds	521
⑨ Right reading lamp on/off	406
⑩ Rear view mirror	388
⑪ Garage door opener	551
⑫ Hands-free microphone for	
• Tele Aid (emergency call system)	542
• Telephone*	539
• Voice Control	308

## At a glance

### Driver's door control panel

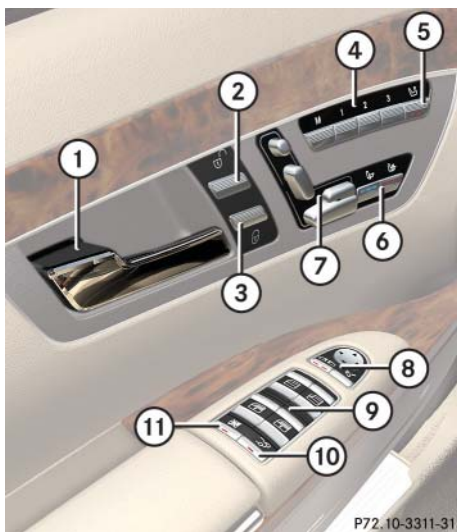

P72.10-3311-31

Item	Page
① Inside door handle	367
② Central unlocking switch	367
③ Central locking switch	367
④ Memory function (for storing seat, exterior mirror, and steering wheel settings)	392
⑤ Selector button for front passenger seat	376
⑥ Seat heating	377
Seat ventilation*	378
⑦ Seat adjustment	373

Item	Page
⑧ Exterior rear view mirror adjustment	388
Mirror folding function	389
⑨ Switches for opening/ closing door windows	410
Switches for opening/ closing rear door window sunshades*	412
⑩ Remote trunk opening/ closing* switch	511
⑪ Override switch for rear passenger compartment	64

▼ Rear door control panel




Item	Page
① Selection switch for right front passenger seat adjustment* <sup>1</sup>	376
② Memory function* (for storing seat settings) (Canada only)	392
③ Inside door handle	367
④ Seat adjustment	373
⑤ Seat heating*	377
Seat ventilation*	378
⑥ Button for extending/retracting panorama roof sunblind*	521
⑦ Switch for extending/retracting rear window sunshade	535
⑧ Switches for opening/closing door windows	410
Switches for opening/closing rear side window sunshades*	412

<sup>1</sup> This switch is located on the right rear passenger side only.

## At a glance

### Storage compartments

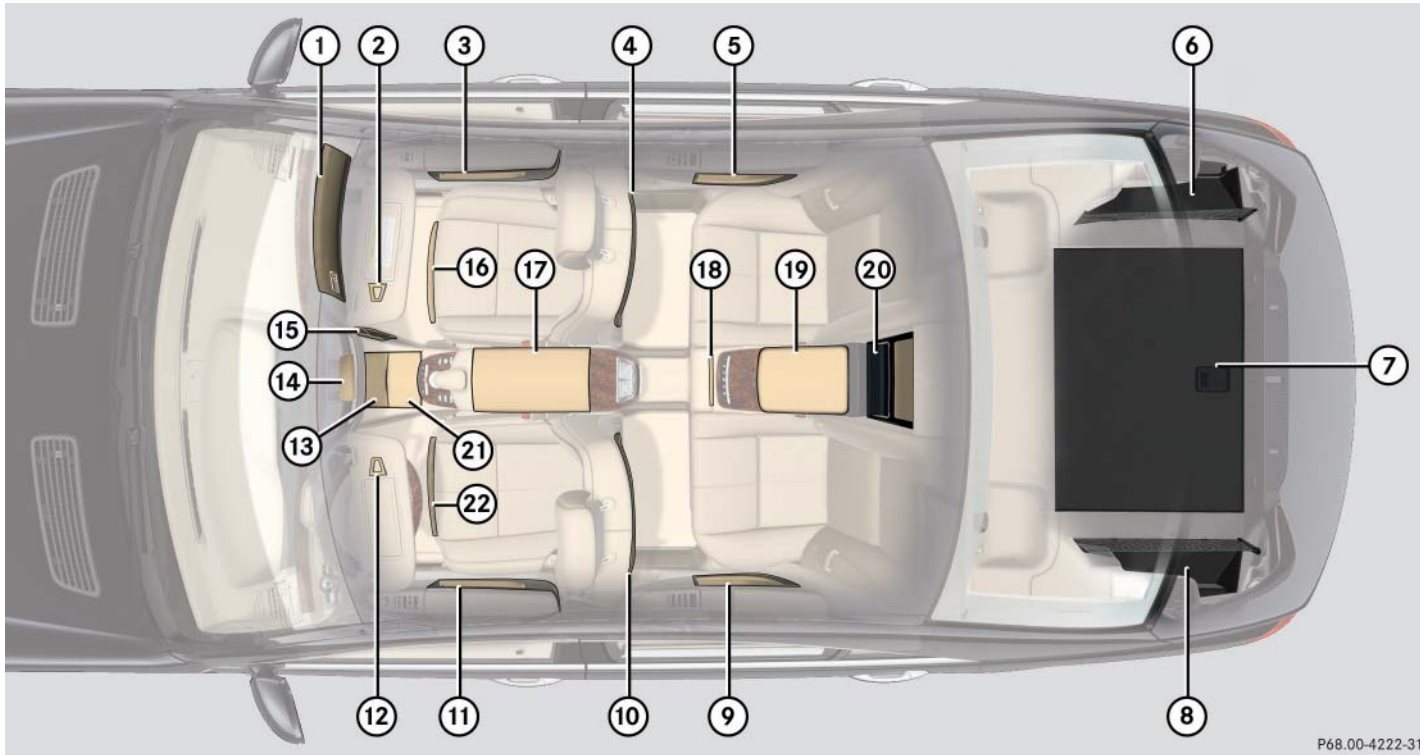

Storage compartments

Item	Page
① Glove box	526
② Document holder in sun visor	534
③ Door pocket	
④ Ruffled storage pocket	530
⑤ Door pocket	
Ashtray	536
⑥ Side storage pocket in trunk	
Retainer for Operator's Manual pouch	533
⑦ Storage spaces under trunk floor	532
⑧ Side storage pocket in trunk	
⑨ Door pocket	
Ashtray	536

Item	Page
⑩ Ruffled storage pocket	530
⑪ Door pocket	
⑫ Document holder in sun visor	534
⑬ Ashtray	536
Cigarette lighter	537
⑭ Eyeglasses compartment in overhead control panel	527
⑮ Parcel net in front passenger footwell	528
⑯ Front passenger seat storage compartment with first aid kit	705
⑰ Front center armrest with	527
• Storage tray/telephone* compartment	
• Storage compartment	

Item	Page
⑱ Cupholder in the rear center armrest	530
Cupholder under the rear center storage compartment*	530
⑲ Rear center armrest with storage compartment	528
Storage compartment between rear seats	529
⑳ Rear storage box	529
㉑ Cupholder in the front center console	530
㉒ Driver's seat storage compartment	527

## At a glance

### Rear passenger compartment



Item	Page
① Cupholder under the rear center storage compartment*	530
② Cupholder in the rear center armrest	530
③ Control panel for rear multicontour seats*	383
④ Rear center armrest with storage compartment	528
⑤ Rear storage box	529

## Safety and Security

Occupant safety

Panic alarm

Driving safety systems

Anti-theft systems





## Safety and Security

### Occupant safety

In this section you will learn the most important facts about the restraint systems of the vehicle.

The restraint systems are

- Seat belts (▷ page 52)
- Child restraints (▷ page 58)
- Lower Anchors and Tethers for CHildren (LATCH) (▷ page 63)


Additional protection potential provide


- Supplemental Restraint System (SRS) with
  - Air bags (▷ page 42)
  - Air bag control unit (with crash sensors)
  - Emergency Tensioning Device (ETD) for seat belts (▷ page 55)
  - Seat belt force limiter (▷ page 55)
- Preventive occupant safety (PRE-SAFE®) (▷ page 57)
- Active head restraints (▷ page 56)


Air bag system components with


- The front passenger front air bag off indicator lamp (▷ page 51)
- Front passenger seat with Occupant Classification System (OCS) (▷ page 47)

Although independent systems, their protective functions work in conjunction with each other.

 For information on infants and children traveling with you in the vehicle and restraint systems for infants and children, see “Children in the vehicle” (▷ page 58).

The SRS system conducts a self-test when the ignition is switched on and in regular intervals while the engine is running. This facilitates early detection of malfunctions. The  indicator lamp in the instrument cluster (▷ page 28) comes on when the ignition is switched on and goes out no later than a few seconds after the engine has been started.

The SRS components are in operational readiness when the  indicator lamp is not lit when the engine is running.

A malfunction in the system has been detected if the  indicator lamp:

- fails to go out after approximately 4 seconds after the engine was started
- does not come on at all
- comes on after the engine was started or while driving

#### Warning!




Modifications to or work improperly conducted on restraint systems (such as seat belts and anchors, emergency tensioning devices, seat belt force limiters or air bags) or their wiring, as well as tampering with interconnected electronic systems, can lead to the restraint systems no longer functioning as intended.

Air bags or emergency tensioning devices, for example, could deploy inadvertently or fail to deploy in accidents although the deceleration threshold for air bag deployment is exceeded. Therefore, never modify the restraint systems. Do not tamper with electronic components or their software.

#### Warning!



In the event that the  indicator lamp comes on during driving or does not come on at all, the SRS self-check has detected a malfunction. For your safety, we strongly recommend that you contact an authorized Mercedes-Benz Center immediately to have the system checked; otherwise the SRS may not deploy when needed in an accident, which could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could also result in injury.

In addition, improper work on the SRS creates a risk of rendering the SRS inoperative or causing unintended air bag deployment. Work on the SRS must therefore only be performed by qualified technicians. Contact an authorized Mercedes-Benz Center.

If it is necessary to modify an air bag system to accommodate a person with disabilities, contact your local authorized Mercedes-Benz Center or call our Customer Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) for details.

## Safety and Security

### Occupant safety

#### Air bags

##### Warning!



Air bags are designed to reduce the potential of injury and fatality in certain frontal impacts (front air bags), side impacts (side impact air bags and window curtain air bags) or rollovers (window curtain air bags). However, no system available today can completely eliminate injuries and fatalities.

The deployment of the air bags temporarily releases a small amount of dust from the air bags. This dust, however, is neither injurious to your health, nor does it indicate a fire in the vehicle. The dust might cause some temporary breathing difficulty for people with asthma or other breathing trouble. To avoid this, you may wish to get out of the vehicle as soon as it is safe to do so. If you have any breathing difficulty but cannot get out of the vehicle after the air bag inflates, then get fresh air by opening a window or door.

##### Warning!



To reduce the risk of injury when the front air bags inflate, it is very important for the driver and front passenger to always be in a properly seated position and to wear their respective seat belt.

For maximum protection in the event of a collision always be in normal seated position with your back against the backrest. Fasten your seat belt and make sure that it is properly positioned on your body (▷ page 395).

Since the air bag inflates with considerable speed and force, a proper seating and hands on steering wheel position will help to keep you at a safe distance from the air bag. Occupants who are unbelted, out of position or too close to the air bag can be seriously injured or killed by an air bag as it inflates with great force in the blink of an eye:

- Sit properly belted in a position that is as upright as possible with your back against the seat backrest.

- Adjust the driver's seat as far as possible rearward, still permitting proper operation of vehicle controls. The distance from the center of the driver's breastbone to the center of the air bag cover on the steering wheel must be at least 10 inches (25 cm) or more. You should be able to accomplish this by a combination of adjustments to the seat and steering wheel. If you have any problems, please contact an authorized Mercedes-Benz Center.
- Do not lean your head or chest close to the steering wheel or dashboard.
- Keep hands on the outside of steering wheel rim. Placing hands and arms inside the rim can increase the risk and potential severity of hand/arm injury when driver's front air bag inflates.
- Adjust the front passenger seat as far as possible rearward from the dashboard when the seat is occupied.

- Occupants, especially children, should always sit as upright as possible, properly use the seat belts and use an appropriately sized infant restraint, toddler restraint, or booster seat recommended for the size and weight of the child.

Failure to follow these instructions can result in severe injuries to you or other occupants.

If you sell your vehicle, it is important that you make the buyer aware of this safety information. Be sure to give the buyer this Operator's Manual.

#### Warning!



Accident research shows that the safest place for children in an automobile is in the rear seat.

There is a possibility for a side impact air bag related injury if occupants, especially children, are not properly seated or restrained when next to a side impact air bag which needs to deploy rapidly in a side impact in order to do its job.

To help avoid the possibility of injury, please follow these guidelines:

- (1) Occupants, especially children, should never place their bodies or lean their heads in the area of the door where the side impact air bag inflates. This could result in serious injuries or death should the side impact air bag be deployed.
- (2) Always sit as upright as possible, properly use the seat belts, and for all children 12 years old and under, use an appropriately sized infant restraint,

toddler restraint, or booster seat recommended for the size and weight of the child.

- (3) Always wear seat belts properly.

If you believe that, even with the use of these guidelines, it would be safer for your rear seat occupants to have the rear mounted side impact air bags deactivated, then deactivation can be accomplished upon your written request to do so at your authorized Mercedes-Benz Center at an additional cost.

Please contact your local authorized Mercedes-Benz Center or call our Customer Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) for details.

## Safety and Security

### Occupant safety

**i** Air bags are designed to deploy only in certain frontal impacts (front air bags), and in side impacts (side impact and window curtain air bags) which exceed preset thresholds, and in certain rollovers (window curtain air bags). Only during these events will they provide their supplemental protection.

The driver and passengers should always wear their seat belts. Otherwise it is not possible for air bags to provide their supplemental protection.

In case of other types of impacts and impacts below air bag deployment thresholds, air bags will not deploy. The driver and passenger will then be protected to the extent possible by a properly fastened seat belt. A properly fastened seat belt is also needed to provide the best possible protection in a rollover.

We caution you not to rely on the presence of the air bags in order to avoid wearing your seat belt.

It is important to your safety and that of your passengers that you replace deployed air bags and repair any malfunctioning air bags to make sure the vehicle will continue to provide supplemental crash protection for occupants.

### Safety guidelines for the seat belt, emergency tensioning device and air bag

#### Warning!



- Damaged seat belts or seat belt that were highly stressed in an accident must be replaced and their anchoring points must also be checked. Only use seat belts installed or supplied by an authorized Mercedes-Benz Center.
- Air bags and pyrotechnic emergency tensioning devices (ETDs) are designed to function on a one-time-only basis. An air bag or ETD that is deployed must be replaced. PRE-SAFE<sup>®</sup> has electrically operated reversible pre-tensioners in addition to the pyrotechnic ETDs.

- Air bags and Emergency Tensioning Devices (ETDs) contain Perchlorate material, which may require special handling and regard for the environment. Check with your local government's disposal guidelines. California residents, see <http://www.dtsc.ca.gov/HazardousWaste/Perchlorate/index.cfm>.
- Do not pass seat belt over sharp edges. They could tear.
- Do not make any modification that could change the effectiveness of the seat belts.
- Do not bleach or dye seat belts as this may severely weaken them. In a crash they may not be able to provide adequate protection.

- Do not hang items such as coat hangers from the coat hooks or handles over the door. These items may turn into projectiles and cause head and other injuries when the window curtain air bag is deployed.
- Air bag system components will be hot after an air bag has inflated. Do not touch.
- Never place your feet on the instrument panel, dashboard, or on the seat. Always keep both feet on the floor in front of the seat.
- In addition, improper repair work on the SRS creates a risk of rendering the SRS inoperative or causing unintended air bag deployment. Work on the SRS must therefore only be performed by qualified technicians. Contact an authorized Mercedes-Benz Center.

- No modifications of any kind may be made to any components or wiring of the SRS. This includes changing or removing any component or part of the SRS, the installation of additional trim material, badges, etc. over the steering wheel hub, front passenger front air bag cover, outboard sides of the seat backrests, door trim panels, or door frame trims, and installation of additional electrical/electronic equipment on or near SRS components and wiring. Keep area between air bags and occupants free from objects (e.g. packages, purses, umbrellas, etc.).
- For your protection and the protection of others, when scrapping the air bag unit or emergency tensioning device, our safety instructions must be followed. These instructions are available from any authorized Mercedes-Benz Center.

- Given the considerable deployment speed, required inflation volume, and the textile structure of the air bags, there is the possibility of abrasions or other, potentially more serious injuries resulting from air bag deployment.

#### Warning!



Only use seat covers which have been tested and approved by Mercedes-Benz for your vehicle model. Using other seat covers may interfere with or prevent the deployment of the front side impact air bags or the rear side impact air bags. Contact an authorized Mercedes-Benz Center for availability.

When you sell your vehicle we strongly urge you to give notice to the subsequent owner that it is equipped with an SRS by alerting them to the applicable section in the Operator's Manual.

## Safety and Security

### Occupant safety

#### Front air bags



① Driver air bag

② Front passenger front air bag

Driver and front passenger front air bags are deployed:

- in the event of certain frontal impacts
- if impact exceeds a preset deployment threshold
- independently of the side impact air bags


**i** The front air bags in this vehicle have been designed to inflate in two stages. This allows the air bag to have different rates of inflation that are based on the rate of relevant vehicle deceleration as assessed by the air bag control unit.

On the front passenger-side, the front air bag deployment is additionally influenced by the passenger's weight category as identified by the Occupant Classification System (OCS) (▷ page 47).

The lighter the front passenger-side occupant, the higher the vehicle deceleration rate required for the second stage inflation of the air bag.

The air bags will not deploy in impacts which do not exceed the system's deployment thresholds. You will then be protected by the fastened seat belts.

The passenger front air bag will only be deployed if:

- the system, based on OCS weight sensor readings, senses that the front passenger seat is occupied
- the  **PASS AIR BAG OFF** indicator lamp in the center console is not lit (▷ page 51)
- the impact exceeds a preset deployment threshold

#### Side impact air bags



① Front side impact air bag

② Rear side impact air bag

The side impact air bags are deployed:

- in side impacts exceeding a preset deployment threshold
- on the impacted side of the vehicle
- independently of the front air bags

The front passenger side impact air bag ① will not deploy if the OCS senses that the front passenger seat is empty and the front passenger seat belt is not fastened (latch plate is not inserted into the buckle). With an empty front passenger seat and the seat belt fastened (latch plate properly inserted into buckle) the front passenger side impact air bag will deploy regardless of the empty seat.

The side impact air bags are not deployed in impacts which do not exceed the system's deployment threshold.

#### Window curtain air bags



#### ① Window curtain air bag

The side window curtain air bags are deployed:

- in side impacts exceeding a preset deployment threshold
- on the impacted side of the vehicle
- independently of the front air bags
- in certain vehicle rollovers

The side window curtain air bags are not deployed in side impacts which do not exceed the system's deployment threshold.

The window curtain air bags fill up the area indicated by the arrows.

#### Occupant Classification System

The Occupant Classification System (OCS) automatically turns the front passenger front air bag on or off based on the classified occupant weight category determined by weight sensor readings from the front passenger seat.

**i** The system does not deactivate the front passenger side impact air bag, the window curtain air bag and the emergency tensioning device.

Occupants must sit properly belted in a position that is as upright as possible with their back against the seat backrest and feet on the floor to be correctly classified. If the occupant's weight is transferred to another object in the vehicle (e.g. by leaning on armrests), the OCS may not be able to properly approximate the occupant's weight category.




## Safety and Security

### Occupant safety

Furthermore, the occupant weight may appear to increase or decrease due to the following: objects hanging on the seat, lodged underneath the seat, stuffed between the seat and middle console or the seat and door, other passengers pushing on the seat or objects applying pressure to the back of the seat.



**i** *If your seat, including your trim cover and cushion needs to be serviced in any way, take the vehicle to an authorized Mercedes-Benz Center.*

*Only seat accessories approved by Mercedes-Benz may be used.*

Both driver and the front passenger should always use the  indicator lamp as an indication of whether or not the front passenger is properly positioned.


#### Warning!





If the  indicator lamp illuminates when an adult or someone larger than a small individual is in the front passenger seat, have the front passenger re-position himself or herself in the seat until the  indicator lamp goes out, or check whether objects are caught under or around the seat.



More information about air bag display messages (> page 649).


In the event of a collision, the air bag control unit will not allow front passenger front air bag deployment when the OCS classified the front passenger seat occupant as being up to or less than the weight of a typical 12-month-old child in a standard child restraint or if the front passenger seat is sensed as being empty.


When the OCS senses that the front passenger seat occupant is classified as being up to or less than the weight of a typical 12-month-old child in a standard child restraint, the  indicator lamp will illuminate when the engine is started and remain illuminated, indicating that the front passenger front air bag is deactivated.


When the OCS senses that the front passenger seat is classified as being empty, the  indicator lamp will illuminate when the engine is started and remain illuminated, indicating that the front passenger front air bag is deactivated.

When the OCS senses that the front passenger seat occupant is classified as being heavier than the weight of a typical 12-month-old child seated in a standard child restraint or as being a small individual (such as a young teenager or a small adult), the  indicator lamp will illuminate for approximately 6 seconds when the engine is started and then, depending on occupant weight sensor readings from

the seat, remain illuminated or go out. With the  **PASS AIR BAG OFF** indicator lamp illuminated, the front passenger front air bag is deactivated. With the  **PASS AIR BAG OFF** indicator lamp out, the front passenger front air bag is activated.

When the OCS senses that the front passenger seat occupant is classified as an adult or someone larger than a small individual, the  **PASS AIR BAG OFF** indicator lamp will illuminate for approximately 6 seconds when the engine is started and then go out, indicating that the front passenger front air bag is activated.

If the  **PASS AIR BAG OFF** indicator lamp is illuminated, the front passenger front air bag is deactivated and will not be deployed.

If the  **PASS AIR BAG OFF** indicator lamp is not illuminated, the front passenger front air bag is activated and will be deployed:

- in the event of certain frontal impacts
- if impact exceeds a preset deployment threshold

- independently of the side impact air bags

If the front passenger air bag is deployed, the rate of inflation will be influenced by:

- the rate of relevant vehicle deceleration as assessed by the air bag control unit
- front passenger's weight category as identified by the Occupant Classification System (OCS).

#### Warning!



According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating position. Thus, we strongly recommend that children be placed in the rear seats whenever possible. Regardless of seating position, children 12 years old and under must be seated and properly secured in an appropriate infant or child restraint recommended for the size and weight of the child.

The infant or child restraint must be properly secured with the vehicle's seat belt, the seat belt and top tether strap, or lower anchors and top tether strap, fully in accordance with the child seat manufacturer's instructions.

Children can be killed or seriously injured by an inflating air bag. Note the following important information when circumstances require you to place a child in the front passenger seat:


 


- Your vehicle is equipped with air bag technology designed to turn off the front passenger front air bag in your vehicle when the system senses the weight of a typical 12-month-old child or less along with the weight of a standard appropriate child restraint on the front passenger seat.




## Safety and Security


### Occupant safety



- A child in a rear-facing child restraint on the front passenger seat will be seriously injured or even killed if the front passenger front air bag inflates in a collision which could occur under some circumstances, even with the air bag technology installed in your vehicle. The only means to completely eliminate this risk is to never place a child in a rear-facing child restraint in the front seat. We therefore strongly recommend that you always place a child in a rear-facing child restraint in the back seat.
- If you must install a rear-facing child restraint on the front passenger seat because circumstances require you to do so, make sure that the  indicator lamp is illuminated, indicating that the front passenger front air bag is deactivated. Should the  indicator lamp not illuminate or go out while the restraint is installed, please check installation. Periodically check the  indicator lamp while driving to make sure the  indicator lamp is illuminated.


If the  indicator lamp goes out or remains out, do not transport a child on the front passenger seat until the system has been repaired. A child in a rear-facing child restraint on the front passenger seat will be seriously injured or even killed if the front passenger front air bag inflates.

- If you have to place a child in a forward-facing child restraint on the front passenger seat, move the seat as far back as possible, use the proper child restraint recommended for the age, size and weight of the child, and secure child restraint with the vehicle's seat belt according to the child seat manufacturer's instructions. For children larger than the typical 12-month-old child, the front passenger front air bag may or may not be activated (▷ page 49).

 *Deployment of the driver front air bag does not mean that the front passenger front air bag also should have deployed.*


*The Occupant Classification System (▷ page 47) may have determined:*

- *that the seat was empty or occupied by the weight up to or less than that of a typical 12-month-old child seated in a standard child restraint – both instances where the system suppresses deployment of the front passenger front air bag even though the impact met the criteria and was of sufficient severity to deploy the driver front air bag.*
- *that the seat was occupied by a small individual (such as a young teenager or a small adult) or a child weighing more than the weight of a typical 12-month-old child in a standard child restraint – instances where the system may suppress deployment of the front passenger front air bag even though the impact met the criteria and was of sufficient severity to deploy the driver front air bag.*

The  **PASS AIR BAG OFF** indicator lamp is located on the dashboard to the right of the instrument cluster.





① Front passenger front air bag indicator lamp

The  **PASS AIR BAG OFF** indicator lamp ① will be illuminated, except with the SmartKey removed from the starter switch or with the starter switch in position 0 (▷ page 372).

### Warning!



If the  indicator lamp and the  **PASS AIR BAG OFF** indicator lamp are lit at the same time, there is a malfunction in the Occupant Classification System. The front passenger front air bag will be deactivated in this case.

Have the system checked as soon as possible by qualified technicians. Contact an authorized Mercedes-Benz Center.

Only have the seat repaired or replaced by an authorized Mercedes-Benz Center.

In order to ensure proper operation of the air bag system and OCS:

- Do not place more than 4.4 lbs (2 kg) into the ruffled storage bag on the back of the front passenger seat. Otherwise, the OCS may not be able to properly approximate the occupant weight category.
- Do not place objects under and/or around the front passenger seat.

- Do not hang anything from or attach any items to the seats.
- Do not stuff objects such as books between the middle console and the front passenger seat.
- Do not move the front passenger seat backwards against stiff objects.
- Sit properly belted in a position that is as upright as possible with your back against the seat backrest.



While seated, an occupant should not position him/herself in such a way as to cause the occupant's weight to be lifted from the seat bottom as this may result in the OCS being unable to correctly approximate the occupant's weight category.


- Do not lean on the armrests or lift yourself from the seat by using the handle over the door as this may cause the OCS to be unable to correctly approximate the occupant weight category.
- Read and observe all warnings in this chapter.

## Safety and Security

### Occupant safety


#### Self-test Occupant Classification System

After turning the SmartKey in the starter switch to position **1** or **2** or pressing the KEYLESS-GO\* start/stop button once or twice (▷ page 372), the  **PASS AIR BAG OFF** indicator lamp ① located in the center console illuminates. If an adult occupant is properly sitting on the front passenger seat and the system senses the occupant as being an adult, the  **PASS AIR BAG OFF** indicator lamp will illuminate and go out after approximately 6 seconds.

If the seat is not occupied and the system senses the front passenger seat as being empty, the  **PASS AIR BAG OFF** indicator lamp will illuminate and not go out.

#### Warning!



If the  **PASS AIR BAG OFF** indicator lamp should not illuminate, the system is not functioning. You must contact an authorized Mercedes-Benz Center before seating any child on the front passenger seat.

For more information, see the “Practical hints” section (▷ page 640).

#### Warning!



Never place anything between seat cushion (e.g. pillow), since it reduces the effectiveness of the Occupant Classification System. The bottom of the child seat must make full contact with the passenger seat cushion. An incorrectly mounted child seat could cause injuries to the child in case of an accident, instead of increasing protection for the child.

Follow the manufacturer’s instructions for installation of child seats.

#### Seat belts

The use of seat belts and infant and child restraint systems is required by law in all 50 states, the District of Columbia, the U.S. territories and all Canadian provinces.

Even where this is not the case, all vehicle occupants should have their seat belts fastened whenever the vehicle is in motion.

For more information, see “Fastening the seat belts” (▷ page 395).

**i** For information on infants and children traveling with you in the vehicle and restraint systems for infants and children, see “Children in the vehicle” (▷ page 58).

#### Warning!



Always fasten your seat belt before driving off. Always make sure all of your passengers are properly restrained.

Failure to wear and properly fasten and position your seat belt greatly increases your risk of injuries and their likely severity in an accident. You and your passengers should always wear seat belts.

If you are ever in an accident, your injuries can be considerably more severe without your seat belt properly buckled.

Without your seat belt buckled, you are much more likely to hit the interior of the vehicle or be ejected from it. You can be seriously injured or killed.

In the same crash, the possibility of injury or death is lessened if you are properly wearing your seat belt. Air bags can only protect as they are designed if the occupants are properly wearing their seat belts.

#### Warning!



Never ride in a moving vehicle with the seat backrest in an excessively reclined position as this can be dangerous. You could slide under the seat belt in a collision. If you slide under it, the seat belt would apply force at the abdomen or neck. That could cause serious or even fatal injuries. The seat backrest and seat belt provide the best restraint when the wearer is in a nearly upright position and the seat belt is properly positioned on the body.

#### Warning!



Never let more people ride in the vehicle than there are seat belts available. Make sure everyone riding in the vehicle is correctly restrained with a separate seat belt. Never use a seat belt for more than one person at a time.

#### Warning!



Damaged seat belts or seat belts that were highly stressed in an accident must be replaced and their anchoring points must also be checked.

Only use seat belts which have been approved by Mercedes-Benz.

Do not make any modifications to the seat belts. This can lead to unintended activation of the ETDs or to failure. ▷▷

## Safety and Security

### Occupant safety

- ▷▷ Do not bleach or dye seat belts as this may severely weaken them. In a crash they may not be able to provide adequate protection. Have all work carried out only by qualified technicians. Contact an authorized Mercedes-Benz Center.

#### Warning!



#### USE SEAT BELTS PROPERLY


- Seat belts can only work when used properly. Never wear seat belts in any other way than as described in this section, as that could result in serious injuries in case of an accident.
- Each occupant should wear their seat belt at all times, because seat belts help reduce the likelihood of and potential severity of injuries in accidents, including rollovers. The integrated restraint system includes SRS (driver air bag, passenger front air bag, side impact air bags, window curtain air bags for door windows), ETD (seat belt emergency tensioning device with seat belt force

limiters), and front seat knee bolsters. The system is designed to enhance the protection offered to properly belted occupants in certain frontal (front air bags and ETD with seat belt force limiters) and side (side impact and window curtain air bags) impacts which exceed preset deployment thresholds and in certain rollovers (window curtain air bags and ETD).

- Never wear the shoulder belt under your arm, against your neck or off your shoulder. In a frontal crash, your body would move too far forward. That would increase the chance of head and neck injuries. The seat belt would also apply too much force to the ribs or abdomen, which could severely injure internal organs such as your liver or spleen.
  - Never wear seat belts over rigid or breakable objects in or on your clothing, such as eyeglasses, pens, SmartKeys, etc., as these might cause injuries.
- Position the lap belt as low as possible on your hips and not across the abdomen. If the seat belt is positioned across your abdomen, it could cause serious injuries in a crash.
  - Never use a seat belt for more than one person at a time. Do not fasten a seat belt around a person and another person or other objects.
  - Seat belts should not be worn twisted. In a crash, you wouldn't have the full width of the seat belt to distribute impact forces. The twisted seat belt against your body could cause injuries.
  - Pregnant women should also always use a lap-shoulder belt. The lap belt portion should be positioned as low as possible on the hips to avoid any possible pressure on the abdomen.
  - Never place your feet on the instrument panel, dashboard or on the seat. Always keep both feet on the floor in front of the seat.

- When using a seat belt to secure infant restraint, toddler restraint, or booster seat, always follow the child seat manufacturer's instructions.


#### Enhanced seat belt reminder system


When the engine is started, the seat belt telltale  will always illuminate for 6 seconds to remind you and your passengers to fasten your seat belts.


If the driver's seat belt is not fastened when the engine is started, an additional warning chime will also sound for a maximum of 6 seconds or until the driver's seat belt is fastened.

If after these 6 seconds the driver's or the front passenger's seat belt (with the front passenger seat occupied) is not fastened with front doors closed,

- the seat belt telltale  remains illuminated for as long as either the driver's or front passenger's seat belt is not fastened.

- and if the vehicle speed once exceeds 15 mph (25 km/h), the seat belt telltale  starts flashing and a warning chime sounds with increasing intensity for a maximum of 60 seconds or until the driver's and the front passenger's seat belt are fastened.

If the driver's or the front passenger's seat belt remains unfastened after 60 seconds, the warning chime stops sounding, the seat belt telltale  stops flashing but continues to be illuminated.


The seat belt telltale  will only go out if both the driver's and the front passenger's seat belt (with the front passenger seat occupied) are fastened, or the vehicle is standing still and a front door is opened.


For more information, see "Practical hints" (▷ page 635).

#### Emergency tensioning device (ETD), seat belt force limiter

The seat belts for the front and rear outer seats are equipped with emergency tensioning devices and seat belt force limiters.

The ETD is designed to activate in the following cases:

- in frontal or rear-end impacts exceeding the system deployment threshold
- in side impacts exceeding the system's deployment threshold on the far side of the impact
- in certain vehicle rollovers
- if the restraint systems are operational and functioning correctly, see  indicator lamp (▷ page 637)

 *The ETDs for the front seats will only activate if the front seat belt is fastened (latch plate properly inserted into buckle).*

*The ETDs for the rear outer seats will activate with or without the respective seat belt fastened.*



## Safety and Security

### Occupant safety

In an impact, emergency tensioning devices remove slack from the seat belts in such a way that the seat belts fit more snugly against the body. Seat belt force limiters, when activated, are employed to help reduce the peak force exerted by the seat belts on occupants during a crash.

#### Warning!



A pyrotechnic emergency tensioning device (ETD) that was activated must be replaced.

When disposing of the pyrotechnic emergency tensioning device, our safety instructions must be followed. These are available at any authorized Mercedes-Benz Center.

PRE-SAFE® has electrically operated reversible pre-tensioners that do not require replacement after activation.

### Automatic comfort-fit feature seat belt

An automatic comfort-fit feature for the front seats and for the rear outer seats\* (only for vehicles with rear power seat\*) reduces the retracting force of the seat belts when they are in normal use.

### Active head restraints

The active head restraints are intended to offer the driver and front passenger increased protection from whiplash type injuries. In the event of a rear-end collision, the active head restraints on the driver's and front passenger's seats are designed to move forward in the direction of travel, providing the head with increased support earlier on in the collision sequence. The active head restraints move forward whether the seat is occupied or not.

#### Warning!



Do not attach any objects (e.g. hangers) to the head restraint posts. Otherwise, the active head restraints may not function properly or offer the degree of protection they were designed for in the event of an accident.

If the active head restraints have been triggered in an accident, the active head restraints must be reset. Otherwise, the active head restraints cannot offer any additional protection in the event of another rear-end collision.

For information on resetting the activated active head restraints, see “Resetting activated head restraints” (▷ page 710).

You cannot remove the active head restraint on the driver’s and front passenger’s seats.

For removal contact an authorized Mercedes-Benz Center.

#### Warning!



Only use seat or head restraint covers which have been tested and approved by Mercedes-Benz for your vehicle model. Using other seat or head restraint covers may interfere with or prevent the activation of the active head restraints. Contact an authorized Mercedes-Benz Center for availability.

#### Warning!



For your protection, drive only with properly positioned head restraints.

Adjust head restraint so that it is as close to the head as possible and the center of the head restraint supports the back of the head at eye level. This will reduce the potential for injury to the head and neck in the event of an accident or similar situation.

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

For information on head restraint adjustment, see “Head restraints” (▷ page 379).

#### Preventive occupant safety (PRE-SAFE®)

#### Warning!



The PRE-SAFE® system is intended to reduce the effects of an accident on properly seat-belted vehicle occupants. Despite having the PRE-SAFE® system in your vehicle, the possibility of injuries occurring as a result of an accident cannot be eliminated. Therefore, you should always drive carefully and adjust your driving to the prevailing road, weather, and traffic conditions.

Your vehicle automatically takes preventive measures to better protect the occupants in the following hazardous situations.

## Safety and Security

### Occupant safety

PRE-SAFE® takes action in the following instances:

- Emergency braking situations, e.g. when BAS (▷ page 69) is activated or when BAS Plus\* (▷ page 70) is strongly intervening.
- Critical dynamic driving situations, e.g. when the vehicle is understeering or oversteering because it has exceeded its physical limitations.
- Evasive steering maneuvers at speeds above 20 mph (30 km/h).

When you are driving faster than 20 mph (30 km/h), PRE-SAFE® takes the following measures in such situations:

- The front seat belts are pre-tensioned electrically.
- If the OCS senses that the front passenger seat is occupied and the seat is in an unfavorable position, it will be adjusted to a better position.

- If the vehicle is equipped with power adjustable rear seats\* and the passenger outer seats are in an unfavorable position, they will be adjusted to a better position.
- The system increases the air pressure in the air pockets (on the sides of the seat cushion and backrest) of the multicontour\* and/or drive-dynamic front seats\*.
- If the vehicle is understeering or oversteering, the tilt/sliding sunroof and the door windows also close until only a small gap remains.

Once the hazardous situation is over without an accident occurring, PRE-SAFE® loosens the seat belt pre-tension and decreases the air pressure in the air pockets of the multicontour and drive-dynamic seats\*. You can readjust all of the settings made by PRE-SAFE®.

**i** *If the closing procedure of the tilt/sliding sunroof or power windows is blocked, the tilt/sliding sunroof or power windows will stop and open slightly.*

If the seat belts do not release:

- ▶ Adjust the backrest or seat slightly to the rear until the seat belt tension is diminished.

The locking mechanism releases.

**!** *When moving the seat, make sure there are no items in the footwell or behind the seats. Otherwise you could damage the seats.*

### Children in the vehicle

If an infant or child is traveling with you in the vehicle:

- ▶ Secure the child using an infant or child restraint appropriate to the age and size of the child.
- ▶ Make sure the infant or child is properly secured at all times while the vehicle is in motion.

#### Warning!



Do not leave children unattended in the vehicle, even if they are secured in a child restraint system. The children could

- injure themselves on parts of the vehicle
- be seriously or fatally injured through excessive exposure to extreme heat or cold

Do not expose the child restraint system to direct sunlight. The child restraint system's metal parts, for example, could become very hot, and the child could be burned on these parts.

If children open a door, they could

- injure other persons
- get out of the car and injure themselves or be injured by following traffic

Unsecured or improperly positioned cargo increases a child's risk of injury in the event of

- strong braking maneuvers
- sudden changes of direction
- an accident

#### Infant and child restraint systems

We recommend all infants and children be properly restrained at all times while the vehicle is in motion.

All lap-shoulder belts except the driver's seat belt have special seat belt retractors for secure fastening of child restraints.

To fasten a child restraint, follow child restraint instructions for mounting. Then pull the shoulder belt out completely and let it retract. During seat belt retraction, a ratcheting sound can be heard to indicate that the special seat belt retractor is activated. The seat belt is now locked. Push down on child restraint to take up any slack.

To deactivate, release seat belt buckle and let seat belt retract completely. To deactivate the special seat belt retractor for the front passenger seat, the front passenger seat must be in the most backward position. The seat belt can again be used in the usual manner.

#### Warning!



Never release the seat belt buckle while the vehicle is in motion, since the special seat belt retractor will be deactivated.

**i** Information on child seats with mounting fittings for tether anchorages (> page 62).

For information on LATCH-type child seat mounts (> page 63).

The use of infant or child restraints is required by law in all 50 states, the District of Columbia, the U.S. territories and all Canadian provinces.

## Safety and Security

### Occupant safety

Infants and small children should be seated in an appropriate infant or child restraint system properly secured in accordance with the manufacturer's instructions for the child restraint, that complies with U.S. Federal Motor Vehicle Safety Standards 213 and 225 and Canadian Motor Vehicle Safety Standards 213 and 210.2.

A statement by the child restraint manufacturer of compliance with these standards can be found on the instruction label on the restraint and in the instruction manual provided with the restraint.

When using any infant or child restraint system, make sure to carefully read and follow all manufacturer's instructions for installation and use.

Please read and observe warning labels affixed to the inside of the vehicle and to infant or child restraints.

#### Warning!



According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating position. Thus, we strongly recommend that children be placed in the rear seats whenever possible. Regardless of seating position, children 12 years old and under must be seated and properly secured in an appropriately sized infant restraint, toddler restraint, or booster seat recommended for the size and weight of the child.

 
 
The infant or child restraint must be properly secured with the vehicle's seat belt, the seat belt and top tether strap, or lower anchors and top tether strap, fully in accordance with the child seat manufacturer's instructions.



Occupants, especially children, should always sit as upright as possible, properly use the seat belts and use an appropriately sized infant restraint, toddler restraint, or booster seat recommended for the size and weight of the child. Children can be killed or seriously injured by an inflating air bag. Note the following important information when circumstances require you to place a child in the front passenger seat:

- Your vehicle is equipped with air bag technology designed to turn off the front passenger front air bag in your vehicle when the OCS senses the weight of a typical 12-month-old child or less along with the weight of a standard appropriate child restraint on the front passenger seat.

## Safety and Security

### Occupant safety

- A child in a rear-facing child restraint on the front passenger seat will be seriously injured or even killed if the front passenger front air bag inflates in a collision which could occur under some circumstances, even with the air bag technology installed in your vehicle. The only means to completely eliminate this risk is to never place a child in a rear-facing child restraint in the front seat. We therefore strongly recommend that you always place a child in a rear-facing child restraint in the back seat.
- If you must install a rear-facing child restraint on the front passenger seat because circumstances require you to do so, make sure that the  indicator lamp is illuminated, indicating that the front passenger front air bag is deactivated. Should the  indicator lamp not illuminate or go out while the restraint is installed, please check installation.

  Periodically check the  indicator lamp while driving to make sure the lamp is illuminated. If the  indicator lamp goes out or remains out, do not transport a child on the front passenger seat until the system has been repaired.

A child in a rear-facing child restraint on the front passenger seat will be seriously injured or even killed if the front passenger front air bag inflates.

- If you have to place a child in a forward-facing child restraint on the front passenger seat, move the seat as far back as possible, use the proper child restraint recommended for the age, size and weight of the child, and secure child restraint with the vehicle's seat belt according to the child seat manufacturer's instructions. For children larger than the typical 12-month-old child, the front passenger front air bag may or may not be activated (▷ page 48).

#### Warning!



Infants and small children should never share a seat belt with another occupant. During an accident, they could be crushed between the occupant and seat belt.

A child's risk of serious or fatal injuries is significantly increased if the child restraints are not properly secured in the vehicle and/or the child is not properly secured in the child restraint.

Children too big for a toddler restraint must ride in seats using regular seat belts. Position shoulder belt across chest and shoulder, not face or neck. A booster seat may be necessary to achieve proper seat belt positioning for children over 41 lbs until they reach a height where a lap/shoulder belt fits properly without a booster. ▷▷

## Safety and Security


### Occupant safety

- ▷▷ When the child restraint is not in use, remove it from the vehicle or secure it with the seat belt to prevent the child restraint from becoming a projectile in the event of an accident.

Do not leave children unattended in the vehicle, even if the children are secured in a child restraint system. Unsupervised children in a child restraint system may use vehicle equipment and may cause an accident and/or serious personal injury.

#### Installation of infant and child restraint systems

This vehicle is equipped with tether anchorages for a top tether strap at each of the rear seating positions.

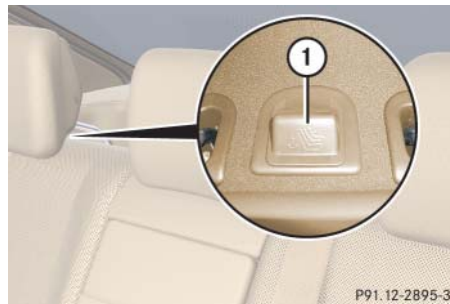


##### ① Cover of top anchorage ring

- ▶ Bring the rear power seat backrest\* to a fully upright position (▷ page 375).
- ▶ Remove cover ① from anchorage ring.
- ▶ Store cover ① in a convenient place (e.g. glove box).
- ▶ Guide tether strap between head restraint and top of seat back.

Head restraints must be positioned such that the top tether strap can pass freely between the head restraint and top of seat back.

- ▶ Make sure the tether strap is not twisted.

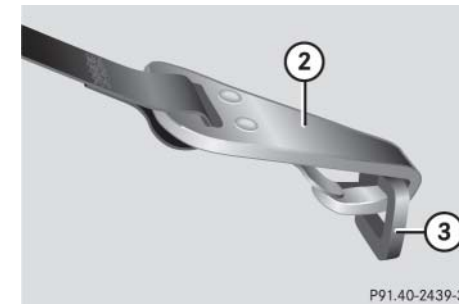

##### ② Hook

##### ③ Anchorage ring

- ▶ Securely fasten hook ②, which is part of the tether strap, to anchorage ring ③.

**i** For safety reasons, make sure hook ② has attached to ring ③ beyond the safety catch, as illustrated.

Once the top tether anchorage hook is attached, the child restraint itself can be secured. Tighten the top tether strap according to the child restraint manufacturer's instructions.

- Reinstall cover after removing the tether strap.

#### Warning!



Vehicles with rear power seats\*: Never adjust the rear seat position after installing the child restraint. Adjusting the rear seat position after installing the child restraint could damage the child restraint and/or introduce undesirable slack or tension into the seat belt and loosen or misposition the child restraint, lessening the effectiveness of the child restraint and thus increasing the chance or severity of injury in an accident.

#### Child seat anchors – LATCH type

This vehicle is equipped with two LATCH (Lower Anchors and Tethers for Children) type anchors (at each of the rear seats) for the installation of a LATCH child seat with the matching anchor fittings.

#### Warning!



Children too big for a toddler restraint must ride in seats using regular seat belts. Position shoulder belt across chest and shoulder, not face or neck. A booster seat may be necessary to achieve proper seat belt positioning for children over 41 lbs until they reach a height where a lap/shoulder belt fits properly without a booster.

Install child seat according to manufacturer's instructions.


The child seat must be firmly attached to the right and left side anchors.

An incorrectly mounted child seat may come loose during an accident which could result in serious injury or death to the child.

Damaged or impact damaged child seats or child seat mounting fittings must be replaced.

Do not leave children unattended in the vehicle, even if the children are secured in a child restraint system.

If you have not installed a child seat, the LATCH anchors are hidden by an upholstery cover.

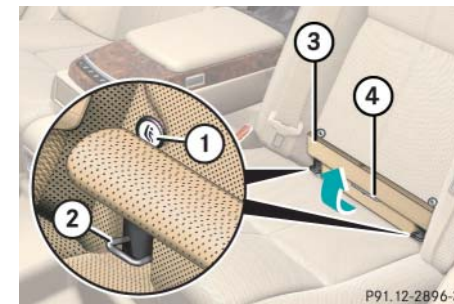

- ① Indicates the position of the anchors
- ② Anchors
- ③ Upholstery cover
- ④ Installation device





## Safety and Security

### Occupant safety

- ▷▷▶ Bring the rear power seat backrest\* to its fully upright position (▷ page 375).
- ▶ Fold upholstery cover ③ upward.
- ▶ Turn installation device ④ to a vertical position so that upholstery cover ③ does not fold down.
- ▶ Install child seat according to the manufacturer's instructions.

A rigid connection is established between the child seat and the body of the vehicle.

#### Warning!



Vehicles with rear power seats\*: Never adjust the rear seat position after installing the child restraint. Adjusting the rear seat position after installing the child restraint could damage the child restraint and/or introduce undesirable slack or tension into the seat belt and loosen or misposition the child restraint, lessening the effectiveness of the child restraint and thus increasing the chance or severity of injury in an accident.

**i** *The child seat must be firmly attached to the right and left side anchor fittings.*

*Make sure the seat belt for the center seat can operate freely with a child seat installed.*

*Non-LATCH type child seats may also be used and can be installed using the vehicle's seat belt system. Install child seat according to the manufacturer's instructions.*


### Override switch for rear passenger compartment

You can disable select functions in the rear passenger compartment for added safety (for instance when you have children riding in the rear passenger compartment).

You can disable the following functions in the rear passenger compartment:

- rear door window operation (▷ page 410)
- adjustment of front passenger seat from the rear\* (▷ page 376)
- rear center console lighter (▷ page 537)
- sunblinds for panorama roof\* (▷ page 521)
- rear window sunshade (▷ page 535) and rear side window sunshades (▷ page 412)

The override switch is located on the driver's door.

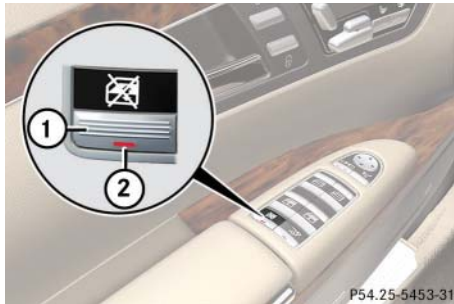

- ① Override switch
- ② Indicator lamp

► **Activating:** Press switch ①.

Indicator lamp ② comes on. The functions in the rear are disabled.

#### Warning!



Activate the override switch when children are riding in the back seats of the vehicle.

The children may otherwise injure themselves, e.g. by becoming trapped in the window opening.

When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock your vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

**i** Operation of the rear door windows with the switches located in the driver's door is still possible.

► **Deactivating:** Press switch ① again.

Indicator lamp ② goes out. The functions in the rear are enabled again.

## Safety and Security

### Panic alarm



① **PANIC** button

#### **i** USA only:

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:*

- (1) This device may not cause harmful interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

#### **i** Canada only:

*This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:*

- (1) This device may not cause interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

#### Activating

---

- ▶ Press and hold **PANIC** button for at least 1 second.

An audible alarm and flashing exterior lamps will operate briefly.

#### Deactivating

---

- ▶ Press **PANIC** button again.

or

- ▶ Insert the SmartKey or the SmartKey with KEYLESS-GO\* in starter switch.

or

- ▶ Press the KEYLESS-GO\* start/stop button (▷ page 372).

The SmartKey with KEYLESS-GO must be inside the vehicle.

#### ▼ Driving safety systems

This section contains information about Adaptive Brake Lights as well as the following driving safety systems:

- ABS (Antilock Brake System)
- Adaptive Brake
- BAS (Brake Assist System)
- BAS Plus\* (Brake Assist System Plus)
- EBP (Electronic Brake Proportioning)
- ESP® (Electronic Stability Program)
- 4MATIC (Four Wheel Electronic Traction System)
- PRE-SAFE® Brake\* (Preventive Occupant Safety Brake)

#### Warning!



The following factors increase the risk of accidents:

- Excessive speed, especially in turns
- Wet and slippery road surfaces
- Following another vehicle too closely

The driving safety systems described in this section cannot reduce these risks or prevent the natural laws of physics from acting on the vehicle.

Always adapt your driving style to the prevailing road and weather conditions and keep a safe distance to other road users and objects on the street.

**i** In winter operation, the maximum effectiveness of the ABS, Adaptive Brake, BAS, BAS Plus\*, EBP, ESP® and 4MATIC is only achieved with winter tires (▷ page 610), or snow chains as required.

#### ABS

#### Warning!




Do not pump the brake pedal. Use firm, steady brake pedal pressure instead. Pumping the brake pedal defeats the purpose of the ABS and significantly reduces braking effectiveness.

The Antilock Brake System (ABS) regulates the brake pressure so that the wheels do not lock during braking. This allows you to maintain the ability to steer your vehicle.

The ABS is functional above a speed of approximately 5 mph (8 km/h) independent of road surface conditions.

On slippery road surfaces, the ABS will respond even to light brake pressure.

The  indicator lamp in the instrument cluster (▷ page 28) comes on when you switch on the ignition (▷ page 370). It goes out when the engine is running.

## Safety and Security

### Driving safety systems

#### Braking

At the instant one of the wheels is about to lock up, a slight pulsation can be felt in the brake pedal, indicating that the ABS is in the regulating mode.

- Keep firm and steady pressure on the brake pedal while experiencing the pulsation.

Continuous, steady brake pedal pressure yields the advantages provided by the ABS, namely braking power and the ability to steer the vehicle.

The pulsating brake pedal can be an indication of hazardous road conditions and functions as a reminder to take extra care while driving.

#### Emergency brake maneuver

- Keep continuous full pressure on the brake pedal.

#### Warning!



When the ABS is malfunctioning, the BAS, BAS Plus\* and ESP® are also switched off.

When the ABS is malfunctioning, the wheels may lock during hard braking, reducing steering capability and extending the braking distance.

#### Warning!



The ABS cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase braking or steering efficiency beyond that afforded by the condition of the vehicle brakes and tires or the traction afforded. The ABS cannot prevent accidents, including those resulting from excessive speed in turns, following another vehicle too closely, or hydroplaning.

Only a safe, attentive, and skillful driver can prevent accidents.

The capabilities of an ABS equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

For more information, see "Practical hints" (▷ page 628).

#### Adaptive Brake

Adaptive Brake provides a high level of braking safety as well as increased braking comfort. It is coupled with ABS, ESP® and BAS. Adaptive Brake takes driver and vehicle characteristics into consideration, thus achieving an optimal braking effect.

#### Adaptive Brake Lights (S 600 and S 65 AMG, USA only)

The brake lamps flash in quick intervals while you are braking in order to signal to cars behind you that

- you are braking strongly at a speed of more than 30 mph (50 km/h)
- you are braking with the aid of BAS or BAS Plus\*

If you bring the car to a complete stop by hard braking at a speed of more than 40 mph (70 km/h), the hazard warning flasher automatically comes on as soon as the vehicle is at a standstill. While the vehicle is stationary, the brake lamps are continuously lit up.

Once you drive faster than 6 mph (10 km/h) afterward, the hazard warning flasher goes out.

#### BAS

The Brake Assist System (BAS) operates in emergency situations. If you apply the brakes very quickly, the BAS automatically provides full brake boost, thereby potentially reducing the braking distance.

- ▶ Apply continuous full braking pressure until the emergency braking situation is over.

The ABS will prevent the wheels from locking.

When you release the brake pedal, the brakes function again as normal. The BAS is then deactivated.

#### Warning!



When the BAS is malfunctioning, the brake system is still functioning normally, but without the additional brake boost available that BAS would normally provide in an emergency braking maneuver. Therefore, the braking distance may increase.

#### Warning!



The BAS cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase braking efficiency beyond that afforded by the condition of the vehicle brakes and tires or the traction afforded. The BAS cannot prevent accidents, including those resulting from excessive speed in turns, following another vehicle too closely, or hydroplaning. Only a safe, attentive, and skillful driver can prevent accidents.

The capabilities of a BAS equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

For more information, see "Practical hints" section (▷ page 628).

## Safety and Security

### Driving safety systems

#### BAS Plus\*

The Brake Assist System Plus (BAS Plus) operates in emergency braking situations and uses radar sensors\* to assess the traffic situation. BAS Plus assists you in braking at speeds above approximately 20 mph (30 km/h).

When travelling in Canada in a vehicle not registered in Canada, you must switch off the radar sensor system\* (▷ page 307). Canadian law does not permit the use of the radar sensor system\* (▷ page 307) for vehicles from outside of Canada. When you switch off the radar sensor system\*, the following functions are deactivated:

- BAS Plus
- DISTRONIC Plus\* (▷ page 451)
- Park Assist\* (▷ page 476)
- PRE-SAFE® Brake\* (▷ page 77)

#### USA only:

*This device has been approved by the FCC as a “Vehicular Radar System”. The radar sensor is intended for use in an automotive radar system only. Removal, tampering, or altering of the device will void any warranties, and is not permitted by the FCC. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user’s authority to operate the equipment.*

#### Canada only:

*This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:*

- (1) This device may not cause interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.*

*Removal, tampering, or altering of the device will void any warranties, and is not permitted. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user’s authority to operate the equipment.*

#### Warning!



BAS Plus is a convenience system designed to assist the driver during vehicle operation. The responsibility for the vehicle speed and the distance to the vehicle ahead, including most importantly brake operation to assure safe stopping distance, always remains with the driver.

Always pay attention to traffic conditions even while BAS Plus is switched on. Otherwise, you may not be able to recognize dangerous situations until it is too late and could cause an accident resulting in personal or fatal injury to you or others.

BAS Plus detects obstacles that are in your driving path for a sufficient period of time to permit the system to recognize these obstacles. If you approach the detected obstacle quickly, BAS Plus calculates the level of brake power boost appropriate for the circumstance to supply when the driver applies the brakes.

When you step quickly on the brake pedal in an emergency braking situation, BAS Plus automatically regulates the brake power boost to a level that is suitable for the traffic situation.

If BAS Plus requires a particularly high brake power boost, PRE-SAFE® is activated at the same time.

- ▶ Keep constant pressure on the brake pedal until the emergency braking situation is over.

During this process, ABS prevents the wheels from locking up.

The brakes will resume normal operation after

- the brake pedal is released
- no obstacles are detected in your path
- the system no longer senses a risk of a collision

BAS Plus is deactivated.

BAS Plus can react to stationary obstacles such as standing or parked vehicles at road speeds of up to approximately 40 mph (70 km/h).

BAS Plus can only assist you when the radar sensors are switched on and functional. You can check whether the sensors are active by switching on DISTRONIC Plus\* (▷ page 451) or using the “*Radar Sensors*” menu (▷ page 307) in the instrument cluster control system.

#### Warning!



BAS Plus will only respond with brake assistance if it has clearly detected an object. Detection can be impeded by

- dirty or covered sensors
- snowfall or heavy rain
- disturbance from other radar sources
- strong radar reflection such as in parking garages

BAS Plus uses radar signals that are not reflected well by narrow objects and absorptive materials. For this reason BAS Plus will not react to

- persons and animals
- approaching traffic or cross-traffic

BAS Plus may not detect narrow vehicles driving in front of you, such as motorcycles and vehicles driving offset from your vehicle center.

After a hard collision or damage to the front of the vehicle from an accident, have the adjustment and operation of the radar sensors checked by an authorized Mercedes-Benz Center.

If BAS Plus is not available due to a radar sensor malfunction, the braking system will continue to function normally with full brake boost and full standard BAS function.



## Safety and Security

### Driving safety systems

#### EBP

The Electronic Brake Proportioning (EBP) enhances braking effectiveness by allowing the rear brakes to supply a greater proportion of the braking effort in straight line braking without a loss of vehicle stability.

#### Warning!




When the EBP is malfunctioning, the ABS, BAS, BAS Plus\* and ESP® are also switched off.


If the EBP is malfunctioning, the brake system will still function with full brake boost. However, the rear wheels could lock up during emergency braking situations, for example. You could lose control of the vehicle and cause an accident. Adapt your driving style to the changed driving characteristics.

#### ESP®

The Electronic Stability Program (ESP®) is operational as soon as the engine is running and monitors the vehicle's traction (force of adhesive friction between the tires and the road surface) and handling.

 
The ESP® recognizes when a wheel is spinning or if the vehicle starts to skid. By applying brakes to the appropriate wheel and by limiting the engine output, the ESP® works to stabilize the vehicle. The ESP® is especially useful while driving off and on wet or slippery road surfaces. The ESP® also stabilizes the vehicle during braking and steering maneuvers.

The ESP® warning lamp  in the instrument cluster flashes when the ESP® is engaged.

The ESP® warning lamp  in the instrument cluster comes on when you switch on the ignition (> page 370). It goes out when the engine is running.

#### Warning!



Never switch off the ESP® when you see the ESP® warning lamp  flashing in the instrument cluster. In this case proceed as follows:

- While driving off, apply as little throttle as possible.
- While driving, ease up on the accelerator.
- Adapt your speed and driving style to the prevailing road conditions.

Failure to observe these guidelines could cause the vehicle to skid.

The ESP® cannot prevent accidents resulting from excessive speed.

#### Warning!



The ESP® cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase the traction afforded. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only a safe, attentive, and skillful driver can prevent accidents. The capabilities of an ESP® equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

**i** *DISTRONIC Plus\* and cruise control are switched off when the ESP® engages.*

**i** *The ESP® will only function properly if you use wheels of the recommended tire size (▷ page 754).*

**!** *Vehicles without 4MATIC:  
Because the ESP® operates automatically, the engine and ignition must be shut off (SmartKey in starter switch position **0** or **1** or KEYLESS-GO start/stop button\* in position **0** or **1**) when*

- *the electronic parking brake is being tested on a brake test dynamometer*
- *the vehicle is being towed with the front/rear axle raised*

*Active braking action through the ESP® may otherwise seriously damage the brake system.*

*For information on vehicles with 4MATIC, see "Four wheel electronic traction system (4MATIC) with the ESP®" (▷ page 76).*

For more information, see "Practical hints" section (▷ page 634) and (▷ page 642).

#### Electronic traction system

The electronic traction system is a component of ESP®.

The electronic traction system improves the vehicle's ability to utilize available traction, especially under slippery road conditions by applying the brakes to a spinning wheel.

When you switch off the ESP®, the electronic traction system is still enabled.

#### Warning!



If you are driving too fast, the electronic traction system cannot reduce the risk of an accident.

The electronic traction system cannot prevent the natural laws of physics from acting on the vehicle.

## Safety and Security

### Driving safety systems

#### Switching off the ESP® (except S 63 AMG)

##### Warning!



The ESP® should not be switched off during normal driving other than in the circumstances described below. Disabling of the system will reduce vehicle stability in standard driving maneuvers.

To improve the vehicle's traction, turn off the ESP® in driving situations where it would be advantageous to have the drive wheels spin and thus cut into surfaces for better grip such as:

- when driving with snow chains
- in deep snow
- in sand or gravel


##### Warning!



Switch on the ESP® immediately if the aforementioned circumstances do not apply anymore. Otherwise the ESP® will not stabilize the vehicle when it is starting to skid or a wheel is spinning.


When you switch off the ESP®

- the ESP® does not stabilize the vehicle
- the engine output is not limited, which allows the drive wheels to spin and thus cut into surfaces for better grip
- the electronic traction system will still apply the brakes to a spinning wheel
- the ESP® continues to operate when you are braking
- you cannot activate the cruise control or the DISTRONIC Plus\*

**i** When the ESP® is switched off and one or more drive wheels are spinning, the ESP® warning lamp  in the instrument cluster flashes. However, the ESP® will then not stabilize the vehicle.




① ESP® off/on

- ▶ Press ESP® switch ① until the ESP® warning lamp  in the instrument cluster comes on.

The ESP® is switched off.

#### Warning!



When the ESP® warning lamp  is illuminated continuously, the ESP® is switched off.

Adapt your speed and driving to the prevailing road conditions and to the non-operating status of the ESP®.

**!** *Avoid spinning of a drive wheel for an extended period with the ESP® switched off. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.*

#### Switching off the ESP® (S 63 AMG only)

#### Warning!



The ESP® should not be switched off during normal driving. Disabling of the system will result in the following:

- no restriction to engine torque
- loss of system supported traction control

“ESP® OFF” is designed for driving on closed tracks when the natural oversteer and understeer characteristics are desired and requires a highly skilled and experienced driver able to handle these critical driving situations.

You could lose control of your vehicle and cause an accident.

Please be aware of these limits when you switch off the ESP®.


Do not switch off the ESP® when a spare wheel is mounted.

When you switch off the ESP®

- the ESP® does not stabilize the vehicle
- the engine output is not limited, which allows the drive wheels to spin and thus cut into surfaces for better grip
- the traction control will still apply the brakes to a spinning wheel
- the ESP® operates while you are braking
- you cannot activate the cruise control or the Distronic\*
- the cruise control or Distronic\* switch off if currently activated


## Safety and Security

### Driving safety systems

**i** When the ESP® is switched off and one or more drive wheels are spinning, the ESP® warning lamp  in the instrument cluster flashes. However, the ESP® will then not stabilize the vehicle.




① ESP® off/on

- ▶ With the engine running, press ESP® switch ① until the ESP® warning lamp  in the instrument cluster comes on.

The ESP® is switched off.

### Warning!




When the ESP® warning lamp  is illuminated continuously, the ESP® is switched off or is not operational due to a malfunction. Vehicle stability in standard driving maneuvers reduces.

Adapt your speed and driving to the prevailing road conditions and to the non-operating status of the ESP®.

**!** Avoid spinning of a drive wheel for an extended period with the ESP® switched off. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.

### Switching on the ESP®

- ▶ Press ESP® switch ①.

The ESP® warning lamp  in the instrument cluster goes out.

You are now again in normal driving mode with the ESP® switched on.


### Four wheel electronic traction system (4MATIC) with the ESP®

Models with all-wheel-drive only.

The 4MATIC improves the vehicle's ability to use available traction, e.g. during winter operation in mountains under snowy conditions, by applying power to all four wheels.

#### Warning!



If you see the ESP® warning lamp  flashing in the speedometer, proceed as follows:

- While driving off, apply as little throttle as possible
- While driving, ease up on the accelerator
- Adapt your speed and driving style to the prevailing road conditions

Failure to observe these guidelines could cause the vehicle to skid.

The ESP® cannot prevent accidents resulting from excessive speed.

**!** Do not tow with one axle raised.

*Otherwise the transfer case can be damaged, which is not covered by the Mercedes-Benz Limited Warranty.*

**!** Performance testing must only be conducted on a two-axle dynamometer.

*Otherwise the transfer case can be damaged, which is not covered by the Mercedes-Benz Limited Warranty.*

**!** Because the ESP® operates automatically, the engine and the ignition must be shut off (SmartKey in starter switch position **0** or **1** or KEYLESS-GO start/stop button\* in position **0** or **1**) when the parking brake is being tested on a brake test dynamometer.

*Active braking action through ESP® may otherwise seriously damage the front or rear axle brake system.*

*Operational tests with the engine running can only be conducted on a two-axle dynamometer.*

#### PRE-SAFE® Brake\* (vehicles with DISTRONIC Plus\* only)

PRE-SAFE® Brake\* can assist you in minimizing the risk of a rear-end collision with a vehicle in front of you and in reducing the severity of an accident. At speeds over approx 20 mph (30 km/h), it will

- warn you of a possible collision
- automatically begin to brake the vehicle lightly in a speed range of up to 112 mph (180 km/h)
- activate preventative occupant safety measures (PRE-SAFE®) (▷ page 57)

#### Warning!



PRE-SAFE® Brake is a convenience system designed to assist the driver during vehicle operation. The responsibility for the vehicle speed and the distance to the vehicle ahead, including most importantly brake operation to assure safe stopping distance, always remains with the driver. ▷▷

## Safety and Security

### Driving safety systems

▷▷ Always pay attention to traffic conditions even while PRE-SAFE® Brake is switched on. Otherwise, you may not be able to recognize dangerous situations until it is too late and could cause an accident resulting in personal or fatal injury to you or others.

PRE-SAFE® Brake will only assist you by automatically initiating braking if the driver and front passenger have their seat belts fastened.

Using the radar sensors, PRE-SAFE® Brake detects obstacles that are in your driving path for a sufficient period of time for the system to recognize it. If you approach a vehicle and PRE-SAFE® Brake has established that the distance to the vehicle ahead at your current speed is so close that PRE-SAFE® Brake will not be capable of slowing the vehicle sufficiently, the system will initially warn you visually and acoustically.

**i** *USA only:*  
*This device has been approved by the FCC as a "Vehicular Radar System". The radar sensor is intended for use in an automotive radar system only. Removal, tampering, or altering of the device will void any warranties, and is not permitted by the FCC. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

**i** *Canada only:*  
*This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:*

- (1) This device may not cause interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.*

*Removal, tampering, or altering of the device will void any warranties, and is not permitted. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

When travelling in Canada in a vehicle not registered in Canada, you must switch off the radar sensor system\* (▷ page 307). Canadian law does not permit the use of the radar sensor system\* (▷ page 307) for vehicles from outside of Canada. When you switch off the radar sensor system\*, the following functions are deactivated:

- BAS Plus\* (▷ page 70)
- DISTRONIC Plus\* (▷ page 451)
- Park Assist\* (▷ page 476)
- PRE-SAFE® Brake

#### Warning!




PRE-SAFE® Brake will only respond with brake assistance if it has clearly detected an object. Detection can be impeded by

- dirty or covered sensors
- snowfall or heavy rain
- disturbance from other radar sources
- strong radar reflection such as in parking garages

PRE-SAFE® Brake uses radar signals that are not reflected well by narrow objects and absorptive materials. For this reason BAS Plus will not react to

- persons and animals
- approaching traffic or cross-traffic

PRE-SAFE® Brake may not detect narrow vehicles driving in front of you, such as motorcycles and vehicles driving offset from your vehicle center.

When the distance to the forward vehicle is too small, the distance warning lamp  lights up in the instrument cluster. If you approach the forward vehicle very quickly, you will hear a warning tone.

If you do not apply the brakes yourself or maneuver around a sensed obstacle, the vehicle will automatically initiate light braking. PRE-SAFE® ([▷ page 57](#)) is activated when the distance to the vehicle ahead at your current speed is so close that PRE-SAFE® Brake will not be capable of slowing the vehicle sufficiently.

#### Warning!



PRE-SAFE® Brake brakes your vehicle with a maximum of  $13 \text{ ft/s}^2$  ( $4 \text{ m/s}^2$ ). This corresponds to about 40% of the maximum deceleration ability of your vehicle. This automatic braking is intended only to initiate the braking if the driver has not already done so. The driver must apply the brakes in order to prevent a collision.

PRE-SAFE® Brake applies the brake pedal automatically which results in the brake pedal moving. Therefore keep driver's foot area clear at all times, including the area under the brake pedal. Objects stored in this area may impair pedal movement which could interfere with the braking ability of the PRE-SAFE® Brake.

Do not place your foot under the brake pedal – your foot could become caught.




## Safety and Security

### Driving safety systems

To maintain the proper distance to the vehicle in front of you and thus prevent a rear-end collision, you must apply the brakes yourself.


- Immediately brake the vehicle to avoid a collision.

Under no circumstances should the driver await the intermittent warning sound before braking. See the following warning note.

The intermittent warning sound ceases and the distance warning lamp  goes out when the necessary distance to the vehicle ahead is again established.

#### Warning!



An intermittent warning sounds and the distance warning lamp  in the instrument cluster is illuminated if PRE-SAFE® Brake calculates that the distance to the vehicle ahead and your vehicle's current speed indicate that PRE-SAFE® Brake will not be capable of slowing the vehicle sufficiently to maintain the preset following distance, which creates a danger of a collision.

Immediately brake your vehicle to increase the distance between your vehicle and the vehicle driving in front of you. The warning sound is intended as a final caution that you have not interceded with your own braking inputs to avoid a potentially dangerous situation. Do not wait for the operation of the warning signal to intercede with your own braking, as that will result in potentially dangerous emergency braking which will not always result in an impact being avoided.

Tailgating increases the risk of an accident.


PRE-SAFE® Brake can react to stationary obstacles such as standing or parked vehicles at road speeds of up to approximately 40 mph (70 km/h).

#### Warning!



If you do not receive visual or acoustic warning signals, PRE-SAFE® Brake has either not recognized the collision risk, has been deactivated or is malfunctioning. Apply the brakes yourself to avoid a collision.

- **Activating and deactivating:** Activate or deactivate PRE-SAFE® Brake using the instrument cluster control system (▷ page 303).

After the function has been activated, indicator  appears on the left-hand side of the multifunction display.

PRE-SAFE® Brake does not always clearly interpret complex traffic situations. If a visual and/or acoustic warning is issued in an uncritical driving situation, or if the vehicle brakes lightly, you can interrupt the PRE-SAFE® Brake maneuver by

- pressing down all the way on the accelerator or using kickdown
- releasing the brake pedal

The PRE-SAFE® Brake maneuver is terminated immediately when

- you avoid the obstacle by evasive steering
- you drive less than 9 mph (15 km/h)
- an obstacle can no longer be identified ahead of you
- the system no longer senses the risk of a collision

**i** PRE-SAFE® Brake will remain passive while DISTRONIC Plus\* is switched on (▷ page 451).

After a hard collision or damage to the front of the vehicle from an accident, have the settings and operation of the radar sensors checked by an authorized Mercedes-Benz Center.

## Safety and Security

### Anti-theft systems

#### Immobilizer

The immobilizer prevents unauthorized persons from starting your vehicle.

When leaving the vehicle, always take the SmartKey or SmartKey with KEYLESS-GO\* with you, and lock the vehicle. The engine can be started by anyone with a valid SmartKey or SmartKey with KEYLESS-GO\* that is left inside the vehicle.

#### Activating

- ▶ **With the SmartKey:** Remove the SmartKey from the starter switch.
- ▶ **With the KEYLESS-GO\*:** Turn off the engine (▷ page 372) and open the driver's door.

#### Deactivating

- ▶ Switch on the ignition (▷ page 370).

**i** Starting the engine will also deactivate the immobilizer.

*In case the engine cannot be started (yet the vehicle's battery is charged), the system is not operational. Contact an authorized Mercedes-Benz Center or call 1-800-FOR-MERCEdes (in the USA), or 1-800-387-0100 (in Canada).*

#### Anti-theft alarm system

Once the alarm system has been armed, a visual and audible alarm is triggered when someone opens:

- a door
- the trunk
- the hood


The alarm will stay on even if the activating element (a door, for example) is immediately closed.

The alarm system will also be triggered when

- the vehicle is opened with the mechanical key
- a door is opened from the inside

To cancel the alarm after it has been triggered, see "Canceling the alarm" (▷ page 83).

**i** If the alarm stays on for more than 30 seconds, a call to the Response Center is initiated automatically by the Tele Aid system (▷ page 542) provided Tele Aid service was subscribed to and properly activated, and that necessary mobile phone, power supply and GPS coverage are available.

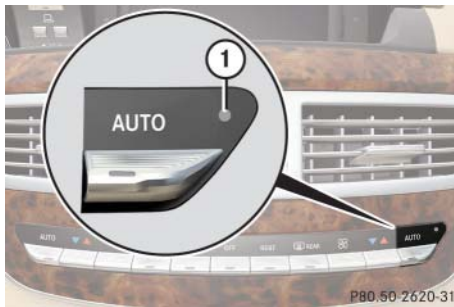

① Indicator lamp

- ▶ **Arming:** Lock your vehicle with the SmartKey or KEYLESS-GO\*.

The turn signal lamps flash three times to indicate that the vehicle is locked. The indicator lamp ① flashes to indicate that the alarm system is armed.

**i** If the turn signal lamps does not flash three times one of the following elements may not be properly closed:

- a door
- the trunk

Close the respective element and lock the vehicle again.



- ▶ **Disarming:** Unlock your vehicle with the SmartKey or KEYLESS-GO\*.

The turn signal lamps flash once to indicate that the alarm system is disarmed.

**i** The alarm system will rearm automatically again after approximately 40 seconds if no door was opened.

#### Canceling the alarm

To cancel the alarm, do one of the following:

- ▶ Insert the SmartKey or SmartKey with KEYLESS-GO\* in the starter switch.
- ▶ Press the  or  button on the SmartKey or SmartKey with KEYLESS-GO\*.

In vehicles with KEYLESS-GO\*:

- ▶ Grasp an outside door handle.  
The SmartKey with KEYLESS-GO must be within 3 ft (1 m) of the vehicle.
- ▶ Press the KEYLESS-GO start/stop button (▷ page 372).  
The SmartKey with KEYLESS-GO must be inside the vehicle.



## Control systems

COMAND operating safety  
COMAND introduction  
COMAND FM/AM radio  
COMAND satellite radio  
COMAND  
audio CD/audio DVD/MP3  
COMAND AUX  
COMAND video DVD  
COMAND telephone\*  
COMAND navigation  
COMAND system settings  
COMAND vehicle menu  
COMAND automatic climate control  
COMAND seats  
Instrument cluster control system  
Voice Control

## Control systems

### COMAND operating safety

#### Warning!



Any alteration of electronic components or software can cause malfunctions.

Radio, satellite radio, amplifier, CD/DVD changer, navigation module, telephone and Voice Control Systems\* are interconnected. Therefore, if one of the components is not operational, or has not been removed/ replaced properly, the function of other components could be impaired.

Such conditions might seriously impair the operating safety of your vehicle.

We recommend to have any service work on electronic components carried out by an authorized Mercedes-Benz Center.

#### Warning!



In order to avoid distraction which could lead to an accident, the driver should enter system settings while the vehicle is at a standstill, and operate the system only when permitted by road, weather and traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/ h), your car covers a distance of 44 feet (approximately 14 m) every second.

COMAND supplies you with information to help you select your route more easily and guide you conveniently and safely to your destination. For safety reasons, we encourage the driver to stop the vehicle in a safe place before answering or placing a call, or consulting the COMAND screen to read navigational maps, instructions, or downloaded information.

#### Warning!



While the navigation system provides directional assistance, the driver must remain focused on safe driving behavior, especially attention to traffic and street signs, and should utilize the system's audio cues while driving.

The navigation system does not supply any information on stop signs, yield signs, traffic regulations or traffic safety rules. Their observance always remains in the driver's personal responsibility. DVD maps do not cover all areas nor all routes within an area.

### ▼ COMAND introduction

COMAND (Cockpit Management and Data System) is an information and operating center for vehicle sound and communications systems, including the radio and navigation system, as well as other optional equipment (satellite radio, telephone\*, etc.).

#### **Availability of functions while the vehicle is in motion**

For safety reasons, certain COMAND functions are not available while the vehicle is in motion or they are only available to a limited extent. You will notice this, for example, by the fact that certain menu items cannot be selected or that the COMAND display shows a corresponding message.

#### **Switching COMAND on or off**

- ▶ Press the **ON** shortcut button in the center console (> page 88).

COMAND calls up the menu last selected.

**i** *When you switch off COMAND, you also switch off the currently playing audio source. During a telephone call, you cannot switch off COMAND.*

#### **COMAND components**

In your vehicle, COMAND can be used to operate:

- audio functions
- the navigation system
- the telephone\* and communication functions (SMS\*)
- external audio and video sources
- video DVD
- various vehicle settings

COMAND consists of the following:

- COMAND shortcut buttons
- COMAND display
- telephone\* keypad
- COMAND controller



## Control systems

### COMAND introduction

#### COMAND shortcut buttons

**i** During Rear View Camera\* operation (> page 487) it is not possible to operate the COMAND shortcut buttons.

Use the COMAND shortcut buttons to select main functions directly.




	Function	Page
①	Favorite button	263
②	Shortcut button for: <ul style="list-style-type: none"> <li>• CD/DVD</li> <li>• radio</li> </ul>	124 103
③	Back button	96
④	Seat menu	282
⑤	Shortcut button for: <ul style="list-style-type: none"> <li>• telephone*</li> <li>• navigation</li> </ul>	141 195
⑥	COMAND on/off button	87
⑦	Volume control	98
⑧	Mute button	98

Example:

- **Switching directly to Radio or CD menu:** Press once or twice.

#### COMAND display

In the COMAND display, you will find the function currently selected and the corresponding menus. The COMAND display is divided into several areas.

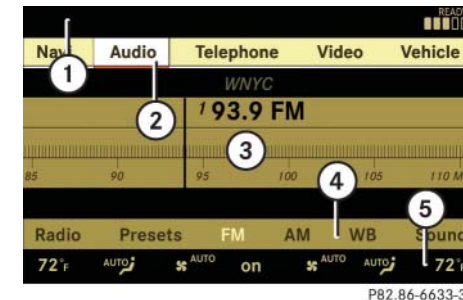

- ① Status line
- ② Main functions
- ③ Main area
- ④ Submenus
- ⑤ Climate control settings

A white bar under the main functions ② indicates the active area.

Once you have selected a main function ②, the main area ③ is active.


**i** The layout of the menus may vary depending on your vehicle's equipment. This manual shows the menus for a fully equipped vehicle.

### Instrument cluster multifunction display

This section describes features and controls via the COMAND controller, display and shortcut buttons only.

Please refer to the "Instrument cluster control system" section of this manual (> page 287) for function descriptions and operation of the instrument cluster multifunction display and multifunction steering wheel buttons as they relate to COMAND features described in this section.


### Adjusting COMAND display illumination

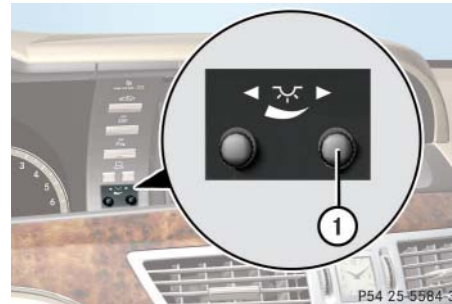

① Knob

- ▶ **Brightening illumination:** Turn knob ① clockwise.
- ▶ **Dimming illumination:** Turn knob ① counterclockwise.

### Swiveling COMAND display

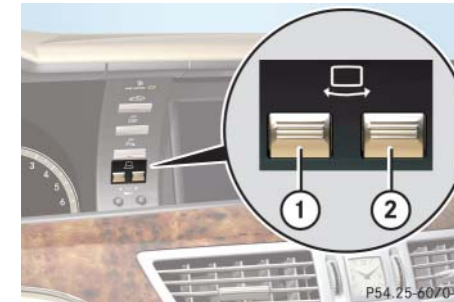

- ① Button for swiveling display to the left
- ② Button for swiveling display to the right

You can swivel the COMAND display to the left or right. The buttons are on the right-hand side of the instrument cluster.

## Control systems

### COMAND introduction

#### Telephone keypad

With the help of the telephone keypad, you can use your mobile phone if it is inserted in the cradle.



- ① Telephone keypad
- ② Folding cover

#### COMAND controller

Use the COMAND controller to select menu functions shown on the COMAND display.




- ① COMAND controller

You can operate the COMAND controller as follows:






- press briefly or press and hold
- rotate to the left or right
- slide to the left, right, up, down or diagonally

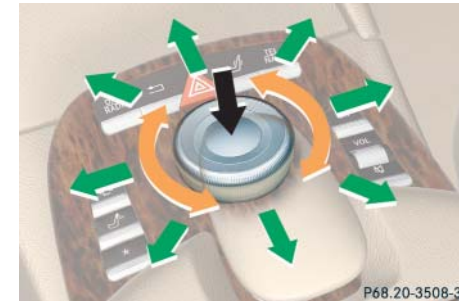In this way, you can move through the menus, select menu items or exit menus.

You can move through the menus either by rotating or sliding the controller.



Operating COMAND controller

Symbol	How to use the COMAND controller	Function
	▶ Press briefly.	<ul style="list-style-type: none"> <li>• Select menu item.</li> <li>• Exit full-screen image with Navi.</li> </ul>
	▶ Press and hold until the selected action has been carried out.	<ul style="list-style-type: none"> <li>• Save a station.</li> <li>• Accept a destination for navigation.</li> </ul>
	▶ Rotate.	<ul style="list-style-type: none"> <li>• Move through vertical or horizontal menus.</li> <li>• Move through text.</li> <li>• Program settings.</li> </ul>
	▶ Slide.	<ul style="list-style-type: none"> <li>• Move through vertical menus.</li> <li>• Exit horizontal menus.</li> </ul>
	▶ Slide and hold.	<ul style="list-style-type: none"> <li>• Move through a navigation map.</li> </ul>
	▶ Slide.	<ul style="list-style-type: none"> <li>• Move through horizontal menus.</li> <li>• Exit vertical menus.</li> </ul>
	▶ Slide and hold.	<ul style="list-style-type: none"> <li>• Fast forward or reverse for audio CD or audio DVD playback.</li> <li>• Move through a navigation map.</li> </ul>
	▶ Slide and hold.	<ul style="list-style-type: none"> <li>• Move through a navigation map.</li> </ul>

## Control systems

### COMAND introduction

#### Operating COMAND

##### Menu overview

The illustration below shows the structure of the main functions and their main menus.

Each main function has a main menu. Each menu item in the main menu in turn has several submenu items.

	Navi	Page	Audio	Page	Telephone*	Page
Commands/ menus	Map Display	198	FM/AM Radio	102	Telephone*	141
	Mode	201	Sat Radio	108	Address Book*	167
			CD	116	Telephone OFF*	143
			DVD-Audio	116		
			MP3	116		
			Audio OFF	101		
			Audio AUX	129		

	<b>Video DVD</b>	<b>Page</b>	<b>Vehicle</b>	<b>Page</b>
<b>Commands / menus</b>	Video DVD	132	Exterior Lighting Delayed Switch-off	264
	Submenu overview	134	Locator Lighting	265
	Switching to video DVD mode	134	Exterior Mirror Convenience Settings	266
	Pause playback	136	Automatic Locking	267
	DVD menu	138	Easy Entry/Exit Feature	268
	Video AUX	130	Interior Lighting Delayed Switch-off	270
			Interior Ambient Light	269
			Rear Window Sunshade	271
			Trunk Opening-height Restriction*	272

## Control systems

### COMAND introduction

#### Calling up the main menu



P82.86-7367-31

#### Illustration: audio main menu

You can call up the main menu of a main function in the following manner:

- ▶ **Moving to the main function line:** Slide  $\uparrow$  or rotate  $\uparrow$ .
- ▶ **Selecting a main function:** Slide  $\leftarrow$  or rotate  $\leftarrow$  or rotate  $\leftarrow$ .
- ▶ **Confirming selection:** Press  $\odot$ .

#### Vertical menus



P82.86-7372-31


- ▶ **Moving through the menu:** Slide  $\downarrow$  or rotate  $\downarrow$ .
- ▶ **Selecting a menu item:** Press  $\odot$ .
- ▶ **Exiting a menu without making a selection:** Slide  $\leftarrow$  in the opposite direction of the list orientation or press back button  $\leftarrow$ .

#### Horizontal menus



P82.86-6612-31

- ▶ **Moving through the menu:** Slide  $\leftarrow$  or rotate  $\leftarrow$ .
- ▶ **Selecting a menu item:** Press  $\odot$ .
- ▶ **Exiting a menu without making a selection:** Slide  $\downarrow$  in the opposite direction of the list orientation or press back button  $\leftarrow$ .

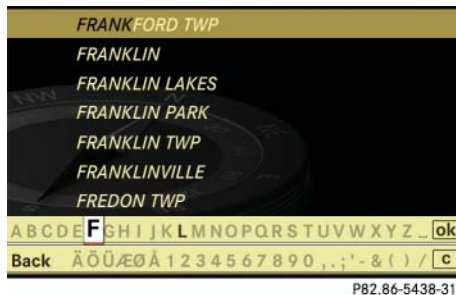**Entering characters**

P82.86-5438-31

Illustration: entering a navigation destination

**Selecting characters**

- ▶ Slide ←⊙→ or rotate Ⓜ.
- ▶ **Confirming selection:** Press ⊕.

COMAND completes your entry as soon as it can be clearly identified. In this case, you do not need to switch to the list.

**Deleting individual characters**

- ▶ Select and press **c** repeatedly in the bottom line.

**Deleting entire words or numbers**

- ▶ Press and hold **c** in the bottom line until the word or number is deleted.

**Exiting character entry**

- ▶ Select and press “Back” in the bottom line.

or


- ▶ Press back button  in the center console (▶ page 88).

**Switching to the list**

- ▶ Slide ↑⊙.
- ▶ Select and press **ok** in the second line from the bottom.
- ▶ **Exiting list:** Slide ←⊙ to select “Back”.

**Accepting first entry**

- ▶ Press ⊕ until you exit the character entry window.

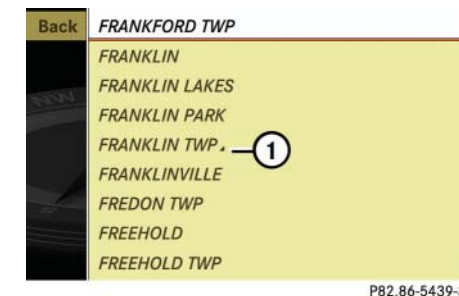**Selecting list item**

P82.86-5439-31

Illustration: list of towns and cities for navigation

- ① Symbol for other selection options (e.g. county)

- ▶ **Selecting a line:** Slide ↓⊙↑ or rotate Ⓜ.



▶▶




## Control systems

  
### COMAND introduction


- ▷▷▶ **Confirming selection:** Press .

Additional selection options are available for list entries featuring symbol . For example, cities marked with symbol  indicate that the selected country has more than one city featuring that name. Confirming such a list entry opens up another submenu.


#### Back button

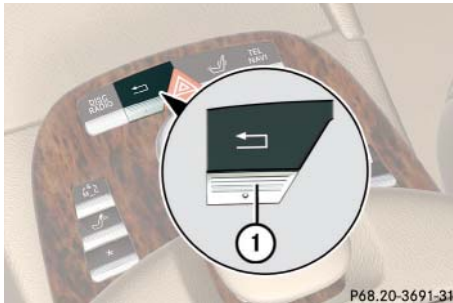

-  Back button

- ▶ **Switching to the next highest menu:** Press  briefly.

COMAND switches to the next highest menu level within the currently active operating mode.

- ▶ **Switching to the main menu:** Press and hold .


You will hear a signal, and COMAND switches to the main menu of the currently active operating mode.

#### Example of how to use COMAND

In the descriptions below, the main functions always serve as the starting point for locating the individual menu items.





Example:

“Audio” → “Audio” → “FM/AM Radio” → “Radio” → “Save Station”

 *In the COMAND display, you will see the submenu previously called up for each main menu.*

If you already see one of the submenus on the screen (e.g. the “Audio” → “Audio” → “Radio” submenu), it is not necessary to perform the first steps.

The individual steps for the above-mentioned example are described below.

- ▶ **Switching to the main function line:** Slide .
- ▶ **Selecting “Audio” main function:** Slide  or rotate .
- ▶ **Confirming selection:** Press .

The audio operating mode last selected appears.



P82.86-6634-31

## Control systems

### COMAND introduction

- ▶ **Selecting “Audio” in the main menu:**  
Slide .

- ▶ **Confirming selection:** Press .

A selection list with the functions of the “Audio” main menu appears.



P82.86-7367-31

- ▶ **Selecting “FM/AM Radio”:**  
Slide or rotate .
  - ▶ **Confirming selection:** Press .
- The FM/AM Radio menu appears.



P82.86-6636-31

- ▶ **Selecting “Radio”:** Slide or rotate .

- ▶ **Confirming selection:** Press .

The Radio submenu appears.



P82.86-6609-31

- ▶ Select “Save Station” from selection list by rotating or sliding .

- ▶ Select desired position.



P82.86-7335-31

- ▶ **Confirming selection:** Press .

The selected station is saved at the designated position. The display switches back to the Radio display.


## Control systems


### COMAND introduction

#### Main menus of COMAND



**i** The components and operating principles of COMAND can be found on (▷ page 87).

#### Sound

- ▶ **Muting:** Press the  shortcut button in the center console (▷ page 88).  
The sound of the current audio source is switched on or is muted.

**i** When the sound is muted, you will see the symbol  in the status line. When you change the audio source, the sound is automatically switched on. You will be able to hear announcements from the navigation system even when the sound is muted.

#### Switching off navigation announcements entirely


- ▶ **Canceling navigation message:**  
Briefly press  shortcut button during an announcement.
- ▶ **Switching off navigation messages:**  
Press and hold  during an announcement until the announcement is switched off.

You will see the message “*The driving instructions have been muted.*” for a short while.

**i** The announcements remain switched off even if you start a new route guidance or if COMAND is switched off/on with the **ON** button.

If you switch COMAND off by removing the SmartKey from the starter switch and then switch the ignition back on after more than 3 minutes, the announcements are automatically switched back on.

#### Adjusting volume

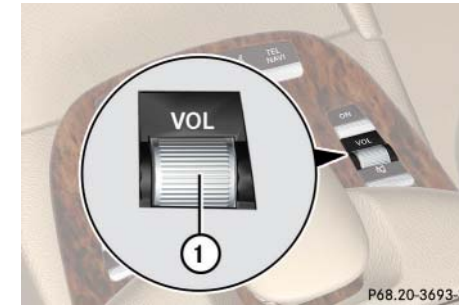

① Thumbwheel

- ▶ **Adjusting:** Turn **VOL** thumbwheel.  
The volume of the currently selected audio source changes.

**Volume of navigation announcements**

You can adjust the volume of the navigation announcements independently from the volume of the respective audio source.

During a navigation announcement:

- ▶ turn thumbwheel **VOL**.
- or
- ▶ press **+** or **-** on the multifunction steering wheel.

**Adjusting volume for telephone calls**

In hands-free mode, you can adjust the volume of a telephone call while the call is currently active.

During a telephone call:

- ▶ turn thumbwheel **VOL**.
- or
- ▶ press **+** or **-** on the multifunction steering wheel.

**Selecting sound settings**

You can select different sound settings for each individual audio source. The respective sound menu can be found via the sub-menu for which you wish to make settings.


Example:

“Audio” → “Audio” → “FM/AM Radio” → “Sound”

**Adjusting treble or bass**

- ▶ Select “Sound” → “Treble” or “Bass”.

The setting last selected is indicated by an outlined bar.

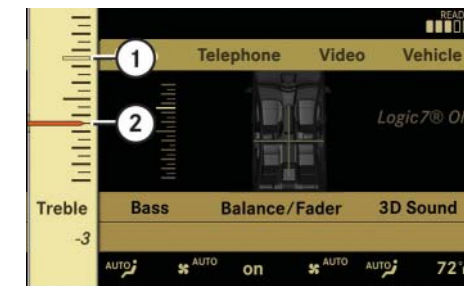

P82.86-6637-31

**Adjusting treble and bass**

- ① Setting last selected
  - ② Current setting
- ▶ **Changing setting:** Slide  $\downarrow \odot \uparrow$  or rotate  $\odot$  until desired treble or bass setting is reached.
  - ▶ **Exiting menu:** Press  $\odot$ ,  $\leftarrow$  or slide  $\leftarrow \odot \rightarrow$ .

The setting is saved.

## Control systems

### COMAND introduction


#### Adjusting balance or fader

Balance is used to determine whether the sound focus should be shifted toward the driver's side or the passenger's side.

Fader is used to determine whether the sound focus should be shifted toward the front or rear of the vehicle.

- ▶ Select "Sound" → "Balance/Fader".

The setting last selected is indicated by an outlined bar.

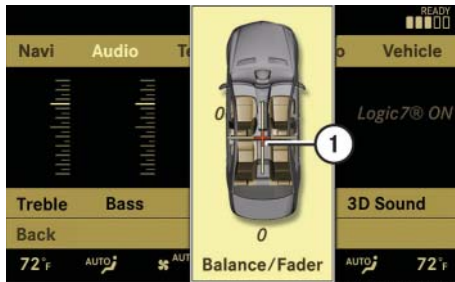

P82.86-6610-31

#### Adjusting balance and fader

- ① Current setting indicated by orange cross-hair symbol

- ▶ **Changing setting:** Slide ↓⊙↑ or ←⊙→ until desired balance/fader setting is reached.

- ▶ **Exiting menu:** Press ⊙ or ↩.

The setting is saved.

#### Surround sound

With surround sound, you can choose between "LOGIC7® ON" and "LOGIC7® OFF".

Harman/kardon LOGIC7® surround sound is available for the following operating modes:

- Audio DVD (MLP, DTS, PCM, and Dolby Digital audio formats)
- Video DVD (DTS, PCM, and Dolby Digital audio formats)
- Audio CD
- MP3
- Radio (FM, AM, WB, Satellite)
- PCMCIA
- AUX

**i** Since some DVDs contain both stereo as well as multi-channel audio formats, it may be necessary to adapt the audio format (▷ page 128).

**i** The "LOGIC7® ON" function of the harman/kardon LOGIC7® surround sound system makes it possible to play discrete 5.1 and stereo recordings with optimal surround sound for every passenger. Music on CDs or audio DVDs with high-resolution surround formats such as MLP, DTS or Dolby Digital is played back optimally.

For an ideal sound experience on all seats, LOGIC7® distributes 5.1 surround information via the 13-channel system architecture. The result is a sound as intended by the sound engineers during the original recording.

harman/kardon LOGIC7® converts all two-channel stereo sound material into multi-channel surround sound. With the help of LOGIC7®, surround information stored during the original recording are read out and distributed through the 13 channels. No effects are created during this process; only that which was already there becomes audible.


In addition, harman/kardon LOGIC7® moves the perceived sound source away from the individual loudspeakers, thus generating a natural 360° sound experience for every passenger.

**i** By selecting “LOGIC7® OFF”, all compatible formats as they are present on the medium are played back. Due to the vehicle’s spatial characteristics, an optimal sound experience is not ensured on all seats.

### Adjusting surround sound

With surround sound, you can choose between “LOGIC7® ON” and “LOGIC7® OFF”.

- ▶ Select “Sound” → “3D Sound”.

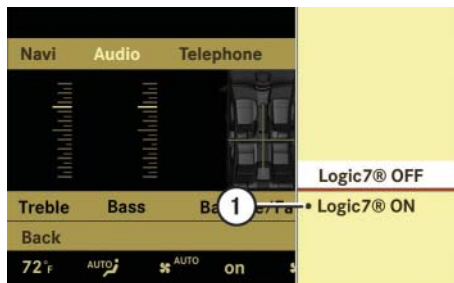

P82.86-6638-31

### Adjusting surround sound

- ① Current setting

- ▶ **Selecting a setting:** Slide  $\downarrow \odot \uparrow$  or rotate  $\leftarrow \odot \rightarrow$ .

- ▶ **Saving setting:** Press  $\odot$ .

The setting is saved and the menu is closed.

- ▶ **Exiting menu without saving changes:** Press  $\leftarrow$  or slide  $\leftarrow \odot \rightarrow$ .

- i** Please note the following:

- For an ideal sound experience at all seats, the balance and fader should be adjusted to the center of the passenger compartment with LOGIC7® switched on.
- The best sound results are achieved by playing high-quality audio CDs and audio DVDs.
- For MP3 tracks, the bit rate should be at least 128 kbit/s.
- Surround sound does not function for mono-signal sources.
- In the event of poor radio reception quality, e.g. inside a tunnel, you should switch off LOGIC7®, as a dynamic switch from Stereo to Mono could occur, resulting in temporary sound distortion.

- With some stereo recordings, the resulting sound may deviate from conventional stereo playback.

### Switching off/on the audio source

**i** When you insert an audio CD or audio DVD, it automatically becomes the active audio source.

- ▶ **Switching off:** Select “Audio” → “Audio” → “Audio OFF”.

The audio source is switched off; “Audio OFF” appears in the display.

- ▶ **Switching on:** Select “Audio”, then the desired audio source.

or

- ▶ Load CD/DVD (▷ page 120) or a PCMCIA card (▷ page 121).

## Control systems

### COMAND FM/AM radio

#### Warning!




Please devote your attention first and foremost to the traffic situation you are in.

Before your journey, please familiarize yourself with the radio functions.

Only use the COMAND when road and traffic conditions permit you to do so. Otherwise you could be involved in an accident in which you or others could be injured.

#### Submenu overview

 The components and operating principles of COMAND can be found on (> page 87).

Radio (except Weather Band)	Presets (except Weather Band)	Channel (only Weather Band)	FM or AM or WB	Sound
Station List (in FM waveband only)	Autostore	Channel list	Switch to FM waveband	Treble
Save Station	Preset station list		Switch to AM waveband	Bass
Frequency Entry			Switch to Weather Band	Balance/Fader
Show Station Info (in FM waveband only)				3D Sound



### Switching to radio mode

- ▶ Select “Audio”→ “Audio”→ “FM/AM Radio”.

or

- ▶ Press the  shortcut button once or twice.

The radio display appears once you have switched to radio mode. You will hear the station/channel last tuned in in the previously selected waveband, provided that the station/channel can be received.

 The number of times you have to press the  shortcut button depends on the operating mode currently selected.

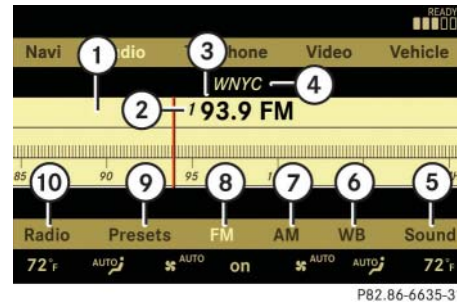



Illustration: radio mode in FM waveband

- ① Main area with frequency display
- ② Preset position of selected station
- ③ Frequency of selected station
- ④ Name of selected station
- ⑤ Sound settings
- ⑥ To switch to Weather Band
- ⑦ To switch to AM waveband
- ⑧ Selected waveband
- ⑨ Preset options
- ⑩ Radio options

 Station name display ④ is available for the FM waveband and can only be seen when it is switched on (▷ page 107) and if the station transmits a name.

### Switching wavebands

You can switch between the FM, AM and WB (Weather Band) wavebands.

- ▶ Select “Audio”→ “Audio”→ “FM/AM Radio”→ “FM” or “AM” or “WB”.

You will hear the station last tuned in on the selected waveband.

### Selecting stations/channels

You have the following selection options:

- The station list
- The search function
- The station presets
- The manual frequency entry
- The channel list



## Control systems




### COMAND FM/AM radio

#### Selecting stations using the station list

 
 
**i** The station list is only available for the FM waveband. It contains all the stations that can be currently received and is sorted by station frequencies.

- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “FM”.
- ▶ Select “Radio” → “Station List”.

The station list appears. The dot • in front of a list entry indicates the currently selected station. A number in front of the list entry indicates the preset position in the station preset memory.

- ▶ Select a station by rotating  or sliding  and press .

#### Selecting stations/channels using the search function

- ▶ Slide  or rotate  when the main area is selected.


Depending on the direction in which the controller is being slid or rotated, the system searches upward or downward and stops at the next receivable station/channel.

#### Selecting stations using station presets


 

**i** This function is not available for Weather Band.

- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “FM” or “AM”.
- ▶ Select “Presets”.



or

- ▶ Press  when the main area is selected.

The preset menu appears. The dot • in front of a preset position indicates that the currently selected station is saved there.

- ▶ Select station preset by rotating  or sliding  and press .

or

- ▶ Enter a position number with the telephone keypad using the  -  buttons (▷ page 90).

### Selecting stations by entering the frequency manually


**i** This function is not available for Weather Band.




- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “FM” or “AM”.

### Entering the frequency using the COMAND controller


- ▶ Select “Radio” → “Frequency Entry”.

The menu for manual frequency entry appears.


- ▶ **Exiting menu without making an entry:** Press  back button in the center console (▷ page 88).

- ▶ **Increasing or decreasing number:** Slide   or rotate .

**i** You can only select currently permitted numbers.

- ▶ **Selecting the next number:** Slide  →.


### ▶ Confirming frequency entry:



Press .

COMAND tunes in to the frequency entered.

- i** If you enter a frequency in the AM waveband which is outside the frequency range, COMAND tunes in to the next lowest frequency.

### Entering the frequency using the telephone keypad

- ▶ Press  on the telephone keypad (▷ page 90).

- ▶ Enter frequency using the  -  buttons.


COMAND tunes in to the frequency entered.

 
### Selecting channels using the channel list





**i** This function is only available for Weather Band.

- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “WB” → “Channel”.

or

- ▶ Press  when the main area is selected.

The channel list appears. The dot  in front of a list entry indicates the currently selected channel.

- ▶ Select channel by rotating  or sliding   and press .

## Control systems

### COMAND FM/AM radio

#### Saving stations

**i** Twenty stations can be saved in each wave-band except for Weather Band.

You have the following options:


- Saving stations manually
- Saving stations using Autostore

#### Saving stations manually

##### Option 1

- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “FM” or “AM”.
- ▶ Select “Radio” → “Save Station”.

##### Option 2





- ▶ Press  when the main area is selected.

##### Option 3

- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “FM” or “AM”.
- ▶ Select “Presets”.


All three of these will call up a station preset screen. The dot • in front of a preset position indicates that the currently selected station is saved there.




- ▶ **Selecting a preset position:**  
Slide   or rotate  .

#### Saving a station to a selected preset position

If you have called up the station preset screen using option 1:

- ▶ Press  briefly.

In options 2 and 3:


- ▶ Press and hold  until you hear a signal.

The station is saved.

#### Saving using autostore

**i** This function is not available for Weather Band. The Autostore function saves receivable stations as presets in order of their reception quality. All stations saved manually in the preset memory will be lost if COMAND finds 20 stations. If COMAND finds less than 20 stations, for example 9, then the stations saved in preset positions 1 – 9 will be overwritten.

##### Option 1

- ▶ Press  when the main area is selected.
- ▶ Select “Autostore”.

#### Option 2


- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “FM” or “AM”.
- ▶ Select “Presets” → “Autostore”.

#### Option 3

- ▶ Select “Audio” → “Audio” → “FM/AM Radio” → “Radio” → “Save Station” → “Autostore”.

#### Station name display

**i** In the FM waveband, COMAND can show the name of the station currently tuned in. Station name display ① can only be seen when it is switched on and if the station transmits a name.

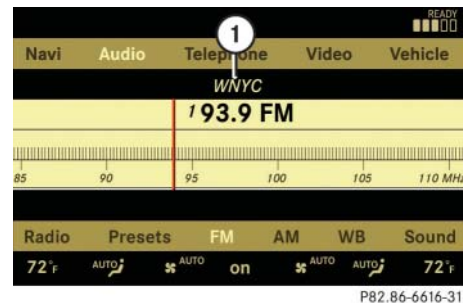

P82.86-6616-31

① Station name display

- ▶ **Switching the station name display on/off:** Select “Audio” → “Audio” → “FM/AM Radio” → “FM” → “Radio” → “Show Station Info”.

The display is switched on or off, depending on the previous setting. When the display is switched on, a checkmark appears in front of the “Show Station Info” menu item.



P82.86-6615-31

## Control systems

### COMAND satellite radio

#### Warning!




Please devote your attention first and foremost to the traffic situation you are in.

Before your journey, please familiarize yourself with the radio functions.

Only use the COMAND when road and traffic conditions permit you to do so. Otherwise you could be involved in an accident in which you or others could be injured.

#### Submenu overview

 *The components and operating principles of COMAND can be found on (> page 87).*

Sat Radio	Presets	Info	Category	Sound
Channel List	Station presets	Show program info	Select category	Treble
Save Channel				Bass
Channel Entry				Balance/Fader
Service				3D Sound

### Introduction to satellite radio

**i** A subscription to SIRIUS Satellite Radio service provider is required for the satellite radio operation described in this chapter. Contact an authorized Mercedes-Benz Center for details and availability for your vehicle.

SIRIUS Satellite Radio provides over 130 channels of digital-quality radio, including 100% commercial-free music, sports, news and entertainment. SIRIUS Satellite Radio uses a fleet of high-orbit satellites to broadcast 24 hours per day, coast to coast, in the contiguous U.S. and Canada.

This diverse, satellite-delivered programming is available for a monthly subscription fee.

For more information and service availability call the SIRIUS Service Center (1-888-539-7474), or contact

- [www.sirius.com](http://www.sirius.com) (USA)
- [www.siriuscanada.com](http://www.siriuscanada.com) (Canada)

**i** Satellite radio service may be unavailable or interrupted from time to time for a variety of reasons, such as environmental or topographic conditions and other things we can't control. Service might also not be available in certain places (e.g., in tunnels, parking garages, or within or next to buildings) or near other technologies. In such situations, the satellite radio's main menu shows the "Acquiring signal..." screen. At this point, the radio's functions are restricted to manual channel number entry (▷ page 113) and service info display (▷ page 115).

### Switching to satellite radio

▶ Select "Audio" → "Audio" → "Sat Radio".

or

▶ Press the  shortcut button once or twice. The Satellite radio menu appears if it was the last active radio mode.

The screen which then appears depends on the activation status of the satellite radio service.

The following options are possible:

- Satellite radio service is not activated
- Only the preview channel is activated
- Satellite radio service is fully activated

## Control systems

### COMAND satellite radio

#### Satellite radio service is not activated

The telephone number of the SIRIUS Service Center and the twelve-digit electronic serial number (SIRIUS-ID) of the particular receiver are displayed.



P82.86-5449-31

This information is required when calling the SIRIUS Service Center for an activation request.

**i** If a subscription is not included with system purchase, credit card information is required to activate your account. The activation process takes approximately 5 to 10 minutes after calling the SIRIUS Service Center.

**i** It is also possible to activate the satellite radio service online. To do so please visit SIRIUS Satellite Radio's website at [www.sirius.com](http://www.sirius.com) (USA) or [www.siriuscanada.com](http://www.siriuscanada.com) (Canada).

► **Closing screen:** Press .

#### Only the preview channel is activated

The satellite radio preview channel appears.




P82.86-6617-31

**i** If only the preview channel is activated, you cannot tune in another channel. If you try to do this, you will see the screen described in the section "Satellite radio service is not activated" (► page 110).

#### Satellite radio service is fully activated

The main satellite radio menu appears. You will hear the channel last tuned in, provided that it can be received.

## Main satellite radio menu

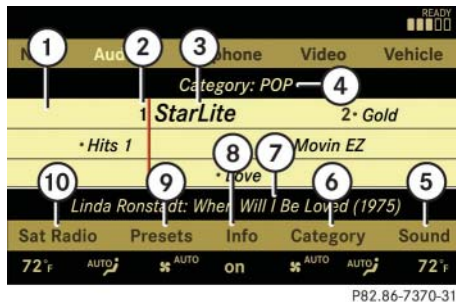

- ① Main area with channel display
- ② Preset position of selected channel
- ③ Selected channel
- ④ Selected program category
- ⑤ Sound settings
- ⑥ To select program category
- ⑦ Artist and song title
- ⑧ Other channel information
- ⑨ Preset options
- ⑩ Satellite radio options

**i** Main area ① can show all channels included in your subscription. Which channels are shown depends on the selected program category ④. Note that categories and channels shown in illustrations are dependent on programming content delivered by the service provider. Programming content is subject to change. Therefore, channel and categories shown in illustrations and descriptions contained in this manual may differ from the channels and categories delivered by the service provider.

## Selecting program category

**i** The channels are categorized. Categories allow you to tune to stations broadcasting a certain type of program.

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Category”.

The category list appears.

**i** If only the preview channel is activated, only certain categories are available on the list. Which categories these are depend on the service provider.

- ▶ Select category by rotating or sliding and press .

When selecting a channel using the channel search function or the channel list, you have access to the channels you subscribe to and which are included in the selected category.

**i** When you select the category “All Channels”, you have access to all the channels you subscribe to, regardless of category, when you are tuning in a channel using the channel search function or the channel list.



## Control systems

### COMAND satellite radio

#### Tuning in channels

You have the following selection options:

- The channel search function
- The channel presets
- The manual channel number entry
- The channel list

#### Tuning in channels using channel search function

**i** This function is not possible when only the preview channel is activated. If you try to tune in a channel in this instance, you will see the screen described in the section “Satellite radio service is not activated” (▷ page 110).

- ▶ Slide ←⊙→ or rotate Ⓜ when the main area is selected.

Depending on the direction in which the controller is being pressed or rotated, the system searches upward or downward and stops at the next receivable channel.

**i** Which channels are found by the channel search function depends on which channels you have subscribed to and the program category you have selected (▷ page 111).

#### Tuning in channels using channel presets

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Presets”.

or

- ▶ Press Ⓜ when the main area is selected.

The preset menu appears. The dot ● in front of a preset position indicates that this is the channel currently selected and being listened to.



P82.86-6619-31

- ▶ Select station preset and briefly press Ⓜ.

or

- ▶ Enter a position number with the telephone keypad using the 1 - 9 buttons (▷ page 90).


COMAND tunes in the corresponding channel as long as it is included in your subscription and is still available.

If the channel is not included in your subscription, you will see the message described in the section “Satellite radio service is not activated” (▷ page 110).

If the channel is no longer available or only the preview channel is activated, you will see the message “Invalid Channel”.

- ▶ **Closing message:** Press .


### Tuning in channels using manual channel number entry

 This function is not possible when only the preview channel is activated. If you try to tune in a channel in this instance, you will see the screen described in the section “Satellite radio service is not activated” (▷ page 110).





### Entering the channel number using the COMAND controller

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Sat Radio” → “Channel Entry”.

The menu for manual channel number entry appears.

- ▶ **Exiting menu without making an entry:** Press  back button in the center console (▷ page 88).

- ▶ **Increase or decreasing number:**

 
Slide   or rotate  .



- ▶ **Selecting next number:** Slide  .

- ▶ **Confirming channel entry:** Press .

Further operation depends on whether the selected channel number is valid or if the channel is included in your subscription.

### Entering the channel number using the telephone keypad

  - ▶ Press  on the telephone keypad (▷ page 90).

- ▶ Enter channel number using the  -  buttons.

Further operation depends on whether the selected channel number is valid or if the channel is included in your subscription.

### Channel number is valid and channel is included in subscription

COMAND tunes in the channel entered.

### Channel number is invalid

You will see the message “Invalid Channel”.

- ▶ **Closing message:** Press .

### Channel number is valid but channel is not included in subscription

You will see the screen described in the section “Satellite radio service is not activated” (▷ page 110).

- ▶ **Closing display:** Press .

## Control systems

### COMAND satellite radio

#### Tuning in channels using the channel list

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Sat Radio” → “Channel List”.

The channel list appears. The dot • in front of a list entry indicates the currently selected channel.

- ▶ Select channel by rotating or sliding and press .

*The contents of the channel list depends on which channels are included in your subscription and which program category you have selected (▷ page 111). If only the preview channel is activated, the channel list contains only the preview channel.*

#### Saving channels

*There are twenty preset positions available.*

##### Option 1

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Sat Radio” → “Save Channel”.

##### Option 2

- ▶ Press when the main area is selected.

##### Option 3

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Presets”.

All three of these will call up a preset menu. The dot • in front of a preset position indicates that this is the channel currently selected and being listened to.



- ▶ **Selecting a preset position:**

Slide or rotate .

#### Saving a channel to a selected preset position

If you have called up the channel preset screen using option 1:

- ▶ Press briefly.

In options 2 and 3:

- ▶ Press and hold until you hear a signal.

The channel is saved.

### Show program info

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Info”.

**i** If the program provider does not offer any information, the “Info” menu item cannot be selected.

You will see a screen that may contain the following information:

- Selected program category
- Selected channel
- Artist of the track currently being played
- Name of current track

**i** The program provider determines what information is displayed on the screen. COMAND shows no more than two lines per item of information. If an item of information is too long, COMAND shortens it.

- ▶ **Closing screen:** Slide ←⊙→ or press ⏻.

### Channel update

The service provider may conduct a channel update.

During the update, the message “Updating channels...” will appear on the display.

No functions can be operated in satellite radio mode during the update.

### Calling SIRIUS Service Center

**i** It may be necessary to call the SIRIUS Service Center if, for example:

- You want to cancel the subscription or re-subscribe at a later date.
- You forget to pay the bill.
- You sell the car to another person.

- ▶ Select “Audio” → “Audio” → “Sat Radio” → “Sat Radio” → “Service”.

The telephone number of the SIRIUS Service Center and the twelve-digit electronic serial number (SIRIUS-ID) of the particular receiver are displayed.

- ▶ **Closing screen:** Slide ←⊙→ or press ⏻.

## Control systems

### COMAND audio CD/audio DVD/MP3

#### Safety precautions

##### Warning!



COMAND is classified as a Class 1 laser product. You must not open the casing. There is a risk of exposure to invisible laser radiation if you open the casing, or if the casing is faulty or damaged.

COMAND does not contain any parts that you are able to maintain yourself. For safety reasons, all maintenance work must be carried out by qualified technicians.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

##### Warning!



Only carry out the following when the vehicle is stationary:

- Inserting a disc
- Ejecting a disc

There is a risk of accident by being distracted from road and traffic conditions if you load a CD/DVD while the vehicle is in motion.

#### Notes about MP3 mode

##### Permissible media for MP3 files

- CD-R and CD-RW
- DVD-R and DVD-RW
- PCMCIA card (▷ page 121)

##### Permissible file systems

- ISO9660/Joliet for CDs
- UDF for DVDs
- FAT16 or FAT32 for PCMCIA cards with storage medium

### Multisession CDs

For multisession CDs, the first session type of the CD determines how COMAND will process the CD.

For example, if the first session type is according to the audio CD standard and the second session type is according to the data CD standard containing MP3 tracks, COMAND will treat the CD as a conventional audio CD. This means that it is only possible to access the audio CD tracks. Access to the MP3 tracks is not possible.

Similarly, if the first session type is according to the data CD standard containing MP3 tracks and the second session type is according to the audio CD standard, COMAND will treat the CD as a data CD. This means that it is only possible to access the MP3 tracks. Access to the audio CD tracks is not possible.

### File structure on a disc

When you create an MP3 disc, the MP3 tracks can be organized in folders. A folder can also contain other folders. A disc can contain a maximum of 255 folders. Each folder can contain a maximum of 255 tracks and 255 folders. A disc can contain a maximum of 4000 tracks. Usually this number will not be reached because each minute of an MP3 track requires approximately 1 MB of storage space.

### Track and folder names

When you create an MP3 disc, you can assign names to the MP3 tracks and folders.

COMAND uses these names for the corresponding display in MP3 mode. Empty folders or folders which contain data other than MP3 tracks are not displayed by COMAND.

If MP3 files are saved in the root directory itself (uppermost directory on storage medium), the root directory will also be treat-

ed as a folder. COMAND will then show the name of the root directory as the folder name.

You must observe the following when assigning track names:

- Track names must have at least one character.
- Track names must have the extension “mp3”.
- There must be a period between the track name and the extension.

Example of a correct track name:  
Track1.mp3

COMAND is unable to recognize an MP3 track if:

- there is no period between the track title and the extension
- there is no extension

**i** COMAND does not support ID3 tags.

## Control systems

### COMAND audio CD/audio DVD/MP3

#### Permissible MP3 formats

COMAND supports the MPEG1 Audio Layer 3 format.

**i** *This format is generally known as "MP3".*

#### Permissible bit and sampling rates

- Fixed and variable bit rates up to 320 kbit/s
- Sampling rates of 24 kHz – 48 kHz

**i** *Only use MP3 tracks with a bit rate of at least 128 kbit/s and a sampling rate of at least 44.1 kHz. Smaller rates can cause a noticeable deterioration in sound quality. This is especially the case if you have activated a surround sound function.*

#### Notes on copyright

The music tracks that you create for MP3 mode and can play back in MP3 mode are generally subject to copyright protection in accordance with the applicable international and national regulations.

In many countries, reproductions are not permitted without the prior consent of the copyright holder, not even for private use.

Make sure that you know the applicable copyright regulations and that you comply with these.

If you own these rights yourself, e.g. for your own compositions and recordings, or the copyright holder has granted you permission, these restrictions do not apply.

#### Notes about audio DVD operation

COMAND can playback commercially available, prerecorded audio DVDs that bear the following label. You will usually find the label on the DVD booklet, the inlay, or the DVD itself.



**i** *Audio DVDs differ from recordable DVD-R and DVD-RW discs.*

Data on audio DVDs are stored either in uncompressed format or in lossless compressed format. The sound quality on audio DVDs is therefore better than on recordable DVDs that contain MP3 data because the MP3 format uses a lossy type of compression.

You cannot delete data from or record additional data to commercially available, prerecorded audio DVDs.

Please note the following information about CDs/DVDs and pay special attention to the notes on copied and/or self-written CDs/DVDs.

#### Notes about CDs/DVDs

**i** *Audio CDs with copy protection are not compatible with the CD audio standard and therefore may not be able to be played by COMAND.*

*There may be playback problems when playing copied discs.*

*There is a large variety of discs, disc-writing software and writers available. This variety means that there is no guarantee that the system will be able to play discs that you have written/copied yourself.*

*There may be playback problems if you use CD-R or CD-RW type discs you have copied yourself with a storage capacity of more than 700 MB. These CDs are not compatible with currently applicable standards.*

**!** *Do not affix stickers or labels to the discs. These could peel away and damage COMAND. COMAND is designed to hold discs which comply with the IEC 60908 standard. You can therefore only use discs with a maximum thickness of 1.3 mm.*

*If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage COMAND.*

*Do not use discs with an 8-cm diameter, even if they have an adapter.*

*Only use round discs with a 12-cm diameter.*



## Control systems

### COMAND audio CD/audio DVD/MP3

#### Notes about handling CDs/DVDs

- Only hold discs by the edge.
- Handle discs carefully to prevent playback problems.
- Avoid getting scratches, fingerprints and dust on discs.
- Clean discs from time to time with a commercially-available cleaning cloth. Do not wipe them with a circular motion, but only in straight lines from the center outwards.
- Only use a pen designed for such a purpose to label discs.
- Place discs back in their boxes after use.
- Protect discs from heat and direct sunlight.

#### Inserting CDs and DVDs

##### Warning!




Only insert a CD or DVD when the vehicle is stationary. There is a risk of accident by being distracted from road and traffic conditions if you load a CD/DVD while the vehicle is in motion.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

**i** If the CD/DVD has a printed side, this must face upwards when the CD/DVD is inserted. If neither side is printed, the side to be played should face downwards.

#### Loading the CD/DVD changer

The CD/DVD changer can hold up to a total of 6 audio CDs or DVDs.

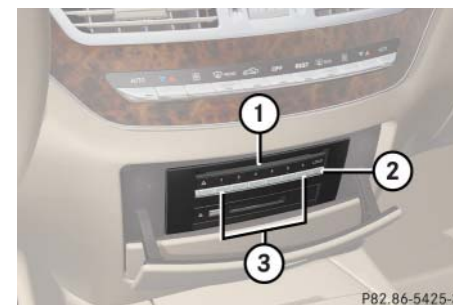

- ① Disc slot
- ② Load button (all magazine trays)
- ③ Magazine tray buttons 1 - 6

**i** Each magazine tray button ③ indicates the status of the corresponding magazine tray by means of an LED.

- LED off = magazine tray is empty
- LED constantly lit = magazine tray is loaded
- LED flashes = CD/DVD changer requesting disc to be loaded

**Loading an individual magazine tray**

- ▶ Press desired magazine tray button ③.  
If a disc is loaded, it will be ejected.
- ▶ Take disc out of slot ①.
- ▶ Wait until LED for magazine tray button ③ which you pressed flashes quickly.
- ▶ Insert disc into slot ①.  
The DVD changer draws the disc in and begins playback if:
  - it has been loaded correctly
  - it is a permissible type of disc

**Loading all six magazine trays**

- ▶ Press load button ②.  
The DVD changer checks the load status of all magazine trays and switches to the first empty tray.
- ▶ Wait until LED for corresponding magazine tray button ③ flashes quickly.

- ▶ Insert disc into slot ①.

The DVD changer switches to the next empty magazine tray.

**i** If a disc is not inserted within approximately 15 seconds COMAND resumes playback of the last disc.

- ▶ Repeat last two steps until all trays are loaded.

The DVD changer will play the last disc you loaded if:

- it has been loaded correctly
- it is a permissible type of disc

**Inserting a PCMCIA card**

**i** COMAND supports commercially available PCMCIA cards or PCMCIA card adapters with storage media that may not be designed for the temperatures which occur in the vehicle. You should therefore remove the PCMCIA card from the vehicle when not in use since extreme temperatures could damage these devices.



① Slot for PCMCIA card

- ▶ Insert PCMCIA card into slot ①.

The side with the contact must point towards the slot.

If the PCMCIA card contains a storage medium with MP3 tracks, COMAND switches to MP3 mode.

## Control systems

### COMAND audio CD/audio DVD/MP3


#### Ejecting CDs and DVDs

##### Warning!



Only eject a disc when the vehicle is stationary. You may otherwise be distracted from the traffic conditions and could cause an accident.

#### Ejecting from the DVD changer

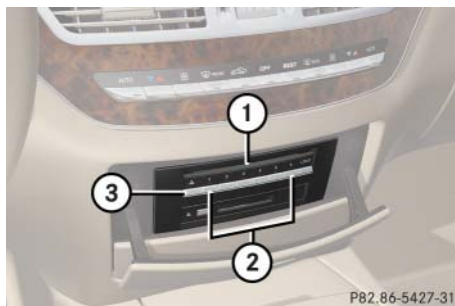

- ① Disc slot
- ② Magazine tray buttons 1 - 6
- ③ Eject button (all discs)

**i** If you eject one disc while playing another disc, the DVD changer interrupts playback. Playback continues once the disc has been ejected.

- ▶ **Ejecting one disc:** Press desired magazine tray button ②.
- ▶ Take disc out of slot ①.

If you do not take the disc out of slot ①, the DVD changer will draw it back automatically in approximately 15 seconds.

- ▶ **Ejecting all discs:** Press eject button ③.
- The DVD changer switches to the first loaded tray and ejects the disc.
- ▶ Take disc out of slot ①.
- The DVD changer switches to the next loaded magazine tray and ejects the disc.
- ▶ Repeat last step until magazine is empty.

#### Ejecting a PCMCIA card



- ① Eject button
- ② Slot for PCMCIA card

- ▶ Press eject button ① twice.
- The PCMCIA card is ejected.
- ▶ Take PCMCIA card out of slot ②.

### Submenu overview

**i** The components and operating principles of COMAND can be found on (> page 87).

CD or DVD-A or MP3	Pause/Stop/Play (audio DVD mode only)	Tracks/Track List/Tracks A-Z	Folders (MP3 mode only)	Changer	Sound
Normal Track Sequence	Pause playback	Show track list (audio CD mode and audio DVD mode)	Select folder	Select medium	Treble
Random Tracks	Stop playback	Display alphabetical track listing (MP3 mode only)			Bass
Random folder (MP3 mode only)	Restart playback				Balance/Fader
Repeat folder (MP3 mode only)					3D Sound
Group (DVD-Audio mode only)					

## Control systems

### COMAND audio CD/audio DVD/MP3

#### Switching to audio CD, audio DVD or MP3 mode


- ▶ Load CD/DVD (▷ page 120) or PCMCIA card (▷ page 121).

or


- ▶ Select “Audio” → “Audio”, then “CD”, “DVD-Audio” or “MP3”.

or

- ▶ Press the  shortcut button once or twice.

**i** The  shortcut button takes you directly to the previously set disc mode (audio CD, audio DVD or MP3-CD/DVD). The number of times you have to press the shortcut button depends on the previously set mode.


#### Example display in audio CD mode

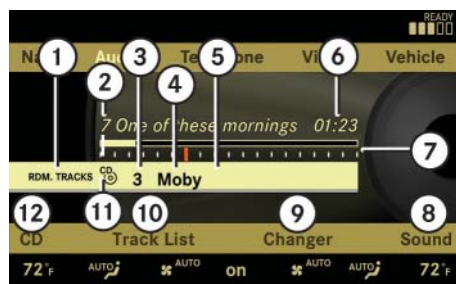

P82.86-6639-31

- ① Current playback option
- ② Track number
- ③ Disc number
- ④ Disc name (only if saved on the disc)
- ⑤ Track name (only if saved on the disc)
- ⑥ Track time
- ⑦ Graphic time and track display
- ⑧ Sound settings
- ⑨ Medium selection
- ⑩ To call up track listing
- ⑪ Disc type
- ⑫ Playback options


#### Example display in audio DVD mode

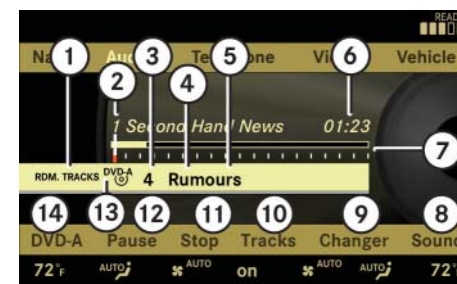

P82.86-6640-31

- ① Current playback option
- ② Track number
- ③ Disc number
- ④ Disc name (only if saved on the disc)
- ⑤ Track name (only if saved on the disc)
- ⑥ Track time
- ⑦ Graphic time and track display
- ⑧ Sound settings
- ⑨ Medium selection
- ⑩ To call up track listing
- ⑪ Stop function
- ⑫ Pause (“Play” appears if paused)
- ⑬ Disc type
- ⑭ Playback options

## Example display in MP3 mode

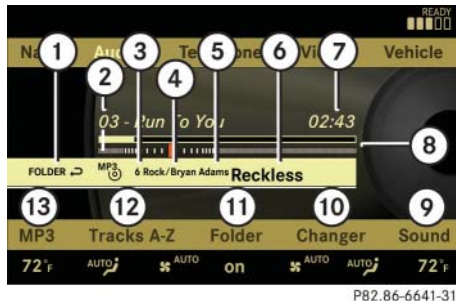

P82.86-6641-31

- ① Current playback option
- ② Medium type
- ③ Disc number (not on PCMCIA card)
- ④ Track name
- ⑤ Current folder path
- ⑥ Current folder
- ⑦ Track time
- ⑧ Graphic time and track display
- ⑨ Sound settings
- ⑩ Medium selection
- ⑪ Folder listing
- ⑫ Track listing
- ⑬ Playback options

## Stop function

**i** This function is only available in audio DVD mode.

- ▶ **Stopping playback:** Select “Audio” → “Audio” → “DVD-Audio” → “Stop”.
- ▶ **Restarting playback:** Select “Audio” → “Audio” → “DVD-Audio” → “Play”.

Playback starts at the beginning of the DVD.

## Pause function

## In audio CD, audio DVD and MP3 mode

- ▶ **Pausing playback:** Press  briefly.
- ▶ **Continuing playback:** Press  again briefly.

## Only in audio DVD mode

- ▶ **Pausing playback:** Select “Audio” → “Audio” → “DVD-Audio” → “Pause”.  
The “Pause” screen changes to “Play”.
- ▶ **Continuing playback:** Select “Audio” → “Audio” → “DVD-Audio” → “Play”.  
The “Play” screen changes to “Pause”.


## Control systems

### COMAND audio CD/audio DVD/MP3

#### Selecting CD/DVD/MP3 media

- ▶ Select “Audio” → “Audio”.
- ▶ Select “CD”, “DVD-Audio” or “MP3”.  
COMAND begins playback.
- ▶ **In audio CD, audio DVD and MP3 mode:** Select “Changer”.

 

or

- ▶ **In audio CD and audio DVD mode only:** Press  when the main area is selected.

The media list appears. The dot • indicates the current medium.




- ▶ Select a medium or folder.  
COMAND changes the medium.


or

- ▶ Enter a magazine tray number with the telephone keypad using the  -  buttons (▷ page 90).

#### Selecting a track

##### Selecting by skipping to tracks

- ▶ **Skipping forwards or backwards to a track (in CD or DVD mode only):**  
Rotate   .

 *Skipping forwards through the tracks skips to the next track. Skipping backwards through the tracks skips to the beginning of the current track if the track has been playing for more than 8 seconds. If the track has been playing for less than 8 seconds, it skips to the start of the previous track.*

*If you have switched on the “Random Tracks” playback option, the order of the tracks is random.*


#### Selecting from the track list

- ▶ Select “Audio” → “Audio”.
- ▶ Select “CD”, “DVD-Audio” or “MP3”.




 


##### Selecting a track using the COMAND controller


- ▶ Select “Tracks”, “Tracks A-Z” or “Track list”.

or

- ▶ **Only in MP3 mode:** Press  when the main area is selected.

The track list of the current folder appears. The dot • indicates the current track.

- ▶ Select a track by rotating    or sliding   .

 *In MP3 mode, the list shows all the tracks in alphabetical order.*

#### Selecting a track using the telephone keypad

- ▶ Press **\* +** on the telephone keypad (▷ page 90).
- ▶ Enter track number using the **1** - **9** **WXYZ** buttons.

#### Fast forward/rewind

- ▶ Select main area.
- ▶ Slide and hold **←** **⊙** **→** until desired place is reached.

#### Selecting a folder

**i** This function is only available in audio MP3 mode.

- ▶ Select “Audio” → “Audio” → “MP3” → “Folder”.

or

- ▶ Press **⊙** when main area is selected.  
The track list of the current folder appears.

This is what the illustration in the right column is showing as well.



- ① Back folder symbol
- ② Current track symbol
- ③ Track symbol

- ▶ **Selecting one folder higher:** Select the **⊙** symbol.

The display changes to the next folder up in the folder structure on the disc.



- ① Back folder symbol
- ② Current folder symbol
- ③ Folder symbol containing tracks

- ▶ **Selecting a folder:** Select desired folder.

You will see the tracks in the folder.

- ▶ Select a track.

The track is played and the corresponding folder is now the active folder.



## Control systems

### COMAND audio CD/audio DVD/MP3

#### Setting the audio format

This function lets you choose the audio format that you would like COMAND to play and is only available in DVD-Audio mode.

**i** *The tracks on an audio DVD can be stored in various audio formats. The number of audio formats depends on the audio DVD.*

▶ Select “Audio” → “Audio” → “DVD-Audio” → “Group”.

**i** *The “Group” menu item cannot be selected if only one audio format is saved on the DVD.*

The list of available audio formats appears. A dot ● indicates the format currently selected.

▶ **Changing setting:** Slide ↑⊙↓ or rotate Ⓜ.

▶ **Exiting menu:** Slide ←⊙→.

#### Playback options

The following options are available:

- “Normal Track Sequence”  
Tracks playback in the order on the disc (e.g. track 1, 2, 3, etc.).
- “Random Tracks”  
Tracks playback in a random order (e.g. track 3, 8, 5, etc.).
- “Random Folder” (in MP3 mode only)  
Tracks in the active folder and any subfolders playback in random order.
- “Repeat Folder” (in MP3 mode only)  
Tracks in the active folder will be repeated until you switch the function off.

▶ **Selecting an option:** Select “Audio” → “Audio”.

▶ Select “CD”, “DVD-Audio” or “MP3”.

The option list appears. A dot ● indicates which option is switched on.

▶ Select an option and press Ⓜ.

The option is switched on. For all options except “Normal Track Sequence”, you will see a corresponding indicator in the main area.


**i** *The “Normal Track Sequence” option is automatically activated when you select a different medium. If an option is activated, it remains activated after COMAND is switched on/off.*

## ▼ COMAND AUX

You can connect an external audio or video source (AUX) to COMAND.

### Audio and Video AUX jacks

The Audio and Video AUX jacks to which external audio/video sources can be connected are located in the glove box.

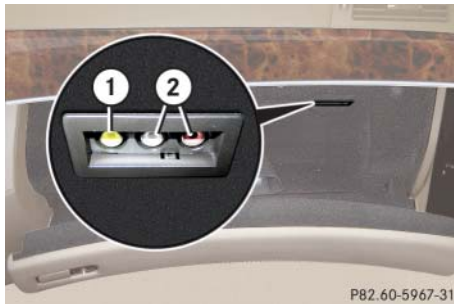

- ① Video AUX jack
- ② Audio AUX jack

### Audio AUX

#### Switching to Audio AUX mode

- ▶ Select “Audio” → “Audio” → “AUX”.

The Audio AUX menu appears. You will hear the medium in the external audio source if it has been connected and switched to play.



**i** Please refer to the corresponding operating instructions for information about how to operate the external audio source.

You can adjust the following settings in Audio AUX mode:

- Volume (▷ page 98)
- Balance and fader (▷ page 100)
- Treble and bass (▷ page 99)
- Surround sound (▷ page 100)

## Control systems

### COMAND AUX

#### Video AUX

##### Automatic picture fade-out


If a video is playing when the vehicle is shifted from park position **P** into neutral position **N**, drive position **D** or reverse gear **R** the picture is faded out automatically and the following message appears in the display: *"In order not to distract driver, picture is faded out while the vehicle is in motion"*.

When the vehicle is shifted back into **P**, the picture comes on again.

##### Switching to Video AUX mode

- ▶ Select "Video" → "Video" → "AUX".

The Video AUX menu appears. You will see the medium in the external audio source if it has been connected and switched to play.

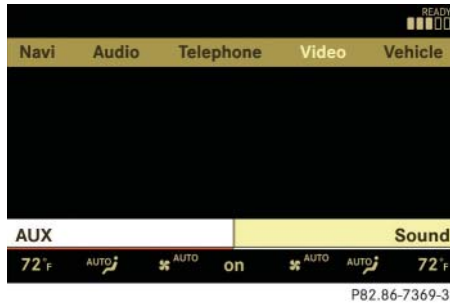

**i** Please refer to the corresponding operating instructions for information about how to operate the external video source.


You can adjust the following settings in Video AUX mode:

- Screen settings (▷ page 130)
- Volume (▷ page 98)
- Balance and fader (▷ page 100)
- Treble and bass (▷ page 99)
- Surround sound (▷ page 100)

#### Screen settings

##### Setting brightness, contrast and color

- ▶ Show the menu system, if necessary (▷ page 135).
- ▶ Select "Video" → "AUX" → "AUX".  
The menu appears.
- ▶ **Select a setting:** Slide ↑⊙↓ or turn ⏪⊙⏩.
- ▶ Press ⊙.

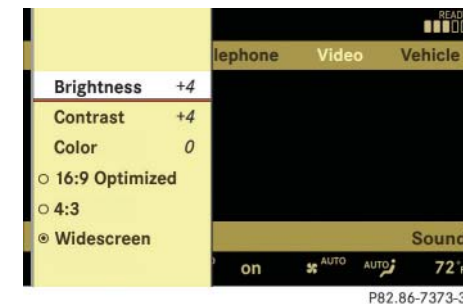

- ▶ **Changing settings:** Slide or turn until you reach the desired setting.


- ▶ **Saving settings:** Press .

#### **Changing the picture format**

- ▶ Show the menu system, if necessary (▷ page 135).

- ▶ Select “Video” → “AUX” → “AUX”.

The DVD-V menu appears. The dot • in front of a menu item - “16:9 Optimized”, “4:3” or “Widescreen” indicates the current format.

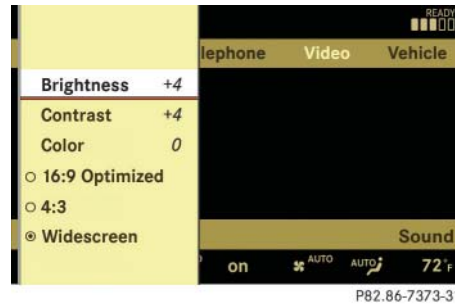

- ▶ **Changing the format:** Slide or turn , until you reach the desired setting.

- ▶ **Saving the format:** Press .

## Control systems

### COMAND video DVD

#### Warning!



COMAND is classified as a Class 1 laser product. You must not open the casing. There is a risk of exposure to invisible laser radiation if you open the casing, or if the casing is faulty or damaged. COMAND does not contain any parts that you are able to maintain yourself. For safety reasons, all maintenance work must be carried out by qualified technicians.

#### Automatic picture fade-out

If a video DVD is playing when the vehicle shifted from park position **P** into neutral position **N**, drive position **D** or reverse gear **R** the picture is faded out automatically and the following message appears in the display: *“In order not to distract driver, picture is faded out while the vehicle is in motion”*.

When the vehicle is shifted back into **P**, the picture comes on again.

#### Notes about video DVD operation

COMAND can playback commercially available, prerecorded video DVDs that bear the following label. You will usually find the label on the DVD booklet, the inlay, or the DVD itself.



**i** Video DVDs differ from recordable DVD-R and DVD-RW discs.

**i** There may be playback problems when playing copied DVDs.

*There is a large variety of discs, disc-writing software and writers available. This variety means that there is no guarantee that the system will be able to play discs that you have written/copied yourself.*

Some DVDs may not comply with the NTSC or PAL TV playback standards. Sound, picture and other playback problems may occur when you play such DVDs.

COMAND can playback video DVDs meeting the following requirements:

- Correct regional code
- NTSC or PAL TV standard

The appropriate information is usually given either on the DVD or the DVD box. The factory setting of COMAND is regional code 1. The setting can be changed at an authorized Mercedes-Benz Center. This will allow you to playback video DVDs with other regional codes, as long as they comply with the NTSC or PAL TV standard.

### Notes about handling DVDs

**!** Do not affix stickers or labels to the discs. These could peel away and damage COMAND. COMAND is designed to hold discs which comply with the IEC 60908 standard. You can therefore only use discs with a maximum thickness of 1.3 mm.

If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage COMAND.


Do not use discs with an 8 cm diameter, even if they have an adapter.

Only use round discs with a 12 cm diameter.

- Only hold discs by the edge.
- Handle discs carefully to prevent playback problems.
- Avoid getting scratches, fingerprints and dust on discs.
- Clean discs from time to time with a commercially-available cleaning cloth. Do not wipe them with a circular motion, but only in straight lines from the center outwards.

- Only use a pen designed for such a purpose to label discs.
- Place discs back in their boxes after use.
- Protect discs from heat and direct sunlight.

### Functional limitations

Depending on the DVD, it is possible that certain functions or actions may be temporarily or permanently unavailable. If you try to utilize such functions or carry out such actions, you will see the  symbol in the display.

### Inserting or ejecting DVDs

#### Warning!



Only insert or eject a DVD when the vehicle is stationary. There is a risk of accident by being distracted from road and traffic conditions if you load a DVD while the vehicle is in motion.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

- ▶ Inserting a DVD (▷ page 120).
- or
- ▶ Ejecting a DVD (▷ page 122).

## Control systems

### COMAND video DVD

#### Submenu overview of video DVD

DVD-V	Pause/Play	Stop	Changer	Sound
DVD Functions	Pause playback	Pause Playback	Select medium	Treble
Brightness	Continue playback	Stop playback		Bass
Contrast	Restart playback			Balance/Fader
Color				3D Sound
16:9 Optimized				
4:3				
Widescreen				

#### Switching to video DVD mode



- ▶ Insert a DVD (▷ page 120).

or

- ▶ Select “Video” → “Video” → “Video DVD”.


or

- ▶ Press the  shortcut button once or twice.

 The  shortcut button takes you directly to the previously set disc mode (audio CD/DVD, MP3-CD/DVD or video DVD). The number of times you have to press the shortcut button depends on the previously set mode.

#### Hiding/showing the DVD control menu

- ▶ Hiding the menu: Slide .
  - ▶ **Showing the menu:** Slide .
- or
- ▶ Wait for approximately 8 seconds.

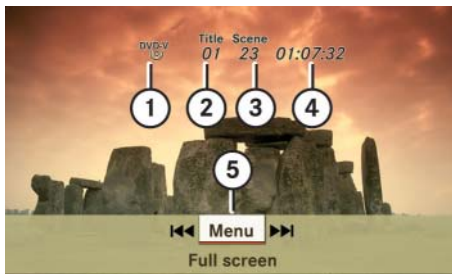

PB2.86-5316-31

#### Control menu

- ① Disc type
- ② Current track
- ③ Current scene
- ④ Elapsed track time
- ⑤ Show the menu system

#### Hiding/showing the menu system

- ▶ **Showing the menu:** Press .
- ▶ **Hiding the menu:** Press when the main menu area is selected.



PB2.86-6474-31

#### Menu system

- ① Video DVD options
- ② Pause
- ③ Stop
- ④ Medium selection
- ⑤ Sound settings

#### Fast forward/rewind

- ▶ Slide and hold until you get to the desired scene.

#### Selecting the DVD medium

- ▶ Select “Video” → “Video” → “Video DVD”.
  - ▶ Show the menu system, if necessary (> page 135).
  - ▶ Select “Changer”.
- The media list appears. The dot • indicates the current medium.
- ▶ Select a medium.
- COMAND changes the medium.



## Control systems

### COMAND video DVD

#### Stop playback

- ▶ Select “Video” → “Video” → “Video DVD”.
- ▶ Show the menu system, if necessary (▷ page 135).
- ▶ Stop play: Select “Stop”.  
In the display, “Pause” changes to “Play”.
- ▶ **Continue playback:** Select “Play”.  
Play is continued from the point at which it was stopped.
- ▶ **Stop playback:** Select “Stop” again while playback is stopped.

or

- ▶ Select “Stop” twice in quick succession during playback.
- ▶ **Resume playback:** Select “Play”.  
Playbacks starts again from the beginning.

#### Pause playback

- ▶ Select “Video” → “Video” → “Video DVD”.
- ▶ Show the menu system, if necessary (▷ page 135).
- ▶ **Pause playback:** Select “Pause”.  
In the display, “Pause” changes to “Play”.
- ▶ **Continue playback:** Select “Play”.  
Play is continued from the point at which it was stopped.

#### Selecting scene/chapter

##### Entering scene/chapter using the COMAND controller

- ▶ Make sure that the control menu is shown (▷ page 135).
- ▶ **Skipping forwards or back: Slide** ←⊙→ or turn ⏪⏩.

##### Entering the scene/chapter using the telephone keypad

- ▶ Press **\* +** on the telephone keypad (▷ page 144).
- ▶ Enter scene/chapter using the **1** - **9** **WXYZ** buttons.

COMAND tunes in to the scene/chapter entered.

### Selecting film/track

**i** This function is only available if the DVD is comprised of several film/tracks.

- ▶ Select “Video” → “Video” → “Video DVD”.
  - ▶ Show the menu system, if necessary (▷ page 135).
  - ▶ Select “DVD-V” → “DVD Functions” → “Title selection”.
- A selection list appears.
- ▶ Select a film/track.

### Screen settings

#### Setting brightness, contrast and color

- ▶ Select “Video” → “Video” → “Video DVD”.
- ▶ Show the menu system, if necessary (▷ page 135).
- ▶ Select “DVD-V” → “Brightness” → “Contrast” or “Color”.
- ▶ **Changing settings:** Slide ↑⊙↓ or turn ⏪⊙⏩ until you reach the desired setting.
- ▶ **Saving settings:** Press ⏻.

### Changing the picture format

- ▶ Select “Video” → “Video” → “Video DVD”.
  - ▶ Show the menu system, if necessary (▷ page 135).
  - ▶ Select “DVD-V”.
- The DVD-V menu appears. The dot ● in front of a menu item - “16:9 Optimized”, “4:3” or “Wide-screen” indicates the current format.
- ▶ **Changing the format:** Slide ↑⊙↓ or turn ⏪⊙⏩, until you reach the desired setting.
  - ▶ **Saving the format:** Press ⏻.

## Control systems

### COMAND video DVD

#### DVD menu

The DVD menu is the menu stored on the DVD itself. It is structured in various ways according to the individual DVD and permits certain actions and settings.

#### Calling up the DVD menu

- ▶ Select “Video” → “Video” → “Video DVD”.
- ▶ Show the menu system, if necessary (▷ page 135).
- ▶ Select “DVD-V” → “DVD Functions” → “Menu”.

The DVD menu appears.

#### Selecting menu items in the DVD menu

- ▶ Slide or .
- ▶ Confirming the selection: Press .

The selection menu appears.



P82.86-5085-31

- ▶ **Reconfirming the selection:** Select “Select”.

COMAND carries out the action defined by the selected DVD menu item.

**i** Depending on the DVD, it is possible the menu item “Play” either has no function or has no function in certain parts of the DVD menu.

#### Stopping the film or skipping to the beginning/end of a scene

- ▶ Select a menu item of your choice from the DVD menu.

The selection menu appears.



P82.86-5086-31

- ① Stop film
- ② Skip to the end of a scene
- ③ Skip to the beginning of a scene

- ▶ **Stopping the film:** Select “Stop”.
- ▶ **Skipping to the end of a scene:** Select .
- ▶ **Skipping to the beginning of a scene:** Select .

**i** Depending on the DVD, it is possible the menu items **▶▶▶** and **◀◀◀** either have no function or have no function in certain parts of the DVD menu.

### Switching to the next highest DVD menu level

- ▶ Press the **◀** back button in the center console.
- or
- ▶ Select the corresponding menu item in the DVD menu.
- or
- ▶ Select a menu item of your choice from the DVD menu.
- ▶ Select the menu item “Go up” in the selection menu.

**i** Depending on the DVD, it is possible the menu item “Go up” either has no function or has no function in certain parts of the DVD menu.

### Back to the film

- ▶ Press the **◀** back button until you can see the film.
- or
- ▶ Select the corresponding menu item in the DVD menu.
- or
- ▶ Select a menu item of your choice from the DVD menu.
- ▶ Select the menu item “Back (to the film)” in the selection menu.

**i** Depending on the DVD, it is possible the menu item “Back (to the film)” either has no function or has no function in certain parts of the DVD menu.

### Setting the language and audio format

**i** This function is not available for all DVDs. If it is available, you can set the language for the DVD menu and the audio language and/or the audio format. The number of settings you can make is determined by the content of the DVD. It may also be possible to make the settings in the DVD menu (▷ page 138).

- ▶ Select “Video” → “Video” → “Video DVD”.
- ▶ Show the menu system, if necessary (▷ page 135).
- ▶ Select “DVD-V” → “DVD Functions”.
- ▶ Select “Menu Language” or “Audio Language”.

In both cases a selection list will appear. The dot • in front of an entry indicates the current language. ▷▷

## Control systems

### COMAND video DVD

- ▷▷▶ **Changing the setting:** Slide ↑⊙↓ or turn ⏪⊙⏩, until you reach the desired setting.
- ▶ **Saving a setting:** Press ⊙.
- ▶ **Exiting the menu:** Slide ←⊙→.

#### Subtitles and camera angles

**i** This function is not available for all DVDs. The number of settings you can make is determined by the content of the DVD. It may also be possible to make the settings in the DVD menu (▷ page 138).

- ▶ Select “Video” → “Video” → “Video DVD”.
- ▶ Show the menu system, if necessary (▷ page 135).
- ▶ Select “DVD-V” → “DVD Functions”.
- ▶ Select “Subtitles” or “Camera angle”.

In both cases a selection list will appear. The dot • in front of an entry indicates the current language.

- ▶ **Changing the setting:** Slide ↑⊙↓ or turn ⏪⊙⏩, until you reach the desired setting.
- ▶ **Saving a setting:** Press ⊙.
- ▶ **Exiting the menu:** Slide ←⊙→.

#### Interactive content

**i** DVDs may include interactive content (e.g. a video game). In a video game you can control the play by selecting and initiating actions. The type and number of actions depends on the DVD.

- ▶ **Selecting an action:** Slide ↑⊙↓ or ←⊙→, or turn ⏪⊙⏩, until you reach the desired setting.
- ▶ **Initiating an action:** Press ⊙.  
A menu appears, the first entry “Select” is highlighted.
- ▶ Press ⊙.

## ▼ COMAND telephone\*

## Safety precautions

**Warning!**

Some jurisdictions prohibit the driver from using a cellular telephone while driving. Whether or not prohibited by law, for safety reasons, the driver should not use the cellular telephone while the vehicle is in motion. Stop the vehicle in a safe location before placing or answering a call.

If you nonetheless choose to use the mobile phone<sup>1</sup> while driving, please use the hands-free feature and be sure to pay attention to the traffic situation at all times. Use the mobile phone only when road, weather and traffic conditions permit. Otherwise, you may not be able to observe traffic conditions and could endanger yourself and others.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

<sup>1</sup> Observe all legal requirements.

**Warning!**

Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or personal injury.

**General notes****i USA only:**

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:*

- (1) This device may not cause harmful interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

**i Canada only:**

*This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:*

- (1) This device may not cause interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

**Calls disconnected while the vehicle is in motion**

A call may be disconnected if:

- there is insufficient network coverage
- you move from one transmitter/receiver area (cell) into another and no channels are free or the cell is full

## Control systems



### COMAND telephone\*

#### Operating options

**i** The components and operating principles of COMAND can be found on (▷ page 87) and (▷ page 96).

**i** Various mobile phone cradles can be installed in the front center armrest, see separate installation instructions for the mobile phone cradle. These mobile phone cradles can be obtained from an authorized Mercedes-Benz Center. For more information about telephone (▷ page 539).

When the mobile phone is inserted in the cradle, you can operate the telephone using the following devices:

- mobile phone keypad
- COMAND telephone keypad
- buttons  and  on the multi-function steering wheel (▷ page 288)
- Voice Control (▷ page 313)
- Bluetooth® headset (▷ page 157)

Please note that these functions are only available with Mercedes-Benz approved mobile phones. Please contact an authorized Mercedes-Benz Center for information on features available for your mobile phone of choice.

You can control other functions of the mobile phone via the COMAND, instrument cluster control system (▷ page 299) or Voice Control.

**i** In order for the functions described in this section to work correctly, the Bluetooth® headset must be linked to COMAND (▷ page 180). Please make sure any Bluetooth® headset linked with the mobile phone is switched off or that the headset is linked with COMAND before you insert the mobile phone in the cradle (▷ page 539) and use the telephone functions with COMAND.

The descriptions in this section assume that the mobile phone is inserted in the cradle. Exceptions to this are clearly stated.

Unless otherwise indicated, the descriptions and illustrations in this section refer to COMAND and the telephone keypad. Operation using the mobile phone and Bluetooth® headset is described in the respective separate Operating Instructions.

#### Caller ID

COMAND can display the telephone number and the name of the caller, e.g. for an incoming call and also in other menus or displays.

For the telephone number to be displayed, the caller must transmit their telephone number.

This is also the case for name displays. For this, the telephone number and the name of the caller must also be saved in the mobile phone book.

**Functional restrictions**

You will not be able to use the telephone, or you may have to wait a while, in the following situations:

- If the telephone has not yet logged into the network.  
The telephone automatically tries to log into a network. If no network is available, you will also not be able to make a “9 1 1” emergency call. If you attempt to make an outgoing call, the “No Service” message will appear for a short while.
- If the mobile phone is not inserted in the cradle.
- SIM card is not inserted in GSM type phone.

**i** *The roof cargo container\* may impair mobile phone reception. In an emergency, remove the mobile phone from the mobile phone cradle (▷ page 539) to make a call.*

**Notes about COMAND telephone features using a Bluetooth® connection**

Many of the Mercedes-Benz approved mobile phones, cradles and adaptors available for use in your vehicle utilize Bluetooth® technology to communicate with each other and the vehicle. Depending on your phone brand and model, the number of in-vehicle or on-display COMAND telephone features supported via Bluetooth® communication, and thus available for your use, may vary.

The descriptions and illustrations in this section are based on the use of fully compatible Mercedes-Benz approved mobile phones and cradles that do not utilize Bluetooth® technology to communicate with each other. If your vehicle is equipped with integrated Bluetooth® functionality than a Bluetooth® capable mobile phone, headset, Laptop, PDA, etc. is required to utilize those features.

For additional information about Mercedes-Benz approved Bluetooth® mobile phones and related accessories please contact the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERcedes or your nearest authorized Mercedes-Benz Center.

**Switching telephone on or off**

▶ **Switching on:** Insert mobile phone into cradle when COMAND is switched on.

or

▶ Switch on the mobile phone (see mobile phone operating instructions).

▶ **Switching off:** Select “Telephone” → “Telephone” → “Telephone OFF”.

or


▶ Switch off mobile phone (see mobile phone operating instructions).



## Control systems

### COMAND telephone\*

#### Activating telephone mode

- ▶ Select “Telephone” → “Telephone”.
- or
- ▶ Press  on telephone keypad.

#### Telephone keypad





- ① Telephone keypad
- ② Folding cover


With the telephone keypad you can:


- Enter and clear numbers and special characters.
- Reject, accept, connect and end calls.
- Select preset radio stations and enter the frequency manually (▷ page 105).
- Select preset satellite radio stations and enter the channel number (▷ page 113).
- Select a medium from the DVD changer (▷ page 126).
- Select a track from CD, DVD-Audio or MP3 (▷ page 127).
- Select a scene/chapter from a video DVD (▷ page 136).
- Select a street in the navigation entry (▷ page 212).


- ▶ **Entering characters:** Select “Telephone”.

- ▶ Fold up cover ②.

- ▶ Enter characters using the  -  buttons.

**i** You can enter the \* character by pressing  once. Pressing this button again within 1.5 seconds enters the + character.

- ▶ **Deleting individual characters:**  
Press .

- ▶ **Deleting an entire word or number:**  
Press and hold  until the word or number is deleted.

**“911” emergency call**

**i** The “911” emergency call system is a public service. Using it without due cause is a criminal offense.

**i** This function places a call to the local 911 provider. It does not initiate a Tele Aid call.

The following conditions must be fulfilled in order to make a “911” emergency call:

- The phone is switched on.
- A mobile network is available.
- There is a valid SIM card in the phone (not necessary in all mobile networks).

**i** If no SIM card is inserted in the mobile phone, you can only initiate a “911” emergency call by using COMAND and the mobile phone.


If you cannot make an emergency call, you must initiate rescue measures yourself. The “911” emergency call is a public service. Any misuse is punishable by law.

**i** The roof cargo container\* may impair mobile phone reception. In an emergency, remove the mobile phone from the mobile phone cradle (▷ page 539) to make a call.


**Placing a “911” emergency call before entering PIN/PIN2, PUK/PUK2 or unlock code****Entering the number using the COMAND controller**

- ▶ Select “Telephone” → “Dial 911”.


**Entering the number using the telephone keypad**

- ▶ Enter digits 9-1-1 (▷ page 144).
- ▶ Press .

**Placing a “911” emergency call after entering PIN/PIN2, PUK/PUK2 or unlock code****Entering the number using the COMAND controller**

- ▶ Select “Telephone”.
- ▶ Select all the digits in sequence.
- ▶ Select “.

**Entering the number using the telephone keypad**

- ▶ Enter digits 9-1-1 (▷ page 144).
- ▶ Press .

## Control systems

### COMAND telephone\*

#### Confirming the emergency call

After the digits have been entered, you will see the question “Do you want to dial the 911 emergency number?”.




- ▶ Use COMAND controller to select “Yes”.  
The telephone makes the connection.
- ▶ Wait until the emergency call center answers and describe the emergency situation.

#### Entering the PIN



**i** Your PIN code (*Personal Identification Number code*) prevents unauthorized persons from using your GSM mobile phone. The PIN code is a number string, which you have to enter when switching on the telephone.

*The PIN entry applies only to GSM mobile phones.*

#### Entering using the COMAND controller

- ▶ Select “Telephone”.
- ▶ **Entering:** Select all the digits in sequence.
- ▶ **Deleting a digit:** Select **[c]** and briefly press .
- ▶ **Deleting an entire number:** Select **[c]** and press and hold  until the number is deleted.
- ▶ **Confirming an entry:** Press .

#### Entering using the telephone keypad

- ▶ **Entering:** Enter digits using the **[0]** - **[9]** buttons (▷ page 144).
- ▶ **Confirming an entry:** Press  or press .

#### Entering the PIN2

**i** The PIN2 entry applies only to GSM mobile phones.

The phone may request the PIN2 in order to use certain functions. A corresponding message appears in the display.

- ▶ Enter PIN2 digits into mobile phone.

#### Entering the PUK/PUK2

**i** The PUK/PUK2 entry (Personal Unlocking Key) applies only to GSM mobile phones.

If you enter the PIN or PIN2 incorrectly three times, the SIM card will be locked. A corresponding message appears in the display. It is necessary to enter the PUK/PUK2 to unlock it. The PUK and/or PUK2 are provided by your telephone service provider.

- ▶ Enter PUK/PUK2 digits into mobile phone.

#### Entering the unlock code

Many mobile phones can be protected from unauthorized use with an unlock code (see mobile phone operating instructions). If you wish to use the phone functions when the unlock code is active, a screen appears requesting that you enter the unlock code. You cannot use the phone functions (except "911" emergency call) until you have entered the unlock code.

- ▶ Proceed in the same way as entering the PIN (> page 146).

## Control systems

### COMAND telephone\*

#### Telephone submenu overview


**i** The components and operating principles of COMAND can be found on (> page 87).


Name (only when the mobile phone is inserted in the cradle)	Data/Connections	Call lists (not during a call)	Text message (not during a call)	DTMF (only during a call)	Mic OFF/ON (only during a call)
Display COMAND phone book	<ul style="list-style-type: none"><li>• Address book</li><li>• Bluetooth®</li></ul>	Display call list selection: <ul style="list-style-type: none"><li>• Calls received</li><li>• Calls dialed</li></ul>	Call up SMS inbox	Send numerical sequence	Switch hands-free microphone on/off


### Main telephone menu

► **Calling up main menu:** Select “Telephone”.



or

► Press  on the telephone keypad (▷ page 144).

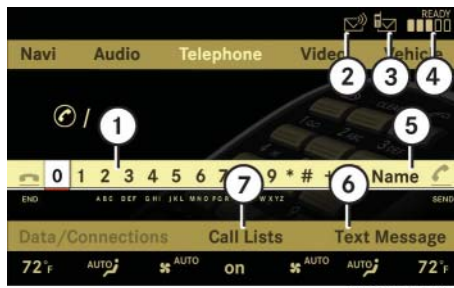
**i** If you press  when the main telephone menu has already been called up, the “Calls Dialed” list will appear (▷ page 150).



P82.86-7347-31

- ① Numbers/characters to enter telephone number
- ② Symbol  for new voice message in mailbox
- ③ Symbol  for unread SMS messages in SMS inbox (▷ page 183)
- ④ Signal strength and network status display
  - Network status “READY” = mobile phone is logged in with its own provider’s network
  - Network status “READY ROAM” = mobile phone is logged in with another provider’s network
  - Network status “No Service” = No network available
- ⑤ To show COMAND phone book (“Name”) (▷ page 158)
- ⑥ To call up text message (SMS) (▷ page 183)
- ⑦ To display call list selection (▷ page 150)

### Mailbox

The  symbol in the example illustration above indicates that your mailbox contains new voice messages. You will have to call the mailbox in order to retrieve the messages.

You can call your mailbox by:

- Speed dialing (▷ page 154)
- Entering a telephone number using the telephone keypad (▷ page 153).
- Entering the telephone number using the COMAND controller (▷ page 153)

**i** Once connection with your mailbox has been established, the mailbox system will guide you through the next steps.

## Control systems

### COMAND telephone\*

#### Call lists

COMAND can display the following calls in separate lists:

- Calls received
- Calls dialed


**i** The list of incoming calls contains received calls as well as missed calls.

#### Calling up a list

- ▶ Select “Call Lists” from main telephone menu.
- ▶ Select “Calls Received” or “Calls Dialed”.

The corresponding list appears.

**i** The “Calls Received” and “Calls Dialed” menu items do not function if the respective list has no entries.  
The “Call Lists” menu item does not function if neither list has any entries.

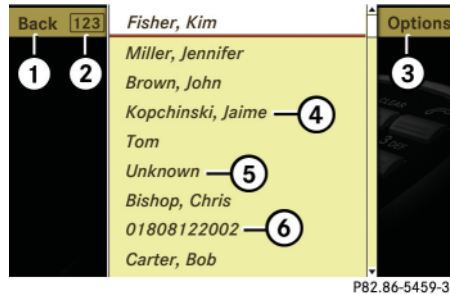

#### Illustration: list of calls received

- ① To close list
- ② To switch list display (“123” or “ABC”)
- ③ To call up options
- ④ Name or telephone number of a caller
- ⑤ Unknown caller
- ⑥ Telephone number of a caller

**i** In the list of calls received, you will see the name of caller ④ if

- the caller transmitted the telephone number
- the name and telephone number are saved in the COMAND address book or in the phone book on the mobile phone
- the telephone number is saved in the same way in which the caller transmits it

You will see the telephone number of caller ⑥ if

- the caller transmitted the telephone number
- no caller data is saved in either the COMAND address book or the phone book on the mobile phone

An unknown caller ⑤ has not transmitted his or her telephone number.

**i** In the list of dialed calls, you will see the name of the person called if you have saved his or her telephone number and name in the COMAND address book or in the phone book on the mobile phone. If no data has been saved, you will see the telephone number.

- ▶ **Switching to list display:** Select “123” or “ABC”.

The display changes to telephone number or name display.

- ▶ **Closing list:** Slide ←⊙→ and select “Back”.
- ▶ **Selecting a list entry:** Slide ↑⊙↓ or rotate ⌚ and select entry.

### Displaying details of a list entry

COMAND can also show a shortened list entry in its entirety.

- ▶ Select list entry (▷ page 150).
- ▶ Slide ←⊙→ and select “Options” → “Details”.

The detailed view appears.

- ▶ **Closing detailed view:** Slide ↑⊙↓ or ←⊙→ or press ⏻.

### Saving a list entry in the address book

**i** List entries that show a telephone number are neither saved in the COMAND address book, nor in the phone book on the mobile phone. You can save such entries in the COMAND address book. You can also save list entries in the COMAND address book which have already been saved in the phone book on the mobile phone.

### Saving as a new entry in the COMAND address book

- ▶ Slide ←⊙→ or rotate ⏻⊙⏻ and select list entry (▷ page 150).
- ▶ Select “Options” → “Save” → “New Entry”.

**i** “Save” does not function if the selected list entry is already saved in the COMAND address book.

- ▶ Select a number category, e.g. “Home”.
- ▶ Select a telephone category, e.g. “Land Line”.
- ▶ Select “Save”.

The input menu appears with the data fields. The data field for the telephone number is filled in automatically. The data field for the last name is also filled in automatically if the entry to be saved contains a name.

- ▶ **If you would like to save the entry now:** Select **ok**.



- ① Data field
- ② Input mark (cursor)
- ③ Input characters

 
 
- ▶ **If you want to change the available characters:** Proceed as described in the “Changing data field” paragraph in the “Assigning a New Entry in the Address Book” section (▷ page 162).



## Control systems

### COMAND telephone\*

#### Adding to an existing entry in the COMAND address book

- ▶ Slide  or rotate  and select list entry (▷ page 150).
- ▶ Select “Options” → “Save” → “Add”.


**i** “Save” does not function if the selected list entry is already saved in the COMAND address book.

- ▶ Select a number category to add, e.g. “Home”.
- ▶ Select a telephone category to add, e.g. “Land Line”.
- ▶ Select “Save”.

The search menu for COMAND address book entries appears.

- ▶ Search for desired entry.

**i** There is a detailed description of searching for an COMAND address book entry in the “Searching for an address book entry” section (▷ page 170).

- ▶ Press  when you have finished searching.

COMAND saves the data if there are fewer than four numbers assigned to the entry you are searching for in the selected number category.

If four numbers are saved for the entry you are searching for, a prompt will appear asking whether you want to overwrite one of the existing numbers.

- ▶ Select “Yes” or “No”.

If you select “Yes”, a selection list will appear containing the four existing numbers.

- ▶ Select the number to be overwritten.


COMAND overwrites the selected number with the new data.

#### Incoming call

##### Rejecting or accepting the call

- ▶ **Rejecting:** Select “Reject”.


or

- ▶ Press  on the telephone keypad or on the multifunction steering wheel.


**i** If you have a CDMA/TDMA mobile phone and reject a call, only the ring tone will stop. The call itself can only be ended by the caller.

- ▶ **Accepting:** Select “Accept”.

or

- ▶ Press  on the telephone keypad or on the multifunction steering wheel.

or

- ▶ Press  on the multifunction steering wheel.

- ▶ Use the mobile phone (see mobile phone operating instructions).

or

- ▶ Use the Bluetooth® headset (see headset operating instructions).


**i** The use of a Bluetooth® headset requires Bluetooth® to be activated and the Bluetooth® headset to be authorized (▷ page 180).

If you have accepted the call using COMAND, the telephone keypad, the multifunction steering wheel or the mobile phone, the call will be conducted via the hands-free system. The volume of the call can be adjusted (▷ page 98).

If you have accepted the call using the Bluetooth® headset, the call will be conducted via the headset.

Further operating functions can be found in the “Functions during a single-call connection” section (▷ page 155).

You can also accept a call if the COMAND display is showing a screen other than the telephone mode screen. After accepting the call, you will see the caller’s data in a window.





- ▶ **Closing window:** Slide ↑⊙↓ or ←⊙→ or press .

 


### Making an outgoing call

**i** If you place an outgoing call and receive a busy signal, the telephone automatically starts to redial as long as the provider and the mobile phone support this function (see mobile phone operating instructions).

While the call is connecting, you can also send character strings (▷ page 156).

### Entering the telephone number using the COMAND controller


- ▶ **Switching screen to telephone mode:** Call up main telephone menu (▷ page 149).
- ▶ **Entering digits:** Select desired digits by rotating  or sliding ←⊙→ and press .
- ▶ **Deleting individual digits:** Select  and briefly press .

- ▶ **Deleting an entire telephone number:** Select  and press and hold  until the telephone number is deleted.
- ▶ **Connecting a call:** Select “”.

### Entering a telephone number using the telephone keypad

- ▶ **Switching screen to telephone mode:** Call up main telephone menu (▷ page 149).
- ▶ Use telephone keypad to enter digits.



**i** A detailed description of how to enter digits using the telephone keypad can be found on (▷ page 90).

- ▶ **Connecting a call:** Press .


## Control systems


 

### COMAND telephone\*

#### Redial


- ▶ **Switching screen to telephone mode:** Call up main telephone menu (▷ page 149).
  - ▶ Use COMAND controller to select “”.
- or
- ▶ Press  on the telephone keypad (▷ page 90).

The list of dialed numbers appears. The most recently dialed number is at the top.

- ▶ Select desired entry.
- ▶ **Connecting a call:** Press .


 *If the list of dialed calls contains no entries, the “” menu item cannot be selected and the  button on the telephone keypad does not function.*

#### Placing a call to a call list entry or COMAND phone book entry


- ▶ Call up a call list and select an entry (▷ page 150).
- or
- ▶ Call up COMAND phone book and select an entry (▷ page 158).
  - ▶ **Connecting a call:** Press .

#### Speed dialing

 

You can save telephone numbers in the speed-dial preset locations on the mobile phone and call up the speed-dial presets (see mobile phone operating instructions).




 *By default, the mailbox number is preset in the speed dial memory unless you have modified it. For more information on the mailbox (▷ page 149).*

You can also call up speed-dial numbers using COMAND.


 *Operation during call connection depends on the speed-dial preset position called up.*

#### Calling up speed-dial presets using the COMAND controller

 - ▶ **Switching screen to telephone mode:** Call up main telephone menu (▷ page 149).
- ▶ **Entering number of a speed-dial preset:** Select all the digits in sequence.
  - ▶ **Deleting individual digits:** Select  and briefly press .

- ▶ **Deleting entire number:**  
Select  and press  until the number is deleted.
- ▶ **Connecting a call (speed-dial presets 1 -99):** Select "".



or

- ▶ **Connecting a call (speed-dial presets 100 - 999):** Select "#" after the digits → "".



In both cases, the telephone connects the call to the saved telephone number. If the speed-dial memory contains no telephone numbers, you will see a corresponding message.


- ▶ **Deleting message:** Press .

#### Calling up speed-dial numbers using the telephone keypad





- ▶ **Switching screen to telephone mode:** Call up main telephone menu (▷ page 149).
- ▶ **Single-digit numbers:** Press and hold the  -  buttons.

or

- ▶ **Single- and two-digit numbers:** Enter number using the  -  buttons.

- ▶ Press .

or

- ▶ **Three-digit numbers:** Enter number using the  -  buttons.
- ▶ Press , and then .


In all three cases, COMAND connects the call to the saved telephone number. If the speed-dial memory contains no telephone numbers, you will see a corresponding message.

- ▶ **Deleting message:** Press .

#### Functions during a single-call connection



#### Illustration: telephone mode during a call

- ① Symbol  for active telephone connection (also visible in other operating modes)
- ② Signal strength display
- ③ To switch hands-free microphone on or off
- ④ Length of call display
- ⑤ To send character strings
- ⑥ To end a call
- ⑦ Person you are calling


## Control systems

### COMAND telephone\*



**i** The name of the person you are speaking with can only be seen in display ⑦ if his or her telephone number and name have been saved in the COMAND address book or phone book on the mobile phone. The telephone number must also be saved in the same way in which the person you are talking to transmits it.

#### Switching the hands-free microphone on or off

▶ **Switching screen to telephone mode:** Call up main telephone menu (▷ page 149).



▶ **Switching off microphone:** Select “Mic OFF” and press .

or

▶ Press  shortcut button.  
If the microphone is switched off, the  symbol appears in the main area.

▶ **Switching on microphone:** Select “Mic ON”.

or

▶ Press  shortcut button.  
The  symbol disappears.


#### Sending a character string via DTMF

**i** This function is not possible with every mobile phone. If the mobile phone supports the function, you can use it during the call connection and also during a call.


 
Answering machines or other devices can be controlled by character strings (e.g. for remote query functions).

#### Sending character strings via the DTMF menu

▶ During a call, select “DTMF”.  
The DTMF dialing display appears.

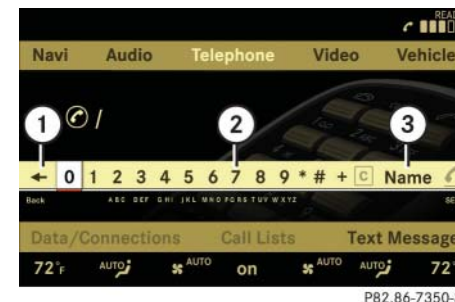

- ① Back to the call display
- ② Character entry
- ③ To call up the phone book

▶ **Sending individual characters:** Rotate  or slide  and select desired character.

Each character you select can be seen in the main area and is sent immediately.

- ▶ **Sending a phone book entry as a character string:** Select “Name”.

- ▶ Select desired phone book entry.

The entry is immediately sent as a character string.

**i** Telephone numbers containing the + character may impair the function.

- ▶ **Switching back to the call display:** Select “←”.


#### ***Sending character strings via the telephone keypad***

- ▶ Press corresponding button on telephone keypad.


Each character you select is immediately sent.

**i** The + character may impair the function.

#### **Ending an active call**

- ▶ **Ending a call:** Select “ END” in the call display.

or

- ▶ Press  on the telephone keypad or on the multifunction steering wheel.

The COMAND display will change to the previously selected display, if applicable.

#### **Transferring a call**

##### **From the hands-free system to the Bluetooth® headset**

**i** The use of a Bluetooth® headset requires Bluetooth® to be activated and the Bluetooth® headset to be authorized (▷ page 180).

The call transfer is controlled by pressing the PTT button on the Bluetooth® headset (see headset operating instructions). Normally, it is sufficient to press the PTT button once, but under certain circumstances you may have to press it a second time.

Once the call has been transferred to the Bluetooth® headset, all the functions will be available to you which are described in the “Functions during a single-call connection” section (▷ page 155).

Exception: “Switching the hands-free microphone on or off” function (▷ page 156).

## Control systems

### COMAND telephone\*

#### From the Bluetooth® headset to the hands-free system

On most Bluetooth® headsets, you press the PTT button on the headset twice quickly to transfer the call (see headset operating instructions).

#### From the hands-free system to the mobile phone

- ▶ **If the mobile phone has a folding upper section:** Flip upper section open.
- ▶ Take mobile phone out of cradle.

The “*No telephone inserted*” message appears on the COMAND display. Subsequent operation is only possible using the mobile phone.

#### From the mobile phone to the hands-free system

- ▶ Insert mobile phone into cradle.

Once the call has been transferred to the hands-free feature, all the functions will be available to you which are described in the “Functions during a single-call connection” section (▷ page 155).

#### COMAND phone book

---

The COMAND phone book contains both the COMAND address book entries and mobile phone entries that have at least one telephone number.

The COMAND address book entries are permanently available even when a mobile phone is not inserted in the cradle.

When the mobile phone is inserted in the cradle, COMAND will read the phone book entries in the mobile phone and compares them with the COMAND address book entries.


If any of the telephone numbers of a phone book entry in the mobile phone are the same as an address book entry, COMAND will only display the address book entry.

If the entries are not the same, the COMAND phone book will show the phone book entry in the mobile phone.

#### Calling up the COMAND phone book

- ▶ Select “Telephone” → “Name”.

The COMAND phone book appears.

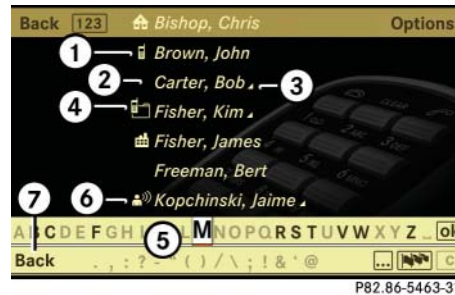

**Illustration: a phone book with name display and smart speller activated**

- ① Category symbol
- ② Upper entry from address book (without category symbol)
- ③ Symbol for several telephone numbers (subentries) under the main entry
- ④ Symbol for summarized entries from the mobile phone with the same name but different telephone numbers
- ⑤ Smart speller
- ⑥ Voice entry symbol
- ⑦ To close the phone book

Entries with category symbol ① come from the mobile phone. The following category symbols are possible:

- = symbol for “Mobile” category
- = symbol for “Home” category
- = symbol for “Work” category
- = symbol for “Fax” category
- = symbol for “Pager” category
- = symbol for “Main” category or for unknown category or for phone entries that are saved on the SIM card of a GSM mobile phone

Entries without a category symbol or with the symbol come from the COMAND address book.

Entries with the symbol contain a voice entry. Voice entries can be added to the address book (▷ page 167). This function is available in vehicles with Voice Control.



## Control systems

### COMAND telephone\*


#### Switching between the smart speller and the list

- ▶ **Switching from the smart speller to the list:** Slide repeatedly or press until the smart speller is hidden.

or

- ▶ Rotate or slide and select **ok**.

The smart speller is hidden.

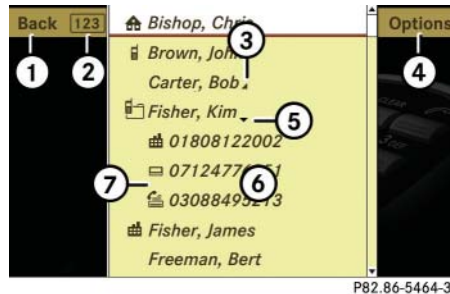

**Illustration: list of phone book entries with name display and hidden smart speller**

- ① Back to smart speller
- ② To switch phone book display (“123” or “ABC”)
- ③ Symbol for several telephone numbers (subentries) under the main entry, subentry list is closed
- ④ To call up options
- ⑤ Symbol for open subentry list
- ⑥ List of phone book entries
- ⑦ Subentry list with category symbols and telephone numbers

**i** The following options are available under “Options” menu item ④:

- Displaying details about an entry (▷ page 162)
- Creating a new entry in the address book (▷ page 162)
- Deleting an entry (▷ page 164)
- Saving a phone book entry from mobile phone in the address book (▷ page 164)
- Adding a telephone number to an address book entry (▷ page 166)

- ▶ **Switching from the list to the smart speller:** Select “Back” from the list.


or

- ▶ Press back button in the center console (▷ page 88).


- ▶ **Changing phone book display in the list:** Select “123” or “ABC”.

The screen changes to telephone number or name display.

**Closing the COMAND phone book**

- ▶ In the smart speller, select “Back”.
- or
- ▶ Press back button  in the center console (▷ page 88).

 

**Selecting an entry in the COMAND phone book****Selecting entries using the smart speller**

- ▶ Switch from the list to the smart speller if necessary.
- ▶ **Changing smart speller language:** Select .
- ▶ Select desired language.



**▶ Changing smart speller character set:**

Select .

Depending on the previous setting, you will change to letters with special characters or to numbers with special characters.



 **▶ Entering characters:** Select the characters of the entry you are searching for one by one.**▶ Deleting individual characters:** Select  and briefly press .

Each time you enter or delete a character, the closest match will be displayed at the top of the list.



**▶ Deleting an entire entry:** Select  and press and hold  until the entry is deleted.**▶ Canceling search:** Switch from the smart speller to the list.



The entry at the top of the list is automatically highlighted.



**Selecting using the list**

- ▶ If necessary, switch from the smart speller to the list.
- ▶ Rotate  or slide  until the desired entry is highlighted.

**Selecting subentries**

- ▶ Select an entry with the  symbol and press .

The  symbol changes to  and the subentries are displayed.

- ▶ Rotate  or slide  until the desired subentry is highlighted.

## Control systems







### COMAND telephone\*

#### Displaying details of an entry

COMAND can also show a shortened entry in its entirety. For entries featuring subentries, the detailed view is only available for the subentries and not for the main entry.

- ▶ Select entry (▷ page 161).
- ▶ Select “Options” → “Details”.

The detailed view appears.


- ▶ **Closing detailed view:** Slide   or   or press  or back button  in the center console (▷ page 88).

#### Starting to dial the number of an entry

- ▶ Select entry (▷ page 161).


- ▶ Press .

or


- ▶ Press  on the telephone keypad.

A list appears if the entry contains subentries.


- ▶ Select desired subentry.

- ▶ Press  again.

or

- ▶ Press  on the telephone keypad.

#### Assigning a New Entry in the Address Book

 *This function is used to create a new entry in the address book and to enter the data (first name, last name and telephone number) manually.*


- ▶ Select “Options” → “New Entry” in the COMAND phone book list.

- ▶ **Selecting a number category:** Select a category, e.g. “Home”.

- ▶ **Selecting a telephone category:** Select a category, e.g. “Land Line”.

- ▶ **Confirming selection:** Select “Save”.

The input menu appears with the data fields.

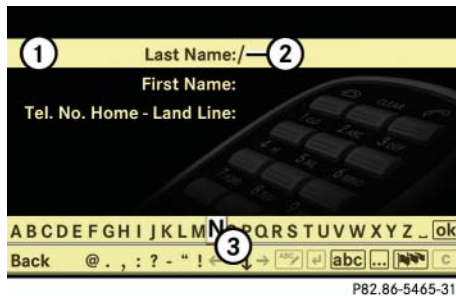

- ① Data field
- ② Input mark (cursor)
- ③ Input characters

- ▶ **Changing data field:** Slide  $\uparrow$   $\odot$   $\downarrow$  repeatedly until desired data field is highlighted.

or

- ▶ Select  $\uparrow$  or  $\downarrow$  repeatedly until desired data field is highlighted.
- ▶ **Entering data into a field:** Select all characters one by one from the input characters line ③.

- ▶ **Toggling upper and lower case for the input characters:** Select  $\boxed{ABC}$  or  $\boxed{abc}$ .

- ▶ **Changing language for the input characters:** Select  $\boxed{\text{Language}}$ .

- ▶ Select desired language.

- ▶ **Changing character set for the input characters:** Select  $\boxed{\dots}$ .

Depending on the previous setting, you will change to letters with special characters or to numbers with special characters.

- ▶ **Displaying special characters as input characters:** Select  $\boxed{\text{Symbols}}$  → “Symbols”.

- ▶ **Returning input characters to normal characters:** Select  $\boxed{\text{Normal}}$  → the desired language.

- ▶ **Moving cursor in the data field:** Select  $\boxed{\leftarrow}$  or  $\boxed{\rightarrow}$ .

- ▶ **Deleting individual characters:**

Select  $\boxed{c}$  and briefly press  $\odot$ .

The character to the left of the cursor is deleted.

- ▶ **Deleting an entire entry:** Select  $\boxed{c}$  and press and hold  $\odot$  until the entry is deleted.

- ▶ **Saving an entry:** Select  $\boxed{ok}$ .

- ▶ **Canceling an entry:** Select “Back”.

If one of the data fields contains data, a prompt will appear asking whether you want to save the entry.

- ▶ Select “Yes” or “No”.

The entry will either be saved or not, depending on your selection.

## Control systems

### COMAND telephone\*

#### Deleting an entry

**i** It is not possible to delete a phone book entry from the mobile phone using the COMAND phone book.

The deletion rules may vary, depending on the entry selected:

- Upper entry selected from the address book:  
the entry is deleted from the COMAND phone book and also from the address book, if the address book entry only contains telephone numbers.
- Subentry of an address book entry selected:  
the subentry is deleted from the COMAND phone book and from the address book.

▶ **Deleting:** Select entry (▷ page 161).

▶ Select “Options” → “Delete”.

A prompt appears asking whether the entry should be deleted.

▶ Select “Yes” or “No”.

Once “Yes” has been selected, the entry will be deleted according to the rules mentioned above.

#### Saving a phone book entry from the mobile phone in the address book







**i** This function is used to save an existing phone book entry from the mobile phone in the address book. The following options are available:

- Saving as a new address book entry
- Adding a telephone number to an existing address book entry

#### Saving as a new address book entry

▶ Select phone book entry from mobile phone (▷ page 161).

**i** All entries with the following category symbols are phone book entries in the mobile phone.

-  = symbol for “Mobile” category
-  = symbol for “Home” category
-  = symbol for “Work” category
-  = symbol for “Fax” category
-  = symbol for “Pager” category
-  = symbol for “Main” category

▶ Select “Options” → “Save” → “New Entry”.

▶ **Selecting a number category:**  
Select a category, e.g. “Home”.

▶ **Selecting a telephone category:**  
Select a category, e.g. “Land Line”.

▶ **Confirming selection:** Select “Save”.

The input menu appears with the data fields. The data field for the telephone number is filled in automatically. The data field for the last name is also filled when the entry to be saved contains a name.



- ① Data field
- ② Input mark (cursor)
- ③ Input characters

- ▶ Proceed as described in the “Changing data field” paragraph in the “Creating an new address book entry” section (▷ page 168).

### Adding a telephone number to an existing address book entry

- ▶ Select phone book entry from mobile phone (▷ page 161).

**i** All entries with the following category symbols are phone book entries in the mobile phone.

- = symbol for “Mobile” category
- = symbol for “Home” category
- = symbol for “Work” category
- = symbol for “Fax” category
- = symbol for “Pager” category
- = symbol for “Main” category

- ▶ Select “Options” → “Save” → “Add”.

- ▶ **Selecting a number category:** Select a category, e.g. “Home”.

- ▶ **Selecting a telephone category:** Select a category, e.g. “Land Line”.

- ▶ **Confirming selection:** Select “Save”.

The search menu for address book entries appears.

- ▶ Search for desired entry using smart speller function.

**i** There is a detailed description of how to search for an address book entry in the “Searching for an address book entry” section (▷ page 170).

- ▶ After selecting an entry, press .

If there are fewer than four numbers assigned to the selected entry in the selected number category, COMAND will save the data.

If four numbers are saved for the selected entry, a prompt will appear asking whether you want to overwrite one of the existing numbers.

- ▶ Select “Yes” or “No”.

If you select “Yes”, a selection list will appear containing the four existing numbers.

▷▷

## Control systems


### COMAND telephone\*

- ▷▷▶ Select number to be overwritten.  
COMAND overwrites the selected number with the new data.

#### Adding a telephone number to an address book entry

**i** This function is used to add a telephone number to an existing address book entry. The telephone number can be entered manually.

- ▶ Select address book entry (▷ page 161).

**i** All entries with the  symbol or without a symbol are address book entries.

- ▶ Select “Options” → “Add Number”.

**i** “Add Number” does not function if you have selected the main entry for an address book entry with subentries.

- ▶ **Selecting a number category:** Select a category, e.g. “Home”.

- ▶ **Selecting a telephone category:** Select a category, e.g. “Land Line”.

- ▶ **Confirming selection:** Select “Save”.

If four numbers are saved for the entry in the selected number category, a prompt will appear asking whether one of the existing numbers should be overwritten.

- ▶ Select “Yes” or “No”.

 

If you select “Yes”, a selection list will appear containing the four existing numbers.

- ▶ Select number to be overwritten.



The input menu appears with the data field for entering the new telephone number.

- ▶ **Entering digits:** Select all digits one by one from the input characters.

- ▶ **Moving cursor in the data field:** Select  or .

- ▶ **Deleting individual digits:** Select  and briefly press .

The digit to the left of the cursor is deleted.

- ▶ **Deleting an entire number:** Select  and press and hold  until the number is deleted.

- ▶ **Saving entry:** Select **ok**.

- ▶ **Canceling an entry:** Select “Back”.

If you have already entered data, a prompt will appear asking whether the entry should be saved.

- ▶ Select “Yes” or “No”.

The entry will either be saved or not, depending on your selection.

**COMAND address book****Warning!**

Please devote your attention first and foremost to the traffic situation you are in.


Before your journey, please familiarize yourself with the address book functions.

Only use the COMAND when road and traffic conditions permit you to do so. Otherwise you could be involved in an accident in which you or others could be injured.

**General notes**

The address book contains the entries that are saved in the COMAND address book memory. The entries are permanently available even if the phone is not inserted in the cradle\*. When you insert the mobile phone into the cradle\*, COMAND reads in the phone book entries saved in the mobile phone and stores the entries as a separate list from the COMAND address book. This list is a copy of the phone's phone book. This can take several minutes, depending on how many entries the phone book and the address book contain. After the read-in process, the COMAND compares the phone book entries with the address book entries. If all of the telephone numbers of a phone book entry in the mobile phone are present in an address book entry, the address book shows only the address book entry. If not, the address book also shows the phone book entry in the mobile phone.

**Address book menu overview**

 *The components and operating principles of COMAND can be found on (▷ page 87).*

Search	New Entry
Search for an address book entry	Create new address book entry



## Control systems

### COMAND telephone\*

#### Calling up the address book

- ▶ Select “Telephone” → “Data/Connections” → “Address Book”.

The main address book display appears.



#### Illustration: address book entries

**i** For phone book entries in the mobile phone that contain a name and a telephone number, you will see the name and the number. If a phone book entry in the mobile phone contains several telephone numbers, you will see the message “Multiple Numbers” instead of a telephone number.

#### Selecting an entry in the main address book display

- ▶ Slide **↑** **⊙** to select the main area.
  - ▶ Slide **↑** **⊙** **↓** or rotate **⌂** **⊙** to select an entry.
- or
- ▶ Searching for an entry with the smart speller (▶ page 170).

#### Creating a new address book entry

**i** Please observe the following when creating a new address book entry:

You can define your own address in the destination memory in navigation mode. When defining the address, you can transfer data already entered as an address book entry.

In the address book entry, the city and street must be spelled in the same way as the destination entry so that the data matches the digital map data.


In order for the state (province) to match the map data, its complete name or abbreviation may be entered.

Examples:

- Florida or FL
- Colorado or CO
- Alberta or AB
- Ontario or ON

- ▶ Select “Telephone” → “Data/Connections” → “Address Book” → “Options” → “New Entry”.

The input menu appears with the data fields and the input characters.

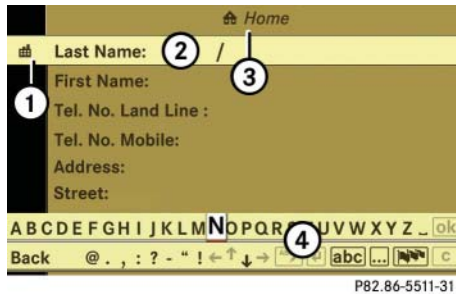

P82.86-5511-31

**Illustration: input menu for private data**

- ① To switch between work and home data ( or symbol)
- ② Selected data field with input mark (cursor)
- ③ Display of set data type – in example display, home data is set ( symbol and “Home” display)
- ④ Input characters

▶ **Switching between private and business data:** Select symbol ①.

The display switches to private or business data, depending on the previous status.

▶ **Changing data field:** Slide repeatedly until desired entry is highlighted.

or

▶ Select or repeatedly until desired entry is highlighted.

▶ **Entering data into a field:**

Select desired characters one by one from the input characters.

▶ **Toggling upper and lower case for the input characters:** Select or .

▶ **Changing language for the input characters:** Select .

▶ Select desired language.

▶ **Changing character set for the input characters:** Select .

Depending on the previous setting, you will change to letters with special characters or to numbers with special characters.

▶ **Moving cursor in the data field:**

Select or .

▶ **Deleting individual characters:**

Select and briefly press .

The character to the left of the cursor is deleted.

▶ **Deleting an entire entry:** Select and press and hold until the entry is deleted.

▶ **Saving an entry:** Select **ok**.

▶▶

## Control systems

### COMAND telephone\*

#### ▷▷▶ **Canceling an entry:** Select “Back”.

If one of the data fields contains new data, a prompt will appear asking whether you want to save the entry.

- ▶ Select “Yes” or “No”.

The entry will either be saved or not, depending on your selection.

#### **Searching for an address book entry**

- ▶ Select “Telephone” → “Data/Connections” → “Address Book”.

The search menu appears with the smart speller.




- ① Symbol for complete address data from the navigation system
- ② Symbol for summarized entries from the mobile phone with the same name but different telephone numbers
- ③ Category symbol
- ④ Smart speller
- ⑤ Symbol for voice entry
- ⑥ Back to the main address book display

Entries with category symbol ③ come from the mobile phone. The following category symbols are possible:



- = symbol for “Mobile” category
- = symbol for “Home” category
- = symbol for “Work” category
- = symbol for “Fax” category
- = symbol for “Pager” category
- = symbol for “Main” category or for unknown category or for phone entries that are saved on the SIM card of a GSM mobile phone

Entries without a category symbol or with the or symbols come from the COMAND address book. All other entries come from the mobile phone and are only visible when the mobile phone is in the cradle\*.

It is possible to add voice entries. Entries with the symbol contain a voice entry (▷ page 177).

Entries with the  symbol contain complete, navigable address data from the navigation system that correspond to digital map data. It is possible to quickly start route guidance to these types of entry (▷ page 176).

#### **Switching from the smart speller to the list**

- ▶ Slide  repeatedly or press  until the smart speller is hidden.



or

- ▶ Select **ok**.

 

#### **Switching from the list to the smart speller**

- ▶ Select **“Back”** from the list.



#### **Searching via the smart speller**

- ▶ Switch from the list to the smart speller if necessary.
- ▶ **Changing smart speller language:** Select .
- ▶ Select desired language.
- ▶ **Changing smart speller character set:** Select .




Depending on the previous setting, you will change to letters with special characters or to numbers with special characters.

- ▶ **Entering characters:** Select the characters one by one of the entry you are searching for.
- ▶ **Deleting individual characters:** Select  and briefly press .

Each time you enter or delete a character, the closest match will be displayed at the top of the list.

- ▶ **Deleting an entire entry:** Select  and press and hold  until the entry is deleted.
- ▶ **Canceling search:** Switch from the smart speller to the list (▷ page 171). The entry at the top of the list is automatically highlighted.
- ▶ **Going back to main address book display:** If necessary, switch from the list to the smart speller (▷ page 171) and select **“Back”** in the smart speller.

#### **Searching via the list**

- ▶ If necessary, switch from the smart speller to the list (▷ page 171).
- ▶ Rotate  or slide   until desired entry is highlighted on the list.

## Control systems

### COMAND telephone\*

#### Displaying a complete address book entry

##### Searching for the desired entry


- ▶ Search for an address book entry (▷ page 170).

or




- ▶ Select an address book entry in the main address book menu (▷ page 168).

- ▶ Press .

The detailed view appears.

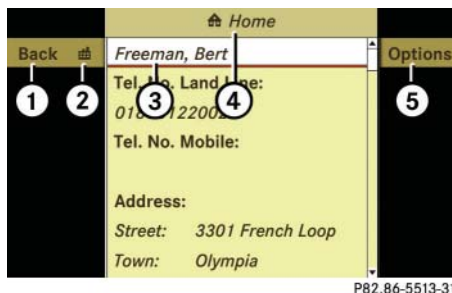

#### Illustration: detailed view for private data

   - ① To go back to the previous menu
- ② To switch between work and home data (  symbol or  )
- ③ Selected data field
- ④ Display of set data type – in example display, home data is set (  symbol and “Home” display)
- ⑤ To call up options

**i** The options available under “Options” menu item ⑤ depend on which data field ③ is selected. The following options may be available:

- Displaying abbreviated content in full (▷ page 173)
- Changing an address book entry (▷ page 174)
- Changing the description of a telephone number data field (▷ page 174)
- Adding a telephone number data field (▷ page 175)
- Calling a number saved in an entry (▷ page 176)
- Starting route guidance to an entry (▷ page 176)
- Options for voice entries (▷ page 177)



**Switching between private or business data**

- ▶ Select symbol ②.  
The display switches to private or business data, depending on the previous status.

**Selecting a different data field**

- ▶ Rotate  or slide .


**Displaying abbreviated content in full**

- ▶ Select “Options” → “Details”.  
The display is shown in full.
- ▶ **Closing entire display:** Slide  or press .


**Closing the detailed view**

- ▶ Select “Back”.


**Displaying of a complete phone book entry in the mobile phone**

 The mobile phone must be inserted in the cradle\*.

**Searching for the desired entry**


- ▶ Search for a phone book entry in the mobile phone (> page 161).
- ▶ Press .

The detailed view appears.

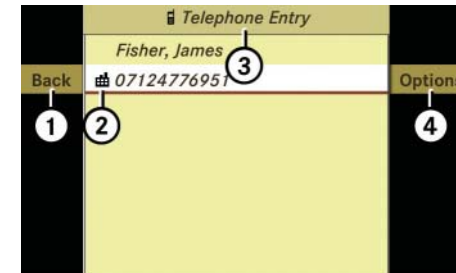

P82.86-5514-31

- ① To go back to the previous menu
- ② Category symbol
- ③ Display for phone book entry in mobile phone
- ④ To call up options

 If a phone book entry in the mobile phone has more than one telephone number, you will see all telephone numbers with the respective category symbol ② in the detailed view.

## Control systems

### COMAND telephone\*

**i** The options available under “Options” menu item ④ depend on which data field ③ is selected. The following options may be available:

- ▶ Calling a number saved in an entry (▷ page 176)
- ▶ Saving a phone book entry from mobile phone in the address book (▷ page 164)

#### **Closing the detailed view**

- ▶ Select “Back”.

#### **Changing an entry**

##### **Changing an address book entry**

- ▶ Search for an address book entry (▷ page 170).

or

- ▶ Display the details of an address book entry (▷ page 172).

The input menu appears with the data fields.

- ▶ Select “Options” → “Change”.
- ▶ Proceed as described in the “Switching between private and business data” paragraph in the “Creating a new address book entry” section (▷ page 168).

##### **Changing the description of a telephone number data field**

**i** This function is not possible for phone book entries in the mobile phone.

- ▶ Display the details of an entry and highlight the telephone number data field (▷ page 172).
- ▶ Select “Options” → “Change Category”.
- ▶ Select a number category, e.g. “Home”.
- ▶ Select a telephone category, e.g. “Land Line”.
- ▶ Select “Save”.

COMAND saves the data if there are fewer than four numbers assigned to the entry you are searching for in the selected number category.

Otherwise, you will see a prompt asking whether one of the existing numbers should be overwritten.

- ▶ Select “Yes” or “No”.

If you select “Yes”, a selection list will appear containing the four existing numbers.

- ▶ Select number to be overwritten.

COMAND overwrites the selected number with the new data.

#### **Adding to a telephone number data field**

**i** *One address book entry may contain up to four data fields for private telephone numbers and four data fields for business telephone numbers.*

*This function is not possible for phone book entries in the mobile phone.*

- ▶ Display the details of an entry and highlight the telephone number data field (▷ page 172).
- ▶ Select “Options” → “Add Number”.
- ▶ Select a number category, e.g. “Home”.
- ▶ Select a telephone category, e.g. “Land Line”.
- ▶ Select “Save”.

COMAND adds the data field to the entry if there are fewer than four numbers assigned to the entry in the selected number category. You can now enter a number into the data field.

- ▶ Proceed as described from the “Entering data into a field” operating step in the “Creating a new address book entry” section (▷ page 168).

If four numbers are already saved for the entry in the selected number category, a prompt will appear asking whether one of the data fields should be overwritten.

- ▶ Select “Yes” or “No”.

If you select “Yes”, a selection list will appear containing the four data fields.

- ▶ Select field to be overwritten.

COMAND deletes the number of the selected field. You can now enter a new number into the data field.

- ▶ Proceed as described from the “Entering data into a field” operating step in the “Creating a new address book entry” section (▷ page 168).

#### **Deleting an entry**

**i** *You cannot delete phone book entries from the mobile phone.*

- ▶ Search for desired entry (▷ page 170).
- ▶ Select “Options” → “Delete”.

A deletion prompt appears.

- ▶ Select “Yes” or “No”.

The entry will either be deleted or not, depending on your selection.



## Control systems

### COMAND telephone\*

#### Calling a number saved in an entry

**i** To do this, COMAND must be equipped with a telephone\*. The mobile phone must be inserted in the cradle\*.

▶ Display the details of an entry and highlight the telephone number data field (▷ page 172).

▶ Press  and select “Call”.

or

▶ Select “Options” → “Call”.

In both cases, the telephone\* connects the call. The COMAND display is showing the telephone mode screen.

#### Starting route guidance to an entry

 
▶ Search for an address book entry (▷ page 170).

▶ Display the details of an entry and highlight the address data field (▷ page 172).

▶ Select “Options” → “Navigate”.

or

▶ Press .

**i** Pressing  only functions if one of the address data fields contains data.

Further operation depends on whether the address data is complete and matches the digital map data of the navigation system. It does not match, for example, if it is not spelled in the same way as the destination entry.

#### **Address data is complete and matches digital map**

If “Navigate” is selected, the navigation system starts the route calculation.

#### **Address data is incomplete or does not match digital map**

**i** For the route calculation, the navigation system requires the correct spellings of the state (province), the city or zip code, the street and under some circumstances, the house number. The city and street must be spelled in the same manner as the destination entry.

The state (province) can be spelled as an entire name or as an abbreviation.

Examples:

- Florida or FL
- Colorado or CO
- Alberta or AB
- Ontario or ON

If “Navigate” is selected, a message appears indicating that the address is incomplete.

- ▶ **Closing message:** Select “OK”.

Depending on which data is missing or cannot be found on the digital map, you must now either:

- select a state (province)
  - select a county
  - or enter a city
  - or enter a street
  - or enter a house number
- ▶ **Selecting a state (province):** Select desired state (province) from the list.
  - ▶ **Selecting a county:** Select desired county from the list.
  - ▶ **Entering a city:** Proceed as described for destination entry in the “Entering a city” section (▷ page 208).

- ▶ **Entering a street:** Proceed as described for destination entry in the “Entering a street” section (▷ page 211).

- ▶ **Entering a house number:** Proceed as described for destination entry in the “Entering a house number” section (▷ page 216).

**i** *If you have added data, COMAND saves your additions. This means that you do not need to re-enter this additional data later on. The COMAND memory saves the additional data in a special field, which cannot be displayed. The data, which you have entered in the address book initially in the display, remains unchanged.*

If all data is available and matches the digital map data, the navigation system starts the route calculation.

### Voice entries

**i** *For voice entries, your vehicle must be equipped with Voice Control. You can not add voice entries to address book entries that have been read-in from the phone book of the mobile phone.*

### Adding or changing a voice entry

**i** *You can add one voice entry per address book entry.*

- ▶ Search for the address book entry with or without a voice entry (▷ page 170).
- ▶ Select “Options” → “Voice Name” → “Add” or “Change”.

Subsequent operation is controlled by voice. Voice Control guides you through the dialogs.

## Control systems

### COMAND telephone\*

#### Deleting a voice entry

- ▶ Search for the address book entry with a voice entry (▷ page 170).
- ▶ Select “Options” → “Voice Name” → “Delete”.

A deletion prompt appears.

- ▶ Select “Yes” or “No”.  
COMAND deletes the voice entry depending on your selection.

#### Listening to a voice entry

- ▶ Search for the address book entry with a voice entry (▷ page 170).
- ▶ Select “Options” → “Voice Name” → “Read Aloud”.

You will hear the voice entry.

#### Saving a phone book entry from mobile phone in the COMAND address book

#### Saving a phone book entry from mobile phone as new address book entry

**i** The mobile phone must be inserted in the cradle\* and the COMAND have read out the mobile phone book data. This can take several minutes, depending on how many entries each phone book contains.


- ▶ Search for phone book entry in mobile phone (▷ page 170).

or

- ▶ Display details of a phone book entry in the mobile phone (▷ page 162).
- ▶ Select “Options” → “Save” → “New Entry”.
- ▶ Select a number category, e.g. “Work”.
- ▶ Select a telephone category, e.g. “Mobile”.

- ▶ Select “Save”.

The input menu appears with the data fields. The name and the telephone number are entered automatically.

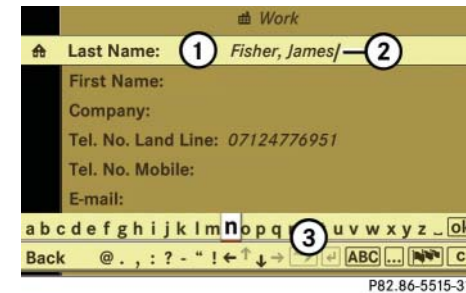

- ① Data field
- ② Input mark (cursor)
- ③ Input characters

- ▶ Proceed as described in the “Changing a data field” paragraph in the “Creating a new address book entry” section (▷ page 168).

### **Saving a phone book entry from the mobile phone in an existing address book entry**

**i** The mobile phone must be inserted in the cradle\*.

- ▶ Search for a phone book entry in the mobile phone (▷ page 170).


or

- ▶ Display details of a phone book entry in the mobile phone (▷ page 173).
- ▶ Select “Options” → “Save” → “Add”.
- ▶ Select a number category, e.g. “Home”.
- ▶ Select a telephone category, e.g. “Land Line”.
- ▶ Select “Save”.

The search menu for address book entries appears.

- ▶ Search for desired entry.

**i** There is a detailed description of how to search for an address book entry in the “Searching for an address book entry” section (▷ page 170).

- ▶ After selecting an entry, press .

COMAND saves the data if there are fewer than four numbers assigned to the selected entry in the selected number category. Otherwise, you will see a prompt asking whether one of the existing numbers should be overwritten.

- ▶ Select “Yes” or “No”.

If you select “Yes”, a selection list will appear containing the four existing numbers.

- ▶ Select the number to be overwritten.

COMAND overwrites the selected number with the new data.

### **Importing data from external Bluetooth® devices**

You can import vCards from external Bluetooth® devices into the address book. Please keep the following in mind:

- Bluetooth® is activated in COMAND (▷ page 180) and in the device concerned.
- The external device must be able to send vCards by Bluetooth®.
- The external device is inside the vehicle, switched on and authorized (▷ page 180).

## Control systems

### COMAND telephone\*

- ▶ **Importing:** Start data transfer on the external device (see operating instructions of the device concerned).

If there is no address book entry with the same first name and last name, COMAND imports the data.

If there is already an address book entry with the same first name and last name, a prompt will appear asking whether the existing data should be overwritten.

- ▶ Select “Yes” or “No”.

The existing address book entry will be overwritten or not, depending on your selection.

### Bluetooth® settings

#### General information about Bluetooth®

Bluetooth® technology is the standard for short-range wireless technologies, suitable for transmitting voice and data. It is possible to connect Bluetooth® devices wirelessly. Bluetooth® can be used to exchange vCards or make calls using a headset.

Bluetooth® technology uses the freely available ISM (Industrial Scientific Medical) wireless network that works at 2.45 GHz. Ranges of up to ten meters are possible with Bluetooth®.

#### Activate or deactivate Bluetooth®

- ▶ Select “Telephone” → “Data/Connections” → “Bluetooth” → “Deactivate Bluetooth”.

You have activated or deactivated Bluetooth®. A checkmark appears when Bluetooth® is deactivated.

### Connecting Bluetooth® devices

**i** To connect a Bluetooth® device, the Bluetooth® function must be activated in COMAND and in the device concerned. The Bluetooth® device must also be set to “visible” or “findable” in order for COMAND to find and display it. For the setting procedures, please see the operating instructions for the Bluetooth® device.

It is possible to establish a Bluetooth® connection between COMAND and the following types of device:

- Mobile phone (only for transferring business cards)
- Headset
- Laptop/PDA

You can connect up to twelve devices to COMAND but only one device can be active at a time.

The connection process includes searching for the device and its subsequent authorization.

### Calling up the Bluetooth® device list and searching for devices

- ▶ **Calling up the list:** Select “Telephone” → “Data/Connections” → “Bluetooth” → “Search for Bluetooth devices”.

When you call up the list for the first time after switching on COMAND, the search for devices in the reception range starts automatically. You will see a display to this effect.

The device list appears after a short while.


- ▶ **Canceling search:**  
Select “Cancel”.

The second time you call up the list, and each time thereafter, the device list appears immediately if COMAND has not been switched off and on again in the meantime.

- ▶ **Starting search manually:**  
Select “Update”.

The device list can contain the following devices:

- All detected devices, whether authorized or not.
- All authorized devices, whether detected or not.

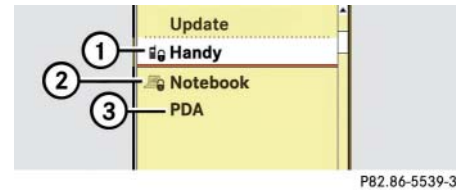

- ① Authorized and detected device – device and padlock symbol are the same color
- ② Device which was not detected, but which has been authorized in the past – device and padlock symbol are different colors (the device may be switched off or not in the vehicle, for example)
- ③ Newly detected device - not yet authorized (no symbol)

**i** If the device list already contains twelve authorized devices, you must revoke authorization for one of the authorized devices. Then you must switch this device off and then restart the search. Any new devices for which you would like to search will otherwise not appear in the list.

### Displaying details of a Bluetooth® device

- ▶ Call up Bluetooth® device list (▷ page 181).
- ▶ Select desired device.
- ▶ Select “Details”.

The detailed display for this device appears.

- ▶ **Closing detailed display:** Slide or .

## Control systems

### COMAND telephone\*

#### Authorizing a Bluetooth® device

- ▶ Call up the Bluetooth® device list (▷ page 181).
- ▶ Select unauthorized device.
- ▶ Select “Authorize”.

The input menu for the passkey appears.

**i** *The passkey is any one to sixteen-digit number which you can set yourself. You must enter the same number in COMAND and also in the device to be authorized.*

**i** *On devices which do not have an input keypad (e.g. headsets), the passkey is predetermined. In this case, it is not necessary to enter the number on the device itself. You will usually find the passkey in the operating instructions for the device.*

#### ▶ Entering passkey into COMAND:

Select the digits one by one.

- ▶ **Deleting digits:** Select **[c]** and briefly press **☺**.

#### ▶ Canceling entry into COMAND:

Select “Back”.

#### ▶ Confirming entry into COMAND:

Select **ok**.

- ▶ If necessary, enter the same passkey into the Bluetooth® device (see the operating instructions for the device).

The device is authorized.

#### De-authorizing a Bluetooth® device

- ▶ Call up Bluetooth® device list (▷ page 181).
- ▶ Select authorized device.
- ▶ Select “De-authorize”.

A prompt appears asking whether you really want to de-authorize this device.

- ▶ Select “Yes” or “No”.

If you select “Yes”, the device will be de-authorized.

**i** *If you de-authorize a device which has been authorized in the past and which is not detected in the search, this device will no longer be displayed in the device list. Devices which have been authorized in the past but which are not detected in the search are either not switched on or not in the vehicle.*

## SMS messages (Short Message Service)

### SMS functions

The following functions are available:

- Receive
- Read

The following conditions must be fulfilled in order to use the functions:

- The mobile phone is inserted in the cradle and switched on.
- The PIN has been entered (only GSM mobile phones).
- The mobile phone is logged into a mobile network.
- Mobile phone book must be downloaded and available in COMAND.


### Inbox


#### Calling up the SMS inbox

- Select “Telephone”.

The main telephone menu appears.




- ① Symbol  for unread messages in the SMS inbox


**i** The  symbol only appears for those messages which are received while the mobile phone is inserted in the cradle.

- Select “Text Message”.

The SMS inbox appears.

**i** “Text Message” does not function if the SMS inbox contains no SMS messages. The SMS inbox only shows the messages which are received while the mobile phone is inserted in the cradle.

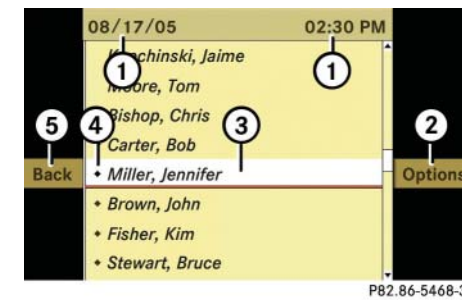

- ① Date and time the highlighted SMS message was received
- ② To call up options
- ③ Highlighted SMS message
- ④ Symbol  for unread SMS message
- ⑤ Back to main telephone menu



## Control systems

### COMAND telephone\*

**i** The SMS messages are sorted by the date and time they were received. The most recent message is at the top of the list. If the name and telephone number of the sender is saved in the address book or phone book of the mobile phone, you will see the name of the sender in the SMS inbox. Otherwise, you will see the telephone number of the sender.

#### Selecting an SMS message

- ▶ Rotate or slide and then press .

#### Showing abbreviated sender display in full

- ▶ Select SMS message → “Options” → “Details”.

The detailed view appears.

- ▶ **Closing detailed view:** Slide or press .

#### Calling an SMS sender

- ▶ Select SMS message → “Options” → “Call”.

The telephone connects the call.

#### Saving SMS sender as new COMAND address book entry

- ▶ **Selecting an SMS message:** In the SMS inbox, select a message → “Options” → “Save Number” → “New Entry”.
- ▶ **Selecting a number category:** Select a category, e.g. “Home”.
- ▶ **Selecting a telephone category:** Select a category, e.g. “Land Line”.
- ▶ **Saving:** Select “Save”.

The input menu appears with the data fields. The data field for the telephone number is filled in automatically.



- ① Data field
- ② Input mark (cursor)
- ③ Input characters

- ▶ Proceed as described in the “Changing data field” paragraph in the “Assigning a New Entry in the Address Book” section (▷ page 162).


**Adding an SMS sender's telephone number to an existing address book entry**


- ▶ **Selecting an SMS message:** In the SMS inbox, select a message → “Options” → “Save Number” → “Add”.
- ▶ Proceed as described in the “Selecting a number category” paragraph in the “Adding a telephone number to an existing address book entry” section (▷ page 165).


**Exiting the SMS inbox**




- ▶ Select “Back”.
- The main telephone menu appears.

**Reading an SMS message**

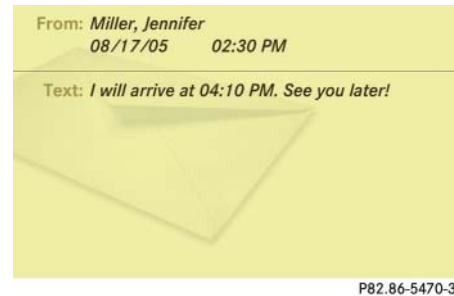- ▶ In the SMS inbox, select an SMS message and press .
- The SMS message appears.

**Using data in a text message**

 If the SMS message contains telephone numbers or navigable address data, you can select this data and place a telephone call or transfer the address data to the navigation system.


- ▶ **Selecting data from the text:** Rotate  or slide .
- ▶ **Using data:** Press  → “Use”.

If you have selected a telephone number, the telephone connects the call.  
If you have selected a navigable address, it is transferred to the navigation system.


**Calling an SMS sender**


- ▶ Press  → “Call”.

The telephone connects the call.

 This function is not possible with all SMS senders.

**Saving SMS sender as new address book entry**


 This function is not possible with all SMS senders.

- ▶ Press  → “Save Number” → “New Entry”.
- ▶ Proceed as described in the “Selecting a number category” paragraph in the “Saving SMS sender as new address book entry” section (▷ page 184).

## Control systems

### COMAND telephone\*

#### *Adding an SMS sender's telephone number to an existing address book entry*

- ▶ Press  → "Save Number" → "Add".
- ▶ Proceed as described in the "Selecting a number category" paragraph in the "Adding a telephone number to an existing address book entry" section (▷ page 165).

#### *Closing an SMS message and returning to SMS inbox*

- ▶ Press  → "Back".

## ▼ COMAND navigation

### Safety precautions

#### Warning!



For safety reasons, only enter a destination when the vehicle is stationary. When the vehicle is in motion, a passenger should enter the destination. Study manual and select route before driving.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

COMAND calculates the route to the destination without taking account of the following, for example:

- Traffic lights
- Stop and right-of-way signs
- Parking or stopping prohibited areas
- Lane merging
- Other road and traffic rules and regulations
- Narrow bridges

COMAND may give incorrect navigation commands if the data in the digital map does not correspond with the actual road/traffic situation. DVD maps do not cover all areas nor all routes within an area. For example, if the traffic routing has been changed or the direction of a one-way road has been reversed.

For this reason, you must always observe applicable road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the navigation commands generated by the system.

#### Warning!



Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Consulting the symbols or map display for directions may cause you to divert your attention from driving and increase your risk of an accident.

## Control systems

### COMAND navigation (introduction)

#### Map software

The digital maps generated by the map software become outdated in the same way as conventional road maps. Optimum route guidance can only be provided by the navigation system in conjunction with the most up-to-date map software.

Information about new map software versions can be obtained from an authorized Mercedes-Benz Center.

#### Updating the map software

You can update the map software yourself using a DVD.

##### Notes about handling DVDs

- Only hold discs by the edge.
- Handle discs carefully to prevent read problems.
- Avoid getting scratches, fingerprints and dust on discs.
- Use a commercially-available cleaning cloth to clean discs. Do not wipe them with a circular motion, but only in straight lines from the center outwards.
- Place discs back in their boxes after use.
- Protect discs from heat and direct sunlight.

#### Updating process

The updating process has the following phases:


- Loading a DVD into the DVD changer (▷ page 189)
- Updating process (▷ page 190)

**i** *The updating process can take between 10 and 60 minutes, depending on the size of the map software. If the radio was switched on before you started the updating process, you can still adjust the volume. You can also use COMAND to operate the automatic air conditioning and to cancel the process. Other functions are not operational. If possible, carry out the update when the vehicle is stationary.*

**i** If you carry out the update with the engine switched off and the vehicle battery has insufficient power, COMAND may automatically switch off during the process in order to protect the battery. If this occurs, restart the update with the engine running period. Similarly, if the SmartKey position is unintentionally switched to **0**, restart the update.

**Warning!**

Never leave the engine running in an enclosed space. The exhaust gases contain carbon monoxide. Inhaling exhaust gases constitutes a health hazard and could lead to loss of consciousness or even death.

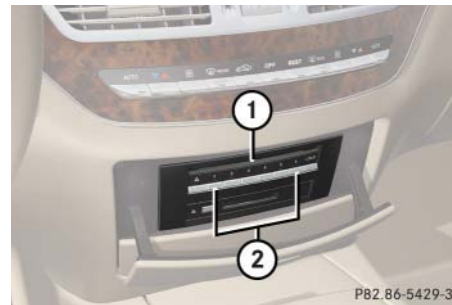**Loading a DVD into the DVD changer**

- ① Disc slot
- ② Magazine tray buttons 1 - 6

**i** Each magazine tray button ② indicates the status of the corresponding magazine tray by means of an LED.

- LED off = magazine tray is empty
- LED constantly lit = magazine tray is loaded
- LED flashes = CD/DVD changer requesting disc to be loaded

- ▶ Switch on COMAND (▷ page 87).
- ▶ Press one of the magazine tray buttons ②.  
If a disc is loaded, it will be ejected.
- ▶ Take disc out of slot ①.
- ▶ Wait until LED for magazine button ② which you pressed flashes quickly.
- ▶ Slide DVD into slot ① with printed side facing upwards.  
COMAND loads the DVD.

## Control systems

### COMAND navigation (introduction)

#### Updating

After you have loaded the DVD, you will see a message to the effect that the disc does not contain a recognizable audio format.

- ▶ **Confirming message:** Press .

COMAND checks whether the map software on the DVD is compatible with the vehicle's navigation system and whether it is compatible with the current system software.

#### Map software is compatible with the navigation system and the current system software

COMAND now checks whether the map data on the DVD is already installed.

#### Map data is not yet installed

You will see a comparison of the version statuses in the display and a prompt will appear asking whether you want to continue with the update.

- ▶ Select "Yes" or "No".

If you select "No", COMAND automatically ejects the DVD and the map data is not updated.

- ▶ Take DVD out of the slot.

If you select "Yes", the map data is updated.

#### Map data is already installed

You will see a message that the map data is already installed and a prompt will appear asking you whether you want to continue with the update.

- ▶ Select "Yes" or "No".

If you select "No", COMAND automatically ejects the DVD and the map data is not updated.

- ▶ Take DVD out of slot.

If you select "Yes", the existing map data is saved again.

#### Updating the map data

While the update is running, you will see a message to this effect and a progress bar. The progress bar fills up from left to right during the update.



- ① Progress bar

You can either cancel the update or allow it to run to the end without canceling.

- ▶ **Canceling an update on the DVD changer:** Press corresponding magazine tray button ② (▷ page 189).

The DVD will be ejected in both cases.

- ▶ Take DVD out of slot.

**i** If the update is canceled, the navigation system remains fully operational with the previous map data. You can restart the update at a later date. It will then continue from the point where it was canceled.

- ▶ **To allow the update to run to the end without canceling:** Take no further action.

If the update is successfully completed, you will see a message to this effect.

- ▶ **Confirming message:** Press .

COMAND ejects the DVD.

- ▶ Take DVD out of slot.

The update is complete.

If the update is not successfully completed, you will see a message that the map update is not possible.

- ▶ **Confirming message:** Press .

COMAND ejects the DVD.

- ▶ Take DVD out of slot.

**i** The navigation system remains fully operational with the previous map data.

The update may not be successfully completed for the following reasons:

- DVD dirty or scratched
  - ▶ Clean DVD.
    - See the “Notes about handling DVDs” section (> page 188).
  - ▶ Restart update.
- Overheating due to excessive temperatures in the vehicle interior
  - ▶ Wait until vehicle interior has cooled down.
  - ▶ Restart update.
- The storage medium (hard disk) integrated in COMAND is defective.
  - ▶ Consult an authorized Mercedes-Benz Center.

### Map software is not compatible with the navigation system

You will see a message that the update is not possible.

- ▶ **Confirming message:** Press .

COMAND ejects the DVD.

- ▶ Take DVD out of slot.
- ▶ Load a DVD which is compatible with the vehicle’s navigation system.

### Map software is not compatible with the current system software

You will see a message that the system software and the map software are not compatible.

- ▶ **Confirming message:** Press .

COMAND ejects the DVD.

- ▶ Take DVD out of slot.
- ▶ Have the system software updated at an authorized Mercedes-Benz Center.

**i** The map software cannot be updated until the system software has been updated.



## Control systems

### COMAND navigation (introduction)

#### General notes

#### Operational readiness of the navigation system following a system software update by an authorized Mercedes-Benz Center

After a system software update by an authorized Mercedes-Benz Center, the installed map software may no longer be compatible. If this is the case, the navigation system will not be operational.

You will know if this is the case, when the following message will appear when you switch to navigation mode: *“The system software has been updated. The map software must be updated now. Please insert the DVD with the map software.”*

- **Updating map software:** Proceed as described in the “Updating the map software” section (> page 188). Use map software which is compatible with the system software.

**i** Please note that the update must be allowed to run to the end in this case. If you interrupt it, the navigation system will continue to be non-operational.

#### Initial use or use following a system software update

In both these cases, the navigation system must determine the position of the vehicle. You may have to drive for a while before precise route guidance is possible.

#### GPS reception

Correct functioning of the navigation system depends on GPS reception, among other things. In certain situations, GPS reception may be impaired, there may be interference or there may be no reception at all, e.g. in tunnels, in multistory parking garage or due to snow on the GPS antenna. If there is snow on the GPS antenna, you should remove it. The GPS antenna is at the back of the vehicle roof.

The roof cargo container\* may also impair mobile phone reception and GPS coverage.

#### Route guidance after vehicle transportation

COMAND has to redetermine the position of the vehicle if the vehicle has been transported (e.g. by ferry, by train or after towing).

Positioning takes place automatically even when COMAND is switched off. The duration varies from one case to another.

Route guidance may be restricted as follows during vehicle positioning:

- Navigation announcements, route guidance displays and displayed street names are not consistent with the actual location of the vehicle.
- COMAND does not generate navigation announcements.

- Instead of the route guidance displays, you see the “Off Road” display and a direction arrow. The direction arrow shows the compass heading to the destination.

When positioning is complete, route guidance is once again possible using navigation announcements and route guidance displays.

#### Interrupting the journey during route guidance

The following applies if you interrupt the journey during route guidance and continue the journey later:

- COMAND resumes route guidance automatically if you continue the journey within 2 hours.
- Route guidance is canceled if you continue the journey after more than 2 hours. It will be necessary to resume the canceled route guidance manually (▷ page 244).

**i** *The journey is interrupted if you park the vehicle and switch off COMAND. The journey is continued when you switch COMAND back on and start driving on.*

#### Hard disk errors

COMAND has an integrated hard disk on which the map software is saved.

If an area of the hard disk has an error, COMAND can no longer access the map data in this area, for example, when calculating a route.

The message “*Navigation Unavailable. Please refer to the operating instructions.*” appears.

► **Deleting message:** Switch COMAND off and back on.

**i** *If you switch the navigation system off/on, it will be operational again until it has to access the faulty area of the hard disk again. The message will then appear again. Consult an authorized Mercedes-Benz Center.*

#### Units of measurement

The units of measurement in navigation mode are identical to those set in the instrument cluster.

#### Input restrictions

The input restrictions are imposed starting at a particular vehicle speed. The restrictions are canceled as soon as the speed drops below a certain value.

When the restriction is active, certain operations or entries are not possible.

You will notice this by the fact that some menu items cannot be selected or certain operations will not be possible.

## Control systems

### COMAND navigation (introduction)

#### Navigation system menu overview

**i** The components and operating principles of COMAND can be found on (> page 87).

Info (only with route guidance active)	Traffic (TMC)	Route (only with route guidance active)	Position	RPT (only with route guidance active)	Destination
Information about the active route guidance	Call up real-time traffic messages	<ul style="list-style-type: none"> <li>• Call up route info</li> <li>• Call up route browser</li> <li>• Call up the de-tour function</li> </ul>	<ul style="list-style-type: none"> <li>• Call up the save position memory function</li> <li>• Center the map on the vehicle's position</li> <li>• Center the map on the destination position</li> </ul>	Repeat the current navigation announcement	Select: <ul style="list-style-type: none"> <li>• a destination</li> <li>• stopover</li> <li>• save destination</li> <li>• cancel route guidance</li> </ul>

#### Calling up the map display and switching to navigation mode

- ▶ Press the **TEL NAVI** shortcut button once or twice.

**i** The number of times you have to press the **TEL NAVI** shortcut button depends on the operating mode currently selected.

or

- ▶ In the main function line, select “Navi”.

Both of these will call up the map display. You will see the map with the menu system either shown or hidden.

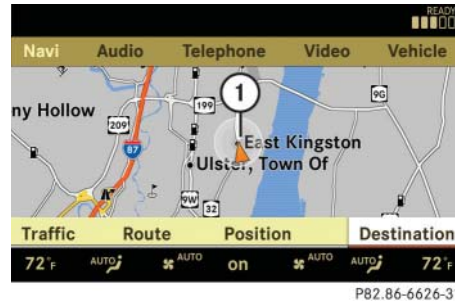


Illustration: map with route guidance inactive and with the menu system shown

- ① Current vehicle position





Illustration: map with route guidance inactive and with the menu system hidden (full screen mode)

- ① Current vehicle position
- ② Set map orientation (▷ page 198)
- ③ Map scale selected (▷ page 196)

## Control systems

### COMAND navigation (introduction)


#### Hiding or showing the menu system

- ▶ **Hiding:** Slide  .


The “Full Screen” menu item appears in the main area of the display; it is automatically selected.


- ▶ Press .


The menu system is hidden. The map can be seen in the full screen.

- ▶ **Showing:** Press  in the full-screen map display.


#### Adjusting the map scale

 It is only possible to adjust the map scale with the menu system hidden (full-screen map display).


- ▶ Rotate  until the desired map scale is set.

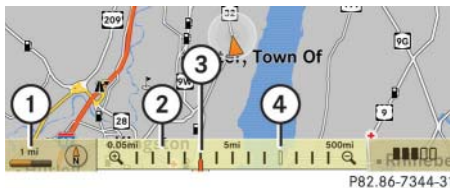

- ① Currently set map scale as number
- ② Scale
- ③ Currently set map scale as a needle on the scale
- ④ Previously set value before calling up the scale


As soon as you rotate , scale ② appears. Rotating clockwise zooms in, rotating counterclockwise zooms out.

#### Saving current vehicle position as destination in last destinations list

- ▶ **Showing menu system, if necessary:** Press .
- ▶ **Saving:** Select “Position” → “Save Position”.

COMAND saves the current vehicle position as a destination in the last destinations (▷ page 258).

#### Moving the map

 It is only possible to move the map with the menu system hidden.

- ▶ Slide  ,   or .

A crosshair appears on the map.




- ① Crosshair
- ② Details of the crosshair position
- ③ Map scale

**i** Display ② may be the name of a road, for example, provided the digital map contains the necessary data.

If no data is available, display ② shows:


- the coordinates of the crosshair if the geo-coordinate display is switched on (▷ page 200) and the GPS signal is strong enough
- no display if the geo-coordinate display is switched off (▷ page 200)

### Adjusting the map scale

- ▶ Rotate .

Rotating clockwise zooms in, rotating counterclockwise zooms out.

### Saving crosshair position as destination in last destinations list

- ▶ **Showing menu system, if necessary:** Press .
- ▶ **Saving:** Select “Position” → “Save Position”.

COMAND saves the crosshair position as a destination in the last destinations list (▷ page 258).

### Hiding the crosshair

- ▶ Press back button  in the center console (▷ page 88).

The crosshair disappears and the map is centered on the vehicle position.

or


- ▶ Set the map to the vehicle or destination position, see the explanation below.

### Centering the map on the vehicle or destination position

**i** If you have moved the map, you can use this function to rapidly return the map to the position of the vehicle or destination. It is only possible to center the map on the destination position when route guidance is active.

- ▶ **Centering on the vehicle’s position:** Select “Navi” → “Position” → “Vehicle Position Map”.

or

- ▶ Press back button  when the crosshair is displayed.

- ▶ **Centering on the destination:** Select “Navi” → “Position” → “Destination Position Map”.

## Control systems

### COMAND navigation (introduction)

#### Basic settings

**i** You can make the following settings regardless of whether route guidance is active or inactive.

#### Map perspective

COMAND can display the map from a bird's eye view or in the normal map view.

► **Select map perspective:**

Select “Navi” → “Navi” → “Map Display”.

The map display list appears. A dot • indicates the current setting.

► Select “Bird's-eye view”.

The bird's eye view is switched on or off, depending on the previous status.

 
 
**i** If you scroll the map in the bird's eye view, COMAND switches back to the normal map view.

#### Map orientation



① Current map orientation

The following may be displayed:

-  = “Heading Up” (the map is displayed so that the direction of travel is always up; the orange point of the icon points north)
-  = “North Up” (the map view is displayed so that north is always up)

► **Setting map orientation:**

Select “Navi” → “Navi” → “Map Display”.

The map display list appears. A dot • indicates the current setting.

► Select “North Up” or “Heading Up”.

► **Exiting menu:** Slide ←⊙→.

The map orientation changes accordingly.

#### Setting POI symbols

You can set which points of interest (POIs) should be displayed as symbols in the map. POIs are garages, hotels, movie theaters or restaurants, for example.

**i** Depending on the map scale on the map, POI symbols may not be visible on the map although their display is activated. In addition, POI symbols may be covered by the map's labels.

The following settings are possible:

- “Standard symbols” (symbol determined by the factory settings)
- “Personal symbols” (you can determine the symbols yourself)
- “No symbols”

- ▶ **Adjusting:** Select “Navi” → “Navi” → “Map Display”.

The map display list appears. A dot ● indicates the current setting.


- ▶ Select “Standard symbols”, “Personal symbols” or “No symbols”.

If you select “Personal symbols”, the list of POIs appears.

- ▶ **Switching POI symbol display on or off:** Select the desired POI.

The corresponding symbol displays are switched on or off, depending on the previous status. A check-mark indicates which status is active. You can switch on the symbol displays for more than one POI.

**i** *The list shows all symbols that are contained in the digital map across all states (USA) and/or provinces (CDN). Not all POIs in all states (USA) or in all provinces (CDN) are available, however. Certain POI symbols may not be displayed on the map, even if the symbol display is switched on.*

- ▶ **Exiting menu:** Slide ←⊙→ or press back button  in the center console (▷ page 88).

#### Arrival time and distance

You can set whether the estimated arrival time and the distance to the destination should be displayed in the map.

- ▶ **Displaying:** Select “Navi” → “Navi” → “Map Display”.

The map display list appears. A dot ● indicates the current setting.

- ▶ Select “Arrival Time/Distance”.

Depending on the previous status the display showing the arrival time and distance is switched on or off.

#### Current street

You can set whether the current street you are driving on should be displayed in the map.

- ▶ **Displaying:** Select “Navi” → “Navi” → “Map Display”.

The map display list appears. A dot ● indicates the current setting.

- ▶ Select “Current Street”.

Depending on the previous status the display showing the current street is switched on or off.



## Control systems

### COMAND navigation (introduction)

#### Geo-coordinate display



#### Illustration: map with geo-coordinate display switched on

- ① Current height above sea level
- ② Number of GPS satellites from which signals for positioning can be received
- ③ Coordinate display

**i** There must be sufficient GPS reception for displays ①, ② and ③ to be shown. Height display ① is an approximation because the navigation system uses the GPS signals for the calculation.

#### Display options with geo-coordinate display switched on

If the crosshair is displayed on the map view (map was moved manually), only display ③ is visible.

It shows either the coordinates of the crosshair or other data on the crosshair position, e.g. a street name. The digital map must contain relevant data in order for this other data to be displayed.

**i** If there is no crosshair on the map view, displays ①, ② and ③ are visible. Display ③ shows the coordinates of the current vehicle position.


#### Switching the geo-coordinate display on or off

- ▶ Select “Navi” → “Navi” → “Map Display”.

The map display list appears.


- ▶ Select “Coordinates”.

The geo-coordinate display is switched on or off, depending on the previous status. A checkmark indicates which status is active.

- ▶ **Exiting menu:** Slide ←⊙→ or press back button  in the center console (▷ page 88).

### Setting route type

You can set the following route types:


- “Fast Route”: COMAND calculates a route with the shortest possible (minimized) driving time.
  - “Short Route”: COMAND calculates a route with the shortest possible (minimized) distance taking distance and driving time into account.
- ▶ Select “Navi” → “Navi” → “Mode”.
- The mode list appears. A square ■ indicates the current setting.
- ▶ **Select route type:** “Fast Route” or “Short Route”.
- ▶ **Exit menu:** Slide ←⊙→ or press back button  in the center console (▷ page 88).

**i** *If you change the route type setting during active route guidance, COMAND calculates a new route. If you change the setting when route guidance is inactive, COMAND uses the new setting for the next route guidance.*

### Setting route mode

**i** *This function allows you to set the following options for route guidance:*

- “Minimize Highways”
  - “Minimize Toll Roads”
  - “Minimize Tunnels”
  - “Minimize Ferries/Motorail”
- ▶ Select “Navi” → “Navi” → “Mode”.
- The mode list appears.
- ▶ **Switching mode on or off:**  
Select desired modes.
- Depending on the previous status, the mode is switched on or off. A check-mark indicates that the mode is switched on. It is possible to switch on more than one mode.

- ▶ **Exiting menu:** Slide ←⊙→ or press back button  in the center console (▷ page 88).

COMAND will verify whether it can incorporate the modes if you select them with route guidance active.

If it can, COMAND calculates a new route while incorporating the modes selected.

If it cannot, you will see and hear a corresponding message.

- ▶ Select “OK”.

COMAND calculates a new route. Only those modes which can be incorporated are used.

## Control systems

### COMAND navigation system (entering a destination)

#### Warning!



For safety reasons, only enter a new destination when the vehicle is stationary.

**i** It is possible to enter a destination regardless of whether route guidance is active or inactive.

The following destination entry options are available:

- Entering a destination by address
- Entering a destination from the destination memory
- Entering a destination from the list of last destinations
- Entering a destination from the map
- Entering a stopover
- Entering a POI

#### Entering a destination by the address

**i** It is not possible to enter an address when the vehicle has exceeded a certain speed. As soon as the vehicle speed drops below a certain value, the function is available again.

**i** If Russian or Chinese is set as the system language, the address must be entered using Latin letters. Setting the system language (> page 262).

To enter an address you may proceed as follows:

- Enter state (USA) or province (CDN), street and city
- Enter state (USA) or province (CDN), city and street
- Enter state (USA) or province (CDN), city and center
- Enter state (USA) or province (CDN), zip code and center
- Enter state (USA) or province (CDN), zip code and street

**i** As additional information to the street entry, you can enter either a house number or an intersection. A zip code entry replaces the city entry.

#### Calling up the address input menu

- ▶ Select “Navi” → “Destination” → “Address Entry”.

The address input menu appears. It shows a state (USA) or a province (CDN). Which state or province is shown depends on the vehicle’s location.



P82.86-7348-31

① State (USA) or province (CDN)

## COMAND navigation system (entering a destination)

**Menu items in the address input menu**

Some menu items will not or not yet be available, depending on the sequence in which you enter the address and the data version.

Example: If you have not made any entries, menu items “House No.”, “Center”, “Intersection”, “POI”, “Start” and “Save” will not yet be available. And the “Zip Code” menu item will not be available if the digital map does not contain any zip codes.

**Entering a state (USA)**

**i** You can only enter those states which are saved on the digital map.

- ▶ In the address input menu, select “State/Prov” → “States (U.S.)”.

A list of states appears with input characters; the input characters are automatically activated.

**List of states with input characters**

- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Clear last character entry
- ⑤ Currently selectable characters
- ⑥ Currently non-selectable characters
- ⑦ Input characters
- ⑧ List of states
- ⑨ Currently selected characters

**i** In the list of input characters ⑦, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

While the numbers are being selected as described below, the top list entry ① always shows the state which best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements characters ② entered by the user with other likely input characters ③.

- ▶ **Selecting characters:** Slide ←↻→ or rotate ↻.

- ▶ **Confirming character selection:** Press ↻.


- ▶ **Deleting individual characters:** Select [c] in the bottom line and press ↻.

- ▶ **Deleting an entire entry:** Select [c] in the bottom line and press ↻ until the entire entry is deleted.


▷▷


## Control systems

### COMAND navigation system (entering a destination)


 
▷▷▶ **Canceling an entry:** Select “Back” in the bottom line and press .

or


▶ Press back button  in the center console (▷ page 88).

As soon as COMAND can clearly attribute the characters entered to a state, the input characters  disappear automatically. You see the list of states without the input characters. Here you can confirm the current entry or make another selection.

During character entry, you can also manually switch to the list of states without input characters at any time.

▶ **Switching manually to list of states without input characters:** Slide  .



or

▶ Select **ok** in the second line from the bottom and press .

#### List of states without input characters



▶ **Selecting a state:** Slide    or rotate  .

▶ **Canceling selection:** Select “Back” by sliding  and press .

or


▶ Press back button  in the center console (▷ page 88).

▶ **Confirming selection:** Press .

The address input menu appears again. It shows the abbreviation for the selected state.

The following menu items are now available:

- “Map”: Entering a destination from the map (▷ page 225)
- “State/Prov”: Re-enter state (USA) or province (CDN)
- “City”: Entering a city (▷ page 208)
- “Street”: Entering a street (▷ page 211)
- “Zip Code”: Entering the zip code (▷ page 206)

 *It is not possible to enter zip codes if the digital map does not contain any zip codes for the selected state.*

▶ **Continuing destination entry:** Select one of the menu items mentioned above.

## COMAND navigation system (entering a destination)

**Entering a province (Canada)**

- ▶ In the address input menu, select “State/Prov” → “Provinces (Canada)”.

A list of provinces appears.

- ▶ Select desired province.

The address input menu appears again. It shows the abbreviation for the selected province.

The following menu items are now available:

- “Map”: Entering a destination from the map (▷ page 225)
- “State/Prov”: Re-enter state (USA) or province (CDN)
- “City”: Entering a city (▷ page 208)
- “Street”: Entering a street (▷ page 211)
- “Zip Code”: Entering the zip code (▷ page 206)

**i** *It is not possible to enter a zip code if the digital map does not contain any zip codes for the selected province (CDN).*

- ▶ **Continuing destination entry:**  
Select one of the menu items mentioned above.

**Quick access to most recently entered states (USA) or provinces (CDN)**

- ▶ In the address input menu, select “State/Prov” → “Last States/Provinces”.

The list of most recently entered states (USA) or provinces (CDN) appears. The last entry is at the top of the list.

- ▶ Select desired state (USA) or desired province (CDN).

The address input menu appears again. It shows the abbreviation for the selected state (USA) or province (CDN).

The following menu items are now available:

- “Map”: Entering a destination from the map (▷ page 225)
- “State/Prov”: Re-enter state (USA) or province (CDN)
- “City”: Entering a city (▷ page 208)
- “Street”: Entering a street (▷ page 211)
- “Zip Code”: Entering the zip code (▷ page 206)

**i** *It is not possible to enter a zip code if the digital map does not contain any zip codes for the selected state (USA) or province (CDN).*

- ▶ **Continuing destination entry:**  
Select one of the menu items mentioned above.

## Control systems


### COMAND navigation system (entering a destination)

#### Entering the zip code

**i** It is not possible to enter a zip code if you have already entered other address data aside from the state (USA) or province (CDN). You can only enter those zip codes which are saved on the digital map. The available zip codes depend on the state (USA) or province (CDN) most recently entered.

- ▶ In the address input menu, select “Zip Code”. A list of zip codes appears with input characters; the input characters ④ are automatically activated.

#### List of zip codes with input characters

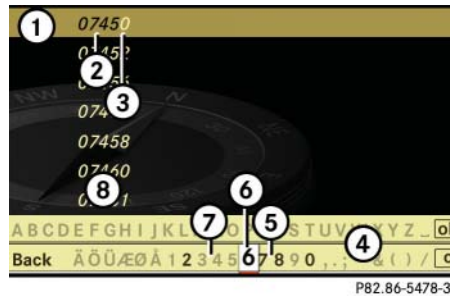

- ① Top list entry based on the input data up to that point
- ② Numbers entered by the user
- ③ Numbers automatically added by the system
- ④ Input characters
- ⑤ Currently selectable numbers
- ⑥ Currently selected numbers
- ⑦ Currently non-selectable numbers
- ⑧ List of zip codes

**i** In the list of input characters ④, you can only select numbers which can be currently entered. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

While the numbers are being selected as described below, the top list entry ① always shows the zip code which best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements numbers ② entered by the user with other likely numbers ③.

- ▶ **Selecting numbers:** Slide ←⊙→ or rotate Ⓞ.

or

- ▶ Enter numbers with the telephone keypad using the **0** - **9** buttons (▷ page 90).

- ▶ **Confirming number selection:** Press ⊙.

## COMAND navigation system (entering a destination)

► **Deleting individual numbers:**  
Select **c** in the bottom line and press **OK**.

► **Deleting an entire entry:** Select **c** in the bottom line and press **OK** until the entire entry is deleted.

► **Canceling an entry:** Select “Back” in the bottom line and press **OK**.

or

► Press back button **←** in the center console (▷ page 88).

As soon as COMAND can clearly attribute the numbers entered to a zip code, input characters **④** disappear. You see the list of zip codes without the input characters. Here you can confirm the current entry or make another selection.


During character entry, you can also manually switch to the list of zip codes without input characters at any time.

► **Switching manually to list of zip codes without input characters:**  
Slide **↑** **OK**.

or

► Select **ok** in the second line from the bottom and press **OK**.

**List of zip codes without input characters**

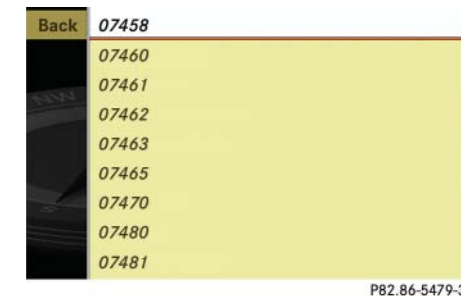

► **Selecting a zip code:** Slide **↑** **OK** **↓** or rotate **⤵** **OK**.

► **Canceling selection:** Select “Back” and press **OK**.

or

► Press back button **←** in the center console (▷ page 88).

► **Confirming selection:** Press **OK**.

You will see the address input menu again.



## Control systems

### COMAND navigation system (entering a destination)

It shows one of the following items of information:

- Street and if necessary, house number, city, state (USA) or province (CDN)
- City, state (USA) or province (CDN) and zip code
- State (USA) or province (CDN) and zip code

**i** *The street and, if necessary, the house number, will then appear as soon as COMAND can attribute the zip code to an appropriate address.*

Which of the following menu items are now available depends on the situation, or may depend on the data version of the digital map. The menu items which are not available cannot be selected.

- “Map”: Using the map to enter a destination (▷ page 225)

**i** *In this case, using the map for destination entry is based on the city seen in the address input menu.*

- “Street”: entering a street (▷ page 211)
- “Center”: entering a center (▷ page 214)
- “POI”: entering a point of interest (▷ page 229)

**i** *In this case, entering a POI is based on the city seen in the address input menu.*

- “Save”: saving a destination in the destination memory (▷ page 251)
- “Start”: starting the route calculation (▷ page 222)
- ▶ **Continuing or completing destination entry:** Select one of the menu items mentioned above.

### Entering a city

**i** *You can only enter those cities which are saved on the digital map.*

*It is not possible to enter a city when you have already entered a street which COMAND can clearly attribute to a city.*

*If COMAND cannot clearly attribute a previously entered street to a city, only those cities are available which have a street of that name.*

*If you have not yet entered a street before entering the city, towns or cities within the state (USA) or province (CDN) previously entered are available.*

- ▶ In the address input menu, select “City”.


The list of towns/cities appears either with or without the input characters (▷ page 210).

Whether or not the input characters appear depends on how many cities are available for the desired state (USA) or province (CDN).

## COMAND navigation system (entering a destination)

**List of cities with input characters**

When this list appears, the input characters ④ are automatically activated.

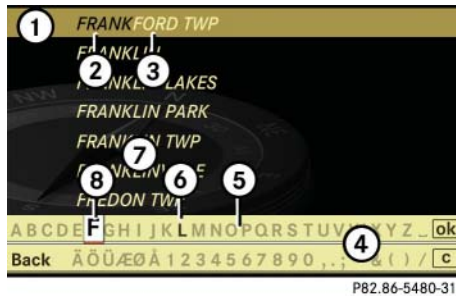

- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Input characters
- ⑤ Currently non-selectable characters
- ⑥ Currently selectable character
- ⑦ List of cities
- ⑧ Currently selected character

**i** In the list of input characters ④, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

The top list entry ① at first shows either the city in which the vehicle is currently located or the city which best corresponds to the input data as it has been entered up to that point.

**i** The current city is shown if:

- you have accepted the current state (USA) or province (CDN) when entering the state (USA) or province (CDN)
- and if you select city entry immediately afterward

As soon as you enter a character from input characters ④, the top list entry ① shows the city that best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements characters ② entered by the user with appropriate characters ③.

▶ **Selecting characters:** Slide ←○→ or rotate ⤵⤴.

▶ **Confirming character selection:** Press ⏎.

▶ **Deleting individual characters:** Select **[c]** in the bottom line and press ⏎.

▶ **Deleting an entire entry:** Select **[c]** in the bottom line and press ⏎ until the entire entry is deleted.

▶ **Canceling an entry:** Select “Back” in the bottom line and press ⏎.

or



▶ Press back button **[←]** in the center console (▷ page 88).

## Control systems

### COMAND navigation system (entering a destination)





As soon as COMAND can clearly attribute the characters entered to a city, the input characters ④ disappear automatically. You see the list of cities without the input characters. Here you can confirm the current entry or make another selection.

During character entry, you can also manually switch to the list of cities without input characters at any time.

- ▶ **Switching manually to the list of cities without input characters:** Slide  or
- ▶ Select **ok** in the second line from the bottom and press .

#### List of cities without input characters



- ① Symbol for more selection options
  - ▶ **Selecting a city:** Slide  or rotate .
  - ▶ **Canceling selection:** Select “Back” and press .
- or
- ▶ Press back button  in the center console (▷ page 88).


- ▶ **Confirming selection:** Press .

Cities with symbol ① mean that there is more than one in the selected state (USA) or province (CDN). Confirming one of these cities will take you to a further sub-selection.

If there are no other selection options, the address input menu appears again.

It shows one of the following items of information:

- City and state (USA) or province (CDN)
- Street, city and state (USA) or province (CDN)

 *The street is visible if you have entered it before entering the city.*

Which of the following menu items are now available depends on the situation, or may depend on the data version of the digital map. The menu items which are not available cannot be selected.

- “Map”: using the map to enter a destination (▷ page 225)

**i** In this case, using the map for destination entry is based on the city seen in the address input menu.

- “Street”: entering the street (▷ page 211)
- “House No.”: entering the house number (▷ page 216)
- “Center”: entering the center (▷ page 214)
- “Intersection”: entering the intersection (▷ page 219)
- “POI”: entering a point of interest (▷ page 229)

**i** In this case, entering a POI is based on the city seen in the address input menu.

- “Save”: saving a destination in the destination memory (▷ page 251)
- “Start”: starting the route calculation (▷ page 222)
- ▶ **Continuing or completing destination entry:** Select one of the menu items mentioned above.

### Entering a street

**i** It is not possible to enter a street if:

- you have already entered a center
- you have already entered a zip code that COMAND can clearly attribute to a street

**i** You can only enter those streets which are saved on the digital map.

If you have not entered a city before entering the street, only those streets within the state (USA) or province (CDN) previously entered are available. If you have already entered a city, streets within that city are available.


If you have entered a zip code before entering the street, only those streets within the zip code area are available.

- ▶ In the address input menu, select “Street”.

The list of streets appears either with or without the input characters (▷ page 212). Whether or not the input characters appear depends on how many streets are available for the selected city.

### Street list with input characters

When this list appears, the input characters ⑥ are automatically activated.

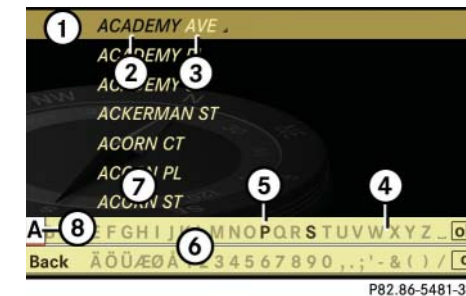

- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Currently non-selectable characters
- ⑤ Currently selectable character
- ⑥ Input characters
- ⑦ Street list
- ⑧ Currently selected character

## Control systems

### COMAND navigation system (entering a destination)

**i** In the list of input characters ⑥, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

The top list entry ① first shows the street first alphabetically and best corresponds to the input data as it has been entered up to that point.

As soon as you enter a character from input characters ⑥, the top list entry ① shows the street which best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements characters ② entered by the user with appropriate characters ③.

- ▶ **Selecting characters:** Slide  $\leftarrow \odot \rightarrow$  or rotate  $\left\{ \odot \right\}$ .
- ▶ **Confirming character selection:** Press  $\odot$ .
- ▶ **Deleting individual characters:** Select **c** in the bottom line and press  $\odot$ .

▶ **Deleting an entire entry:** Select **c** in the bottom line and press  $\odot$  until the entire entry is deleted.

▶ **Canceling an entry:** Select “Back” in the bottom line and press  $\odot$ .

or

▶ Press back button  $\leftarrow$  in the center console (▷ page 88).

As soon as COMAND can clearly attribute the characters entered to a street, the input characters ⑥ disappear. You see the street list without the input characters. Here you can confirm the current entry or make another selection.


During character entry, you can also manually switch to the street list without input characters at any time.

▶ **Switching manually to the street list without input characters:** Slide  $\uparrow \odot$ .

or

▶ Select **ok** in the second line from the bottom and press  $\odot$ .

#### Street list without input characters

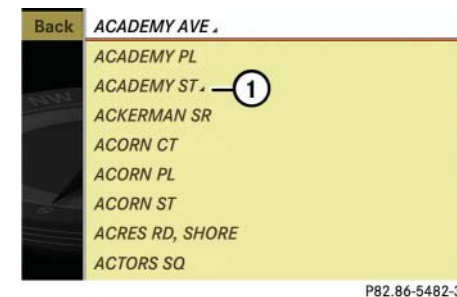

① Symbol for more selection options


▶ **Selecting a street:** Slide  $\uparrow \odot \downarrow$  or rotate  $\left\{ \odot \right\}$ .

or

▶ Enter a street number with the telephone keypad using the **0** - **9** buttons (▷ page 90).

**i** Example: Pressing 2 jumps to the 2nd Avenue.


## COMAND navigation system (entering a destination)

- ▶ **Canceling selection:** Select “Back” and press .

or

- ▶ Press back button  in the center console (▷ page 88).


- ▶ **Confirming selection:** Press .

Streets with symbol  run through several suburbs. Confirming one of these streets takes you to a further sub-selection.

If there are no other selection options, the address input menu appears again after the confirmation.


It shows one of the following items of information:

- Street and state (USA) or province (CDN)
- Street, city and state (USA) or province (CDN)


 *The city is visible if you have entered it before entering the street, or if COMAND can clearly attribute the street entered to a city.*

Which of the following menu items are now available depends on the situation, or may depend on the data version of the digital map. The menu items which are not available cannot be selected.


- “Map”: using the map to enter a destination (▷ page 225)

 *In this case, using the map for destination entry is based on the city seen in the address input menu.*

- “House No.”: entering the house number (▷ page 216)
- “Intersection”: entering the intersection (▷ page 219)

 *Entering an intersection is restricted to streets within the vicinity of the street entered.*

- “POI”: entering a point of interest (▷ page 229)

 *In this case, entering a POI is based on the city seen in the address input menu.*

- “Save”: saving a destination in the destination memory (▷ page 251)
- “Start”: starting the route calculation (▷ page 222)

- ▶ **Continuing or completing destination entry:** Select one of the menu items mentioned above.

## Control systems

### COMAND navigation system (entering a destination)

#### Entering a center

**i** It is not possible to enter a center if:

- you have not yet entered a city
- you have already entered a street
- you have already entered a zip code that COMAND can clearly attribute to an address

You can only enter those centers which are saved on the digital map.


Depending on the previous entry, centers are available either for the city entered or the zip code area entered.

- ▶ In the address input menu, select “Center”.

The list of centers appears either with or without the input characters (▷ page 215). Whether or not the input characters appear depends on how many centers are available in the selected city.

#### List of centers with input characters

When this list appears, the input characters ⑦ are automatically activated.

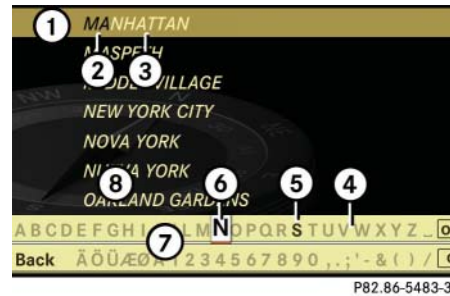

- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Currently non-selectable characters
- ⑤ Currently selectable character
- ⑥ Currently selected character
- ⑦ Input characters
- ⑧ List of centers


**i** In the list of input characters ⑦, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

While the characters are being selected as described below, the top list entry ① always shows the center which best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements characters ② entered by the user with appropriate characters ③.


- ▶ **Selecting characters:** Slide ←→ or rotate ↻.
- ▶ **Confirming character selection:** Press ↵.
- ▶ **Deleting individual characters:** Select **c** in the bottom line and press ↵.
- ▶ **Deleting an entire entry:** Select **c** in the bottom line and press ↻ until the entire entry is deleted.

## COMAND navigation system (entering a destination)

 
- ▶ **Canceling an entry:** Select “Back” in the bottom line and press .

or


- ▶ Press back button  in the center console (▷ page 88).

As soon as COMAND can clearly attribute the characters entered to a center, the input characters  disappear. You see the list of centers without the input characters. Here you can confirm the current entry or make another selection.


 
During character entry, you can also manually switch to the list of centers without input characters at any time.

- ▶ **Switching manually to the list of centers without input characters:** Slide .

or

- ▶ Select **ok** in the second line from the bottom and press .

**List of centers without input characters**

- ▶ **Selecting a center:** Slide  or rotate .

- ▶ **Canceling selection:** Select “Back” and press .

or


- ▶ Press back button  in the center console (▷ page 88).

- ▶ **Confirming selection:** Press .


After the confirmation, the address input menu appears again. It shows the center, city and state (USA) or province (CDN).

Which of the following menu items are now available may depend on the data version of the digital map. The menu items which are not available cannot be selected.

- “Map”: using the map to enter a destination (▷ page 225)

 In this case, using the map for destination entry is based on the center seen in the address input menu.

- “POI”: entering a point of interest (▷ page 229)

 In this case, entering a point of interest is based on the center seen in the address input menu.

- “Save”: saving a destination in the destination memory (▷ page 251)
- “Start”: starting the route calculation (▷ page 222)

- ▶ **Continuing or completing destination entry:** Select one of the menu items mentioned above.



## Control systems

### COMAND navigation system (entering a destination)

#### Entering a house number


**i** The house number can only be entered after the street has been entered. You can only enter those house numbers which are saved on the digital map. The digital map does not contain all house numbers for all streets.

How the house number is entered depends on whether you have already entered just the street or both the street and the town or city (▷ page 217).

#### **With only the street entered previously**

When COMAND can clearly allocate the street to a town or city, the house number appears without input characters. Select a house number from the list (▷ page 219).

When COMAND cannot clearly allocate the street to a town or city, a house number screen appears. You can now enter a house number.

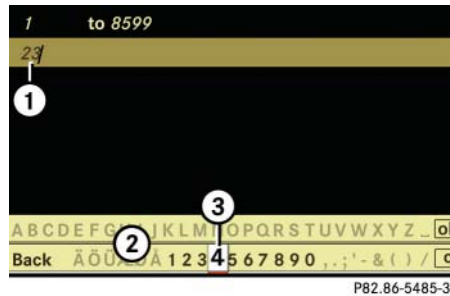

- ① Numbers entered by the user
- ② Input characters
- ③ Currently selected number

▶ **Selecting numbers:** Slide ←→ or rotate ↻.

▶ **Confirming number selection:** Press ↵.

or

▶ Entering a number with the telephone keypad using the **0** - **9** buttons (▷ page 90).

▶ **Deleting individual numbers:** Select **c** in the bottom line and press ↵.

▶ **Deleting an entire entry:** Select **c** in the bottom line and press ↵ until the entire entry is deleted.

▶ **Canceling an entry:** Select “Back” in the bottom line and press ↵.

or

▶ Press back button **←** in the center console (▷ page 88).

▶ **Confirming entry:** Select **ok** in the second line from the bottom and press ↵.

If COMAND cannot clearly attribute the house number to a city, the city input menu appears.

▶ **Entering city:** Proceed as described in the “Entering a city” section (▷ page 208).

After the city has been entered, the address input menu appears again.

If COMAND can clearly attribute the house number to a city, the address input menu also appears.

## COMAND navigation system (entering a destination)

In both cases, the address input menu shows the house number, street, city and state (USA) or province (CDN).

Which of the following menu items are now available may depend on the data version of the digital map. The menu items which are not available cannot be selected.

- “Map”: using the map to enter a destination (▷ page 225)

**i** In this case, using the map for destination entry is based on the city seen in the address input menu.

- “POI”: entering a point of interest (▷ page 229)

**i** In this case, entering a POI is based on the city seen in the address input menu.

- “Save”: saving a destination in the destination memory (▷ page 251)
- “Start”: starting the route calculation (▷ page 222)

- ▶ **Continuing or completing destination entry:** Select one of the menu items mentioned above.


#### With the street and city previously entered

- ▶ In the address input menu, select “House No.”.

The list of house numbers appears either with or without the input characters (▷ page 219). Whether or not the input characters appear depends on how many house numbers are available in the selected street.

#### List of house numbers with input characters

When this list appears, the input characters ④ are automatically activated.

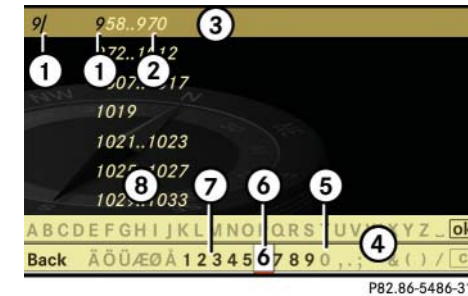

- ① Numbers entered by the user
- ② Numbers automatically added by the system
- ③ Top list entry based on the input data up to that point
- ④ Input characters
- ⑤ Currently non-selectable numbers
- ⑥ Currently selected number
- ⑦ Currently selectable numbers
- ⑧ List of house numbers

## Control systems

### COMAND navigation system (entering a destination)

**i** In the list of input characters ④, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

While the numbers are being selected as described below, the top list entry ③ always shows the house number which best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements numbers ① entered by the user with appropriate numbers ②.

▶ **Selecting numbers:** Slide ←⊙→ or rotate ↻.

or

▶ Entering a number with the telephone keypad using the **0** - **9** buttons (▷ page 90).

▶ **Confirming number selection:**  
Press ⊙.

▶ **Deleting individual numbers:**  
Select **c** in the bottom line and press ⊙.

▶ **Deleting an entire entry:** Select **c** in the bottom line and press ⊙ until the entire entry is deleted.

▶ **Canceling an entry:** Select "Back" in the bottom line and press ⊙.

or

▶ Press back button **←** in the center console (▷ page 88).


As soon as COMAND can clearly attribute the numbers entered to a house number, the input characters ④ disappear. You see the list of house numbers without the input characters. Here you can confirm the current entry or make another selection.

During number entry, you can also manually switch to the list of house numbers without input characters at any time.

▶ **Switching manually to the list of house numbers without input characters:** Slide ↑⊙.

or

▶ Select **ok** in the second line from the bottom and press ⊙.

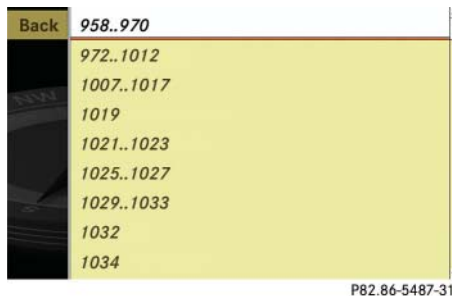**List of house numbers without input characters**▶ **Selecting house numbers:**

Slide or rotate .

▶ **Canceling selection:** Select “Back” and press .

or

## ▶ Press back button in the center console (▷ page 88).

▶ **Confirming selection:** Press .

After the confirmation, the address input menu appears again. It shows the house number, street, city and state (USA) or province (CDN).

Which of the following menu items are now available may depend on the data version of the digital map. The menu items which are not available cannot be selected.

- “Map”: using the map to enter a destination (▷ page 225)

*In this case, using the map for destination entry is based on the city seen in the address input menu.*

- “POI”: entering a point of interest (▷ page 229)

*In this case, entering a POI is based on the city seen in the address input menu.*

- “Save”: saving a destination in the destination memory (▷ page 251)
- “Start”: starting the route calculation (▷ page 222)

▶ **Continuing or completing destination entry:** Select one of the menu items mentioned above.**Entering an intersection**

*The intersection can only be entered after the street has been entered.*

*You can only enter those intersections which are saved on the digital map.*

## ▶ In the address input menu, select “Intersection”.

The list of intersections appears either with or without the input characters (▷ page 221). Whether or not the input characters appear depends on how many intersections are available for the selected street.

## Control systems

### COMAND navigation system (entering a destination)

#### List of intersections with input characters

When this list appears, the input characters ④ are automatically activated.



- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Input characters
- ⑤ Currently non-selectable characters
- ⑥ Currently selectable character
- ⑦ List of intersections
- ⑧ Currently selected character

**i** In the list of input characters ④, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

While the characters are being selected as described below, the top list entry ① always shows the intersection which best corresponds to the input data as it has been entered up to that point. At the same time, COMAND automatically supplements characters ② entered by the user with appropriate characters ③.

- ▶ **Selecting characters:** Slide ←⑧→ or rotate ⤴⤵.
- ▶ **Confirming character selection:** Press ⏎.
- ▶ **Deleting individual characters:** Select [c] in the bottom line and press ⏎.
- ▶ **Deleting an entire entry:** Select [c] in the bottom line and press ⏎ until the entire entry is deleted.

- ▶ **Canceling character entry:** Select “Back” in the bottom line and press ⏎.

or

- ▶ Press back button [↩] in the center console (▷ page 88).

As soon as COMAND can clearly attribute the characters entered to an intersection, the input characters ④ disappear. You see the list of intersections without the input characters. Here you can confirm the current entry or make another selection.


During character entry, you can also manually switch to the list of intersections without input characters at any time.

- ▶ **Switching manually to the list of intersections without input characters:** Slide ↑⑧.

or

- ▶ Select **ok** in the second line from the bottom and press ⏎.

## COMAND navigation system (entering a destination)

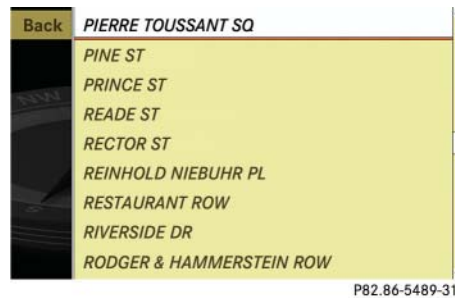**List of intersections without input characters**

- ▶ **Selecting an intersection:** Slide or rotate .
  - ▶ **Confirming selection:** Press .
- Either the address input menu appears again, or the city input menu.

**i** *The city input menu appears if the intersection entered cannot be clearly attributed to a city.*

- ▶ **Canceling selection:** Select “Back” and press .

or

- ▶ Press back button in the center console (▷ page 88).
- ▶ **If the city input menu appears:** Enter a town or city.

**i** *A detailed description of how to enter a city can be found in the “Entering a city” section (▷ page 208).*

After the city has been entered, the address input menu appears again.

Which of the following menu items are now available may depend on the data version of the digital map. The menu items which are not available cannot be selected.

- “Map”: using the map to enter a destination (▷ page 225)

**i** *In this case, using the map for destination entry is based on the city seen in the address input menu.*

- “POI”: entering a point of interest (▷ page 229)
- i** *In this case, entering a POI is based on the city seen in the address input menu.*
- “Save”: saving a destination in the destination memory (▷ page 251)
- “Start”: starting the route calculation

- ▶ **Continuing or completing destination entry:** Select one of the menu items mentioned above.

## Control systems

### COMAND navigation system (entering a destination)

#### Starting the route calculation

**i** You cannot start the route calculation until all the necessary address data has been entered.

**i** With "Change Name" you can change the name of the chosen entry from the destination memory before starting the route calculation.

- ▶ After entering the destination, select "Start".

The route calculation will start if route guidance has not already been activated.

If route guidance has already been activated, a prompt will appear asking whether you want to end the current route guidance.

- ▶ Select "Yes" or "No".

If you select "Yes", COMAND will stop the route guidance and start the route calculation for the new destination.

If you select "No", COMAND will continue with the active route guidance.

The new destination is discarded.

During the route calculation, an arrow will indicate the linear direction to the destination. Below this, you will see the message "Calculating Route".

Once the route has been calculated, route guidance begins (▷ page 237).

**i** Route calculation requires a certain amount of time. The time depends on the distance from the destination, for example. COMAND calculates the route using the digital map data. The calculated route may differ from the actual road situation, e.g. due to road construction or incomplete map data. Please make sure that you observe the notes about the digital map (▷ page 188).

## COMAND navigation system (entering a destination)

**Entering a destination from the destination memory**

- ▶ Select “Nav” → “Destination” → “From Memory”.

The destination memory list appears either with or without the input characters (▷ page 224). Whether the input characters appear depends on the number of entries in the destination memory.

**i** The destination memory always contains an entry called “My Address”. You can save your home address, for example, under this entry (▷ page 251).

**Destination memory list with input characters**

When this list appears, the input characters ④ are automatically activated.



- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Input characters
- ⑤ Currently non-selectable characters
- ⑥ Destination memory list
- ⑦ Currently selected character
- ⑧ Currently selectable characters

**i** In the list of input characters ④, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the content of the destination memory.

While the characters are being selected as described below, the top list entry ① always shows the destination which best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements characters ② entered by the user with appropriate characters ③.

- ▶ **Changing language for the input characters:** Select

- ▶ Select desired language.

- ▶ **Changing character set for the input characters:** Select

Depending on the previous setting, you will change to letters with special characters or to numbers with special characters.

- ▶ **Selecting characters:** Slide or rotate

- ▶ **Confirming character selection:** Press

▷▷



## Control systems

### COMAND navigation system (entering a destination)

▷▷▶ **Deleting individual characters:**

Select **c** in the bottom line and press **⏪**.

▶ **Deleting an entire entry:** Select **c** in the bottom line and press **⏪** until the entire entry is deleted.

▶ **Canceling an entry:** Select “Back” in the bottom line and press **⏪**.

or

▶ Press back button **⏪** in the center console (▷ page 88).

As soon as COMAND can clearly attribute the characters entered to a destination, the input characters **④** disappear.

You see the destination memory list without input characters. Here you can confirm the current entry or make another selection.


You can also manually switch to the destination memory list without input characters at any time.

▶ **Switching manually to the destination memory list without input characters:** Slide **↑** **⊙**.

or

▶ Select **ok** in the second line from the bottom and press **⏪**.

#### Destination memory list without input characters

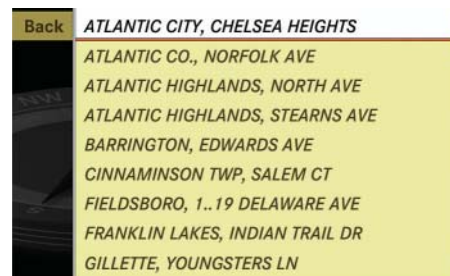

P82.86-5491-31

▶ **Selecting a destination:** Slide **↑** **⊙** **↓** or rotate **⏪** **⊙**.

▶ **Canceling selection:** Press back button **⏪** in the center console (▷ page 88).

or

▶ Select “Back” and press **⏪**.

**i** The “Back” menu item is only present if this list was called up from the list with input characters.

▶ **Confirming selection:** Press **⏪**.

▶ **Starting route calculation:** Select “Start”, see also (▷ page 222).

## COMAND navigation system (entering a destination)

### Entering a destination from the list of last destinations

- ▶ Select “Nav” → “Destination” → “From Last Destinations”.

The list of last destinations appears. The most recent destination is at the top of the list.

- ▶ Select desired destination.
- ▶ **Starting route calculation:** Select “Start”, see also (▷ page 222).

### Entering a destination from the map

**i** Depending on the factory settings of the vehicle, it may not be possible to enter a destination while the vehicle exceeds a preset speed. As soon as the vehicle's speed drops to below the preset speed, the function is available again. You can enter a destination via the map if the digital map does not contain the address of the destination, but the destination must be within the area of the digital map.

### Calling up the map


- ▶ In the address input menu, select “Map” (▷ page 202).

You will see the map with a crosshair. The map is set to the address set in the address input menu.

or

- ▶ Select “Nav” → “Destination” → “Via Map”.

You will see the map with a crosshair.

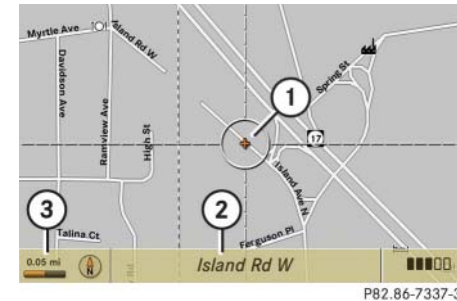

- ① Crosshair
- ② Details of the crosshair position
- ③ Map scale

**i** Display ② may be the name of a road, for example, provided the digital map contains the necessary data.






If no data is available, display ② shows:

- the coordinates if the geo-coordinate display is switched on (▷ page 200)
- no display if the geo-coordinate display is switched off (▷ page 200)

## Control systems
 
### COMAND navigation system (entering a destination)

#### Moving the map and selecting the destination

► **Moving map:** Slide , , ,  or .

► **Adjusting map scale:** Rotate .

Rotating clockwise enlarges the map, rotating counterclockwise reduces it.

► **Selecting a destination:** Press .

If the crosshair is located off the edge of the digital map, a route cannot be calculated to this destination and you will see the message “*The destination is located off the map.*”.

► Select “OK”.

► Move the map and select a destination again.

If the destination is within the limits of the digital map, COMAND attempts to attribute the destination to the map, which can take approximately 2 seconds.

If the destination can be attributed, you will see the address of the destination. If not, you will see the display “*Destination from map.*”.

► **Starting route calculation:** Select “Start”, see also (▷ page 222).

#### Entering a stopover

**i** When route guidance is active, you can enter a stopover. Stopovers can be predefined destinations from the following predefined categories:

- “Mercedes-Benz Center”
- “Hospital”
- “Gas station”
- “Parking lot”
- “Restaurant”

However, you can also enter destinations other than the predefined ones.

**i** You can use the stopover function to influence the route guidance calculation to the main destination. When you have reached your stopover, COMAND automatically calculates the route to the main destination.

## COMAND navigation system (entering a destination)

**Entering predefined destinations**

- ▶ Select “Nav” → “Destination” → “Stopover”.

If a stopover has already been entered, you can change it.

- ▶ **Changing:** Select “Change Stopover”.

You can now select a category.

- ▶ **Selecting a category:**

Select category, e.g. “Gas station”.

COMAND first looks for destinations within the immediate vicinity of the vehicle and near the vehicle’s route. If there are no destinations available there, COMAND searches for destinations in an area around the vehicle position.

If COMAND does not find any destinations, you will see a message to this effect.

- ▶ Select “OK”.

You can now select a different category.

If COMAND finds destinations, you will see a list of the destinations and details of how far away they are in the right-hand side of the display. The information about how far away the destinations are can take a few seconds to be displayed.

The left-hand part of the display shows the destinations on the map. The destination marked in the list is highlighted in the map.

- ▶ **Selecting a destination:** Select the desired destination from list.

The address of the destination appears.

- ▶ **Starting route calculation:**

Select “Start”, see also (▷ page 222).

**Entering another destination as a stopover**

- ▶ Select “Nav” → “Destination” → “Stopover”.

- ▶ **Entering:** Select “Other”.

You can select between the following menu items:

- “Address Entry”
- “From Memory”
- “From Last Destinations”
- “From POIs”

- ▶ Select a menu item.

## Control systems

### COMAND navigation system (entering a destination)

Subsequent destination entries may differ, depending on your selection:

- “*Address Entry*” selection:
  - ▶ Enter a destination by address (▷ page 202).
- “*From Memory*” selection:
  - ▶ Enter a destination from the destination memory (▷ page 223).
- “*From Last Destinations*” selection:
  - ▶ Enter a destination from the list of last destinations (▷ page 225).
- “*From POIs*” selection:
  - ▶ Enter a special destination (▷ page 229).
- ▶ **Starting route calculation:** After entering a destination, select “*Start*” (▷ page 222).

#### Changing a stopover

If a stopover has already been entered, you can change it.

- ▶ Select “*Navi*” → “*Destination*” → “*Stopover*” → “*Change Stopover*”.
- ▶ Enter another destination as a stopover.

#### Deleting the stopover

If a stopover has already been entered, you can delete it.

- ▶ Select “*Navi*” → “*Destination*” → “*Stopover*” → “*Delete Stopover*”.

COMAND deletes the stopover and calculates the route to the main destination.

## COMAND navigation system (Point of interest entry)

## ▼ COMAND navigation system (Point of interest entry)

Entering a POI in the surrounding area

- ▶ In the map view while the menu system is displayed, select “*Destination*” → “*From POIs*” → “*Current Position*” (▷ page 196).
- ▶ Continue with designating the POI category (▷ page 230).

Entering a POI in the surroundings of a given city**Option 1**

- ▶ In the map view while the menu system is displayed, select “*Destination*” → “*From POIs*” → “*Other City*” (▷ page 196).
- ▶ If necessary, enter state (USA) (▷ page 203) or province (CDN) (▷ page 203).

**▶ Entering town:** Select “*City*”.

The town/city input menu appears.

- ▶ Then proceed as described in the “Entering a city” section (▷ page 208).
- ▶ After entering the city, continue with designating the POI category (▷ page 230).

**Option 2**

- ▶ Enter an address in the address input menu (▷ page 202).
- ▶ Select “*POI*”.
- ▶ Continue with designating the POI category (▷ page 230).

Entering a POI in a different region

**i** *This function gives you quick access to POIs which are of national interest in the state (USA) or province (CDN) you have selected. The following categories may be available:*

- “*AIRPORT*”
- “*BORDER CROSSING*”
- “*HIGHWAY ACCESS*”

*Not all categories are available in all states (USA) or provinces (CDN).*

- ▶ In the map view while the menu system is displayed, select “*Destination*” → “*From POIs*” → “*Global POI*” (▷ page 196).

The category list appears. The state (USA) or province (CDN) currently selected is shown in the first list entry. ▷▷

### COMAND navigation system (Point of interest entry)

- ▷▷▶ **Selecting another state (USA) or province (CDN):** Select the first list entry.
- A list of states/provinces appears.
- ▶ Select desired state (USA) or province (CDN).
- If there are no POIs for the selected state (USA) or province (CDN), you will see a corresponding message.
- ▶ **Closing message:** Select “OK”.
- You can again select a state (province).
- If there are POIs, you will see the category list again.
- ▶ Proceed as described in the “Selecting a category” paragraph in the “Main category list without input characters” section (▷ page 232).

#### Designating a POI category

The categories and POIs available depend on the distance from the vehicle position you have set for the POI.

- POI in the surrounding area: categories sorted alphabetically and POIs sorted by distance within a radius of about 12 mi around the vehicle position are available. You can extend the search radius using the list options (▷ page 235).
- POI within a given city: If you have only entered the state (USA) or province (CDN) and the city, alphabetically sorted categories and alphabetically sorted POIs within the city are available.

If you have entered more than the state (USA) or province (CDN) and the city, alphabetically sorted categories and POIs sorted by distance within a radius of about 12 mi around the address entered are available. You can extend the search radius and the category selection using the list options (▷ page 235).

- POIs in a different region: Alphabetically sorted categories and alphabetically sorted POIs are available.

#### Entering a category

Depending on the number of available categories, the main category list appears for category entry either with or without input characters (▷ page 232).

## COMAND navigation system (Point of interest entry)

**Main category list with input characters**

When this list appears, the input characters ⑤ are automatically activated.



- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Symbol for available POIs or other available subcategories
- ⑤ Input characters
- ⑥ Currently non-selectable characters
- ⑦ Currently selectable character
- ⑧ Currently selected character
- ⑨ Main category list

**i** In the list of input characters ⑤, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

While the characters are being selected as described below, the top list entry ① always shows the category which best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements characters ② entered by the user with appropriate characters ③.

- ▶ **Selecting characters:** Slide ←⊙→ or rotate ↻.
- ▶ **Confirming character selection:** Press ⊙.
- ▶ **Deleting individual characters:** Select **c** in the bottom line and press ⊙.
- ▶ **Deleting an entire entry:** Select **c** in the bottom line and press ⊙ until the entire entry is deleted.

- ▶ **Canceling an entry:** Select “Back” in the bottom line and press ⊙.

or

- ▶ Press back button **←** in the center console (▷ page 88).

As soon as COMAND can clearly attribute the characters entered to a category, the input characters ⑤ disappear.

You see the list of main categories without the input characters. Here you can confirm the current entry or make another selection.

You can also manually switch to the main category list without input characters at any time.

- ▶ **Switching manually to the main category list without input characters:** Slide ↑⊙.

or


- ▶ Select **ok** in the second line from the bottom and press ⊙.



## Control systems

### COMAND navigation system (Point of interest entry)

#### Main category list without input characters

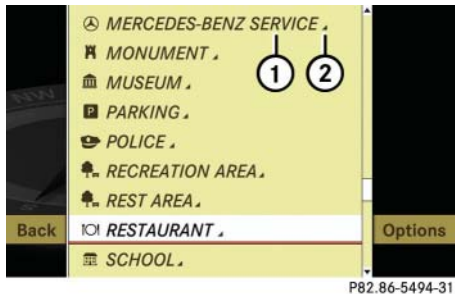

#### Example illustration: main category list for POIs in the surrounding area

- ① Category
- ② Symbol for available POIs or other available subcategories
- ▶ **Selecting a main category:** Slide or rotate .

- ▶ **Canceling selection:** Select “Back” and press .

or


- ▶ Press back button in the center console (▷ page 88).

- ▶ **Confirming selection:** Press .

Main categories with symbol ② contain either POIs or subcategories. Further operation depends on whether the selected main category contains subcategories or only POIs.

Selected main category contains subcategories:


Selecting such a main category opens a list of subcategories. The illustration below shows by way of example the “RESTAURANT” main category with available subcategories ④.

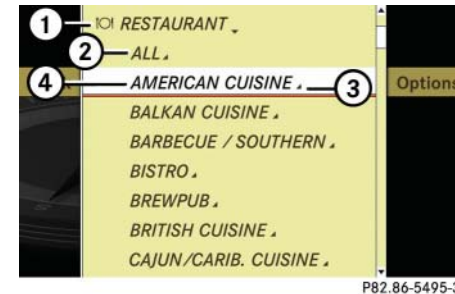

- ① Main category
- ② To show all POIs for all subcategories under category ①
- ③ Symbol for available POIs
- ④ Subcategory

- ▶ **Selecting a subcategory:** Slide or rotate .

## COMAND navigation system (Point of interest entry)

- ▶ **Canceling selection:** Select “Back” and press .

or

- ▶ Press back button  in the center console (▷ page 88).

- ▶ **Confirming selection:** Press .

After selecting a subcategory, a list of POIs appears. It contains the POIs available within the search radius of the subcategory.

**i** If you have selected list item ②, the POI list contains all POIs for all subcategories within the search radius of main category ①.

Selected main category contains no subcategories, but only POIs:

Selecting such a main category immediately opens a list of POIs. The POI list contains the available POIs within the search radius of the main category.

### POI list

Depending on the situation, COMAND first shows the following list or the POI list with input characters.

The illustration below shows by way of example the POI list for the “RESTAURANT” main category, “FRENCH CUISINE” subcategory within the surrounding area.




- ① Compass heading to the destination
- ② Linear distance to the destination
- ③ Special destination

**i** Displays ① and ② are not visible if you have already entered a POI within a particular city. Displays ① and ② are static; they do not change while you are driving.


In the POI list, you can either select a POI or enter the name of the POI.

### Selecting a POI

- ▶ Select desired POI.  
The POI list disappears and the address of the POI appears.

- ▶ **Back to POI list:** Select “Back” and press .

or

- ▶ Press back button  in the center console (▷ page 88).

- ▶ **Starting route calculation:** Select “Start”, see also (▷ page 222).

### Entering name of POI

- ▶ Select “Options” → “Spell”.

The POI list appears with input characters; the input characters are automatically activated.

## Control systems

### COMAND navigation system (Point of interest entry)

#### POI list with input characters

**i** For POIs in other regions, this list also shows the compass heading to the destination as well as the linear distance to the destination, as in the previous illustration.



- ① Top list entry based on the input data up to that point
- ② Characters entered by the user
- ③ Characters automatically added by the system
- ④ Input characters
- ⑤ Currently selectable character
- ⑥ Currently non-selectable characters
- ⑦ POI list
- ⑧ Currently selected character

**i** In the list of input characters ④, you can only select currently selectable characters. Which characters are included depends on the sequence in which you have entered your destination and the data version of the digital map.

While the characters are being selected as described below, the top list entry ① always shows the POI that best corresponds to the input data as it has been entered up to that point.

At the same time, COMAND automatically supplements characters ② entered by the user with appropriate characters ③.

- ▶ **Selecting characters:** Slide ←↻→ or rotate ↻↻.
- ▶ **Confirming character selection:** Press ↻.
- ▶ **Deleting individual characters:** Select [c] in the bottom line and press ↻.
- ▶ **Deleting an entire entry:** Select [c] in the bottom line and press ↻ until the entire entry is deleted.

▶ **Canceling an entry:** Select “Back” in the bottom line and press ↻.

or

▶ Press back button ↻ in the center console (▷ page 88).

As soon as COMAND can clearly attribute the characters entered to a POI, the input characters ④ disappear.

You see the POI list without input characters. Here you can confirm the current entry or make another selection.

You can also manually switch to the POI list without input characters at any time.

▶ **Switching manually to the POI list without input characters:** Slide ↻↻.

or

▶ Select **ok** in the second line from the bottom and press ↻.

## COMAND navigation system (Point of interest entry)

**POI list without input characters**

- ▶ **Selecting a destination:** Slide or rotate .
- ▶ **Canceling selection:** Select “Back” and press .

or

- ▶ Press back button in the center console (> page 88).
- ▶ **Confirming selection:** Press .
- ▶ **Starting route calculation:** Select “Start”, see also (> page 222).

**List options****Options in category and POI lists**

If you enter a POI in the surrounding area, initially, only categories and POIs within a radius of approximately 12 mi around the vehicle position are available.

The same applies if you enter a POI within a given city and have previously entered more than the state (USA) or province (CDN) and the city.

If you expand the list, the search radius increases to around 90 mi. This gives you access to all categories and POIs within a radius of about 90 mi.

- ▶ **Expanding list:** In one of the lists select “Options” → “Expand Search”.  
The list is expanded.

**Options only in POI lists**

- ▶ **Displaying details of the selected entry:** Select “Options” → “Details”.  
The detailed view appears.
- ▶ **Closing detailed view:** Select “OK”.

## Control systems

### COMAND navigation system (Point of interest entry)

#### Entering a POI from the map

**i** If the crosshair is shown on the map, you can enter POIs in the vicinity of the crosshair. If the crosshair is not shown on the map, you can enter POIs in the vicinity of the vehicle's current position.

- ▶ Select "Guide" in the map view with the menu system displayed (▷ page 196).

You will see POI symbols on the map, depending on whether POIs are available and which map scale is set.

The scale at which the symbols are displayed on the map varies according to the symbol.

You can set which symbols COMAND should display (▷ page 198).

The POI closest to the center of the screen is automatically marked.

If there are no POIs available, the "Back" menu item is automatically highlighted and you cannot select other menu items.



- ① Highlighted POI
- ② Information about the highlighted POI

- ▶ **Selecting a POI:** Select "Next" or "Previous".

The next or the previous POI is marked.

- ▶ **Displaying details of the selection:** Select "Details".

- ▶ **Starting route calculation:** Select "Start", see also (▷ page 222).

A prompt appears asking whether the POI should be used as the destination.

- ▶ Select "Yes" or "No".

If you select "Yes", the route calculation begins. If you select "No", you can select a new POI.

## ▼ COMAND navigation system (route guidance)

### Route guidance

#### Warning!



COMAND calculates the route to the destination without taking account of the following, for example:

- Traffic lights
- Stop and right-of-way signs
- Parking or stopping prohibited areas
- Lane merges
- Other road and traffic rules and regulations
- Narrow bridges

COMAND may give incorrect navigation commands if the data in the digital map does not correspond with the actual road/traffic situation. For example, if the traffic routing has been changed or the direction of a one-way road has been reversed.

For this reason, you must always observe applicable road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the navigation commands generated by the system.

COMAND guides you to the destination using navigation commands in the form of audible navigation announcements and route guidance displays.

**i** *The route guidance displays can only be seen if the display is switched to navigation mode.*

If, for any reason, you do not follow the navigation commands or if you leave the calculated route, COMAND automatically calculates a new route to the destination.

If the map data contains the relevant information, COMAND tries to avoid roads that only have limited access, e.g. roads closed to through-traffic and non-residents.

Roads that have time restrictions (e.g. closed on Sundays and public holidays) are not considered for route guidance, if the digital map contains the relevant information.

### Examples of displays and announcements for a driving maneuver

Driving maneuvers have three phases:

- Preparation phase
- Announcement phase
- Maneuver phase

## Control systems

### COMAND navigation system (route guidance)

#### Preparation phase

COMAND prepares you for the upcoming driving maneuver. Based on the example display below, the driving maneuver is announced with the “*Prepare to turn left*” message. The display is not split and shows the map over the full screen.




- ① Point at which the driving maneuver takes place (light blue dot)
- ② Route (highlighted blue)
- ③ Current vehicle position; the triangle points in the vehicle's direction of travel

#### Announcement phase

COMAND announces the next driving maneuver. Based on the example display below, the driving maneuver is announced 700 feet in advance with the “*Turn left in 700 feet to your destination*” message.

The display is divided in two. In the left half, you see the normal map view. In the right half, there is either an enlarged view of the area surrounding the intersection (intersection zoom) or simply a symbol for the next driving maneuver.

The following example illustration shows the intersection zoom in the right half.

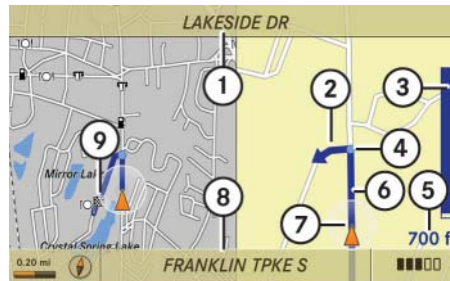


- ① Next road
- ② Driving maneuver (turn left)
- ③ Graphical representation of the distance to the driving maneuver
- ④ Point at which the driving maneuver takes place (light blue dot, shown in both the left and right displays)
- ⑤ Information about distance to the next driving maneuver
- ⑥ Route (highlighted in blue; shown in both the left and right displays)
- ⑦ Current vehicle position; the triangle indicates the vehicle's direction of travel (shown in both the left and right displays)
- ⑧ Street on which you are currently driving, if included on the digital map
- ⑨ Destination

**i** The filled-in section of distance graphic ③ gets shorter the nearer you get to the announced driving maneuver.

#### Maneuver phase


COMAND announces the next driving maneuver. Based on the example display below, the driving maneuver is announced 150 feet in advance with the “*Now turn left*” message. The display is also split into two halves, as for the announcement phase.

**i** Once the maneuver is completed, COMAND automatically switches back to the non-split screen.

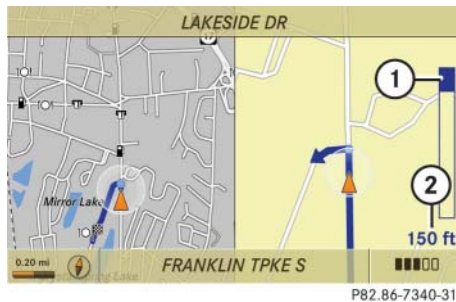

- ① Graphical representation of the distance to the next driving maneuver
- ② Information about distance to the next driving maneuver

#### Example of a display without driving maneuvers

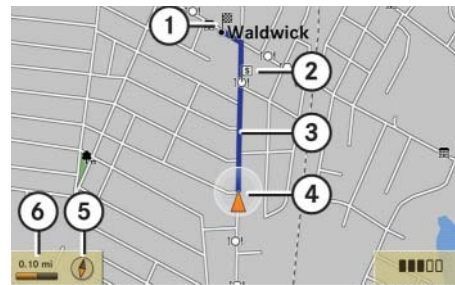

- ① Main destination
- ② Stopover (only visible if a stopover has been entered)
- ③ Route (highlighted blue)
- ④ Current vehicle position; the triangle indicates the vehicle's direction of travel
- ⑤ Set map orientation – for an explanation and settings, see (▷ page 198)
- ⑥ Set scale – for an explanation and settings, see (▷ page 196)

#### Destination or destination area reached

Once you have reached your destination, you will hear the announcement “*You have reached the destination*”. For certain POIs (airports or highway junctions), you will hear the announcement “*You have reached the destination area*”. In addition, you will see a corresponding display and route guidance is automatically ended.



- ① Destination on the map
- ② Destination flag



## Control systems

### COMAND navigation system (route guidance)

#### Partially digitized areas

**i** The digital map may contain areas that are only partially digitized although they are within a digitized region.

#### Warning!



Due to incomplete digitization, the route shown on the map may differ from the actual road/traffic situation.

If you follow the route shown on the map, for example, it is possible that you could drive the wrong way down a one-way street or that a street cannot be driven on.

When using route guidance in a partially digitized area, you must therefore be sure to observe all relevant traffic regulations and the course of the road.

All relevant traffic regulations and the course of the road always take priority over the route shown on the map.

#### If the destination is within a partially digitized area

COMAND guides you through fully digitized areas for as long as possible. Route guidance is conducted in the usual manner, i.e. with navigation announcements and route guidance displays.

Before the vehicle reaches a partially digitized area, COMAND notifies you of this with the following announcements:

- *“Be prepared to enter an area where turn by turn guidance cannot be provided.”*
- *“In 700 feet you will enter an area where turn by turn guidance cannot be provided.”*

**i** The indicated distance can be seen here by way of example. In reality, it may be different.

- *“You are about to enter an area where turn by turn guidance cannot be provided.”*

**i** When you call up the route info to this type of destination, (▷ page 245) the following data shown there may differ from the actual situation:

- Distance to the destination
- Estimated driving time to the destination
- Estimated arrival time

#### Route guidance within a partially digitized area

If you start route guidance in this type of area, you will hear the following announcement: *“You are currently in an area where turn by turn guidance cannot be provided.”*

Route guidance is provided by means of a direction arrow showing the compass heading to the destination. COMAND will not generate automatic navigation announcements.

If you try to call up an announcement manually, (▷ page 243) you will hear the announcement *“You are currently in an area where turn by turn guidance cannot be provided.”*

During route guidance, the display is divided. On the right-hand side you will see the direction arrow showing the compass heading to the destination.

On the left-hand side of the display you will see the map with the suggested route. The suggested route is highlighted blue. However, it may not be possible to follow the suggested route because, for example, the road is closed or not open for car traffic.

If, during route guidance, COMAND leads you back into a fully digitalized area, route guidance will simply continue in the usual manner.

### Off-road and off-map

#### Route guidance to an off-road destination

##### Warning!



The COMAND navigation system may direct you to off-road routes that your vehicle may not be capable of traversing through without damaging your tires, wheels or vehicle. It is the driver's sole responsibility to determine the suitability of the route. Off-road routes may be of varying conditions and their appropriateness for use may be affected by various factors such as time of day, time of year and immediate weather conditions that cannot be judged or taken into consideration by the COMAND system.

COMAND can guide you to destinations within the area covered by the digital map, even if a destination is not located at a road known to the system.

These destinations are shown as off-road destinations, which you can enter using the map, for example.

In these cases, COMAND guides you for as long as possible with navigation announcements and displays on roads known to the system.


Shortly before you reach the last known point to leave the digitized road network, you will hear the announcement "*The destination is nearby. Follow the arrow on the display*".

You will then see an arrow that indicates the direction to the off-road destination. When the off-road destination is close to the road, "*Area of dest. reached*" appears in addition below the arrow.

The section of the route from the last known point on the map to the off-road destination is indicated with a dashed line after a certain length. It simply shows the direction to the off-road destination without taking account of any type of obstacles in the way.

## Control systems

### COMAND navigation system (route guidance)

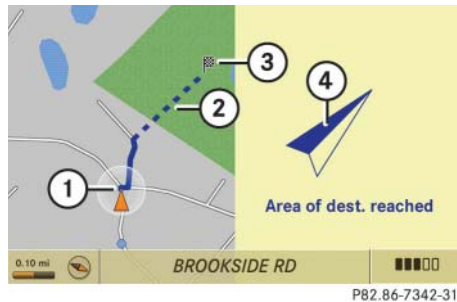

- ① Current vehicle position; the triangle indicates the vehicle's direction of travel
- ② Off-road section of the route
- ③ Off-road destination
- ④ Direction arrow, shows compass heading to destination

On the off-road section of the route, direction arrows showing the compass heading to the destination guide you. You will also see the “*Direction to destination*” display.

#### Route guidance from an off-road location to a destination

If there is no road available on map at current position of the car, vehicle is off road. COMAND is also able to guide you to a destination from such a location.

At the start of the route guidance, you will see the “*Off Road*” message and a direction arrow. The direction arrow shows the compass heading to the actual destination.

The route is highlighted blue from the nearest road known to the system.

As soon as the vehicle is back on a road known to the system, route guidance continues in the usual way.

#### Route guidance from an off-map location to a destination

If the vehicle position is outside the area covered by the digital map, then the vehicle is in an off-map location. COMAND is also able to guide you to a destination from such a location.

At the start of the route guidance, you will see the “*Off Map*” message and a direction arrow. The direction arrow shows the compass heading to the actual destination.

The route is highlighted blue from the nearest road known to the system.

As soon as the vehicle is back on a road known to the system, route guidance continues in the usual way.

#### Off-road during route guidance

The road layout may differ from the data on the digital map, due to road construction measures, for example.

In such cases, the system cannot allocate the vehicle's position to the digital map and the vehicle is therefore in an off-road position.

The “*Off Road*” message and an arrow showing the compass heading to the destination appear on the display.

As soon as the system can allocate the vehicle position's to the map again, route guidance continues in the usual way.

## Navigation announcements

### Warning!



Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Consulting the symbols or map display for directions may cause you to divert your attention from driving and increase your risk of an accident.

**i** If Russian or Chinese is set as the system language, the navigation announcements are in English. You will find how to set the system language on (▷ page 262).

Navigation announcements are muted during telephone calls. You can, however, call up a current announcement at any time. You can also call up a current announcement at any time if you have missed an announcement.

Route guidance is already active.

▶ **Calling up a current announcement:**  
Select “Navi” → “RPT”.

or

▶ Press favorite button if the button has been programmed with this function (▷ page 263).

**i** You will find the button programming on (▷ page 263).

▶ **Switching off navigation messages:**  
Press during an announcement.  
You will see the message “*The driving instructions have been muted.*” for a short while.

**i** The announcements remain switched off even if you start a new route guidance or if COMAND is switched off/on with the button.

If you switch COMAND off by removing the SmartKey from the starter switch and then switch the ignition back on after more than 3 minutes, the announcements are automatically switched back on.

▶ **Switching navigation announcements back on manually:**  
Select “Navi” → “RPT”.

▶ **Adjusting volume of the messages:**  
Adjust the volume during an automatic announcement (▷ page 98).

or

▶ Call up an announcement manually using “Navi” → “RPT” and adjust the volume (▷ page 98).

## Control systems

### COMAND navigation system (during route guidance)

#### Cancel route guidance

- ▶ Select “Destination” → “Cancel Route Guidance” in map view with the menu system displayed (▷ page 196).

#### Continuing cancelled route guidance


- ▶ Select “Destination” → “Continue Route Guidance” in map view with the menu system displayed (▷ page 196).  
COMAND calculates the route.

#### Route browser

**i** The route browser shows an overview of the route. You can use the route browser to move along the route section by section and view information about and details of each section of the route.



- ▶ Select “Route” → “Route Browser” in map view with the menu system displayed (▷ page 196).

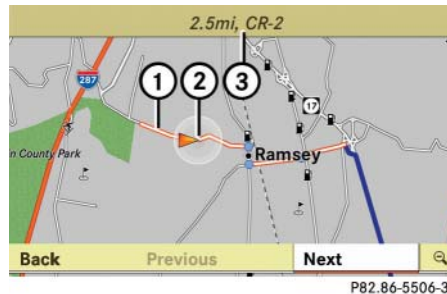The route browser appears.



- ① Highlighted route section
- ② Current vehicle position; the triangle indicates the vehicle's direction of travel
- ③ Information about the highlighted route section


**i** The information ③ about the marked route section shows the street name and the length of the route section. Marked route section ① is always highlighted in white and outlined in red.

- ▶ **Displaying next or previous route section:** Select “Next” or “Previous”.
- ▶ **Increasing or reducing size of the map:** Select  or .
- ▶ **Closing route browser:** Select “Back”.



## COMAND navigation system (during route guidance)

## Displaying info

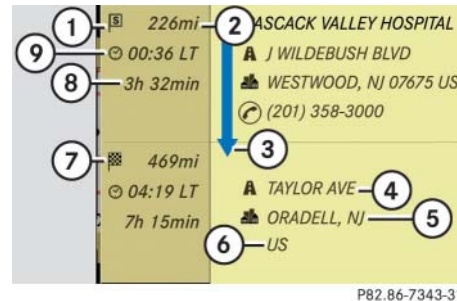- ▶ Select “Info” in map view with the menu system displayed (▷ page 196).  
The route information appears.



## Example display with main destination and stopover

- ① Symbol  for stopover
- ② Distance to the destination
- ③ Sequence of destinations (appears with at least one stopover)
- ④ Street
- ⑤ City and abbreviation for province (CDN) or state (USA)
- ⑥ Country
- ⑦ Symbol  for main destination
- ⑧ Estimated driving time to the destination
- ⑨ Estimated arrival time

**i** COMAND uses the time set in COMAND as the basis for calculating the estimated arrival time. The clock must be set correctly in COMAND (▷ page 259). The calculation of the estimated arrival time does not additionally take into account whether Daylight Saving Time or standard time is applicable at the destination. If the destination is in a different time zone, arrival time display ⑧ is in local time. This is indicated by “LT” in the display.

The following data cannot be seen until the route calculation has been completed:

- Distance to destination ①
- Estimated arrival time ⑧
- Estimated remaining travel time ⑦

If the destination is located within a partially digitized area, the following data may differ from the facts:

- Distance to destination ①
- Estimated arrival time ⑧
- Estimated remaining travel time ⑦


## Control systems

### COMAND navigation system (during route guidance)

#### Displaying route information




- ▶ Select “Route” → “Route Info” in map view with the menu system displayed (▷ page 196).

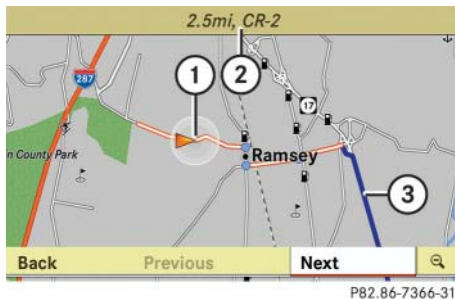The route information appears.



#### Example display route information

 - ① Highlighted portion of route
- ② Info for highlighted portion of route
- ③ Next portion of route

- ▶ **Closing route info:** Slide ←⊙→ or press back button  in the center console (▷ page 88).
- ▶ **Displaying next or previous route section:** Select “Next” or “Previous”.
- ▶ **Increasing or reducing size of the map:** Select  or .
- ▶ **Closing route browser:** Select “Back”.

#### Detour function


**i** The detour function blocks a section of the route ahead of you. You can set the length of the blockage. If possible, COMAND calculates a detour route.

**i** The detour function may direct you to off-road routes. See *Off-road and Off-map* for additional routes and cautions (▷ page 241).

- ▶ Select “Route” → “Detour” in map view with the menu system displayed (▷ page 196).

The detour function display appears.

- ▶ **Setting length of the blockage:** Select “More” or “Less” until the desired length is set.

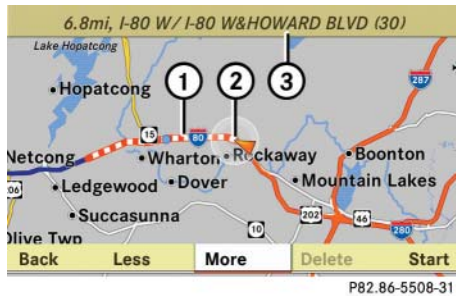

- ① Blocked route section
- ② Current vehicle position; the triangle indicates the vehicle's direction of travel
- ③ Information about the blocked route section

**i** Blocked route section ① is always highlighted in red/white. The information about blocked route section ③ shows which section of the route is blocked and the length of the blocked section.

- ▶ **Starting route calculation:**  
Select "Start", see also (▷ page 222).
- ▶ **Deleting blockage:** Select "Nav" → "Route" → "Detour" → "Delete".
- ▶ Select "Back".



## Control systems


### COMAND navigation system (real-time traffic)

A RDS-TMC (Radio Data System-Traffic Message Channel) radio transmitter broadcasts traffic reports COMAND can receive and incorporate into the navigation system. Traffic report messages and map symbols can then be viewed in the COMAND display. Events displayed are those within receivable range of the vehicle's location.

**i** Actual road and traffic conditions may be different from the received messages.

#### Real-time traffic notifications in the map

COMAND can display certain traffic events in the map. The notifications are shown at the map scales from 0.05 mi (50 m) to 500 mi (500 km).

► **Set the map scale:** Turn  until the desired map scale is set.

Turning clockwise enlarges the map, turning counterclockwise reduces it.




#### Display example for a traffic jam on the route

- ① Symbol for event on the route
- ② Marker symbols for the affected route section
- ③ Current vehicle position and direction of travel
- ④ Map scale

**i** COMAND marks the entire route section affected with the appropriate symbols ②, independently of its actual length on the route section. The symbols ② are shown in the direction of travel on the left or right of the route. Thus, they also indicate which side of the roadway is affected by the event.

The following shows the possible symbol displays.

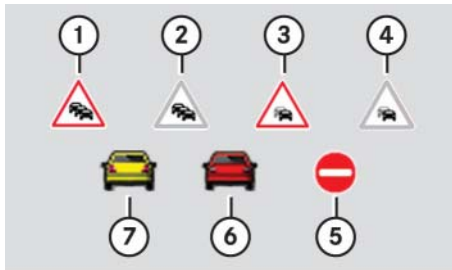

P82.86-6766-31

- ① Traffic jam on the route (symbol with red border)
- ② Traffic jam away from the route (symbol with gray border)
- ③ Stop and go traffic on the route (symbol with red border)
- ④ Stop and go traffic away from the route (symbol with gray border)
- ⑤ Blocked section on the route
- ⑥ Traffic jam
- ⑦ Stop and go traffic

### Displaying real-time traffic reports


#### Displaying the message list

- ▶ Select “Navi” → “Traffic”.

COMAND searches for real-time traffic transmitters. When no traffic reports are present, you will see a display to this effect.

### List for inactive route guidance

When route guidance is inactive, the list displays all streets for which messages are present.

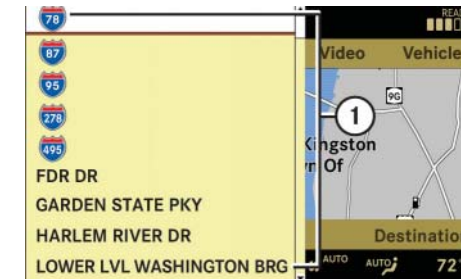

P82.86-6767-31

- ① Affected street list

**i** Instead of a street, an area or a region can also be affected by a message, for example, when visibility is limited due to fog.

- ▶ **Read a message:** Select a street.

You can find an example message on (> page 250).


- ▶ **Close the list:** Slide ←⊙→.

## Control systems

### COMAND navigation system (real-time traffic)

#### List for active route guidance

When route guidance is active, the list displays only the streets which are part of the route and for which messages are present.

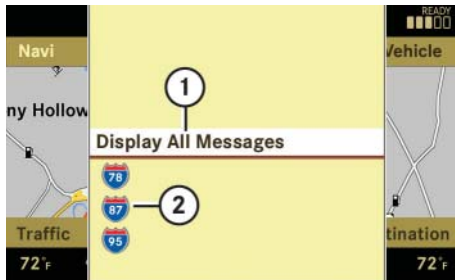

PB2.86-6768-31

- ① Show all messages (including those which do not affect the route)
  - ② Affected streets (only shown when messages which affect the route are present)
- **Display all messages:** Select “Display All Messages”.
- All streets are shown for which messages are present, as well as for those which are not on the route.

- **Read a message:** Select a street.
- You can find an example message on (► page 250).
- **Close the list:** Slide ◀⊙▶ once or repeatedly.


#### Example message



PB2.86-6769-31

- ① Selection display (“Messages On Route” or “All messages”)
- ② Symbol for message event (e.g. traffic jam)
- ③ Street affected by the message
- ④ Message 1 of 5 for the affected street
- ⑤ Message text

The symbols for the possible message events are shown in the following.

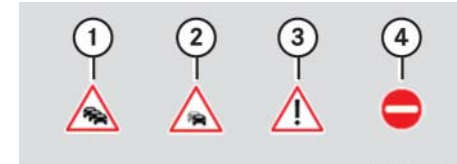

PB2.86-6770-31

- ① Traffic jam symbol
- ② Stop and go traffic symbol
- ③ Warning message symbol
- ④ Blocked section symbol

- **Scroll through the contents or to the next message:** Turn ⏪⏩ or slide ⬆️⬆️⬆️.

## COMAND navigation system (destination memory)

## ▼ COMAND navigation system (destination memory)

**Saving a destination in the destination memory**

**i** This function also saves the destination in the address book. There COMAND creates an address book entry containing complete, navigable address data. You can then select this entry in the address book and start navigation to the address.

**Saving after the address has been entered**

- ▶ Select “Save” after entering the address (▷ page 202).

You can now select save options.

**Saving during route guidance**

- ▶ Select “Destination” → “Save Destination” during route guidance.

You can now select save options.

**Saving a destination from the list of last destinations**

- ▶ Select “Navi” → “Destination” → “From Last Destinations”.

The list of last destinations appears.

- ▶ Select desired destination.  
The address of the destination is displayed.

- ▶ Select “Save”.

You can now select save options.

**Selecting save options****Saving a destination without a name**

- ▶ Select “Save Without Name”.

COMAND saves the destination in the destination memory and uses the address as the destination name.

or

- ▶ Select “Save as ‘My Address’”.
- ▶ Select desired category, e.g. “Home”.

COMAND saves the destination in the destination memory as your own address.


**Saving a destination with a name**

- ▶ Select “Save new entry”.
- ▶ Select desired category, e.g. “Home”.

The input menu appears with the data fields and the input characters. ▷▷

## Control systems

### COMAND navigation system (destination memory)

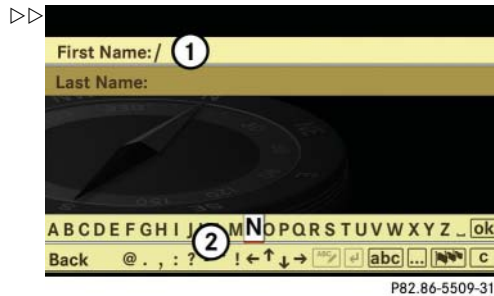

① Selected data field with input mark (cursor)

② Input characters

- ▶ **Entering data:** Proceed as described in the “Changing the data field” operating step in the “Creating a new address book entry” section (▷ page 168).

#### Assigning a destination to an address book entry

**i** This function assigns the complete, navigable address data to an already existing address book entry. You can then select this entry in the address book and start navigation to the address from there.

- ▶ Select “Assign Address Book Entry”.
- ▶ Select desired category, e.g. “Home”.  
The menu appears for searching for an address book entry.

- ▶ Select desired address book entry. Proceed as described in the “Searching for an address book entry” section (▷ page 170).

If the selected address book entry does not yet contain any navigable address data, COMAND saves the data.

If the selected address book entry already contains navigable address data, you will see a question asking you if the previous data should be overwritten.

- ▶ Select “Yes” or “No”.

If you select “Yes”, COMAND saves the data.

## COMAND navigation system (destination memory)

## Deleting a destination from the destination memory

- ▶ Select “Nav” → “Destination” → “From Memory”.

Depending on the number of entries in the destination memory, you will see the destination memory list with or without input characters.



Example illustration: destination memory list without input characters



Example illustration: destination memory list with input characters

- ① Input characters

- ▶ Select desired destination. Proceed as described for destination entry in the “Entering a destination from the destination memory” section (▷ page 223).

- ▶ Select “Delete” after selecting the destination to be deleted.

A prompt appears asking whether you want to delete the destination.

- ▶ Select “Yes” or “No”.

If you select “Yes”, COMAND deletes the destination.

**i** If the navigable address data of the destination to be deleted has also been assigned to an address book entry, COMAND deletes the data there as well. If the corresponding address book entry does not contain any further data, such as telephone numbers, COMAND deletes the entire address book entry.

## Control systems

### COMAND navigation system (destination memory)

#### Own address

**i** The destination memory always contains an entry called “My Address”. You can save your home address, for example, under this entry.

#### Assigning your address for the first time or changing your own address

#### Assigning and/or changing your own address

- ▶ Select “Navi” → “Destination” → “From Memory”.

Depending on the number of entries in the destination memory, you will see the destination memory list with or without input characters.



#### Example illustration: destination memory list without input characters


In the destination memory list without input characters, the “My Address” entry is automatically highlighted.




#### Example illustration: destination memory list with input characters

① Input characters




In the destination memory list with input characters ①, the input characters are automatically activated.

- ▶ **Destination memory list without input characters:** Press  immediately.

or

- ▶ **Destination memory list with input characters:** Slide  repeatedly until the input characters disappear.

The list entry “*My Address*” is automatically highlighted as long as you have not entered any characters using the input characters.

- ▶ **If you have entered characters from the list of input characters:** Rotate  or slide  repeatedly until the list entry “*My Address*” is highlighted.
- ▶ Press .

Further operation depends on whether you want to enter the address manually or use an address book entry as your own address.

#### *Entering an address manually*

- ▶ **If you want to assign your own address for the first time:** Select “*Save new entry*”.

or

- ▶ **If you want to change your own address:** Select “*Change*” → “*Save new entry*”.

In both cases, the address input menu appears.

- ▶ Enter the address. Proceed as described for destination entry in the “Entering a destination by address” section (▷ page 202).
- ▶ Select “*Save*” after entering the address.

Your address is saved.

#### *Using the address book entry as your own address*

- ▶ **If you want to assign your own address for the first time:** Select “*Assign Address Book Entry*”.

or

- ▶ **If you want to change your own address:** Select “*Change*” → “*Assign Address Book Entry*”.

In both cases, the menu appears for searching for an address book entry.

- ▶ Select desired address book entry. Proceed as described in the “Searching for an address book entry” section (▷ page 170).

Once the address data is complete and if it matches the digital map data, COMAND saves the entry as your own address in the destination memory.

If address data is still missing or if it cannot be found on the digital map, a message appears indicating that the address is incomplete. ▷▷



## Control systems

### COMAND navigation system (destination memory)

▷▷▶ **Closing message:** Select “OK”.

**i** *In the address book entry, the city and street must be spelled in the same way as the destination entry so that the data matches the digital map data.*

*In order for the state (USA) or province (CDN) to match the map data, you may either enter the entire name or the abbreviation in the address book.*

*Examples:*

- *Florida or FL*
- *Colorado or CO*
- *Alberta or AB*
- *Ontario or ON*

Depending on which data is missing or cannot be found on the digital map, you must now either:

- select a state (USA) or province (CDN)
- or enter a city
- or enter a street
- or enter a house number

▶ **Selecting a state (USA) or province (CDN):** Select desired state (USA) or province (CDN) from the list.

▶ **Entering a city:** Proceed as described for destination entry in the “Entering a city” section (▷ page 208).

▶ **Entering a street:** Proceed as described for destination entry in the “Entering a street” section (▷ page 211).

▶ **Entering a house number:** Proceed as described for destination entry in the “Entering a house number” section (▷ page 216).

If all data is available and matches the digital map data, you can save the address.

▶ **Saving:** Select “Save”.

#### Displaying your own address

▶ Select “Navi” → “Destination” → “From Memory”.

The destination memory list appears either with or without the input characters. Whether the input characters appear depends on the number of entries in the destination memory.

▶ Press .

## COMAND navigation system (destination memory)

**Destination memory list without input characters**


P82.86-5516-31

In the destination memory list without input characters, the “*My Address*” entry is automatically highlighted.

- ▶ Press .

If your own address has already been assigned, you will see the menu for starting route guidance with your own address data.


- ▶ **Exiting menu:** Select “*Back*”.

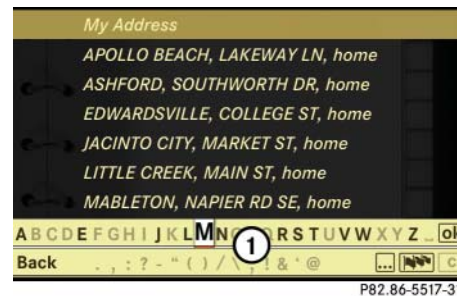**Destination memory list with input characters**

 
 
P82.86-5517-31

- ① Input characters

In the destination memory list with input characters ①, the input characters are automatically activated.

- ▶ Slide  repeatedly until the input characters disappear.

The list entry “*My Address*” is automatically highlighted as long as you have not entered any characters using the input characters.

- ▶ **If you have entered characters from the list of input characters:** Rotate  or slide  repeatedly until the list entry “*My Address*” is highlighted.

- ▶ Press .

If your own address has already been assigned, you will see the menu for starting route guidance with your own address data.

- ▶ **Exiting menu:** Select “*Back*”.

## Control systems

### COMAND navigation system (last destinations)

**i** COMAND automatically saves the last destinations for which the route calculation was launched. It is stored in the “last destinations” memory. If this memory is full, COMAND deletes the oldest destination. You can also save one destination from the list of last destinations in the destination memory. It will be saved there permanently.

#### **Saving a destination permanently in the destination memory**

- ▶ Proceed as described in the “Saving a destination from the list of last destinations” section (▷ page 251).


#### **Saving the vehicle position in the list of last destinations**

- ▶ **Centering map on the vehicle’s position:** Select “Navi” → “Position” → “Vehicle Position Map”.
- ▶ **Saving:** Select “Navi” → “Position” → “Save Position”.

COMAND saves the current vehicle position as a destination in the list of last destinations.

#### **Saving the crosshair position in the list of last destinations**

**i** If you have manually moved the map, you will see a crosshair on the map (▷ page 196). You can save the crosshair position as a destination in the list of last destinations.

- ▶ **Showing menu system, if necessary:** Press .

- ▶ Select “Position” → “Save Position”.

COMAND saves the crosshair position as a destination in the list of last destinations.

#### **Deleting one of the last destinations**

- ▶ Select “Navi” → “Destination” → “From Last Destinations”.

The list of last destinations appears.

- ▶ Select desired destination.

The address of the destination appears.

- ▶ Select “Delete”.
- ▶ Select “Yes” or “No”.

## ▼ COMAND system settings



### System settings menu overview

**i** The components and operating principles of COMAND can be found on (▷ page 87).

Display (▷ page 259)	Time (▷ page 259)	Voice Control (▷ page 261)	Language (▷ page 262)	Favorite (▷ page 263)	Reset (▷ page 259)
Display settings	Time settings	Voice Control settings	Language settings	Assign favorite button	Reset COMAND to factory settings

### Display settings

#### Switching the display on or off

- ▶ **Switching off:** Select “Vehicle” → “Display OFF”.
- ▶ **Switching back on:** Rotate  or slide .

#### Setting the display design


- ▶ Select “Vehicle” → “System Settings” → “Display”.
- ▶ Select “Day Mode”, “Night Mode” or “Automatic”.

**i** In the “Automatic” setting, COMAND analyzes the automatic vehicle light sensor and switches between the display design automatically.

### Time settings

#### Setting the time

**i** The correct time must be set for the following navigation system functions to operate correctly:

- Route guidance on routes with time-dependent traffic guidance
  - Calculation of estimated arrival time
- ▶ Select “Vehicle” → “System Settings” → “Time” → “Time”.
  - ▶ **Selecting hour or minute(s):**  
Slide .




## Control systems


### COMAND system settings

▷▷▶ **Setting value:** Rotate  or slide .

▶ **Saving setting:** Press .

 *The increment value for setting the minutes depends on the situation. If GPS reception is available, it is 30 minutes. If GPS reception is not available, it is one minute.*

#### Setting the time zone and switching between Daylight Saving Time and standard time

 *The correct time zone and Daylight Saving Time/standard time must be set for the following navigation system functions to operate correctly:*

- Route guidance on routes with time-dependent traffic guidance
- Calculation of estimated arrival time

▶ **Setting time zone:** Select “Vehicle” → “System Settings” → “Time” → “Time Zone”.

The country list appears. The dot • in front of a list entry indicates the current setting.

▶ Select the country in which you are currently driving.

A time zone list may also be displayed, depending on the country selected.

▶ Select desired time zone.

Subsequent operation depends on:

- whether your navigation system has GPS reception
- which country you have previously set

You may either:

- manually switch between “Daylight Savings Time (Summer)” and “Standard time (Winter)” in a list

or


- switch automatic Daylight Saving Time to standard time changeover (and vice versa) on or off


▶ **Switching manually:** Select “Daylight Savings Time (Summer)” or “Standard time (Winter)”.


The dot • in front of a list entry indicates the current setting.

▶ **Switching automatic changeover on or off:** Select “Automatic Daylight Savings Time”.

You have switched the function on or off. A checkmark appears when the function is switched on.

 *Availability of the automatic daylight saving time feature depends on the country selected.*

▶ **Saving setting and exit the menu:** Slide .

 *If you have switched off the automatic changeover function, you must change Daylight Saving Time to standard time and vice versa yourself.*

**Setting the date**

- ▶ Select “Vehicle” → “System Settings” → “Time” → “Date”.
- ▶ **Selecting month, day or year:**  
Slide ←⊙→.
- ▶ **Setting value:** Rotate [⊙] or slide ↑⊙↓.
- ▶ **Saving setting:** Press ⊞.

**Setting the time/date format**

- ▶ Select “Vehicle” → “System Settings” → “Time” → “Format”.
- The format list appears. The dots • in front of the list entries indicate the current setting.
- ▶ **Changing format setting:**  
Select desired format.
  - ▶ **Saving setting and exit the menu:**  
Slide ←⊙→.

**Voice Control settings****Switching help window on or off**

- ▶ Select “Vehicle” → “System Settings” → “Voice Control”.
  - ▶ Select “Help Window”.
- You can switch the help window on or off. A checkmark appears when the help window is switched on.

**Individualization**

Using individualization, you can fine-tune Voice Control to your own voice and thus improve voice recognition. The ability of the system to recognize the commands of other users does not deteriorate as a result.

Individualization consists of two parts. You train the system to recognize digits in the first part and specific commands in the second part.

**Starting new individualization**

**i** It is only possible to start individualization with the vehicle stationary. After starting the session, the system will guide you through the individualization by means of acoustic instructions.

- ▶ Select “Vehicle” → “System Settings” → “Voice Control” → “Start new individualization”.

A prompt appears asking whether you would like further information.

- ▶ Select “Yes” or “No”.

If you select “No”, the first part of individualization begins.

If you select “Yes”, an information display will be shown with audio instruction.

- ▶ **Closing display:** Select “OK”.

The first part of individualization begins. ▶▶

## Control systems

### COMAND system settings

- ▷▷ At the end of the first part, you will see a prompt asking whether you want to begin the second part.
- ▶ Select “Yes” or “No”.  
If you select “No”, individualization will be canceled. The data from the first part is saved automatically.  
If you select “Yes”, the second part begins.

Individualization is completed at the end of the second part. You will see a message to this effect. The data from the second part is saved automatically.

#### ***Canceling during the first or second part of individualization***

- ▶ Select “Cancel”.  
A prompt appears asking whether you really do want to cancel.
- ▶ Select “Yes” or “No”.  
If you select “Yes”, individualization will be canceled. The data from the part at which you exited is not saved.  
If you select “No”, the part at which you stopped begins again.


#### ***Deleting existing individualization data***

- ▶ Select “Vehicle” → “System Settings” → “Voice Control” → “Delete individualization”.  
A prompt appears asking whether you really do want to delete.
- ▶ Select “Yes” or “No”.  
The individualization data will either be deleted or not, depending on your selection.

#### **Setting the system language**

- ▶ Select “Vehicle” → “System Settings” → “Language”.  
The language list appears. A dot • indicates the current setting.
- ▶ **Changing setting:** Select desired language.  
The language is set.

### Assigning the favorite button

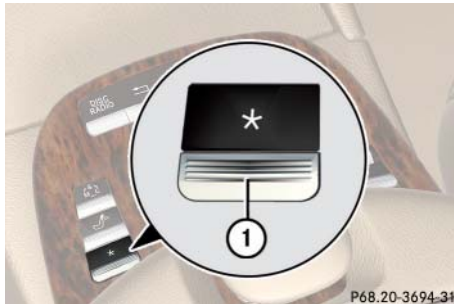

#### ① Favorite button

You can assign the following predefined functions to the favorite button **★**:

- “Rear Window Sunshade” (▷ page 535)  
You can use the favorite button to extend or retract the rear window sunshade. This is the default setting.
- “Display OFF” (▷ page 259)  
You can use the favorite button to switch the COMAND display on or off.
- “Repeat Navigation Command” (▷ page 243)

You can use the favorite button to recall the last announcement issued by the navigation system.

- ▶ Select “Vehicle” → “System Settings” → “Favorite”.

The list of predefined functions appears. The dot • in front of the list entry indicates the current setting.

- ▶ **Changing setting:** Rotate **⌂** and select desired function.
- ▶ **Saving setting and exit the menu:** Press **⌂**.

### Reset

**i** You can reset COMAND back to its factory settings.

*In this case, all personal data (e.g. address book entries, entries in the destination memory and the list of last destinations of the navigation system), among other things, is deleted.*

- ▶ Select “Vehicle” → “System Settings” → “Reset”.

A prompt appears asking whether you really want to reset.

- ▶ Select “Yes” or “No”.

If you select “Yes” another prompt will appear asking whether you really want to reset.

- ▶ Select “Yes” or “No”.

If you select “Yes”, COMAND will be reset and restarted.



## Control systems

### COMAND vehicle menu

In this menu, you can program the following vehicle functions:

Function	Page
Exterior Lighting Delayed Switch-off	264
Locator Lighting	265
Exterior Mirror Convenience Settings	266
Automatic Locking	267
Easy Entry/Exit Feature	268
Interior Ambient Light	269
Interior Lighting Delayed Switch-off	270
Rear-window Sunshade	271
Trunk Opening-height Restriction*	272

#### Setting night security illumination

(Exterior Lighting Delayed Switch-off)

**i** The components and operating principles of COMAND can be found on (▷ page 87).

Use this function to set whether and how long you would like the exterior lighting to illuminate during darkness after exiting the vehicle and all doors closed.

The exterior lighting automatically goes out after the delayed switch-off time has expired.

You can select:


- “0 sec.”, the delayed switch-off feature is deactivated
- “15 sec.”, “30 sec.”, “45 sec.”, or “60 sec.”, the delayed switch-off feature is activated

**i** You can reactivate this function within 10 minutes by opening a door.

- ▶ Select “Vehicle”.  
The main area is active.

- ▶ **Selecting “Exterior Lighting Delayed Switch-off” menu:** Slide ←⊙→ or rotate ⏪⊙⏩.

- ▶ **Confirming selection:** Press ⊙.

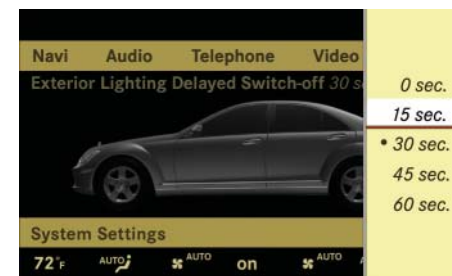

P82.86-6668-31

- ▶ **Selecting length of time:** Slide ↑⊙↓ or rotate ⏪⊙⏩.
  - ▶ **Confirming selection:** Press ⊙.
- or
- ▶ Select “Vehicle” → “Vehicle” → “Exterior Lighting Delayed Switch-off”.  
A selection list appears.  
The current setting is indicated by a dot • .



P82.86-6451-31

- ▶ **Selecting length of time:** Slide  $\uparrow \odot \downarrow$  or rotate  $\left\{ \odot \right\}$ .
- ▶ **Confirming selection:** Press  $\odot$ .

To activate night security illumination:

- ▶ Select delayed switch-off period (see above).
- ▶ Turn the exterior lamp switch to position **A** before turning off the engine.

### Locator lighting on/off

**i** The components and operating principles of COMAND can be found on ( $\triangleright$  page 87).

With the locator lighting feature activated and the exterior lamp switch in position **A** ( $\triangleright$  page 399), the following lamps will switch on during darkness when the vehicle is unlocked from the outside:

- Parking lamps
- Tail lamps
- License plate lamps
- Front fog lamps
- Door entry lamps in the mirror
- Side marker lamps

The locator lighting switches off when the driver's door is opened.

If you do not open a door after unlocking the vehicle with the SmartKey, the lamps will switch off automatically after approximately 40 seconds.

- ▶ Select "Vehicle".  
The main area is active.
- ▶ **Selecting "Locator Lighting" function:** Slide  $\leftarrow \odot \rightarrow$  or rotate  $\left\{ \odot \right\}$ .
- ▶ **Confirming selection:** Press  $\odot$ .



P82.86-6667-31

- ▶ **Switching locator lighting on or off:** Press  $\odot$ .


or

- ▶ Select "Vehicle"  $\rightarrow$  "Vehicle"  $\rightarrow$  "Locator Lighting".

A checkmark appears when the locator lighting is switched on.  $\triangleright \triangleright$

## Control systems

### COMAND vehicle menu

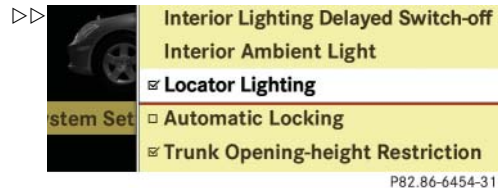

- ▶ **Confirming selection:** Press

To activate locator lighting:

- ▶ Make sure the function “*Locator Lighting*” is set.
- ▶ Turn the exterior lamp switch to position **A** when exiting the vehicle.

### Exterior mirror convenience settings

The components and operating principles of COMAND can be found on (▷ page 87).

In the “*Exterior Mirror Convenience Settings*” menu, you can switch the following exterior mirror functions on or off:


- Exterior mirrors automatically fold in when the vehicle is locked
  - Exterior mirror on front passenger’s side automatically tilts downward when the vehicle is reversing
- ▶ Select “*Vehicle*”.
- The main area is active.
- ▶ **Selecting “*Exterior Mirror Convenience Settings*” menu:** Slide or rotate .
  - ▶ **Confirming selection:** Press .



- ▶ **Selecting “*Fold in automatically when locking*” or “*Lower mirror when reversing*”:** Rotate .
- ▶ **Confirming selection:** Press .
- ▶ Slide to exit.

or

- ▶ Select “*Vehicle*” → “*Vehicle*” → “*Exterior mirror Convenience Settings*”.
- A selection list appears.

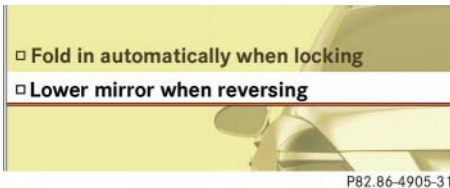


- ▶ **Selecting a function:** Slide or rotate .
- A checkmark appears in the corresponding box when the option has been selected.
- ▶ **Confirming selection:** Press .
- ▶ Slide to exit.

#### Automatic locking on/off

The components and operating principles of COMAND can be found on (> page 87).

Use this function to activate or deactivate the automatic central locking (> page 368). With the automatic central locking system activated, the vehicle is centrally locked at vehicle speeds of approximately 9 mph (15 km/h).

- ▶ Select “Vehicle”.  
The main area is active.
- ▶ **Selecting “Automatic Locking” function:** Slide or rotate .

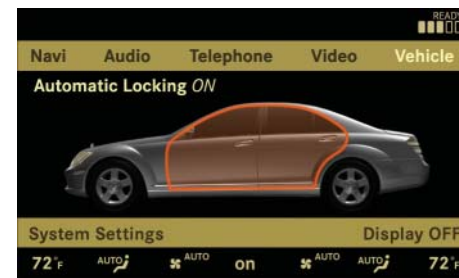


- ▶ **Switching automatic locking on or off:** Press .

or

- ▶ Select “Vehicle” → “Vehicle” → “Automatic Locking”.

A checkmark appears when automatic locking is switched on.

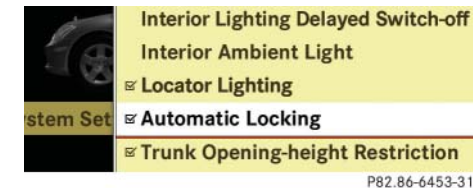

- ▶ **Confirming selection:** Press .
- ▶ Slide to exit.

## Control systems

### COMAND vehicle menu

#### Activating easy-entry/exit feature

**i** The components and operating principles of COMAND can be found on (▷ page 87).

Use this function to activate and deactivate the easy-entry/exit feature (▷ page 384).

The following settings are available for the easy-entry/exit feature:

OFF	The easy-entry/exit feature is deactivated.
Steering Column & Seat	Both the steering column and the driver's seat are moved.

#### Warning!



You must make sure no one can become trapped or injured by the moving steering wheel and driver's seat when the easy-entry/exit feature is activated.

To stop seat/steering wheel movement, do one of the following:

- Press seat adjustment switch (▷ page 374).
- Move steering wheel adjustment stalk (▷ page 386).
- Press one of the memory position buttons or the memory button **M** (▷ page 393).

Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could open the driver's door and unintentionally activate the easy-entry/exit feature, which could result in an accident and/or serious personal injury.

- ▶ Select "Vehicle".

The main area is active.

- ▶ **Selecting "Easy Entry/Exit Feature" menu:** Slide ←⊙→ or rotate ⏪⏩.



P82.86-6676-31

- ▶ **Confirming selection:** Press ⊙.


or

- ▶ Select "Vehicle" → "Vehicle" → "Easy Entry/Exit Feature".





- ▶ **Confirming selection:** Press .

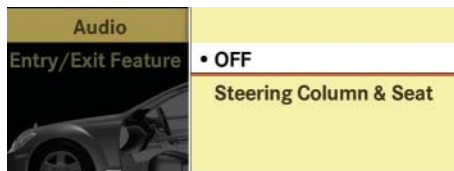A selection list appears.


The current setting is indicated by a dot •.







P82.86-4997-31

- ▶ **Selecting a setting:** Slide   or rotate .
- ▶ **Confirming selection:** Press .

#### Setting interior ambient lighting

   The components and operating principles of COMAND can be found on (> page 87).

You can adjust the brightness of the interior lighting on a scale of “0” (off) to “5” (bright).

- ▶ Select “Vehicle”.
- The main area is active.
- ▶ **Selecting “Interior Ambient Light” menu:** Slide   or rotate .
- ▶ **Confirming selection:** Press .



P82.86-6669-31

- ▶ **Adjusting brightness:** Slide   or rotate .

- ▶ **Confirming selection:** Press .

or

- ▶ Select “Vehicle” → “Vehicle” → “Interior Ambient Light”.



P82.86-6452-31

- ▶ **Adjusting brightness:** Slide   or rotate .

- ▶ **Confirming selection:** Press .

## Control systems

### COMAND vehicle menu

#### Setting interior lighting delayed switch-off

**i** The components and operating principles of COMAND can be found on (▷ page 87).

Use this function to set whether and how long you would like the interior lighting to remain lit during darkness after you have removed the SmartKey from the starter switch.

You can select:

- “0 sec.”, the delayed switch-off feature is deactivated
  - “15 sec.”, “30 sec.”, “45 sec.”, or “60 sec.”, the delayed switch-off feature is activated
- ▶ Select “Vehicle”.
- The main area is active.
- ▶ **Selecting “Interior Lighting Delayed Switch-off” menu:** Slide ←○→ or rotate ⏪⏩.

- ▶ **Confirming selection:** Press ⏹.

A selection list appears.

The current setting is indicated by a dot • .



P82.86-6675-31

- ▶ **Selecting length of time:** Slide ↑○↓ or rotate ⏪⏩.

- ▶ **Confirming selection:** Press ⏹.

or

- ▶ Select “Vehicle” → “Vehicle” → “Interior Lighting Delayed Switch-off”.

A selection list appears.

The current setting is indicated by a dot • .



P82.86-6450-31

- ▶ **Selecting length of time:** Slide ↑○↓ or rotate ⏪⏩.

- ▶ **Confirming selection:** Press ⏹.

### Extending or retracting rear window sunshade

**i** The components and operating principles of COMAND can be found on (▷ page 87).

This function is used to extend or retract the rear sunshade.

**i** If you operate the rear-window sunshade via COMAND or by using the favorite button (▷ page 263), this takes precedence over the buttons for the rear window sunshade in the rear doors (▷ page 535).

**i** You can program this function using the favorite button (▷ page 263).

**i** At temperatures below  $-4^{\circ}\text{F}$  ( $-20^{\circ}\text{C}$ ), the rear window sunshade is switched off.

- ▶ Select "Vehicle".

The main area is active.


- ▶ **Selecting "Rear-window Sunshade" function:** Slide ←○→ or rotate ⏪○⏩.



- ▶ **Extending or retracting rear window sunshade:** Press ⏪.

or

- ▶ Select "Vehicle" → "Vehicle" → "Rear-window Sunshade".

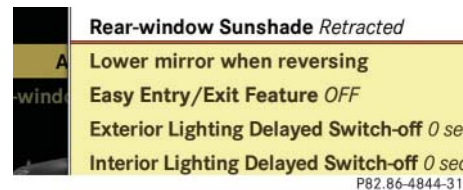

- ▶ **Confirming selection:** Press ⏪.

### Warning!



When operating the rear window sunshade, be sure that there is no danger of anyone being harmed by the extending or retracting procedure.

- ▶ **Reverse the extending or retracting procedure:** Press ⏩ again.



## Control systems

### COMAND vehicle menu

#### Trunk opening-height restriction\* on/off

**i** The components and operating principles of COMAND can be found on (▷ page 87).

Vehicles with trunk opening/closing system\*:

You can select whether the trunk lid should open fully or only to the height of the roof.

- ▶ Select “Vehicle”.  
The main area is active.
- ▶ **Selecting “Trunk Opening-height Restriction” function:** Slide ←⊙→ or rotate Ⓜ.
- ▶ **Confirming selection:** Press ⊙.




- ▶ **Switching on or off:** Press ⊙.

or


- ▶ Select “Vehicle” → “Vehicle” → “Trunk Opening-height Restriction”.

A checkmark appears when the trunk opening-height restriction is switched on.

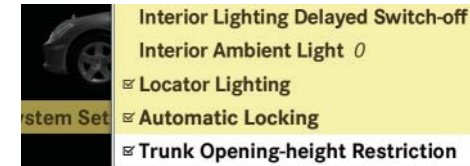

- ▶ **Confirming selection:** Press ⊙.

## ▼ COMAND automatic climate control

 The components and operating principles of COMAND can be found on (▷ page 87).

**Warning!**

When operating the automatic climate control, the air that enters the passenger compartment through the air vents can be very hot or very cold (depending on the set temperature). This may cause burns or frostbite to unprotected skin in the immediate area of the air vents.

Always keep sufficient distance between unprotected parts of the body and the air vents. If necessary, use the air distribution adjustment (▷ page 275) to direct the air to air vents in the vehicle interior that are not in the immediate area of unprotected skin.

**Warning!**

Follow the recommended settings for heating and cooling given on the following pages and pages in the “Controls in detail” part (▷ page 501) Otherwise the windows could fog up, impairing visibility and endangering you and others.

You can operate the automatic climate control via COMAND or via the buttons on the front and rear\* automatic climate control panel (▷ page 501).

Some of the special climate control functions can only be set via COMAND.


The following automatic climate control functions can be operated via COMAND:

Function	Page
Temperature	274
Air distribution	275
Air volume	275
Switching off cooling (“AC <sup>OFF</sup> ”)	276
Central climate control (“Mono”)	277
Footwell temperature	278
Air flow from air vents	279
Rear climate control*	279

## Control systems

### COMAND automatic climate control

The automatic climate control menu is called up via the climate control settings.

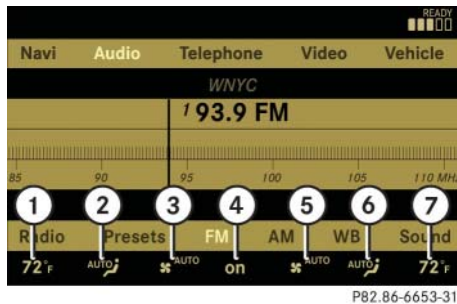

#### Climate control settings with functions (submenus)

- ① Temperature, left
- ② Air distribution, left
- ③ Air volume, left
- ④ Central menu, climate control
- ⑤ Air volume, right
- ⑥ Air distribution, right
- ⑦ Temperature, right

#### Setting temperature

Use the temperature controls (▷ page 501) in the center console or COMAND climate control settings to separately adjust the air temperature on each side of the passenger compartment.

- ▶ Select climate control settings → Temperature, left or right and then press .



- ▶ **Changing temperature:** Slide or rotate .

- ▶ **Exiting menu:** Press , back button in the center console (▷ page 88) or slide .

The setting is saved.

#### Adjusting air distribution

You can adjust the air distribution separately for the driver's and front passenger's side.


**i** When you change the air distribution, the automatic function of the climate control system is switched off.

- ▶ Select climate control settings → Air distribution, left or right.



P82.86-6654-31


#### ▶ Changing air distribution:

 

 
Rotate .

The symbol for air distribution changes. The direction and size of the arrows represent the air distribution.

or


#### ▶ Switching back to automatic mode:

Rotate  and select "AUTO".

- ▶ **Exiting menu:** Press , back button  in the center console (▶ page 88) or slide .

The setting is saved.

#### Adjusting air volume

Use buttons  (▶ page 501) in the center console or COMAND climate control settings to separately adjust the air volume on each side of the passenger compartment.

**i** When you change the air volume, the automatic function of the climate control system is switched off.

- ▶ Select climate control settings → Air volume, left or right.



P82.86-7183-31 ▶▶

## Control systems

### COMAND automatic climate control

- ▷▷▶ **Changing air volume:** Slide ↑⊙↓ or rotate ⏪⏩.

or

- ▶ **Switching back to automatic mode:** Rotate ⏪⏩ and select "AUTO".
- ▶ **Exiting menu:** Press ⏪, back button ⏪ in the center console (▷ page 88) or slide ←⊙→.

The setting is saved.

#### Central climate control menu via COMAND

The central climate control menu is in the center of the climate control settings. When the automatic climate control is switched on, you will see "on" in the central menu. The following functions can only be operated in the central climate control menu via COMAND:

Function	Page
Switching off cooling ("AC <sup>OFF</sup> ")	276
Central climate control ("Mono")	277
Footwell temperature	278
Air flow from air vents	279
Rear climate control*	279

- ▶ Select climate control settings → Central menu.



P82.86-6672-31

#### Switching cooling on or off

The cooling function, only operational when the engine is running, cools the vehicle interior down to the selected temperature. The cooling function also dehumidifies the air in the vehicle interior, thus preventing the windows from fogging up.

**i** Condensation may drip out from underneath the vehicle. This is normal and not an indication of a malfunction.

The “AC<sup>OFF</sup>” function is used to permanently switch off the cooling function of the automatic climate control system.

#### Warning!



If you turn off the cooling function, the vehicle will not be cooled when weather conditions are warm. The windows can fog up more quickly. Window fogging may impair visibility and endanger you and others.

- ▶ Select climate control settings → Central climate control menu.

- ▶ **Selecting “AC<sup>OFF</sup>”:** Slide or rotate .

- ▶ **Confirming selection:** Press .

A checkmark appears when the cooling is switched off.



P82.86-5008-31

“AC<sup>OFF</sup>” appears in the central menu of the climate control settings.

**!** If the air conditioning cannot be turned on again, this indicates that the air conditioning is losing refrigerant. The compressor has turned itself off.

Have the air conditioning checked at the nearest authorized Mercedes-Benz Center.

#### Selecting “Mono” mode

“Mono” is used to adjust the climate zones for the entire vehicle at the same time.


When the “Mono” function is switched on and you change the climate on the driver’s side, these changes will be carried out in the same manner for all climate zones.

- ▶ Select climate control settings → Central climate control menu.

- ▶ **Selecting “Mono”:** Slide or rotate .

- ▶ **Confirming selection:** Press .

A checkmark appears when the function has been selected.

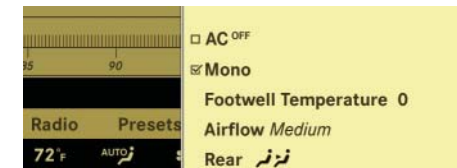

P82.86-5009-31

- ▶ **Exiting menu:** Press back button in the center console (▶ page 88) or slide .

## Control systems

### COMAND automatic climate control

The “Mono” function is automatically switched off when you:

- change an automatic climate control setting for the front passenger’s side using COMAND
- operate a button from the automatic climate control for the front passenger’s side
- operate one of the buttons for the rear climate control system

#### Adjusting footwell temperature

**i** In automatic mode, this setting optimizes the footwell temperature when outside temperatures are low.

The “Footwell Temperature” function is used to adjust the temperature difference between the footwell and the rest of the passenger compartment.

The higher the selected value, the higher the temperature in the footwell will be.

- ▶ Select climate control settings → Central climate control menu.
- ▶ **Selecting “Footwell Temperature”:** Slide  $\uparrow \odot \downarrow$  or rotate  $\left\{ \odot \right\}$  and then press  $\odot$ .



P82.86-6674-31

- ▶ **Changing temperature difference:** Slide  $\uparrow \odot \downarrow$  or rotate  $\left\{ \odot \right\}$ .
- ▶ **Exiting menu:** Press  $\odot$ , back button  $\leftarrow$  in the center console (▷ page 88) or slide  $\leftarrow \odot \rightarrow$ .  
The setting is saved.

#### Adjusting air flow from air vents

**i** In automatic mode, this setting optimizes the air flow when outside temperatures are high.

The “Airflow” setting defines air distribution and air volume in automatic mode:


- “Focused” (default setting, increased air flow)
- “Medium” (reduced air flow)
- “Diffuse” (minimal air flow)

**i** When the interior ambient temperature of the vehicle is very hot and the automatic climate control is cooling the interior, the setting for air flow is temporarily overridden.

- ▶ Select climate control settings → Central climate control menu → “Airflow”.

A selection list appears.

The current setting is indicated by a dot • .

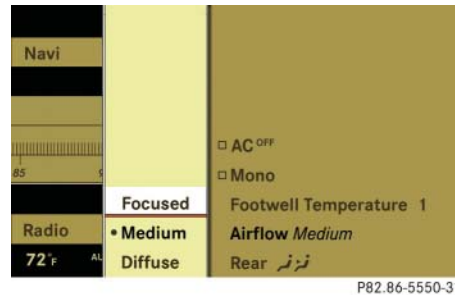

- ▶ **Changing air flow:** Slide ↑⊙↓ or rotate ↻.
- ▶ **Confirming selection:** Press ⊙.

#### Operating rear climate control\* from the front

The “Rear رزرف” function is used to operate the rear climate control via COMAND and the buttons on the center console control unit (> page 510).

#### Switching on rear climate control operation from the front

- ▶ Select climate control settings → Central climate control menu.
- ▶ **Selecting “Rear رزرف”:** Slide ↑⊙↓ or rotate ↻.



- ▶ **Confirming selection:** Press ⊙. >>



## Control systems

### COMAND automatic climate control

- ▷▷ In the climate control settings, “**نزر**” appears in the central menu. The rear climate control can be operated from the front.



P82.86-6677-31

#### Climate control settings, rear climate control


- ① Rear temperature, left
- ② Rear air distribution, left
- ③ Rear air volume
- ④ Central menu for rear climate control
- ⑤ Rear air distribution, right
- ⑥ Rear temperature, right

The rear climate control is operated in the same manner as the climate control system for the driver's and front passenger's side (▷ page 273).

#### Central menu for rear climate control

In the central menu for the rear climate control, you can:


- switch back to operating the front climate control system
  - switch off the rear climate control
  - switch the automatic function of the rear climate control from automatic to manual
- ▶ Select climate control settings → Central climate control menu.

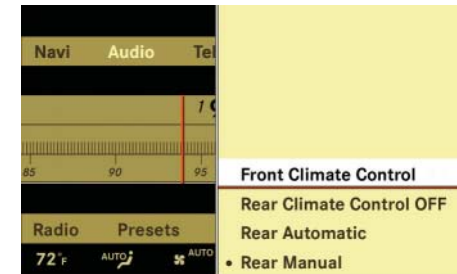

P82.86-6673-31

#### Switching off rear climate control operation from the front

- ▶ Select climate control settings → Central climate control menu.  
The current setting is indicated by a dot •.
- ▶ **Selecting “Front Climate Control”:**  
Slide ↑⊙↓ or rotate ⌚.

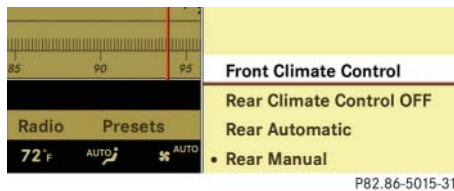


P82.86-5015-31

- ▶ **Confirming selection:** Press ⌚.  
The climate control settings shows the climate control settings for the driver and front passenger.

#### Switching off rear climate control

- ▶ Select climate control settings → Central climate control menu.  
The current setting is indicated by a dot •.
- ▶ **Selecting “Rear Climate Control OFF”:** Slide ↑⊙↓ or rotate ⌚.

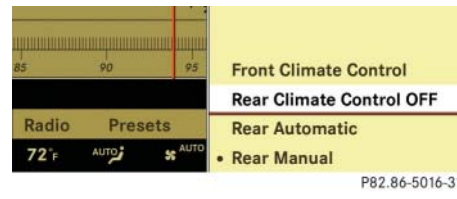


P82.86-5016-31

- ▶ **Confirming selection:** Press ⌚.  
The rear climate control is switched off.

#### Switching on the automatic function of the rear climate control

- ▶ Select climate control settings → Central climate control menu.  
The current setting is indicated by a dot •.
- ▶ **Selecting “Rear Automatic”:**  
Slide ↑⊙↓ or rotate ⌚.

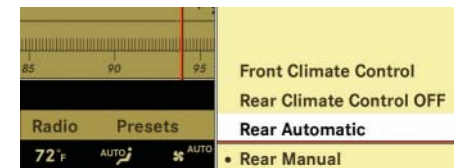

P82.86-5017-31

- ▶ **Confirming selection:** Press ⌚.  
The automatic function of the rear climate control is switched on.

## Control systems

### COMAND seats

When adjusting the seats, observe the safety notes in the section “Seats” (▷ page 373).

#### Operating seats via COMAND

**i** The components and operating principles of COMAND can be found on (▷ page 87).

The following seat adjustments can be made via COMAND:


Settings	Page
Lumbar support	283
Multicontour seats*, front	283
Drive-dynamic multicontour seats*, front	285

#### Selecting a seat

You must first select the seat for which you would like to make adjustments.




① Seat menu button

▶ Press .

The main area is active.

▶ **Switching to the bottom menu line:**

Slide  .

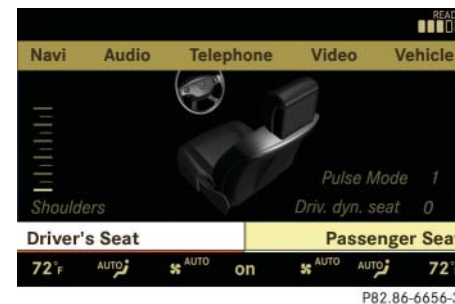


**Example illustration (vehicles with Drive-dynamic multicontour seat\*)**

▶ **Selecting seat:** Slide   or rotate .

▶ **Confirming selection:** Press .


### Exiting menu

There are several ways to exit the multicontour seat menu.


- ▶ Press  again.
- or
- ▶ Press any shortcut button.
- or
- ▶ Select another main function from the main menu line.

### Lumbar support

To support the spine, you can adjust the curvature of the front seat backrests.





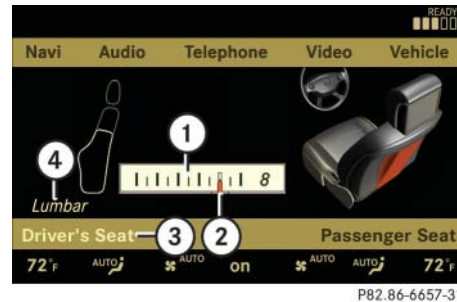


- ▶ Press .


The main area of the COMAND display is active. A scale appears.



P82.86-6657-31

- ① Scale
- ② Cursor
- ③ Current seat
- ④ Current setting

- ▶ Select seat (▷ page 282).
- ▶ **Adjusting lumbar support:**  
Slide   or rotate  until desired setting is reached.
- ▶ **Confirming selection:** Press .
- ▶ **Switching to the bottom menu line:**  
Slide  .
- ▶ **Confirming selection:** Press .

**i** After you have pressed , the seat last adjusted is active.

### Multicontour seats\*, front

**i** If PRE-SAFE® has been activated, the air pressure in the air chambers (on the sides of the seat cushion and backrest) of the front multicontour seats is increased.

To support the spine, you can individually adjust the backrest contour of the front seats by regulating the air pressure in the air chambers of the multicontour seat.

The settings are made on the COMAND display.

**i** When you adjust the multicontour seat, noises may result from pumping air into or releasing air out of the air chambers.

You can adjust the following air chambers:

- sides of seat cushion
- sides of backrest
- backrest curvature in lumbar area
- backrest curvature in shoulder area

## Control systems


### COMAND seats

#### Adjusting sides of seat cushion

This function is used to adjust the air chambers in the sides of the seat cushion.

- ▶ Select seat (▷ page 282).
- ▶ **Selecting “Seat sides”:** Slide ←⊙→ or rotate Ⓜ.
- ▶ **Confirming selection:** Press ⊙.

A scale appears.

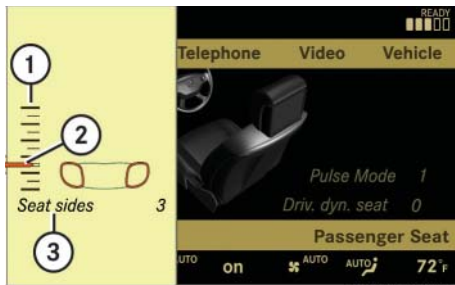

- ① Scale
- ② Cursor
- ③ Current setting


- ▶ Slide ↑⊙↓ or rotate Ⓜ until desired setting is reached.
- ▶ **Saving setting:** Press ⊙.

#### Adjusting backrest sides

This function is used to adjust the air chambers in the backrest sides.

- ▶ Select seat (▷ page 282).
- ▶ **Selecting “Seatback Sides”:** Slide ↑⊙↓ or rotate Ⓜ.
- ▶ **Confirming selection:** Press ⊙.

A scale appears.

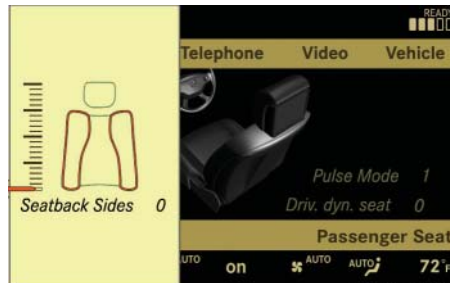

- ▶ Slide ↑⊙↓ or rotate Ⓜ until desired setting is reached.
- ▶ **Saving setting:** Press ⊙.


#### Adjusting backrest curvature in lumbar area

This function is used to adjust the air chambers in the lumbar area of the backrest.

- ▶ Select seat (▷ page 282).
- ▶ **Selecting “Lumbar”:** Slide ←⊙→ or rotate Ⓜ.
- ▶ **Confirming selection:** Press ⊙.

Cross-hairs appear. You can use them to make two settings:

- **vertical:** shift the point of greatest curvature upward or downward
- **horizontal:** adjust the degree of curvature

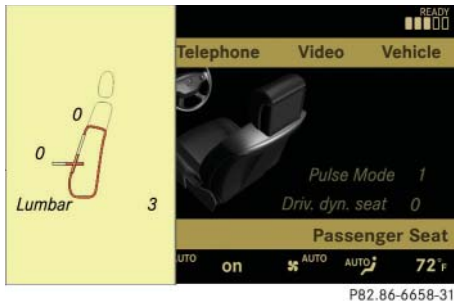


- ▶ Slide ↑⊙↓ or ←⊙→ until desired setting is reached.
- ▶ **Saving setting:** Press ⊙.

#### Adjusting backrest curvature in shoulder area

This function is used to adjust the air chambers in the shoulder area of the backrest.

- ▶ Select seat (▷ page 282).
- ▶ **Selecting “Shoulders”:** Slide ←⊙→ or rotate ⚙.

- ▶ **Confirming selection:** Press ⊙.
- A scale appears.

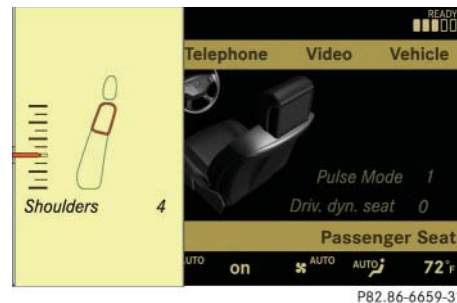

- ▶ Slide ↑⊙↓ or rotate ⚙ until desired setting is reached.
- ▶ **Saving setting:** Press ⊙.

#### Drive-dynamic multicontour seats\*, front

For information on manual multicontour seat settings, see “Multicontour seats\*, front” (▷ page 283).

**i** If PRE-SAFE® has been activated, the air pressure in the air chambers (sides of seat cushion and backrest) of the drive-dynamic multicontour seats is increased.

The Drive-dynamic multicontour seat automatically adjusts the lateral support provided by the backrest to your driving style.

The Drive-dynamic multicontour seat electronically controls the air pressure in the air chambers of the backrest side bolsters. This function improves driving comfort and pleasure.

- ▶ Select seat (▷ page 282).
- ▶ **Selecting “Driv. dyn. seat”:** Slide ←⊙→ or rotate ⚙.
- ▶ **Confirming selection:** Press ⊙. ▷▷

## Control systems

### COMAND seats

▷▷ A scale appears. You can choose between:

- “0”: off
- “1”: level 1
- “2”: level 2



P82.86-6660-31

- ▶ Slide  $\uparrow\odot\downarrow$  or rotate  $\left(\odot\right)$  until desired setting is reached.
- ▶ **Saving setting:** Press  $\odot$ .

### Pulse mode

- ▶ Select seat (▷ page 282).
- ▶ **Selecting “Pulse Mode”:** Slide  $\leftarrow\odot\rightarrow$  or rotate  $\left(\odot\right)$ .
- ▶ **Confirming selection:** Press  $\odot$ .

A list appears. You can choose between different types of massage:



P82.86-6629-31

- The current setting is indicated by a solid circle.
- ▶ Slide  $\uparrow\odot\downarrow$  or rotate  $\left(\odot\right)$  until desired setting is reached.
  - ▶ **Saving setting:** Press  $\odot$ .

**i** Depending on the setting, the massage function runs for about 7 to 10 minutes.

### ▼ Instrument cluster control system

The control system is activated as soon as the SmartKey in the starter switch is turned to position **2** or as soon as the KEYLESS-GO\* start/stop button (▷ page 372) is in position **2**. The control system enables you to:

- call up information about your vehicle
- change vehicle settings

For example, you can use the control system to find out when your vehicle is next due for service, to call up statistical data on your vehicle, and much more.

#### Warning!




A driver's attention to the road and traffic conditions must always be his/her primary focus when driving.

For your safety and the safety of others, selecting features through the multifunction steering wheel should only be done by the driver when traffic and road conditions permit it to be done safely.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

The control system relays information to the multifunction display.

### Multifunction display

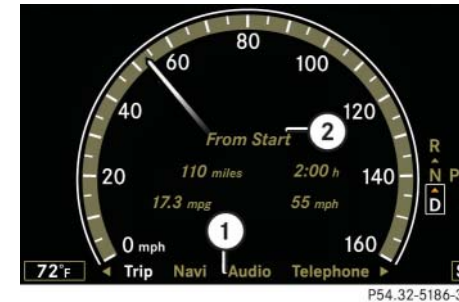

- ① Line for main menus
- ② Text field in multifunction display

Settings, functions, submenus as well as any malfunctions are shown to you in the text field.













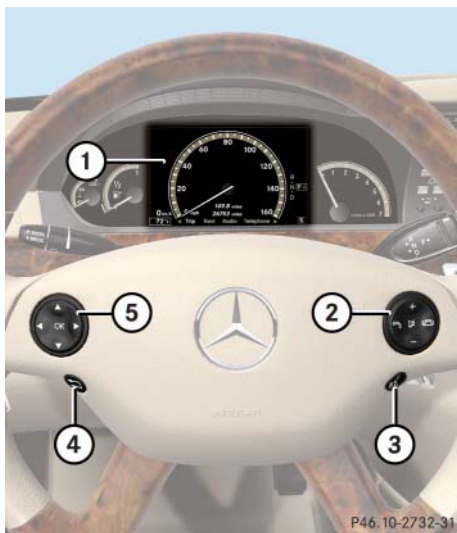


## Control systems

### Instrument cluster control system
 
#### Multifunction steering wheel

The displays in the multifunction display and the settings in the control system are controlled using the buttons on the multifunction steering wheel.





①	Multifunction display
②	 to take a call to dial to redial
	 to end a call to reject an incoming call
	 to increase volume
	 to decrease volume
	 to mute
③	 to accept a call to activate Voice Control
④	 back/to cancel Voice Control
⑤	 to scroll up
	 to scroll down
	 to scroll to the right
	 to scroll to the left
	 to confirm selection


The information available in the multifunction display is arranged in menus and accompanying functions and submenus. For example, in the “Settings” menu, you will


find functions for making settings to your vehicle. There are functions for calling up information and for making settings to your vehicle.

It is helpful to think of the menus as being arranged in a circular pattern:

- ▶ Press  or  repeatedly to switch menus.

The number of menus available in the system depends on which optional equipment is installed in your vehicle.

- ▶ Press button  to return to the next highest menu level.


From a menu’s highest level, you will always see the screen from the “Trip” menu that was last active. When you press  again, you switch to the standard display (▷ page 291).

For information about warning and malfunction messages appearing in the multifunction display (▷ page 642).

## Control systems

### Instrument cluster control system

#### Menus

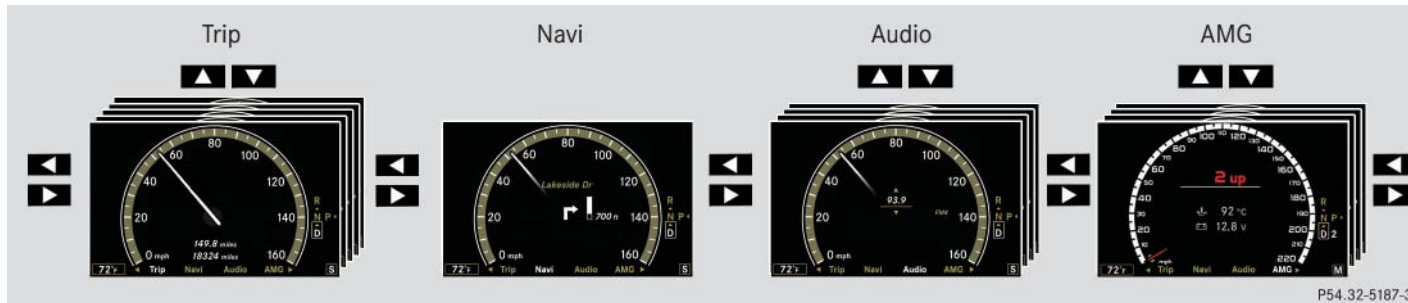


	Trip (▷ page 291)	Navi (▷ page 292)	Audio (▷ page 294)	AMG <sup>1</sup> (▷ page 296)
Commands/submenus	Standard display	Showing route guidance instructions, current direction traveled	Selecting radio station	Gear currently engaged Engine oil temperature Vehicle supply voltage
	Fuel consumption statistics since start		Selecting satellite radio channel	RACETIMER
	Fuel consumption statistics since last reset		Operating DVD changer/ audio CD/ audio DVD/MP3	Overall analysis
	Resetting fuel consumption statistics		Operating video DVD	Lap analysis
	Distance to empty			
	Digital speedometer			

<sup>1</sup> S 63 AMG and S 65 AMG only.

## Control systems

### Instrument cluster control system

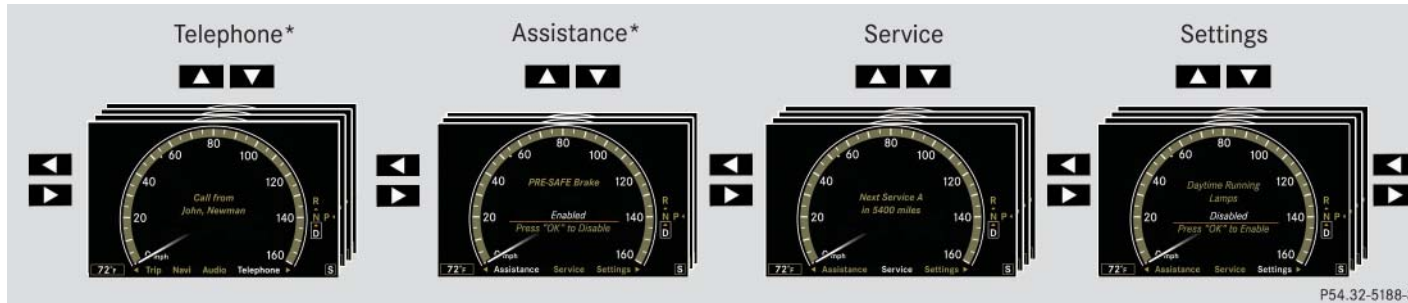

	<b>Telephone*</b> (▷ page 299)	<b>Assistance*</b> (▷ page 303)	<b>Service</b> (▷ page 304)	<b>Settings</b> (▷ page 305)
<b>Commands/submenus</b>	Dialing a number from the phone book	Displaying the distance graphic*, DISTRONIC Plus*	Calling up vehicle malfunction, warning and system status messages stored in memory	Setting daytime running lamp mode (USA only)
	Redialing	Activating/deactivating PRE-SAFE® Brake* (vehicles with DISTRONIC Plus* only)	Checking tire inflation pressure	Switching additional speedometer on or off
	Answering a call	Switching on or off Rear View Camera* automatically	Calling up maintenance service display	Switching on or off radar sensors*
	Ending a call or rejecting an incoming call	Switching on or off Blind Spot Assist*	Checking engine oil level*	

#### Trip menu


**i** The menu overview can be found on (▷ page 289).

In the “Trip” menu, you can show an additional display for the speedometer and call up or reset your vehicle’s statistical data.

#### Standard display

In the standard display, the trip odometer and main odometer are shown in the multifunction display.

▶ Press ◀ or ▶ to select the “Trip” menu.

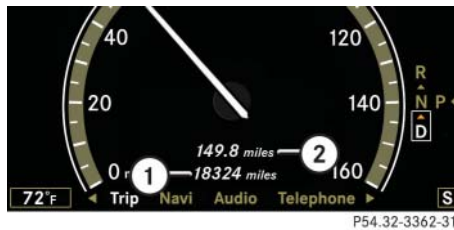


- ① Main odometer
- ② Trip odometer

#### Fuel consumption statistics since start

▶ Press ◀ or ▶ to select the “Trip” menu.

▶ Press ▼ to select “From Start”.

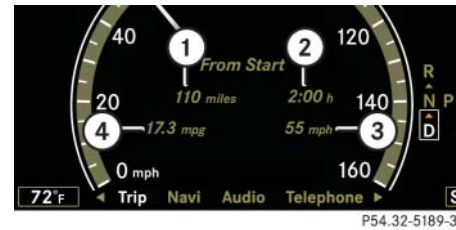

- ① Distance driven since start
- ② Time elapsed since start
- ③ Average speed since start
- ④ Average fuel consumption since start


**i** All values that are based on the last start are reset when you turn off the vehicle’s engine for more than four hours (▷ page 424).

**i** If you turn the SmartKey to position 1 or 2 again during this time, the values will not be reset. After 9999 hours or 99999 miles (kilometers), the fuel consumption statistics since start are automatically reset.

#### Fuel consumption statistics since last reset

▶ Press ◀ or ▶ to select the “Trip” menu.

▶ Press ▼ or ▲ to select “Since Reset”.

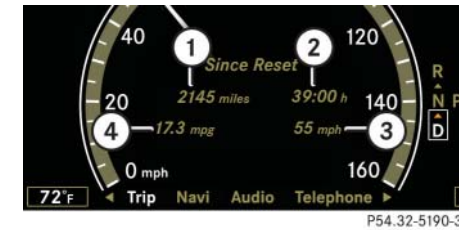

- ① Distance driven since last reset
- ② Time elapsed since last reset
- ③ Average fuel consumption since last reset
- ④ Average speed since last reset

**i** After 9999 hours or 99999 miles (kilometers), the fuel consumption statistics since last reset are automatically reset.

## Control systems

### Instrument cluster control system

#### Resetting fuel consumption statistics

- ▶ Press or to select the “Trip” menu.
- ▶ Press or to select the function you wish to reset.
- ▶ Press **OK**.



#### Illustration: Reset trip odometer

- ▶ Press to select “Yes” and confirm with **OK**.

**i** You can reset the trip odometer by pressing and holding the button. The trip odometer is then reset without confirmation.

#### Distance to empty

- ▶ Press or to select the “Trip” menu.
- ▶ Press or to select “Range”.  
The calculated remaining driving range based on the current fuel tank level appears in the multifunction display.

**i** If only very little fuel is left in the tank, a fuel pump is shown instead of the range.

#### Digital speedometer

- ▶ Press or to select the “Trip” menu.
- ▶ Press or to select the digital speedometer.



① Digital speedometer

#### Navi menu


**i** The menu overview can be found on ([page 289](#)).

The display in the “Navi” menu depends on whether route guidance is active or not.

- ▶ Press or to select the “Navi” menu.

#### Route guidance not active


The multifunction display shows the direction of travel and the name of the street you are currently driving on, if known by the navigation system.

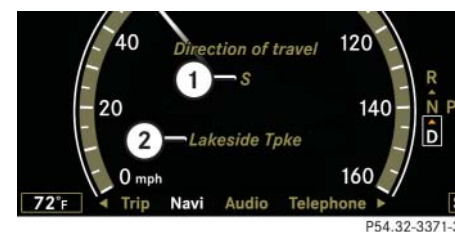

- ① Direction of travel
- ② Street you are currently driving on

**Route guidance active**

The image on the multifunction display depends on whether you are being notified of a driving maneuver.

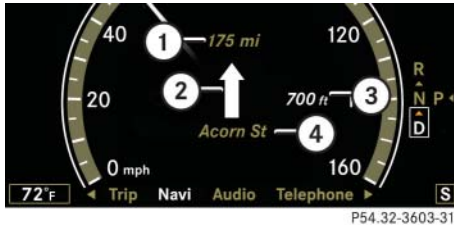**No notification of driving maneuver****Example illustration**

- ① Distance to destination
- ② Symbol for “follow the course of the road”
- ③ Distance to next driving maneuver
- ④ Street you are currently driving on

**Notification of driving maneuver without lane recommendation****Example illustration**

- ① Street into which the driving maneuver leads
- ② Symbol for “driving maneuver”
- ③ Distance to driving maneuver and visual distance display

When you are being notified of a driving maneuver, you will see a visual distance display ③ next to the driving maneuver symbol. The visual distance display is reduced from bottom to top the closer you come to the announced driving maneuver.

**Navigation status displays in the instrument cluster**

While route guidance is active, the following messages may be shown on the multifunction display:

- You have reached your destination.
- “Area of dest. reached”  
You have arrived in the area of your destination. The message appears, for example, for relatively large POIs.
- “New Route...”  
COMAND calculates a new route, e.g. because you have deviated from the calculated route or due to a detour report. Afterward, COMAND continues route guidance.

## Control systems

### Instrument cluster control system

- **“Calculating Route”**  
COMAND is calculating a route. Afterward, COMAND starts route guidance.
- **“Off Map”**  
The vehicle’s location is outside of the digital map’s range. The vehicle is in an off-map position (▷ page 242).
- **“Off Mapped Road”**  
The vehicle is either on a road that has not been digitized (▷ page 242) or on the side of a road, e.g. in a parking space.
- **“No Route”**  
COMAND cannot calculate a route to the selected destination.
- **“Direction of Dest.”**  
The vehicle has gone off the map during route guidance (▷ page 242).

#### Audio menu

**i** The menu overview can be found on (▷ page 289).

The functions in the “Audio” menu operate the audio equipment which you currently have turned on.

If no audio equipment is currently turned on, the message: “Audio OFF” is shown in the multifunction display.

#### Selecting radio station

- ▶ Turn on COMAND and select “Radio” (▷ page 102).
- ▶ Press **◀** or **▶** to select the “Audio” menu.
- ▶ **Selecting a preset station:** Briefly press **▼** or **▲**.
- ▶ **Selecting a station using the search function:** Press and hold **▼** or **▲**.



- ① Station frequency
- ② Waveband

▶ Press **+** or **-** to adjust the volume.

**i** You can only change the frequency band and save new stations using COMAND (▷ page 102).

### Selecting satellite radio channel

The satellite radio is treated as a radio application.

- ▶ Turn on COMAND and select “Sat Radio” (▷ page 108).
- ▶ Press ◀ or ▶ to select the “Audio” menu.
- ▶ Press ▼ or ▲ to select a station.



P54.32-5246-31


- ① Channel number and/or name
- ② SAT mode
- ▶ Press + or - to adjust the volume.

**i** A subscription to SIRIUS satellite radio service provider is required for the satellite radio operation. Contact an authorized Mercedes-Benz Center for details and availability for your vehicle.

For more information on satellite radio (▷ page 108).

### Operating DVD changer/audio CD/audio DVD/MP3

- ▶ Turn on COMAND and select “CD”, “DVD-Audio” or “MP3” (▷ page 116).
- ▶ Press ◀ or ▶ to select the “Audio” menu.
- ▶ Press ▼ or ▲ to select a track.

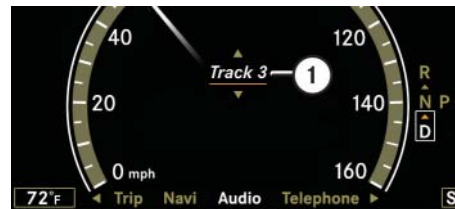

P54.32-3374-31

#### Example: audio CD


- ① Current track

- ▶ Press + or - to adjust the volume.

**i** When you play a CD or DVD with text, the multifunction display shows the name and number of the track. For MP3s, only the track is shown.

### Operating video DVD

- ▶ Turn on COMAND and select “Video” → “Video” → “Video DVD” (▷ page 134).
- ▶ Press ◀ or ▶ to select the “Audio” menu.

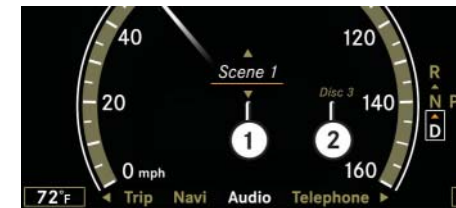

P54.32-4526-31

- ① Current scene
- ② Disc number
- ▶ Press ▼ or ▲ to select a scene.



## Control systems


### Instrument cluster control system

#### AMG menu

**i** This function is only available in S 63 AMG and S 65 AMG.

The main screen of the AMG menu shows you

- the gear currently engaged
  - the engine oil temperature
  - the vehicle supply voltage
- ▶ Press **◀** or **▶** to select the “AMG” menu.

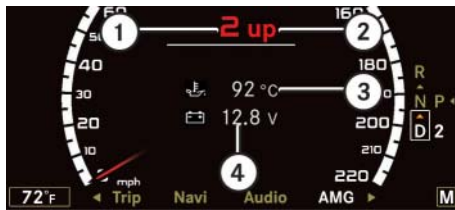

P54.32-5166-31

- ① Gear indicator
- ② Upshift indicator “up”
- ③ Engine oil temperature
- ④ Vehicle supply voltage

If the engine reaches the overspeed range in the manual shift program, you will see “up” ② next to gear indicator ① as a reminder to upshift.

**i** The engine oil temperature will be shown in blue if the engine oil temperature has not yet reached 176°F (80°C). During this time, avoid driving at full engine speed.

Use buttons **▼** or **▲** to select the following functions in the AMG menu:

Function	Page
RACETIMER	296
Overall analysis	298
Lap analysis	299

#### RACETIMER


##### Warning!



The RACETIMER feature is for use only on roads and in conditions where high speed driving is permitted. Racing on public roads is prohibited under all circumstances and the driver is and must always remain responsible for following posted speed limits.

The RACETIMER allows you to time and save driving stretches in hours, minutes and seconds.

- ▶ Press **◀** or **▶** to select the “AMG” menu.
- ▶ Press **▼** to select the RACETIMER.

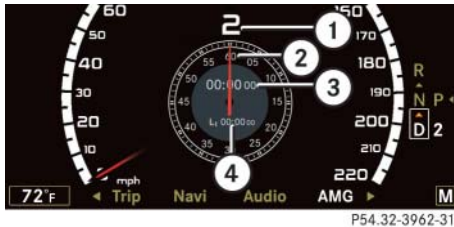

- ① Gear indicator
- ② RACETIMER
- ③ Seconds display
- ④ Lap

**i** You can start the RACETIMER when the engine is running or the starter switch is in position 2 (▷ page 370).

**i** While the RACETIMER is being displayed, you cannot adjust the audio volume using buttons **+** or **-**.

▶ **Starting RACETIMER:** Press **+**.

▶ **Displaying intermediate time:** Press **-**.

The intermediate time is shown for 5 seconds.

▶ **Stopping RACETIMER:** Press **+**.

▶ To select a different display, press **▲**, **◀** or **▶**.

**i** When you stop the vehicle and turn the Smartkey to position 1 (▷ page 370) or, in vehicles with KEYLESS-GO\*, turn off the engine and do not open the driver's door, the RACETIMER stops timing. Timing is resumed when you switch the ignition back on or restart the engine and then press **+** button.

**i** When you switch on the Night View Assist\* (▷ page 491) while the RACETIMER is operating, the RACETIMER will continue to run in the background but cannot be operated with the multi-function steering wheel buttons.

To stop the RACETIMER, switch off the Night View Assist\* first.

**Saving lap time and starting a new lap**

**i** You can save up to 16 laps.


▶ Press button **-** while the timer is running.

The intermediate time will be shown for 5 seconds.

▶ Press button **-** within 5 seconds.

The intermediate time shown will be saved as a lap time.

The RACETIMER begins timing the new lap. The new lap begins to be timed as soon as the intermediate time is called up.

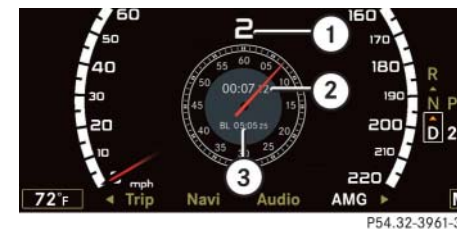

- ① Gear indicator
- ② RACETIMER
- ③ Best lap time

## Control systems

### Instrument cluster control system

#### Resetting current lap

- ▶ Press button **+** while the timer is running.  
The timer stops.
- ▶ Press button **-**.  
The lap time is reset to “0”.

#### Deleting all laps

- i** *It is not possible to delete a single saved lap.*
  - ▶ Press button **+** while the timer is running.  
The timer stops.
  - ▶ Press button **-** for at least 3 seconds.  
The saved laps are deleted.
  - ▶ Press button **+** to start timer again.  
The saved laps are deleted.
- or
- ▶ Press **OK**.

The reset menu appears in the multi-function display.




- ▶ Press **▼** to select “Yes” and confirm with **OK**.  
The saved laps are deleted.
- ▶ Press button **+** to start timer again.

#### Overall analysis

**i** *These functions are only available if you have saved at least one lap and have stopped the RACETIMER.*

- ▶ Press **◀** or **▶** to select the “AMG” menu.
- ▶ Press **▲** repeatedly until the overall analysis appears in the multifunction display.

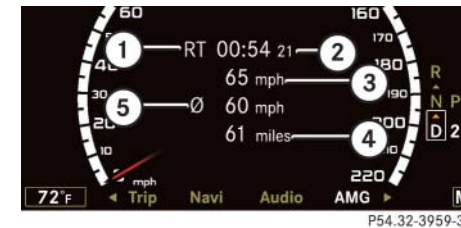


- ① Overall analysis of RACETIMER
  - ② Overall driving time
  - ③ Maximum speed
  - ④ Overall distance driven
  - ⑤ Average speed
- ▶ To select a different display, press **▲**, **◀** or **▶**.

**Lap analysis**

**i** These functions are only available if you have saved at least two laps and have stopped RACETIMER.

- ▶ Press **◀** or **▶** to select the “AMG” menu.
- ▶ Press **▲** repeatedly until the lap analysis appears in the multifunction display.

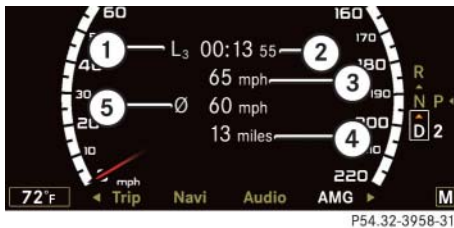

- ① Lap number
- ② Lap time
- ③ Maximum speed
- ④ Lap length
- ⑤ Average speed during lap

- ▶ Press **▲** or **▼** to see other lap analyses.

- ▶ To select a different display, press **◀** or **▶**.

**i** Each lap is shown in its own submenu. The fastest lap is indicated by flashing symbol ①.

**Telephone\* menu**

**i** The menu overview can be found on (▷ page 289).

You can use the functions in the “Telephone” menu to operate your telephone, provided it is inserted in the cradle and switched on.

**Warning!**

Some jurisdictions prohibit the driver from using a cellular telephone while driving. Whether or not prohibited by law, for safety reasons, the driver should not use the cellular telephone while the vehicle is in motion. Stop the vehicle in a safe location before placing or answering a call.

If you nonetheless choose to use the mobile phone while driving, please use the hands-free feature and be sure to pay attention to the traffic situation at all times. Use the mobile phone only when road, weather and traffic conditions permit.



## Control systems

### Instrument cluster control system

▷▷ Otherwise, you may not be able to observe traffic conditions and could endanger yourself and others.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

#### Warning!





Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or personal injury.

**i** Various mobile phone cradles can be installed in the front center armrest, see separate installation instructions for the mobile phone cradle. These mobile phone cradles can be obtained from an authorized Mercedes-Benz Center. For more information about telephone (▷ page 539).

**i** The roof cargo container\* may impair mobile phone reception. In an emergency, remove the mobile phone from the mobile phone cradle (▷ page 539) to make a call.

#### Logging-on to a network

- ▶ Switch on the telephone and COMAND (▷ page 87).
- ▶ Press  or  to select the "Telephone" menu.

Which messages appear in the multifunction display depends on whether your telephone is switched on or off.

- If the telephone is off, the message in the multifunction display is: "Telephone OFF".

- If the telephone is not inserted in the cradle, the message in the multifunction display is: "No telephone inserted".
- If the PIN or unlock code is not yet entered, the message in the multifunction display is "Please enter PIN" or "Enter unlock code".
- If the telephone is switched on, the telephone will then search for a network. During this time, the multifunction display is blank. If no network available, the multifunction display reads "No Service".
- If the telephone is on, as soon as the telephone has found a network, "Ready" or "Ready (Roaming)" appears in the multifunction display.

#### Entering the PIN or unlock code

- ▶ Enter the PIN or unlock code using the telephone keypad, Voice Control or telephone\*.

The telephone will then search for a network.

You may carry out the following functions:

Function	Page
Dialing a number from the phone book	301
Redialing	302
Answering a call	302
Ending a call or rejecting an incoming call	302

#### Dialing a number from the mobile phone book

If your telephone is ready to receive calls, you may select and dial a number from the phone book at any time.

- ▶ Log on to the network (▷ page 300).

**i** When you insert a Mercedes-Benz approved mobile phone into the cradle\*, the control system reads in the phone book that is saved on the SIM card or in the phone book of the mobile phone. This can take several minutes, depending on how many entries each phone book contains. When you press **▼**, **▲**, **◀**, **▶** or **OK** during the download of the phone book the message "Reading telephone data, please wait..." appears in the multifunction display. When the message: "Reading telephone data, please wait..." disappears, the phone book has been loaded.

- ▶ Press **▼** or **▲** or **OK** to switch to the phone book.

- ▶ Press **▼** or **▲** to select the desired name.

The stored names are displayed in ascending alphabetical order.

**i** If you do not want to dial from the phone book, press **☎** or **☎**. In the multifunction display appears again "Ready" or "Ready (Roaming)".

**i** If you press and hold **▼** or **▲** for more than 1 second, the system scrolls rapidly through the list of names.


If you press and hold **▼** or **▲** for more than 4 seconds, the control system shows the first four entries of the letter next used. Release the button to stop the quick search. The search stops automatically at the end of the list. ▷▷

## Control systems

### Instrument cluster control system

- ▶▶ Press  or **OK** to start dialing.

If several entries are present for the same name, they are all shown.

- ▶ Select the desired entry.
- ▶ Press  or **OK** to start dialing.





The message “*Connecting call...*” appears on the multifunction display, as well as the dialed telephone number or name as long as it is stored in the phone book.

The dialed number is saved in the “Dialed numbers” list.

Once a connection has been established, the name appears on the multifunction display, provided that it has been stored in the phone book, otherwise the dialed telephone number appears.

#### Redialing


The control system stores the most recently dialed phone numbers. This eliminates the need to search through your entire phone book.


- ▶ Log on to the network (▷ page 300).
- ▶ Press  to switch to the number and/or name last dialed in the redial memory.
- ▶ Press  or  to select the desired number and/or name.
- ▶ Press  or **OK** to start dialing.

Once a connection has been established, the name appears in the multifunction display, provided that it has been stored in the phone book, otherwise the dialed telephone number appears.

#### Answering a call

When your telephone is ready to receive calls, you can answer a call at any time with the ignition on. When you are in the “Telephone” menu, you will see the following message on the multifunction display:

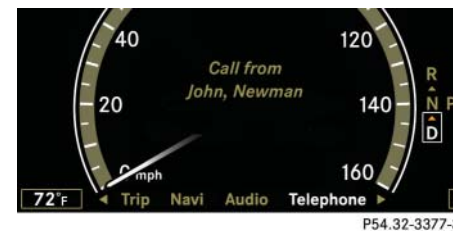


- ▶ Press .

**i** The caller's number appears only if it is transmitted.

The caller's name appears only if the number and the name are stored in the phone book.

#### Ending a call or rejecting an incoming call

- ▶ Press .

#### Assistance\* menu

**i** The menu overview can be found on (▷ page 289).

In the “Assistance” menu, you can change the settings of your driving systems.

#### Displaying distance graphic\*, DISTRONIC Plus\* (USA only)

For information about displaying distance graphic (▷ page 455).

#### Activating/deactivating PRE-SAFE® Brake\* (USA only)

- ▶ Press **◀** or **▶** to select the “Assistance” menu.
- ▶ Press **▼** or **▲** to select the “PRE-SAFE Brake” function.
- ▶ Press **OK**.



① PRE-SAFE® Brake\* indicator

- ▶ Press **OK** again if you would like to change the current status.

After the function has been activated, indicator appears on the left-hand side of the multifunction display.

For more information (▷ page 77).

#### Switching on or off Rear View Camera\* automatically

**i** The image from the Rear View Camera is shown on the COMAND display.

- ▶ Press **◀** or **▶** to select the “Assistance” menu.
- ▶ Press **▼** or **▲** to select the “Rearview Camera” function.
- ▶ Press **OK**.



- ▶ Press **OK** again if you would like to change the current status.

▷▷



## Control systems

### Instrument cluster control system

▷▷The following settings are available:

“On when in Reverse”	The Rear View Camera automatically switches on when reverse gear is engaged.
“Disabled”	The Rear View Camera is not switched on.

#### Switching on or off Blind Spot Assist\*

- ▶ Press **◀** or **▶** to select the “Assistance” menu.
- ▶ Press **▼** or **▲** to select the “Blind Spot Assist” function.
- ▶ Press **OK**.



- ▶ Press **OK** again if you would like to change the current status.

#### Service menu

**i** The menu overview can be found on (▷ page 289).

The “Service” menu is used for

- calling up messages
- checking tire inflation pressure electronically with the Advanced TPMS
- calling up the maintenance service indicator display
- check engine oil level\*



#### Calling up vehicle malfunction, warning and system status messages stored in memory

Use the vehicle status message memory menu to scan malfunction and warning messages that may be stored in the system. Such messages appear in the multi-function display and are based on conditions or system status the vehicle’s system has recorded.




The vehicle status message memory menu only appears if there are any messages stored.


**Warning!**


Malfunction and warning messages are only indicated for certain systems and are intentionally not very detailed. The malfunction and warning messages are simply a reminder with respect to the operation of certain systems and do not replace the owner's and/or driver's responsibility to maintain the vehicle's operating safety by having all required maintenance and safety checks performed on the vehicle and by bringing the vehicle to an authorized Mercedes-Benz Center to address the malfunction and warning messages (▷ page 642).

- ▶ Press  or  to select the "Service" menu.

If conditions have occurred causing status messages to be recorded, the number of messages appears in the multifunction display: "2 messages".

- ▶ Press  or  to select the message.
- ▶ Press  to confirm.

 See the "Practical hints" section for malfunction and warning messages (▷ page 642).

 If you turn the SmartKey in the starter switch to position **0** and then back to position **2**, all messages will be deleted from the message memory.

**Checking tire inflation pressure**

For information about checking tire inflation pressure (▷ page 593).


**Calling up the maintenance service indicator display**

For information about calling up the maintenance service indicator display (▷ page 612).

**Checking engine oil level (S 600 and S 65 AMG)**

For information about checking engine oil level (▷ page 575).

**Settings menu**

 The menu overview can be found on (▷ page 289).

In the "Settings" menu, you can:

- switch the daytime running lamps on or off (USA only)
- switch the additional speedometer on or off
- switch the radar sensors\* on or off (USA only)

## Control systems

### Instrument cluster control system

#### Setting daytime running lamp mode (USA only)

**i** This function is not available in countries where the daytime running lamp mode is mandatory and therefore in a constant mode.

- ▶ Press **◀** or **▶** to select the “Settings” menu.
- ▶ Press **▼** or **▲** to select the “Daytime Running Lamps” function.
- ▶ Press **OK**.
- ▶ Press **OK** again if you would like to change the current status.

Depending on the previous status, the daytime running lamps will be switched on or off.

With “Daytime Running Lamps” mode selected and the exterior lamp switch at position **0** or **A**, the low beam headlamps are switched on when the engine is running.

In low ambient light conditions the following lamps will switch on additionally:

- Parking lamps
- Tail lamps
- License plate lamps
- Side marker lamps

For more information on the daytime running lamp mode (▷ page 401).

**i** If you turn the exterior lamp switch to another position, the corresponding lamp(s) will switch on.

**i** Make sure that the light switch is set to **☾** or **A** when you switch off the daytime running lamps while driving at night.

#### Showing or hiding additional speedometer

You can have an additional digital speedometer shown on the multifunction display. The speed is shown in the unit of kilometers/hour (USA) or miles/hour (Canada).

- ▶ Press **◀** or **▶** to select the “Settings” menu.
- ▶ Press **▼** or **▲** to select the “Add. Speedometer” function.
- ▶ Press **OK**.
- ▶ Press **OK** again if you would like to change the current status.

Depending on the previous status, the additional speedometer will be switched on or off.

**Switching radar sensors\* on/off**

If your vehicle is equipped with DISTRONIC Plus\*, BAS Plus\*, or Park Assist\* it is equipped with a radar sensor system which you can switch on and off.

When travelling in Canada in a vehicle not registered in Canada, you must switch off the radar sensor system. Canadian law does not permit the use of the radar sensor system for vehicles from outside of Canada. When you switch off the radar sensor system, the following functions are deactivated:

- BAS Plus\* (▷ page 70)
- PRE-SAFE® Brake\* (▷ page 77)
- DISTRONIC Plus\* (▷ page 451)
- Park Assist\* (▷ page 476)
- Advanced Parking Guidance\* (▷ page 481)
- Blind Spot Assist\* (▷ page 495)

**i USA only:**

*This device has been approved by the FCC as a “Vehicular Radar System”. The radar sensor is intended for use in an automotive radar system only. Removal, tampering, or altering of the device will void any warranties, and is not permitted by the FCC. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user’s authority to operate the equipment.*

**i Canada only:**

*This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:*

- (1) *This device may not cause interference, and*
- (2) *this device must accept any interference received, including interference that may cause undesired operation of the device.*

*Removal, tampering, or altering of the device will void any warranties, and is not permitted. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user’s authority to operate the equipment.*

- ▶ Press **◀** or **▶** to select the “Settings” menu.
- ▶ Press **▼** or **▲** to select the “Radar Sensors” function.
- ▶ Press **OK**.
- ▶ Press **OK** again if you would like to change the current status.

Depending on the previous status, the radar sensors will be switched on or off.

**i** *The selected status of the radar sensors remains stored in memory even if the engine is turned off and restarted.*

**i** *The following message appears in the multi-function display if the radar sensors are switched off and you attempt to activate DISTRONIC Plus\*, Park Assist\* or PRE-SAFE® Brake\*:*

“Radar Sensors  
(See Oper. Manual)  
Disabled”

## Control systems

### Voice Control

#### Operating safety

##### Warning!



Please devote your attention first and foremost to the traffic situation you are in. While the system permits hands-free phone operation, attention to traffic may be diverted not only by physical operation of a phone, but also by the distraction of a phone conversation while driving. As such, for safety reasons, we encourage the driver to stop the vehicle in a safe place before answering or placing a phone call.

For safety reasons, you should only select a destination when the vehicle is stationary.

While the navigation system provides directional assistance, the driver must remain focused on safe driving behavior, especially attention to traffic and street signs, and should utilize the system's audio cues while driving.

The navigation system does not supply any information on stop signs, yield signs, traffic regulations or traffic safety rules. Their observance always remains in the driver's personal responsibility. DVD maps do not cover all areas nor all routes within an area.

Traffic regulations always have priority over any route recommendations given.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 13.5 m) every second.

##### Warning!



Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Consulting the symbols or map display for directions may cause you to divert your attention from driving and increase your risk of an accident.

##### Warning!



Please do not use the Voice Control System in an emergency, as the tone of your voice may change in a stressful situation. This could cause a delay in completing your phone call in a timely manner. This could distract you in an emergency situation and cause you to be involved in an accident.

#### ▼ Voice Control introduction

The Voice Control System gives you the capability to control the following systems on your vehicle using spoken commands:

- Telephone\* (▷ page 313)
- Navigation (▷ page 320)
- Address book (▷ page 330)
- Audio (▷ page 334) (AM/FM radio, CD/DVD changer, MP3 player)

You control these systems using spoken commands. Moreover, controls such as the buttons on the multifunction steering wheel (▷ page 311) allow you to keep your hands on the steering wheel.

The command vocabulary consists of approximately 300 ready to use phrases. The Voice Control System recognizes commands and number sequences, irrespective of the speaker. To optimize speech recognition for your voice follow the individualization process (▷ page 355).

You can use the Voice Control System to call up all of COMAND's main menu items, with the exception of the main menus for "Vehicle" and "Navi".

The commands and digit sequences can be spoken without pausing between the individual words. If an unavailable or incorrect command is used, the Voice Control System will prompt you for a new command by asking "Please repeat" or "Please repeat your entry".

In order to provide for a safe and comfortable dialog, the Voice Control System acknowledges important commands.

## Control systems

### Voice Control introduction

#### Spelling

You may not need to spell the entire name (street, intersection, city or point of interest) especially if the name is lengthy. Spelling the first three to five characters of the name should be sufficient for the system to recognize the name provided it is available on the navigation DVD.

The selection appearing on the COMAND display is sorted based on your recognized voice input and a matching algorithm.

You can use the commands “Next page” or “Previous page” to scroll up or down in the list.

Use the command “Correction” to start over by again spelling the name.

Speak each character as clearly as you can, especially when they sound very similar (d or e).

#### Command types

The Voice Control System commands can be categorized as:

- **General Commands**  
These are commands always available to you as soon as the Voice Control System is activated (for example “Help” commands).
- **Local Commands**  
These are commands specific to the currently active system shown in the COMAND display (for example commands to control the CD/DVD changer).

For a complete list of commands (▷ page 340).

**i** *During Voice Control System operation visual help windows also appear in the COMAND display (▷ page 312).*

#### Active System







The active system is the system currently shown in the COMAND display.

If, for example, you listen to the radio while the telephone system is active on the COMAND display, you have to switch to the radio using the command “Radio” before you can operate the radio.

## Controls


## Operation via the multifunction steering wheel



Item	
①	 to activate Voice Control to accept a call
②	 to cancel Voice Control
③	 to increase volume
	 to decrease volume
	 to take a call to dial to redial
	 to end a call to reject an incoming call

**i** Voice Control can be cancelled at any time, even during a dialog. Please note that if the Voice Control System is cancelled during a dialog, then the complete procedure is stopped and Voice Control is cancelled.


## Activating Voice Control

- ▶ Switch on COMAND (▷ page 87).
- ▶ Press .

An audible tone (beep) confirms the activation of the system.

- ▶ Speak a command.

## Canceling Voice Control

- ▶ Press .

or

- ▶ Speak the command “Cancel”

(except for speaking voice entries, entering a city or carrying out individualization).

or

- ▶ Press any COMAND button.



## Control systems

### Voice Control introduction

#### Setting volume level

- ▶ Activate Voice Control.
- ▶ Speak a command, for example “Help”.
- ▶ Press **+** or **-**. The volume is increased or decreased during voice output.

or

- ▶ Set volume for voice output using the COMAND volume thumbwheel on the lower part of the front center console (▶ page 98).


#### Displays

##### COMAND Display

In addition to the acoustic help function, a visual help function (▶ page 261) is available on the COMAND display.

Upon activating the Voice Control, the most important available commands for the currently active system appear on the COMAND display.


When the Voice Control System requires additional information from the user, a selection list is shown on the COMAND display in the address book and navigation system.

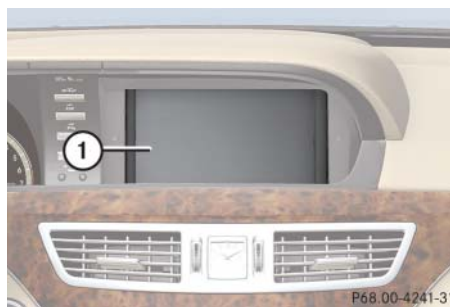

① COMAND display

##### Multifunction display

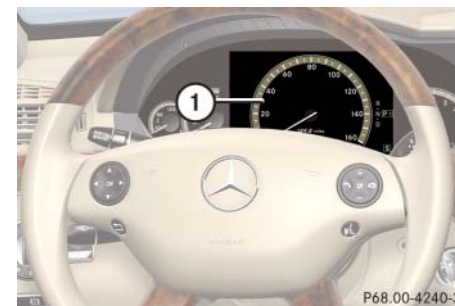


For example: telephone numbers are shown on the multifunction display while dialing when the main “Telephone” menu is selected in the instrument cluster control system.



① Multifunction display

#### Symbols

The following symbols are found in following Voice Control System pages:

-  This symbol stands for commands and voice entries you are speaking.
-  This symbol stands for voice output by the system.
-  This symbol indicates that information is available on the COMAND display.

## ▼ Voice Control telephone

**Warning!**

Some jurisdictions prohibit the driver from using a cellular telephone while driving. Whether or not prohibited by law, for safety reasons, the driver should not use the cellular telephone while the vehicle is in motion. Stop the vehicle in a safe location before placing or answering a call.

If you nonetheless choose to use the mobile phone while driving, please use the hands-free feature and be sure to pay attention to the traffic situation at all times. Use the mobile phone only when road, weather and traffic conditions permit. Otherwise, you may not be able to observe traffic conditions and could endanger yourself and others.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

**Warning!**

Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or personal injury.

**i** Various mobile phone cradles can be installed in the front center armrest, see separate installation instructions for the mobile phone cradle. These mobile phone cradles can be obtained from an authorized Mercedes-Benz Center. For more information about telephone (▷ page 539).

**i** The roof cargo container\* may impair mobile phone reception. In an emergency, remove the mobile phone from the mobile phone cradle (▷ page 539) to make a call.

**Telephone operation**

The Voice Control System gives you the following capabilities:

- Enter a telephone unlock code
- Dial a phone number by speaking the telephone number
- Store names and numbers in the COMAND address book
- Dial a phone number by speaking the name of an COMAND address book entry
- Delete an address book entry from the address book
- Have the system read out the phone book of the address book entry by entry
- Manage and access an automated answering system/voice mail box
- Redial names and numbers


## Control systems

### Voice Control telephone

The Voice Control System detects whether

- your telephone is switched on
- the corresponding mobile network is logged in
- it is possible to dial

If dialing is not possible, the Voice Control System will advise you accordingly.

 You can continue operating your mobile phone using the telephone keypad or keypad on your phone.

Before you can operate the telephone using the Voice Control System, you have to activate the Voice Control (▷ page 311).

#### Telephone commands

For a complete list of commands (▷ page 340).

#### “Telephone”


Use the command “Telephone” to activate the telephone main menu. Use this command if you want the digits you are entering to appear on the COMAND display.

#### “Help telephone”

The Voice Control System features a comprehensive help function.

Use the command “Help telephone” and the Voice Control System will read out an option list of available functions and commands that can be used in conjunction with the telephone (▷ page 261).

#### “Enter PIN”

 The PIN (only GSM mobile phones) prompt starts automatically whenever the phone is locked and you wish to use it.

Use the command “Enter PIN” to input the code to unlock your telephone. After speaking the command, you are prompted to enter the code.


Speak the code


- as a continuously spoken string of digits, or
- in digit blocks of three to five digits.


Digits from “Zero” to “Nine” may be used. After each digit block (separate the digit blocks by using an approximately 0.5 second pause), the Voice Control System repeats the recognized digits and waits until you continue speaking.

#### Sample dialog:

 Enter PIN

 Please say the PIN

 Zero zero one one

 Zero zero one one

 OK

**“Dial number”**

You can dial a phone number using the command “Dial number”.

Digits from “Zero” to “Nine” may be used.









The phone number must be spoken



- as a continuously spoken string of digits, or
- in digit blocks (three to five digits in each block).

After each digit block (separate the digit blocks by using an approximately 0.5 second pause), the Voice Control System repeats the recognized digits and waits until you continue speaking.

When dialing 1800 numbers, you may pronounce the first four digits as “One eight hundred” and the system will recognize the spoken entries as “One eight zero zero”. All other numeric entries must be spoken as individual numbers.

**Sample dialog:**

-  Dial number
-  Please say the number
-  One two three
-  One two three
-  Four five six seven
-  Four five six seven
-  OK
-  Dialing











 You can also dial the telephone number spoken by pressing button  on the multifunction steering wheel (instead of using the command “OK”):

*You can dial the telephone number before all numbers are recited in full.*

**“Confirm”**

Using the command “Confirm” will repeat all digits spoken up to that point. Upon repeating the digits, the system will prompt you to continue your input.

**Sample dialog:**

-  Dial number
-  Please say the number
-  One two three
-  One two three
-  Confirm
-  One two three, please continue
-  Four five six seven
-  Four five six seven
-  OK
-  Dialing













## Control systems

### Voice Control telephone

#### “Correction”

Using the command “Correction” will correct the last entered digit block. After speaking the command, the last digit block is deleted and all previously entered digits are repeated. The system then prompts you to continue your input.














#### *Sample dialog:*

-  Dial number
-  Please say the number
-  One two three
-  One two three
-  Four five six seven
-  Five five six seven
-  Correction
-  One two three, please continue
-  Four five six seven
-  Four five six seven
-  OK
-  Dialing

#### “Delete”

Using the command “Delete” will erase all digits entered. The system then prompts you to start your input again.

#### *Sample dialog:*

-  Dial number
-  Please say the number
-  One two three
-  One two three
-  Four five six seven
-  Four five six seven
-  Delete
-  Number deleted. Please enter the number again
-  Four two seven three
-  Four two seven three
-  Three nine one
-  Three nine one
-  OK

#### Dialing

#### “Redial”

Use the command “Redial” to dial the last dialed number.

#### “Save name” (COMAND address book)

Use the command “Save name” to create a new entry in your COMAND address book. After using the command, the system will prompt you to enter a phone number.

Digits from “Zero” to “Nine” can be entered (▷ page 315).

Speak the telephone number

- as a continuous string
- or, with longer phone numbers,
- in form of digit blocks (three to five digits).















After each digit block (separate the digit blocks by using an approximately 0.5 second pause), the Voice Control System repeats the recognized digits and waits until you continue speaking.

After the command “OK”, you will be prompted up to two times to input the name. When repeating the name, make sure that you pronounce it in the same manner as during the first input. Otherwise the name cannot be saved and the Voice Control System cancels the save procedure.

**i** *The Voice Control System may recognize names even if not saved in your voice. For optimum call-up performance, however, you should speak and save the names you intend to use yourself.*

**i** *You can also add a name to an entry by calling up the corresponding menu on COMAND and saying the name twice (▷ page 177).*




#### Sample dialog:

-  Save name
-  Please say the number first
-  One two three
-  One two three
-  Four five six seven
-  Four five six seven
-  OK
-  Please say the name
-  John Smith
-  Please repeat the name
-  John Smith
-  Do you want to save the number in a category?
-  No
-  Name and number saved




#### “Dial name” (COMAND address book)

Use the command “Dial name” to place a phone call by selecting a name previously saved in your personal address book.

#### Sample dialog:

-  Dial name
-  Please say the name
-  John Smith

If several telephone numbers exist for the same entry, the Voice Control System will ask for clarification.

-  Do you want to place a work call or a home call?
  -  Work
  -  John Smith work
- Dialing

## Control systems

### Voice Control telephone

#### “Call <voice entry>” (address book)

Use the command “Call <voice entry>” to place a phone call by directly selecting a name previously stored in your address book.

One address book entry can have up to three different telephone numbers (mobile phone/car/land line) for both the home and work fields.

If only one telephone number is stored for a given name, you can recall the entry using the command “Call John Smith”.

If several telephone numbers are associated with one entry, you can recall the desired telephone number by using the following commands:

- “Call John Smith home”
- “Call John Smith work”
- “Call John Smith home cell phone”
- “Call John Smith home car”
- “Call John Smith home land line”


- “Call John Smith work cell phone”
- “Call John Smith work car”
- “Call John Smith work land line”

The system confirms your input and the number is dialed.


#### Sample dialog:

 Call John Smith

If several telephone numbers exist for the same entry, the Voice Control System will ask for clarification.

 Do you want to place a work call or a home call?

 Work

 John Smith work


Dialing


#### “Delete name” (COMAND address book)


Use the command “Delete name” to delete a name from the COMAND address book.

#### Sample dialog:


 Delete name

 The name, please

 Smith office

 Smith office: Would you like to delete the voice name?

 Yes

 The voice name is deleted

**“List phone book” and dialing a phone number**

Use the command “List phone book” to listen to all voice entries in the phone book with a phone number stored, and select an entry and dial that number.

**Sample dialog:**

List phone book

The system reads out the complete phone book entry by entry.

**Selecting an entry and dialing that number**

► For the desired entry, press during or immediately after voice output.

If more than one phone number exists for a given entry, the Voice Control System prompts:



Do you want to place a work call or a home call?



Home

The system reads out the name of the selected entry and dials the corresponding number.

**Canceling the dialog**

► Press .

The system confirms “Cancel”.

The dialog is concluded.

**Managing automated answering system/voice mail box**

Activate the Voice Control System to access and manage your answering machine/voice mail box.

► Activate the Voice Control System during a phone call (> page 311).

An audible tone (beep) confirms the activation of the system.

► Speak the required digits (“Zero” to “Nine”).

or

► Speak the required words “Star” and “Pound”.

► Speak the final command “OK”.

The system dials the number entered.



## Control systems

### Voice Control navigation

#### Important notes

##### Warning!



For safety reasons, you should only select a destination when the vehicle is stationary. While the navigation system provides directional assistance, the driver must remain focused on safe driving behavior, especially attention to traffic and street signs, and should utilize the system's audio cues while driving.

The navigation system does not supply any information on stop signs, yield signs, traffic regulations or traffic safety rules. Their observance always remains in the driver's personal responsibility. DVD maps do not cover all areas nor all routes within an area.

Traffic regulations always have priority over any route recommendations given.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 13.5 m) every second.

During route guidance, you will not receive information on:

- traffic lights
- stop and yield signs
- parking or stopping zones
- one-way streets
- narrow bridges, or
- other traffic regulation data.

You should therefore always strictly observe traffic regulations while driving. Drive carefully and always obey traffic laws and road signs, even if they contradict navigation system instructions.

##### Warning!



Please do not use the Voice Control System in an emergency, as the tone of your voice may change in a stressful situation. This could cause a delay in completing your phone call in a timely manner. This could distract you in an emergency situation and cause you to be involved in an accident.

##### Warning!



Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Consulting the symbols or map display for directions may cause you to divert your attention from driving and increase your risk of an accident.

### Navigation operation



The Voice Control System allows you to

- enter a state or province
- enter a city
- spell the name of a city
- spell the name of district or center
- spell the name of a street
- spell the name of an intersection
- enter a house number
- enter a complete address
- select one of your last destinations
- enter a POI (point of interest)
- select one of your last destinations
- save a destination
- navigate to a destination stored in the destination memory of the address book


- start route guidance
- display the map
- zoom in or zoom out of the map
- listen to the destination memory
- cancel route guidance
- turn guide instructions on or off

Before you can operate navigation using the Voice Control System, you have to activate the Voice Control System (▷ page 311).

### Selecting navigation mode

- ▶ Press .
- ▶ Speak the command “Navigation”.
- ▶ Press .
- ▶ Speak one of the navigation commands.

### Navigation commands

 You cannot start the route guidance until all necessary address data has been entered.

For a complete list of commands (▷ page 340).

### “Help navigation”/“Help”

Use the command “Help navigation” or “Help” to read out an option list of available functions and commands that can be used in conjunction with the navigation system.









### “Enter state”, “Enter province”

Use the command “Enter state” or “Enter province” to select a different state or province on the navigation DVD.

## Control systems

### Voice Control navigation

#### *Sample dialog:*

-  Enter state
-  Please say the name of the state
-  New York
-  The system shows a numbered list of states recognized by the system
-  Please select a line number
-  Number two
- or to accept, say
-  Yes
-  State accepted

The selected entry is adopted from the list.

#### **“Last states”**

Use the command “Last states” to select a state or province from among a number of last selected states or provinces.





#### **Dialog for entering a complete address**















##### **“Enter destination”**


Use the command “Enter destination” to enter a complete destination address.


The system guides you through the dialog. As soon as a valid address has been entered, you can start route guidance or save the destination. For information on spelling (▷ page 327).

#### *Sample dialog:*


-  Enter destination
-  Please spell a New York street name
-  B-R-O-A-D-W
-  The system displays a numbered list of matching street names on the COMAND display

-  Please select a line number
-  Number two
-  Number two accepted
-  Do you want to enter a house number?
-  No
-  Do you want to enter an intersection?
-  No
-  Do you want to spell the town’s name?
-  Yes
-  Please spell the town name
-  N-E-W-Y-O-R-K
-  The system displays a numbered list of matching city names on the COMAND display
-  Please select a line number
-  Number one


 Number one accepted


 Do you want to start route guidance?

 Yes

 Starting route guidance

The system calculates the route and, upon completing route calculation, starts route guidance.

 *You may not need to spell the entire name (street, intersection, city or point of interest) especially if the name is lengthy. Spelling the first three to five characters of the name should be sufficient for the system to recognize the name provided it is available on the navigation DVD.*

 *The selection appearing on the COMAND display is sorted based on your recognized voice input and a matching algorithm.*

*You can use the commands “Continue” or “Back” to scroll up or down in the list.*

*Use the command “Correction” to start over by again spelling the name.*


*Speak each character as clearly as you can, especially when they sound very similar (d or e).*

### “Points of interest”


Use the command “Points of interest” to select a point of interest (POI) such as airports, railroad stations, gas stations etc.


#### Sample dialog:


 Points of interest


 The system shows the following list on the COMAND display:


- current position
- other town/city
- Global POI


 Please select a line number


 Number one


 The system displays a numbered list of available POI categories: Select POI category menu


 Please select a line number

 Number one


 The system displays a numbered list search categories: Find menu


 Please select a line number


 Number one

 The system displays a numbered list of airports sorted by distance


 Please select a line number


 Number one

 Point of interest accepted

 Do you want to start route guidance?

 Yes

 Starting route guidance

 *Depending on the number of categories and POI's available for a given area, the system may display several lists on each of which you may have to make a selection by speaking the desired line number or you have to spell the name of a POI.*

## Control systems

### Voice Control navigation


#### “Next POI”


With the commands

- “Next gas station”
- “Next parking lot”
- “Next Mercedes-Benz service”
- “Next restaurant”
- “Next hospital”


you can select POIs in your vicinity.


#### Sample dialog:


 Next gas station

 The system shows a numbered list of gas stations on the COMAND display

 Please select a line number

 Number one

 Number one accepted

 Do you want to start route guidance?

 Yes


The system calculates the route and, upon completing route calculation, starts route guidance.

#### “Last destinations”

Use the command “Last destinations” to select a destination from among a number of destinations last navigated to.


#### “Save destination”


Use the command “Save destination” to save the current destination in the address book.


 *The Voice Control System may recognize names even if not saved in your voice. For best possible call-up performance, however, you should speak and save the names you intend to use yourself.*


*If an entry is already available in the address book, the system will ask you if you would like to add the address to the available entry.*


#### Sample dialog:


 Save destination

 Please say the name


 John Smith

 Please repeat the name

 John Smith

 Where do you want to save: home or work?

 Work

 The destination has been saved

**“Navigate to <voice entry>” (address book)**

Use the command “Navigate to <voice entry>” to start route guidance by selecting voice entry with a saved destination address from the COMAND address book.

A voice entry may have two different destination addresses associated with it (home or work).

The system confirms your command, calculates the route, and begins route guidance.


If only one address is stored, you can use the command “Navigate <voice name>” to select the stored destination address for that name.

If two addresses are stored, you can use the commands


- “Navigate <voice name> home”
- or
- “Navigate <voice name> work”

to directly select between home or work address for that name. The system confirms your selection, calculates the route, and begins route guidance.


**Sample dialog:**

 Navigate to John Smith

If more than one address exists for this voice entry, the Voice Control System will prompt you:

 Navigate to home or work?

 Work


 John Smith work


Starting route guidance

**“Start route guidance”**

Use the command “Start route guidance” to start route guidance after entering a valid destination.

**Sample dialog:**

 Start route guidance

 Starting route guidance

Route guidance begins.

**“Guidance instructions on”**

Use the command “Guidance instructions on” to have the Voice Control System repeat the last guidance instruction. If guidance voice output was previously muted, using this command will deactivate the muting of the voice output.

**“Guidance instructions off”**

Use the command “Guidance instructions off” to mute the systems’ guidance voice output.

## Control systems

### Voice Control navigation

#### “Cancel route guidance”

Use the command “Cancel route guidance” to cancel route guidance.

#### *Sample dialog:*



Cancel route guidance



Are you sure you want to cancel route guidance?



Yes

Route guidance is canceled.

or



No



Cancel

The dialog with the Voice Control System is canceled. Route guidance remains active.

#### “Map”

Use the command “Map” to activate or switch to map display.

#### “Zoom in”, “Zoom out”

Use these commands to zoom in on map or to zoom out of map to the desired level of map detail.

#### “Zoom in completely”, “Zoom out completely”

These commands are used to adapt the map display directly to the smallest or largest map scale.

#### “List destination memory”

Use the command “List destination memory” to have the system read out all destination memory entries and select an entry for route guidance.

#### *Sample dialog:*



List destination memory

The system reads out the address book destination memory.

To select a voice entry and adopt address for route guidance:

- ▶ When the system reads the desired entry, press

If more than one address is available, the system will prompt you:



Navigate to home or work?



Home

The system reads the selected voice entry and starts route guidance.

To cancel the dialog:

- ▶ Press

You have canceled the dialog. The system confirms cancellation by saying “Cancel”.

### Commands for entering parts of an address





#### “Enter town”


The “Enter town” command is used to enter any larger town or city in the USA or Canada.


**i** If the desired town/city does not appear on the list of towns/cities, the town or city can be entered by using the “Spell town” command.


**i** You can scroll through the list by using the “Continue” or “Back” command. Say “Correction” to enter the town or city again.

#### Sample dialog:

-  Enter town
-  Please spell the name of the town
-  E-A-S-T-O-N
-  The system displays a numbered list of available city names

 Please select a line number

 Number one

 Number one, town accepted




The city selected is adopted for route guidance.


#### “Spell town”


Use the command “Spell town” to enter a city name by spelling mode and see if it matches an entry available on the navigation DVD.


Speak the characters as a continuous string (five to seven characters). The system then displays a list of cities on the COMAND display from which you can select the desired city.


#### Sample dialog:

-  Spell town
-  Please spell the town name
-  N-E-W-Y-O-R

 The system displays a numbered list of available city names

 Please select a line number

 Number one

 Number one, town accepted

The city selected is adopted for route guidance.

**i** You can use the commands “Continue” or “Back” to scroll up or down in the list. Use the command “Correction” to start over again by spelling the name of the town.

**i** You must also spell foreign towns or cities in English. Please note that the list on the COMAND display is sorted according to the probability of the voice recognition.

Speak each character as clearly as you can, especially when they sound very similar (d or e).



## Control systems

### Voice Control navigation


#### “District” or “Center”


Use the command “District” or “Center” to spell a city location in the city previously selected.


Speak the characters as a continuous string (five to seven characters). The system then displays a list of available city districts or centers on the COMAND display. Select the desired city center from that list.


#### *Sample dialog:*


 District


 Please spell the center

 S-T-A-T-E-N-I-S

 The system displays a list of available districts if more than one name matches the name of a district for the given city

 Please select a line number

 Number one

 Number one, center accepted

The district selected is adopted for route guidance.


#### “Street”


Use the command “Street” to spell and select a street for the adopted city. Only street names available on the navigation DVD can be selected.


Speak the characters as a continuous string (five to seven characters). The system then displays a list of available street names on the COMAND display. Select the desired street name from that list.


#### *Sample dialog:*


 Street


 Please spell the name of the street

 F-O-R-E-S-T

 The system displays a numbered list of available street names

 Please select a line number

 Number one

 Number one, street accepted










The street name selected is adopted for route guidance.

#### “Intersection”, “Cross street”

Use the command “Intersection” or “Cross street” to spell and select an intersection.

Speak the characters as a continuous string (five to seven characters). The system then displays a list of available intersections on the COMAND display. Select the desired intersection from that list.

**Sample dialog:**







-  Intersection
-  Please spell the first street name
-  F-O-R-E-S-T
-  Please spell the name of the crossing street
-  D-U-D-L-E-Y
-  The system displays a numbered list of available intersections on the COMAND display
-  Please select a line number
-  Number one
-  Intersection accepted

The intersection is adopted for route guidance. If an address at the intersection is recognized, the system asks if it is correct. Say “Yes” or “No”.

**“House number”**

Use the command “House number” to select a house number for the street previously selected. Speak the house number in single digits.

**Sample dialog:**

-  House number
-  Please say the house number in single digits
-  Three two
-  Is three two correct?
-  OK
-  House number accepted

The house number is adopted for route guidance.

## Control systems

### Voice Control address book

#### Warning!



Please devote your attention first and foremost to the traffic situation you are in.

Before your journey, please familiarize yourself with the address book functions.

Only use the Voice Control System when road and traffic conditions permit you to do so. Otherwise you could be involved in an accident in which you or others could be injured.

#### COMAND address book overview

The Voice Control System address book function gives you the capability to store names and associated phone numbers and address information.

You can store up to 80 speaker-dependent voice entries in the Voice Control System address book.

Using these voice entries, you can dial a phone number stored in address book or start route guidance to an address stored in the address book. Available commands are dependent on the status of the address book. The address book can be in one of the following status:



- Address book not open
- Address book open

#### Operation with address book not open (global)

The Voice Control System gives you the following capabilities:

- Store a name (▷ page 316)
- Dial a name (▷ page 317)
- Delete a name (▷ page 318)
- Navigate to an entry (▷ page 325)
- List address book (▷ page 332)
- List phone book of the address (▷ page 319)
- List address book destination memory (▷ page 326)
- Delete the address book (▷ page 332)
- Open the address book

**Opening address book**


- ▶ Press .
- ▶ Speak the command “Address book”.
- ▶ Press .
- ▶ Speak one of the address book commands described below.

**Operation with address book open (local)**

In addition to the capabilities listed when the address book is not open, the address book opened allows you to:

- open an entry using the corresponding voice entry
- open any entry by spelling the name
- ▶ **Opening entry:** Speak the command “Open entry”.

**Operating and using address book**

- ▶ Press .
- ▶ Speak one of the following commands depending on the address book status (open or not open).

**Available commands with the address book not open**

For a complete list of commands (▷ page 340).

**“Help address book”**

Use the command “Help address book” to have the Voice Control System read out an option list of all available commands for the address book.

**“Save name”** (▷ page 316)

**“Dial name”** (▷ page 317)

**“Call <voice name>”** (▷ page 318)

## Control systems


### Voice Control address book


#### “Delete name” (address book)


Use the command “Delete name” to delete a voice name from your address book.

#### Sample dialog:


 Delete name

 Please say the name

 John Smith

 Do you want to delete John Smith?

 Yes


 The voice name is deleted

“Navigate to <voice entry>” (address book) (▷ page 325)


#### “List address book”

Use the command “List address book” to have the system read out all available address book entries and, if desired, select an entry when it is being read.

#### Sample dialog:

 List address book

The system reads out all available address book entries.

- ▶ **Selecting address book entry:** When the system reads the desired entry, press .

The entry is selected and shown on the COMAND display.

- ▶ **Canceling the dialog:** Press .

You have canceled the dialog. The system reads out “Cancel”.

“List phone book” and dialing a phone number (▷ page 319)

“List destination memory” (▷ page 326)

#### “Delete address book”

Use the command “Delete address book” to delete all or individual voice names of the address book entries. Only the voice name is deleted; the remaining data in the entry are retained.

#### “Address book”

Use this command to open the address book.



**Available commands with the address book open****“Help address book”**

Use the command “Help address book” to have the Voice Control System read out an option list of all available commands for the address book.

**“Open <voice name>”**

Use the command “Open <voice name>” to open an entry in your address book that has a voice name already assigned to it.





**Sample dialog:**

-  Open John Smith
-  The entry “John Smith” appears on the COMAND display

**“Select entry”**

Use the command “Select entry” to open an entry in your address book.

**Sample dialog:**

-  Select entry
-  Please say the name
-  John Smith
-  The entry “John Smith” appears on the COMAND display.








**“Spell entry”**


Use the command “Spell entry” to open an address book entry by spelling the name.

Speak the name as a continuous string (five to seven characters).

The system will display a list of possible matches on the COMAND display from which you can select the desired entry.

**Sample dialog:**

-  Spell entry
-  Please spell the name
-  S-M-I-T-H
-  The system displays a numbered list of matching entries on the COMAND display
-  Please select a line number
-  Number two
-  The system opens the entry associated with line number two on the list

 You can use the commands “Continue” or “Back” to scroll up or down the next page. Use the command “Correction” to exit the current selection list and spell the name again.

## Control systems

### Voice Control radio

#### Warning!



Please devote your attention first and foremost to the traffic situation you are in.

Before your journey, please familiarize yourself with the radio functions.

Only use the Voice Control System when road and traffic conditions permit you to do so. Otherwise you could be involved in an accident in which you or others could be injured.



#### Radio operation

The Voice Control System gives you the capability to:

- Select a station
- Seek a station
- Select a specific frequency
- Save up to 20 stations in your station list
- Select frequency band (FM or AM)
- Select weatherband
- Switch to satellite radio
- Delete station (from station list)
- List the station list
- Delete the station list

To operate the radio using the Voice Control System, the Voice Control System must be activated (▷ page 311).

#### Selecting radio mode

- ▶ Press .
- ▶ Speak the command “Radio”.
- ▶ Press .
- ▶ Speak one of the radio commands.

The system switches to the last tuned station in the selected band.

#### Radio commands

For a complete list of commands (▷ page 340).

#### “Help Radio”

Use the commands

- “FM”
- “AM”
- “Weatherband”

to select the desired frequency band or switch the radio to the weatherband.

**“Sat Radio”**

Use this command for switching on the satellite radio.

**“Next station” or “Previous station”**


The following commands are used to start the station search and to tune in the next station:

- “Next station”
- “Previous station”

**Selecting frequency (FM, AM only)**

You may, for example, select a frequency in the FM band (87.9 to 107.9 Megahertz) directly using a verbal command such as “Ninety-five five”. The Voice Control System also recognizes the words “frequency”, “point” and “megahertz”. You may for example use the command “Frequency ninety-five point five”.


**Sample dialog:**


 Ninety-five point five

The Voice Control System tunes the radio to frequency FM 95.5.


**“Save station” (List saved stations)**


Use this command to save the set station (AM and FM only) by name in your personal station list. After using this command, the Voice Control System will prompt you to repeat the name two to four times before it is saved in the station list. When repeating the station name, make sure that you pronounce it in the same manner as during the first input. Otherwise the name cannot be saved and the Voice Control System cancels the save procedure.


 *The Voice Control System may recognize names even if not saved in your voice. For optimum performance, however, call up only names you have saved yourself.*


 *You can freely select the station name, for example “Favorite station”.*


**Sample dialog:**


 Save station

 Please say the station name

 Smooth Jazz

 Please say the station name again

 Smooth Jazz


 The station Smooth Jazz has been saved


**“Select station” (List saved stations)**

Use the command “Select station” (AM and FM only) to select a saved station name from your station list.

**Sample dialog:**

 Select station

 Please say the station name

 Smooth Jazz

The Voice Control System tunes to the corresponding frequency.




## Control systems

### Voice Control radio


#### “Station Smooth Jazz” (List saved stations)

Use this command (AM and FM only) to directly select a saved station name from your station list.

##### Sample dialog:

 Station Smooth Jazz


The Voice Control System tunes to the corresponding station.

 *If the Voice Control System does not recognize the station name you requested, please refer to the section “List station list” (▷ page 336). By following the dialog, you can check and determine if the name is saved in the station list.*

#### “List station list” and select station from list

Use this command to list the entire station list, or to select an entry from the station list.


##### Sample dialog:

 List station list

The Voice Control System reads out the entire list.

To select a station:

When the system reads the desired station:

▶ Press .

▶ **Canceling the dialog:** Press .


The dialog is concluded. The system confirms “Cancel”.


#### “Delete station” (List saved stations)


Use the command “Delete station” (AM and FM only) to delete a station from your personal station list.

##### Sample dialog:


 Delete station

 Which station do you want to delete?

 Smooth Jazz

 Do you want to delete Smooth Jazz?







 Yes

 Station deleted

**“Delete station list”**

Use this command to delete the complete station list or one or more stations from the station list.

**Sample dialog:**

-  Delete station list
-  Do you want to delete all voice names from the station list?
-  Yes
-  Are you sure?
-  Yes
-  All voice names have been deleted from the station list


The system deletes the complete station list. The deletion of the station list cannot be undone.

or


 No

The system starts reading the station list.


When the system reads the station to be deleted:

▶ Press .

The station to be deleted is selected.  
The name of the selected station is read out once more.

 Do you want to delete Smooth Jazz?

 Yes

 Station deleted

The station is erased and the remaining station entries are read out.

or

 No

The system continues reading the station list entry by entry.

## Control systems

### Voice Control CD/DVD changer/MP3

#### Warning!



Please devote your attention first and foremost to the traffic situation you are in.

Before your journey, please familiarize yourself with the audio functions.

Only use the Voice Control System when road and traffic conditions permit you to do so. Otherwise you could be involved in an accident in which you or others could be injured.

#### Operation



The Voice Control System gives you the ability to:

- Select a CD/DVD/medium
- Select a track
- Select a folder in MP3 mode
- Select a group in audio-DVD mode

**i** *The following commands “Next/Previous CD/DVD” and “CD/DVD 1” to “CD/DVD 6”, cause the DVD changer to switch from one slot to another, regardless of the type of medium found in the selected slot. In your command, you can therefore replace the term “CD/DVD” with “Medium”.*

To operate the DVD changer using the Voice Control System, the Voice Control System must be activated (> page 311).

#### Selecting CD mode

- ▶ Press .
- ▶ Speak one of the following commands:
  - “CD”
  - “DVD”
  - “MP3”
- ▶ Press .
- ▶ Speak one of the following commands.

### Commands

---

For a complete list of commands (> page 340).

#### “Help CD”, “Help DVD” or “Help MP3”

Use the commands

- “Help CD”
- “Help DVD”
- “Help MP3”

and the Voice Control System will read out a complete list of available commands for the CD, DVD or MP3.

#### “CD/DVD/Medium 1” to “CD/DVD/Medium 6”

Use commands “CD/DVD/Medium 1” to “CD/DVD/Medium 6” to select one of up to 6 mediums in your DVD changer.

#### “Next CD/DVD/Medium”

Use the command “Next CD/DVD/Medium” to select the next available medium in the DVD changer.

#### “Track 1” to “Track 39”

Use the commands “Track 1” to “Track 39” to select one of up to 39 title numbers of a loaded medium.

#### “Next track”

Use the command “Next track” to select the next track.

#### “Previous track” or “Repeat track”

Use the command “Previous track” or “Repeat track” to play again the track you are listening to.

#### “Group 1” to “Group 9”

The “Group 1” to “Group 9” commands are used to select a group on the inserted audio-DVD.

#### “Next group”/“Previous group”

The “Next group”/“Previous group” commands are used to select a group on the inserted audio-DVD.

#### “Memory card”

The “Memory card” command is used to switch from the DVD drive to the PCMCIA card.

#### “Drive”

The “Drive” command is used to switch from the PCMCIA card to the DVD drive.

## Control systems

### Voice Control command list

#### Command list

Chapter “Command list” gives you an overview of all commands available for use to control the Voice Control System.

Which commands are available for use is dependent on the equipment level in your vehicle.

**i** *Some functions can be operated using several different commands. In the following list, these commands are grouped in one cell. Choose your preferred command from those available.*

#### General commands

- yes
- right
- ok
- cancel
- stop
- quit
- abort
- terminate
- no
- no thank you
- address book
- MP3
- CD
- navigation
- route guidance
- audio DVD
- radio
- sat radio
- satellite radio
- telephone
- messages
- SMS
- vehicle
- correction
- wrong
- incorrect
- help
- help please
- please help
- help functions
- help devices
- help voice control
- linguatronic help
- general help
- help permanent commands

## Control systems

### Voice Control command list

- help global commands
- letters of the English alphabet
- digits 0 - 9
- continue
- go forward
- next page
- back
- go back
- previous page
- help radio
- help tuner
- radio help
- tuner help
- help telephone
- help phone
- help address book

- help CD
- help disc
- help CD player
- help CD changer
- help audio DVD
- help DVDA
- help DVD audio
- help DVD audio player
- help DVD audio changer
- help navigation
- help nav
- help navi
- help route guidance
- help routing
- help destination guidance

#### Telephone\* commands

- telephone (on)
- phone (on)
- telephone off
- save
- save PIN
- save PIN code
- save number
- save PIN number
- save telephone number
- save name
- save password
- store PIN
- store PIN code
- store number
- store PIN number

## Control systems

### Voice Control command list

- store telephone number
- store name
- store password
- dial
- dial PIN
- dial number
- dial PIN number
- dial PIN code
- dial phone number
- dial telephone number
- dial password
- dial unlock code
- confirm
- confirm PIN
- confirm number
- confirm PIN number
- confirm PIN code
- confirm phone number

- confirm telephone number
- confirm password
- confirm unlock code
- repeat PIN
- repeat number
- repeat PIN number
- repeat PIN code
- repeat phone number
- repeat telephone number
- repeat password
- repeat unlock code
- enter PIN
- enter PIN code
- enter PIN number
- enter code
- enter unlock code
- list phone book
- read out phone book

- play phone book
- get phone book
- recall phone book
- redial
- redial last number
- redial last phone number
- correction
- wrong PIN
- wrong number
- wrong PIN number
- wrong PIN code
- wrong phone number
- wrong telephone number
- wrong unlock code
- incorrect PIN
- incorrect number
- incorrect PIN number
- incorrect PIN code

- incorrect phone number
- incorrect telephone number
- incorrect unlock code

- delete
- delete PIN
- delete number
- delete PIN number
- delete PIN code
- delete phone number
- delete telephone number
- delete unlock code

#### Navigation commands

- navigation
- nav
- navi
- route guidance
- routing

- destination guidance
- guidance instructions on
- switch guidance instruction on
- switch guidance instructions on
- switch route guidance instruction on
- switch route guidance instructions on
- switch on guidance instruction
- switch on guidance instructions
- switch on route guidance instruction
- switch on route guidance instructions
- guidance instructions off
- switch guidance instructions off
- switch route guidance instructions off
- switch off guidance instructions
- switch off route guidance instructions
- mute guidance instructions
- mute route guidance instructions
- house number

- enter house number
- map (on)
- show map
- switch on map
- zoom in
- zoom in on map
- zoom out
- zoom out on map
- zoom in completely
- zoom out completely
- enter country
- enter another country
- spell country
- spell another country
- change country
- change another country
- intersection
- spell intersection



## Control systems

### Voice Control command list

- spell cross street
- enter intersection
- enter cross street
- last destinations

- last states
- last provinces

- spell town
- spell city
- spell name of town
- spell name of city

- enter town
- enter city
- enter name of town
- enter name of city

- district
- center
- spell district
- spell center

- enter district
- enter center

- points of interest
- enter points of interest
- enter point of interest
- enter POI
- enter POIs

- street
- spell street
- spell name of street
- enter street
- enter name of street

- enter destination
- destination entry
- destination input
- address entry
- address input
- save destination

- save address
- store destination
- store address

- start route guidance
- start navigation
- start nav
- start routing
- begin route guidance
- begin navigation
- begin route guidance
- begin routing
- continue route guidance
- continue navigation
- continue nav
- continue routing
- destination guidance on

- cancel route guidance
- cancel navigation

- cancel nav
- cancel routing
- cancel destination guidance
- exit route guidance
- exit navigation
- exit nav
- exit routing
- exit destination guidance
- terminate route guidance
- terminate navigation
- terminate nav
- terminate routing
- terminate destination guidance
- next gas station
- next Mercedes-Benz service
- next workshop
- next MB service
- next MB service point

- next MB service center
- next Mercedes service
- next Mercedes service point
- next Mercedes service center
- next Mercedes-Benz service point
- next Mercedes-Benz service center
- next service point
- next service center
- next hospital
- next parking lot
- next restaurant

#### Address book commands

- address book (on)
- address list (on)
- addresses (on)
- list address book
- read out address book

- get address book
- recall address book
- delete address book
- spell entry
- spell name
- spell heading
- search entry
- search name
- search heading
- open entry
- show entry
- list entry
- select entry
- get entry
- open entry
- open page
- open item
- open name

## Control systems

### Voice Control command list

- open <voice name>
- delete name
- delete <voice name>
- list destination memory
- read out destination memory
- play destination memory
- get destination memory
- recall destination memory
- <voice name>
- <voice name> car
- <voice name> car phone
- <voice name> land line
- <voice name> phone
- <voice name> telephone
- <voice name> cell phone
- <voice name> mobile phone
- <voice name> cellular phone
- call <voice name>

- call <voice name> work
- call <voice name> office
- call <voice name> business
- call <voice name> company
- <voice name> home
- call <voice name> home
- work
- office
- business
- company
- car
- car phone
- land line
- land line phone
- land line telephone
- cell phone
- mobile phone
- cellular phone

- work car (phone)
- office car (phone)
- business car (phone)
- company car (phone)
- car (phone) work
- car (phone) office
- car (phone) business
- car (phone) company
- work land line
- office phone
- land line phone business
- land line telephone company
- work cell phone
- office mobile phone
- business cellular phone
- cell phone company
- home
- home car

## Control systems

### Voice Control command list

- home car phone
- car home
- car phone home
- home land line
- home land line phone
- land line home
- land line phone home
- home cell phone
- home mobile
- cell home
- cell phone home
- mobile home
- mobile phone home
- cellular home
- cellular phone home
- call <voice name> work car
- call <voice name> work land line
- call <voice name> work cell phone

- call <voice name> home car
- call <voice name> land line phone
- call <voice name> cell phone home
- navigate to <voice name>
- drive to <voice name>
- navigate to <voice name> work
- navigate to <voice name> home
- dial name
- dial voice name
- save name
- save voice name
- save number
- save telephone number
- store voice name
- store number
- store telephone number
- accept
- accept PIN

- accept PIN code
- accept lock code
- accept PIN number
- accept number
- accept telephone number
- accept name
- accept password
- OK
- finished
- <1> - <8>
- use <1> - <8>
- number <1> - <8>
- line <1> - <8>

#### Audio commands

- audio
- audio off

## Control systems

### Voice Control command list

#### Radio

- radio (on)
- AM
- MW
- FM
- weatherband
- next station
- station search
- going up
- other station
- radio seek
- station <voice entry>
- go to <voice entry>
- <voice entry>
- delete station
- save station
- store station
- select station

- select channel
- list station list
- list saved stations
- read out station list
- play station list
- get station list
- recall station list
- delete station list
- previous station
- last station
- coming down
- station search coming down

Example: 95.5 FM

- ninety-five five
- ninety-five five megahertz
- ninety-five point five
- ninety-five point five megahertz
- frequency ninety-five five

- frequency ninety-five point five
- frequency ninety-five five megahertz
- frequency ninety-five point five megahertz

Example: 540 AM

- five-hundred-forty
- five-hundred-forty kilohertz
- frequency five-hundred-forty
- frequency five-hundred-forty kilohertz

#### Satellite radio

- sat radio
- satellite radio

## Control systems

### Voice Control command list

#### *CD*

- CD (on)
- CD player (on)
- CD changer (on)
- next CD
- other CD
- next medium
- other medium
- previous CD
- last CD
- preceding CD
- replay CD
- replay medium
- repeat medium
- last medium
- previous medium
- next track
- other track

- previous track
- last track
- repeat track
- replay track
- track 1-39
- load track 1-39
- load track number 1-39
- select track 1-39
- select track number 1-39
- CD 1-6
- CD number 1-6
- medium 1-6
- medium number 1-6

#### *MP3*

- MP3 (on)
- MP3 player (on)
- MP3 changer (on)
- next MP3
- other MP3
- next medium
- other medium
- previous MP3
- last MP3
- preceding MP3
- replay MP3
- replay medium
- repeat medium
- last medium
- previous medium
- next directory
- other directory

## Control systems

### Voice Control command list

- next folder
- other folder
- previous directory
- previous folder
- last directory
- last folder
- repeat directory
- repeat folder
- next track
- other track
- previous track
- last track
- repeat track
- replay track
- track 1-39
- load track 1-39
- load track number 1-39
- select track 1-39

- select track number 1-39
- MP3 1-6
- MP3 number 1-6
- medium 1-6
- medium number 1-6
- drive
- memory card

#### *DVD*

- audio DVD
- DVDA player (on)
- audio DVD player (on)
- DVD audio player (on)
- DVDA changer (on)
- audio DVD changer (on)
- DVD audio changer (on)
- next DVDA
- other DVDA

- next DVD audio
- other DVD audio
- next audio DVD
- other audio DVD
- next medium
- other medium
- previous DVDA
- last DVDA
- preceding DVDA
- replay DVDA
- previous DVD audio
- last DVD audio
- preceding DVD audio
- replay DVD audio
- previous audio DVD
- last audio DVD
- preceding audio DVD
- replay audio DVD

## Control systems

### Voice Control command list

- replay medium
- repeat medium
- last medium
- previous medium

- next directory
- other directory
- next folder
- other folder

- previous directory
- previous folder
- last directory
- last folder
- repeat directory
- repeat folder

- next group
- other group

- previous group
- previous repeat group
- previous replay group
- last group
- last repeat group
- last replay group

- group 1-9
- select group 1-9
- group number 1-9
- select group number 1-9

- next track
- other track

- previous track
- last track
- repeat track
- replay track

- track 1-39
- load track 1-39
- load track number 1-39
- select track 1-39
- select track number 1-39

- DVDA 1-6
- DVDA number 1-6
- DVD audio 1-6
- DVD audio number 1-6
- audio DVD 1-6
- audio DVD number 1-6
- medium 1-6
- medium number 1-6



## Control systems

### Voice Control troubleshooting

#### Help function

To support the user, the Voice Control System contains an extensive help function.

The help function gives you:

- General hints on how to best use the Voice Control System
- A listing of all available commands

#### Help commands

##### “Help voice control”

Using the command “Help voice control” will give you information on how to best use the Voice Control System.


##### “Help”

In a main menu, help can be accessed at any time by saying the command “Help”. The Voice Control System will then read out the available functions and commands of all systems.

In a submenu, help can also be accessed at any time by saying the command “Help”. The Voice Control System will then read out an option list of all available functions and commands available in the particular submenu.

You can also use the help function to access help for a specific system. To access help for the phone operation, you would speak the command “Help Telephone”.

If you wish to execute the last command read out:

▶ Press .

#### Help window

You can use the help window to view a selection of valid commands on the COMAND display.

The help functions can be switched on or off via COMAND in the “System settings” menu (▷ page 261).

#### Entering digits and spelling


##### Entering digits

- Digits from “Zero” to “Nine” may be used.
- Speaking phone numbers in digit blocks of 3 to 5 digits has proven a very reliable method for the input of phone numbers.

##### Spelling


- The letters of the English alphabet and the digits 0 - 9 may be used.
- Speak the letters in blocks of 5 - 7 letters at a time.
- Speak each individual letter clearly.

## What to do if ...

Problem	Possible cause/consequence	Suggested solution
Voice Control System does not recognize a station list entry.	The voice entries for the station names sound too similar.	<ul style="list-style-type: none"> <li>▶ When you create your address book entries, select names with the greatest possible acoustic differences.</li> <li>▶ Speak the command “List station list”. The system reads out the station list entry by entry.</li> <li>▶ Press  when the desired station name is being read out. The station is selected (&gt; page 336).</li> </ul>
Should interference occur during the process of storing a name, the Voice Control System prompts you to repeat your voice entry a third and fourth time. If the interference continues, the dialog is stopped.	Both voice entries differ.	<ul style="list-style-type: none"> <li>▶ Pronounce the voice entries both times in the same manner.</li> </ul>

## Control systems

### Voice Control troubleshooting

Problem	Possible cause/consequence	Suggested solution
Voice Control System does not recognize commands.	You have not operated the system from the driver's seat.	▶ Operate the Voice Control System only by the driver as the microphone is geared to the driver side.
	You have spoken unclearly, too loudly or too quietly.	▶ Speak the commands in a continuous manner using a normal tone.
	A blower is set to the highest setting, vents are pointed at microphones or wind noise is being created through open windows.	▶ Avoid loud disturbances.
Voice Control System does not recognize a address book entry.	The voice entries in the address book sound too similar.	▶ When you create your address book entries, select names with the greatest possible acoustic differences: If for example you have the names Smith and Schmidt, choose for example "Smith work" or "Schmidt John".
		▶ Speak the command "List phone book". The system reads out the address book entry by entry. ▶ Press  when the desired entry is being read out. The entry is selected and the corresponding number is dialed (▷ page 319).

### ▼ Voice Control individualization

**i** *The individualization can only be performed when the vehicle is stationary.*

*If you drive off, the individualization will be canceled.*

*After starting the session, the system will guide you through the individualization by means of acoustic instructions.*

The individualization is used to adapt the Voice Control System to your own voice and to therefore improve speech recognition. This does not affect the speech recognition of other users.

Individualization consists of two stages:

- Digits
- Commands

You can activate individualization in the COMAND system settings (▷ page 261). A dialog and screen displays will guide you through the individualization process.

The system can be reset to the factory settings at any time.

**i** *You may wish to complete only a portion of the individualization process.*

*Completing the digits portion alone may result in an improved recognition rate.*

*Individualization can be exited at any time. The data trained, however, will only be retained if a given individualization portion is completed and the data is stored when prompted to do so by the system.*



**Locking and unlocking**

**Starter switch positions**

**Seats**

**Steering wheel**

**Mirrors**

**Memory function**

**Fastening the seat belts**

**Lighting**

**Windshield wipers**

**Power windows**

**Driving and parking**

**Automatic transmission**

**Instrument cluster**

**Driving systems**

**Air vents**

**Automatic climate control**

**Trunk**

**Power tilt/sliding sunroof**

**Panorama roof with power  
tilt/sliding panel\***

**Loading and storing**

**Useful features**



## Controls in detail

### Locking and unlocking

#### SmartKey

Your vehicle comes supplied with two SmartKeys, each with remote control and a removable mechanical key.




The SmartKey provides an extended operating range. To prevent theft, however, it is advisable to only unlock the vehicle when you are in close proximity to it.

The SmartKey centrally locks and unlocks, when set to factory settings (▷ page 359):

- the doors
- the trunk
- the fuel filler flap



#### SmartKey with remote control

- ①  Lock button
- ②  Opening button for trunk (▷ page 511)
- ③ Mechanical key locking tab
- ④  Unlock button
- ⑤ Battery check lamp
- ⑥ **PANIC** Panic button (▷ page 66)

**!** To prevent possible malfunction, avoid exposing the SmartKey to high levels of electromagnetic radiation.

#### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

#### Warning!



To prevent possible personal injury, always keep hands and fingers away from the door or trunk lid opening when closing a door or the trunk. Be especially careful when small children are around.

Before closing doors, make sure there is no possibility of someone getting caught in a door during closing.

#### **i** USA only:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

#### **i** Canada only:

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

**i** You can also open and close the door windows and tilt/sliding sunroof, or the tilt/ sliding panel\* using the SmartKey (▷ page 412).

**!** If you cannot lock or unlock the vehicle with the SmartKey, then either the batteries in the SmartKey are discharged, the SmartKey is malfunctioning or the vehicle batteries are drained.

- Check the batteries in the SmartKey and replace them if necessary (▷ page 712).
- Use the mechanical key to unlock the driver's door (▷ page 708) and the trunk (▷ page 709).
- Use the mechanical key to lock the driver's door (▷ page 709) and the trunk (▷ page 517).
- Have the vehicle batteries and their connections checked (▷ page 729).

If the SmartKey is malfunctioning, contact Roadside Assistance or an authorized Mercedes-Benz Center.

#### Factory setting

**i** Your vehicle may be equipped with an acoustic lock and unlock confirmation signal feature. If your vehicle is equipped with this feature and the feature is activated, an acoustic signal will sound when the vehicle is locked or unlocked using the SmartKey.

To determine whether or not your vehicle is equipped with this feature, contact an authorized Mercedes-Benz Center. If equipped and you wish to activate or deactivate the feature, or adjust its signal volume, also contact an authorized Mercedes-Benz Center.

► **Global unlocking:** Press button .

- All turn signal lamps flash once.
- An acoustic signal sounds once (if equipped and feature activated).
- The locking knobs in the doors move up.
- The anti-theft alarm system is disarmed.




## Controls in detail

### Locking and unlocking

The vehicle will lock again automatically and rearm the anti-theft alarm system within approximately 40 seconds of unlocking if:


- neither a door nor the trunk is opened
- the SmartKey is not inserted in the starter switch
- the central locking/unlocking switch is not activated




► **Global locking:** Press button .

With the trunk and both doors closed:


- All turn signal lamps flash three times.
- An acoustic signal sounds three times (if equipped and feature activated).
- The locking knobs in the doors move down.
- The anti-theft alarm system is armed.

#### Selective setting

If you frequently travel alone, you may wish to reprogram the SmartKey so that pressing button  only unlocks the driver's door and the fuel filler flap.

- Press and hold buttons  and  simultaneously for about 5 seconds until battery check lamp  (▷ page 358) flashes twice.

The SmartKey will then function as follows:

► **Unlocking driver's door and fuel filler flap:** Press button  once.

- All turn signal lamps flash once.
- An acoustic signal sounds once (if equipped and feature activated). For more information, see "Factory setting" (▷ page 359).
- The locking knob in the driver's door moves up.
- The anti-theft alarm system is disarmed.

► **Global unlocking:** Press button  twice.

- All turn signal lamps flash once.
- An acoustic signal sounds once (if equipped and feature activated).
- The locking knobs in the doors move up.
- The anti-theft alarm system is disarmed.

► **Global locking:** Press button .

With the trunk and both doors closed:

- All turn signal lamps flash three times.
- An acoustic signal sounds three times (if equipped and feature activated).
- The locking knobs in the doors move down.
- The anti-theft alarm system is armed.

- **Restoring to factory setting:** Press and hold buttons  and  simultaneously for about 5 seconds until battery check lamp  (▷ page 358) flashes twice.

#### SmartKey with KEYLESS-GO\*

Vehicles equipped with KEYLESS-GO come with two SmartKeys with KEYLESS-GO, each with remote control and a removable mechanical key.

The KEYLESS-GO function is integrated into the SmartKey. On these vehicles, the validity of the SmartKey with KEYLESS-GO is checked every time you grasp an outside door handle.





With the KEYLESS-GO function, you can lock and unlock the vehicle without using the remote control buttons on the SmartKey and start the engine without inserting the SmartKey in the starter switch.


The SmartKey with KEYLESS-GO centrally locks and unlocks, when set to factory settings (▷ page 364):


- the doors
- the trunk
- the fuel filler flap



#### SmartKey with KEYLESS-GO

- ①  Lock button
- ②  Opening button for trunk (▷ page 511)
- ③ Locking tab for mechanical key
- ④  Unlock button
- ⑤ Battery check lamp
- ⑥  Panic button (▷ page 66)

 When any outside door handle other than the driver's outside door handle is grasped, the vehicle is centrally unlocked.

 To prevent possible malfunction, avoid exposing the SmartKey with KEYLESS-GO to high levels of electromagnetic radiation.

#### Warning!



When leaving the vehicle, always take the SmartKey with KEYLESS-GO\* with you and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

Children could start the vehicle with a valid SmartKey with KEYLESS-GO left in the vehicle or with the KEYLESS-GO button on the starter switch, or could release the electronic parking brake, thereby putting themselves and others in danger. Switch off the engine and take the SmartKey with KEYLESS-GO with you even if you are only leaving the vehicle for a short while.

## Controls in detail

### Locking and unlocking

#### Warning!



To prevent possible personal injury, always keep hands and fingers away from the door or trunk lid opening when closing a door or the trunk. Be especially careful when small children are around.

Before closing doors, make sure there is no possibility of someone getting caught in a door during closing.

#### **i** USA only:

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:*

- (1) This device may not cause harmful interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

#### **i** Canada only:

*This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:*

- (1) This device may not cause interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

**i** You can also open and close the door windows and tilt/sliding sunroof, or the tilt/ sliding panel\* using the SmartKey with KEYLESS-GO (▷ page 412).

**!** If you cannot lock or unlock the vehicle with the SmartKey with KEYLESS-GO, then either the batteries in the SmartKey with KEYLESS-GO are discharged, the SmartKey with KEYLESS-GO is malfunctioning or the vehicle batteries are drained.

- Check the batteries in the SmartKey with KEYLESS-GO and replace them if necessary (▷ page 712).


- Use the mechanical key to unlock the driver's door (▷ page 708) and trunk (▷ page 709).
- Use the mechanical key to lock the driver's door (▷ page 709) and the trunk (▷ page 517).
- Have the vehicle batteries and their connections checked (▷ page 729).

*If the SmartKey with KEYLESS-GO is malfunctioning, contact Roadside Assistance or an authorized Mercedes-Benz Center.*

#### Important notes on using KEYLESS-GO

- You can also use the SmartKey with KEYLESS-GO like a normal SmartKey (▷ page 358).

The starter switch is located under the KEYLESS-GO button. Pull the KEYLESS-GO button out in order to access the starter switch.

- You can combine KEYLESS-GO functions with normal SmartKey functions (e.g. unlocking with KEYLESS-GO and locking with button ).

- Always carry the SmartKey with KEYLESS-GO with you.
- Never store the SmartKey with KEYLESS-GO together with:
  - Electronic items such as a mobile phone or another SmartKey with KEYLESS-GO
  - Metallic objects such as coins or metal foil

Doing so could impair the function of the KEYLESS-GO system.

- To lock or unlock the vehicle, the SmartKey with KEYLESS-GO must be located outside the vehicle within approximately 3 ft (1 m) of a door or the trunk lid.
- If the vehicle has been parked for more than 72 hours, you must pull an outside door handle in order to activate the KEYLESS-GO function.

- In order to start the engine with the SmartKey with KEYLESS-GO:
  - The SmartKey with KEYLESS-GO must be located in the vehicle.
  - The KEYLESS-GO start/stop button must be inserted in the starter switch (▷ page 372).
  - The brake pedal must be firmly depressed. Do not depress the accelerator.
- If the SmartKey with KEYLESS-GO is positioned farther away from the vehicle, the system may no longer recognize the SmartKey with KEYLESS-GO. The vehicle then cannot be locked or the engine started via the KEYLESS-GO system.
- If the SmartKey with KEYLESS-GO is removed from the vehicle (e.g. if passenger exits the vehicle with the SmartKey with KEYLESS-GO)

- when pressing the KEYLESS-GO start/stop button or trying to lock the vehicle with the outside door handle the message “*Key Not Detected*” appears in the multifunction display
- with the engine running, the message “*Key Not Detected*” appears in the multifunction display while driving off

Find the SmartKey with KEYLESS-GO or change its present location immediately (e.g. place it on the front passenger seat or insert it in shirt pocket).

- If you have started the engine with the KEYLESS-GO start/stop button, you can turn it off again with:
  - the KEYLESS-GO start/stop button
  - the SmartKey with KEYLESS-GO inserted in the starter switch, when the automatic transmission is in park position **P**

## Controls in detail

### Locking and unlocking

- Remember that the engine can be started by anyone with a SmartKey with KEYLESS-GO that is left inside the vehicle.

Possibility 1: (One SmartKey with KEYLESS-GO in the vehicle, one SmartKey with KEYLESS-GO outside the vehicle):

If you leave the SmartKey with KEYLESS-GO behind when exiting and locking the vehicle, no message appears in the multifunction display.


Possibility 2: (One SmartKey with KEYLESS-GO in the vehicle, no SmartKey with KEYLESS-GO outside the vehicle):

When exiting and trying to lock the vehicle, the message “Key Detected In Vehicle” appears in the multifunction display. The vehicle will not be locked.

#### Factory setting

**i** Your vehicle may be equipped with an acoustic lock and unlock confirmation signal feature. If your vehicle is equipped with this feature and the feature is activated, an acoustic signal will sound when the vehicle is locked or unlocked using the SmartKey with KEYLESS-GO.

To determine whether or not your vehicle is equipped with this feature, contact an authorized Mercedes-Benz Center. If equipped and you wish to activate or deactivate the feature, or adjust its signal volume, also contact an authorized Mercedes-Benz Center.

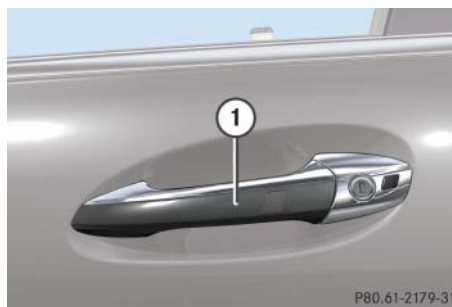

① Outside door handle

- **Global unlocking:** Grasp an outside door handle ①.

- All turn signal lamps flash once.
- An acoustic signal sounds once (if equipped and feature activated).
- The locking knobs in the doors move up.
- The anti-theft alarm system is disarmed.

The vehicle will lock again automatically and rearm the anti-theft alarm system within approximately 40 seconds of unlocking if:

- neither a door nor the trunk is opened
- the central locking/unlocking switch is not activated

**i** The vehicle could inadvertently be unlocked if the SmartKey with KEYLESS-GO is within 3 ft (1 m) of the vehicle and:

- an outside door handle is splashed with water, or
- you attempt to clean an outside door handle.

- ▶ **Global locking:** Close all doors and touch outside of door handle ①. Do not keep your hand in the door handle recess.



With the trunk and both doors closed:

- All turn signal lamps flash three times.
- An acoustic signal sounds three times (if equipped and feature activated).
- The locking knobs in the doors move down.
- The anti-theft alarm system is armed.

**i** Vehicles with trunk opening/closing system\*:  
You can also lock the vehicle using the KEYLESS-GO locking/closing switch (▷ page 514).

#### Selective setting

If you frequently travel alone, you may wish to reprogram the SmartKey with KEYLESS-GO so when you, grasp the driver's outside door handle only the driver's door and the fuel filler flap unlocks.

- ▶ Press and hold buttons  and  simultaneously for about 5 seconds until battery check lamp ⑤ (▷ page 361) flashes twice.

The SmartKey with KEYLESS-GO will then function as follows:

- ▶ **Unlocking driver's door and fuel filler flap:** Grasp the driver's outside door handle.

- All turn signal lamps flash once.
  - An acoustic signal sounds once (if equipped and feature activated). For more information, see "Factory setting" (▷ page 364).
  - The locking knob in the driver's door moves up.
  - The anti-theft alarm system is disarmed.
- ▶ **Global unlocking:** Grasp any outside door handle other than the driver's outside door handle.
    - All turn signal lamps flash once.
    - An acoustic signal sounds once (if equipped and feature activated).
    - The locking knobs in the doors move up.
    - The anti-theft alarm system is disarmed.



## Controls in detail

### Locking and unlocking



- ▷▷▶ **Global locking:** Close all doors and touch outside of door handle ① (▷ page 364). Do not keep your hand in the door handle recess.

With the trunk and both doors closed:

- All turn signal lamps flash three times.
- An acoustic signal sounds three times (if equipped and feature activated).
- The locking knobs in the doors move down.
- The anti-theft alarm system is armed.

**i** Vehicles with trunk opening/closing system\*:

You can also lock the vehicle using the KEYLESS-GO locking/closing switch (▷ page 514).

- ▶ **Restoring to factory setting:** Press and hold buttons  and  simultaneously for about 5 seconds until battery check lamp ⑤ (▷ page 361) flashes twice.

#### Checking batteries in the SmartKey or SmartKey with KEYLESS-GO\*



- ▶ Press button  or .

The battery check lamp (▷ page 358) or (▷ page 361) comes on briefly to indicate that the SmartKey or SmartKey with KEYLESS-GO batteries are in order.

**!** If the battery check lamp does not come on briefly during check, the SmartKey or SmartKey with KEYLESS-GO batteries are discharged.

Replace the batteries (▷ page 712).

You can obtain the required batteries at any authorized Mercedes-Benz Center.

**i** If the batteries are checked within signal range of the vehicle, pressing button  or  will lock or unlock the vehicle accordingly.

#### Loss of the SmartKey or SmartKey with KEYLESS-GO\*


If you lose your SmartKey, SmartKey with KEYLESS-GO or mechanical key, you should do the following:

- ▶ Have the SmartKey or SmartKey with KEYLESS-GO deactivated by an authorized Mercedes-Benz Center.
- ▶ Report the loss of the SmartKey, SmartKey with KEYLESS-GO or the mechanical key immediately to your car insurance company.
- ▶ Have the mechanical lock replaced if necessary.

Any authorized Mercedes-Benz Center will be glad to supply you with a replacement.

#### Opening doors from the inside

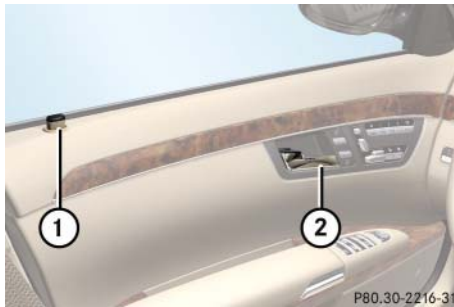

You can open a locked door from the inside. Open door only when conditions are safe to do so.



- ① Locking knob
- ② Inside door handle

**i** If the vehicle has been locked with the SmartKey or KEYLESS-GO\*, opening a door from the inside will trigger the anti-theft alarm system.

 
To cancel the alarm, do one of the following:

- Insert the SmartKey or SmartKey with KEYLESS-GO\* in the starter switch.
- Press button  or  on the SmartKey or SmartKey with KEYLESS-GO\*.

In vehicles with KEYLESS-GO\*:

- Grasp an outside door handle.

The SmartKey with KEYLESS-GO\* must be within 3 ft (1 m) of the vehicle.

- Press the KEYLESS-GO\* start/stop button ( page 372).

The SmartKey with KEYLESS-GO\* must be inside the vehicle.

**i** If you hear a warning signal you have forgotten to switch off the low beam headlamps or the parking lamps before opening the driver's door.

In addition the message "Please Switch Off Lights" appears in the multifunction display.

Switch off the low beam headlamps or the parking lamps.

If the message "Turn Lights Off or Remove Key" appears in the multifunction display remove the SmartKey from the starter switch or switch off the automatic headlamp mode.

**!** Failure to switch off the exterior lamps when leaving the vehicle may result in a discharged battery.

#### Front doors

- ▶ Pull on door handle ② on the respective front door to open door.

If the door was locked, locking knob ① will move up.

#### Rear doors

- ▶ Pull up locking knob ① on the respective rear door to unlock door.

- ▶ Pull on door handle ② on the respective rear door to open door.



## Controls in detail

### Locking and unlocking

#### Power closing assist for doors and trunk lid

It is not necessary to slam the door or trunk lid closed. An electrical power-assisted mechanism draws doors and trunk lid closed quietly and automatically once door and trunk lid has been latched. When the electrical power-assisted mechanism has stopped, doors and/or trunk can be re-opened.

#### Warning!



To prevent possible personal injury, always keep hands and fingers away from the door or trunk lid opening when closing a door or the trunk. Be especially careful when small children are around.

In case of danger, pull the inside or outside door handle, or pull the trunk lid handle.

To prevent personal injury, never actuate the closing assist mechanism by tampering with the door or trunk lid latch.

- ▶ **Power closing assist for doors:** Press the doors gently past the initial engage position into the lock.

The doors close automatically.

#### Warning!



Only drive with the doors closed. Otherwise, one or more of the doors could open while the vehicle is in motion, putting you and/or others at risk.

- ▶ **Power closing assist for trunk lid:** Press the trunk lid gently into its lock.

The trunk closes automatically.

#### Warning!



Only drive with the trunk closed as, among other dangers such as blocked visibility, exhaust fumes may enter the vehicle interior. These fumes may be damaging to your health.

For more information on closing the trunk lid, see “Closing trunk” (▷ page 512).

#### Automatic central locking

The doors and the trunk automatically lock when the ignition is switched on and the wheels are turning at vehicle speeds of approximately 9 mph (15 km/h) or more. The locking knobs in the doors move down.

You can open a locked door from the inside. Open door only when conditions are safe to do so.

**i** *The doors are designed to unlock automatically after an accident if the force of the impact exceeds a preset threshold.*

*The vehicle locks automatically when the ignition is switched on and the wheels are turning at vehicle speeds of approximately 9 mph (15 km/h) or more. You could therefore lock yourself out when the vehicle*

- *is pushed or towed*
- *is on a test stand*

You can deactivate the automatic locking using the COMAND system (▷ page 267).

#### Locking and unlocking from the inside


##### Warning!



When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

You can lock or unlock the doors and the trunk from the inside using the central locking or unlocking switch. This can be useful, for example, if you want to lock the vehicle before starting to drive.

The central locking switch and central unlocking switch do not lock or unlock the fuel filler flap or the interior storage compartments such as the glove box.

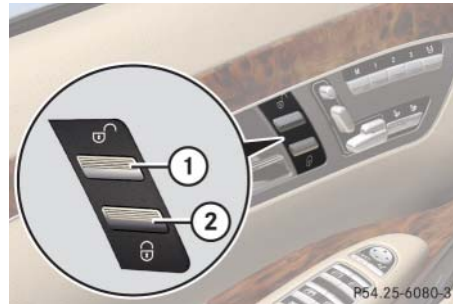

- ① Central unlocking switch
- ② Central locking switch

► **Locking:** Press switch .

If the front passenger door is closed, the vehicle locks.

► **Unlocking:** Press switch .

The vehicle unlocks.

**i** You can open a locked door from inside at any time. Open door only when conditions are safe to do so.

If the vehicle was previously centrally locked with the SmartKey or with KEYLESS-GO\*, it will not unlock using the central unlocking switch.

If the vehicle was previously locked with the central locking switch:

- and the SmartKey or SmartKey with KEYLESS-GO\* is set to factory settings, the complete vehicle is unlocked when a door is opened from the inside
- and the SmartKey or SmartKey with KEYLESS-GO\* is set to selective settings, only the door opened from the inside is unlocked

## Controls in detail

### Starter switch positions

#### Warning!



When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

#### SmartKey



Starter switch

0 For removing SmartKey

1 Power supply for some electrical consumers

2 Ignition (power supply for all electrical consumers) and driving position.

All lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) in the instrument cluster come on. If a lamp in the instrument cluster fails to come on when the ignition is switched on, have it checked and replaced if necessary. If a lamp in the instrument cluster remains on after starting the engine or comes on while driving, refer to “Lamps in instrument cluster” (▷ page 628).

3 Starting position

**i** When you switch on the ignition, the indicator and warning lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) in the instrument cluster come on. The indicator and warning lamps (except high beam headlamp indicator lamp and turn signal indicator lamps if activated) should go out when the engine is running. This indicates that the respective systems are operational.

**i** When the SmartKey is removed from the starter switch and the automatic transmission is in a position other than park position **P**, the automatic transmission automatically shifts to park position **P**.

**!** If the SmartKey cannot be turned in the starter switch, the battery may not be sufficiently charged.

- Check the battery and charge it if necessary (▷ page 729).
- Have the vehicle jump-started (▷ page 734).

To prevent accelerated battery discharge or a completely discharged battery, always remove the SmartKey from the starter switch when the engine is not in operation.

For information on starting the engine using the SmartKey, see “Starting with the SmartKey” (▷ page 417).

#### SmartKey with KEYLESS-GO\*

Vehicles equipped with the KEYLESS-GO feature are supplied with a SmartKey with integrated KEYLESS-GO function and a removable KEYLESS-GO start/stop button.


With the KEYLESS-GO start/stop button inserted and the SmartKey with KEYLESS-GO present in the vehicle, pressing the KEYLESS-GO start/stop button

- without the brake pedal depressed corresponds to the various starter switch positions (▷ page 372)
- with the brake pedal firmly depressed will start the engine (▷ page 417)

If you wish or should there be a need to insert the SmartKey with KEYLESS-GO in the starter switch, the KEYLESS-GO start/stop button can be easily removed by pulling it out of the starter switch.

**i** The function of the SmartKey overrides the KEYLESS-GO function.

**i** The KEYLESS-GO start/stop button does not need to be removed from the starter switch when you leave the vehicle. However, always take the SmartKey with KEYLESS-GO with you when you leave the vehicle. As long as the SmartKey with KEYLESS-GO is in the vehicle, the vehicle's electrical systems can be switched on or the engine can be started using the KEYLESS-GO start/stop button.

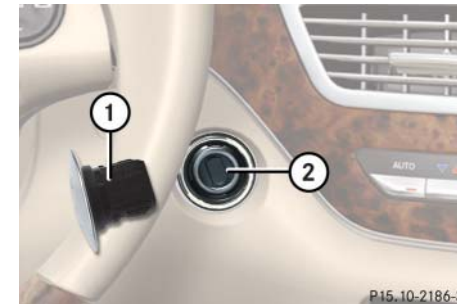

① KEYLESS-GO start/stop button

② Starter switch

- ▶ Insert KEYLESS-GO start/stop button ① into starter switch ② (if not inserted already).


**i** When you switch from SmartKey mode back to KEYLESS-GO mode, the system requires 2 seconds of detection time before you can use the KEYLESS-GO button as usual. ▷▷

## Controls in detail

### Starter switch positions

▷▷The SmartKey with KEYLESS-GO must be located in the vehicle.

- ▶ Make sure the automatic transmission is set to park position **P**.
- ▶ Do not depress the brake pedal.

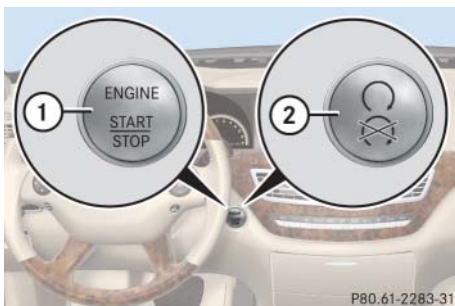

#### KEYLESS-GO start/stop button

- ① USA only
- ② Canada only

#### Position 0

Before you press the KEYLESS-GO start/stop button, the vehicle's on-board electronics have status **0** (as with SmartKey removed).

#### Position 1

- ▶ Press the KEYLESS-GO start/stop button once.

This supplies power for some electrical consumers.

**i** If you now press the KEYLESS-GO start/stop button

- once again, the ignition (position **2**) is switched on
- twice, the power supply is again switched off

#### Ignition (or position 2)

- ▶ Press the KEYLESS-GO start/stop button twice.

This supplies power for all electrical consumers.

All lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) in the instrument cluster come on. If a lamp in the instrument cluster fails to come on when the ignition is switched on, have it checked and replaced if necessary.

If a lamp in the instrument cluster remains on after starting the engine or comes on while driving, refer to "Lamps in instrument cluster" (▷ page 628).

**i** If you now press the KEYLESS-GO start/stop button once, the power supply is again switched off.

**i** When you switch on the ignition, the indicator and warning lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) in the instrument cluster come on. The indicator and warning lamps (except high beam headlamp indicator lamp and turn signal indicator lamps if activated) should go out when the engine is running. This indicates that the respective systems are operational.

For information on starting the engine using the KEYLESS-GO start/stop button, see "Starting with KEYLESS-GO\*" (▷ page 417).

## ▼ Seats

**Warning!**

All seat, head restraint adjustments, as well as fastening of seat belts, must be done before the vehicle is put into motion.

**Seat adjustment****Warning!**

Do not adjust the driver's seat while driving. Adjusting the seat while driving could cause the driver to lose control of the vehicle.

Never ride in a moving vehicle with the seat back in an excessively reclined position as this can be dangerous. You could slide under the seat belt in a collision. If you slide under it, the seat belt would apply force at the abdomen or neck. That could cause serious or fatal injuries. The seat backrest and seat belts provide the best restraint when the wearer is in a nearly upright position and seat belts are properly positioned on the body.

**Warning!**

Your seat must be adjusted so that you can correctly fasten your seat belt (▷ page 395).

Observe the following points:

- Adjust the backrest until your arms are slightly angled when holding the steering wheel.
- Adjust the seat to a comfortable seating position that still allows you to reach the accelerator/brake pedal safely. The position should be as far back as possible with the driver still able to operate the controls properly.
- Adjust the head restraint so that it is as close to the head as possible and the center of the head restraint supports the back of the head at eye level.
- Never place hands under the seat or near any moving parts while a seat is being adjusted.

Failure to do so could result in injury to persons.

**Warning!**

When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle.

Even with the SmartKey or SmartKey with KEYLESS-GO\* removed from the starter switch or the SmartKey with KEYLESS-GO\* removed from the vehicle, the power seats can be operated. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

## Controls in detail

### Seats

#### Warning!




According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating position. Thus, we strongly recommend that children be placed in the rear seats whenever possible. Regardless of seating position, children 12 years old and under must be seated and properly secured in an appropriately sized infant restraint, toddler restraint, or booster seat recommended for the size and weight of the child. For additional information, see "Children in the vehicle" (▷ page 58).

A child's risk of serious or fatal injuries is significantly increased if the child restraints are not properly secured in the vehicle and the child is not properly secured in the child restraint.

You can adjust the lumbar support, multi-contour seats\* for driver and front passenger, as well as drive-dynamic multicontour seats\* using COMAND (▷ page 282).

#### Front power seat adjustment

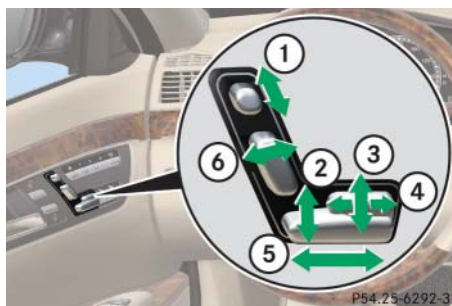

#### Example driver's door

- ① Head restraint height (▷ page 379)
- ② Seat height
- ③ Seat cushion tilt
- ④ Seat cushion depth
- ⑤ Seat fore and aft
- ⑥ Seat backrest tilt

**i** If PRE-SAFE® has been activated, the front passenger's seat and/or electrically adjustable rear seats\* will be moved to a more favorable seat position.

**i** The memory function (▷ page 392) lets you store the settings for the seat positions together with the settings for the steering wheel and the exterior rear view mirrors.

**!** When moving the seats, make sure there are no items in the footwell or behind the seats; otherwise, you could damage the seats.


- ▶ **Seat height:** Press the switch up or down in the direction of arrow ②.
- ▶ **Seat cushion tilt:** Press the switch up or down in the direction of arrow ③ until your upper legs are lightly supported.
- ▶ **Seat cushion depth:** Press the switch forward or backward in the direction of arrow ④ until your legs are supported comfortably.

- ▶ **Seat fore and aft:** Press the switch forward or backward in the direction of arrow ⑤.

**i** Depending on the set height of the head restraint, the seat fore and aft position is automatically pre-set.

- ▶ **Seat backrest tilt:** Press the switch forward or backward in the direction of arrow ⑥.

#### Rear power seat\* adjustment (rear outer seats)

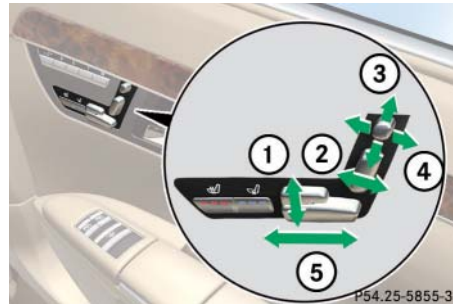

#### Example rear right door

- ① Seat cushion tilt
- ② Seat backrest tilt
- ③ Folding down and placing upright head restraint (▷ page 382)
- ④ Head restraint tilt (▷ page 382)
- ⑤ Seat fore and aft

**i** Depending on vehicle production date you have to switch on the ignition or open the respective door before adjusting the rear power seats.

- ▶ Adjust desired seat using seat switches ①, ② and ⑤.



## Controls in detail

### Seats

#### Adjusting front passenger seat from driver's seat/rear\*

##### Warning!



When adjusting the front passenger seat, make sure the seat, if occupied, is as far from the passenger front air bag as possible.

Otherwise, the passenger could be seriously or even fatally injured in the event of an accident or braking maneuver.

Make sure no one is caught or injured while the seat is being adjusted.

Even with the SmartKey or SmartKey with KEYLESS-GO\* removed from the starter switch or the SmartKey with KEYLESS-GO\* removed from the vehicle, the power seats can be operated. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

**!** Do not move the front passenger seat completely forward if objects are stored in the parcel net in the front passenger-side footwell. Items in the net may be damaged.

#### Adjusting front passenger seat from driver's seat\*

You can adjust the front passenger seat using the seat switches on the driver's side.



① Adjusting front passenger seat


► Press button ①.

When the indicator lamp on button ① is on, you can operate the following features of the front passenger seat:

- seat adjustment
- seat heating/ventilation\*
- memory function

#### Setting front passenger seat position from rear\*

The switch is located on the right rear passenger door.

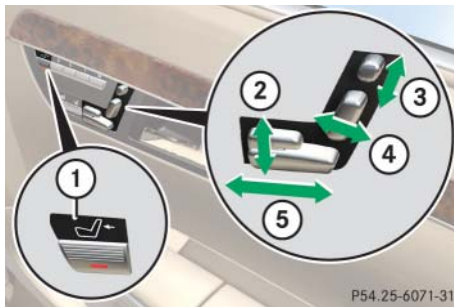

- ① To select front or rear passenger seat
- ② Seat height
- ③ Head restraint height (▷ page 379)
- ④ Backrest tilt
- ⑤ Seat fore and aft

- ▶ Press button ① to adjust the front passenger seat.  
The indicator lamp in button ① comes on.
- ▶ Adjust front passenger seat using seat switches ②, ③, ④ and ⑤.
- ▶ To adjust right rear passenger seat (▷ page 375), press button ① again.  
The indicator lamp in button ① goes out.

**i** *Adjusting the passenger seat position from the rear is not possible if you deactivate the override switch (▷ page 64).*

#### Seat heating

The buttons for seat heating are located on the respective door. The red indicator lamps on the button come on to show the heating level selected.

Level	
<b>3</b>	Three indicator lamps on (highest level)  The seat heating automatically switches to level <b>2</b> after approximately 5 minutes.
<b>2</b>	Two indicator lamps on  The seat heating automatically switches to level <b>1</b> after approximately 10 minutes.
<b>1</b>	One indicator lamp on (lowest level)  The seat heating automatically switches off after approximately 20 minutes.
<b>off</b>	No indicator lamp on

## Controls in detail

### Seats



#### Example illustration driver's door

- ① Seat heating button
- ▶ Switch on the ignition (▷ page 370).
- ▶ **Switching on:** Press button ① repeatedly until the desired heating level is set.  
One or more red indicator lamps on the button show the selected heating level.
- ▶ **Switching off:** Press button ① repeatedly until all indicator lamps go out.

**i** If one or more of the lamps on the seat heating button are flashing, there is insufficient voltage available since too many electrical consumers are turned on. The seat heating switches off automatically.

The seat heating will switch back on again automatically as soon as sufficient voltage is available.

#### Seat ventilation\*

The buttons for seat ventilation are located on the respective door. The blue indicator lamps on the button come on to show the ventilation level selected.

Level	
3	Three indicator lamps on (highest level)
2	Two indicator lamps on
1	One indicator lamp on (lowest level)
off	No indicator lamp on

**i** The seat ventilation for the driver's seat can be activated using summer opening feature (▷ page 412).



#### Example illustration driver's door

- ① Seat ventilation button
- ▶ Switch on the ignition (▷ page 370).
- ▶ **Switching on:** Press button ① repeatedly until the desired ventilation level is set.  
One or more blue indicator lamps on the button show the selected ventilation level.

- **Switching off:** Press button ① repeatedly until all indicator lamps go out.

**i** If one or more of the lamps on the seat ventilation button are flashing, there is insufficient voltage available since too many electrical consumers are turned on. The seat ventilation switches off automatically.

The seat ventilation will switch back on again automatically as soon as sufficient voltage is available.

### Head restraints

#### Warning!



For your protection, drive only with properly positioned head restraints.

Adjust the head restraint so that it is as close to the head as possible and the center of the head restraint supports the back of the head at eye level. This will reduce the potential for injury to the head and neck in the event of an accident or similar situation.

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

**i** Adjust the head restraint in such a way that it is as close to the head as possible.

### Front seat active head restraints

You cannot remove the active head restraint on the driver's and front passenger's seats.

For removal contact an authorized Mercedes-Benz Center.

For information on active head restraints, see "Active head restraints" (▷ page 56).

#### Head restraint height



① Head restraint height

- Press the switch up or down in the direction of arrow ①. ▷▷

## Controls in detail

### Seats

- ▷▷ **i** Depending on the seat's set fore and aft position, the head restraint height is automatically pre-set.

#### Head restraint adjusting




- ① Adjusting head restraint
- ▶ Push or pull on the upper edge of the head restraint cushion to the desired position.

#### Luxury head restraint\* adjusting

##### Warning!



When folding back the side cushions, never reach between the side cushion and the mounting post. You could otherwise be trapped.

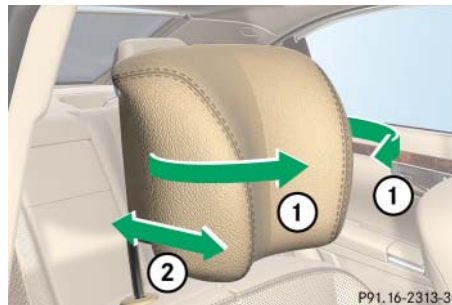

- ① Head restraint side cushions  
② Adjusting head restraint forward and backward

You can individually adjust side cushions ① of the luxury head restraints.

- ▶ **Adjusting side cushions:** Pull or push side cushions ① into desired position.
- ▶ **Adjusting forward or backward:** Pull or push head restraint in direction of arrow ②.

#### Rear head restraints

##### Warning!



For safety reasons, always drive with the rear head restraints in the upright position when the rear seats are occupied.

Otherwise, the back of the head will not be supported in the event of a collision. As a result, rear seat occupants could be injured.

##### Warning!



Keep the area around head restraints clear of articles (e.g. clothing) to not obstruct the folding operation of the head restraints.

#### **Folding head restraints back**

The rear seat head restraints and the rear seat power head restraints\* can be folded backward for increased visibility.



- ① Switch in the front center console
- ▶ Switch on the ignition (▷ page 370).
- ▶ Press switch ① in the front center console briefly.

The rear head restraints will fold backward.

#### **Placing head restraints upright**



- ▶ Pull the rear head restraint upright until it locks into position.

**!** Make sure the head restraints engage when placing them upright manually. Otherwise their protective function cannot be ensured.

#### **Placing power head restraints\* upright (rear outer seats)**

**i** When you fasten your seat belt in the rear, the respective rear outer seat head restraint places upright automatically.

- ▶ Switch on the ignition (▷ page 370).
- ▶ Press and hold switch ① in the front center console (▷ page 381).


The rear outer seats head restraints will place upright.

- ▶ Pull the rear center seat head restraint upright manually until it locks into position.

## Controls in detail

### Seats

#### Rear power head restraints\* (rear outer seats)

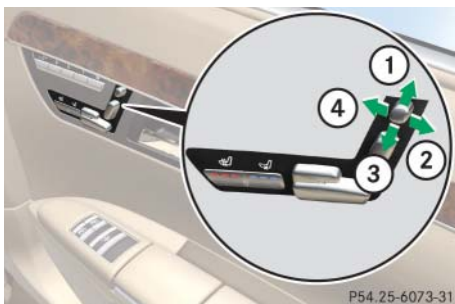

- ① Placing upright head restraint
- ② Head restraint tilt
- ③ Folding down head restraint
- ④ Head restraint tilt

**i** Depending on vehicle production date you have to switch on the ignition or open the respective door before adjusting the rear power head restraints.

- ▶ Press switch up in the direction of arrow ①.  
The rear outer seats power head restraint will place upright.


- ▶ Press switch down in the direction of arrow ③.  
The rear power head restraint will fold down.
- ▶ Press the switch forward or backward in the direction of arrow ② or ④.  
The power head restraint will be tilted.

#### Luxury head restraints\* (rear outer seats)

#### Warning!



When folding back the side cushions, never reach between the side cushion and the mounting post. You could otherwise be trapped.

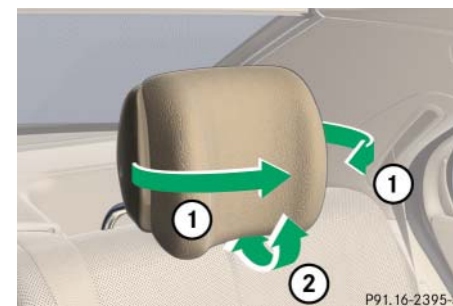

- ① Head restraint side cushions
- ② Head restraint height


**i** Depending on vehicle production date you have to switch on the ignition or open the respective door before adjusting the rear luxury head restraints.

You can individually adjust side cushions ① of the luxury head restraints:

- ▶ **Adjusting side cushions:** Pull or push side cushions ① into desired position.
- ▶ **Adjusting head restraint angle:** Push or pull on the lower edge of the head restraint cushion in the direction of arrow ②.

#### Multicontour seats\*, rear

You can adjust the rear outer multicontour seats using the buttons on the center console.

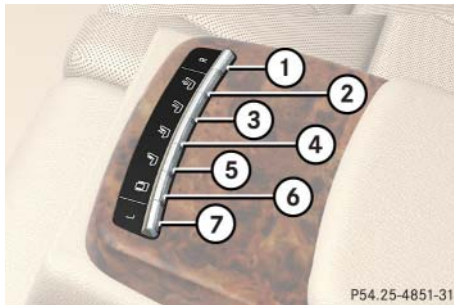

- ① To select right rear passenger seat
- ② Massage setting, gentle
- ③ Massage setting, vigorous
- ④ To adjust position of backrest curvature (lordosis)
- ⑤ Lumbar region support
- ⑥ Side bolster adjustment
- ⑦ To select left rear passenger seat

- ▶ Switch on the ignition.
- ▶ **Selecting a seat:** Press rocker switch ① or ⑦ forward or backward.  
The indicator lamp on the selected button lights up for a short while.

#### Gentle massage

- ▶ **Switching on:** Press rocker switch ② forward.
- ▶ **Switching off:** Pull rocker switch ② backward.

#### Vigorous massage

- ▶ **Switching on:** Press rocker switch ③ forward.
- ▶ **Switching off:** Pull rocker switch ③ backward.

#### Position of backrest curvature

- ▶ **Moving upward:** Press rocker switch ④ forward.
- ▶ **Moving downward:** Pull rocker switch ④ backward.

#### Lumbar region support

- ▶ **Selecting greater curvature:** Press rocker switch ⑤ forward.
- ▶ **Selecting less curvature:** Pull rocker switch ⑤ backward.

#### Side bolster adjustment

- ▶ **Reducing width:** Press rocker switch ⑥ forward.
- ▶ **Increasing width:** Pull rocker switch ⑥ backward.



## Controls in detail

### Seats

#### Easy-entry/exit feature

This feature allows for easier entry into and exit from the vehicle. When entering and exiting the vehicle, the driver's seat is in its maximum rearward position and the steering wheel is in its uppermost position.

The easy-entry/exit feature can be activated or deactivated in the "Vehicle" menu of the COMAND system (▷ page 268).

#### Warning!



You must make sure no one can become trapped or injured by the moving steering wheel and driver's seat when the easy-entry/exit feature is activated.

To stop seat/steering wheel movement, do one of the following:

- Press seat adjustment switch (▷ page 374).
- Move steering wheel adjustment stalk (▷ page 386).
- Press one of the memory position buttons or the memory button **M** (▷ page 393).

Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could open the driver's door and unintentionally activate the easy-entry/exit feature, which could result in an accident and/or serious personal injury.

**!** Do not activate the easy-entry/exit feature if the seat backrest is in an excessively reclined position. Doing so could cause damage to front or rear seats.

First move the seat backrest to an upright position.

With the easy-entry/exit feature activated, the steering wheel and driver's seat will return to their last set memory position or a factory-set maximum forward position when you:

- close the driver's door with the ignition switched on
- insert the SmartKey into the starter switch or press the KEYLESS-GO\* start/stop button (▷ page 372) once with the driver's door closed

**i** For safety reasons, the driver's seat will not return to its last set position with the easy-entry/exit feature activated if the system recognizes the last set position as an extreme forward position. Instead, the driver's seat will remain at or move to a factory-set maximum forward position. To again fully return the driver's seat to

your last set position or to memory position, adjust the seat to the desired position or press and hold the respective memory position button (▷ page 393).

**i** The last set driver's seat and steering wheel positions are stored when

- the ignition is switched off (▷ page 370)
- the position is stored in memory (▷ page 392)

With the easy-entry/exit feature activated the steering wheel tilts upwards and the driver's seat moves a few inches to the rear when you:

- remove the SmartKey from the starter switch,  
or
- open the driver's door with the SmartKey in starter switch position **0** or **1** or the KEYLESS-GO\* start/stop button (▷ page 372) in position **1**

**i** If the current position for the steering wheel is in the uppermost tilt position, the steering wheel will no longer be able to move upward when the easy-entry/exit feature is activated.

If the current seat position falls into a factory-set position range and the system recognizes the current seat position to be rearward enough for easy entry and exit, the driver's seat will not move to the rear when the easy-entry/exit feature is activated.

The adjustment procedure is briefly interrupted when the engine is started.

### Warning!



Let the system complete the adjustment procedure before setting the vehicle in motion. All driver's seat and steering wheel adjustments must be completed before setting the vehicle in motion. Driving off with the driver's seat/steering wheel still adjusting could cause the driver to lose control of the vehicle.

## Controls in detail

### Steering wheel

#### Warning!



Do not adjust the steering wheel while driving. Adjusting the steering wheel while driving could cause the driver to lose control of the vehicle.

When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle.


Even with the SmartKey or SmartKey with KEYLESS-GO\* removed from the starter switch or the SmartKey with KEYLESS-GO\* removed from the vehicle, the steering wheel adjustment feature can be operated. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

**i** The memory function (▷ page 392) lets you store settings for the steering wheel together with the settings for the seat position and the exterior rear view mirrors.

Make sure that

- you can reach the steering wheel with your arms slightly bent at the elbows
- you can move your legs freely
- all displays (including malfunction and indicator lamps) on the instrument cluster are clearly visible

#### Steering wheel adjustment

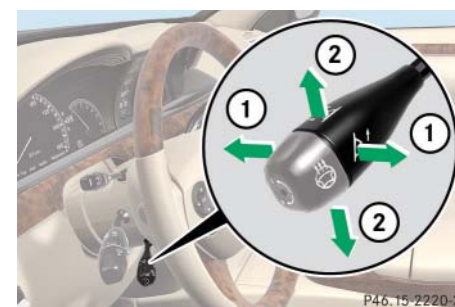


- ① Adjusting steering wheel, in or out
- ② Adjusting steering column, up or down

- ▶ **Adjusting steering wheel in or out:** Move stalk forward or back in the direction of arrow ① until a comfortable steering wheel position is reached with your arms slightly bent at the elbow.
- ▶ **Adjusting steering wheel up or down:** Move stalk up or down in the direction of arrow ②.

#### Heated steering wheel\*

The steering wheel heating warms up the leather area of the steering wheel.

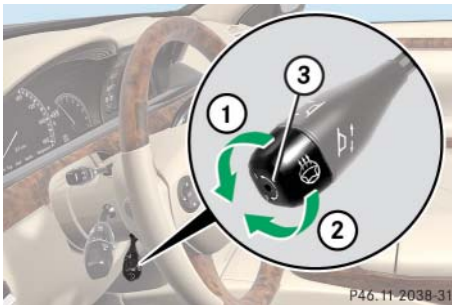

- ① Switching on
- ② Switching off
- ③ Indicator lamp

► Switch on the ignition (▷ page 370).

► **Switching on:** Turn switch at the tip of stalk in the direction of arrow ①.

The steering wheel is heated. Indicator lamp ③ comes on.

**i** The steering wheel heating will not switch on, when the temperature of the vehicle interior is above 86°F (30°C).

► **Switching off:** Turn switch at the tip of stalk in the direction of arrow ②.

The steering wheel heating is turned off. Indicator lamp ③ goes out.

**i** Indicator lamp ③ flashes or goes out

- in case of power surge or undervoltage
- in case of a steering wheel heating malfunction

**i** The steering wheel heating switches off automatically:

- when you remove the SmartKey from the starter switch
- on vehicles with KEYLESS-GO\*, when you switch off the ignition (▷ page 370) and open the driver's door
- when the temperature of the vehicle interior is above 86°F (30°C)
- after approximately 24 minutes

## Controls in detail

### Mirrors

Adjust the interior and exterior rear view mirrors before driving so that you have a good view of the road and traffic conditions.

#### Interior rear view mirror

- ▶ Manually adjust the interior rear view mirror.

For more information, see “Auto-dimming rear view mirrors” (▷ page 390).

#### Exterior rear view mirrors

##### Warning!



Exercise care when using the passenger side exterior rear view mirror. The mirror surface is convex (outwardly curved surface for a wider field of view). Objects in mirror are closer than they appear. Check your interior rear view mirror or glance over your shoulder before changing lanes.



- ① Selector switch for right or left exterior mirror
- ② Adjustment button

- ▶ Switch on the ignition (▷ page 370).
- ▶ Press button ① repeatedly until desired exterior mirror is selected.

The left or right indicator lamp in button ① comes on.

- ▶ Push adjustment button ② up, down, left, or right according to the desired setting.

**i** When you press button ① for the first time, the exterior mirror on the driver's side is always selected.

If you do not make adjustments to the selected exterior rear view mirror within 15 seconds, the indicator lamp goes out. You will then have to select the desired exterior rear view mirror again before any adjustments can be made. Adjustments can only be made with the indicator lamp for the respective exterior rear view mirror button illuminated.

**i** At low ambient temperatures, the exterior rear view mirrors will be heated automatically.

**i** The memory function (▷ page 392) lets you store the setting for the exterior rear view mirrors together with the setting for the steering wheel and the seat positions.

#### Power folding exterior rear view mirrors

**!** Before driving the vehicle through an automatic car wash, fold the exterior mirrors in. Otherwise they may get damaged.

#### Folding exterior rear view mirrors in and out automatically

When the corresponding function in the COMAND system is activated (▷ page 266):

- The exterior rear view mirrors automatically fold in as soon as the vehicle is locked from the outside.
- The exterior rear view mirrors automatically fold out as soon as the vehicle is unlocked and the driver's or front passenger door are subsequently opened.

**i** If you are driving at more than approximately 9 mph (15 km/h), you will not be able to fold the exterior mirrors in.

#### Folding exterior rear view mirrors in and out manually

**i** The mirrors do not fold out if they were previously folded in manually. Please make sure both mirrors are folded out before driving off.

The exterior rear view mirrors can vibrate if they are not folded out completely.



- ① Folds the exterior mirrors in and out
- ▶ Switch on the ignition (▷ page 370).
- ▶ **Folding in:** Press button ①.
- ▶ **Folding out:** Press button ① again.

**!** If an exterior rear view mirror housing has been forcibly pushed forward (hit from the rear), reposition it manually by applying firm pressure until it snaps back into place.

If an exterior rear view mirror housing has been forcibly pushed rearward (hit from the front), press button ① to fold mirrors in, then press button ① again to fold mirrors out. Do not force mirrors by hand as this may damage the adjustment mechanism.

The mirror housing is then properly positioned and you can adjust the mirror in the usual manner.

## Controls in detail

### Mirrors

#### Auto-dimming rear view mirrors

The reflection brightness of the exterior rear view mirror on the driver's side and the interior rear view mirror will respond automatically to glare when

- the ignition is switched on (▷ page 370) and
- incoming light from headlamps falls on the sensor in the interior rear view mirror

The interior rear view mirror will not react if

- reverse gear **R** is engaged
- the interior lighting is turned on

#### Warning!



The auto-dimming function does not react if incoming light is not aimed directly at the sensors in the interior rear view mirror.

The interior rear view mirror and the exterior rear view mirror on the driver's side do not react, for example, if the rear window sunshade is in raised position.

Light hitting the mirror(s) at certain angles (incident light) could blind you. As a result, you may not be able to observe traffic conditions and could cause an accident.

#### Warning!



Exercise care when using the passenger-side exterior rear view mirror. The mirror surface is convex (outwardly curved surface for a wider field of view). Objects in mirror are closer than they appear. Check your inside rear view mirror or glance over your shoulder before changing lanes.

#### Activating exterior rear view mirror parking position

Follow these steps to activate the mirror parking position so that the passenger-side exterior rear view mirror will be turned downward to the stored position.

- ▶ Make sure you have stored a parking position for the passenger-side exterior rear view mirror (▷ page 394).
- ▶ Make sure the “Lower mirror when reversing” function in the “Exterior Mirror Convenience Settings” submenu of the COMAND system is selected (▷ page 266).
- ▶ Switch on the ignition (▷ page 370).



- ① Selector switch for right or left exterior mirror
- ▶ Press switch ① repeatedly until the exterior mirror on the front passenger side is selected.
- i** With the automatic transmission in reverse gear **R**, the previously selected exterior rear view mirror is activated.

- ▶ Shift the automatic transmission in reverse gear **R**.

The passenger-side exterior rear view mirror will be turned downward to the stored position.

The exterior rear view mirror returns to its previously stored driving position:

- when you switch off the ignition
- 10 seconds after you have put the automatic transmission out of reverse gear **R**
- immediately once your vehicle exceeds a speed of approximately 6 mph (10 km/h)
- immediately when you press button ① for driver’s side exterior rear view mirror.

**i** If you adjust the exterior mirrors while they are in the parking position, the new mirror position is stored as a new parking position.



## Controls in detail

### Memory function

Prior to operating the vehicle, the driver should check and adjust the seat height, seat position fore and aft, and seat backrest angle if necessary, to ensure adequate control, reach, and comfort. The head restraint should also be adjusted for proper height. See also the section on air bags (▷ page 42) for proper seat positioning.

In addition, adjust the steering wheel to ensure adequate control, reach, operation and comfort. Both the interior and exterior rear view mirrors should be adjusted for adequate rear vision.

Fasten seat belts. Infants and small children should be seated in a properly secured restraint system that complies with U.S. Federal Motor Vehicle Safety Standards 213 and 225 and Canadian Motor Vehicle Safety Standards 213 and 210.2.

With the memory function you can store up to three different configurations.

Each stored position on the driver's side includes the following settings:

- Driver's seat: head restraint height, seat and backrest position, backrest curvature in lumbar area
- Multicontour seat\*: sides of backrest, backrest curvature in lumbar and shoulder area
- Drive-dynamic multicontour seat\*: activation/deactivation
- Steering wheel position
- Exterior rear view mirrors position

#### Warning!



Do not activate the memory function while driving. Activating the memory function while driving could cause the driver to lose control of the vehicle.

#### Warning!



When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle.

Even with the SmartKey or SmartKey with KEYLESS-GO\* removed from the starter switch or the SmartKey with KEYLESS-GO\* removed from the vehicle, the power seats can be operated. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

## Controls in detail

### Memory function

Each stored position on the passenger side includes the following settings:

- Seat position and lumbar support
- Multicontour seat\*: previously saved setting
- Drive-dynamic multicontour seat\*: activation/deactivation

Each stored position in the rear passenger compartment includes the following settings (Canada only):

- Seat position
- Multicontour seat\*: previously saved setting



**M** Memory button

**1 2 3** Memory position buttons

#### Storing positions into memory

- ▶ Adjust the seat (▷ page 373) to the desired position.
- ▶ On the driver's side: Adjust the steering wheel (▷ page 386) and the exterior rear view mirrors (▷ page 388) to the desired position.
- ▶ Press memory button **M**.

- ▶ Release memory button **M** and press one of the memory position buttons within 3 seconds.

All the settings are stored with the selected position.

#### Recalling positions from memory

**!** Do not operate the power seats using the memory button if the seat backrest is in an excessively reclined position. Doing so could cause damage to front or rear seats.

*First move seat backrest to an upright position.*

- ▶ Press and hold one of the position buttons until the seat, steering wheel and exterior rear view mirrors have fully moved to the stored positions.

**i** Releasing the button immediately stops movement to the stored positions.

*The multicontour seat\* and/or lumbar support will continue to be adjusted.*

## Controls in detail

### Memory function

#### Storing exterior rear view mirror parking position

For easier parking, you can adjust the passenger-side exterior rear view mirror so that you can see the right rear wheel as soon as you engage reverse gear **R**.

For information on activating the parking position, see “Activating exterior rear view mirror parking position” (▷ page 391).



- ① Memory button **M**
- ② Adjustment button
- ③ Selector switch for right or left exterior mirror

- ▶ Stop the vehicle.
- ▶ Make sure the ignition is switched on (▷ page 370).
- ▶ Press switch ③ until the exterior mirror on the front passenger side is selected.
- ▶ Adjust the passenger-side exterior rear view mirror with button ② so that you see the rear wheel and the road curb.
- ▶ Press memory button **M**.
- ▶ Within 3 seconds, press one of the adjustment buttons ②.

The parking position is stored if the mirror does not move.

**i** If the mirror does move, repeat the above steps. After the setting is stored, you can move the mirror again.

#### ▼ Fastening the seat belts

##### Warning!



Always fasten your seat belt before driving off. Always make sure all of your passengers are properly restrained.

Failure to wear and properly fasten and position your seat belt greatly increases your risk of injuries and their likely severity in an accident. You and your passengers should always wear seat belts.

If you are ever in an accident, your injuries can be considerably more severe without your seat belt properly buckled. Without your seat belt buckled, you are much more likely to hit the interior of the vehicle or be ejected from it. You can be seriously injured or killed.

In the same crash, the possibility of injury or death is lessened if you are wearing your seat belt. The air bags can only provide the protection they were designed to afford if the occupants are using their seat belts (> page 42).

##### Warning!



According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating position. Thus, we strongly recommend that children be placed in the rear seats whenever possible. Regardless of seating position, children 12 years old and under must be seated and properly secured in an appropriately sized infant restraint, toddler restraint, or booster seat recommended for the size and weight of the child. For additional information, see “Children in the vehicle” (> page 58).

A child’s risk of serious or fatal injuries is significantly increased if the child restraints are not properly secured in the vehicle and the child is not properly secured in the child restraint.

##### Warning!



Never let more people ride in the vehicle than there are seat belts available. Be sure everyone riding in the vehicle is correctly restrained with a separate seat belt. Never use a seat belt for more than one person at a time.

##### Warning!



Never ride in a moving vehicle with the seat backrest in an excessively reclined position as this can be dangerous. You could slide under the seat belt in a collision. If you slide under it, the seat belt would apply force at the abdomen or neck. That could cause serious or even fatal injuries. The seat backrest and seat belt provide the best restraint when the wearer is in a nearly upright position and the seat belt is properly positioned on the body.

## Controls in detail

### Fastening the seat belts

#### Warning!



Read and observe the additional warning notices printed in the “Safety and Security” section (▷ page 40).



- ① Seat belt outlet
- ② Latch plate
- ③ Buckle
- ④ Release button

- ▶ Pull the seat belt smoothly from the seat belt outlet ①.
- ▶ Place the shoulder portion of the seat belt across the top of your shoulder and the lap portion across your hips.
- ▶ Push latch plate ② into buckle ③ until it clicks.
- ▶ If necessary, adjust the seat belt to the correct height (▷ page 398) (depending on vehicle production date).
- ▶ If necessary, tighten the lap portion to a snug fit by pulling shoulder portion up.
- ▶ To release the seat belt, press release button ④ and guide latch plate back to seat belt outlet.

#### Proper use of seat belts

- Do not twist the seat belt when fastening.
- Adjust seat belt so that the shoulder portion is located as close as possible to the middle of the shoulder (it should not touch the neck). Never pass the shoulder portion of the seat belt under your arm.
- Position the lap belt as low as possible on your hips (over hip joint) and not across the abdomen.
- Place the seat backrest in a nearly upright position.
- Never use a seat belt for more than one person at a time.
- Do not fasten a seat belt around a person and another object at the same time. When using a seat belt to secure infant restraints or toddler restraints or children in booster seats, always follow the child seat manufacturer's instructions.

- Check your seat belt during travel to make sure that it is properly positioned.
- Make sure the seat belt is always fitted snugly. Take special care of this when wearing loose clothing.

#### Warning!



Do not pass seat belts over sharp edges. They could tear.

Do not allow the seat belt to get caught in the door or in the seat adjustment mechanism. This could damage the seat belt.

Never attempt to make modifications to seat belts. This could impair the effectiveness of the seat belts.

Do not bleach or dye seat belts as this may severely weaken them. In a crash, they may not be able to provide adequate protection.

Damaged seat belts or seat belts that were highly stressed in an accident must be replaced. Contact an authorized Mercedes-Benz Center.

For more information, see "Seat belts" (▷ page 52).

#### Seat belt height adjustment automatically


Depending on production date, your vehicle automatically adjusts the seat belt height for the driver's and passenger's seat as well as for the rear outer seats. Comply with the instructions on how to properly fasten a seat belt (▷ page 395).

## Controls in detail

### Fastening the seat belts

#### Seat belt height adjustment manually

Depending on vehicle production date, you can adjust the height of the seat belt for the driver's and front passenger seat. The seat belts for the rear outer seats are adjusted automatically.

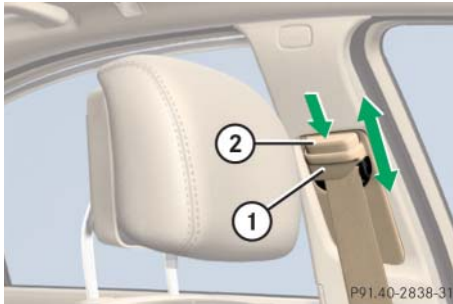

- ① Seat belt height adjuster
- ② Release button

- ▶ **Raising:** Slide the seat belt height adjuster ① upward.  
The seat belt height adjuster ① engages in different positions.
- ▶ **Lowering:** Press and hold release button ②.
- ▶ Slide the seat belt height adjuster ① downward.
- ▶ Release button and make sure the seat belt height adjuster ① engages into place.

▼ Lighting

**i** If you drive in countries where vehicles drive on the other side of the road than the country in which the vehicle is registered, you must have the headlamps modified for symmetrical low beams. Relevant information can be obtained at any authorized Mercedes-Benz Center.

**i** The active Bi-Xenon headlamps monitor your steering angle and driving speed, then automatically shift their beams to either side to better follow the curvature of the road ahead, increasing usable illumination over conventional headlamps.

**Exterior lamp switch**

The exterior lamp switch is located on the dashboard to the left of the steering wheel.



- 1 **P←** Standing lamps, left (turn left two stops)
- 2 **P←→** Standing lamps, right (turn left one stop)
- 3 **0** Off  
Daytime running lamp mode (▷ page 401)
- 4 **A** Automatic headlamp mode  
Daytime running lamp mode (▷ page 401)

- 5 **☰☑** Parking lamps (also tail lamps, license plate lamps, side marker lamps, instrument panel lamps)
- 6 **☰☑** Low beam headlamps or high beam headlamps
- 7 **☑** Front fog lamps
- 8 **☑** Rear fog lamp

**i** If you hear a warning signal you have forgotten to switch off the low beam headlamps or the parking lamps before opening the driver's door.

In addition the message "Please Switch Off Lights" appears in the multifunction display.

Switch off the low beam headlamps or the parking lamps.

If the message "Turn Lights Off or Remove Key" appears in the multifunction display remove the SmartKey from the starter switch or switch off the automatic headlamp mode.

**!** Failure to switch off the exterior lamps when leaving the vehicle may result in a discharged battery.




## Controls in detail

### Lighting

#### Low beam headlamps

The low beam headlamps can be switched on and off with the exterior lamp switch using the manual headlamp mode.

- ▶ **Switching on:** Turn the exterior lamp switch to position .

The following lamps switch on:

- Low beam headlamps
- Tail and parking lamps
- License plate lamps
- Side marker lamps

#### Automatic headlamp mode


The following lamps switch on and off automatically depending on the brightness of the ambient light:



- Low beam headlamps
- Tail and parking lamps
- License plate lamps
- Side marker lamps

#### Warning!



If the exterior lamp switch is set to **A**, the headlamps will not be automatically switched on under foggy conditions.

To minimize risk to you and to others, activate headlamps by turning exterior lamp switch to  when driving or when traffic and/or ambient lighting conditions require you to do so.

In low ambient lighting conditions, only switch from position **A** to  with the vehicle at a standstill in a safe location. Switching from **A** to  will briefly switch off the headlamps. Doing so while driving in low ambient lighting conditions may result in an accident.

The automatic headlamp feature is only an aid to the driver. The driver is responsible for the operation of the vehicle's lights at all times.

- ▶ Turn the exterior lamp switch to position **A**.

With the SmartKey in starter switch position **1** or the KEYLESS-GO\* start/stop button pressed once, the tail and parking lamps, the license plate lamps and the side marker lamps will switch on and off depending on the brightness of the ambient light.

When the engine is running the low beam headlamps, the tail and parking lamps, the license plate lamps and the side marker lamps will switch on and off depending on the brightness of the ambient light.

**i** *Canada only:*  
High beam headlamps are only available with the exterior lamp switch in position **D**.

#### Daytime running lamp mode

In Canada the daytime running lamp mode is mandatory and therefore in a constant mode.

By default, the daytime running lamp mode is deactivated. Activate the daytime running lamp mode using the control system, see "Setting daytime running lamp mode (USA only)" (▷ page 306).

- ▶ Turn exterior lamp switch to position **0** or **A**.

When the engine is running, the low beam headlamps are switched on.

In low ambient light conditions, the following lamps will switch on additionally:

- Tail and parking lamps
- License plate lamps
- Side marker lamps

**i** *With the daytime running lamp mode activated and the engine running, the low beam headlamps cannot be switched off manually.*

#### Canada only

**i** *With the exterior lamp switch in position **0** or **A**, you cannot switch on the high beam headlamps.*

*The high beam flasher is available at all times.*

*For nighttime driving you should turn the exterior lamp switch to position **D** to permit activation of the high beam headlamps.*

When the engine is running, and you shift from a driving position to neutral position **N** or park position **P**, with the vehicle at a standstill the low beam headlamps will switch off with a delay of 3 minutes.

When the engine is running, and you

- turn the exterior lamp switch to position **000**, the low beam headlamps, the tail and parking lamps, the license plate lamps and the side marker lamps switch on.
- turn the exterior lamp switch to position **D**, the manual headlamp mode has priority over the daytime running lamp mode.

## Controls in detail


### Lighting

 

The corresponding exterior lamps switch on (▷ page 399).

#### USA only

**i** With the daytime running lamp mode activated and the exterior lamp switch in position **0**, you cannot switch on the high beam headlamps.

The high beam flasher is available at all times.

For nighttime driving you should turn the exterior lamp switch to position  or **A** to permit activation of the high beam headlamps.

When the engine is running, and you turn the exterior lamp switch to position  or , the manual headlamp mode has priority over the daytime running lamp mode.

The corresponding exterior lamps switch on (▷ page 399).



#### Locator lighting and night security illumination

The locator lighting and night security illumination are described in the COMAND vehicle section under “Setting locator lighting” (▷ page 265) and “Setting night security illumination” (▷ page 264).


#### Fog lamps

##### Warning!

 



In low ambient lighting or foggy conditions, only switch from position **A** to  with the vehicle at a standstill in a safe location. Switching from **A** to  will briefly switch off the headlamps. Doing so while driving in low ambient lighting conditions may result in an accident.


**i** Fog lamps will operate with the parking lamps and/or the low beam headlamps on. Fog lamps should only be used in conjunction with low beam headlamps. Consult your State or Province Motor Vehicle Regulations regarding permissible lamp operation.

**i** Fog lamps cannot be switched on manually with exterior lamp switch in position **A**. To activate the fog lamps, turn exterior lamp switch to position  first.

#### Front fog lamps


- ▶ Turn the exterior lamp switch to position  or  (▷ page 399).
- ▶ Pull out exterior lamp switch to first stop.

The front fog lamps are switched on.


The green indicator lamp  in the exterior lamp switch comes on (▷ page 399).

- ▶ Push in the exterior lamp switch.


The front fog lamps are switched off.

The green indicator lamp  in the exterior lamp switch goes out.

#### Rear fog lamp (driver's side only)


- ▶ Turn the exterior lamp switch to position  (▷ page 399).
- ▶ Pull out exterior lamp switch to second stop.

The front fog lamps and the rear fog lamp switch on.

The yellow indicator lamp  in the exterior lamp switch comes on (▷ page 399).

- ▶ Push in the exterior lamp switch to first stop.

The rear fog lamp switches off.

The yellow indicator lamp  in the exterior lamp switch goes out.


The front fog lamps remain lit.

#### High beam




#### Combination switch

- ① High beam
- ② High beam flasher

- ▶ **High beam headlamps:** Turn the exterior lamp switch to position  (▷ page 399).

- ▶ Push the combination switch in the direction of arrow ①.

The high beam indicator  in the instrument cluster comes on (▷ page 28).

- ▶ **High beam flasher:** Pull the combination switch briefly in the direction of arrow ②.

#### Headlamp cleaning system

With the engine running the headlamps will automatically be cleaned with a high-pressure water jet when you have

- switched on the headlamps and
- the windshield wipers have wiped the windshield with washer fluid five times

When you switch off the ignition the counter resets.

For information on filling up the washer reservoir, see “Windshield washer system and headlamp cleaning system” (▷ page 580).


## Controls in detail

### Lighting

#### Corner-illuminating lamps

The corner-illuminating lamps improve illumination of the area in the direction into which you are turning.

The corner-illuminating lamps will operate with the engine running and with:

- the exterior lamp switch in position  or **A** (▷ page 399) or
- the daytime running lamp mode activated (▷ page 401).

**i** The corner-illuminating lamps will only come on in low ambient lighting conditions.

**i** If you are driving faster than 43 mph (70 km/h), the corner-illuminating function is not available.

#### Switching on corner-illuminating lamps

▶ Switch on the left or right turn signal (▷ page 399), depending on whether you are turning left or right.

or

▶ Turn steering wheel in desired direction.

The corner-illuminating lamp on the side of your steering direction comes on.

**i** If you have switched on the turn signal for one side but turn the steering wheel in the other direction, the corner-illuminating lamp lights up on the side of the turn signal.

**i** The corner-illuminating lamps temporarily come on on both sides of the vehicle if you turn the steering wheel in one direction and then in the other direction shortly thereafter.

**i** The corner-illuminating lamps will come on automatically depending on the steering angle, even if you did not switch on either turn signal. If the corner-illuminating lamps came on automatically, they will also go out automatically depending on the steering angle.

**i** When you shift the automatic transmission in reverse gear **R**, the corner-illuminating lamp opposite to your steering direction comes on. The turn signal has no influence on the corner-illuminating lamp on the outside of the curve.

#### Switching off the corner-illuminating lamps

The combination switch for the turn signal resets automatically after major steering wheel movements. This will switch off the corner-illuminating lamps if they were activated by switching on the left or right turn signal.

If the turn signal should stay on after making the turn, the turn signal and corner-illuminating lamp can be switched off by returning the combination switch to its original position.

**i** If you are driving faster than 25 mph (40 km/h) when activating the turn signal indicator, the corner-illuminating lamp function is switched off.

**i** The corner-illuminating lamp may remain lit for a short time. The corner-illuminating lamp lights up for no more than 20 seconds with the vehicle standing still. It is then switched off even if the turn signal is still switched on or you have turned the steering wheel to full lock.

#### Hazard warning flasher

The hazard warning flasher can be switched on at all times, even with the SmartKey removed from the starter switch or with the SmartKey with KEYLESS-GO\* removed from the vehicle.

The hazard warning flasher is automatically switched on if

- an air bag has been triggered
- S 600 and S 65 AMG, USA only: you brake the vehicle strongly at a speed of more than 50 mph (70 km/h) and bring it to a complete stop



① Hazard warning flasher switch

- ▶ **Switching on:** Press hazard warning flasher switch.

All turn signals will flash.

**i** With the hazard warning flasher activated and the combination switch set for either left or right turn, only the respective left or right turn signals will operate when the SmartKey in the starter switch is in position 1 or 2 or the KEYLESS-GO\* start/stop button (▷ page 372) is pressed once or twice.

- ▶ **Switching off:** Press hazard warning flasher switch again.

**i** If the hazard warning flasher was activated automatically, also press hazard warning flasher switch ① to switch off the hazard warning flasher.

## Controls in detail

### Lighting


#### Interior lighting

**i** Even with the SmartKey being removed from the starter switch you can still use the lighting for the storage compartment, glove box and vanity mirrors, when you open a door or press one of the interior lighting buttons. If a lamp is switched on and you do not lock the vehicle, it will be switched off automatically after 30 minutes.

When you lock the vehicle from the outside, the interior lighting is switched off.

#### Interior lighting in the front

The controls are located in the overhead control panel.

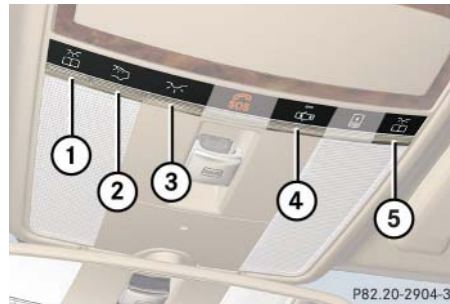

- ① Left reading lamp on/off
- ② Rear interior lamps on/off
- ③ Front interior lighting on/off
- ④ Interior lighting control
- ⑤ Right reading lamp on/off

#### Automatic control

**i** The interior lighting is factory-set to automatic mode.

- ▶ **Deactivating:** Press button ④.

The OFF indicator lamp next to the button comes on.

The interior lighting remains switched off in darkness, even when you:

- unlock the vehicle
- remove the SmartKey from the starter switch
- open a door

- ▶ **Activating:** Press button ④.

The interior lighting switches on in darkness, when you:

- unlock the vehicle
- remove the SmartKey from the starter switch
- open a door

The interior lighting switches off automatically following an adjustable time delay (▷ page 270).

**i** If the door remains open, the interior lighting switches off automatically after approximately 5 minutes.


#### Manual control

- ▶ **Switching on/off front interior lighting:** Press button ③.
- ▶ **Switching on/off rear interior lighting:** Press button ②.

The front reading lamps reading lamps are located in the lower edge of the interior rear view mirror.

- ▶ **Switching on/off front reading lamps:** Press button ① or ⑤.
- ▶ **Ambient lighting:** The brightness of the ambient lighting is adjusted via COMAND (▷ page 269).

#### Interior lighting in the rear

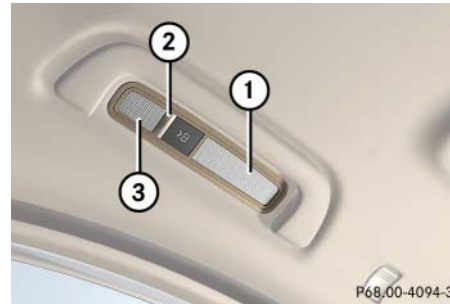

- ① Rear interior lamp
- ② Button
- ③ Reading lamp

- ▶ Press button ②.

You can switch the lamps on/off in succession as follows:

- reading lamp ③ and rear interior lamp ① on
- only reading lamp ③ on
- reading lamp ③ off

#### Door entry lamps

For better orientation in the dark, the corresponding door entry lamps will switch on in darkness when you open a door and the automatic control is activated.

The door entry lamps switch off when the corresponding door is closed.

**i** If you turn the SmartKey in the starter switch to position 0 and switch off the exterior headlamps, the door entry lamps will remain lit for approximately 5 minutes.

#### Trunk lamp


The trunk lamp switches on if the trunk is opened.

If the trunk remains open, the trunk lighting switches off automatically after approximately 10 minutes.



## Controls in detail

### Windshield wipers

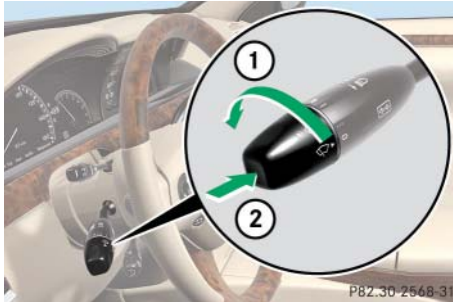

#### Combination switch

- ① Switching on windshield wipers
- ② Single wipe  
Wiping with windshield washer fluid

**!** If the windshield wipers leave smears on the windshield after the car has been driven through an automatic car wash, then wax or other residue is on the windshield. Shortly after washing the car in an automatic car wash, clean the windshield with windshield washer fluid (▷ page 409).

**!** Do not operate the windshield wipers when the windshield is dry. Dust that accumulates on a windshield might scratch the glass and/or damage the wiper blades when wiping occurs on a dry windshield. If it is necessary to operate the windshield wipers in dry weather conditions, always operate the windshield wipers with windshield washer fluid (▷ page 409).

**!** If anything blocks the windshield wipers (leaves, snow, etc.), switch them off immediately.

- For safety reasons, stop the vehicle in a safe location and,
  - remove SmartKey from starter switchor
  - turn off the engine by pressing the KEYLESS-GO\* start/stop button (▷ page 372) and open the driver's door (with the driver's door open, starter switch is in position 0, same as with SmartKey removed from starter switch) before attempting to remove any blockage.
    - Remove blockage.
    - Turn the windshield wipers on again.

If the windshield wipers fail to function at all in the combination switch position **...** or **....**,

- set the combination switch to the next higher wiper speed
  - have the windshield wipers checked at the nearest authorized Mercedes-Benz Center
- ▶ Switch on the ignition (▷ page 370).

#### Switching on/off windshield wipers

- ▶ Turn the combination switch to the desired position depending on the intensity of the rain.

- 0** Windshield wipers off
- ...** Slow intermittent wiping (rain sensor operation with low sensitivity)
- ....** Fast intermittent wiping (rain sensor operation with high sensitivity)
- Slow continuous wiping
- ≡** Fast continuous wiping

**i** When the windshield wipers are switched on and you brake the vehicle to a stop, the wipers operate more slowly.

#### Intermittent wiping

Only switch on intermittent wiping under wet weather conditions or in the presence of precipitation.

**!** Do not leave windshield wipers on an intermittent setting when the vehicle is taken to an automatic car wash or during windshield cleaning. Wipers will operate in the presence of water sprayed on the windshield, and windshield wipers may be damaged as a result.

**!** If you have set intermittent wiping, dirt on the surface of the rain sensor or optical effects may cause the windshield wipers to wipe in an undesired fashion. This could then damage the windshield wiper blades or scratch the windows. You should therefore switch off the windshield wipers when weather conditions are dry.

- ▶ Turn the combination switch to position **...** or **....**.

The wipers move across the windshield. Afterward, the wiping intervals are determined by the wetness of the windshield.

After the initial wipe, pauses between wipes are automatically controlled by the rain sensor.

**i** Intermittent wiping is interrupted when the vehicle is at a standstill and a front door is opened. This protects persons getting into or out of the vehicle from being sprayed.

Intermittent wiping will be continued when

- all doors are closed  
and
- the automatic transmission is set to drive position **D** or reverse gear **R**  
or
- the wiper setting is changed using the combination switch

#### Single wipe

- ▶ Press the combination switch briefly in the direction of arrow ② (▷ page 408) to the resistance point.

The windshield wipers wipe one time without washer fluid.

#### Wiping with windshield washer fluid

- ▶ Press the combination switch in the direction of arrow ② (▷ page 408) past the resistance point.

The windshield wiper operates with washer fluid.

**i** To prevent smears on the windshield or noisy/chattering wiper blades, wipe with windshield washer fluid every now and then even when it is raining.

For information on filling up the washer reservoir, see “Windshield washer system and headlamp cleaning system” (▷ page 580).


## Controls in detail

### Power windows

#### Opening and closing power windows

The door windows are opened and closed electrically. The switches

- for all door windows are on the driver's door
- for the front passenger side window are on the front passenger door
- for each rear side window are on the rear doors

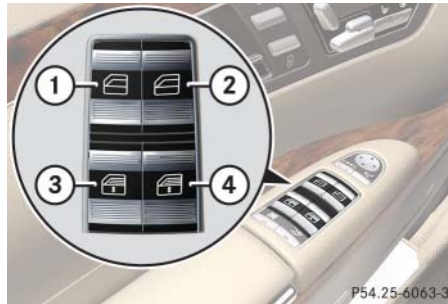

- ① Left front door window
- ② Right front door window
- ③ Left rear door window
- ④ Right rear door window

#### Warning!



Do not keep any part of your body up against the side window pane when opening a window. The downward motion of the pane may pull that part of your body down between the window pane and the door frame and trap it there. If there is a risk of entrapment, release the switch and press it again to close the window.

#### Warning!





When closing the windows, make sure that there is no danger of anyone being harmed by the closing procedure.

Activate the override switch (▷ page 64) when children are riding in the back seats of the vehicle. The children may otherwise injure themselves, e.g. by becoming trapped in the window opening.


The closing of the door windows can be immediately halted by releasing the switch or, if the switch was pressed past the resistance point and released, by pressing the lower part of the respective switch again.

The door windows are equipped with the express-close and automatic reversal function. If the window encounters an obstruction that blocks its path in a circumstance where you pressed the switch past the resistance point and released it to close the window, the automatic reversal function will stop the window and open it slightly.

If the window encounters an obstruction that blocks its path in a circumstance where you are closing the window by pressing and holding the switch, by pressing and holding button  on the SmartKey or SmartKey with KEYLESS-GO\*, by pressing and holding the sensor surface (vehicles with KEYLESS-GO\*) on an outside door handle, or by pressing and holding button  on the climate control panel, the automatic reversal function will not operate.

When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

**i** You can also open or close the windows using the SmartKey, see "Summer opening feature" (▷ page 412) and "Convenience closing feature" (▷ page 413).

*Depending on current position, the windows may also open or close when the air recirculation button  (▷ page 501) is pressed and held for 2 seconds.*

**i** Operating the windows from the rear is not possible if you activate the override switch (▷ page 64).

**i** If PRE-SAFE® has been activated, the door windows close automatically until only a small gap remains.

**i** With the SmartKey in starter switch position **0** or removed from the starter switch, the power windows can be operated:

- until you open the driver's or front passenger door
  - for at least 5 minutes if no door was opened
- ▶ Switch on the ignition (▷ page 370).

▶ **Opening:** Press the lower part of switch ① to ④ (▷ page 410) to the resistance point.

The corresponding window will move downwards until you release the switch.

▶ **Closing:** Press the upper part of switch ① to ④ (▷ page 410) to the resistance point.

The corresponding window will move upwards until you release the switch.

#### Warning!



If you press and hold the switch up when closing the window, and upward movement of the window is blocked by some obstruction including but not limited to arms, hands, fingers, etc., the automatic reversal will not operate.



## Controls in detail

### Power windows

- ▷▷▶ **Express-opening:** Press the lower part of switch ① to ④ (▷ page 410) past the resistance point and release.

The corresponding window opens completely.

- ▶ **Express-closing:** Press the upper part of switch ① to ④ (▷ page 410) past the resistance point and release.

The corresponding window closes completely.

#### Warning!



Driver's door only:

If within 5 seconds you again press the switch past the resistance point and release, the automatic reversal will not operate.

**!** *If the upward movement of the window is blocked during the closing procedure, the window will stop and open slightly. Remove the obstruction, press the respective power window switch at the upper part again past the resistance point and release. If the window still does not close when there is no obstruction, press and hold the respective power window switch at the upper part. The side window will then close without the obstruction sensor function.*

- ▶ **Stopping during Express-operation:** Briefly press the respective power window switch again.

#### Rear side window sunshades\*

- ▶ **Closing:** With the side window fully closed, press the upper part of switch ③ or ④ (▷ page 410).

The rear side window sunshade will be fully closed.

**i** *The rear side window sunshade cannot be partially closed.*

- ▶ **Opening:** Press the lower part of switch ③ or ④ (▷ page 410).

The rear side window sunshade will be fully opened.

**i** *The switches on the rear doors can also be used to close the rear side window sunshades on the other side of the vehicle.*

**i** *The switches on the driver's door take precedence over the rocker switches on the other doors.*

#### Summer opening feature

If the weather is warm, you can ventilate the vehicle before driving off by simultaneously:

- opening the door windows and rear side window sunshades\*
- opening the tilt/sliding sunroof or tilt/sliding panel\* and extending the roller sunblinds\*
- turning on the seat ventilation\* for the driver's seat

## Controls in detail

### Power windows



**i** The “Summer opening” function can only be activated via the remote control of the SmartKey or SmartKey with KEYLESS-GO\*.

**i** The seat ventilation\* for the driver’s seat is automatically set to the highest level if activated via summer opening feature.





- ▶ Aim transmitter eye of the SmartKey or SmartKey with KEYLESS-GO\* at the driver’s outside door handle. The SmartKey or SmartKey with KEYLESS-GO\* must be in close proximity to the driver’s door handle.

#### Vehicles with tilt/sliding sunroof



- ▶ Press and hold button  until the door windows and tilt/sliding sunroof have reached the desired position.
- ▶ Release button  to interrupt procedure.

#### Vehicles with panorama roof\* and/or rear side window sunshades\*

If roller sunblinds are retracted and/or rear side window sunshades\* are closed:

- ▶ Press and hold button . The windows and sunblinds and/or rear side window sunshades\* begin to open/extend after approximately 1 second.
- ▶ With the windows and roller blinds and/or rear side window sunshades\* fully opened/extended, press and hold button  again. The tilt/sliding panel tilts and opens.

If roller sunblinds and/or rear side window sunshades\* are open/extended:

- ▶ Press and hold button . The windows move down and the tilt/sliding panel tilts and opens after approximately 1 second.
- ▶ Release button  to interrupt procedure.

#### Convenience closing feature

When you lock the vehicle, you can close the door windows and tilt/sliding sunroof or tilt/sliding panel\* simultaneously.

Afterward, you can close the roller sunblinds\* of the panorama tilt/sliding sunroof\* and the rear side window sunshades\*.

**i** The function of the SmartKey overrides the KEYLESS-GO function.

## Controls in detail




### Power windows

#### Warning!



When closing the windows and the tilt/sliding sunroof or tilt/sliding panel\*, make sure that there is no danger of anyone being harmed by the closing procedure.

If potential danger exists, proceed as follows:

- Release button  to stop the closing procedure. To open, press and hold button . To continue the closing after making sure that there is no danger of anyone being harmed by the closing procedure, press and hold button .

Vehicles with KEYLESS-GO\*:



- Release the sensor surface on the outside door handle (▷ page 415) to stop the closing procedure.
- Immediately pull on the same outside door handle and hold firmly. The door windows and the tilt/sliding sunroof or tilt/sliding panel\* will open for as long as the outside door handle is held but the door is not opened.

#### Vehicles with SmartKey






- ▶ Aim transmitter eye of the SmartKey towards the sensor in the driver's door handle. The SmartKey must be in close proximity to the driver's door handle.


#### Vehicles with tilt/sliding sunroof

- ▶ Press and hold button  until the door windows and the tilt/sliding sunroof are completely closed.
- ▶ Release button  to interrupt procedure.

#### Vehicles with panorama roof\* and/or rear side window sunshades\*

- ▶ Press and hold button  until the door windows and the tilt/sliding panel are completely closed.
- ▶ Press and hold button  again.  
The roller sunblinds and/or rear side window sunshades\* close.
- ▶ Release button  to interrupt procedure.

#### Vehicles with KEYLESS-GO\*

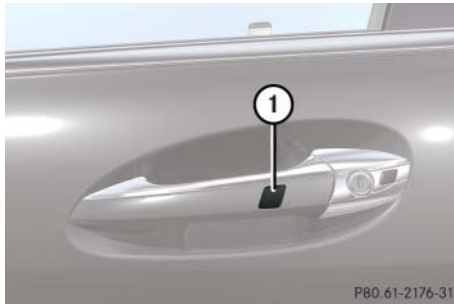

① Sensor surface on door handle

The SmartKey with KEYLESS-GO must be located outside the vehicle within approximately 3 ft (1 m) of a door.

- ▶ Close all doors.

#### Vehicles with tilt/sliding sunroof

- ▶ Touch and hold sensor surface ① until the windows and the tilt/sliding sunroof are completely closed.

**i** Make sure that you are only touching the sensor surface.

- ▶ Release sensor surface ① to interrupt procedure.

#### Vehicles with panorama roof\* and/or rear side window sunshades\*

- ▶ Touch and hold sensor surface ① until the windows and the tilt/sliding panel are completely closed.

**i** Make sure that you are only touching the sensor surface.

- ▶ Touch and hold sensor surface ① again.

The roller sunblinds and/or rear side window sunshades\* close.

- ▶ Release sensor surface ① to interrupt procedure.



## Controls in detail

### Driving and parking

#### Warning!



Make sure that absolutely no objects are obstructing the pedals' range of movement. Keep the driver's footwell clear of all obstacles. If there are any floor mats or carpets in the footwell, make sure that the pedals still have sufficient clearance.

During sudden driving or braking maneuvers the objects could get caught between the pedals. You could then no longer brake or accelerate. This could lead to accidents and injury.

#### Starting the engine

#### Warning!



Inhalation of exhaust gas is hazardous to your health. All exhaust gas contains carbon monoxide (CO), and inhaling it can cause unconsciousness and possible death.

Do not run the engine in confined areas

(such as a garage) which are not properly ventilated. If you think that exhaust gas fumes are entering the vehicle while driving, have the cause determined and corrected immediately. If you must drive under these conditions, drive with at least one window fully open.

#### Automatic transmission



#### Gearshift pattern for automatic transmission

- P Park position
- R Reverse gear
- N Neutral
- D Drive position

For more information on how to operate the gear selector lever, see “Automatic transmission” (▷ page 426).

#### Starting with the SmartKey

- ▶ Make sure the automatic transmission is set to park position **P**.

The gear position indicator in the multi-function display should be on park position **P**.

- ▶ Do not depress accelerator.
- ▶ Turn the SmartKey in the starter switch to position **3** and hold until the engine starts (▷ page 370).

**i** You can also use the “touch-start” function. Turn the SmartKey to position **3** and release it again immediately. The engine then starts automatically.

**i** You can also start the engine with the automatic transmission set to neutral position **N**.

For information on turning off the engine with the SmartKey, see “Turning off the engine” (▷ page 424).

#### Starting with KEYLESS-GO\*

##### Warning!




As long as the SmartKey with KEYLESS-GO is in your vehicle, the vehicle can be started. Therefore, never leave children unattended in the vehicle, as they could otherwise accidentally start the engine.

When leaving the vehicle, always take the SmartKey with KEYLESS-GO with you and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child’s unsupervised access to a vehicle could result in an accident and/or serious personal injury.

You can start your vehicle without the SmartKey in the starter switch using the KEYLESS-GO start/stop button on the starter switch.

The SmartKey with KEYLESS-GO must be located in the vehicle.

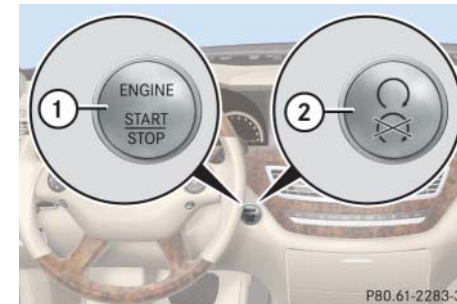

#### KEYLESS-GO start/stop button

- ① USA only
- ② Canada only

- ▶ Make sure KEYLESS-GO start/stop button is inserted in the starter switch (▷ page 371).
- ▶ Make sure the automatic transmission is set to park position **P**.  
The gear position indicator in the multi-function display should be on park position **P**.
- ▶ Depress the brake pedal during the starting procedure.
- ▶ Do not depress accelerator.



## Controls in detail

### Driving and parking

- ▷▷▶ Press KEYLESS-GO start/stop button once.

The engine starts if the SmartKey with KEYLESS-GO is in the vehicle.

**i** You can also start the engine with the automatic transmission set to neutral position **N**.

**i** If you wish to start the vehicle with the SmartKey instead of the KEYLESS-GO feature, remove the KEYLESS-GO start/stop button from the starter switch and proceed as described in "Starting with the SmartKey" (▷ page 417).

For information on turning off the engine with KEYLESS-GO, see "Turning off the engine" (▷ page 424).

#### Starting difficulties

**!** Remember that extended starting attempts can drain the battery.

**The engine does not start. You can hear the starter.**

There could be a malfunction

- in the engine electronics, or
- in the fuel supply system

Carry out the following steps:

- ▶ If you are starting the engine with the SmartKey: Turn SmartKey in starter switch to position **0** and repeat starting procedure (▷ page 416).
- ▶ If you are starting the engine with KEYLESS-GO\*: Close any doors that may be open to allow for better detection of the SmartKey with KEYLESS-GO\*.

or

- ▶ Remove the KEYLESS-GO\* start/stop button from starter switch.

- ▶ Start the engine with the SmartKey as radio signals from another source may be interfering with the SmartKey with KEYLESS-GO\*.

- ▶ Repeat the starting procedure (▷ page 416).

If the engine does not start after several starting attempts:

- ▶ Contact an authorized Mercedes-Benz Center or call Roadside Assistance.

**The engine does not start. You cannot hear the starter.**

The battery may not be sufficiently charged.

- ▶ Have the vehicle jump-started (▷ page 734).

If the engine will not start despite a jump start:

- ▶ Contact an authorized Mercedes-Benz Center or call Roadside Assistance.

#### Driving off

- ▶ Depress the brake pedal.

The gear selector lever can now be used.


- ▶ Shift the automatic transmission to drive position **D** or reverse gear **R**.


**i** Wait for the gear selection process to complete before setting the vehicle in motion.

**i** Shifting from park position **P** to reverse gear **R**, neutral position **N**, or drive position **D** is only possible with the brake pedal depressed. Without the brake pedal depressed, the gear selector lever can be moved, but the parking pawl remains engaged, not allowing shifting to occur.

- ▶ Release the brake pedal.
- ▶ Carefully depress the accelerator pedal.

The electronic parking brake is automatically released (▷ page 422).

The red brake warning lamp **PARK** (USA only) or  (Canada only) in the instrument cluster goes out.

**!** If you hear a warning signal, the red indicator lamp **PARK** (USA only) or  (Canada only) in the instrument cluster flashes and the message “Please Release Parking Brake” appears in the multifunction display when driving off, you are driving with the electronic parking brake engaged, or you are carrying out an emergency brake application with the electronic parking brake.

Release the electronic parking brake (▷ page 422).

**i** Once the vehicle is in motion, the automatic central locking system engages and the locking knobs in the doors move down.

The automatic door lock feature can be deactivated (▷ page 267).

You can open a locked door from the inside. Open door only when conditions are safe to do so.

After a cold start, the automatic transmission shifts at a higher engine revolution. This allows the catalytic converter to reach its operating temperature earlier.

#### Warning!



On slippery road surfaces, never downshift in order to obtain braking action. This could result in drive wheel slip and reduced vehicle control. Your vehicle’s ABS will not prevent this type of loss of control.

#### Warning!



It is dangerous to shift the gear selector lever out of park position **P** or neutral position **N** if the engine speed is higher than idle speed. If your foot is not firmly on the brake pedal, the vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when the engine is idling normally and when your right foot is firmly on the brake pedal.

## Controls in detail

### Driving and parking

**!** Shift the automatic transmission to park position **P** or reverse gear **R** only when the vehicle is stopped in order to avoid damaging the transmission.


**!** Do not run cold engine at high engine speeds. Running a cold engine at high engine speeds may shorten the service life of the engine. This is not covered by the Mercedes-Benz Limited Warranty.

*S 63 AMG and S 65 AMG only:*  
At engine temperatures below 68°F (20°C), the maximum speed is restricted in order to protect the engine. Avoid driving the vehicle at full speed while the engine is cold in order to prevent premature engine wear as well as diminished comfort.

**!** Simultaneously depressing the accelerator pedal and applying the brakes reduces engine performance and causes premature brake and drivetrain wear which is not covered by the Mercedes-Benz Limited Warranty.

For more information, see “Driving instructions” (▷ page 559).

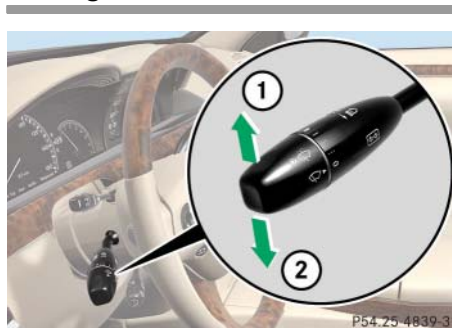

### Turn signals



### Combination switch

- ① Turn signals, right
- ② Turn signals, left

▶ Press the combination switch in the direction of arrow ① or ②.

The corresponding turn signal indicator lamp  or  in the instrument cluster flashes (▷ page 28).

The combination switch resets automatically after major steering wheel movements.

**i** To signal minor directional changes such as changing lanes, press combination switch only to point of resistance and release. The corresponding turn signals will flash three times.

### Problems while driving


#### The engine runs erratically and misfires

- An ignition cable may be damaged.
- The engine electronics may not be operating properly.
- Unburned gasoline may have entered the catalytic converter and damaged it.
- ▶ Give very little gas.
- ▶ Have the problem repaired by an authorized Mercedes-Benz Center as soon as possible.

#### The coolant temperature is above 248°F (120°C)

The coolant is too hot and is no longer cooling the engine.

- ▶ Stop the vehicle in a safe location as soon as possible and turn off the engine. Allow engine and coolant to cool off.
- ▶ Check the coolant level and add coolant if necessary (▷ page 579).

 *Excessive coolant temperatures trigger a warning message in the multifunction display (▷ page 680).*

#### In case of accident

If the vehicle is leaking gasoline:

- ▶ Do not start the engine under any circumstances.
- ▶ Move away from vehicle.
- ▶ Notify local fire and/or police authorities.

If the extent of the damage cannot be determined:

- ▶ Notify an authorized Mercedes-Benz Center.

If no damage can be determined on the

- major assemblies
- fuel system
- engine mount:
- ▶ Start the engine in the usual manner.

#### Parking

##### Warning!



With the engine not running, there is no power assistance for the brake and the steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle.

##### Warning!



Do not park this vehicle in areas where combustible materials such as grass, hay, or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

To reduce the risk of personal injury as a result of vehicle movement, before turning off the engine and leaving the vehicle always:

- Keep right foot on brake pedal.
- Engage electronic parking brake.



## Controls in detail

### Driving and parking



- Shift the automatic transmission to park position **P**.
- Slowly release brake pedal.
- When parked on an incline, turn front wheels towards the road curb.
- Turn the SmartKey to starter switch position **0** and remove, or press KEYLESS-GO\* start/stop button (▷ page 372).
- Take the SmartKey or the SmartKey with KEYLESS-GO\* with you and lock vehicle when leaving.

### Electronic parking brake

#### Warning!



When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could release the electronic parking brake and/or shift the automatic transmission out of park position **P**, either of which could result in an accident and/or serious personal injury.

#### Warning!



Getting out of your vehicle with the automatic transmission not fully engaged in park position **P** is dangerous. Also, when parked on an incline, park position **P** alone may not prevent your vehicle from moving, possibly hitting people or objects.

Always engage the electronic parking brake in addition to shifting to park position **P** (▷ page 416).

When parked on an incline, turn front wheels towards the road curb.



① Handle for electronic parking brake

#### **Manually releasing electronic parking brake**

- ▶ Pull handle ①.

The red indicator lamp **PARK** (USA only) or **(P)** (Canada only) in the instrument cluster goes out.

You cannot release the electronic parking brake until the ignition is switched on.

#### **Automatically releasing electronic parking brake**

Your vehicle's electronic parking brake is automatically released when:

- The engine is running.
- Transmission is in drive position **D** or reverse gear **R**.
- The hood is closed.
- You have fastened your seat belt.
- You step on the accelerator pedal.

If reverse gear **R** is engaged, the trunk must be closed.

**i** If you have not fastened your seat belt, the following conditions must be met in order for the electronic parking brake to be automatically released:

- The driver's door is closed.
- You must move the gear selector out of park position **P** position or drive faster than 2 mph (3 km/h).

#### **Manually engaging electronic parking brake**

- ▶ Press handle ①.

The red indicator lamp **PARK** (USA only) or **(P)** (Canada only) in the instrument cluster comes on.

**i** You can also engage the electronic parking brake when the SmartKey is removed from the starter switch.




## Controls in detail


### Driving and parking

#### *Automatically engaging electronic parking brake\* (USA only)*

Your vehicle's electronic parking brake is automatically engaged when DISTRONIC Plus\* (▷ page 451) brings your vehicle to a standstill and at least one of the following conditions is met:

- The engine is switched off.
- The driver's door is opened and the seat belt is not inserted in the seat belt buckle.
- The hood is released.
- The trunk lid is open while reverse gear **R** is engaged.
- The vehicle is parked for an extended period of time.


The red indicator lamp **PARK** (USA only) or  (Canada only) in the instrument cluster comes on.


 *In addition to the electronic parking brake, park position **P** can be automatically engaged.*

#### *Emergency braking with electronic parking brake*

In an emergency situation, you can also brake your vehicle while driving by using the electronic parking brake.


- ▶ While driving, press handle for electronic parking brake (▷ page 422).

 *Your vehicle will be braked for as long as you press and hold the switch for the electronic parking brake. The longer you keep the electronic parking brake pressed, the more strongly your vehicle will be braked. This method occurs on all 4 wheels, not just the rear wheels.*

During the braking procedure, the red indicator lamp **PARK** (USA only) or  (Canada only) flashes in the instrument cluster, the message "Please Release Parking Brake" appears on the multifunction display and you will hear a warning tone.

Once the vehicle comes to a complete stop the electronic parking brake will engage.

#### Turning off the engine

 *If the engine cannot be turned off as described, see "Emergency engine shut-down" (▷ page 744).*

- ▶ Shift the automatic transmission to **P** (▷ page 430).

#### Warning!



Do not turn off the engine before the vehicle has come to a complete stop. With the engine not running, there is no power assistance for the brake and steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle.

#### *Observe instructions*

- *when taking the vehicle through an automatic conveyor type car wash (▷ page 618)*
- *when towing the vehicle (▷ page 737)*

#### Turning off with SmartKey

- ▶ Turn the SmartKey in the starter switch to position **0** (▷ page 370) and remove it.

The immobilizer is activated.

**!** *If you turn off the engine using the SmartKey and*

- *remove the SmartKey from the starter switch*
- or*
- *open a front door*

*the transmission will shift to park position **P** automatically.*

*Keep in mind that turning off the engine with the SmartKey alone only will automatically shift the transmission to neutral position **N**.*

#### Turning off with KEYLESS-GO\*

- ▶ Press the KEYLESS-GO start/stop button (▷ page 372) to turn off the engine.

With the driver's door closed, the starter switch is now in position **1**. With the driver's door opened, the starter switch is set to position **0**, same as SmartKey removed from starter switch (▷ page 370).

**i** *In an emergency you can turn off the engine while driving by pressing and holding the KEYLESS-GO start/ stop button for approximately 3 seconds.*

**!** **KEYLESS-GO\*:**

*If you turn off the engine using the KEYLESS-GO start/stop button and open a front door, the transmission will shift to park position **P** automatically.*

*Keep in mind that turning off the engine using the KEYLESS-GO start/stop button alone only will automatically shift the transmission to neutral position **N**.*

#### Releasing seat belts

- ▶ Press the seat belt release button (▷ page 396).

Allow the retractor to completely re-wind the seat belt by guiding the latch plate.

**!** *Make sure the seat belt retracts fully so that the seat belt and/or latch plate cannot get caught or pinched in the door or in the seat mechanism. This can damage the seat belt and impair the effectiveness of the seat belt, and/or cause damage to the door and/or door trim panel. Such damage is not covered by the Mercedes-Benz Limited Warranty.*

*Damaged seat belts must be replaced. Contact an authorized Mercedes-Benz Center.*

## Controls in detail

### Automatic transmission

For more information on driving with an automatic transmission, see “Driving and parking” (▷ page 416).

Your vehicle’s transmission adapts its gear shifting process to your individual driving style by continually adjusting the shift points up or down. These shift point adjustments are performed based on current operating and driving conditions.

If the operating conditions change, the automatic transmission reacts by adjusting its shift program.

**i** *During the brief warm-up, transmission upshifting is delayed. This allows the catalytic converter to heat up more quickly to operating temperature.*

#### Warning!



Make sure that absolutely no objects are obstructing the pedals’ range of movement. Keep the driver’s footwell clear of all obstacles. If there are any floor mats or carpets in the footwell, make sure that the pedals still have sufficient clearance.

During sudden driving or braking maneuvers the objects could get caught between the pedals. You could then no longer brake or accelerate. This could lead to accidents and injury.

### Gear selector lever

The gear selector lever is located on the right of the steering column.



#### Gearshift pattern for automatic transmission

- P Park position
- R Reverse gear
- N Neutral
- D Drive position

**i** The current transmission park position **P**, reverse gear **R**, neutral position **N** or drive position **D** appears in the multifunction display (> page 430).

#### Warning!



It is dangerous to shift the automatic transmission out of park position **P** or neutral position **N** if the engine speed is higher than idle speed. If your foot is not firmly on the brake pedal, the vehicle could accelerate quickly forward or reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when the engine is idling normally and when your right foot is firmly on the brake pedal.

#### Shifting from P to N

Moving the gear selector lever up or down shifts the automatic transmission out of park position **P**:

- ▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.
- ▶ Move gear selector lever up or down to resistance point to select neutral position **N**.

**i** The gear selector lever returns to its original position.

#### Shifting from N to R or from N to D

▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.

▶ Move gear selector lever up past the resistance point to select reverse gear **R**.

or

▶ Move gear selector down past the resistance point to select drive position **D**.

**i** The gear selector lever returns to its original position.

▶ Release the brake pedal.

▶ Carefully depress the accelerator pedal to drive off when it is safe to do so.

**i** When driving off, the electronic parking brake is released automatically (> page 422).

## Controls in detail

### Automatic transmission

#### Shifting from P to R

- ▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.
- ▶ Move gear selector lever up past the resistance point to select reverse gear **R**.

**i** *The gear selector lever returns to its original position.*

- ▶ Release the brake pedal.
- ▶ Carefully depress the accelerator pedal to drive off when it is safe to do so.

**i** *When driving off, the electronic parking brake is released automatically (▷ page 422).*

#### Shifting from P to D

- ▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.
- ▶ Move gear selector lever down past the resistance point to select drive position **D**.

**i** *The gear selector lever returns to its original position.*

- ▶ Release the brake pedal.
- ▶ Carefully depress the accelerator pedal to drive off when it is safe to do so.

**i** *When driving off, the electronic parking brake is released automatically (▷ page 422).*

#### Shifting from D, R, or N to P

If you want to select park position **P** with the transmission being in drive position **D**, reverse gear **R** or neutral position **N**:

- ▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.
- ▶ Press the handle for electronic parking brake (▷ page 422).
- ▶ Press button on gear selector lever in direction of arrow (▷ page 426) to select park position **P**.
- ▶ Release the brake pedal.

**!** *Shift the automatic transmission directly from drive position **D** to reverse gear **R**, from reverse gear **R** to drive position **D** or directly to park position **P** only when the vehicle is stopped. Otherwise the automatic transmission could be damaged.*

*When trying to free a vehicle stuck in mud or snow, see "Rocking the vehicle" (▷ page 434).*

#### Shifting from D or R to N

If you want to select neutral position **N** with the transmission being in drive position **D** or reverse gear **R**:

- ▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.
- ▶ Press the handle for electronic parking brake (▷ page 422).

**i** When the vehicle needs to be moved with the engine switched off and the transmission set to neutral position **N** (▷ page 430), do not press the handle for electronic parking brake.

- ▶ Move gear selector lever up to resistance point when in drive position **D** or down to resistance point when in reverse gear **R** to select neutral position **N**.
- ▶ Release the brake pedal.

#### Shifting procedure

The automatic transmission selects individual gears automatically, depending on:

- drive position **D** (▷ page 430) with gear ranges (▷ page 435)
- the selected program mode: **(C/S)** (▷ page 436)  
or  
**(M/C/S)** (S 63 AMG and S 65 AMG only) (▷ page 440)
- the position of the accelerator pedal (▷ page 433)
- the vehicle speed

**!** Allow engine to warm up under low load use. Do not place full load on the engine until the operating temperature has been reached.

Shift into reverse gear **R** or park position **P** only when the vehicle is stopped.

Avoid spinning of a drive wheel for an extended period when driving off on slippery road surfaces. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.

With drive position **D** selected, you can use the steering wheel gearshift control buttons (▷ page 438) or gearshift control paddles (▷ page 438) to influence transmission shifting by:


- limiting the gear range
- changing gears manually

## Controls in detail

### Automatic transmission

#### Transmission positions

The current transmission position appears in the multifunction display.

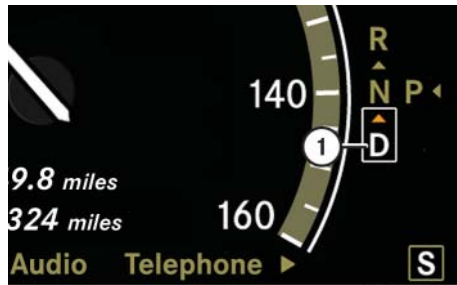

① Current transmission position

**!** If the current transmission position does not appear in the multifunction display due to a malfunction, for example, make sure that the automatic transmission is in the desired position by carefully driving off with the transmission in drive position **D** and program mode **S** (▷ page 436) selected. Do not limit the gear range.

#### Effect

##### **P** Park position

Shift into park position **P** only when vehicle is stopped. The park position is not intended to serve as a brake when the vehicle is parked. Rather, the driver should always engage the electronic parking brake in addition to shifting into park position **P** to secure the vehicle.

If the vehicle's electrical system is malfunctioning, the automatic transmission could remain locked in park position **P**.

- ▶ Have the vehicle checked as soon as possible by an authorized Mercedes-Benz Center.

##### **!** SmartKey:

If you turn off the engine using the SmartKey and

- remove the SmartKey from the starter switch
- or
- open a front door

the transmission will shift to park position **P** automatically.

Keep in mind that turning off the engine with the SmartKey alone only will automatically shift the transmission to neutral position **N**.

##### **!** KEYLESS-GO\*:

If you turn off the engine using the KEYLESS-GO start/stop button and open a front door, the transmission will shift to park position **P** automatically.

Keep in mind that turning off the engine using the KEYLESS-GO start/stop button alone only will automatically shift the transmission to neutral position **N**.

#### **!** *DISTRONIC Plus\**:

The transmission will shift to park position **P** automatically, only when *DISTRONIC Plus* brings your vehicle to a standstill, and when it meets at least one of the following conditions at the same time:

- The engine is turned off.
- The driver's or passenger door opens and the seat belt is not engaged in the buckle.
- The hood is released.
- The trunk lid is open while reverse gear **R** is engaged.
- The vehicle is parked for an extended period of time.

In addition to shifting to park position **P**, the electronic parking brake will be engaged automatically.

**i** Make it a practice to always shift into park position **P** before turning off the engine and

- remove the SmartKey from the starter switch
- or
- open a front door

or when using *KEYLESS-GO\**, before turning off the engine with the start/stop button and opening a front door.

#### Effect

#### **R** Reverse gear

Shift into reverse gear **R** only when the vehicle is stopped.

#### Effect

#### **N** Neutral

No power is transmitted from the engine to the drive axle. When the brakes are released, the vehicle can be moved freely (pushed or towed).

To avoid damage to the transmission, never shift into neutral position **N** while driving.

If the ESP® is deactivated or malfunctioning:  
Shift into neutral position **N** only if the vehicle is in danger of skidding, e.g. on icy roads.



## Controls in detail

### Automatic transmission

**!** *If you turn off the engine using the SmartKey or the KEYLESS-GO\* start/stop button, the transmission will shift to neutral position **N** automatically.*

If you want the gear position to remain in neutral position **N**, e.g. when taking the vehicle through an automatic conveyor type car wash or when towing the vehicle, observe the following instructions.

#### Warning!



When leaving the SmartKey or SmartKey with KEYLESS-GO\* in the starter switch, do not leave children unattended in the vehicle. It is possible for children to switch on the ignition which could result in unsupervised use of vehicle equipment. Unsupervised use of vehicle equipment could result in an accident and/or serious personal injury.

Vehicles with SmartKey:

- ▶ With the vehicle at a standstill and the ignition switched on shift the automatic transmission to neutral position **N**.
- ▶ If engaged, manually release the electronic parking brake (▷ page 423).
- ▶ Switch off the ignition and leave the SmartKey in the starter switch.

Vehicles with KEYLESS-GO\*:

- ▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.
- ▶ Shift the automatic transmission to park position **P**.
- ▶ Release the brake pedal.
- ▶ Remove the KEYLESS-GO start/stop button from the starter switch (▷ page 371).
- ▶ Insert the SmartKey with KEYLESS-GO into the starter switch.

- ▶ With the ignition switched on shift the automatic transmission to neutral position **N**.
- ▶ If engaged, manually release the electronic parking brake (▷ page 423).
- ▶ Switch off the ignition and leave the SmartKey with KEYLESS-GO in the starter switch.

**!** *Coasting the vehicle, or driving for any other reason in neutral position **N** can result in transmission damage that is not covered by the Mercedes-Benz Limited Warranty.*

**!** *Observe instructions*

- *when taking the vehicle through an automatic conveyor type car wash (▷ page 618)*
- *when towing the vehicle (▷ page 737)*

	Effect
<b>D</b>	<b>Drive</b> The transmission shifts automatically. All forward gears are available.

#### Warning!



Getting out of your vehicle without shifting into park position **P** is dangerous. Also, park position **P** alone is not intended to or capable of preventing your vehicle from moving, possibly hitting people or objects.

Always engage the electronic parking brake (▷ page 422) in addition to shifting to park position **P**.

When parked on an incline, turn the front wheels towards the road curb.

Do not park this vehicle in areas where combustible materials such as grass, hay or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

#### Warning!



When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could shift the automatic transmission out of park position **P**, which could result in an accident and/or serious personal injury.

#### Driving tips

##### Accelerator position

Your driving style influences the transmission's shifting behavior:

Less throttle	Earlier upshifting
More throttle	Later upshifting

##### Kickdown

Use kickdown when you want maximum acceleration.

- ▶ Press the accelerator past the point of resistance.

Depending on the engine speed the transmission shifts into a lower gear.

- ▶ Ease on the accelerator when you have reached the desired speed.

The transmission shifts up again.

## Controls in detail

### Automatic transmission

#### Stopping

When you stop briefly, e.g. at traffic lights:

- ▶ Leave the transmission in gear.
- ▶ Hold the vehicle with the brake.

When you stop for a longer period of time with the engine idling and/or on a hill:

- ▶ Engage the electronic parking brake.
- ▶ Shift into park position **P**.

#### Maneuvering

When you maneuver in tight areas, e.g. when pulling into a parking space:

- ▶ Control the vehicle speed by gradually releasing the brakes.
- ▶ Accelerate gently.
- ▶ Never abruptly step on the accelerator.

#### Rocking the vehicle

Rocking the vehicle by shifting between drive position **D** and reverse gear **R** can help free a vehicle stuck in mud or snow. The engine control system of this vehicle electronically limits shifting between drive position **D** and reverse gear **R** to very low speeds, i.e. approximately 5 mph (9 km/h). To shift between drive position **D** and reverse gear **R**, move the gear selector lever past the resistance point up or down.

#### Working on the vehicle

##### Warning!



When working on the vehicle, engage the electronic parking brake and shift to park position **P**. Otherwise the vehicle could roll away.

#### Hill start assist system

##### Warning!



The hill start assist system is not designed to function as an electronic parking brake and does not prevent the vehicle from moving when parked on an incline.

Always engage the electronic parking brake in addition to shifting to park position **P**.

On uphill grades with a gradient angle of more than 5°, the hill start assist system maintains the pressure in the brake system for approximately 1 second after you have released the brake pedal. Therefore, you can start off smoothly without the vehicle moving immediately after releasing the brake pedal.

The hill start assist system is inactive

- when starting off on a level road or downhill grades
- with the transmission in neutral position **N**
- with the electronic parking brake set
- if the ESP® has switched off due to a malfunction

#### Gear ranges

With the automatic transmission in drive position **D** and driving in program mode **C** or **S** (▷ page 436), you can select a gear range for the automatic transmission to operate within.

You can limit the gear range by pressing the left gearshift button or pulling the left gearshift paddle on the steering wheel gearshift control, and reverse the gear range limit by pressing the right gearshift button or pulling the right gearshift paddle on the steering wheel gearshift control (▷ page 438).

The selected gear range appears in the multifunction display.



① Current gear range

	Effect
<b>6</b>	The transmission shifts through sixth gear only (applies to vehicles with 7-speed automatic transmission only).
<b>5</b>	The transmission shifts through fifth gear only (applies to vehicles with 7-speed automatic transmission only).
<b>4</b>	The transmission shifts through fourth gear only.

## Controls in detail


### Automatic transmission

	Effect
<b>3</b>	<p>The transmission shifts through third gear only.</p> <p>With this selection you can use the braking effect of the engine.</p>
<b>2</b>	<p>The transmission shifts through second gear only.</p> <p>Allows the use of engine's braking power when driving:</p> <ul style="list-style-type: none"> <li>• on steep downgrades</li> <li>• in mountainous regions</li> <li>• under extreme operating conditions</li> </ul>
<b>1</b>	<p>The transmission operates in first gear only.</p> <p>For maximum use of engine's braking effect on very steep or lengthy downgrades.</p>

### Automatic shift program


The program mode selector switch is used to adjust

- shift program
- suspension tuning of Airmatic (▷ page 468) or ABC\* (▷ page 470)
- engine control

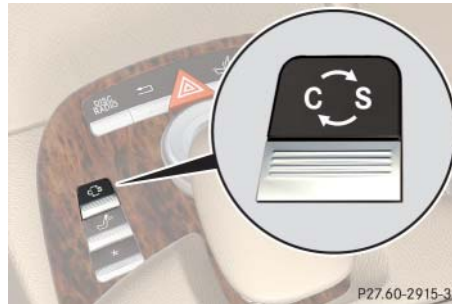

### Program mode selector switch


- |                  |                      |
|------------------|----------------------|
| <b>C</b> Comfort | For comfort driving  |
| <b>S</b> Sport   | For standard driving |

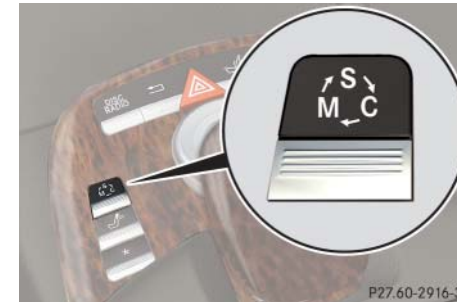

### Program mode selector switch (S 63 AMG and S 65 AMG only)

- |                  |                                       |
|------------------|---------------------------------------|
| <b>M</b> Manual  | For manual gear shifting (▷ page 440) |
| <b>C</b> Comfort | For standard driving                  |
| <b>S</b> Sport   | For sporty driving                    |

The selected program mode appears in the multifunction display.

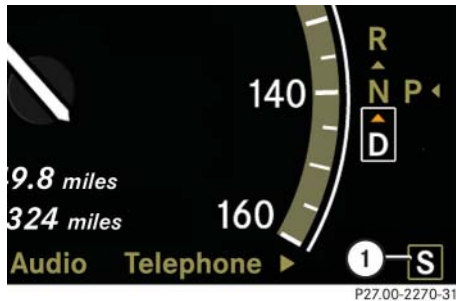

① Current program mode

**!** Never change the program mode when the automatic transmission is out of park position **P**. This could result in a change of driving characteristics for which you may not be prepared.

**i** The last selected program mode (**C** or **S**) is switched on when the engine is restarted.

► Press the program mode selector switch repeatedly until the letter of the desired program mode appears in the multifunction display.

Select **C** for comfort driving (S 63 AMG and S 65 AMG: standard driving):

- The vehicle starts out in second gear (both forward and reverse) for gentler starts. This does not apply if full throttle is applied or gear range **1** is selected.
- Traction and driving stability are improved on icy roads.
- Upshifts occur earlier even when you give more gas. The engine then operates at lower rpms and the wheels are less likely to spin.

Select **S** for standard driving (S 63 AMG and S 65 AMG: sporty driving):

- The vehicle starts out in first gear.
- Upshifts occur later.

## Controls in detail

### Automatic transmission

#### Steering wheel gearshift control

With drive position **D** selected and driving in program mode **C** or **S**, you can limit or extend the gear range.

If your vehicle is equipped with manual shift program **M**, you can use the steering wheel gearshift control to manually shift the gears.

**i** *S 63 AMG and S 65 AMG only:*  
For information on using the steering wheel gearshift control in program mode **M**, see “Manual shift program (S 63 AMG and S 65 AMG only)” (> page 440).

**!** *Allow engine to warm up under low load use. Do not place full load on the engine until the operating temperature has been reached.*

*Shift into reverse gear **R** or park position **P** only when the vehicle is stopped.*

*Avoid spinning of a drive wheel for an extended period when driving off on slippery road surfaces. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.*



#### Gearshift control buttons

- ① Left shift button: limiting gear range
- ② Right shift button: extending gear range



#### Gearshift control paddles (S 63 AMG and S 65 AMG only)

- ① Left shift paddle: limiting gear range or downshift (in program mode **M**)
- ② Right shift paddle: extending gear range or upshift (in program mode **M**)

**i** *You cannot shift with the steering wheel gearshift control buttons or paddles when the transmission is in park position **P**, neutral position **N** or reverse gear **R**.*

The following instructions describe operation of the steering wheel gearshift control when driving in program mode **C** or **S**.

#### Limiting gear range

##### Warning!



On slippery road surfaces, never downshift in order to obtain braking action. This could result in drive wheel slip and reduced vehicle control. Your vehicle's ABS will not prevent this type of loss of control.

- ▶ Briefly press left shift button ① or pull left shift paddle ①.

The transmission will shift to the next lower gear as permitted by the shift program. This action simultaneously limits the gear range of the transmission (▷ page 435).

**i** To avoid overrevving the engine when downshifting, the transmission will not shift to a lower gear if the engine's max. speed would be exceeded.

#### Extending gear range

- ▶ Briefly press right shift button ② or pull right shift paddle ②.

The transmission will shift to the next higher gear as permitted by the shift program. This action simultaneously extends the gear range of the transmission.

**i** If you press on the accelerator when the engine has reached its rpm limit, the transmission will upshift beyond any gear range limit selected.

#### Canceling gear range limit

- ▶ Press and hold right shift button ② or pull and hold right shift paddle ② until the indicator for the current gear range disappears from the multifunction display (▷ page 435).

The transmission will shift from the current gear range directly to gear range **D**.



## Controls in detail

### Automatic transmission

#### Shifting into optimal gear range

- ▶ Press and hold left shift button ① or pull and hold left shift paddle ①.

The transmission will automatically select the gear range suited for optimal acceleration and deceleration. This will involve shifting down one or more gears.

#### Manual shift program (S 63 AMG and S 65 AMG only)

In addition to the automatic shift program **C** or **S**, your vehicle is equipped with the manual shift program **M**.

Manual shift program **M** differs with regard to spontaneity, response time, and shifting smoothness from automatic shift program **S**.

In the manual program mode **M**, system-controlled automatic gearshifting is switched off and you need to change the gears by manually upshifting or downshifting using the steering wheel gearshift control paddles to the left and right of the steering wheel (▷ page 438).

**!** Allow engine to warm up under low load use. Do not place full load on the engine until the operating temperature has been reached.

Shift into reverse gear **R** or park position **P** only when the vehicle is stopped.

Avoid spinning of a drive wheel for an extended period when driving off on slippery road surfaces. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.



#### Program mode selector switch

<b>M</b> Manual	For manual gear shifting
<b>C</b> Comfort	For standard driving
<b>S</b> Sport	For sporty driving

The selected program mode appears in the multifunction display (▷ page 437).

**i** For information on automatic program modes **C** or **S**, see “Automatic shift program” (▷ page 436) and “Steering wheel gearshift control” (▷ page 438).

#### Activating manual shift program

- ▶ Press the program mode selector switch repeatedly until the “**M**” for manual program mode **M** appears in the multifunction display.

The transmission switches to the manual program mode **M**. Automatic shifting is switched off. The gear range is not limited.

You can change the gears manually with drive position **D** selected. You can upshift or downshift through the gears in succession.

**i** The manual program mode **M** will not be stored. When the engine is turned off with the manual program mode **M** selected, the transmission will go to the automatic program mode (**C** or **S**) when the engine is restarted.

#### Upshifting

**!** In the manual program mode **M**, the transmission will not upshift, even if the engine has reached its overrevving range. Shift up to the next gear before the engine has reached its overrevving range. Make absolutely certain that the engine speed does not reach the red marking on the tachometer (▷ page 28). Otherwise the engine could be damaged which is not covered by the Mercedes-Benz Limited Warranty.


- ▶ Briefly pull right shift paddle ② (▷ page 438).

The transmission shifts to the next higher gear. ▷▷

## Controls in detail

### Automatic transmission

- ▷▷ If you are driving in the manual program mode **M**, upshift indicator ② in the multifunction display advises you to upshift before the engine reaches the overspeed range. Thus you can drive at the maximum engine speed for each gear without over-revving the engine.

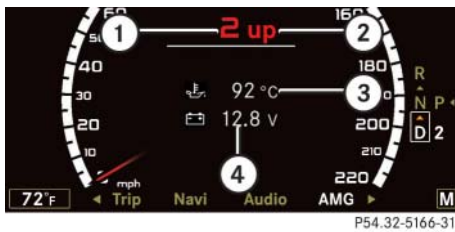

- ① Gear indicator
- ② Upshift indicator “up”
- ③ Engine oil temperature
- ④ Vehicle supply voltage

- ▶ Shift to the next higher gear.

The fuel supply will otherwise be interrupted to prevent the engine from over-revving.

### Downshifting

#### Warning!



On slippery road surfaces, never downshift in order to obtain braking action. This could result in drive wheel slip and reduced vehicle control. Your vehicle's ABS will not prevent this type of loss of control.

- ▶ Briefly pull left shift paddle ① (▷ page 438).

The transmission shifts to the next lower gear.

**i** When you brake or stop, the transmission shifts down to a gear from which you can easily accelerate or drive off.

### Kickdown

Using the kickdown when driving in the manual program mode **M** is not possible.

### Deactivating manual shift program

- ▶ Press the program mode selector switch (▷ page 440) repeatedly until “C” or “S” appears in the multifunction display.

or

- ▶ Restart the engine.

The transmission will go to the automatic program mode (**C** or **S**).

The manual program mode **M** is not stored.

#### Emergency operation (Limp-Home Mode)

---

If vehicle acceleration becomes less responsive or sluggish or the transmission no longer shifts, the transmission is most likely operating in limp-home (emergency operation) mode. In this mode only second gear and reverse gear can be selected.

- ▶ Stop the vehicle in a safe location.
- ▶ Shift to park position **P**.
- ▶ Turn off the engine.
- ▶ Wait at least 10 seconds before restarting.
- ▶ Restart the engine.
- ▶ Shift to drive position **D** (for second gear) or reverse gear **R**.
- ▶ Have the transmission checked at an authorized Mercedes-Benz Center as soon as possible.

## Controls in detail

### Instrument cluster

A full view illustration of the instrument cluster can be found in the “At a glance” section of this manual (▷ page 28).

The instrument cluster is activated when you:

- open a door
- switch on the ignition (▷ page 370)
- switch on the exterior lamps

The language setting for the multifunction display can be changed via COMAND (▷ page 262).

#### Warning!




No messages will be displayed if either the instrument cluster or the multifunction display is inoperative.

As a result, you will not be able to see information about your driving conditions, such as speed or outside temperature, warning/indicator lamps, malfunction/warning messages or the failure of any systems. Driving characteristics may be impaired.

If you must continue to drive, please do so with added caution. Contact an authorized Mercedes-Benz Center as soon as possible.

#### Adjusting instrument cluster display illumination

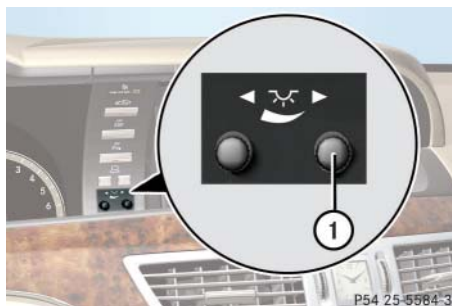

① Knob

**i** The instrument cluster illumination is dimmed or brightened automatically to suit ambient light conditions.

The instrument cluster illumination will also be adjusted automatically when you switch on the vehicle's exterior lamps.

- ▶ **Brightening illumination:** Turn knob ① clockwise.
- ▶ **Dimming illumination:** Turn knob ① counterclockwise.

#### Coolant temperature gauge

The coolant temperature gauge is on the left side in the instrument cluster (▷ page 28).

#### Warning!



- Driving when your engine is overheated can cause some fluids which may have leaked into the engine compartment to catch fire. You could be seriously burned.
- Steam from an overheated engine can cause serious burns and can occur just by opening the hood. Stay away from the engine if you see or hear steam coming from it.

Stop the vehicle in a safe location away from other traffic. Turn off the engine, get out

of the vehicle and do not stand near the vehicle until the engine has cooled down.

**!** Excessive coolant temperature triggers a warning in the multifunction display (> page 680).

The engine should not be operated with the coolant temperature above 248°F (120°C), i.e. in the red zone of the coolant temperature gauge. Doing so may cause serious engine damage which is not covered by the Mercedes-Benz Limited Warranty.

**i** During severe operating conditions, e.g. stop-and-go traffic, the coolant temperature may rise close to 248°F (120°C), i.e. close to the red zone of the temperature gauge.

#### Tachometer

The red marking on the tachometer denotes excessive engine speed.

**!** Avoid driving at excessive engine speeds, as it may result in serious engine damage that is not covered by the Mercedes-Benz Limited Warranty.

To help protect the engine, the fuel supply is interrupted if the engine is operated within the red marking.

#### Outside temperature indicator

The outside temperature indicator is on the bottom left-hand side of the instrument cluster (> page 28).

#### Warning!



The outside temperature indicator is not designed to serve as an ice-warning device and is therefore unsuitable for that purpose.

Indicated temperatures just above the freezing point do not guarantee that the road surface is free of ice. The road may still be icy, especially in wooded areas or on bridges.

The temperature sensor is located in the front bumper area. Due to its location, the sensor can be affected by road or engine heat during idling or slow driving. Therefore, the accuracy of the displayed temper-

ature can only be verified by comparison to a thermometer placed next to the sensor, not by comparison to external displays (e.g. bank signs, etc.).

When moving the vehicle into colder ambient temperatures (e.g. when leaving your garage), you will notice a delay before the lower temperature is displayed.

A delay also occurs when ambient temperatures rise. This prevents inaccurate temperature indications caused by heat radiated from the engine during idling or slow driving.

#### Fuel gauge

The fuel gauge is on the left-hand side of the instrument cluster (> page 28). Once the fuel level has fallen below the reserve mark, the yellow segment indicator for the fuel reserve comes on.

## Controls in detail

### Driving systems

The driving systems of your vehicle are described on the following pages:

- Cruise control (▷ page 446) and DISTRONIC Plus\* (▷ page 451), with which the vehicle can maintain a preset speed.
- Airmatic (▷ page 468) and ABC\* (▷ page 470) adjust the vehicle suspension characteristics automatically and control the vehicle level.
- Parktronic\* (▷ page 472), Park Assist\* (▷ page 476) and Advanced Parking Guidance\* (▷ page 481), which serve as a parking assistant.
- Rear View Camera\* (▷ page 487) is an electronic and visual parking aid.
- Night View Assist\* (▷ page 491) illuminates the road with infrared light in addition to the normal headlamps.
- Blind Spot Assist\* (▷ page 495) detects and warns you about vehicles in your blind spot.

For information on the ABS, Adaptive Brake, BAS, BAS Plus\*, EBP, ESP® and PRE-SAFE® Brake\*, see “Driving safety systems” (▷ page 67).

#### Cruise control

The cruise control automatically maintains the speed you set for your vehicle.

The use of the cruise control is recommended for driving at a constant speed for extended periods of time.

You can set or resume the cruise control at any speed over 20 mph (30 km/h).

The cruise control function is operated by means of the cruise control lever.

#### Warning!



The cruise control is a convenience system designed to assist the driver during vehicle operation. The driver is and must always remain responsible for the vehicle's speed and for safe brake operation.

Only use the cruise control if the road, traffic, and weather conditions make it advisable to travel at a steady speed.

- The use of the cruise control can be dangerous on winding roads or in heavy traffic because conditions do not allow safe driving at a steady speed.
- The use of the cruise control can be dangerous on slippery roads. Rapid changes in tire traction can result in wheel spin and loss of control.
- Deactivate the cruise control when driving in fog.

The “Resume” function should only be operated if the driver is fully aware of the previously set speed and wishes to resume this particular preset speed.

#### Warning!




The cruise control brakes automatically so that the set speed is not exceeded. The brake pedal depresses when the cruise control engages the brakes.

Keep driver's foot area clear at all times, including the area under the brake pedal. Objects stored in this area may impair pedal movement which could interfere with the braking ability of the cruise control system.

Do not place your foot under the brake pedal – your foot could become caught.

Keep in mind that the cruise control is a convenience system designed to assist the driver during vehicle operation. The driver is and must always remain responsible for the vehicle's speed and for safe brake operation.

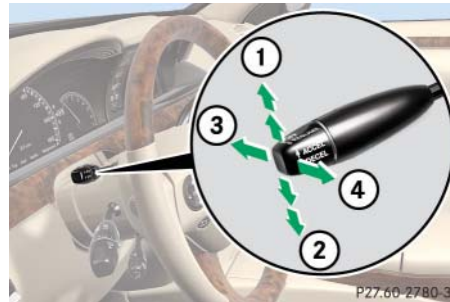

- ① Setting current or higher speed  
Adjustment in 1 mph increments (to resistance point) or 5 mph increments (past resistance point)  
(Canada: 1 km/h or 10 km/h)
- ② Setting current or lower speed  
Adjustment in 1 mph increments (to resistance point) or 5 mph increments (past resistance point)  
(Canada: 1 km/h or 10 km/h)
- ③ Cancel cruise control
- ④ Resume to last set speed

#### Activating cruise control

You can activate the cruise control if the vehicle speed is above 20 mph (30 km/h).

In the following cases you cannot activate the cruise control:

- when you brake
- the vehicle is secured with the electronic parking brake
- when the automatic transmission is set to park position **P**, reverse gear **R**, or neutral position **N**
- when ESP® is switched off

**i** The vehicle speed displayed in the speedometer can briefly vary from the speed setting for the cruise control system.

#### Setting current speed

- ▶ Accelerate or decelerate to the desired speed.
- ▶ Briefly lift the cruise control lever in direction of arrow ① or depress in direction of arrow ②.





## Controls in detail

### Driving systems

▷▷ The current speed is set.

- ▶ Remove your foot from the accelerator pedal.

The cruise control is activated.

- The last set speed appears in the multifunction display for approximately 5 seconds.
- The corresponding speedometer segments from the selected speed to the vehicle maximum speed in the multifunction display are illuminated.
- The set speed is shown by a triangle in the speedometer.

**i** *On uphill grades, the cruise control may not be able to maintain the set speed. Once the grade eases, the set speed will be resumed.*

*On downhill grades, the cruise control maintains the set speed by braking with the vehicle's brake system. In addition, on longer downhill grades the automatic transmission will downshift automatically.*

#### Canceling cruise control

There are several ways to cancel the cruise control:

- ▶ Step on the brake pedal.

The cruise control is canceled. The last speed set is stored for later use.

or

- ▶ Briefly push the cruise control lever in direction of arrow ③.

The cruise control is canceled. The last speed set is stored for later use.

**i** *The last stored set speed is deleted when the engine is turned off.*

**i** *The cruise control switches off automatically when*

- *you step on the brake pedal*
- *the vehicle is secured with the electronic parking brake*

*In this case the segments in the multifunction display go out and no warning sounds.*

- *the vehicle speed is below 20 mph (30 km/h)*
- *the ESP® is in operation or switched off with the ESP® switch (▷ page 74)*
- *you set the automatic transmission to neutral position **N** while driving*

*The segments in the multifunction display go out, An acoustic warning sounds and the message "Cruise Control Off" appears in the multifunction display for approximately 5 seconds.*

**!** *Setting the automatic transmission to neutral position **N** while driving cancels the cruise control. However, the automatic transmission should not be set to neutral position **N** while driving except to coast when the vehicle is in danger of skidding (e.g. on icy roads).*

**i** Depressing the accelerator pedal does not deactivate the cruise control. After brief acceleration (e.g. for passing), the cruise control will resume the last speed set.

**Setting a higher speed**

**Warning!**



If you increase the set speed, keep in mind that it may take a brief moment until the vehicle has made the necessary adjustments. Increase the set speed to a value that the prevailing road conditions and legal speed limits permit. Otherwise, sudden and unexpected acceleration of the vehicle could cause an accident and/or serious injury to you and others.

You can increase the set speed in two ways.

**Adjustment in 1 mph (Canada: 1 km/h) increments**

**i** The set speed value is increased in 1 mph (Canada: 1 km/h) increments each time you lift the cruise control lever up to the resistance point.

- ▶ Briefly lift the cruise control lever to the resistance point in direction of arrow ① (▷ page 447).
- ▶ Release the cruise control lever.

The vehicle set speed increases in increments 1 mph (Canada: 1 km/h).

**Adjustment in 5 mph (Canada: 10 km/h) increments**

**i** The set speed value is increased in 5 mph (Canada: 10 km/h) increments each time you lift the cruise control lever up past the resistance point.

- ▶ Briefly lift the cruise control lever past the resistance point in direction of arrow ① (▷ page 447). ▷▷

## Controls in detail

### Driving systems

- ▷▷▶ Release the cruise control lever.

The vehicle set speed increases in increments 5 mph (Canada: 10 km/h).

**i** The new speed is set and the vehicle will accelerate. Keep in mind that it may take a brief moment until the vehicle has reached the set speed.

#### Setting a lower speed

##### Warning!



If you decrease the set speed, keep in mind that it may take a brief moment until the vehicle has made the necessary adjustments.

Decelerate the set speed to a value that the prevailing road conditions and legal speed limits permit. Otherwise, sudden and unexpected deceleration of the vehicle could cause an accident and/or serious injury to you and others.

You can reduce the set speed in two ways.

**i** When you use the cruise control lever to decelerate, the brake system will automatically brake the vehicle if the engine's braking power does not brake the vehicle sufficiently.

#### Adjustment in 1 mph (Canada: 1 km/h) increments

**i** The set speed value is decreased in 1 mph (Canada: 1 km/h) increments each time you press the cruise control lever down to the resistance point.

- ▶ Briefly press the cruise control lever down to the resistance point in direction of arrow ② (▷ page 447).

- ▶ Release the cruise control lever.

The vehicle set speed decreases in increments 1 mph (Canada: 1 km/h).

#### Adjustment in 5 mph (Canada: 10 km/h) increments

**i** The set speed value is decreased in 5 mph (Canada: 10 km/h) increments each time you press the cruise control lever down past the resistance point.

- ▶ Briefly press the cruise control lever down past the resistance point in direction of arrow ② (▷ page 447).

- ▶ Release the cruise control lever.

The vehicle set speed decreases in increments 5 mph (Canada: 10 km/h).

**i** The new speed is set and the vehicle will decelerate. Keep in mind that it may take a brief moment until the vehicle has reached the set speed.

#### Setting to last stored speed ("Resume" function)

##### Warning!



The set speed stored in memory should only be set again if prevailing road conditions permit. Possible acceleration or deceleration differences arising from returning to the preset speed could cause an accident and/or serious injury to you and others.

- ▶ Briefly pull the cruise control lever in the direction of arrow ④ (▷ page 447).

The cruise control resumes to the last set speed or if no speed is stored, it will set and store the current speed.

- ▶ Remove your foot from the accelerator pedal.

The last set speed appears in the multi-function display for approximately 5 seconds, and the corresponding speedometer segments from the selected speed to the vehicle maximum speed are illuminated.

**i** *The last stored set speed is deleted when the engine is turned off.*

#### **DISTRONIC Plus\***

When activated, the DISTRONIC Plus adaptive cruise control system increases driving convenience afforded by the cruise control during travel on expressways and other major roadways.

- If the DISTRONIC Plus distance sensor detects a slower moving vehicle directly ahead, your vehicle speed will be reduced so that you follow that vehicle at a preset distance.
- If there is no vehicle directly ahead of you, DISTRONIC Plus will function in the same way as the cruise control (▷ page 446).

DISTRONIC Plus functions within a speed range of 0 to 120 mph (Canada: 0 to 200 km/h).

When travelling in Canada in a vehicle not registered in Canada, you must switch off the radar sensor system. Canadian law does not permit the use of the radar sensor system for vehicles from outside of Canada. When you switch off the radar sensor system, the following functions are deactivated:

- BAS Plus\* (▷ page 70)
- PRE-SAFE® Brake\* (▷ page 77)
- DISTRONIC Plus\* (▷ page 451)
- Park Assist\* (▷ page 476)
- Advanced Parking Guidance\* (▷ page 481)
- Blind Spot Assist\* (▷ page 495)

## Controls in detail

### Driving systems

#### Warning!



DISTRONIC Plus is a convenience system. Its speed adjustment reduction capability is intended to make the cruise control more effective and usable when traffic speeds vary. It is not however, intended to, nor does it, replace the need for extreme care. The responsibility for the vehicle speed and the distance to the vehicle ahead, including most importantly brake operation to assure safe stopping distance, always remains with the driver.

DISTRONIC Plus cannot take street and traffic conditions into account.

Complex driving situations are not always fully recognized by DISTRONIC Plus. This could result in wrong or missing distance warnings.

#### Warning!



DISTRONIC Plus adaptive cruise control is not a substitute for active driving involvement. It does not react to pedestrians or stationary objects, nor does it recognize or predict the curvature and lane layout or the movement of vehicles ahead. DISTRONIC Plus can only apply a maximum of 40% of the vehicle's braking power.

DISTRONIC Plus may not detect narrow vehicles possibly driving in front of you, such as motorcycles and vehicles driving in an offset formation.

It is the driver's responsibility at all times to be attentive to road, weather and traffic conditions and to provide the steering, braking and other driving inputs necessary to retain control of the vehicle.

High-frequency sources such as toll stations, speed measuring systems etc. can cause the DISTRONIC Plus system to temporarily cease functioning.

#### Warning!



DISTRONIC Plus requires familiarity with its operational characteristics. We strongly recommend that you review the following information carefully before operating the system.

#### Warning!



DISTRONIC Plus cannot take street and traffic conditions into account. Only use DISTRONIC Plus if the road, weather and traffic conditions make it advisable to travel at a steady speed.

#### Warning!



Use of DISTRONIC Plus can be dangerous on slippery roads. Rapid changes in tire traction can result in wheel spin and loss of control.

## Controls in detail

### Driving systems

DISTRONIC Plus does not act upon adverse sight distance conditions. Do not use DISTRONIC Plus during conditions of fog and heavy rain, snow or sleet.

#### Warning!



DISTRONIC Plus cannot take weather conditions into account. Switch off DISTRONIC Plus or do not turn it on if:

- roads are slippery or covered with snow or ice. The wheels could lose traction while braking or accelerating, and the vehicle could skid.
- the sensor is dirty or visibility is diminished due to snow, rain or fog. The distance control could be impaired.

Always pay attention to traffic conditions even while DISTRONIC Plus is switched on. Otherwise, you may not be able to recognize dangerous situations until it is too late and could cause an accident resulting in personal or fatal injury to you or others.

#### Warning!



The “Resume” function should only be operated if the driver is fully aware of the previously set speed and wishes to resume this particular preset speed.

#### Warning!



Close attention to road and traffic conditions is imperative at all times, regardless of whether or not DISTRONIC Plus is activated.

Use of DISTRONIC Plus can be dangerous on winding roads as conditions do not allow safe driving at a steady speed.

DISTRONIC Plus may not react to stationary objects in the roadway (e.g. a stopped vehicle in a traffic jam or a disabled vehicle). DISTRONIC Plus will also not respond to oncoming vehicles.

Switch off DISTRONIC Plus:

- when changing from the left to the right lane if vehicles are moving more slowly in the left lane
- when entering a turn lane or highway off ramp
- in complex driving situations, such as in highway construction zones

In these situations, DISTRONIC Plus will continue to maintain the set speed unless deactivated.

DISTRONIC Plus is designed and intended only to maintain a set speed and keep a set distance from moving objects in front of it.

**i** Do not use DISTRONIC Plus if you are driving on a road with steep uphill or downhill slopes.

**i** Due to its radar-emitting nature DISTRONIC Plus may have an appearance similar to a radar detector to law enforcement officials. You may want to refer to this section of your Operator’s Manual when asked.

## Controls in detail

### Driving systems

#### **i** USA only:

This device has been approved by the FCC as a "Vehicular Radar System". The radar sensor is intended for use in an automotive radar system only. Removal, tampering, or altering of the device will void any warranties, and is not permitted by the FCC. Do not tamper with, alter, or use in any non-approved way.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

#### **i** Canada only:


This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Removal, tampering, or altering of the device will void any warranties, and is not permitted. Do not tamper with, alter, or use in any non-approved way.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

#### DISTRONIC Plus displays in multifunction display

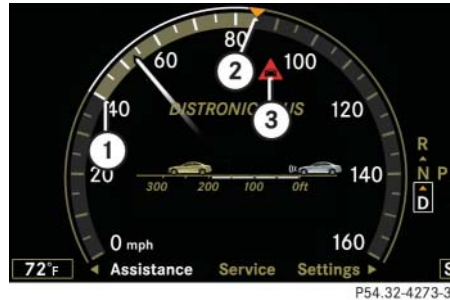


- ① Speed of the vehicle ahead
- ② Set speed
- ③ Distance warning lamp

If DISTRONIC Plus is activated, the marker ② indicates the set speed.


**i** The vehicle speed displayed on the speedometer can briefly vary from the speed setting on the DISTRONIC Plus system.

When DISTRONIC Plus detects a vehicle driving ahead of you, the ring on the speedometer dial lights up between the speed of the vehicle ahead of you and set speed ②.

If DISTRONIC Plus calculates that there is a danger of collision:


- The distance warning lamp  in the instrument cluster comes on.
  - An intermittent warning sounds.
- ▶ Immediately brake the vehicle to avoid a collision.

Under no circumstances should the driver await the intermittent warning sound before braking. See the following warning note.

The intermittent warning sound ceases and the distance warning lamp  goes out when the necessary distance to the vehicle ahead is again established.

#### Warning!



An intermittent warning sounds and the distance warning lamp  in the instrument cluster is illuminated if the DISTRONIC Plus system calculates that the distance to the vehicle ahead and your vehicle's current speed indicate that DISTRONIC Plus will not be capable of slowing the vehicle sufficiently to maintain the preset following distance, which creates a danger of a collision.

Immediately brake your vehicle to increase the distance between your vehicle and the vehicle in front of you. The warning sound is intended as a final caution that you have not interceded with your own braking inputs to avoid a potentially dangerous situation. Do not wait for the operation of the warning signal to intercede with your own braking, as that will result in potentially dangerous emergency braking which will not always result in an impact being avoided.

Tailgating increases the risk of an accident.

#### Warning!



DISTRONIC Plus brakes your vehicle with a maximum of 13 ft/s<sup>2</sup>. This corresponds to about 40% of the maximum deceleration ability of your vehicle.

You must also apply the brakes yourself to avoid a collision. DISTRONIC Plus brakes the vehicle in an effort to restore the preset distance or to maintain the speed. The brake pedal is automatically applied as this happens which results in the brake pedal moving.

Keep driver's foot area clear at all times, including the area under the brake pedal. Objects stored in this area may impair pedal movement which could interfere with the braking ability of the DISTRONIC Plus system.

Do not place your foot under the brake pedal – your foot could become caught.

#### Warning!




If you do not receive visual or acoustic warning signals during a critical traffic situation, DISTRONIC Plus has either not recognized the collision risk, has been deactivated or is malfunctioning.

Remember, whether or not DISTRONIC Plus is operating, it is ultimately always the driver's responsibility to apply the brakes in order to control the vehicle and avoid a collision.

#### Displaying the distance graphic

In the "Assistance" menu under "Distance Display" you see the current settings for DISTRONIC Plus. The information shown in the multifunction display depends on whether DISTRONIC Plus is activated or deactivated.

 For activating or deactivating the DISTRONIC Plus system, see "Activating DISTRONIC Plus" (▷ page 457) or "Deactivating DISTRONIC Plus" (▷ page 463). ▷▷



## Controls in detail

### Driving systems

▷▷ **i** The menu overview can be found on (▷ page 289).

- ▶ Press **◀** or **▶** to select the “Assistance” menu.
- ▶ Press **▼** or **▲** to select the “Distance Display” function.
- ▶ Press **OK**.

The DISTRONIC Plus distance graphic appears and you will see one of the following displays on the multifunction display.

#### DISTRONIC Plus activated


When you turn DISTRONIC Plus on, you will see the set speed in the multifunction display for about 5 seconds. You then see the following display in the multifunction display.



- ① DISTRONIC Plus activated
- ② Your vehicle
- ③ Preset distance threshold to vehicle ahead
- ④ Vehicle ahead, if detected

#### DISTRONIC Plus deactivated


If DISTRONIC Plus is deactivated, the standard display of DISTRONIC Plus appears in the multifunction display.

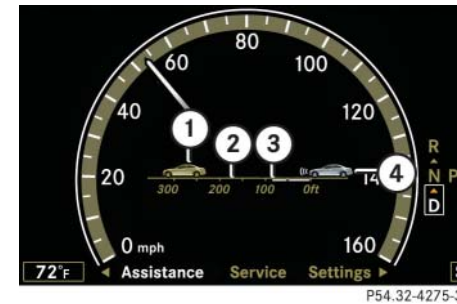

- ① Vehicle ahead, if detected
- ② Actual distance to vehicle ahead
- ③ Preset distance threshold to vehicle ahead
- ④ Your vehicle

#### DISTRONIC Plus lever

The DISTRONIC Plus system is operated by means of the DISTRONIC Plus lever.

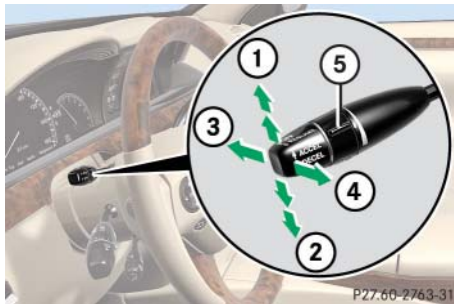

- ① Setting current or higher speed  
Adjustment in 1 mph increments (to the resistance point) or 5 mph increments (past the resistance point) (Canada: 1 km/h or 10 km/h)
- ② Setting current or lower speed  
Adjustment in 1 mph increments (to the resistance point) or 5 mph increments (past the resistance point) (Canada: 1 km/h or 10 km/h)
- ③ Canceling DISTRONIC Plus
- ④ Activating DISTRONIC Plus or resuming to last set speed

- ⑤ Setting target distance

#### Activating DISTRONIC Plus

##### Warning!



When DISTRONIC Plus is braking, the brake pedal is retracted (i.e. depressed automatically). The pedals' range of motion must not be impeded by any obstacles:

- Do not place any objects in the footwell.
- Make sure that the floor mats and carpets are securely in place.
- Do not rest your foot underneath the brake pedal, as it could otherwise be trapped.

You could otherwise cause an accident and injure yourself and others.

##### Warning!



When DISTRONIC Plus is switched on, the vehicle can be braked. You should therefore switch off DISTRONIC Plus if the vehicle must be towed.

You can activate DISTRONIC Plus when:

- you are driving slower than 20 mph (30 km/h) and DISTRONIC Plus has detected a vehicle ahead of you
- you are driving above 20 mph (30 km/h)

**i** The maximum speed you can set is 120 mph (Canada: 200 km/h).

If DISTRONIC Plus has not been activated after pressing the DISTRONIC Plus lever, you will see the message: "DISTRONIC PLUS --- mph" (Canada: "DISTRONIC PLUS --- kmh") in the multifunction display.

## Controls in detail

### Driving systems

In the following cases you cannot activate DISTRONIC Plus:

- up to 2 minutes after starting the engine
- if the engine is switched off
- if you step on the brake pedal while driving
- the vehicle is secured with the electronic parking brake
- if the gear selector lever is in park position **P**, reverse gear **R**, or neutral position **N**
- if ESP® is switched off
- if the hood is open
- if the driver's door is open and the driver has not fastened his or her seat belt
- if the radar sensors are switched off (▷ page 307).

#### Switching on while driving

- ▶ Tap DISTRONIC Plus lever up ① or down ② until desired speed is set. DISTRONIC Plus is switched on.

or

- ▶ Pull DISTRONIC Plus lever briefly in direction of arrow ④ to call up speed last set (▷ page 463).

DISTRONIC Plus is switched on.

- ▶ Take your foot off the accelerator pedal.

Your vehicle adapts its speed to the vehicle ahead, observing the set speed as a maximum value.

**i** Under 20 mph (30 km/h), you can only switch on DISTRONIC Plus if the vehicle ahead of you has been detected and is shown on the multifunction display. If you no longer see the vehicle in front of you on the multifunction display and if it is no longer detected because it has changed lanes, for example, DISTRONIC Plus switches off and you will hear a signal.

**i** If you do not completely lift your foot off the accelerator pedal, the message "DISTRONIC PLUS Override" appears on the multifunction display. The distance to a slower-driving vehicle will not be set. You will drive at the speed you dictate by pressing the accelerator pedal.

#### Switching on when approaching a stationary vehicle

If the vehicle in front of you is stationary, you can only switch on DISTRONIC Plus if your vehicle is also at a standstill.

- ▶ Tap DISTRONIC Plus lever up ① or down ② until desired speed is set.

DISTRONIC Plus is switched on.

or

- ▶ Pull DISTRONIC Plus lever briefly in direction of arrow ④ to call up speed last set (▷ page 463).

DISTRONIC Plus is switched on.

**i** It is helpful to switch on the DISTRONIC Plus display in the instrument cluster (▷ page 455) since you can only switch on DISTRONIC Plus under a speed of 20 mph (30 km/h) when a vehicle has been detected in front of you.

**i** You can adjust the set speed using the DISTRONIC Plus lever and the target distance using the distance setting switch on the DISTRONIC Plus lever (▷ page 464).

**i** If DISTRONIC Plus is switched off, PRE-SAFE® Brake\* (▷ page 77) will warn of an impending collision if this function has been activated with the instrument cluster control system (▷ page 303).

#### Starting off

When the vehicle in front of you starts off:

- ▶ Remove your foot from the brake pedal.
- ▶ Pull DISTRONIC Plus lever briefly in direction of arrow ④.

or

- ▶ Briefly step on the accelerator pedal.

Your vehicle starts off and adapts its speed to the vehicle in front of you.

#### Driving

If no vehicle is driving ahead of you, DISTRONIC Plus functions like the cruise control (▷ page 446).

When DISTRONIC Plus detects that the vehicle in front of you is driving more slowly, it brakes the vehicle in order to keep the distance specified by you.

When DISTRONIC Plus detects that the vehicle in front of you is driving faster, the vehicle accelerates up to the set speed.

#### Warning!



When you step on the brake pedal, you switch off DISTRONIC Plus except when the vehicle is at a standstill. DISTRONIC Plus will no longer brake your vehicle. You are always responsible for maintaining a distance from other vehicles, observing road speeds and braking well in advance.

## Controls in detail

### Driving systems

#### Stopping

##### Warning!



DISTRONIC Plus's braking effect is canceled and the vehicle can start to roll if

- DISTRONIC Plus is switched off using the DISTRONIC Plus lever
- you accelerate
- the system or the power supply is malfunctioning, e.g. due to battery failure
- the electrical components in the engine compartment or the fuses have been manipulated
- the battery is disconnected

##### Warning!



Never get out of the vehicle while DISTRONIC Plus is switched on!

DISTRONIC Plus must never be operated or switched off by passengers or from outside the vehicle.

DISTRONIC Plus is not a substitute for the electronic parking brake and may not be used for parking.

When you get out of the vehicle or switch off the engine, deactivate DISTRONIC Plus and secure the vehicle from rolling away by engaging the electronic parking brake.

When DISTRONIC Plus detects that the vehicle in front of you is stopping, the vehicle brakes until it also stops.

Once DISTRONIC Plus has stopped your vehicle and it is at a standstill, it remains stationary; the brake pedal does not need to be depressed.

**i** After a short while, your vehicle is secured in place by the electronic parking brake so that the operating brake can be relieved of load.

**i** Depending on the following distance set using the distance setting switch on the DISTRONIC Plus lever, your vehicle will stop approximately 13.1 ft away from the vehicle in front of you.

#### Setting the current speed

- ▶ Accelerate or decelerate to the desired speed.
- ▶ Briefly lift the DISTRONIC Plus lever in the direction of arrow ① or depress in the direction of arrow ②.  
DISTRONIC Plus is activated and the current speed is set.
- ▶ Remove your foot from the accelerator pedal.

**i** If you do not take your foot off of the accelerator completely, the following message “DISTRONIC PLUS Override” will appear in the multifunction display.

The distance to a slower moving vehicle in front of you will not be set. Your vehicle speed will then be determined only by the accelerator pedal position.

#### Setting a higher speed

##### Warning!



If you increase the set speed, keep in mind that it may take a brief moment until the vehicle has reached the set speed.

Increase the set speed to a value that the prevailing road conditions and legal speed limits permit. Otherwise, sudden and unexpected acceleration of the vehicle could cause an accident and/or serious injury to you and others.

You can increase the set speed in two stages.

#### Adjustment in 1 mph (Canada: 1 km/h) increments

**i** The set speed value is increased in 1 mph (Canada: 1 km/h) increments each time you lift the DISTRONIC Plus lever to the resistance point.

- ▶ Briefly lift the DISTRONIC Plus lever to the resistance point in direction of arrow ① (▷ page 457).
- ▶ Release the DISTRONIC Plus lever.

The vehicle speed increases in increments of 1 mph (Canada: 1 km/h).

#### Adjustment in 5 mph (Canada: 10 km/h) increments

##### Warning!



You can increase the vehicle speed in 5 mph (Canada: 10 km/h) increments. When using this feature, keep in mind that it may take a brief moment until the vehicle has reached the set speed.

Increase the vehicle speed to a value that the prevailing road conditions permit. Otherwise, sudden and unexpected acceleration of the vehicle could cause an accident and/or serious injury to you and others.

**i** The set value is increased in 5 mph (Canada: 10 km/h) increments each time you lift the DISTRONIC Plus lever past the resistance point.

- ▶ Briefly lift the DISTRONIC Plus lever past the resistance point in direction of arrow ① (▷ page 457).
- ▶ Release the DISTRONIC Plus lever. ▷▷

## Controls in detail

### Driving systems

- ▷▷ The vehicle speed increases in increments of 5 mph (Canada: 10 km/h).

**i** The new speed is set and the vehicle will accelerate. Keep in mind that it may take a brief moment until the vehicle has reached the set speed.

#### Setting a lower speed

##### Warning!



If you decrease the set speed, keep in mind that it may take a brief moment until the vehicle has reached the set speed.

Decelerate the set speed to a value that the prevailing road conditions and legal speed limits permit. Otherwise, sudden and unexpected deceleration of the vehicle could cause an accident and/or serious injury to you and others.

You can reduce the speed in two stages.

**i** When you use the DISTRONIC Plus lever to decelerate, the brake system will automatically brake the vehicle if the engine's braking power does not brake the vehicle sufficiently.

#### Adjustment in 1 mph (Canada: 1 km/h) increments

**i** The set value is decreased in 1 mph (Canada: 1 km/h) increments each time you press the DISTRONIC Plus lever down to the resistance point.

- ▶ Briefly press the DISTRONIC Plus lever down to the resistance point in direction of arrow ② (▷ page 457).
- ▶ Release the DISTRONIC Plus lever.

The vehicle speed decreases in increments of 1 mph (Canada: 1 km/h).

#### Adjustment in 5 mph (Canada: 10 km/h) increments

##### Warning!



You can decrease the vehicle speed in 5 mph (Canada: 10 km/h) increments. When using this feature, keep in mind that it may take a brief moment until the vehicle has reached the set speed.

Decelerate the vehicle speed to a value that the prevailing road conditions. Otherwise, sudden and unexpected deceleration of the vehicle could cause an accident and/or serious injury to you and others.

**i** The set value is decreased in 5 mph (Canada: 10 km/h) increments each time you press the DISTRONIC Plus lever down past the resistance point.

- ▶ Briefly press the DISTRONIC Plus lever down past the resistance point in direction of arrow ② (▷ page 457).

- ▶ Release the DISTRONIC Plus lever.

The vehicle speed decreases in increments of 5 mph (Canada: 10 km/h).

**i** The new speed is set and the vehicle will decelerate. Keep in mind that it may take a brief moment until the vehicle has reached the set speed.

#### Setting to last stored speed (“Resume” function)

##### Warning!



The speed stored in memory should only be set again if prevailing road conditions permit. Possible acceleration or deceleration differences arising from returning to preset speed could cause an accident and/or serious injury you and others.

- ▶ Briefly pull the DISTRONIC Plus lever in the direction of arrow ④ (▷ page 457).

DISTRONIC Plus is set to the last stored speed.

DISTRONIC Plus resumes the last set speed or if no speed is stored, it will set and store the current speed.

- ▶ Remove your foot from the accelerator pedal.

**i** Upon switching off the engine, the last stored speed is deleted.

#### Deactivating DISTRONIC Plus

There are several ways to deactivate the DISTRONIC Plus system:

- ▶ Briefly tip the DISTRONIC Plus lever in the direction of arrow ③ (▷ page 457).

or

- ▶ Step on the brake pedal.

DISTRONIC Plus will be deactivated. The last speed set will be stored into memory.

**i** The last stored speed is deleted when you turn off the engine.

DISTRONIC Plus deactivates automatically when:

- the vehicle is secured with the electronic parking brake
- the vehicle speed is below 20 mph (30 km/h) and no preceding vehicle is detected
- the ESP<sup>®</sup> is in operation or switched off with the ESP<sup>®</sup> switch (▷ page 74)



## Controls in detail

### Driving systems

- you set the automatic transmission to park position **P**, reverse gear **R**, or neutral position **N** while driving
- the radar sensors are switched off (▷ page 307)
- the vehicle rolls backward

The segments in the multifunction display go out, an acoustic signal sounds, and the message “*DISTRONIC PLUS Off*” appears in the multifunction display for approximately 5 seconds.

If the vehicle has been stopped by DISTRONIC Plus and a malfunction occurs in the system, the message “*Brake Immediately*” will appear on the multifunction display. Step on the brake immediately to prevent the vehicle from rolling. DISTRONIC Plus is then switched off and the message disappears.

#### Warning!



DISTRONIC Plus switches off and releases the brakes when the vehicle decelerates below the minimum speed of 20 mph (30 km/h) by operation of the system unless DISTRONIC Plus detects a vehicle directly ahead of you. At that time the driver must apply the brakes in order to reduce vehicle speed further or bring it to a stop.

**!** *Setting the automatic transmission to **N** while driving cancels the DISTRONIC Plus. However, the automatic transmission should not be set to **N** while driving except to coast when the vehicle is in danger of skidding (e.g. on icy roads).*

**i** *Depressing the accelerator pedal does not deactivate DISTRONIC Plus. After brief acceleration (e.g. for passing), DISTRONIC Plus will resume the last speed set.*

#### Setting the following distance in DISTRONIC Plus


You can set the specified following distance for DISTRONIC Plus by varying the time setting between 1.0 and 2.0 seconds. Using this time setting and the current set speed of your vehicle, DISTRONIC Plus calculates and sets the required following distance to the vehicle ahead. The set distance will be shown in the multifunction display.

#### Warning!



It is up to the driver to exercise discretion to select the appropriate setting given road conditions, traffic, driver's preferred driving style and applicable laws and driving recommendations for safe following distance.

The distance setting switch for the target distance is located on the DISTRONIC Plus lever.

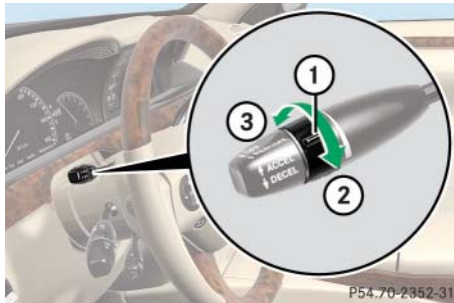

- ① Distance setting switch for target distance
- ② To increase target distance
- ③ To decrease target distance

#### **Increasing distance**

Increasing the distance setting causes DISTRONIC Plus to maintain a greater following distance to the vehicle ahead.

- Move distance setting switch ① in direction ②.

#### **Decreasing distance**

Decreasing the distance setting causes DISTRONIC Plus to maintain a shorter following distance to the vehicle ahead.

- Move distance setting switch ① in direction ③.

#### **Driving with DISTRONIC Plus**

This section describes a number of driving situations where special precaution is required on the part of the driver. Be prepared to brake in such situations which will deactivate the DISTRONIC Plus system.

#### **Warning!**



DISTRONIC Plus works to maintain the speed selected by the driver unless a moving obstacle proceeding directly ahead of it in the same travel direction is detected (e.g. following another vehicle ahead of you at a distance set by DISTRONIC Plus).

This means that:

- Your vehicle can pass another vehicle after you change lanes.
- While in a sharp turn or if the vehicle in front is in a sharp turn, DISTRONIC Plus could lose sight of a vehicle traveling in front of it, then your vehicle could accelerate to the previously selected speed.

DISTRONIC Plus regulates only the distance between your vehicle and those directly ahead of it. It may not register stationary objects in the road, e.g.:

- a stopped vehicle in a traffic jam
- a disabled vehicle
- an oncoming vehicle

The driver must always be on the alert, observe all traffic and intercede as required by steering or braking the vehicle.

## Controls in detail

### Driving systems

#### Warning!



DISTRONIC Plus should not be used in snowy or icy road conditions.

The most likely cause for a malfunctioning system is a dirty sensor (located behind the hood grille), especially at times of snow and ice or heavy rain. In such a case, DISTRONIC Plus will switch off, and the message:

*“DISTRONIC PLUS  
Currently Unavailable  
See Oper. Manual”*

appears in the multifunction display.

For cleaning and care of the DISTRONIC Plus sensor, see “Cleaning the DISTRONIC Plus\* / PRE-SAFE® Brake\* system sensors (USA only)” (▷ page 619).


**i** If the message:

*“DISTRONIC PLUS  
Currently Unavailable  
See Oper. Manual”*

*disappears during driving and the last speed stored flashes for approximately 5 seconds, the dirt (e.g. slush) has dissolved; DISTRONIC Plus is again available.*


Another cause might be that the radar sensors have been manually switched off in the instrument cluster control system. Please verify that the radar sensors are switched on (▷ page 307).

#### Turns and bends

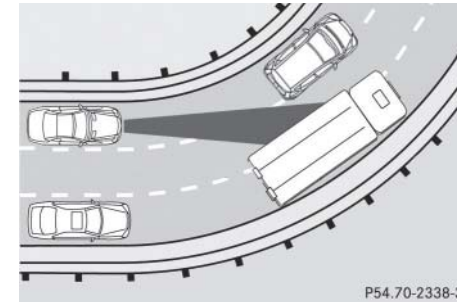


In turns or bends, DISTRONIC Plus may not detect a moving vehicle in front, or it may detect one too soon. This may cause your vehicle to brake late or unexpectedly.

**Offset driving**

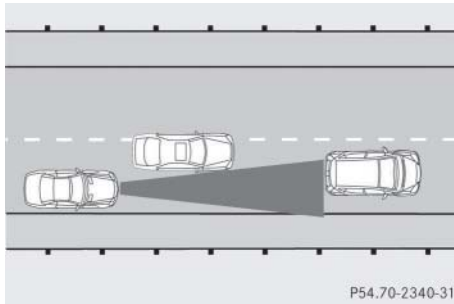


A vehicle traveling in your lane but offset from your direct line of travel may not be detected by DISTRONIC Plus. There will be insufficient distance to the vehicle ahead.

**Lane changing**

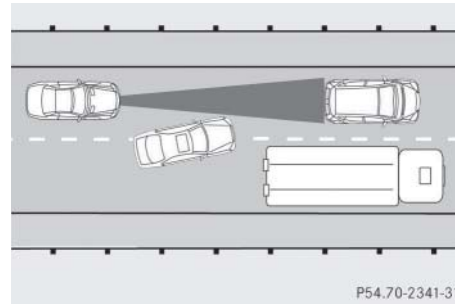

DISTRONIC Plus has not yet detected the vehicle changing lanes. There will be insufficient distance to the lane-changing vehicle.

**Narrow vehicles**

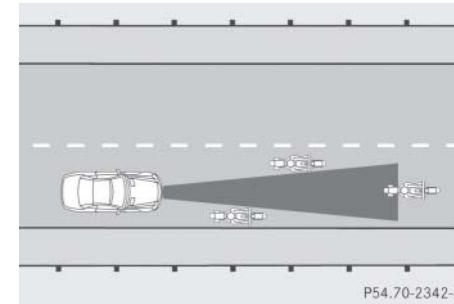


Because of their narrow profile, the vehicles traveling near the outer edge of the lane have not yet been detected by DISTRONIC Plus. There will be insufficient distance to the vehicles ahead.

## Controls in detail


### Driving systems

#### *Obstacles and stationary vehicles*

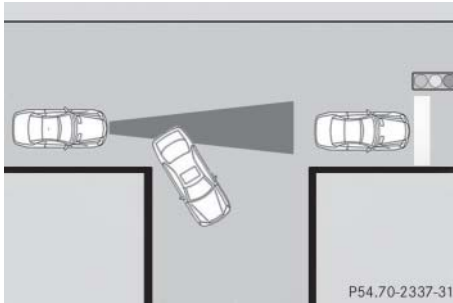

DISTRONIC Plus does not brake for obstacles or stationary vehicles. If, for example, the vehicle detected in front of you changes lanes to bypass an obstacle or stationary vehicle in front of it, DISTRONIC Plus will not brake for the obstacle or stationary vehicle.

#### *Cross-traffic*

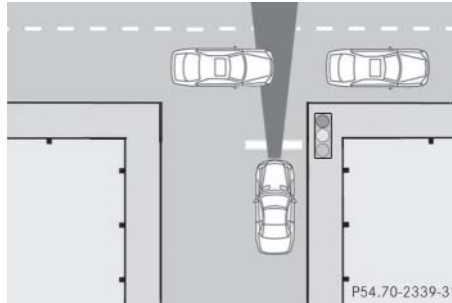

DISTRONIC Plus may inadvertently detect crossing vehicles. If you switch on DISTRONIC Plus, for example, at a traffic light with cross-traffic, the vehicle may suddenly start to drive off.

#### **Airmatic**

Airmatic automatically selects the optimum suspension tuning and ride height for your vehicle.

Airmatic consists of two components:

- Level control system
- Adaptive Damping System (ADS)

The ADS automatically selects the optimum damping for the respective driving conditions. At the same time the suspension is set to either sporty or comfort.

#### Vehicle level control with Airmatic

##### Warning!



To help avoid personal injury, keep hands and feet away from wheel housing area, and stay away from under the vehicle when lowering the vehicle chassis.

Your vehicle automatically adjusts its ride height to:

- increase vehicle safety
- reduce fuel consumption

The vehicle chassis ride height is raised or lowered according to the selected level setting and to the vehicle speed:

- With increasing speed, ride height is reduced by up to approximately 0.8 in (20 mm).
- With decreasing speed, the ride height is again raised to the selected vehicle level.

**i** These height adjustments are so small that you may not notice any change.

The following vehicle level settings can be selected when the vehicle is stationary:

Level	
<b>Normal</b>	For driving on normal roads. The indicator lamp is off.
<b>Raised</b>	For driving on rough roads or with snow chains. The indicator lamp is on.

Select the “Raised” level setting only when required by current driving conditions. Otherwise:

- Fuel consumption may increase.
- Handling may be impaired.



- ① Vehicle level control switch
- ② Indicator lamp

- ▶ Start the engine.
- ▶ Briefly press switch ① to change from one level setting to the other.

The message:

“Vehicle Rising”

appears in the multifunction display when changing from normal level to raised level.

The indicator lamp ② is then lit. The display switches off when the vehicle is raised.



## Controls in detail

### Driving systems

- ▷▷ Press switch ① again to lower the vehicle. The indicator lamp ② is off.

**i** The selected vehicle level setting remains stored in memory even if the engine is turned off and restarted except when you

- exceed a speed of 75 mph (120 km/h) or
- maintain a speed of between 50 mph (80 km/h) and 75 mph (120 km/h) for more than 3 minutes

The vehicle then lowers to regular level.

#### Suspension tuning

The Adaptive Damping System (ADS) automatically tunes shock absorbers and springs.

The suspension tuning is set according to:

- your driving style
- road surface conditions
- the vehicle loading
- your choice of suspension style

The program mode selector switch (C/S) (▷ page 436) is used to adjust the suspension tuning:

Driving program	Suspension tuning
C Comfort	comfortable (default setting)
S Sport	sporty for dynamic driving

- ▶ Start the engine.
- ▶ Select the desired driving program.

#### Active Body Control (ABC)\*

The ABC system is an active, computer-controlled system that hydraulically adjusts the suspension at all four wheels in response to various driving situations. It automatically selects the optimum suspension tuning and ride height for your vehicle.

#### Warning!



When you switch off the engine, the entire vehicle is lowered. You should therefore make sure that no one is near the wheel housing or under the vehicle when you switch off the engine. Otherwise, parts of the individual's body could be trapped.

**!** When you switch off the engine, the entire vehicle is lowered. When parking, position your vehicle in such a way that it will not scrape against a curb, for example, when it is lowered. Your vehicle could otherwise be damaged.

**i** S 63 AMG and S 65 AMG only:  
When you switch off the engine, the entire vehicle is lowered by 0.2 in (5 mm).

#### Vehicle level control with ABC

##### Warning!



To help avoid personal injury, keep hands and feet away from wheel housing area, and stay away from under the vehicle when lowering the vehicle chassis.

Your vehicle automatically adjusts its ride height to:

- increase vehicle safety
- reduce fuel consumption

The vehicle chassis ride height is raised or lowered according to the selected level setting and to the vehicle speed:

- With increasing speed, ride height is reduced by up to approximately 0.6 in (15 mm).

- With decreasing speed, the ride height is again raised to the selected vehicle level.

**i** These height adjustments are so small that you may not notice any change.

The following vehicle level settings can be selected when the vehicle is stationary:

Level	
<b>Normal</b>	For driving on normal roads. The indicator lamp is off.
<b>Raised</b>	For driving on rough roads or with snow chains. The indicator lamp is on.

Select the “Raised” level setting only when required by current driving conditions. Otherwise:

- Fuel consumption may increase.
- Handling may be impaired.

**i** The selected vehicle level setting remains stored in memory even if the engine is turned off and restarted.



- ① Vehicle level control switch
- ② Indicator lamp

#### Selecting a higher level

- ▶ Start the engine.

If indicator lamp ② is off:

- ▶ Press switch ①.

Indicator lamp ② comes on. The vehicle is raised to a higher level.



## Controls in detail

### Driving systems

#### Selecting a normal level

- ▶ Start the engine.

If indicator lamp ② is on:

- ▶ Press switch ①.

Indicator lamp ② goes out. The vehicle is adjusted to a normal level.

#### Suspension tuning

The suspension tuning is set according to:

- your driving style
- road surface conditions
- the vehicle loading
- your choice of suspension style

The program mode selector switch (**C/S**) (▷ page 436) or (**S/C/M**) (▷ page 440) is used to adjust the suspension tuning:

Driving program	Suspension tuning
<b>C</b> Comfort	comfortable (default setting)
<b>S</b> Sport	sporty for dynamic driving
<b>M</b> Manual	

- ▶ Start the engine.
- ▶ Select the desired driving program.

#### Parktronic system\*

##### Warning!



Parktronic is a supplemental system. It is not intended to, nor does it replace, the need for extreme care. The responsibility during parking and other critical maneuvers always remains with the driver.

##### Warning!



Make sure no persons or animals are in the area in which you are maneuvering. You could otherwise injure them.

**!** *Special attention must be paid to objects with smooth surfaces or low silhouettes (e.g. trailer couplings, painted posts, elevated cross-bars or road curbs). Such objects may not be detected by the system and can damage the vehicle.*

**!** The operational function of the Parktronic system can be affected by dirty sensors, especially at times of snow and ice.

Make sure that the area on the bumpers around the sensors is free of dirt, ice and/or slush, otherwise Parktronic may not function properly, see "Cleaning the Parktronic\* system sensors" (▷ page 619).

**i** Interference caused by other ultrasonic signals (e.g. working jackhammers, car wash, or the air brakes of trucks) can cause the system to send erratic indications, and should be taken into consideration.

The Parktronic system is an electronic parking aid with ultrasonic sensors that helps you while parking.


It visually and audibly indicates the relative distance between the vehicle and an obstacle.

The Parktronic system is automatically activated when you switch on the ignition, release the electronic parking brake or start the engine and engage drive position **D**, reverse gear **R** or neutral position **N**.

The Parktronic system deactivates at speeds over approximately 11 mph (18 km/h). At lower speeds the Parktronic system turns on again.

The Parktronic system also deactivates when you set the automatic transmission to park position **P** or secure the vehicle in place with the electronic parking brake and switch off the engine.


The Parktronic system monitors the surroundings of your vehicle with six sensors in the front bumper and four sensors in the rear bumper.

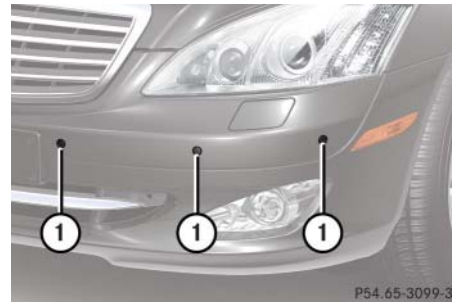

① Sensors in the front bumper (Only visible without DISTRONIC Plus\*)

**i** To function properly, the sensors must be free of dirt, ice, snow and slush. Clean the sensors regularly, being careful not to scratch or damage the sensors, see "Cleaning the Parktronic\* system sensors" (▷ page 619).

#### Range of the sensors

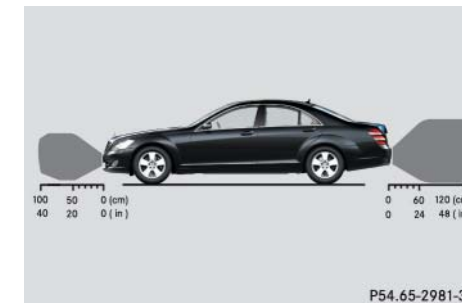

P54.65-2981-31



P54.65-3088-31

## Controls in detail

### Driving systems

#### Front sensors

Center	<b>approx. 40 in (100 cm)</b>
Corners	<b>approx. 24 in (60 cm)</b>

#### Rear sensors

Center	<b>approx. 48 in (120 cm)</b>
Corners	<b>approx. 32 in (80 cm)</b>

**!** *During parking maneuvers, pay special attention to objects located above or below the height of the sensors (e.g. street curbs, painted posts, or trailer hitches etc.). The Parktronic system will not detect such objects at close range and damage to your vehicle or the object may result.*

*Ultrasonic signals from outside sources (e.g. truck air brakes, car wash, or jackhammers) may impair the operation of the Parktronic system.*

#### Minimum distance


Center	<b>approx. 8 in (20 cm)</b>
Corners	<b>approx. 6 in (15 cm)</b>

If the system detects an obstacle in this range, all the distance warning segments illuminate and you hear a warning signal. If the obstacle is closer than the minimum distance, the actual distance may no longer be indicated by the system.

#### Warning indicators

Visual signals indicate to the driver the relative distance between the sensors and an obstacle.

The warning indicator for the front area is in the instrument cluster. The warning indicator for the rear area is on the roof liner in the rear.

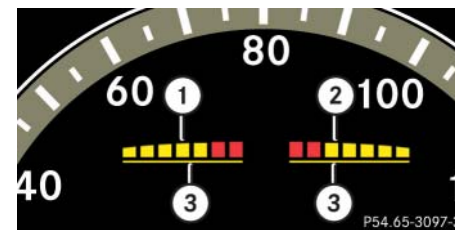

- ① Left side of the vehicle
- ② Right side of the vehicle
- ③ Indicator

Each warning indicator is divided into five yellow and two red distance segments for either side of the vehicle.

If yellow indicators ③ under the segments are lit, Parktronic is ready to measure.

The position of the gear selector lever determines which warning indicators will be activated.


Gear selector lever position	Warning indicator
<b>D</b>	Front area activated
<b>R or N</b>	Front and rear area activated
<b>P</b>	Neither activated

As your vehicle approaches an object, one or more distance segments will illuminate, depending on the distance. When the seventh distance segment illuminates, you have reached the minimum distance.

- **Front area:**  
An intermittent acoustic warning will sound as the first red distance segment illuminates and a constant acoustic warning lasting a maximum of 2 seconds will sound for the second red distance segment. The signal is canceled when the gear selector lever is placed in park position **P**.
- **Rear area:**  
An intermittent acoustic warning will sound as the first red distance segment illuminates and a constant acoustic warning lasting a maximum of 2 seconds will sound for the second red distance segment. The signal is canceled when the gear selector lever is placed in drive position **D** or park position **P**.

#### Switching on or off Parktronic system

The Parktronic system can be switched off manually.

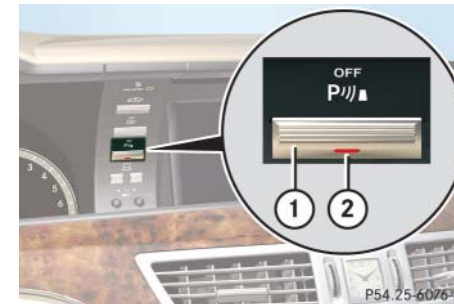

- ① Parktronic button
- ② Indicator lamp

## Controls in detail

### Driving systems

- ▶ **Switching off the Parktronic system:** Press button ①.

Indicator lamp ② comes on.

- ▶ **Switching on the Parktronic system:** Press button ① again.

Indicator lamp ② goes out.

**i** *The Parktronic system is automatically switched on when the ignition is switched on (▷ page 370).*

#### Parktronic system malfunction

If only the red distance segments illuminate and an acoustic warning sounds, there is a malfunction in the Parktronic system. The Parktronic system will automatically switch off after 20 seconds and the indicator lamp in the Parktronic switch comes on.

- ▶ Have the Parktronic system checked by an authorized Mercedes-Benz Center as soon as possible.

If only the red distance segments illuminate and no acoustic warning sounds, the Parktronic system sensors are dirty or there is an interference from other radio or ultrasonic signals. The Parktronic system will automatically switch off after 20 seconds and the indicator lamp in the Parktronic switch comes on.

- ▶ Switch off the ignition (▷ page 370).
  - ▶ Clean the Parktronic system sensors (▷ page 619).
  - ▶ Switch on the ignition.
- or
- ▶ Check the Parktronic system operation at another location to rule out interference from outside radio or ultrasonic signals.

### Park Assist\*

#### Warning!



Park Assist is a supplemental system. It is not intended to, nor does it replace, the need for extreme care. The responsibility during parking and other critical maneuvers always remains with the driver.

#### Warning!



Make sure no persons or animals are in the area in which you are maneuvering. You could otherwise injure them.

**!** *Special attention must be paid to objects with smooth surfaces or low silhouettes (e.g. trailer couplings, painted posts, elevated cross-bars or road curbs). Such objects may not be detected by the system and can damage the vehicle.*

**i** USA only:

*This device has been approved by the FCC as a "Vehicular Radar System". The radar sensor is intended for use in an automotive radar system only. Removal, tampering, or altering of the device will void any warranties, and is not permitted by the FCC. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

**i** Canada only:

*This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:*

- (1) This device may not cause interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.*

*Removal, tampering, or altering of the device will void any warranties, and is not permitted. Do not tamper with, alter, or use in any non-approved way.*

*Any unauthorized modification to this device could void the user's authority to operate the equipment.*

**!** *The operational function of the Park Assist system can be affected by dirty sensors, especially at times of snow and ice.*

*Make sure that the area on the bumpers around the sensors is free of dirt, ice and/or slush, otherwise Park Assist may not function properly, see "Cleaning the driving systems sensors" (▷ page 620).*

**!** *High-frequency sources such as toll stations, speed measuring systems, etc. can cause the Park Assist system to malfunction. You can switch off the Park Assist using the Park Assist button (▷ page 480) or switch off the radar sensors (▷ page 307) to prevent possible malfunction.*

Park Assist is an electronic parking aid with radar sensors that helps you while parking.

When travelling in Canada in a vehicle not registered in Canada, you must switch off the radar sensor system. Canadian law does not permit the use of the radar sensor system for vehicles from outside of Canada. When you switch off the radar sensor system, the following functions are deactivated:

- BAS Plus\* (▷ page 70)
- PRE-SAFE® Brake\* (▷ page 77)
- DISTRONIC Plus\* (▷ page 451)
- Park Assist\* (▷ page 476)
- Advanced Parking Guidance\* (▷ page 481)
- Blind Spot Assist\* (▷ page 495)

It visually and audibly indicates the relative distance between the vehicle and an obstacle.

## Controls in detail

### Driving systems

Park Assist is automatically activated when the engine is running and the transmission is in drive position **D**, reverse gear **R** or neutral position **N**.

The Park Assist system deactivates at speeds over approximately 10 mph (16 km/h). At lower speeds the Parktronic system turns on again.


Park Assist is also switched off when you set the automatic transmission to **P** or switch off the engine.

While the transmission is in neutral position **N**, Park Assist is switched off if you secure the vehicle in place with the electronic parking brake.

The Park Assist system monitors the surroundings of your vehicle with four sensors in the front bumper and two sensors in the rear bumper.

### Range of the sensors

The sensors of the Park Assist system are integrated in the front and rear bumpers. Make sure that the bumpers are clear of dirt, ice and slush in the area of the sensors, as otherwise, Park Assist may not function properly, see “Cleaning the driving systems sensors” (▷ page 620).

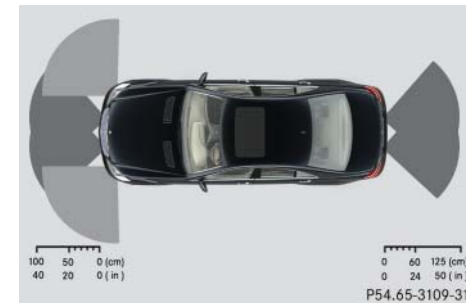

**i** Due to the sensors' broad detection range, it is possible that Park Assist also detects the following obstacles and issues a warning:

- obstacles in the ground, e.g. sewer canal covers, rails, bumps in the road or gutters
- obstacles moving upward quickly, e.g. rolling garage doors

#### Front sensors

Center	<b>approx. 40 in (100 cm)</b>
Corners	<b>approx. 24 in (60 cm)</b>

#### Rear sensors


Center	<b>approx. 50 in (125 cm)</b>
Corners	<b>approx. 24 in (60 cm)</b>

**!** While parking, pay particular attention to objects over or underneath the sensors, e.g. flower boxes, an elevated crossbar or a trailer tow hitch. Park Assist does not detect such nearby objects. You could otherwise damage the vehicle or the objects.

#### Warning indicators

Visual signals indicate to the driver the relative distance between the sensors and an obstacle.

The warning indicator for the front area is in the instrument cluster. The warning indicator for the rear area is on the roof liner in the rear.

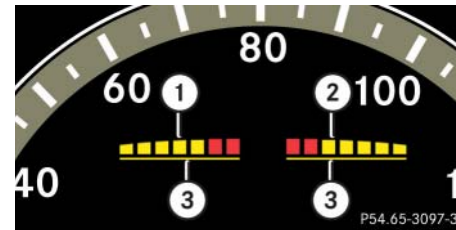

- ① Left side of the vehicle
- ② Right side of the vehicle
- ③ Indicator

Each warning indicator is divided into five yellow and two red distance segments for either side of the vehicle.

If yellow indicators ③ under the segments are lit, Park Assist is ready to measure.

The position of the gear selector lever determines which warning indicators will be activated.

Gear selector lever position	Warning indicator
<b>D</b>	Front area activated
<b>R</b>	Front and rear area activated
<b>N</b>	With the electronic parking brake engaged: neither activated.  With the electronic parking brake released: front and rear area activated.
<b>P</b>	Neither activated

As your vehicle approaches an object, one or more distance segments will illuminate, depending on the distance. When the seventh distance segment illuminates, you have reached the minimum distance.



## Controls in detail

### Driving systems

- **Front area:**  
As soon as the first red segment lights up, you will hear an intermittent warning tone for approximately two seconds. Once the second red segment lights up, you will hear a continuous warning tone. You have reached the minimum distance.
- **Rear area:**  
As soon as the first red segment lights up, you will hear an intermittent warning tone for approximately two seconds. Once the second red segment lights up, you will hear a continuous warning tone. You have reached the minimum distance.

**i** During strong rainfall, the warning indicators and warning tones may be triggered, for example, by water splashing into the area of the sensors.

### Collision warning

Park Assist can detect obstacles from a considerable distance. If you drive in reverse towards an obstacle, you will hear a warning tone. You must then brake in order to avoid a collision. The warning tone for a collision will not sound when the vehicle is at a standstill very close to the obstacle. In this case, you will hear a corresponding tone for the warning indicator in the rear area.


**i** During strong rainfall, the collision warning may be triggered, for example, by water splashing into the area of the sensors.

### Switching Park Assist system on/off

The Park Assist system can be switched off manually.

The Park Assist button with the indicator lamp is located on the control panel on the right-hand side of the instrument cluster.

**i** When the indicator lamp is on, the Park Assist system is switched off.

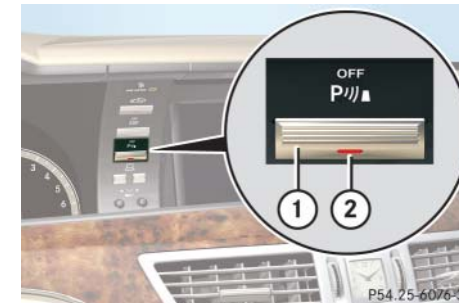

- ① Park Assist button
- ② Indicator lamp

► **Switching off Park Assist system:**

Press button ①.

Indicator lamp ② comes on.

► **Switching on Park Assist system:**

Press button ① again.

Indicator lamp ② goes out.

**i** *The Park Assist system is automatically switched on when the ignition (▷ page 370) and radar sensors are switched on (▷ page 307).*

**Advanced Parking Guidance\***

Advanced Parking Guidance is an electronic parking aid equipped with radar sensors that scan the area on both sides of vehicle. When suitable parking space is found it is shown in the display and you receive steering instructions for parking in that space.

**Warning!**



Advanced Parking Guidance is only an aid and may display parking spaces that are not suitable e.g. due to parking regulations, unsuitable road/ground surfaces, driveways, entrances/exits, etc.

Advanced Parking Guidance only shows a representation of the parking space in the instrument cluster display as parking space is first initially measured when driving past. Subsequent changes to the parking space are not taken into account, e.g. if the position of the vehicle parked in front of or behind the space changes or objects in the parking space are moved. Moving objects are not shown, e.g. pedestrians or vehicles driving past. Advanced Parking Guidance does not relieve you of the responsibility to pay attention. If you only rely on Advanced Parking Guidance, you may cause an accident and injure yourself and others.

You are always responsible for safety and must continue to pay attention to your immediate surroundings when parking and maneuvering.

## Controls in detail

### Driving systems

#### Warning!



Make sure no persons or animals are in the area in which you are maneuvering. You could otherwise injure them.

**!** Special attention must be paid to objects with smooth surfaces or low silhouettes (e.g. trailer couplings, painted posts, elevated cross-bars or road curbs). Such objects may not be detected by the system and can damage the vehicle.

**i** USA only:  
This device has been approved by the FCC as a "Vehicular Radar System". The radar sensor is intended for use in an automotive radar system only. Removal, tampering, or altering of the device will void any warranties, and is not permitted by the FCC. Do not tamper with, alter, or use in any non-approved way.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

**i** Canada only:  
This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Removal, tampering, or altering of the device will void any warranties, and is not permitted. Do not tamper with, alter, or use in any non-approved way.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

**!** The operation and functionality of the Advanced Parking Guidance\* can be affected or impaired by dirty sensors, especially at times of snow and ice.

Make sure that the area on the bumpers around the sensors is free of dirt, ice and/or slush, otherwise Advanced Parking Guidance\* may not function properly, see "Cleaning the driving systems sensors" (> page 620).

Use Advanced Parking Guidance for parking spaces that are

- parallel to the direction of travel
- located on straight streets, i.e. not in curves
- on the same level as the street, i.e. not on sidewalks, for example. Flat curbs may possibly not be detected by Advanced Parking Guidance.

Parking instructions:

- On narrow streets, drive by the parking space as close as possible.
- Parking spaces that are dirty, overgrown or located in front of trailers may not be detected correctly.
- Also observe the Park Assist warning indicator (> page 479) while Advanced Parking Guidance is active.

- How well your vehicle will be parked after completion of the Advanced Parking Guidance depends on the position and shape of the vehicles parked in front of and behind the parking space as well as the conditions of the immediate surroundings. In certain cases, Advanced Parking Guidance may guide you too far into the parking space or not far enough. If this is the case, cancel the parking procedure with Advanced Parking Guidance and correct the vehicle position yourself.

#### Detecting a parking space

Advanced Parking Guidance is active when driving forward. The system operates at a vehicle speed of up to 25 mph (40 km/h) and automatically scans for and measures potential parking spaces on both sides of the vehicle. At a vehicle speed of below 10 mph (16 km/h), you see the white parking space symbol as a system display in the instrument cluster. As soon as Advanced Parking Guidance has detected a suitable parking space, the parking space symbol changes to blue.



#### Detected parking space

- ① Detected parking spaces on the left
- ② Parking space symbol
- ③ Detected parking spaces on the right

In order to be detected by Advanced Parking Guidance, a parking space must be:

- closed-in at the rear
- parallel to the direction of travel
- at least 5 ft (1.5 m) wide
- at least 3.5 ft (1.0 m) longer than your vehicle

## Controls in detail

### Driving systems

A parking space is shown in the display when driving by until you have reached a distance of 50 ft (15 m) from the space. Advanced Parking Guidance only shows parking spaces on the front-passenger side of the vehicle unless you activate the driver's side (left) turn signal. If you would like to park on the driver's side, the left turn signal must remain on until reverse gear is engaged.

#### Parking

The following describes how you can park on the front-passenger side. Parking on the driver's side is performed reversed left to right.

If Advanced Parking Guidance detects an obstacle behind the vehicle during the parking procedure, you will hear an audible warning. Stop the vehicle immediately. The parking space and the lane blink in the instrument cluster. Only continue driving/parking after you have made sure that this is possible to do in a safe manner. If Advanced Parking Guidance no longer detects any obstacles, the display in the instrument cluster stops blinking. You may continue the parking procedure.

#### Warning!



Advanced Parking Guidance is only an aid and may not detect all obstacles. At corners or near smooth surfaces, Advanced Parking Guidance may not detect an object correctly. Advanced Parking Guidance does not relieve you of the responsibility to pay attention. You are always responsible for safety and must continue to pay attention to your immediate surroundings when parking and maneuvering. Otherwise, you could endanger yourself and others.

- ▶ Bring the vehicle to a standstill as long as the desired parking space is displayed by the blue parking space symbol in the instrument cluster.
- ▶ Shift the automatic transmission to position **R**.


The message “*Check Surroundings Press 'OK' to Confirm*” appears in the multifunction display.

## Controls in detail

### Driving systems

- ▶ Press **OK** on the multifunction steering wheel to confirm.

The display in the instrument cluster changes to the Advanced Parking Guidance.

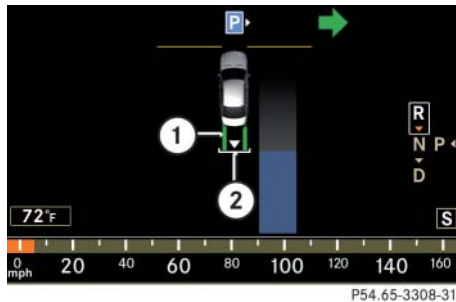


P54.65-3308-31

- ① Green lane
- ② White bracket indicates the stopping position
- ▶ Where necessary, depending on the distance to the parking space, back up in a straight line a short distance. This is indicated by a green lane ①.

- ▶ Back up until you hear an audible warning, then stop.

The stopping position has been reached, indicated by a white bracket ②.

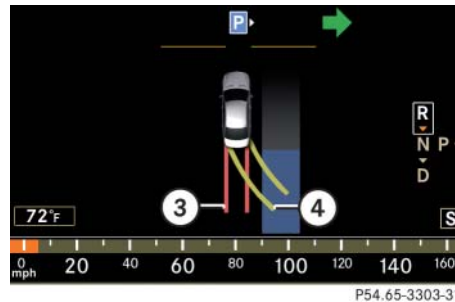


P54.65-3303-31

- ③ Red lane indicates the current steering wheel position
- ④ Yellow lane indicates the required steering wheel position
- ▶ When the vehicle is stationary, turn the steering wheel until the red lane ③ matches up with the yellow lane ④.

The lane ④ then turns green. If the parking space is located within the display range, a white bracket with an arrow for the target position is shown at the end of the green lane.

### Driving into the parking space

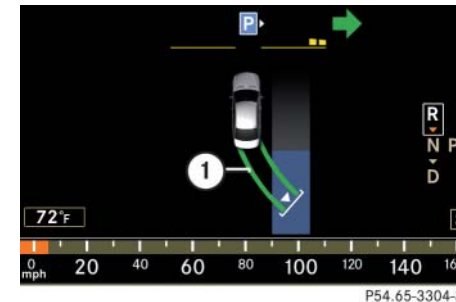


P54.65-3304-31

- ① Green lane indicates the correct steering wheel position
- ▶ Maintain the steering wheel position and carefully back up.
- ▶ Stop as soon as you hear the audible warning. The vehicle has reached the position for countersteering.

## Controls in detail

### Driving systems


#### Countersteering

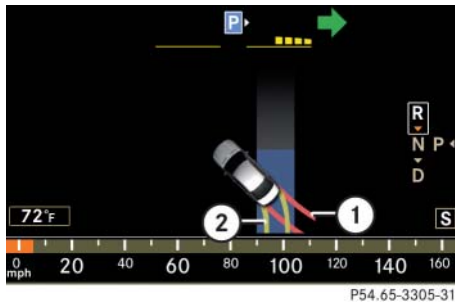

- ① Red lane indicates the current steering wheel position
- ② Yellow lane indicates the required steering wheel position
- ▶ When the vehicle is stationary, turn the steering wheel until the red lane ① matches up with the yellow lane ②.

The lane ② then turns green and a white arrow and a white bracket are shown to indicate the target position.


#### Reaching end position

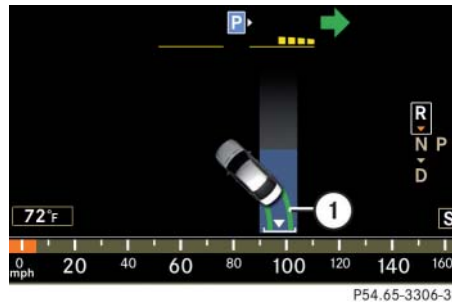

- ① Green lane indicates the correct steering wheel position
- ▶ Maintain the steering wheel position and carefully back up until the end position has been reached.

The message appears *"Parking Guidance Finished"* in the multifunction display and you will hear an audible warning.

If the distance to the rear is too short, you will also be audibly warned by the Park Assist\* system (▷ page 476).

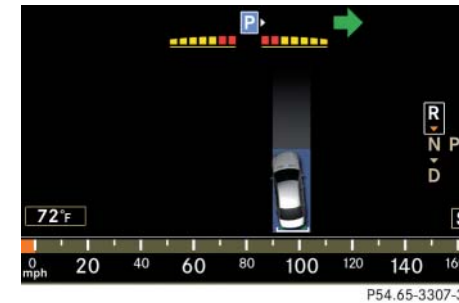

#### End position

Depending on the size of the parking space, the vehicle may be positioned at an angle in the parking space. Advanced Parking Guidance guides you close to the rear limit of the parking space where possible.

- ▶ Adjust the end position by maneuvering as needed.
- ▶ Observe the Park Assist\* display (▷ page 476).

#### Canceling the Advanced Parking Guidance

- ▶ Press the Park Assist\* button (▷ page 480).

The Advanced Parking Guidance is immediately canceled and Park Assist\* is deactivated. No message is shown in the multifunction display.

The Advanced Parking Guidance is automatically canceled if guidance into the parking space is no longer possible or if an error occurs.

The parking space symbol disappears and the message “*Parking Guidance Canceled*” appears in the multifunction display.


#### Rear View Camera\*

The Rear View Camera is an electronic and visual parking aid. It shows you the area behind the vehicle on the COMAND display.

In addition, the Rear View Camera contains guide lines to help you with driving in reverse.

The area behind the vehicle is displayed as a reverse-mirror image similar to the view in a rear-view mirror.

The Rear View Camera is in the handle strip of the trunk lid.

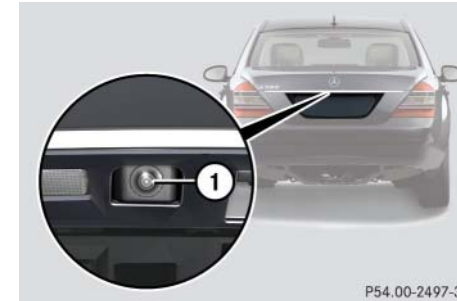

① Rear View Camera



## Controls in detail

### Driving systems

#### View through the camera

**i** *The image from the Rear View Camera is shown mirror-inverted on the COMAND display (▷ page 31).*

#### Warning!



Please note that objects which do not touch the ground, such as the bumper of a vehicle parked behind you, a trailer hitch, or the back of a truck, may appear to be further away than they actually are. In this case, you should not use the guide lines to judge distance. The use of the guide lines to judge distance increases the risk of impacting the objects.

#### Warning!



The Rear View Camera is a supplement system. It is not intended to, nor does it replace, the need for extreme care. The responsibility during parking and other driving maneuvers always remains with the driver.

The Rear View Camera may show obstacles with a distorted perspective, incorrectly or not at all.

Special attention must be paid to objects outside of the camera's field of view such as those located very close to or below the rear bumper, or above the recessed grip of the luggage compartment lid. Such objects may not be detected by the system and can damage the vehicle.

The Rear View Camera does not warn you about impending collisions with objects. The driver is always responsible for safety and must continue to pay attention to the immediate surroundings while parking or maneuvering the vehicle. This applies not only to the area behind the vehicle, but also to the area in front of and to the sides of the vehicle. Failure to do so could result in injury to persons and/or damage to the vehicle or other property. We also recommend that the driver uses the Parktronic system\* or Park Assist\* when parking or maneuvering the vehicle.

#### Warning!



Make sure no persons or animals are in the area in which you are maneuvering. You could otherwise injure them.

#### Warning!



The Rear View Camera may not function if:

- the trunk lid is not completely closed
- it is raining or snowing heavily, or if there is thick fog
- in a very dark area
- the camera is exposed to very strong white light (white stripes may appear on the COMAND display)
- the surrounding area is lit with fluorescent light (the COMAND display can flicker)
- outside temperatures are very high (lens condensation)

- there is a sudden change in temperature, for example when you drive out of the cold into a heated garage in winter (lens condensation)
- the camera lens is dirty or covered, see "Cleaning the Rear View Camera\* lens" (▷ page 621)
- the rear of your vehicle is damaged. In this case, have the position and setting of the camera checked by a qualified technician. Contact an authorized Mercedes-Benz Center.

Do not use the Rear View Camera if the roads are icy, slippery or covered with snow. The vehicle could slip causing the actual vehicle position to deviate from the one shown on the COMAND display.

This may cause injury to you or others, or damage the vehicle or objects.

Mounting tires/rims of other specification than the original equipment tires/rims may impair the function of the Rear View Camera. Contact an authorized Mercedes-Benz Center.

#### Warning!



Use of Rear View Camera can be dangerous if you are color-blind or have impaired color vision.

Only use Rear View Camera if you can see and distinguish all colored guide lines shown by Rear View Camera on the COMAND display.

#### Switching on Rear View Camera

**i** *The Rear View Camera must be activated in the instrument cluster control system in order for it to be switched on (▷ page 303).*

- ▶ Switch on the ignition (▷ page 370).
- ▶ Switch on COMAND (▷ page 87).
- ▶ Move gear selector lever to reverse gear **R**.

The COMAND display will show the area behind the vehicle with guide lines.



## Controls in detail

### Driving systems




#### Warning!



Please note that objects which do not touch the ground, such as the bumper of a vehicle parked behind you, a trailer hitch, or the back of a truck, may appear to be further away than they actually are. In this case, you should not use the guide lines to judge distance as the use of the guide lines to judge distance increases the risk of impacting the objects.

Even when the object you approach is directly on the ground (and nothing on the object extends above the ground beyond the object's contours directly touching the ground) and no objects that do not touch the ground, such as the bumper of a vehicle parked behind you, a trailer hitch, or the back of a truck are in the path, do not approach the object on the ground any closer than red guide line ④.

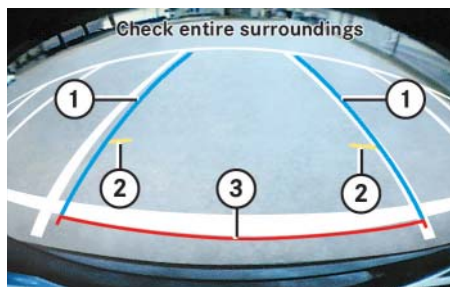

P54.65-3311-31

- ① Blue guide lines for vehicle width
- ② Yellow 39 in (1 m) guide line
- ③ Red 10 in (0.25 m) guide line

The red 10 in (0.25 m) guide line ③, the yellow 39 in (1 m) guide line ② correspond to the relevant distance from the rear of the vehicle. The blue guide line for vehicle width ① show the required width for the vehicle.

**i** If you activate a different function on the driver's COMAND controls while reverse parking or parallel parking, the image from the Rear View Camera is interrupted.

To reactivate the camera, take the vehicle out of reverse gear and then re-engage reverse gear again.

#### Night View Assist\*

##### Warning!



Night View Assist is only an aid to support you while driving and cannot substitute your careful attention. Do not rely on the display of the Night View Assist; instead, continue to look through the windshield. You are always responsible for safety and must drive in accordance with traffic conditions. Otherwise, you could endanger yourself and others.

If it is foggy, raining or snowing, the clarity of the Night View Assist image on the multifunction display may be diminished.

Night View Assist illuminates the road with infrared light in addition to the normal headlamps.

A camera at the top of the windshield measures the infrared light and shows a black-and-white image on the multifunction display.

The image on the multifunction display corresponds to a road lit up by high-beam headlamps.

##### Warning!



Night View Assist cannot record objects immediately in front of or next to the vehicle. When maneuvering, continue to look through the windshield. Make sure no persons or animals are in the area in which you are maneuvering. You could otherwise injure them.


The Night View Assist image on the multifunction display is not impaired

- by the headlamps of approaching vehicles
- if you cannot switch on the high beams due to oncoming traffic

As a result, you can better follow the course of the road and detect obstacles earlier on.

**i** Infrared light is invisible to the human eye and can therefore remain permanently switched on without blinding oncoming traffic.

The camera is at the top of the windshield.

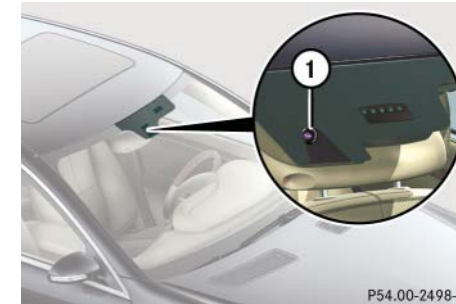

① Night View Assist camera


##### Switching on or off

You can only switch on the Night View Assist if

- the SmartKey in the starter switch is set to position **2**
- it is dark

## Controls in detail

### Driving systems

- the light switch is set to **A** or  or if the daytime driving lamps are switched on
- the automatic transmission is not in reverse gear **R**




- ① Night View Assist on or off
- Press button ① up or down.

The Night View Assist image appears on the multifunction display.

**i** The infrared headlamps only come on above a speed of approximately 9 mph (15 km/h). Therefore, when you are at a standstill, you do not have a complete view and cannot check the function of the Night View Assist.

### Image on multifunction display

When you switch on Night View Assist, the image for the speed gauge changes on the multifunction display. The speed gauge is shown as a bar on the lower edge of the multifunction display. The line for main menus is no longer available. If you would like to change a setting using the steering wheel buttons, you must first switch off Night View Assist.

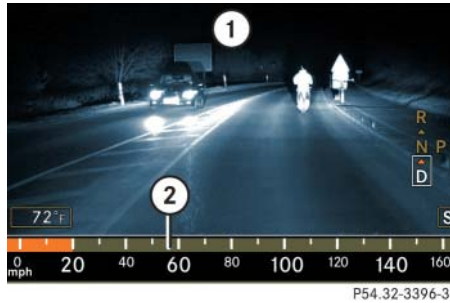

- ① Night View Assist image
- ② Speedometer display

**i** If you change the brightness of the instrument cluster while Night View Assist is switched on, only the brightness of the multifunction display is changed.

### Adjusting instrument cluster illumination



- ① Knob
- Make sure the Night View Assist is switched on.
- **Brightening illumination:** Turn knob ① clockwise.
- **Dimming illumination:** Turn knob ① counterclockwise.

**Dirty or fogged-up windshield**

If the windshield in front of the camera is fogged up on the inside or outside or if it is dirty, the Night View Assist image is diminished.

**Warning!**

Please do not forget that your primary responsibility is to drive the vehicle. A driver's attention to the road must always be his/her primary focus when driving. For your safety and the safety of others, stop before trying to remove window fogging or cleaning the window in front of the Night View Assist camera.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

**Removing condensation**

- ▶ Check settings of automatic climate control and change them, if necessary (▷ page 501).
- ▶ Swing the camera cover downward (▷ page 621).

**Cleaning inside of windshield**

- ▶ Clean inside of windshield in front of camera with a soft, non-scratching cloth (▷ page 621).

## Controls in detail

### Driving systems

#### Night View Assist\* malfunction

Problem	Possible cause	Suggested solution
The quality of the Night View Assist image has diminished.	The windshield wipers are leaving streaks on the windshield.	▶ Replace windshield wiper blades (▷ page 721).
	The area of the windshield within the camera's field of view is dirty.	▶ Clean windshield (▷ page 621).
	The area of the windshield within the camera's field of view has been damaged.	▶ Replace windshield.
	The area of the windshield within the camera's field of view is fogged over.	▶ Remove condensation (▷ page 493).
	The area of the windshield within the camera's field of view is iced over.	▶ Defrost windshield (▷ page 504).

#### Blind Spot Assist\*

Blind Spot Assist uses radar sensors to monitor the area on both sides of your vehicle. It will assist you when you change lanes driving at speeds of above 20 mph (30 km/h). A warning will appear on the outside rear view mirror as soon as another vehicle is detected in the area being monitored. If you then activate the corresponding turn signals to change lanes, you will see and hear a collision warning. Blind Spot Assist operates using two sensors in the front bumper and four sensors in the rear bumper.

#### Warning!



Blind Spot Assist is only a driving aid and may not detect all vehicles. It is the driver's responsibility at all times to be attentive to road, weather and traffic conditions and to provide the steering, braking and other driving inputs necessary to retain control of the vehicle. Failure to do so could result in

recognizing dangers too late, possibly resulting in an accident and serious injury to yourself and others.

In order for Blind Spot Assist to function, the radar sensors must be switched on and operational.

When travelling in Canada in a vehicle not registered in Canada, you must switch off the radar sensor system. Canadian law does not permit the use of the radar sensor system for vehicles from outside of Canada. When you switch off the radar sensor system, the following functions are deactivated:

- BAS Plus\* (▷ page 70)
- PRE-SAFE® Brake\* (▷ page 77)
- DISTRONIC Plus\* (▷ page 451)
- Park Assist\* (▷ page 476)
- Advanced Parking Guidance\* (▷ page 481)
- Blind Spot Assist\* (▷ page 495)

#### Warning!



Blind Spot Assist cannot detect road and traffic conditions.

Blind Spot Assist may not be able to detect narrow vehicles such as motorcycles or bicycles, or it may not detect them until it is too late.

The monitoring function may be impaired if your sensors are dirty, subject to heavy spray, or if visibility is poor due to e.g. snow, rain, or fog. This can result in vehicles not being detected or being detected too late.

It is the driver's responsibility at all times to be attentive to road, weather and traffic conditions and to provide the steering, braking and other driving inputs necessary to retain control of the vehicle. Failure to do so could result in recognizing dangers too late, possibly resulting in an accident and serious injury to yourself and others.




## Controls in detail

### Driving systems

#### Sensor monitoring range

Blind Spot Assist is able to monitor a range up to three meters to the rear and both sides of the vehicle.

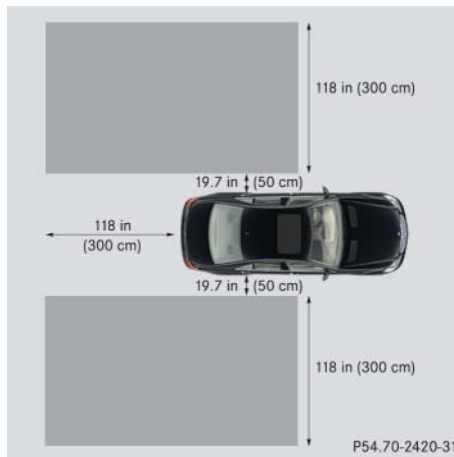

#### Warning!



Blind Spot Assist monitors certain areas in the immediate vicinity of your vehicle. Vehicles approaching and passing at increased speeds will not be detected. There will be no warning display and no audible warning.

When driving in a very wide lane, the sensors may not be able to cover the entire width of the neighboring lane. Vehicles driving on the outside of the neighboring lane may not be detected.

It is the driver's responsibility at all times to be attentive to road, weather and traffic conditions and to provide the steering, braking and other driving inputs necessary to retain control of the vehicle. Failure to do so could result in recognizing dangers too late, possibly resulting in an accident and serious injury to yourself and others.

When driving in a very narrow lane, the sensors may detect and display vehicles in the second lane over. This will be the case if there are vehicles driving on the inside edge of their lane.

The Blind Spot Assist sensors are built into the front and rear bumpers. Make sure that the area of the bumpers around the sensors is free of dirt, ice and snow. The radar sensors must not be obstructed, for example, by bicycle carriers or overhanging luggage.

**!** *In the event of a significant impact or damage affecting the bumpers, have the radar sensors checked by a qualified specialist workshop such as a Mercedes-Benz Center. Failure to do this can result in Blind Spot Assist not functioning correctly.*

#### Indicator and warning lamps



① Yellow indicator lamp/red warning lamp

- **Switching on:** Make sure that the radar sensors (▷ page 307) and Blind Spot Assist (▷ page 304) are switched on.

With the ignition switched on, the warning lamp ① in the exterior mirror lights up red.

With the engine running, the indicator lamp ① in the exterior mirror lights up yellow up to a speed of 20 mph (30 km/h).

Once a speed above 20 mph (30 km/h) has been reached and

- Blind Spot Assist detects no vehicle in its range, the indicator lamp ① goes out
- Blind Spot Assist detects another vehicle in its range, the warning lamp ① on the corresponding side of the vehicle turns red.

#### Warning!



Blind Spot Assist is not active at speeds below approximately 20 mph (30 km/h). You will not be alerted to the presence of vehicles in the monitored area at these speeds.

It is the driver's responsibility at all times to be attentive to road, weather and traffic conditions and to provide the steering, braking and other driving inputs necessary to retain control of the vehicle. Failure to do so could result in recognizing dangers too late, possibly resulting in an accident and serious injury to yourself and others.

#### Collision warning

If a vehicle is detected in the Blind Spot Assist range and you activate the turn signal, a two-tone warning will sound and the red warning lamp ① will flash.

#### Warning!




Do not change lanes or make turns, while the red warning lamp ① is flashing. Doing so could result in an accident and serious injury to yourself and others.

- Remain on the lane that you are currently on until traffic conditions permit to change.

If the turn signal remains on, the red warning lamp ① will flash to indicate that vehicles have been detected. No further audible warnings will sound.

## Controls in detail

### Air vents

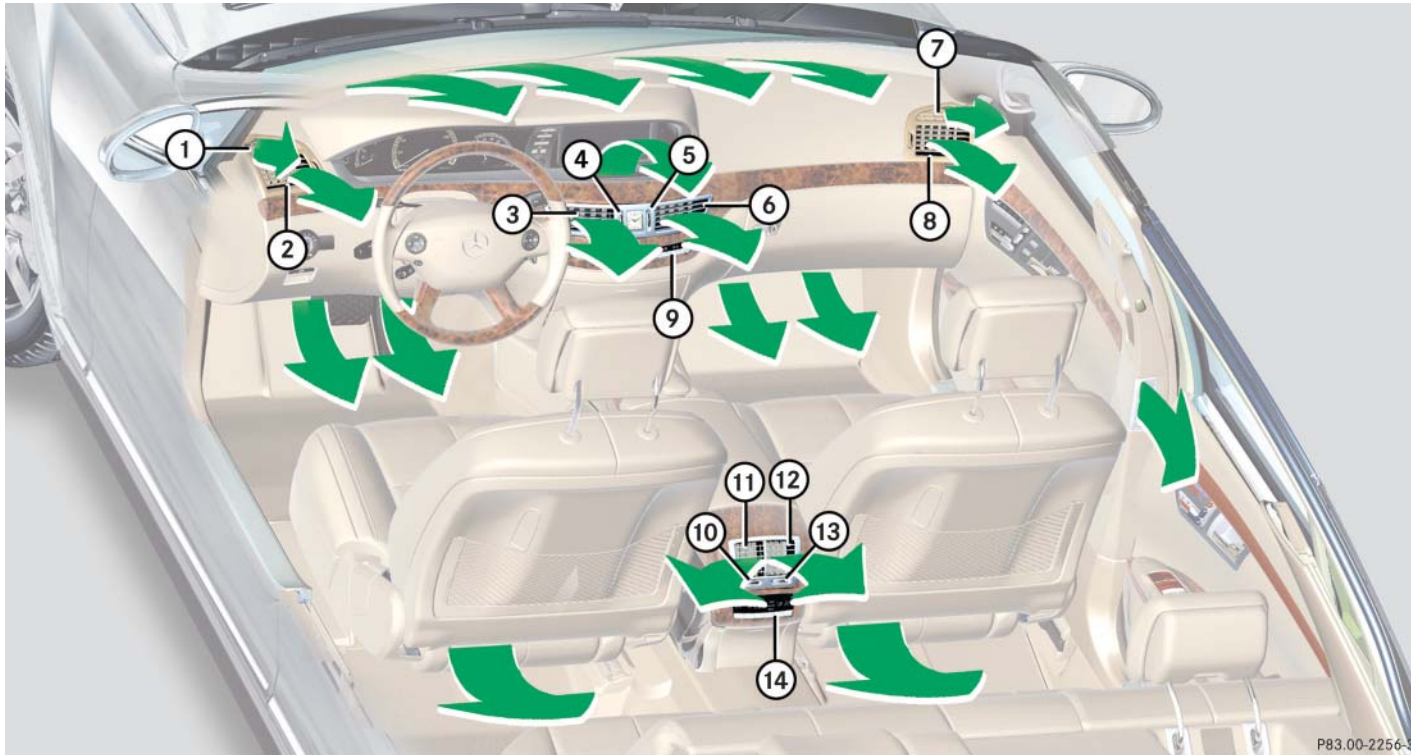

Item
① Left side defroster vent, fixed
② Left side air vent, adjustable
③ Left center air vent, adjustable
④ Thumbwheel for air volume control for left center air vent
⑤ Thumbwheel for air volume control for right center air vent
⑥ Right center air vent, adjustable
⑦ Right side defroster vent, fixed
⑧ Right side air vent, adjustable
⑨ Front climate control panel
⑩ Thumbwheel for left rear center air vents
⑪ Left rear center air vent, adjustable
⑫ Right rear center air vent, adjustable
⑬ Thumbwheel for right rear center air vents
⑭ Rear climate control panel*

#### Warning!



When operating the automatic climate control, the air that enters the passenger compartment through the air vents can be very hot or very cold (depending on the set temperature). This may cause burns or frostbite to unprotected skin in the immediate area of the air vents.

Always keep sufficient distance between unprotected parts of the body and the air vents. If necessary, use the air distribution adjustment (▷ page 275) to direct the air to air vents in the vehicle interior that are not in the immediate area of unprotected skin.

Please comply with the following instructions in order for the automatic climate control to function optimally:

- Keep the air intake grille in front of the windshield free of snow, leaves, sticks, and any other debris.
- Always keep all air vents and grilles in the passenger compartment free from obstruction.

## Controls in detail

### Air vents

#### Opening and closing air vents

**i** For draft-free ventilation, move the sliders for the center air vents ③ and ⑥ (▷ page 498) to the middle position.

#### Center air vents

- ▶ **Opening:** Turn thumbwheels ④ and ⑤ upward (▷ page 498).
- ▶ **Closing:** Turn thumbwheels ④ and ⑤ downward.

#### Side air vents

- ▶ **Opening:** Turn thumbwheels next to side air vents ② and ⑧ upward (▷ page 498).
- ▶ **Closing:** Turn thumbwheels downward.

#### Rear center console air vents

- ▶ **Increasing/decreasing air volume:** Turn thumbwheels ⑩ or ⑬ to the left or right (▷ page 498).


**i** Vehicles without rear passenger compartment climate control\*: The temperature at the air vents ⑪ and ⑫ (▷ page 498) for rear passenger compartment will be approximately the same as at the dashboard center air vents.

#### Ventilated storage compartment (Canada only)

In vehicles without rear passenger compartment climate control\*: the storage compartment under the front armrest can be ventilated when the automatic climate control is switched on.

**!** Extreme temperatures can occur in the storage compartment. Switch off the air vents in the storage compartment while the heating is switched on if you are transporting heat-sensitive items in the compartment.

Keep the air vents free of obstruction.

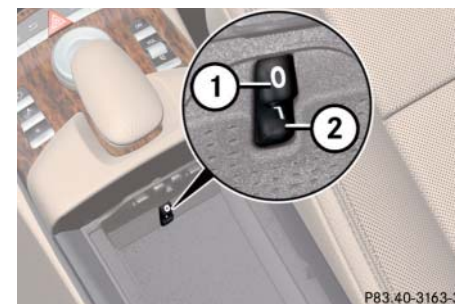

- ① Switching ventilation off
- ② Switching ventilation on

The air volume is dependent on the setting of:

- air distribution control
- air volume control
- air vents in the dashboard

The air temperature is about the same as that of the dashboard air vents. It cannot be regulated separately.

## Controls in detail

### Automatic climate control

#### ▼ Automatic climate control



Automatic climate control panel, front

Item
① AUTO mode for air distribution and volume, left
② Temperature control, left
③ Manual fan speed adjustment, left
④ Front defroster

Item
⑤ Air recirculation
⑥ Automatic climate control on/off
⑦ Residual engine heat and ventilation (REST)
⑧ Rear window defroster

Item
⑨ Manual fan speed adjustment, right
⑩ Temperature control, right
⑪ AUTO mode for air distribution and volume, right

## Controls in detail

### Automatic climate control

**i** If you have the air distribution and air volume automatically controlled, you can adjust the temperature, footwell temperature and air flow. The following basic settings are recommended:

- *Automatic air distribution control* (▷ page 501)
- *Temperature: 72°F (22°C)* (▷ page 504)
- *Footwell temperature: 0* (▷ page 278)
- *Air flow: focused* (▷ page 279)

The automatic climate control is operational whenever the engine is running. You can operate the climate control system in either the automatic or manual mode. The system cools or heats the interior depending on the selected interior temperature and the current outside temperature.

It can only function optimally when you are driving with the windows and the tilt/sliding sunroof/panorama sunroof\* closed.

It is possible to completely deactivate the climate control system (▷ page 503).

Nearly all dust particles, pollutants and odors are filtered out before outside air enters the passenger compartment through the air distribution system.

#### Warning!



Follow the recommended settings for heating and cooling given on the following pages and in the “COMAND automatic climate control” section (▷ page 273). Otherwise the windows could fog up, impairing visibility and endangering you and others.

#### Warning!



Severe conditions (e.g. strong air pollution) may require replacement of the filter before its scheduled replacement interval. A clogged filter will reduce the air volume to the interior and the windows could fog up, impairing visibility and endangering you and others. Have a clogged filter replaced as soon as possible at an authorized Mercedes-Benz Center.

**i** If the vehicle interior is hot, ventilate the interior before driving off, see “Summer opening feature” (▷ page 412). The automatic climate control will then adjust the interior temperature to the set value much faster.

Keep the air intake grille in front of the windshield free of snow, leaves, sticks, and any other debris.

*Do not obstruct air volume by placing objects on the air volume-through exhaust slots below the rear window.*

The following automatic climate control functions can be operated via COMAND:

Function	Page
Temperature	274
Air distribution	275
Air volume	275
Switching off cooling ("AC <sup>OFF</sup> ")	276
Central climate control ("Mono")	277
Footwell temperature	278
Air flow from air vents	279
Rear climate control*	279

#### Deactivating climate control system

- **Deactivating:** Press button **OFF** (▷ page 501) up or down.

The indicator lamp on the button comes on. You will see "Climate Control OFF" in the COMAND display.

#### Warning!



When the automatic climate control is switched off, the outside air supply and circulation are also switched off. Only choose this setting for a short time. Otherwise the windows could fog up, impairing visibility and endangering you and others.

- **Reactivating:** Press button **OFF** (▷ page 501) up or down.

The indicator lamp on the button goes out. You will see the previous settings in the COMAND display.

#### Operating climate control system in automatic mode

Air distribution and air volume is adjusted automatically by the automatic climate control system. You can also adjust the settings for air distribution and air volume manually.

**i** In automatic mode, cooling with dehumidify is switched on. This function can be switched off if necessary (▷ page 276).

#### Activating

- Press button **AUTO** (▷ page 501) up or down.

The indicator lamp on the button comes on.



## Controls in detail

### Automatic climate control

#### Deactivating

- ▶ Press button **AUTO** (▷ page 501) up or down.

or

- ▶ Adjust air distribution (▷ page 275).



 
 
or




 
- ▶ Adjust air volume (▷ page 504).

The indicator lamp on button **AUTO** goes out. The automatic function is switched off.

You can adjust the air distribution (▷ page 275) or air volume (▷ page 504) manually.


#### Setting temperature

Use temperature controls    and  (▷ page 501) in the center console or COMAND (▷ page 274) to separately adjust the air temperature on each side of the passenger compartment. You should raise or lower the temperature setting in small increments, preferably starting at 72°F (22°C). The automatic climate control will adjust to the set temperature as fast as possible.

- ▶ Press temperature control    and/or  (▷ page 501) upward or downward.

The climate control system will correspondingly adjust the interior air temperature.

#### Adjusting air volume

Use buttons  (▷ page 501) in the center console or COMAND to separately adjust the air volume on each side of the passenger compartment.


- ▶ Press button  up to increase or down to decrease air volume.

The indicator lamps on buttons **AUTO** (▷ page 501) goes out.

The automatic function is switched off. The air volume is adjusted corresponding to the set blower speed.

#### Front defroster

You can use this setting to defrost the windshield, for example if it is iced up. You can also defog the windshield and the door windows.

 *Keep this setting selected only until the windshield is clear again.*

#### Activating

- ▶ Press button  (▷ page 501) up or down.


The indicator lamp on the button comes on.

The air conditioning switches to the following functions automatically:


- most efficient blower speed and heating power, depending on outside temperature
- air flows onto the windshield and the front door windows
- the air conditioning compressor switches on at outside temperatures above approximately 41°F (5°C) for air-drying
- the air recirculation mode is switched off

#### Adjustments



You can adjust the air volume and the temperature when the front defroster is switched on. The air flow will remain on the windshield and door windows.

- ▶ Press button  up or down to increase or decrease air volume to the desired level.


The air volume increases/decreases to the next higher/lower blower speed and heating switches to the temperature that was set before the front defroster was switched on.



The indicator lamp on button  goes out.

or

- ▶ Press temperature control   ② and/or ⑩ (▷ page 501) upward or downward.

Heating switches to the temperature that was set before the front defroster was switched on.

The indicator lamp on button  goes out.

 *The air conditioning compressor remains on even with the indicator lamp on button  goes out. This helps to prevent windshield from fogging.*

#### Deactivating

- ▶ Press button  (▷ page 501) up or down.

The indicator lamp on the button goes out.

The previous settings are once again in effect, except air recirculation mode stays off.

#### Windshield fogged on the outside

- ▶ Switch the windshield wipers on (▷ page 408).
- ▶ Press button **AUTO** (▷ page 501) up or down.


The indicator lamp on the button comes on.

## Controls in detail

### Automatic climate control

#### Rear window defroster

##### Activating

- ▶ Switch on the ignition (▷ page 370).
- ▶ Press button  (▷ page 501) up or down.

The indicator lamp on the button comes on.

**!** *The rear window defroster uses a large amount of power. To keep battery drain to a minimum, switch off the defroster as soon as the rear window is clear.*

##### Deactivating

- ▶ Press button  (▷ page 501) up or down.

The indicator lamp on the button goes out.

**i** *The defroster is automatically deactivated after some time of operation depending on the outside temperature.*

#### Warning!



Any accumulation of snow and ice should be removed from the rear window before driving. Visibility could otherwise be impaired, endangering you and others.

**i** *If the rear window defroster switches off too soon and the indicator lamp goes out, this indicates that too many electrical consumers are operating simultaneously and the load on the battery is reducing available voltage. The system responds automatically by deactivating the rear window defroster.*

#### Maximum cooling MAXCOOL (USA only)

If **AUTO** is selected on both the left and right side and there is a high demand for cooling, the display “MAXCOOL” appears in the COMAND display.

This provides the fastest possible cooling of the vehicle interior (when windows and tilt/sliding sunroof or tilt/sliding panel\* are closed).


**i** *Maximum cooling MAXCOOL is only available when the engine is running.*


#### Air recirculation mode

Switch to air recirculation mode to prevent unpleasant odors from entering the vehicle from the outside (e.g. before driving in a tunnel). This setting cuts off the intake of outside air and recirculates the air in the passenger compartment.

#### Warning!




Fogged windows impair visibility, endangering you and others. If the windows begin to fog on the inside, switching off the air recirculation mode immediately should clear interior window fogging. If interior window fogging persists, make sure the air conditioning (▷ page 276) is activated, or press button .

- **Activating:** Press button  (▷ page 501) up or down.


The indicator lamp on the button comes on.

**i** The air recirculation mode is activated automatically at high outside temperatures.

The indicator lamp on button  is not lit when the air recirculation mode is automatically activated.

A quantity of outside air is added when the cooling demand is not at maximum.

If the air conditioning has been turned off (▷ page 276) or the outside temperature is below 41 °F (5 °C), the air recirculation mode will not switch on automatically.

- **Deactivating:** Press button  (▷ page 501) up or down.

The indicator lamp on the button goes out.

**i** The manually selected air recirculation mode is deactivated automatically:

- after 5 minutes if the outside temperature is below approximately 41 °F (5 °C)
- after 5 minutes if the air conditioning is turned off
- after 30 minutes if the outside temperature is above approximately 41 °F (5 °C)

#### Air recirculation mode with convenience closing or opening feature

##### Warning!



Never operate the door windows and the tilt/sliding sunroof or tilt/sliding panel\* if there is the possibility of anyone being harmed by the closing procedure.

Vehicles with tilt/sliding sunroof:

In the event that the procedure causes potential danger, the closing of the door windows can be immediately halted by pressing the respective window switch. The closing of the tilt/sliding sunroof can be immediately halted by moving the tilt/sliding sunroof switch in the overhead control panel in any direction.




## Controls in detail


### Automatic climate control




Vehicles with panorama roof\*:


When using the air recirculation mode with convenience closing feature, should the upward movement of a window be blocked by some obstruction including, but not limited to arms, hands, fingers, etc., the automatic reversal feature will not operate.

In the event that the procedure causes potential danger, the closing of the door windows or the tilt/sliding panel can be immediately halted by releasing button .


The closing of the door windows and the tilt/sliding sunroof or tilt/sliding panel\* can be reversed by again pressing and holding button .


#### Vehicles with tilt/sliding sunroof


- ▶ **Convenience closing:** Press button  for approximately 2 seconds.


The door windows and/or tilt/sliding sunroof will close. You can release button  once the closing proce-

dures has begun. The windows and tilt/sliding sunroof continue closing until they are fully closed. The indicator lamp on the button comes on. The air recirculation mode is activated.



- ▶ **Convenience opening:** Press button  for approximately 2 seconds.

The door windows and/or tilt/sliding sunroof will return to their previous position. You can release button  once the opening procedure has begun. The windows and tilt/sliding sunroof continue opening until they have reached their previous positions. The indicator lamp on the button goes out. The air recirculation mode is deactivated.

**i** A window or tilt/sliding sunroof will only return to its previous position if it has not been moved to another position using the respective window switch or tilt/sliding sunroof switch after it was closed with button .

A window or tilt/sliding sunroof that has been moved will remain in its current position if button  is used to reopen the remaining windows or tilt/sliding sunroof.

#### Vehicles with panorama roof\*

- ▶ **Convenience closing:** Press and hold button  until the door windows and the tilt/sliding panel are closed or have reached the desired position. The indicator lamp on the button comes on. The air recirculation mode is activated.
- ▶ **Convenience opening:** Press and hold button  until the door windows and the tilt/sliding panel are opened or have reached the desired position.

The indicator lamp on the button goes out. The air recirculation mode is deactivated.

#### Residual engine heat and ventilation

With the engine switched off, it is possible to continue to heat or ventilate the interior. This feature makes use of the residual heat produced by the engine.

**i** If you switch on the residual heat function when outside temperatures are high, only the ventilation will be switched on.

**i** Regardless of the selected air volume, the blower operates at low speed when heating. In case of ventilation the blower operates at higher speed.

**i** How long the system will provide heating depends on

- the coolant temperature
- the temperature set by the operator

#### Activating

- ▶ Switch off the ignition (▷ page 370).
- ▶ Press button **REST** (▷ page 501) up or down.

The indicator lamp on the button comes on.

#### Deactivating

- ▶ Press button **REST** (▷ page 501) up or down.

The indicator lamp on the button goes out.

**i** The residual heat is automatically turned off:

- when the ignition is switched on
- after approximately 30 minutes
- if the battery voltage drops
- if the coolant temperature is too low

#### Rear passenger compartment climate control\*

##### Warning!



Follow the recommended settings for heating and cooling as given in the instructions for the front climate control (▷ page 501). Otherwise the windows could fog up, impairing visibility for the driver and endangering you and others.

## Controls in detail

### Automatic climate control



Automatic climate control panel, rear

	Item
①	Temperature control, left
②	Air distribution, left (automatic, manual)
③	Air volume (automatic, manual)
④	Mode selector
⑤	Air distribution, right (automatic, manual)
⑥	Temperature control, right

**i** At low outside temperatures or if you have switched off the cooling function, you cannot cool the rear passenger compartment.

**i** If the climate control system in the rear passenger compartment is adjusted using COMAND (▷ page 279), the **COMAND** symbol appears in the display of the rear control unit. The rear climate control system can no longer be adjusted using the rear control unit.

- ▶ **Switching on automatic mode:** Press button ④ (▷ page 510) up or down repeatedly until “AUTO” mode is selected in display.
- ▶ **Switching off rear climate control:** Press button ④ (▷ page 510) up or down repeatedly until “OFF” mode is selected in display.
- ▶ **Switching off automatic mode:** Press button ④ (▷ page 510) up or down repeatedly until “MAN” mode is selected in display.
- ▶ **Setting temperature:** Use temperature controls ① and ⑥ (▷ page 510) to separately adjust the air temperature on each side of the rear passenger compartment.

- ▶ **Increasing/decreasing:** Press temperature control ① or ⑥ up or down.

The climate control system will correspondingly adjust the interior air temperature.

- ▶ **Adjusting air distribution:** Press button ② or ⑤ (▷ page 510) up or down repeatedly until desired air distribution is set.

The direction of the arrows represent the air distribution. “MAN” appears in the display over the button for the function mode.

- ▶ **Adjusting air volume:** Press air volume control ③ (▷ page 510) up or down.

The air volume is increased or decreased. “MAN” appears in the display over the button for the function mode.

▼ Trunk

**Warning!**



Make sure the trunk is closed when the engine is running and while driving. Among other dangers exhaust fumes may enter the vehicle interior. These fumes are damaging to your health.

**Opening trunk**


You can open the trunk if the vehicle is stationary.

A minimum height clearance of 6.0 ft (1.8 m) is required to open the trunk lid.


**!** *The trunk lid swings open upwards automatically. Always make sure that there is sufficient overhead clearance.*

**i** *If the trunk does not open, it is still locked separately (➤ page 517).*

**Opening trunk from outside**

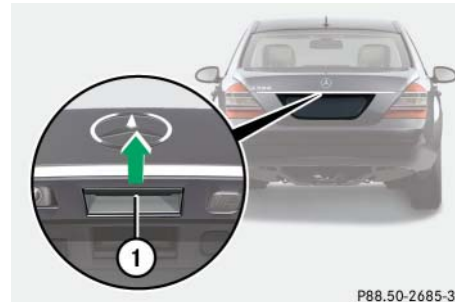


① Trunk lid handle

- ▶ Press and hold button  on the SmartKey or SmartKey with KEYLESS-GO\* until trunk unlocks and begins to open.

or

- ▶ Pull on handle ①.

In vehicles without KEYLESS-GO\*: The vehicle must be unlocked.

**!** *Vehicles with trunk opening/closing system\*: To stop the opening procedure, press button  on the SmartKey or SmartKey with KEYLESS-GO\*.*

**Opening trunk from inside**

**Vehicles without trunk opening/closing system\***



① Remote trunk opening switch

- ▶ Press switch ① until the trunk begins to open.

The trunk opens. The indicator lamp in switch ① comes on and remains lit until the trunk closed.



## Controls in detail

### Trunk

#### Vehicles with trunk opening/closing system\*



① Remote trunk opening/closing\* switch

- ▶ Press and hold switch ① until the trunk is opened.

The indicator lamp in switch ① comes on and remains lit until the trunk is closed.

To interrupt the opening procedure:

- ▶ Release switch ①.

#### Trunk opening-height restriction\*

Vehicles with trunk opening/closing system\*:

The trunk lid opening height can be limited when transporting goods on a roof rack (e.g. presence of an optional MB sport luggage container). When activated, the trunk opens to approximately the height of the roof edge.

- ▶ Activate the limiting opening height of trunk lid using the COMAND system (> page 272).

#### Closing trunk


**i** Do not place the SmartKey in the open trunk. You may lock yourself out.

**i** If the vehicle was previously centrally locked, the trunk will lock automatically after closing it. All turn signal lamps flash three times to confirm locking.

Vehicles with KEYLESS-GO\*: To prevent a possible inadvertent lockout, the trunk will open automatically if a SmartKey with KEYLESS-GO\* is recognized inside the vehicle or in the trunk.

The vehicle is only locked when the turn signals flash three times. If you are carrying a second SmartKey with KEYLESS-GO\* with you, you can still lock the vehicle.

#### Closing trunk from outside manually

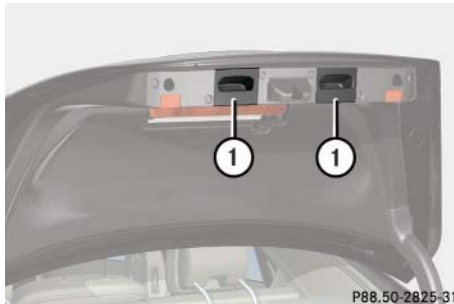

#### ① Handles

- ▶ Lower trunk lid by pulling firmly on handles ①.
- ▶ Close the trunk with hands placed flat on the trunk lid.

The power closing assist automatically ensures that the trunk lid is pulled closed completely (▷ page 368).

#### Warning!



To prevent possible personal injury, always keep hands and fingers away from the trunk lid opening when closing the trunk. Be especially careful when small children are around.


When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

#### Closing trunk from outside automatically\*

#### Warning!



Monitor the closing procedure carefully to make sure no one is in danger of being injured. To prevent possible personal injury, always keep hands and fingers away from the trunk lid opening when closing the trunk. Be especially careful when small children are around. To stop the closing procedure, do one of the following:

- press button  on the SmartKey or SmartKey with KEYLESS-GO\*
- press the trunk opening/closing\* switch (on the driver's door)



## Controls in detail


### Trunk



- press the trunk closing switch
- press the KEYLESS-GO\* locking/closing switch
- pull the trunk lid handle


Even with the SmartKey or SmartKey with KEYLESS-GO\* removed from the starter switch or the SmartKey with KEYLESS-GO\* removed from the vehicle, the remote trunk opening/closing\* switch can be operated. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

In vehicles with trunk opening/closing system\* you can close the trunk separately from the outside using the trunk closing switch.

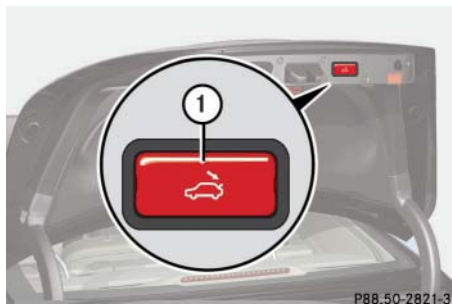

Vehicles without KEYLESS-GO\*

① Trunk closing switch

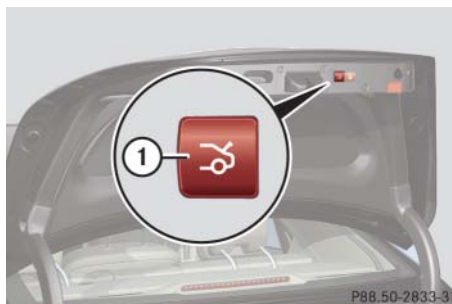

Vehicles with KEYLESS-GO\*

① Trunk closing switch

- ▶ Press trunk closing switch ① briefly.

The trunk closes.

**i** If the trunk lid comes into contact with an object while closing (e.g. luggage that has been piled too high) in the upper motion sequence, the closing procedure is stopped and the trunk re-opens slightly.

#### **Closing trunk and locking vehicle from outside (vehicles with KEYLESS-GO\*)**

In vehicles with trunk opening/closing system\* and KEYLESS-GO\*, you can close the trunk and lock the vehicle simultaneously from the outside using the KEYLESS-GO locking/closing switch.



- ① KEYLESS-GO locking/closing switch
- ▶ Make sure you have the SmartKey with KEYLESS-GO with you.
- ▶ Press switch ① briefly.

With all doors closed:

- The locking knobs in the doors move down.
- The trunk starts to close automatically.
- All turn signal lamps flash three times to confirm locking once the trunk has closed completely.

- An acoustic signal sounds three times (if equipped and feature activated).
- The anti-theft alarm system is armed.

**i** If the trunk lid comes into contact with an object while closing (e.g. luggage that has been piled too high) in the upper motion sequence, the closing procedure is stopped and the trunk re-opens slightly.

### Closing trunk from inside automatically\*

#### Warning!



Maintain sight of trunk area while operating door mounted switch. Monitor the closing procedure carefully to make sure no one is in danger of being injured.

To interrupt the closing procedure, release the door mounted remote trunk opening/closing\* switch.

Even with the SmartKey or SmartKey with KEYLESS-GO\* removed from the starter switch or the SmartKey with KEYLESS-GO\* removed from the vehicle, the remote trunk opening/closing\* switch can be operated. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

## Controls in detail

### Trunk

**i** If the trunk lid comes into contact with an object while closing (e.g. luggage that has been piled too high) in the upper motion sequence, the closing procedure is stopped and the trunk re-opens slightly.

In vehicles with trunk opening/closing system\* you can close the trunk from the inside using the remote trunk opening/closing\* switch.



① Remote trunk opening/closing\* switch (vehicles with trunk opening/closing system\*)

► Press and hold switch ① until the trunk is closed.


The indicator lamp in the switch goes out when the trunk is closed.

To interrupt the closing procedure:

► Release switch ①.

### Trunk emergency release

With the emergency release button, the trunk can be opened from inside the trunk.

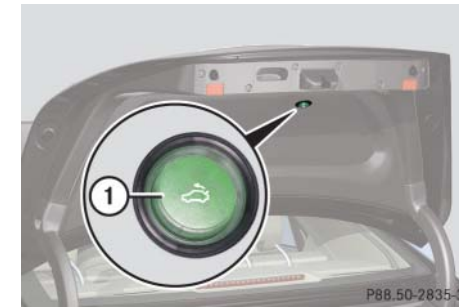

① Emergency release button

► Briefly press emergency release button ①.

The trunk opens.

**i** The emergency release button unlocks and opens the trunk while the vehicle is standing still or in motion.


Illumination of the emergency release button:

- The button will flash for 30 minutes after opening the trunk.
- The button will flash for 60 minutes after closing the trunk.

**i** The emergency release button does not open the trunk if the vehicle battery is discharged or disconnected.

### Valet locking

**i** To deny any unauthorized person access to the trunk, e.g. when you valet park the vehicle, lock it separately with the mechanical key. Leave only the SmartKey or SmartKey with KEYLESS-GO\* less its mechanical key with the vehicle.

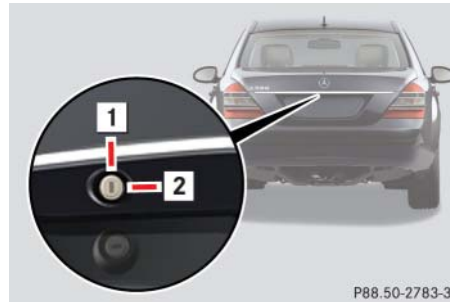

1 Neutral position

2 Locked

- ▶ Close the trunk (▷ page 512).
- ▶ Remove the mechanical key from the SmartKey (▷ page 708).

- ▶ Insert the mechanical key in the trunk lid lock.
- ▶ Turn the mechanical key clockwise to position **2** to lock the trunk.

The trunk remains locked even when the vehicle is centrally unlocked.

**i** You can only cancel the separate trunk locking mode by means of the mechanical key.

- ▶ Insert the mechanical key in the trunk lid lock.
- ▶ Turn the mechanical key counterclockwise to neutral position **1** to unlock the trunk.

You can now open the trunk (▷ page 511).

## Controls in detail


### Power tilt/sliding sunroof

#### Opening and closing power tilt/sliding sunroof

##### Warning!



When closing the tilt/sliding sunroof, make sure that there is no danger of anyone being harmed by the closing procedure.

If the tilt/sliding sunroof encounters an obstruction that blocks its path in a circumstance where you are closing the tilt/sliding sunroof by moving the tilt/sliding sunroof switch past the resistance point, or by pressing and holding button  on the SmartKey, by pressing and holding the sensor surface (vehicles with KEYLESS-GO\*) on the outside door handle, the automatic reversal function will not operate.

The opening/closing procedure of the tilt/sliding sunroof can be immediately halted by releasing the switch or, if the switch was moved past the resistance point and released, by moving the switch in any direction.

The tilt/sliding sunroof is made out of glass. In the event of an accident, the glass may shatter. This may result in an opening in the roof.

In a vehicle rollover, occupants not wearing their seat belts or not wearing them properly may be thrown out of the opening. Such an opening also presents a potential for injury for occupants wearing their seat belts properly as entire body parts or portions of them may protrude from the passenger compartment.


When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

**!** To avoid damaging the seals, do not transport any objects with sharp edges which can stick out of the tilt/sliding sunroof.

*Do not open the tilt/sliding sunroof if there is snow or ice on the roof, as this could result in malfunctions.*

**!** Please keep in mind that weather conditions can sometimes change rapidly. Make sure to close the tilt/sliding sunroof when leaving the vehicle. If water enters the vehicle interior, vehicle electronics could be damaged which is not covered by the Mercedes-Benz Limited Warranty.

**i** When the tilt/sliding sunroof is open, resonance noises may result in addition to the usual wind noises. They are caused by minimal pressure changes in the passenger compartment. To reduce or eliminate these noises, change the position of the tilt/sliding sunroof or open a side window slightly.

**i** You can also open or close the tilt/sliding sunroof using the SmartKey, see "Summer opening feature" (▷ page 412) and "Convenience closing feature" (▷ page 413). Depending on current position, the tilt/sliding sunroof may also open or close when the air recirculation button  (▷ page 501) is pressed and held for 2 seconds.


## Controls in detail

### Power tilt/sliding sunroof

**i** If PRE-SAFE® has been activated, the tilt/sliding sunroof closes automatically until only a small gap remains.

**i** With the SmartKey in starter switch position **0** or removed from the starter switch, the tilt/sliding sunroof can be operated

- until you open the driver's or passenger door
- for up to approximately 5 minutes

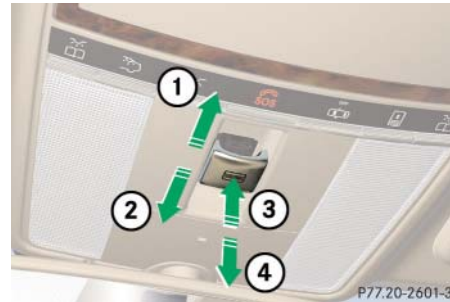

- ① Push back to slide sunroof open
- ② Push forward to slide sunroof closed
- ③ Push up to raise sunroof at rear
- ④ Pull down to lower sunroof at rear

With the sunroof closed or tilted open, a screen can be slid into the roof opening to help provide shade. When sliding the sunroof open, the screen will also retract.

- ▶ Switch on the ignition (▷ page 370).

- ▶ To open, close, raise or lower, move the switch to resistance point in the required direction ① to ④ until the tilt/sliding sunroof has reached the desired position.

- ▶ **Express-operation:** To open, close, raise or lower, move the switch past the resistance point in the required direction ① to ④ and release.

The tilt/sliding sunroof opens or closes completely.

- ▶ **Stopping during Express-opening/closing:** Move the switch in any direction.

**i** If the movement of the tilt/sliding sunroof is blocked during the closing procedure, the sunroof will stop and reopen slightly.



## Controls in detail

### Power tilt/sliding sunroof

#### Synchronizing

The tilt/sliding sunroof must be synchronized

- if the tilt/sliding sunroof can only be opened with a jerking motion
- after a malfunction

**!** *Do not open the tilt/sliding sunroof completely if it is not aligned. Otherwise you could damage the tilt/sliding sunroof.*

- ▶ Switch on the ignition (▷ page 370).
- ▶ Press and hold the sunroof switch in the direction of arrow ③ until the tilt/sliding sunroof is fully raised at the rear.

- ▶ Keep holding the sunroof switch in the direction of arrow ③ for approximately 1 second.

- ▶ Check the Express-operation feature (▷ page 519).

If the tilt/sliding sunroof opens completely, the sunroof is synchronized. Otherwise repeat the above steps.

### Panorama roof with power tilt/sliding panel\*

#### ▼ Panorama roof with power tilt/sliding panel\*

##### Roller sunblinds

The roller sunblinds are designed to protect you from excessive sunlight streaming in through the panorama roof with power tilt/sliding panel.

The front roller sunblind only operates with the tilt/sliding panel closed. The front and rear roller sunblind cannot be operated individually.


##### Warning!



When extending/retracting the roller sunblinds, make sure that no one is in danger of being injured by the closing procedure. The extending/retracting of the roller sunblinds can be immediately halted by releasing the switch or, if the switch was pressed past the resistance point and released, by pressing the switch in any direction.

- ▶ Switch on the ignition (▷ page 370).

##### Operating front roller sunblind

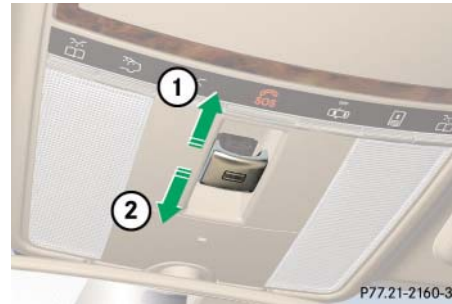

##### Roof panel switch


- ① Extend front roller sunblind
- ② Retract front roller sunblind

- ▶ **Extending or retracting:** Move the roof panel switch to the resistance point in the required direction of arrow ① or ② until the front roller sunblind has reached the desired position.
- ▶ **Express-extending:** Move the roof panel switch past the resistance point in direction of arrow ① and release.

The front roller sunblind extends completely.

- ▶ **Stopping during Express-extending:** Move the roof panel switch in any direction.

##### Operating rear roller sunblind from front

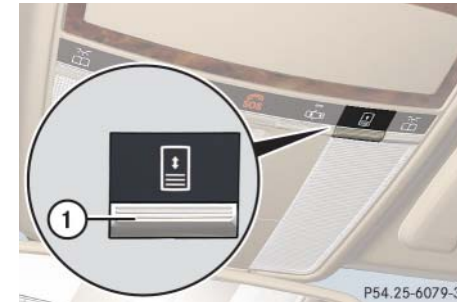

- ① Extending and retracting


- ▶ **Extending or retracting:** Press button ① until the rear roller sunblind has reached the desired position.

**i** To change directions, you must first extend or retract the rear roller sunblind completely.

## Controls in detail

### Panorama roof with power tilt/sliding panel\*

#### Operating rear roller sunblind from rear

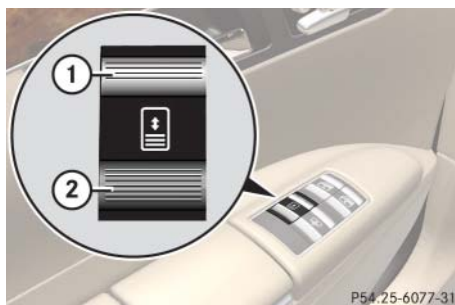

#### Rear door control panel

- ① Retracting
- ② Extending

- ▶ **Extending:** Press button ② on the rocker switch until the rear roller sunblind has reached the desired position.
- ▶ **Retracting:** Press button ① on the rocker switch until the rear roller sunblind has reached the desired position.

#### Opening and closing panorama roof with power tilt/sliding panel

#### Warning!



When opening or closing the tilt/sliding panel, make sure that there is no danger of anyone being harmed by the opening or closing procedure.

The opening procedure of the tilt/sliding panel can be immediately halted by releasing the switch or, if the switch was moved past the resistance point and released, by moving the switch in any direction.

The closing procedure of the tilt/sliding panel can be immediately halted by releasing the switch.

The panorama roof with power tilt/sliding panel is made out of glass. In the event of an accident, the glass may shatter. This may result in an opening in the roof.

In a vehicle rollover, occupants not wearing their seat belts or not wearing them properly may be thrown out of the opening.

Such an opening also presents a potential for injury for occupants wearing their seat belts properly as entire body parts or portions of them may protrude from the passenger compartment.

When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.

**!** *To avoid damaging the seals, do not transport any objects with sharp edges which can stick out of the tilt/sliding panel.*


*Do not open the tilt/sliding panel if there is snow or ice on the roof, as this could result in malfunctions.*

### Panorama roof with power tilt/sliding panel\*


**!** Please keep in mind that weather conditions can sometimes change rapidly. Make sure to close the tilt/sliding panel when leaving the vehicle. If water enters the vehicle interior, vehicle electronics could be damaged which is not covered by the Mercedes-Benz Limited Warranty.

**i** When the panorama roof with power tilt/sliding panel is open, resonance noises may result in addition to the usual wind noises. They are caused by minimal pressure changes in the passenger compartment. To reduce or eliminate these noises, change the position of the panorama roof with power tilt/sliding panel or open a side window slightly.

**i** You can also open or close the tilt/sliding panel using the SmartKey, see “Summer opening feature” (▷ page 412) and “Convenience closing feature” (▷ page 413).

Depending on current position, the tilt/sliding panel may also open or close when the air recirculation button  in the control panel of the climate control (▷ page 501), is pressed and held for 2 seconds.

The tilt/sliding panel only operates with the roller sunblinds extended.

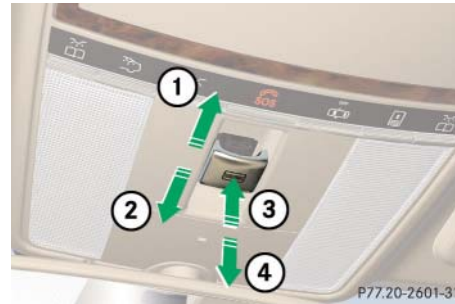

#### Roof panel switch

- ① Push back to slide roof panel open
- ② Push forward to slide roof panel closed
- ③ Push up to raise roof panel
- ④ Pull down to lower roof panel

▶ Switch on the ignition (▷ page 370).

▶ To open, close, raise, or lower the tilt/sliding panel, move the roof panel switch to resistance point in the required direction of arrows ① to ④.

Release the roof panel switch when the tilt/sliding panel has reached the desired position.

**i** If the front roller sunblind is retracted while being raised, it will extend first.

▶ **Express-opening:** Move the roof panel switch past the resistance point in direction of arrow ① and release.

The tilt/sliding panel opens completely.

▶ **Express-raising:** Move the roof panel switch past the resistance point in direction of arrow ③ and release.

The tilt/sliding panel raises completely.

▶ **Stopping during Express-operation:** Move the roof panel switch in any direction.

**i** You cannot automatically close and lower the panorama roof with power tilt/sliding panel.

## Controls in detail

### Panorama roof with power tilt/sliding panel\*


#### Synchronizing

The tilt/sliding panel and front roller sunblinds must be synchronized

- after a malfunction
- if the panorama roof with power tilt/sliding panel can only be opened with a jerking motion

#### Tilt/sliding panel and front roller sunblind

- ▶ Switch on the ignition (▷ page 370).

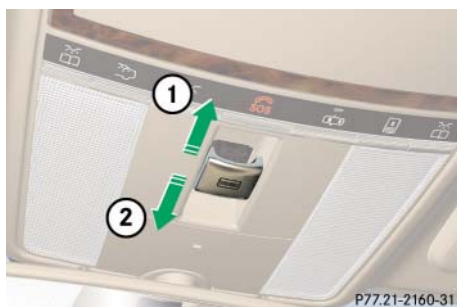


- ▶ Move and hold the roof panel switch in direction of arrow ② until the front roller sunblind is fully retracted.

- ▶ Keep holding the roof panel switch in direction of arrow ② for approximately 1 second.
- ▶ Move and hold the roof panel switch in direction of arrow ① until the front roller sunblind is fully extended.
- ▶ Move and hold the roof panel switch in direction of arrow ① until the tilt/sliding panel is slightly opened.
- ▶ Move and hold the roof panel switch in direction of arrow ② until the tilt/sliding panel is fully closed.
- ▶ Keep holding the roof panel switch in direction of arrow ② for approximately 1 second.
- ▶ Check the Express-open feature of the tilt/sliding panel (▷ page 523).

If the tilt/sliding panel opens completely, the roof is synchronized. Otherwise repeat the above steps.

#### Rear roller sunblind

- ▶ Switch on the ignition (▷ page 370).

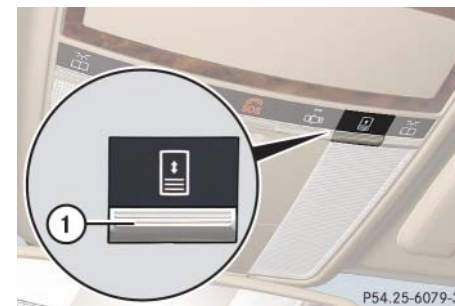

- ▶ Press button ① until the rear roller sunblind is fully retracted.
- ▶ Keep holding button ① for approximately 1 second.

▼ Loading and storing

Roof rack\*

**Warning!**



Only use roof racks approved by Mercedes-Benz for your vehicle model to avoid damage to the vehicle.

Follow the manufacturer's installation instructions. Otherwise, an improperly attached roof rack system or its load could become detached from the vehicle.


Do not exceed the maximum roof load of 220 lb (100 kg).

Take into consideration that when the roof rack is loaded, the handling characteristics are different from those when operating the vehicles without the roof rack loaded.

**!** Load the roof rack in such a way that the vehicle cannot be damaged while driving.

Make sure

- you can fully raise tilt/sliding sunroof or the panorama roof with tilt/sliding panel\*
- you can fully open the trunk

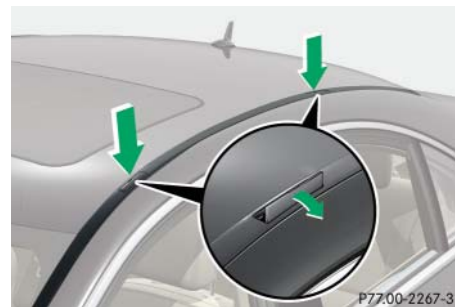

- ▶ Flip the covers upward.
- ▶ Only attach the roof-rack system to the anchorage points under the covers.

Observe manufacturer's instructions for installation.

Loading instructions

The total load weight including vehicle occupants and luggage/cargo should not exceed the load limit as indicated on the corresponding placard located on the driver's door B-pillar (▷ page 585).

**Warning!**



Always fasten items being carried as securely as possible using cargo tie-down hooks and fastening materials appropriate for the weight and size of the load.

In an accident, during hard braking or sudden maneuvers, loose items will be thrown around inside the vehicle and can cause injury to vehicle occupants unless the items are securely fastened in the vehicle. ▷▷

## Controls in detail

### Loading and storing

▷▷ To help avoid personal injury during a collision or sudden maneuver, exercise care when transporting cargo. Put luggage or cargo in the trunk if possible.

Do not pile luggage or cargo higher than the seat backs. Do not place anything on the rear-window shelf.

Never drive vehicle with trunk open. Deadly carbon monoxide (CO) gases may enter vehicle interior resulting in unconsciousness and death.

### Storage compartments

#### Warning!



To help avoid personal injury during a collision or sudden maneuver, exercise care when storing objects in the vehicle. Put luggage or cargo in the trunk if possible. Do not pile luggage or cargo higher than the seat backs.

Parcel nets cannot secure hard or heavy objects.


Keep compartment lids closed. This will help to prevent stored objects from being thrown about and injuring vehicle occupants during

- braking
- vehicle maneuvers or
- an accident.

**i** An overview of the storage compartments can be found on (> page 36).

### Storage compartments in the front passenger compartment

#### Glove box

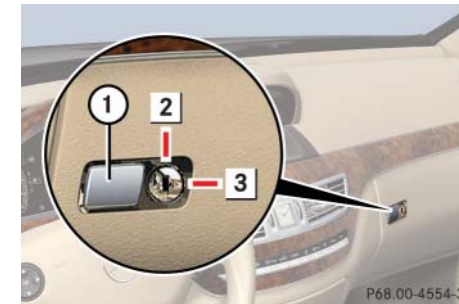

- |   |                       |
|---|-----------------------|
| ① | Glove box lid release |
| 2 | Unlocking glove box   |
| 3 | Locking glove box     |

The glove box can be unlocked and locked with the mechanical key (> page 708).

- ▶ **Opening:** Press glove box lid release ①.
- ▶ **Closing:** Push the lid up.

## Controls in detail

### Loading and storing

- ▶ **Locking:** Insert the mechanical key into the glove box lock and turn it clockwise to position **3**.
- ▶ **Unlocking:** Insert the mechanical key into the glove box lock and turn it counterclockwise to position **2**.


#### Storage compartments in the front armrest



- ① Storage tray/telephone\* compartment
- ② Storage compartment (not with rear climate control system\*)

- ▶ **Opening storage tray/telephone\* compartment:** Press button ① and swing armrest to left or right side.
- ▶ **Opening storage compartment:** Press button ② and swing center armrest upward.

#### Storage compartments below the front seats

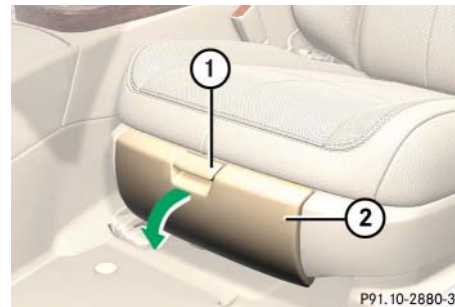

- ▶ **Opening:** Pull tab ① upward and fold cover ② forward.

#### Eyeglasses compartment



- ▶ **Opening:** Press mark ①.
- ▶ **Closing:** Swing eyeglasses compartment upward until it engages.



## Controls in detail

### Loading and storing

#### *Parcel net in front passenger footwell*

##### **Warning!**




The parcel net is intended for storing light-weight items only.

Heavy objects, objects with sharp edges or fragile objects may not be transported in the parcel net. In an accident, during hard braking, or sudden maneuvers, they could be injury to vehicle occupants.

The parcel net cannot protect transported goods in the event of an accident.

A small convenience parcel net is located in the front passenger footwell. It is for small and light items, such as road maps, mail, etc.

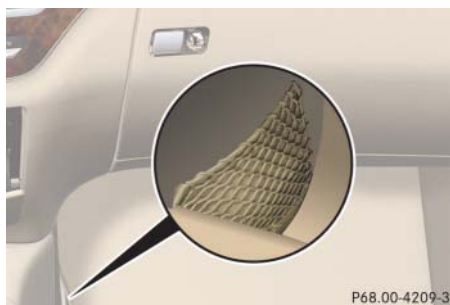

#### **Storage compartments in rear passenger compartment**

##### **Armrest with integrated storage compartment**

**!** Before storing the armrest in the backrest, close the storage compartment cover.

**!** Do not sit on or lean your body weight against the armrest when it is folded down, as you could otherwise damage it.



##### **Vehicles without control panel\* in rear armrest**

► **Opening:** Pull release catch ① and swing the cover upward.

## Controls in detail

### Loading and storing



#### Vehicles with control panel\* in rear armrest

- ▶ **Opening:** Press button ① and swing the cover upward.

#### Storage compartment between rear seats



#### Vehicles without rear center seat\*

- ▶ **Opening:** Pull handle ① backward in the direction of arrow.

#### Rear storage box

**!** Do not sit on or lean your body weight against the armrest when it is folded down, as you could otherwise damage it.

**i** When the rear seats are in their basic position, you can open the cover more easily.



- ▶ Fold down rear center armrest.
- ▶ Pull handle ① upward in the direction of arrow.
- ▶ Swing down cover ②.

## Controls in detail

### Loading and storing

#### Ruffled storage pockets



Ruffled storage pockets ① are located on the back of the front seats.

#### Warning!



Do not place objects with a combined weight of more than 4.4 lbs (2 kg) into the ruffled storage pocket. Otherwise, the Occupant Classification System OCS (> page 47) may not be able to properly approximate the occupant weight category.

The ruffled storage pocket is intended for storing light-weight items only.

Heavy objects, objects with sharp edges or fragile objects may not be transported in the ruffled storage pocket. In an accident, during hard braking, or sudden maneuvers, they could be thrown around inside the vehicle and cause injury to vehicle occupants.

The ruffled storage pocket cannot protect transported goods in the event of an accident.

#### Cupholders

#### Warning!



In order to help prevent spilling liquids on vehicle occupants and/or vehicle equipment, only use containers that fit into the cupholder. Use lids on open containers and do not fill containers to a height where the contents, especially hot liquids, could spill during braking, vehicle maneuvers, or in an accident. Liquids spilled on vehicle occupants may cause serious personal injury. Liquids spilled on vehicle equipment may cause damage not covered by the Mercedes-Benz Limited Warranty.

When not in use, keep the cupholders closed. An open cupholder may cause injury to you or others when contacted during braking, vehicle maneuvers, or in an accident.

## Controls in detail

### Loading and storing

Keep in mind that objects placed in the cupholder may come loose during braking, vehicle maneuvers, or in an accident and be thrown around in the vehicle interior. Objects thrown around in the vehicle interior may cause an accident and/or serious personal injury.

#### Cupholder in front center console



- ① Mark
- ② Handle

- ▶ **Opening:** Press mark ① on the front.
- ▶ **Closing:** Fold cover in until it engages.

**i** You can remove the cupholder to clean it. Only clean it using clear, lukewarm water.

- ▶ **Removing:** Pull cupholder out by pulling silver handle ② upward in direction of arrow.
- ▶ **Inserting:** Press downward until it engages. While doing so, make sure that the word "Front" is in the proper installation position.


#### Cupholder in rear



#### Vehicles without control panel\* in rear armrest

- ① Compartment for cupholder

- ▶ **Opening:** Press mark ① on the front.

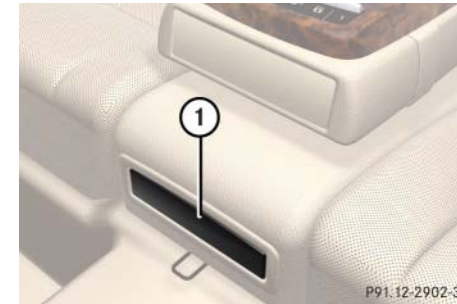

#### Vehicles with control panel\* in rear armrest

- ① Compartment for cupholder
- ▶ **Opening:** Press front of cupholder ①.

## Controls in detail


### Loading and storing

#### Trunk


##### Storage spaces under trunk floor

You can place a suitcase in the hollow under the front part of the trunk floor.

**!** *Fold down the suitcase handle before closing the trunk to avoid damaging the trunk lid.*

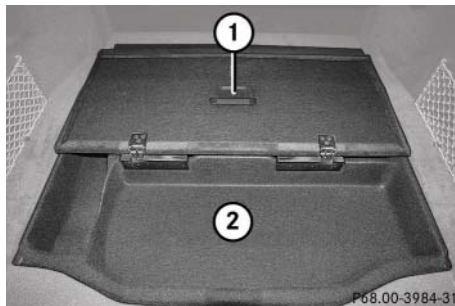

- ① Trunk floor
- ② Storage spaces

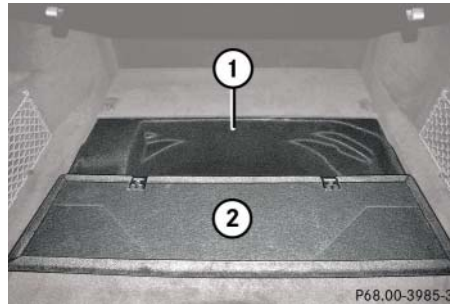

- ① Storage space
- ② Trunk floor

#### Cargo tie-down hooks



4 hooks are located in the trunk.

- ▶ Carefully secure cargo by applying even load on all hooks with rope of sufficient strength to hold down the cargo.

## Controls in detail

### Loading and storing

#### Retaining hooks

A hook is located on the upper edge of the trunk and can be used to attach cargo items such as bags.



- ① Tab
- ② Retaining hook

► Pull tab ① of retaining hook ② down.

**!** Do not use the retaining hooks to tie down cargo.

#### Parcel net in trunk

There is a pocket net on each side of the right and left trunk side walls to secure loads.

#### Retainer for Operator's Manual pouch



- ① Hook-and-loop fastener
- ② Operator's Manual pouch

Use hook-and-loop fasteners ① to fasten Operator's Manual pouch ② in place.

## Controls in detail

### Useful features

#### Sun visors

##### Warning!



Do not use the vanity mirror while driving. Keep the vanity mirrors in the sun visors closed while vehicle is in motion. Reflected glare can endanger you and others.



- ① Sun visor
- ② Vanity mirror cover
- ③ Vanity mirror lamp
- ④ Document holder

#### Glare from front

- ▶ Swing sun visor ① down.

#### Glare from front and sides

❗ *Close vanity mirror cover ② (if open) before you disengage sun visor ① from the mounting and pivot it to the side.*

- ▶ Disengage sun visor ① from the mounting.
- ▶ Pivot sun visor ① to the side.

#### Vanity mirror in sun visor

- ▶ To use vanity mirror, lift up cover ②. Vanity mirror lamp ③ comes on.

ℹ *If you disengage sun visor ① from the mounting, vanity mirror lamp ② will switch off.*

#### Document holder

You can use the plastic tab of document holder ④ to hold admission tickets, parking passes, or similar items in place.

#### Vanity mirror in rear




- ▶ **Opening:** Press mark ①.

The vanity mirror swings down in the direction of the arrow.

- ▶ **Closing:** Swing vanity mirror up until it engages.

#### Rear window sunshade

The switches are on the rear doors.

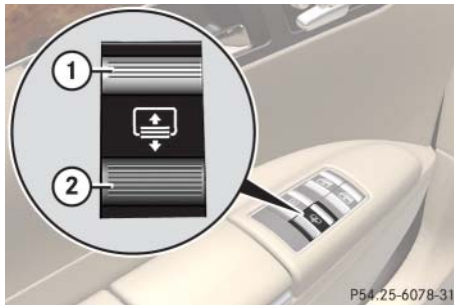

- ① Extend
- ② Retract

You can also operate the rear window sunshade via COMAND (▷ page 271) or via the favorite button (▷ page 263).

- ▶ Switch on the ignition (▷ page 370).
- ▶ Press upper part ① of the rocker switch briefly to extend the sunshade.
- ▶ Press lower part ② of the rocker switch briefly to retract the sunshade.

#### Warning!



When operating the rear window sunshade, be sure that there is no danger of anyone being harmed by the extending or retracting procedure.

- ▶ **Reverse the extending or retracting procedure:** Press lower part ② or upper part ① of the rocker switch.

**i** Operating the rear window sunshade from the rear is not possible if you activate the override switch (▷ page 64).

**i** If you operate the rear window sunshade via COMAND or via the favorite button, this takes precedence over the rear window sunshade buttons on the rear doors.

**i** The rear window sunshade is switched off at temperatures below  $-4^{\circ}\text{F}$  ( $-20^{\circ}\text{C}$ ).



## Controls in detail

### Useful features

#### Ashtrays

##### Center console ashtray

###### Warning!



Remove ashtray only with vehicle standing still. Engage the electronic parking brake to secure vehicle from movement. Set automatic transmission to park position **P**. With the automatic transmission set to park position **P**, turn off the engine.



- ① Button for disengaging ashtray
- ② Cover plate

##### Opening ashtray

- ▶ Press mark on cover plate ② forward.

##### Removing ashtray insert

- ▶ Push sliding button ① to the left.  
The ashtray is disengaged and slides out a short way.
- ▶ Remove the insert from the ashtray frame.

##### Reinstalling ashtray insert

- ▶ Install the insert by pushing it back into the frame until it engages.

##### Closing ashtray


- ▶ Briefly press mark on cover plate ② forward.

##### Rear door ashtray

##### Opening ashtray

- ▶ Lift up the cover.

##### Removing ashtray insert

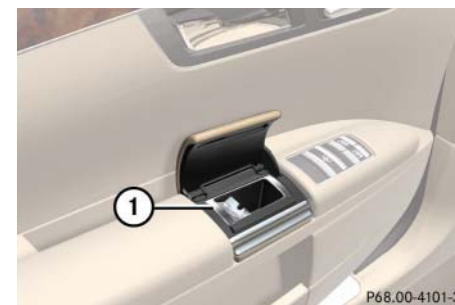

##### ① Insert

- ▶ Press the open cover outwards beyond the stop.

Ashtray insert ① pops out of the holder.

- ▶ Remove insert by pulling it upward.

##### Reinstalling ashtray insert

- ▶ Install the insert by pushing it back into the frame until it engages.

#### Cigarette lighters

##### Warning!



Never touch the heating element or sides of the lighter; they are extremely hot. Hold the knob only.

Make sure that any children traveling with you do not injure themselves or start a fire with the hot cigarette lighter.

When leaving the vehicle, always remove the SmartKey or SmartKey with KEYLESS-GO\* from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. A child's unsupervised access to a vehicle could result in an accident and/or serious personal injury.


To avoid possible injury to children sitting in the rear seat, activate the override switch (▷ page 64). Activation of the override switch deactivates the rear center console lighter.



① Center console cigarette lighter

- ▶ Open the cover plate (▷ page 536).
- ▶ Switch on the ignition (▷ page 370).
- ▶ Push in cigarette lighter ①.

The lighter will pop out automatically when hot.

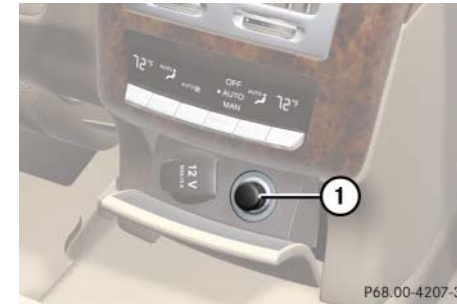

① Rear center console lighter

- ▶ Switch on the ignition (▷ page 370).
- ▶ Push in cigarette lighter ①.

The lighter will pop out automatically when hot.

## Controls in detail

### Useful features

**!** The lighter socket can be used to accommodate 12V DC electrical accessories (up to a maximum of 85 W) designed for use with the standard “cigarette lighter” plug type. Keep in mind, however, that connecting accessories to the lighter socket (for example extensive connecting and disconnecting, or using plugs that do not fit properly) can damage the lighter socket. With the socket damaged, the lighter may no longer be able to be placed in the heating (pushed-in) position, or the lighter may pop out too early with the lighter not hot enough.


To help avoid damaging the cigarette lighter socket, we recommend connecting 12V DC electrical accessories designed for use with a standard “cigarette lighter” plug type.

**i** Operation of the rear door lighters is only possible, if the override switch (▷ page 64) is deactivated.

**i** If the engine is off and the cigarette lighter is being used extensively, the vehicle battery may become discharged.

### Power outlet

The power outlet is located in the rear center console.

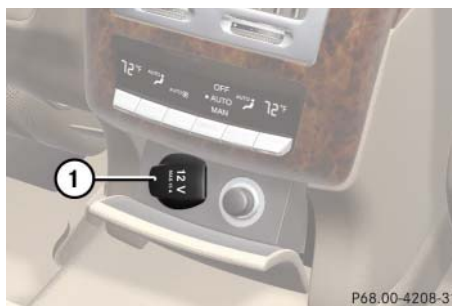

▶ Switch on the ignition (▷ page 370).

▶ Flip up cover ① and insert electrical plug (cigarette lighter type).

**i** The power outlet can be used to accommodate 12V DC electrical accessories (e.g. air pump, auxiliary lamps) up to a maximum of 180 W.

If the engine is off and the outlet is being used extensively, the vehicle battery may become discharged.

### Floormats\*

#### Warning!




Whenever you are using floormats, make sure there is enough clearance and that the floormats are securely fastened.

Floormats should always be securely fastened using the eyelets and the retainer pins.

Before driving off, check that the floormats are securely in place and adjust them if necessary. A loose floormat could slip and hinder proper functioning of the pedals.

Do not place several floormats on top of each other as this may impair pedal movement.

**i** To install or remove the floormat more easily, move the driver's seat or front passenger seat as far to the rear as possible (▷ page 373).

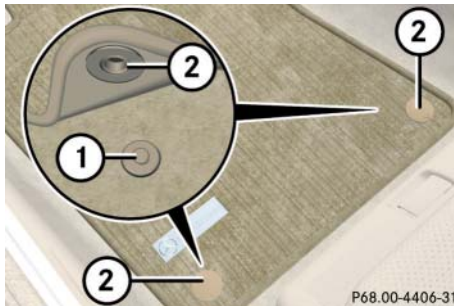

- ① Retainer pin
- ② Eyelet

#### Removing

- ▶ Pull floormat off of retainer pins ①.
- ▶ Remove the floormat.

#### Installing

- ▶ Lay down the floormat in the respective footwell.
- ▶ Press the floormat eyelets ② onto retainer pins ①.

#### Telephone\*

##### Warning!



Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or serious personal injury.

Radio transmitters, such as a portable telephone or a citizens band unit, should only be used inside the vehicle if they are connected to an antenna that is installed on the outside of the vehicle.

The external antenna must be approved by Mercedes-Benz. Please contact an authorized Mercedes-Benz Center for information on the installation of an approved external antenna. Refer to the radio transmitter operation instructions regarding use of an external antenna.

##### Warning!



Please do not forget that your primary responsibility is to drive the vehicle. A driver's attention to the road must always be his/her primary focus when driving. For your safety and the safety of others, we recommend that you pull over to a safe location and stop before placing or taking a telephone call.

If you choose to use the mobile phone<sup>1</sup> while driving, please use the hands-free device and only use the mobile phone when road, weather and traffic conditions permit. Some jurisdictions prohibit the driver from using a mobile telephone while driving a vehicle.

Only operate the COMAND (Cockpit Management and Data System)<sup>1</sup> if road, weather and traffic conditions permit.

<sup>1</sup> Observe all legal requirements.

## Controls in detail

### Useful features



▷▷ Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

**i** Various mobile phone cradles can be installed in the front center armrest, see separate installation instructions for the mobile phone cradle. These mobile phone cradles can be obtained from an authorized Mercedes-Benz Center.

*The functions and services available to you while using the mobile phone depend on your service provider and the type of mobile phone you are using. See also separate operating manual for instructions on how to use your mobile phone.*

**i** The roof cargo container\* may impair mobile phone reception. In an emergency, remove the mobile phone from the mobile phone cradle to make a call.

When the mobile phone is inserted in the cradle, you can operate the telephone using the following devices:

- mobile phone keypad
- COMAND telephone keypad (▷ page 144)
- buttons  and  on the multi-function steering wheel (▷ page 288)
- Voice Control (▷ page 313)
- Bluetooth® headset (▷ page 157)

Please note that these functions are only available with Mercedes-Benz approved mobile phones. Please contact an authorized Mercedes-Benz Center for information on features available for your mobile phone of choice.

- ▶ Open telephone compartment (▷ page 527).

### Inserting mobile phone in mobile phone cradle

Once the mobile phone has been inserted in the mobile phone cradle, you have to use the hands-free device or Bluetooth headset to respond during phone calls.

**!** Do not try to remove the mobile phone along with the cradle. You could otherwise damage the mobile phone cradle.

- ▶ If applicable, remove the cover for the external antenna connection from the back of the mobile phone and store it in a safe place. Be sure to comply with the mobile phone's operating instructions, as well.



#### Example illustration

- ① Insert the mobile phone
- ② Connector contact
- ③ Mobile phone cradle
- ▶ Slide the lower end of the mobile phone into connector contact ② on cradle ③.
- ▶ Push the top of the mobile phone in direction of arrow ①, until the lug on the mobile phone release button engages.

The mobile phone is connected to the network via the external antenna.

The mobile phone is linked to the hands-free device and the multifunction steering wheel.

The battery is charged depending on its charge status and the position of the SmartKey in the starter switch. The charge procedure will be indicated in the mobile phone's display.

You can place or receive phone calls. You can control other functions of the mobile phone via the COMAND (▷ page 141), instrument cluster control system (▷ page 299) or Voice Control (▷ page 313).

**i** When you take the SmartKey or SmartKey with KEYLESS-GO\* out of the starter switch, the mobile phone remains switched on for approximately 10 minutes. If you place or receive a call during this time, the mobile phone switches off 10 minutes after the call has been completed.

#### Removing mobile phone from mobile phone cradle



#### Example illustration

- ① Release catch for mobile phone
- ② Mobile phone cradle
- i** When using a flip-style mobile phone, open flip top before removing from the cradle while a call is connected. Otherwise, the call will be disconnected.
- ▶ Press release catch in direction of arrow ① and take mobile phone out of mobile phone cradle ②.


## Controls in detail

### Useful features

#### Changing mobile phone cradle

If you require a different cradle for your mobile phone, remove the present cradle before installing a new one.

#### Removing an existing mobile phone cradle

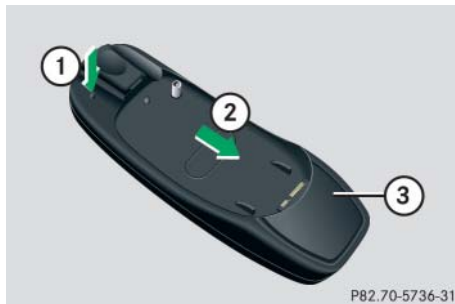


#### Example illustration

- ① To release the mobile phone cradle
- ② To remove the mobile phone cradle
- ③ Mobile phone cradle

- ▶ Press release button in direction of arrow ① and take mobile phone cradle ③ out in direction of arrow ②.


#### Installing a different mobile phone cradle

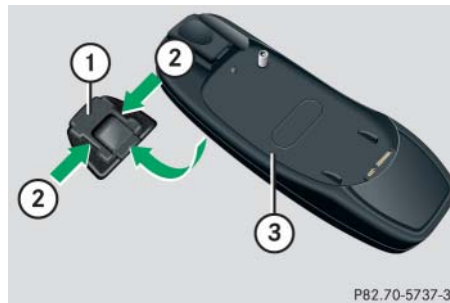

#### Example illustration

- ① Contact plate
  - ② Recesses
  - ③ Mobile phone cradle
- ▶ Insert mobile phone cradle ③ into recesses ② of contact plate ①.
  - ▶ Push mobile phone cradle ③ forward until it engages.

#### Tele Aid

**!** The initial activation of the Tele Aid system may only be performed by completing the subscriber agreement and placing an acquaintance call using the Information button . Failure to complete either of these steps will result in a system that is not activated.

If you have any questions regarding activation, please call the Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada).

#### The Tele Aid system

(Telematic Alarm Identification on Demand)



The Tele Aid system consists of three types of response:

- automatic and manual emergency
- Roadside Assistance, and
- information



The Tele Aid system is operational providing that the vehicle's battery is charged, properly connected, not damaged and mobile phone and GPS coverage are available.

**i** The Tele Aid system utilizes the mobile phone network for communication and the GPS (Global Positioning System) satellites for vehicle location. If either of these signals are unavailable, the Tele Aid system may not function and if this occurs, assistance must be summoned by other means.

The speaker volume of a Tele Aid call can be adjusted when using the volume control on the multifunction steering wheel. To raise, press button **+** and to lower, press button **-** or use the COMAND volume thumbwheel **VOL** on the lower part of the front center console (> page 98).



- ▶ To activate, press the SOS button, the Roadside Assistance button  or the Information button , depending on the type of response required.

**i** The SOS button is located above the interior rear view mirror (> page 545).

The Roadside Assistance button  and the Information button  are located below the center armrest cover (> page 546).



Shortly after the completion of your Tele Aid acquaintance call, you will receive a user ID and password. By visiting [www.mbusa.com](http://www.mbusa.com) and selecting "Tele Aid" (USA only), you will have access to account information, remote door unlock and more.

#### System self-check

Initially, after switching on the ignition, malfunctions are detected and indicated. If a malfunction is detected, the indicator lamps in the SOS button, the Roadside Assistance button  and the Information button  stay on longer than 10 seconds or do not come on. The message "Tele Aid Not Activated" or "Tele Aid Inoperative" appears in the multifunction display.

#### Warning!



If the indicator lamps in the SOS button, in the Roadside Assistance button  and/or in the Information button  do not come on during the system self-check, or if any of these indicators remain illuminated continuously in red and/or the message "Tele Aid Not Activated" or "Tele Aid Inoperative" is displayed in the multifunction display after the system self-check, a malfunction in the system has been detected.

If a malfunction is indicated as outlined above, the system may not operate as expected. Have the system checked at the nearest Mercedes-Benz Center as soon as possible.



## Controls in detail

### Useful features

#### Emergency calls

An emergency call is initiated automatically following an accident in which the emergency tensioning devices (ETDs) or air bags deploy.

An emergency call can also be initiated manually by opening the cover next to the interior rear view mirror labeled SOS, then briefly pressing the button located under the cover. For instructions on initiating an emergency call manually (> page 545).

Once the emergency call is in progress, the indicator lamp in the SOS button will begin to flash. The message:

- “Connecting Call” appears in the multi-function display
- “Emergency Call Activated” appears in the COMAND display

and the audio system is muted. When the connection is established, the message:

- “Call Connected” appears in the multi-function display

- “Emergency Call Activated” appears in the COMAND display

All information relevant to the emergency, such as the location of the vehicle (determined by the GPS satellite location system), vehicle model, identification number and color are generated.

**i** During the emergency call message “Emergency Call Activated” is displayed, operation from COMAND is not possible. The automatic climate control can be still adjusted using the switches on the climate control panel.

A voice connection between the Response Center and the occupants of the vehicle will be established automatically soon after the emergency call has been initiated. The Response Center will attempt to determine more precisely the nature of the accident provided they can speak to an occupant of the vehicle.

**i** If no vehicle occupant responds, an ambulance will be sent to the vehicle immediately.

The Tele Aid system is available if

- it has been activated and is operational. Activation requires a subscription for monitoring services, connection, and cellular air time
- the relevant monitoring service and GPS coverage are available and pass the information on to the Response Center
- there is sufficient voltage in the vehicle batteries


**i** Location of the vehicle on a map is only possible if the vehicle is able to receive signals from the GPS satellite network and pass the information on to the Response Center.

#### Warning!





If the indicator lamp in the SOS button is flashing continuously and there was no voice connection to the Response Center established, then the Tele Aid system could not initiate an emergency call (e.g. the relevant mobile phone network is not available).


The message:

- “**Call Failed**” appears in the multifunction display for approximately 10 seconds.
- A pop-up window with the message: “**Call could not be connected! Please dial 911 directly using the mobile telephone keypad.**” appears in the COMAND display. Confirm the message pressing  (▷ page 90).


Should this occur, assistance must be summoned by other means.

 During the emergency call the mobile phone is switched off automatically and must be switched back on to make a call.

 The roof cargo container\* may impair mobile phone reception. In an emergency, remove the mobile phone from the mobile phone cradle (▷ page 539) to make a call.

 The “911” emergency call system is a public service. Using it without due cause is a criminal offense.

### Initiating an emergency call manually

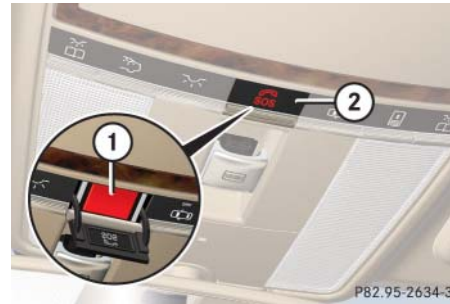

- ① SOS button
- ② Cover

▶ Briefly press button on cover ② to open.

Cover ② will open.

▶ Press SOS button ① (for longer than 2 seconds).

The indicator lamp in SOS button ① will flash until the emergency call is concluded.

- ▶ Wait for a voice connection to the Response Center.
- ▶ Close cover ② after the emergency call is concluded.

### Warning!





If you feel at any way in jeopardy when in the vehicle (e.g. smoke or fire in the vehicle, vehicle in a dangerous road location), please do not wait for voice contact after you have pressed the emergency button. Carefully leave the vehicle and move to a safe location. The Response Center will automatically contact local emergency officials with the vehicle’s approximate location if they receive an automatic SOS signal and cannot make voice contact with the vehicle occupants.



## Controls in detail

### Useful features


#### Roadside Assistance button and Information button

The Roadside Assistance button  and the Information button  are located in the storage compartment below the front armrest (▷ page 527).



- ① Information button 
- ② Roadside Assistance button 

#### Roadside Assistance button

- ▶ Press and hold Roadside Assistance button  (for longer than 2 seconds).

A call to a Mercedes-Benz Roadside Assistance dispatcher will be initiated. The button will flash while the call is in progress. The message:

- “*Connecting Call*” appears in the multifunction display
- “*Roadside Assistance Activated*” appears in the COMAND display and the audio system is muted.

When the connection is established, the message:

- “*Call Connected*” appears in the multifunction display
- “*Roadside Assistance Activated*” appears in the COMAND display

The Tele Aid system will transmit data generating the vehicle identification number, model, color and location (subject to availability of cellular and GPS signals).



A voice connection between the Roadside Assistance dispatcher and the occupants of the vehicle will be established.

- ▶ Describe the nature of the need for assistance.


The Mercedes-Benz Roadside Assistance dispatcher will either dispatch a qualified Mercedes-Benz technician or arrange to tow your vehicle to the nearest authorized Mercedes-Benz Center. For services such as labor and/or towing, charges may apply. Refer to the Roadside Assistance Manual for more information.


These programs are only available in the USA:


- Sign and Drive services: Services such as jump start, a few gallons of fuel or the replacement of a flat tire with the vehicle spare tire are obtainable.

**i** The indicator lamp in the Roadside Assistance button  remains illuminated in red for approximately 10 seconds during the system self-check after switching on the ignition (together with the SOS button and the Information button ).


See system self-check (▷ page 543) if the indicator lamp does not come on in red or stays on longer than approximately 10 seconds.

If the indicator lamp in the Roadside Assistance button  is flashing continuously and no voice connection to the Response Center was established, the Tele Aid system could not initiate a Roadside Assistance call (e.g. the relevant mobile phone network is not available). The message:

- “Call Failed” appears in the multifunction display for approximately 10 seconds
- “Call could not be connected!” appears in the COMAND display. Confirm the message pressing  (▷ page 90).

Roadside Assistance calls can be terminated using button  on the multifunction steering wheel or COMAND (▷ page 141).

#### Information button

- ▶ Press and hold Information button  (for longer than 2 seconds).

A call to the Customer Assistance Center will be initiated. The button will flash while the call is in progress. The message:

- “Connecting Call” appears in the multifunction display
- “Information Call Activated” appears in the COMAND display

and the audio system is muted.



When the connection is established, the message:

- “Call Connected” appears in the multifunction display
- “Information Call Activated” appears in the COMAND display


The Tele Aid system will transmit data generating the vehicle identification number, model, color and location (subject to availability of cellular and GPS signals).

A voice connection between the Customer Assistance Center representative and the occupants of the vehicle will be established. Information regarding the operation of your vehicle, the nearest authorized Mercedes-Benz Center or Mercedes-Benz USA products and services is available to you.

For more details concerning the Tele Aid system, please visit [www.mbusa.com](http://www.mbusa.com) and use your ID and password (sent to you separately) to learn more (USA only).

**i** The indicator lamp on the Information button  remains illuminated in red for approximately 10 seconds during the system self-check after switching on the ignition (together with the SOS button and the Roadside Assistance button ).


See system self-check (▷ page 543) if the indicator lamp does not come on in red or stays on longer than approximately 10 seconds.


If the indicator lamp in the Information button  is flashing continuously and no voice connection to the Response Center was established, then the Tele Aid system could not initiate an Information call (e.g. the relevant

## Controls in detail

### Useful features

mobile phone network is not available). The message:

- “Call Failed” appears in the multifunction display for approximately 10 seconds
- “Call could not be connected!” appears in the COMAND display. Confirm the message pressing  (▷ page 90).

Information calls can be terminated using button  on the multifunction steering wheel or COMAND (▷ page 141).

**!** If the indicator lamps do not start flashing after you press one of the buttons or remain illuminated (in red) at any time, the Tele Aid system has detected a fault or the service is not currently activated, and may not initiate a call. Contact an authorized Mercedes-Benz Center and have the system checked or contact the Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada) as soon as possible.

### Destination Download to the COMAND System

**i** The components and operating principles of COMAND can be found on (▷ page 87).






Destination Download allows you access to a database of over 10,000,000 points of interest (POIs) that can be downloaded to your vehicle’s navigation system. If you know the destination the address can be downloaded. Or if you are unsure of your destination you can be provided with points of interests near your location.

The Response Center can transmit destination data to the COMAND during the connection with the Roadside Assistance or Customer Assistance Center.

The transmitted data can contain address details for a Mercedes-Benz Center or POIs (points of interest).

### Route guidance

A prompt appears for confirmation if route guidance to the address is to be started.

- ▶ Slide    or rotate  to select “Yes” menu item and confirm by pressing .


The system starts the route calculation and subsequently the route guidance to the defined address (▷ page 188).

**i** If you select “No”, you can save the address in your address book (▷ page 167).

**i** The destination download feature is available if the relevant mobile phone network is available and data connection is possible.

### Call priority

If other service calls such as a Roadside Assistance call or Information call are active, an emergency call is still possible. In this case, the emergency call will take priority and override all other active calls.

**i** The indicator lamp in the respective button flashes until the call is concluded. Calls can only be terminated by a Response Center or Customer Assistance Center representative except Roadside Assistance and Information calls, which can also be terminated by pressing button  on the multifunction steering wheel or COMAND (▷ page 141).

**!** If the indicator lamp continues to flash or the system does not terminate the call at all, contact the Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada), or Mercedes-Benz Customer Assistance at 1-800-FOR-MERCEdes (1-800-367-6372) in the USA or Customer Service at 1-800-387-0100 in Canada.

**i** When a Tele Aid call has been initiated, the audio system is muted. The optional mobile phone (if installed) switches off. If you must use this phone, the vehicle must be parked. Unplug the telephone, switch it on and place the call. The COMAND navigation system (if engaged) will continue to run. The multifunction display in the instrument cluster is available for use, but spoken commands are not available.

**i** You can exit Roadside Assistance and/or the information display during an active connection and call up the COMAND application last selected. To do so, select “Back”. Meanwhile, mute remains active (▷ page 87).

#### Remote door unlock

In case you have locked your vehicle unintentionally (e.g. SmartKey inside vehicle), and the reserve SmartKey is not handy:

- ▶ Contact the Mercedes-Benz Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada).

You will be asked to provide your password which you provided when you completed the subscriber agreement.

or

- ▶ Contact the Tele Aid web page via Internet using the ID and password sent to you shortly after the completion of your acquaintance call.

- ▶ Then return to your vehicle and pull the trunk lid handle for a minimum of 20 seconds until the SOS button begins to flash.

The message: “Connecting Call” appears in the multifunction display and the SOS button is flashing.

The Response Center will then unlock your vehicle with the remote door unlocking feature.

**i** The remote door unlock feature is available if the relevant mobile phone network is available and data connection is possible.

The SOS button will flash and the message: “Connecting Call” appears in the multifunction display to indicate receipt of the door unlock command.

Once the vehicle is unlocked, a Response Center specialist might attempt to establish voice contact with the vehicle occupants.

If the trunk lid handle was pulled for more than 20 seconds before door unlock authorization was received by the Response Center, you must wait 15 minutes before pulling the trunk lid handle again.

## Controls in detail

### Useful features

#### Remote door lock

If you have forgotten to lock your vehicle and are no longer near it, you can have it locked remotely through the Response Center.

The vehicle can be remotely locked within 4 days after the ignition has been switched off.

- ▶ Contact the Mercedes-Benz Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada).

You will be asked to provide your password which you provided when you completed the subscriber agreement.

When you are inside your vehicle the next time and switch on the ignition, the message “Tele Aid Doors Locked Remotely” will appear on the multifunction display.

**i** *The remote door lock feature is available if the relevant mobile phone network is available and data connection is possible.*

#### Automatic Maintenance Call

The 2007 S-Class is equipped with a feature which considerably enhances the care of your vehicle. Just prior to your vehicle reaching a maintenance milestone Tele Aid will initiate a message informing the service center, important vehicle maintenance information and the vehicle is due for a service appointment. The message is transmitted in the background with no driver interaction necessary. This feature allows your preferred Mercedes-Benz Center to significantly improve the process of arranging your service appointment and ensures that your vehicle receives the best possible care.

**i** *The Automatic Maintenance Call feature is available if the relevant mobile phone network is available and data connection is possible.*

#### Stolen Vehicle Recovery services

In the event your vehicle was stolen:

- ▶ Report the incident to the police.  
The police will issue a numbered incident report.
- ▶ Pass this number on to the Mercedes-Benz Response Center along with your password issued to you when you subscribed to the service.

The Response Center will then attempt to covertly contact the vehicle’s Tele Aid system. Once the vehicle is located, the Response Center will contact the local law enforcement and you. The vehicle’s location will only be provided to law enforcement.


If you have any questions, please call the Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada).

**i** *When the anti-theft alarm stays on for more than 30 seconds, a call is initiated automatically to the Response Center. See anti-theft alarm system (> page 82).*

#### Garage door opener

The integrated remote control is capable of operating up to three separately controlled devices. It provides a convenient way to replace up to three hand-held remote controls used to operate devices such as garage door openers, gate openers, or other devices compatible with HomeLink® or some other systems.

Before the integrated remote control can be used, it must be programmed to the garage door opener, gate operator or other device you wish to operate. See the following instructions for programming information.

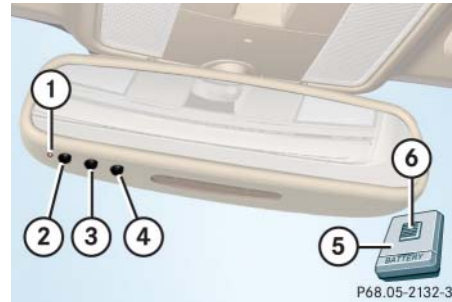

#### Interior rear view mirror with integrated remote control

- ① Indicator lamp
  - ② ③ ④ Signal transmitter button
- Needed for programming (not part of vehicle equipment):
- ⑤ Hand-held remote control of garage door opener, gate operator or other device
  - ⑥ Hand-held remote control button

#### Warning!



Before programming the integrated remote control to a garage door opener or gate operator, make sure people and objects are out of the way of the device to prevent potential harm or damage. When programming a garage door opener, the door moves up or down. When programming a gate operator, the gate opens or closes.

Do not use the integrated remote control with any garage door opener that lacks safety stop and reverse features as required by U.S. federal safety standards (this includes any garage door opener model manufactured before April 1, 1982).

A garage door that cannot detect an object – signaling the door to stop and reverse – does not meet current U.S. federal safety standards.

When programming a garage door opener, park the vehicle outside the garage.





## Controls in detail

### Useful features

- ▷▷ Do not run the engine while programming the integrated remote control. Inhalation of exhaust gas is hazardous to your health. All exhaust gas contains carbon monoxide (CO), and inhaling it can cause unconsciousness and possible death.

#### Programming integrated remote control

Step 1:

- ▶ Switch on the ignition (▷ page 370).

Step 2:

- ▶ If you have previously programmed a signal transmitter button and wish to retain its programming, proceed to step 3.

If you are programming the integrated remote control for the first time, press and hold the two outer signal transmitter buttons ② and ④ and release them only when indicator lamp ① begins to flash after approximately 20 seconds (do not hold the button for

longer than 30 seconds). This procedure erases any previous settings for all three channels and initializes the memory.

If you later wish to program a second and/or third hand-held transmitter to the remaining two signal transmitter buttons, do not repeat this step and begin directly with step 3.

Step 3:

- ▶ Hold the end of hand-held remote control ⑤ of the device you wish to train approximately 2 to 5 in (5 to 12 cm) away from the signal transmitter button (②, ③ or ④) to be programmed, while keeping indicator lamp ① in view.

Step 4:

- ▶ Using both hands, simultaneously press hand-held remote control button ⑥ and the desired signal transmitter button (②, ③ or ④). Do not release the buttons until step 5 is completed.

Indicator lamp ① will flash, first slowly and then rapidly.

**i** Indicator lamp ① flashes immediately the first time the signal transmitter button is programmed. If this button has already been programmed, the indicator lamp will only start flashing after 20 seconds.

Step 5:

- ▶ After indicator lamp ① changes from a slow to a rapidly flashing light, release the hand-held remote control button and the signal transmitter button.

Step 6:

- ▶ Press and hold the just-trained signal transmitter button (②, ③ or ④) and observe indicator lamp ①.

If indicator lamp ① stays on constantly, programming is complete and your device should activate when the respective signal transmitter button (②, ③ or ④) is pressed and released.

**i** If indicator lamp ① flashes rapidly for about 2 seconds and then turns to a constant light, continue with programming steps 8 through 12 as your garage door opener may be equipped with the “rolling code” feature.

Step 7:

- ▶ To program the remaining two signal transmitter buttons, repeat the steps above starting with step 3.

#### **Rolling code programming**

To train a garage door opener (or other rolling code devices) with the rolling code feature, follow these instructions after completing the “Programming” portion (steps 1 through 6) of this text. (A second person may make the following training procedures quicker and easier.)

Step 8:

- ▶ Locate “training” button on the garage door opener motor head unit.

Exact location and color of the button may vary by garage door opener brand. Depending on manufacturer, the

“training” button may also be referred to as “learn” or “smart” button. If there is difficulty locating the transmitting button, refer to the garage door opener operator’s manual.

Step 9:

- ▶ Press the “training” button on the garage door opener motor head unit.

The “training light” is activated.

You have 30 seconds to initiate the following two steps.

Step 10:

- ▶ Return to the vehicle and firmly press, hold for 2 seconds and release the programmed signal transmitter button (②, ③ or ④).

Step 11:

- ▶ Press, hold for 2 seconds and release same signal transmitter button a second time to complete the training process.

**i** Some garage door openers (or other rolling code equipped devices) may require you to press, hold for 2 seconds and release the same signal transmitter button a third time to complete the training process.

Step 12:

- ▶ Confirm the garage door operation by pressing the programmed signal transmitter button (②, ③ or ④).

Step 13:

- ▶ To program the remaining two signal transmitter buttons, repeat the steps above starting with step 3.

#### **Gate operator/Canadian programming**

Canadian radio-frequency laws require transmitter signals to “time-out” (or quit) after several seconds of transmission which may not be long enough for the integrated signal transmitter to pick up the signal during programming. Similar to this Canadian law, some U.S. gate operators are designed to “time-out” in the same manner.

## Controls in detail

### Useful features

If you live in Canada or if you are having difficulties programming a gate operator (regardless of where you live) by using the programming procedures, replace step 4 with the following:

Step 4:

- ▶ Press and hold the signal transmitter button (②, ③ or ④). Do not release this button until it has been successfully trained.
- ▶ While still holding down the signal transmitter button (②, ③ or ④), “cycle” your hand-held remote control button ⑥ as follows: Press and hold button ⑥ for 2 seconds, then release it for 2 seconds, and again press and hold it for 2 seconds. Repeat this sequence on the hand-held remote control until the frequency signal has been learned. Upon successful training, indicator lamp ① will flash slowly and then rapidly after several seconds.
- ▶ Proceed with programming step 5 and step 6 to complete.

**i** Upon completion of programming the integrated remote control, make sure you retain the hand-held remote control that came with the garage door opener, gate operator or other device. You may need it for use in other vehicles, for future programming of an integrated remote control, or simply for continued use as a hand-held remote control to operate the respective device in other situations.

#### Reprogramming a single signal transmitter button

To program a device using a signal transmitter button previously trained, follow these steps:

- ▶ Switch on the ignition (▷ page 370).
- ▶ Press and hold the desired signal transmitter button (②, ③ or ④). Do not release the button.
- ▶ Indicator lamp ① will begin to flash after 20 seconds. Without releasing the signal transmitter button, proceed with programming starting with step 3.

#### Operation of integrated remote control

- ▶ Switch on the ignition (▷ page 370).
- ▶ Select and press the appropriate integrated signal transmitter button (②, ③ or ④) to activate the remote controlled device.

The integrated remote control transmitter continues to send the signal as long as the button is pressed – up to 20 seconds.

#### Erasing integrated remote control memory

- ▶ Switch on the ignition (▷ page 370).
- ▶ Simultaneously press and hold outer signal transmitter buttons ② and ④, for approximately 20 seconds, until indicator lamp ① flashes rapidly. Do not hold for longer than 30 seconds.

The codes of all three channels are erased.

**i** If you sell your vehicle, erase the codes of all three channels.

#### Programming tips

If you are having difficulty programming the integrated remote control, here are some helpful tips:

- Check the frequency of hand-held remote control ⑤ (typically located on the reverse side of the remote). The integrated remote control is compatible with radio-frequency devices operating between 280-390 MHz.
- Put a new battery in hand-held remote control ⑤. This will increase the likelihood of the hand-held remote control sending a faster and more accurate signal to the integrated remote control.
- While performing step 3, hold hand-held remote control ⑤ at different lengths and angles from the signal transmitter button (②, ③ or ④) you are programming. Attempt varying angles at the distance of 2 to 5 in (5 to 12 cm) away or the same angle at varying distances.
- If another hand-held remote control is available for the same device, try the programming steps again using that other hand-held remote control. Make sure new batteries are in the hand-held remote control before beginning the procedure.
- Straighten the antenna wire from the garage door opener assembly. This may help improve transmitting and/or receiving signals.

**i** Certain types of garage door openers are incompatible with the integrated remote control. If you should experience further difficulties with programming the integrated remote control, contact an authorized Mercedes-Benz Center, or call Mercedes-Benz Customer Assistance Center (in the USA only) at 1-800-FOR-MERCEdes, or Customer Service (in Canada) at 1-800-387-0100.

**i** USA only:  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

**i** Canada only:  
This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

## Controls in detail

### Useful features

#### Infrared reflecting windshield

Infrared reflecting glass reduces the amount of radiated heat entering the vehicle interior through the windows.

The infrared reflecting glass also prevents the transmission of signals through the glass by in-vehicle electronic devices (e.g. electronic toll collection devices).

To allow the use of these devices in the vehicle, transparent areas ① and ③ are placed in the windshield.

You can see them from certain angles when ambient light condition permit.



#### Vehicles without Night View Assist\*

- ① Transparent area (located left and right to the cover of the rain light sensor)
- ② Cover of the rain light sensor
- ③ Transparent area



#### Vehicles with Night View Assist\*

- ① Transparent area (located left to the cover of the rain light sensor)
- ② Cover of the rain light sensor
- ③ Transparent area

## Operation

**The first 1000 miles (1500 km)**

**Driving instructions**

**At the gas station**

**Engine compartment**

**Tires and wheels**

**Winter driving**

**Maintenance**

**Vehicle care**



## Operation

### The first 1000 miles (1500 km)

In the “Operation” section you will find detailed information on operating, maintaining and caring for your vehicle.

The more cautiously you treat your vehicle during the break-in period, the more satisfied you will be with its performance later on.

- Drive your vehicle during the first 1000 miles (1500 km) at varying but moderate vehicle and engine speeds.
- During this period, avoid heavy loads (full throttle driving) and excessive engine speeds (no more than  $\frac{2}{3}$  of maximum rpm in each gear).
- Avoid accelerating by kick-down.
- Do not attempt to slow the vehicle down by shifting to a lower gear using the gear selector lever.
- Select gear ranges **3**, **2** or **1** only when driving at moderate speeds (for hill driving).
- Select **C** as the preferred shift program (▷ page 436) for the first 1000 miles (1500 km).

After 1000 miles (1500 km) you may gradually increase vehicle and engine speeds to the permissible maximum.

**!** *Additional instructions for S 63 AMG and S 65 AMG:*

- *During the first 1000 miles (1500 km), do not exceed a speed of 85 mph (140 km/h).*
- *During this period, avoid engine speeds above 4500 rpm in each gear.*
- *Shift gears at the correct time.*

All of the above instructions, as may apply to your vehicle type, also apply when driving the first 1000 miles (1500 km) after the engine or the rear differential has been replaced.

**i** *Always obey applicable speed limits.*

▼ **Driving instructions**

**Drive sensibly – save fuel**

Fuel consumption, to a great extent, depends on driving habits and operating conditions.

To save fuel you should:

- Keep tires at the recommended tire inflation pressures.
- Remove unnecessary loads.
- Remove roof rack when not in use.
- Allow engine to warm up under low load use.
- Avoid frequent acceleration and deceleration.
- Have all maintenance work performed at the intervals specified in the Maintenance Booklet and as required by the Maintenance System. Contact an authorized Mercedes-Benz Center.

Fuel consumption is also increased by driving in cold weather, in stop-and-go traffic, on short trips, and in hilly area.

**Drinking and driving**

**Warning!**



Drinking and driving and/or taking drugs and driving are very dangerous combinations. Even a small amount of alcohol or drugs can affect your reflexes, perceptions and judgment.

The possibility of a serious or even fatal accident are greatly increased when you drink or take drugs and drive.

Do not drink or take drugs and drive or allow anyone to drive who has been drinking or taking drugs.

**Pedals**

**Warning!**



Make sure that absolutely no objects are obstructing the pedals' range of movement.

Keep the driver's footwell clear of all obstacles. If there are any floor mats or carpets in the footwell, make sure the pedals still have sufficient clearance. Otherwise this could lead to accidents or injury.

**Power assistance**

**Warning!**



With the engine not running, there is no power assistance for the brake and steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle.



## Operation

### Driving instructions

#### Brakes

##### Warning!



After driving in heavy rain for some time without applying the brakes or through water deep enough to wet brake components, the first braking action may be somewhat reduced and increased pedal pressure may be necessary to obtain expected braking effect. Maintain a safe distance from vehicles in front.

Resting your foot on the brake pedal will cause excessive and premature wear of the brake pads.

It can also result in the brakes overheating, thereby significantly reducing their effectiveness. It may not be possible to stop the vehicle in sufficient time to avoid an accident.

**!** Because the ESP<sup>®</sup> operates automatically, the engine and ignition must be shut off (SmartKey in starter switch position **0** or **1** or KEYLESS-GO start/stop button\* in position **0** or **1**) when

- the electronic parking brake is being tested on a brake test dynamometer
- the vehicle is being towed with the front/rear axle raised

Active braking action through the ESP<sup>®</sup> may otherwise seriously damage the brake system.

To help prevent brake disk corrosion after driving on wet road surfaces (particularly salted roads), it is advisable to brake the vehicle with considerable force prior to parking. The heat generated serves to dry the brakes.

If your brake system is normally only subjected to moderate loads, you should occasionally test the effectiveness of the brakes by applying above-normal braking pressure at higher speeds. This will also enhance the grip of the brake pads.

##### Warning!



Make sure not to endanger any other road users when carrying out these braking maneuvers.

Refer to the description of the Brake Assist System (BAS or BAS Plus\*) (▷ page 69).

Brake pad wear or a leak in the system may be the reason for low brake fluid level in the reservoir.

The brake fluid level in the reservoir may be too low if the red brake warning lamp in the instrument cluster comes on while the engine is running and an acoustic warning sounds (▷ page 631). Observe additional messages in the multifunction display that may appear (▷ page 642).

Have the brake system inspected immediately. Contact an authorized Mercedes-Benz Center.

All checks and service work on the brake system should be carried out by qualified technicians only. Contact an authorized Mercedes-Benz Center.

Only install brake pads and brake fluid recommended by Mercedes-Benz.

**Warning!**



If other than recommended brake pads are installed, or other than recommended brake fluid is used, the braking properties of the vehicle can be degraded to an extent that safe braking is substantially impaired. This could result in an accident.

**!** *When driving down long and steep grades, relieve the load on the brakes by shifting into a lower gear to use the engine's braking power. This helps prevent overheating of the brakes and reduces brake pad wear.*

*When using the engine's braking power, a drive wheel may not spin for an extended period of time, e.g. on slippery road surfaces.*

*This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.*

After hard braking, it is advisable to drive on for some time, rather than immediately park, so that the air stream can cool down the brakes faster.

**High-performance brake system (S 63 AMG and S 65 AMG only)**

The high-performance brake system is designed to operate under the extremely high operating demands required to accommodate the performance capabilities of the vehicle. The brakes may produce a squeaking-type noise depending on the

- vehicle speed
- brake force applied
- ambient conditions, e.g. temperature and humidity

As with any brake system, the wear of individual brake system components such as brake pads or disks strongly depends on your driving style and the conditions under

which you operate the vehicle. Thus, a driving style calling for high demand braking will cause your vehicle's brakes to wear more quickly.

**Warning!**



New vehicle brake pads and discs, and replacement brake pads and discs may take several hundred miles of driving until they provide optimum braking efficiency. Until that time, you may need to use increased brake pedal pressure while braking. Please be aware of this and adjust your driving and braking accordingly during this break-in period.

Excessive high demand braking will cause correspondingly high brake wear. Please be attentive to the brake warning lamp in the instrument cluster and brake condition messages in the multifunction display. Especially for high performance driving, it is important to maintain and have the brake system checked regularly.

## Operation

### Driving instructions

#### Driving off

Apply the brakes to test them briefly after driving off. Perform this procedure only when the road is clear of other traffic.

Warm up the engine smoothly. Do not place full load on the engine until the operating temperature has been reached.

**!** *When driving off on a slippery surface, do not allow a drive wheel to spin for an extended period with the ESP<sup>®</sup> switched off. Doing so may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.*

**!** *Simultaneously depressing the accelerator pedal and applying the brakes reduces engine performance and causes premature brake and drivetrain wear.*

#### Parking

##### Warning!



Do not park this vehicle in areas where combustible materials such as grass, hay or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

To reduce the risk of personal injury, or damage to the vehicle drivetrain, as a result of inadvertent vehicle movement, before turning off the engine and leaving the vehicle always:

- Keep right foot on brake pedal.
- Engage electronic parking brake.
- Shift the automatic transmission to **P**.
- Slowly release brake pedal.
- When parked on an incline, turn front wheels towards the road curb.

- Turn the SmartKey or the SmartKey with KEYLESS-GO\* to starter switch position **0** and remove, or press the KEYLESS-GO\* start/stop button.
- Take the SmartKey or the SmartKey with KEYLESS-GO\* with you and lock the vehicle when leaving.

**Tires**

**Warning!**



If you feel a sudden significant vibration or ride disturbance, or you suspect that possible damage to your vehicle has occurred, you should turn on the hazard warning flashers, carefully slow down, and drive with caution to an area which is a safe distance from the road.

Inspect the tires and the vehicle underbody for possible damage. If the vehicle or tires appear unsafe, have the vehicle towed to the nearest Mercedes-Benz Center or tire dealer for repairs.

Treadwear indicators (TWI) are required by law. These indicators are located in six places on the tread circumference and become visible at a tread depth of approximately  $1/16$  in (1.6 mm), at which point the tire is considered worn and should be replaced.

The treadwear indicator appears as a solid band across the tread.

**Warning!**



Although the applicable federal motor vehicle safety laws consider a tire to be worn when the treadwear indicators (TWI) become visible at approximately  $1/16$  in (1.6 mm), we recommend that you do not allow your tires to wear down to that level. As tread depth approaches  $1/8$  in (3 mm), the adhesion properties on a wet road are sharply reduced.

Depending upon the weather and/or road surface (conditions), the tire traction varies widely.

Specified tire inflation pressures must be maintained. This applies particularly if the tires are subject to extreme operating conditions (e.g. high speeds, heavy loads, high ambient temperatures).

**Warning!**



Do not drive with a flat tire. A flat tire affects the ability to steer or brake the vehicle. You may lose control of the vehicle. Continued driving with a flat tire or driving at high speed with a flat tire will cause excessive heat build-up and possibly a fire.

For more information, see “Tires and wheels” (▷ page 582).

**Hydroplaning**

Depending on the depth of the water layer on the road, hydroplaning may occur, even at low speeds and with new tires. Reduce vehicle speed, avoid track grooves in the road and apply brakes cautiously in the rain.

## Operation

### Driving instructions

#### Tire traction

The safe speed on a wet, snow covered or icy road is always lower than on a dry road.

You should pay particular attention to the condition of the road whenever the outside temperatures are close to the freezing point.

#### Warning!



If ice has formed on the road, tire traction will be substantially reduced. Under such weather conditions, drive, steer and brake with extreme caution.

Mercedes-Benz recommends winter tires (▷ page 610) with a minimum tread depth of approximately  $\frac{1}{8}$  in (4 mm) on all four wheels for the winter season to ensure normal balanced handling characteristics. On packed snow, they can reduce your stopping distance compared to summer tires.

Stopping distance, however, is still considerably greater than when the road is not covered with snow or ice. Exercise appropriate caution.

**!** *Avoid spinning of a drive wheel. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.*

#### Tire speed rating

Regardless of the tire speed rating, local speed limits should be obeyed. Use prudent driving speeds appropriate to prevailing conditions.

#### Warning!



Even when permitted by law, never operate a vehicle at speeds greater than the maximum speed rating of the tires.

Exceeding the maximum speed for which tires are rated can lead to sudden tire failure, causing loss of vehicle control and possibly resulting in an accident and/or serious personal injury and possible death, for you and for others.

An electronic speed limiter prevents your vehicle from exceeding a speed of


- All models except S 63 AMG and S 65 AMG:  
130 mph (210 km/h)
- S 63 AMG:  
S 65 AMG:  
155 mph (250 km/h)
- S 63 AMG with Performance Package\*:  
S 63 AMG with increased top speed\*:  
S 65 AMG with increased top speed\*:  
186 mph (300 km/h)

The factory equipped tires on your vehicle may have a tire speed rating above the maximum speed permitted by the electronic speed limiter.

Make sure your tires have the required tire speed rating as specified for your vehicle in the “Technical data” section (▷ page 754), for example when purchasing new tires.

For information on how to identify the tire speed rating on a tire’s sidewall, see “Tire size designation, load and speed rating” (▷ page 598).


If you are uncertain about the correct reading of the information given on a tire’s sidewall, any authorized Mercedes-Benz Center will be glad to assist you.

 For information on speed ratings for winter tires, see (▷ page 601) and (▷ page 610).

#### Winter driving instructions

The most important rule for slippery or icy roads is to drive sensibly and to avoid abrupt acceleration, braking and steering maneuvers. Do not use the cruise control or DISTRONIC Plus\* system under such conditions.

When the vehicle is in danger of skidding, move gear selector lever to neutral position **N**. Try to keep the vehicle under control by corrective steering action.

 For information on driving with snow chains, see “Snow chains” (▷ page 611).

#### Warning!



On slippery road surfaces, never downshift in order to obtain braking action. This could result in drive wheel slip and reduced vehicle control. Your vehicle’s ABS will not prevent this type of control loss.

Road salts and chemicals can adversely affect braking efficiency. Increased pedal force may become necessary to produce the normal braking effect.

Depressing the brake pedal periodically when traveling at length on salt-strewn roads can bring road-salt impaired braking efficiency back to normal.

If the vehicle is parked after being driven on salt-treated roads, the braking efficiency should be tested as soon as possible after driving is resumed.

## Operation

### Driving instructions

#### Warning!



Make sure not to endanger any other road users when carrying out these braking maneuvers.

#### Warning!



If the vehicle becomes stuck in snow, make sure that snow is kept clear of the exhaust pipe and from around the vehicle with the engine running. Otherwise, deadly carbon monoxide (CO) gases may enter vehicle interior resulting in unconsciousness and death.

To assure sufficient fresh air ventilation, open a window slightly on the side of the vehicle not facing the wind.

#### Warning!



The outside temperature indicator is not designed to serve as an ice-warning device and is therefore unsuitable for that purpose. Indicated temperatures just above the freezing point do not guarantee that the road surface is free of ice.

For more information on winter driving, see “Winter driving” (▷ page 610).

### Standing water

**!** Do not drive through flooded areas or water of unknown depth. Before driving through water, determine its depth. Never accelerate before driving into water. The bow wave could force water into the engine and auxiliary equipment, thus damaging them.

If you must drive through standing water, drive slowly to prevent water from entering the passenger compartment or the engine compartment. Water in these areas could cause damage to electrical components or wiring of the engine or transmission, or could result in water being ingested by the engine through the air intake causing severe internal engine damage. Any such damage is not covered by the Mercedes-Benz Limited Warranty.

### Passenger compartment

**Warning!**



Always fasten items being carried as securely as possible.

In an accident, during hard braking or sudden maneuvers, loose items will be thrown around inside the vehicle, and cause injury to vehicle occupants unless the items are securely fastened in the vehicle.

The trunk is the preferred place to carry objects.

### Driving abroad

Abroad, there is an extensive Mercedes-Benz service network at your disposal. If you plan to drive into areas which are not listed in the index of your Mercedes-Benz Center directory, you should request pertinent information from an authorized Mercedes-Benz Center.

### Control and operation of radio transmitters

#### COMAND, radio, and telephone\*

**Warning!**



Please do not forget that your primary responsibility is to drive the vehicle safely. Only operate the COMAND (Cockpit Management and Data System), radio, or telephone<sup>1</sup> if road, weather and traffic conditions permit. Otherwise, you may not be able to observe traffic conditions and could endanger yourself and others.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

<sup>1</sup> Observe all legal requirements.

### Telephones and two-way radios

**Warning!**



Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or personal injury.

Radio transmitters, such as a portable telephone or a citizens band unit should only be used inside the vehicle if they are connected to an antenna that is installed on the outside of the vehicle.

Refer to the radio transmitter operation instructions regarding use of an external antenna.



## Operation

### Driving instructions

#### Catalytic converter

Your Mercedes-Benz is equipped with monolithic-type catalytic converters, an important element in conjunction with the oxygen sensors to achieve substantial control of the pollutants in the exhaust emissions. Keep your vehicle in proper operating condition by following our recommended maintenance instructions as outlined in your Maintenance Booklet.

**!** *To prevent damage to the catalytic converters, only use premium unleaded gasoline in this vehicle.*

*Any noticeable irregularities in engine operation should be repaired promptly. Otherwise, excessive unburned fuel may reach the catalytic converter, causing it to overheat and potentially start a fire.*

#### Warning!



As with any vehicle, do not idle, park or operate this vehicle in areas where combustible materials such as grass, hay or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

#### Emission control

Certain systems of the engine and the emission control system serve to keep the toxic components of the exhaust gases within permissible limits required by law.

These systems will function properly only when maintained strictly according to factory specifications. Any adjustments on the engine should, therefore, be carried out only by qualified Mercedes-Benz Center authorized technicians.

Engine adjustments should not be altered in any way. The specified service procedures must be carried out regularly according to Mercedes-Benz servicing requirements. For details please refer to the Maintenance Booklet.

**Warning!**

Inhalation of exhaust gas is hazardous to your health. All exhaust gas contains carbon monoxide (CO), and inhaling it can cause unconsciousness and possible death.

Do not run the engine in confined areas (such as a garage) which are not properly ventilated. If you think that exhaust gas fumes are entering the vehicle while driving, have the cause determined and corrected immediately. If you must drive under these conditions, drive only with at least one window fully open at all times.

**Coolant temperature**

During severe operating conditions, e.g. stop-and-go traffic, the coolant temperature may rise close to approximately 248°F (120°C).

The engine should not be operated with the coolant temperature over 248°F (120°C). Doing so may cause serious engine damage which is not covered by the Mercedes-Benz Limited Warranty.

**Warning!**

- Driving when your engine is badly overheated can cause some fluids, which may have leaked into the engine compartment, to catch fire. You could be seriously burned.
- Steam from an overheated engine can cause serious burns and can occur just by opening the hood. Stay away from the engine if you see or hear steam coming from it.

Stop the vehicle in a safe location away from other traffic. Turn off the engine, get out of the vehicle and do not stand near the vehicle until the engine has cooled down.

## Operation

### At the gas station

#### Refueling

##### Warning!



Gasoline is highly flammable and poisonous. It burns violently and can cause serious personal injury.

Never allow sparks, flame or smoking materials near gasoline!


Turn off the engine before refueling.

Whenever you are around gasoline, avoid inhaling fumes and skin or clothing contact, extinguish all smoking materials.

Direct skin contact with fuels and the inhalation of fuel vapors are damaging to your health.

The fuel filler flap is located on the right-hand side of the vehicle towards the rear. Locking and unlocking the vehicle with the SmartKey or the SmartKey with KEYLESS-GO\* automatically locks and unlocks the fuel filler flap.

**i** In case that the central locking system does not release the fuel filler flap, or the opening mechanism is clamping, notify Roadside Assistance or an authorized Mercedes-Benz Center.

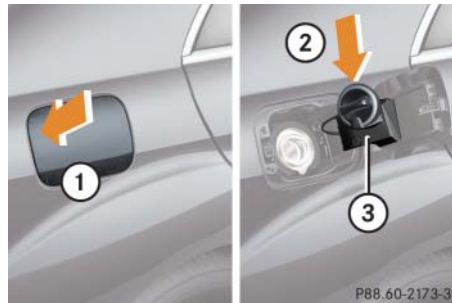

- ① To open fuel filler flap
- ② To insert fuel filler cap
- ③ Holder

- ▶ Shift the automatic transmission to park position **P**.
- ▶ Engage the electronic parking brake.
- ▶ Turn off the engine.
- ▶ Vehicles with SmartKey: Remove the SmartKey from the starter switch.

Vehicles with KEYLESS-GO\*: Open the driver's door (this puts the starter switch in position **0**, same as with the SmartKey removed from the starter switch). The driver's door then can be closed again.

- ▶ Open the fuel filler flap by pushing at the point indicated by arrow ①. The fuel filler flap springs open.
- ▶ Turn the fuel cap counterclockwise and hold on to it until possible pressure is released.

- ▶ Take off the fuel filler cap and set it in the direction of arrow ② and place it into holder ③ located on the inside of the fuel filler flap.

To prevent fuel vapors from escaping into open air, fully insert filler nozzle unit.

- ▶ Only fill your tank until the filler nozzle unit cuts out – **do not top off or overfill**.

#### Warning!



Overfilling of the fuel tank may create pressure in the system which could cause a gas discharge. This could cause the gas to spray back out when removing the fuel pump nozzle, which could cause personal injury.

- ▶ Replace the fuel cap by turning it clockwise until it audibly engages.


**i** Make sure to close the fuel filler flap before locking your vehicle as the flap locking pin prevents closing after you have locked the vehicle.

- ▶ Close the fuel filler flap.

You should hear the latch close shut.

**i** Only use premium unleaded gasoline with a minimum Posted Octane Rating of 91 (average of 96 RON/86 MON). Please contact gas station personnel in case labels on the pump cannot be found.

For more information on gasoline see “Premium unleaded gasoline” (▷ page 770), see “Fuel requirements” (▷ page 770) and the Factory Approved Service Products pamphlet.


**i** Leaving the engine running and the fuel cap open can cause the yellow engine malfunction indicator lamp  to illuminate.

For more information, see the “Practical hints” section (▷ page 632).

## Operation

### At the gas station

#### Check regularly and before a long trip

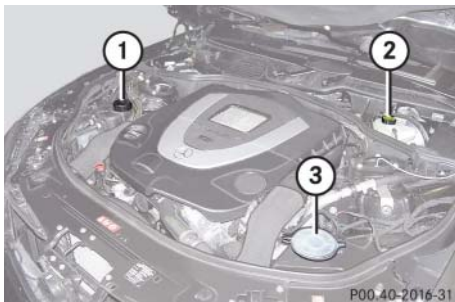

#### Example illustration from S 550

- ① Coolant level
  - ② Brake fluid
  - ③ Windshield washer and headlamp cleaning system
- i** Opening the hood (▷ page 573).

#### Windshield washer system and headlamp cleaning system

For more information on refilling the washer reservoir, see “Windshield washer system and headlamp cleaning system” (▷ page 580).

#### Coolant

For more information on coolant, see “Coolant level” (▷ page 579) and see “Fuels, coolants, lubricants, etc.” (▷ page 764).

#### Brake fluid

**!** If you find that the brake fluid in the brake fluid reservoir has fallen to the minimum mark or below, have the brake system checked for brake pad thickness and leaks immediately. Notify an authorized Mercedes-Benz Center immediately. Do not add brake fluid as this will not solve the problem. For more information, see “Practical hints” (▷ page 631) and (▷ page 664).

For information on brake fluid, see “Brake fluid” (▷ page 769).

#### Engine oil level

For more information on engine oil, see “Engine oil” (▷ page 575).

#### Vehicle lighting

Check function and cleanliness. For more information on replacing light bulbs, see “Replacing bulbs” (▷ page 714).

For more information, see “Lighting” (▷ page 399).

#### Tire inflation pressure

For information on tire inflation pressure, see “Checking tire inflation pressure” (▷ page 592).

▼ Engine compartment

Hood

**Warning!**



Do not pull the release lever while the vehicle is in motion. Otherwise the hood could be forced open by passing air flow.

This could cause the hood to come loose and injure you and/or others.

Opening

**Warning!**



You could be injured when the hood is open – even when the engine is turned off.

Parts of the engine can become very hot. To prevent burns, let the engine cool off completely before touching any components on the vehicle. Comply with all relevant safety precautions.



① Release lever

- ▶ Pull release lever ①.
- The hood is unlocked.



② Handle for opening the hood

- ▶ Lift the hood slightly.
- Handle ② will extend out of the radiator grille.

**!** To avoid damage to the windshield wipers or hood, never open the hood if the wiper arms are folded forward away from the windshield.

**!** To avoid damage to handle ② never pull up the hood on handle ②.

- ▶ Pull handle ② to its stop out of radiator grille.
- ▶ Lift bottom of hood at edge of radiator grille.

The hood will be automatically held open at shoulder height by gas-filled struts.



## Operation

### Engine compartment



#### Warning!



To help prevent personal injury, stay clear of moving parts when the hood is open and the engine is running.

The radiator fan may continue to run for approximately 30 seconds or even restart after the engine has been turned off. Stay clear of fan blades.

#### Warning!



If you see flames or smoke coming from the engine compartment, or if the coolant temperature gauge indicates that the engine is overheated, do not open the hood. Move away from vehicle and do not open the hood until the engine has cooled down. If necessary, call the fire department.

#### Warning!



The engine is equipped with a transistorized ignition system. Because of the high voltage it is dangerous to touch any components (ignition coils, spark plug sockets, diagnostic socket) of the ignition system

- with the engine running
- while starting the engine
- if ignition is “on” and the engine is cranked manually

### Closing

#### Warning!



When closing the hood, use extreme caution not to catch hands or fingers. Be careful that you do not close the hood on anyone.

Make sure that the hood is securely engaged before driving off. Do not continue driving if the hood can no longer engage after an accident, for example. The hood could otherwise come loose while the vehicle is in motion and endanger you and/or others.

- ▶ Let the hood drop from a height of approximately 1 ft (30 cm).  
The hood will lock audibly.
- ▶ Check to make sure the hood is fully closed.

If you can raise the hood at a point above the headlamps, then it is not properly closed. Open it again and let it drop with somewhat greater force.

### Engine oil

The amount of oil your engine needs will depend on a number of factors, including driving style. Higher oil consumption can occur when

- the vehicle is new
- the vehicle is driven frequently at higher engine speeds

Engine oil consumption checks should only be made after the vehicle break-in period.

**!** *Do not use any special lubricant additives, as these may damage the drive assemblies. Using special additives not approved by Mercedes-Benz may cause damage not covered by the Mercedes-Benz Limited Warranty.*

*More information on this subject is available at any Mercedes-Benz Center.*

### Notes about checking engine oil level

When checking the oil level

- the vehicle must be parked on level ground
- with the engine at operating temperature, the vehicle must have been stationary for at least 5 minutes with the engine turned off
- with the engine not at operating temperature yet, the vehicle must have been stationary for at least 30 minutes with the engine turned off

### Checking engine oil level with the control system (S 600 and S 65 AMG)

To check the engine oil level via the multi-function display, do the following:

**i** *The menu overview can be found on (> page 289).*

- ▶ Switch on the ignition (> page 370).
- ▶ Press **◀** or **▶** to select the menu "Service".
- ▶ Press **▲** or **▼** to select "Engine Oil Level".
- ▶ Press **OK**.

The following message is seen in the multi-function display:

*"Measuring  
Engine Oil Level  
Accurate Only  
When Vehicle Is Level"*

▷▷




## Operation

### Engine compartment

▷▷ One of the following messages will subsequently appear in the multifunction display:

- *“Engine Oil Level OK”*
- *“Add 1.0 qts. Engine Oil At Next Refueling”*  
(Canada: *“1.0 l”*)
- *“Add 1.5 qts. Engine Oil At Next Refueling”*  
(Canada: *“1.5 l”*)
- *“Add 2.0 qts. Engine Oil At Next Refueling”*  
(Canada: *“2.0 l”*)

**i** If you want to interrupt the checking procedure, press button  on the multifunction steering wheel.

- ▶ If necessary, add engine oil (▷ page 578).

For more information on engine oil, see the “Technical data” section (▷ page 765) and (▷ page 769).

#### Other display messages

If the SmartKey or KEYLESS-GO\* start/stop button is not in position **2**, the following message will appear:

*“For Engine Oil Level Ignition Must be On”*

- ▶ Switch on the ignition (▷ page 370).

If you see the message

*“Need More Time to Check Engine Oil Level”*

- ▶ If engine is at operating temperature, wait 5 minutes before repeating check procedure.
- ▶ If engine is not at operating temperature yet, wait 30 minutes before repeating check procedure.

If you see the message

*“Engine Oil Level Not Measurable With Running Engine”*

- ▶ Turn off the engine.
- ▶ If the engine is at operating temperature, wait 5 minutes before checking oil.
- ▶ If the engine is not at operating temperature yet, you must wait 30 minutes before checking oil.

If there is excess engine oil with the engine at operating temperature, the following message will appear:

*“Reduce Engine Oil Level”*

- ▶ Have excess oil siphoned or drained off. Contact an authorized Mercedes-Benz Center.


**!** *Excess oil must be siphoned or drained off. It could cause damage to the engine and catalytic converter not covered by the Mercedes-Benz Limited Warranty.*

For more information on messages in the multifunction display concerning engine oil, see the “Practical hints” section (▷ page 694).

#### Checking engine oil level with the oil dipstick (all models except S 600 and S 65 AMG)


To check the engine oil level with the oil dipstick, do the following:

- ▶ Open the hood (▷ page 573).

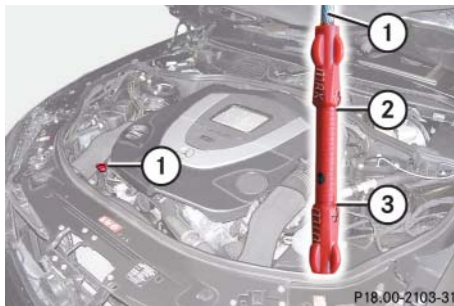

#### S 550 and S 63 AMG

- ① Oil dipstick
- ② Upper mark
- ③ Lower mark

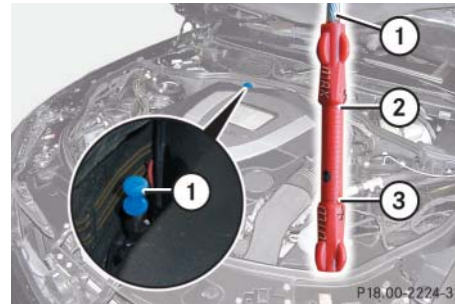

#### S 450 4matic and S 550 4matic

- ① Oil dipstick
- ② Upper mark
- ③ Lower mark

- ▶ Pull out oil dipstick ①.
- ▶ Wipe oil dipstick ① clean.
- ▶ Fully insert oil dipstick ① into the dipstick guide tube.
- ▶ Pull out oil dipstick ① again after approximately 3 seconds to obtain accurate reading.

The oil level is correct when it is between lower mark ③ (min.) and upper mark ② (max.) of the oil dipstick.

**i** S 450 4MATIC, S 550 and S 550 4MATIC:

*The filling quantity between the upper and lower marks on the oil dipstick is approximately 2.1 US qt. (2.0 l).*

**i** S 63 AMG only:

*The filling quantity between the upper and lower marks on the oil dipstick is approximately 1.6 US qt. (1.5 l).*

- ▶ If necessary, add engine oil.

For adding engine oil (▷ page 578).

For more information on engine oil, see the “Technical data” section (▷ page 765) and (▷ page 769).

For more information on messages in the multifunction display concerning engine oil, see the “Practical hints” section (▷ page 642).


## Operation

### Engine compartment

#### Adding engine oil

**!** Only use approved engine oils and oil filters required for vehicles with Maintenance System. For a listing of approved engine oils and oil filters, refer to the Factory Approved Service Products pamphlet (USA only) in your vehicle literature portfolio, or contact an authorized Mercedes-Benz Center.

Using engine oils and oil filters of specification other than those expressly required for the Maintenance System, or changing of oil and oil filter at change intervals longer than those called for by the Maintenance System will result in engine or emission control system damage not covered by the Mercedes-Benz Limited Warranty.

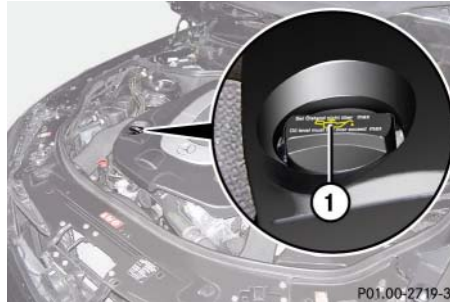

Example illustration from S 550



#### S 63 AMG

① Filler cap

- ▶ Unscrew filler cap ① from filler neck.

- ▶ Add engine oil as required. Be careful not to overfill with oil.

Be careful not to spill any oil when adding. Avoid environmental damage caused by oil entering the ground or water.

**!** Excess oil must be siphoned or drained off. It will cause damage to the engine and emission control system not covered by the Mercedes-Benz Limited Warranty.

- ▶ Screw filler cap ① back on filler neck.

For more information on engine oil, see the “Technical data” section (▷ page 765) and (▷ page 769).

#### Transmission fluid level

The transmission fluid level does not need to be checked. If you notice transmission fluid loss or gear shifting malfunctions, have an authorized Mercedes-Benz Center check the automatic transmission.

#### Active Body Control\* (ABC\*) fluid level

Regular fluid level check is not required. If you notice fluid leaks or malfunction messages in the multifunction display, have an authorized Mercedes-Benz Center check the ABC-system.

#### Coolant level

The engine coolant is a mixture of water and anticorrosion/antifreeze.

When checking the coolant level,

- the vehicle must be parked on level ground
- the coolant temperature must be below 158°F (70°C)

#### Warning!




In order to avoid potentially serious burns:

- Use extreme caution when opening the hood if there are any signs of steam or coolant leaking from the cooling system, or if the coolant temperature gauge indicates that the coolant is overheated.
- Do not remove pressure cap on coolant reservoir if coolant temperature is above 158°F (70°C). Allow engine to cool down before removing cap. The coolant reservoir contains hot fluid and is under pressure.

- Using a rag, slowly open the cap approximately  $\frac{1}{2}$  turn to relieve excess pressure. If opened immediately, scalding hot fluid and steam will be blown out under pressure.
- Do not spill antifreeze on hot engine parts. Antifreeze contains ethylene glycol which may burn if it comes into contact with hot engine parts.

The coolant expansion tank is located on the passenger side of the engine compartment.

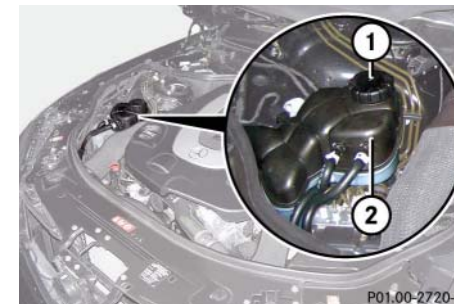

Example illustration from S 550

- ① Cap
- ② Coolant expansion tank

## Operation

### Engine compartment

- ▶ Using a rag, turn cap ① slowly approximately one half turn counterclockwise to release any excess pressure.
- ▶ Continue turning the cap counterclockwise and remove it.


The coolant level is correct if the level

- for cold coolant: reaches the white marking (plastic bridge) inside the coolant expansion tank
- for warm coolant: is approximately 0.6 in (1.5 cm) higher
- ▶ Add coolant as required.
- ▶ Replace and tighten cap ①.

For more information on coolant, see the “Technical data” section (▷ page 771).

### Windshield washer system and headlamp cleaning system

The washer fluid reservoir is located on the left-hand side of the engine compartment when looking in the direction of travel. It supplies the windshield washer system and headlamp cleaning system with washer fluid.

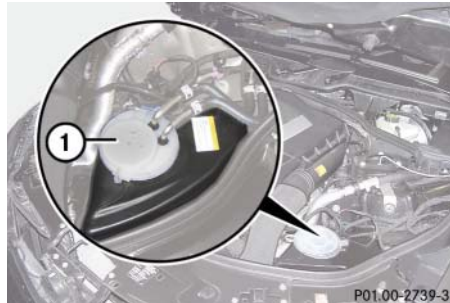

Example illustration S 550 with Airmatic

① Cap



### Vehicles with ABC\*

① Cap

Fluid for the windshield washer system and the headlamp cleaning system is supplied from the windshield washer reservoir. It has a capacity of approximately 6.87 US qt (6.5 l).

During all seasons, add MB Windshield Washer Concentrate “MB SummerFit” to water. Premix the windshield washer fluid in a suitable container.

**Warning!**

Washer solvent/antifreeze is highly flammable. Do not spill washer solvent/antifreeze on hot engine parts, because it may ignite and burn. You could be seriously burned.

- ▶ **To open washer fluid reservoir:** Pull tab of cap ① upward.
- ▶ Refill the reservoir with MB Windshield Washer Concentrate and water (or commercially available premixed windshield washer solvent/antifreeze, depending on ambient temperatures).

**!** *Always use washer solvent/antifreeze where temperatures may fall below freezing point. Failure to do so could result in damage to the washer system/reservoir.*

*Only use washer fluid which is suitable for plastic lenses. Improper washer fluid can damage the plastic lenses of the headlamps.*

*Do not use distilled or de-ionized water in the washer fluid reservoir. Otherwise, the washer fluid level sensor could be damaged.*

- ▶ **To close washer fluid reservoir:** Press cap ① onto filler hole until it engages.

For more information, see “Windshield washer system and headlamp cleaning system” (▷ page 774).

## Operation

### Tires and wheels

Contact an authorized Mercedes-Benz Center for information on tested and recommended rims and tires for summer and winter operation. They can also offer advice concerning tire service and purchase.

#### Warning!



Replace rims or tires with the same designation, manufacturer and type as shown on the original part. Contact an authorized Mercedes-Benz Center for further information. If incorrectly sized rims and tires are mounted:

- The wheel brakes or suspension components can be damaged.
- The operating clearance of the wheels and the tires may no longer be correct.

#### Warning!



Worn, old tires can cause accidents. If the tire tread is worn to minimum tread depth, or if the tires have sustained damage, replace them.

When replacing rims, only use genuine Mercedes-Benz wheel bolts specified for the particular rim type. Failure to do so can result in the bolts loosening and possibly an accident.

Retreaded tires are not tested or recommended by Mercedes-Benz, since previous damage cannot always be recognized on retreads. The operating safety of the vehicle cannot be assured when such tires are used.

#### Important guidelines

- Only use sets of tires and rims of the same type and make.
- Tires must be of the correct size for the rim.
- Break in new tires for approximately 60 miles (100 km) at moderate speeds.
- Regularly check the tires and rims for damage. Dented or bent rims can cause tire inflation pressure loss and damage to the tire beads.
- If vehicle is heavily loaded, check tire inflation pressure and correct as required.
- Do not allow your tires to wear down too far. Adhesion properties on wet roads are sharply reduced at tread depths of less than  $\frac{1}{8}$  in (3 mm).
- When replacing individual tires, you should mount new tires on the front wheels first (on vehicles with same-sized wheels all around).

**Tire care and maintenance**

**Warning!**



Regularly check the tires for damage. Damaged tires can cause tire inflation pressure loss. As a result, you could lose control of your vehicle.

Worn, old tires can cause accidents. If the tire tread is badly worn, or if the tires have sustained damage, replace them.

Regularly check the tire inflation pressure at least once a month. For more information on checking tire inflation pressure, see “Recommended tire inflation pressure” (▷ page 590).

**Tire inspection**

Every time you check the tire inflation pressure, you should also inspect your tires for the following:

- excessive treadwear (▷ page 584)
- cord or fabric showing through the tire’s rubber
- bumps, bulges, cuts, cracks or splits in the tread or side of the tire

Replace the tire if you find any of the above conditions.

Make sure you also inspect the spare tire periodically for condition and inflation. Spare tires will age and degrade over time even if never used, and thus should be inspected and replaced when necessary.

**Life of tire**

The service life of a tire is dependent upon varying factors including but not limited to:

- Driving style
- Tire inflation pressure
- Distance driven

**Warning!**



Tires and spare tire should be replaced after 6 years, regardless of the remaining tread.



## Operation

### Tires and wheels

#### Tread depth

Do not allow your tires to wear down too far. Adhesion properties on wet roads are sharply reduced at tread depths of less than  $\frac{1}{8}$  in (3 mm).

Treadwear indicators (TWI) are required by law. These indicators are located in six places on the tread circumference and become visible at a tread depth of approximately  $\frac{1}{16}$  in (1.6 mm), at which point the tire is considered worn and should be replaced.

Recommended minimum tire tread depth:

- Summer tires  $\frac{1}{8}$  in (3 mm)
- Winter tires  $\frac{1}{6}$  in (4 mm)


#### Warning!



Although the applicable federal motor safety laws consider a tire to be worn when the treadwear indicators (TWI) become visible at approximately  $\frac{1}{16}$  in (1.6 mm), we recommend that you do not allow your tires

to wear down to that level. As tread depth approaches  $\frac{1}{8}$  in (3 mm), the adhesion properties on a wet road are sharply reduced.

Depending upon the weather and/or road surface (conditions), the tire traction varies widely.

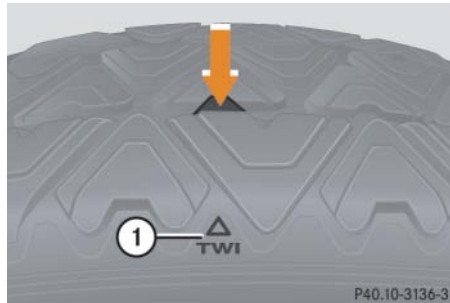

① TWI (TreadWear Indicator)

The treadwear indicator appears as a solid band across the tread.

#### Storing tires

**!** Keep unmounted tires in a cool, dry place with as little exposure to light as possible. Protect tires from contact with oil, grease and gasoline.

#### Cleaning tires

**!** Never use a round nozzle to power wash tires. The intense jet of water can result in damage to the tire.

Always replace a damaged tire.

#### Direction of rotation

Unidirectional tires offer added advantages, such as better hydroplaning performance. To benefit, however, you must make sure the tires rotate in the direction specified.

An arrow on the sidewall indicates the intended direction of rotation (spinning) of the tire.

**i** *Spare wheels may be mounted against the direction of rotation (spinning) even with a unidirectional tire for temporary use only until the regular drive wheel has been repaired or replaced. Always observe and follow applicable temporary use restrictions and speed limitations indicated on the spare wheel.*

#### Loading the vehicle

Two labels on your vehicle show how much weight it may properly carry.

- 1) The Tire and Loading Information placard can be found on the driver's door B-pillar. This placard tells you important information about the number of people that can be in the vehicle and the total weight that can be carried in the vehicle. It also contains information on the proper size and recommended tire inflation pressures for the original equipment tires on your vehicle.
- 2) The certification label, also found on the driver's door B-pillar tells you about the gross weight capacity of your vehicle, called the Gross Vehicle Weight Rating (GVWR). The GVWR includes the weight of the vehicle, all occupants, fuel and cargo. The certification label also tells you about the front and rear axle weight capacity, called the Gross Axle Weight Rating (GAWR).

The GAWR is the total allowable weight that can be carried by a single axle (front or rear). Never exceed the GVWR or GAWR for either the front axle or rear axle.



① Driver's door B-pillar

Following is a discussion on how to work with the information contained on the Tire and Loading Information placard with regards to loading your vehicle.

## Operation

### Tires and wheels

#### Tire and Loading Information


##### Warning!



Do not overload the tires by exceeding the specified load limit or total load limit as indicated on the Tire and Loading Information placard on the driver's door B-pillar. Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

**i** Data shown on Tire and Loading Information placard example are for illustration purposes only. Load limit data are specific to each vehicle and may vary from data shown in the illustration below. Refer to Tire and Loading Information placard on vehicle for actual data specific to your vehicle.

#### Tire and Loading Information placard

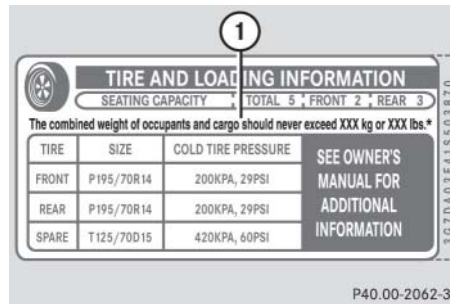

① Load limit information on the Tire and Loading Information placard

The Tire and Loading Information placard showing the load limit information is located on the driver's door B-pillar.


- ▶ Locate the statement “The combined weight of occupants and cargo should never exceed XXX kilograms or XXX lbs.” on the Tire and Loading Information placard.

The combined weight of all occupants, cargo/luggage and trailer tongue load (if applicable) should never exceed the weight referenced in that statement.

#### Seating capacity

The seating capacity gives you important information on the number of occupants that can be in the vehicle. Observe front and rear seating capacity. The Tire and Loading Information placard showing the seating capacity is located on the driver's door B-pillar (▷ page 585).

**i** Data shown on Tire and Loading Information placard example are for illustration purposes only. Seating capacity data are specific to each vehicle and may vary from data shown in the illustration below. Refer to Tire and Loading Information placard on vehicle for actual data specific to your vehicle.

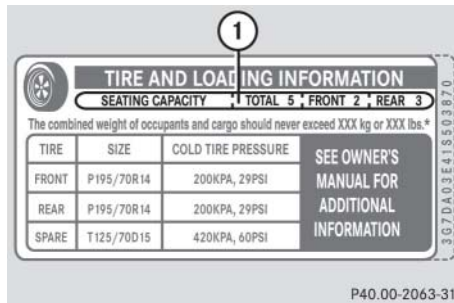

- ① Seating capacity information on the Tire and Loading Information placard

#### **Steps for determining correct load limit**

The following steps have been developed as required of all manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 pursuant to the “National Traffic and Motor Vehicle Safety Act of 1966”.

#### **Step 1**

- ▶ Locate the statement “The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.” on your vehicle’s Tire and Loading Information placard.

#### **Step 2**

- ▶ Determine the combined weight of the driver and passengers that will be riding in your vehicle.

#### **Step 3**

- ▶ Subtract the combined weight of the driver and passengers from XXX kilograms or XXX lbs.

#### **Step 4**

- ▶ The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the “XXX” amount equals 1400 lbs and there will be five 150 lbs passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs ( $1400 - 750 (5 \times 150) = 650$  lbs).

#### **Step 5**

- ▶ Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.

#### **Step 6** (if applicable)

- ▶ If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle (▷ page 589).

The following table shows examples on how to calculate total and cargo load capacities with varying seating configurations and number and size of occupants. The following examples use a load limit of 1500 lbs. **This is for illustration purposes only.** Make sure you are using the actual load limit for your vehicle stated on the vehicle’s Tire and Loading Information placard (▷ page 586).

## Operation

### Tires and wheels

Example	Combined weight limit of occupants and cargo from Tire and Loading Information placard	Number of occupants (driver and passengers)	Seating configuration	Occupants weight	Combined weight of all occupants	Available cargo/luggage and trailer tongue weight (total load limit from Tire and Loading Information placard minus combined weight of all occupants)
1	1500 lbs	5	front: 2 rear: 3	Occupant 1: 150 lbs Occupant 2: 180 lbs Occupant 3: 160 lbs Occupant 4: 140 lbs Occupant 5: 120 lbs	750 lbs	1500 lbs - 750 lbs = 750 lbs
2	1500 lbs	3	front: 1 rear: 2	Occupant 1: 200 lbs Occupant 2: 190 lbs Occupant 3: 150 lbs	540 lbs	1500 lbs - 540 lbs = 960 lbs
3	1500 lbs	1	front: 1	Occupant 1: 150 lbs	150 lbs	1500 lbs - 150 lbs = 1350 lbs

The higher the weight of all occupants, the less cargo and luggage load capacity is available.

For more information, see “Trailer tongue load” (> page 589).

#### ***Certification label***

Even after careful determination of the combined weight of all occupants, cargo and the trailer tongue load (if applicable) (▷ page 589) as to not exceed the permissible load limit, you must make sure that your vehicle never exceeds the Gross Vehicle Weight Rating (GVWR) and the Gross Axle Weight Rating (GAWR) for either the front or rear axle. You can obtain the GVWR and GAWR from the certification label. The certification label can be found on the driver's door B-pillar, see "Technical data" (▷ page 748).

**Gross Vehicle Weight Rating (GVWR):** The total weight of the vehicle, all occupants, all cargo, and the trailer tongue load (▷ page 589) must never exceed the GVWR.

**Gross Axle Weight Rating (GAWR):** The total allowable weight that can be carried by a single axle (front or rear).

To assure that your vehicle does not exceed the maximum permissible weight limits (GVWR and GAWR for front and rear axle), have the loaded vehicle (including driver, passengers and all cargo and, if applicable, trailer fully loaded) weighed on a suitable commercial scale.

#### ***Trailer tongue load***

The tongue load of any trailer is an important weight to measure because it affects the load you can carry in your vehicle. If a trailer is towed, the tongue load must be added to the weight of all occupants riding and any cargo you are carrying in the vehicle. The tongue load typically is 10% of the trailer weight and everything loaded in it.

Your Mercedes-Benz has been designed primarily to carry passengers and their cargo. Mercedes-Benz does not recommend trailer towing with your vehicle.

## Operation

### Tires and wheels

#### Recommended tire inflation pressure

##### Warning!



Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and/or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

Do not overload the tires by exceeding the specified load limit as indicated on the Tire and Loading Information placard on the driver's door B-pillar. Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

Your vehicle is equipped with the Tire and Loading Information placard located on the driver's door B-pillar (▷ page 585).


The tire inflation pressure should be checked regularly and should only be adjusted on cold tires. The tires can be considered cold if the vehicle has been parked for at least 3 hours or driven less than 1 mile (1.6 km).

Follow recommended cold tire inflation pressures listed on Tire and Loading Information placard on the driver's door B-pillar.

Keeping the tires properly inflated provides the best handling, tread life and riding comfort.

In addition to the tire Tire and Loading Information placard on the driver's door B-pillar, also consult the tire inflation pressure label (if available) for any additional information pertaining to special driving situations. For more information, see "Important notes on tire inflation pressure" (▷ page 591).

**i** Data shown on Tire and Loading Information placard example are for illustration purposes only. Tire data are specific to each vehicle and may vary from data shown in the illustration below. Refer to Tire and Loading Information placard on vehicle for actual data specific to your vehicle.

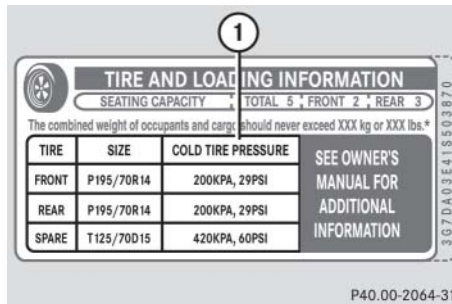

① Tire and Loading Information placard with recommended cold tire inflation pressures

The Tire and Loading Information placard lists the recommended cold tire inflation pressures for maximum loaded vehicle weight. The tire inflation pressures listed apply to the tires installed as original equipment.

#### Important notes on tire inflation pressure

##### Warning!



If the tire inflation pressure drops repeatedly:

- Check the tires for punctures from foreign objects.
- Check to see whether air is leaking from the valves or from around the rim.

Tire temperature and tire inflation pressure are also increased while driving, depending on the driving speed and the tire load.

If you will be driving your vehicle at high speeds of 100 mph (160 km/h) or higher, where it is legal and conditions allow, consult the tire inflation pressure label on the inside of the fuel filler flap (if available) on how to adjust the cold tire inflation pressure. If you do not adjust the tire inflation pressure, excessive heat can build up and result in sudden tire failure.

If your vehicle is not equipped with the tire inflation pressure label on the inside of the fuel filler flap, contact an authorized Mercedes-Benz Center for proper tire inflation pressure.

**i** Driving comfort may be reduced when the tire inflation pressure is adjusted to the value for speeds above 100 mph (160 km/h) as specified on the supplemental tire inflation pressure label located on the inside of the fuel filler flap.

Be sure to readjust the tire inflation pressure for normal driving speeds. You should wait until the tires are cold before adjusting the tire inflation pressure.

Some vehicles may have supplemental tire inflation pressure information for vehicle loads less than the maximum loaded vehicle condition (▷ page 598). If such information is provided, it can be found on the tire inflation pressure label located on the inside of the fuel filler flap (▷ page 570).



## Operation

### Tires and wheels

Tire inflation pressure changes by approximately 1.5 psi (0.1 bar) per 18°F (10°C) of air temperature change. Keep this in mind when checking tire inflation pressure where the temperature is different from the outside temperature.

#### Checking tire inflation pressure

Regularly check the tire inflation pressure at least once a month.

Check and adjust the tire inflation pressure when the tires are cold. The tires can be considered cold if the vehicle has been parked for at least 3 hours or driven less than 1 mile (1.6 km).

If you check the tire inflation pressure when the tires are warm (the vehicle has been driven for several miles or sitting less than 3 hours), the reading will be approximately 4 psi (0.3 bar) higher than the cold reading. This is normal. Do not let air out to match the specified cold tire inflation pressure. Otherwise, the tire will be underinflated.

#### Warning!



Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and/or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

Do not overload the tires by exceeding the specified load limit or total load limit as indicated on the Tire and Loading Information placard located on the driver's door B-pillar. Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

#### Checking tire inflation pressure manually

Follow the steps below to achieve correct tire inflation pressure:

- ▶ Remove the cap from the valve on one tire.
- ▶ Firmly press a tire gauge onto the valve.
- ▶ Read tire inflation pressure on tire gauge and check against the recommended tire inflation pressure on the Tire and Loading Information placard on the driver's door B-pillar (▷ page 585) or, if available, the tire inflation pressure label on the inside of the fuel filler flap. If necessary, add air to achieve the recommended tire inflation pressure.

**i** If you have overfilled the tire, release tire inflation pressure by pushing the metal stem of the valve with e.g. a tip of a pen. Then recheck the tire inflation pressure with the tire gauge.

- ▶ Install the valve cap.
- ▶ Repeat this procedure for each tire.

#### Checking tire inflation pressure electronically with the Advanced Tire Pressure Monitoring System (Advanced TPMS)

**i** The Advanced Tire Pressure Monitoring System (Advanced TPMS) is equipped with a combination low tire pressure/TPMS malfunction telltale in the instrument cluster (▷ page 638). Depending on how the telltale illuminates, it indicates a low tire inflation pressure condition or a malfunction in the TPMS system itself:

- If the telltale illuminates continuously, one or more of your tires is significantly under-inflated. There is no malfunction in the TPMS.
- USA only:  
If the telltale flashes for 60 seconds and then stays illuminated, the TPMS system itself is not operating properly.

**i** USA only:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

**i** Canada only:

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

The TPMS only functions on wheels that are equipped with the proper electronic sensors. It monitors the tire inflation pressure, as selected by the driver, in all four tires. A warning is issued to alert you to a decrease in pressure in one or more of the tires.

Tire inflation pressure inquiries are made using the multifunction display. The present inflation pressures are displayed only after a few minutes of travel time.

**i** Possible differences between the readings of a tire inflation pressure gauge of an air hose, e.g. gas station equipment, and the vehicle's control system can occur. Usually the readings issued by the control system are more precise.

**i** The menu overview can be found on (▷ page 289).



## Operation

### Tires and wheels

- ▷▷ Switch on the ignition (▷ page 370).
- ▶ Press ◀ or ▶ to select the menu “Service”.
- ▶ Press ▲ or ▼ to select “Tire Pressure”.
- ▶ Press OK.

**i** When the message “Tire Pressures Displayed After Driving a Few Minutes” appears in the display, the individual inflation pressure values are matched with the tires. The individual values are displayed after a few minutes driving.

#### Warning!



It is the driver's responsibility to calibrate the TPMS on the recommended cold inflation pressure. Underinflated tires affect the ability to steer or brake the vehicle. You might lose control over the vehicle.



**i** With a spare wheel without wheel sensor mounted, the system may still indicate the tire inflation pressure of the removed wheel for some minutes. If this happens, keep in mind that the indicated value where the spare wheel is mounted does not reflect the actual spare tire inflation pressure.

#### Warning!



The TPMS does not indicate a warning for wrongly selected inflation pressures. Always adjust tire inflation pressure according to the Tire and Loading Information placard on the driver's door B-pillar or, if available, the supplemental tire pressure information on the inside of the fuel filler flap.

The TPMS is not able to issue a warning due to a sudden dramatic loss of pressure (e.g. tire blowout caused by a foreign object). In this case bring the vehicle to a halt by carefully applying the brakes and avoiding abrupt steering maneuvers.

**Warning!**

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle Tire and Loading Information placard or the tire inflation pressure label. If your vehicle has tires of a different size than the size indicated on the vehicle Tire and Loading Information placard or the tire inflation pressure label, you should determine the proper tire inflation pressure for those tires. As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly underinflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure.

Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

USA only:

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

**i** *If a condition causing the TPMS to malfunction develops, it may take up to 10 minutes for the system to signal a malfunction using the TPMS telltale flashing and illumination sequence.*

*The telltale extinguishes after a few minutes driving if the malfunction has been corrected.*

**i** *Operating radio transmission equipment (e.g. wireless headsets, two-way radios) in or near the vehicle could cause the TPMS to malfunction.*

## Operation

### Tires and wheels

#### Reactivating Advanced TPMS

The TPMS must be reactivated when you have adjusted the tire inflation pressure to a new level (e.g. because of different load or driving conditions). The TPMS is then recalibrated to the current tire inflation pressures.

#### Warning!







It is the driver's responsibility to calibrate the TPMS on the recommended cold inflation pressure. Underinflated tires affect the ability to steer or brake the vehicle. You might lose control over the vehicle.


- ▶ Using the tire Tire and Loading Information placard on the driver's door B-pillar (▷ page 585) or, if available, the supplemental tire inflation pressure information on the inside of the fuel filler flap (▷ page 570), make sure the tire inflation pressure of all four tires is correct.

**i** Reactivate the TPMS after adjusting the tire inflation pressure to the inflation pressure recommended for the vehicle operating condition. Tire inflation pressure should only be adjusted on cold tires. Observe the recommended tire inflation pressure on the Tire and Loading Information placard on the driver's door B-pillar (▷ page 585). Some vehicles may have supplemental tire inflation pressure information for driving at high speeds (▷ page 591) or for vehicle loads less than the maximum loaded vehicle condition. If such information is provided, it can be found on the inside of the fuel filler flap (▷ page 570).

**i** After wheel rotation or sensor replacement, the vehicle must be parked for 20 minutes before attempting to reactivate the TPMS.

**i** The menu overview can be found on (▷ page 289).


- ▶ Switch on the ignition (▷ page 370).
- ▶ Press  or  to select the menu "Service".
- ▶ Press  or  to select "Tire Pressure".

- ▶ Press .

You will see

- the current inflation pressures for each tire  
or
- the message  
*"Tire Pressures  
Displayed After Driving  
a Few Minutes"*

appear in the multifunction display.

- ▶ Press .

The message

*"Use Current  
Pressures As New  
Reference Values  
Press "OK" to Confirm  
Tire Press."*

appears in the multifunction display.

- ▶ Press **OK**.

The message

*“Tire Pressure Monitor  
Reactivated”*

appears in the multifunction display.

After a few minutes driving, the current tire inflation pressure values are accepted as reference values and then monitored.

If you wish to cancel activation:

- ▶ Press **↩**.

or

- ▶ Press **▲** to exit menu screen.

**i** *When the wheel positions are changed on the vehicle, it is possible that the air pressure is temporarily displayed for the wrong position. This will be corrected after driving for several minutes, and the air pressure will be shown for the correct position.*

### Potential problems associated with underinflated and overinflated tires

#### Underinflated tires

Underinflated tires can:

- cause excessive and uneven tire wear
- adversely affect fuel economy
- lead to tire failure from being overheated
- adversely affect handling characteristics

#### Warning!



Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and/or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

#### Overinflated tires

Overinflated tires can:

- adversely affect handling characteristics
- cause uneven tire wear
- be more prone to damage from road hazards
- adversely affect ride comfort
- increase stopping distance

#### Warning!



Follow recommended tire inflation pressures.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.


## Operation

### Tires and wheels

#### Tire labeling

Besides tire name (sales designation) and manufacturer name, a number of markings can be found on a tire.

Following are some explanations for the markings on your vehicle's tires:

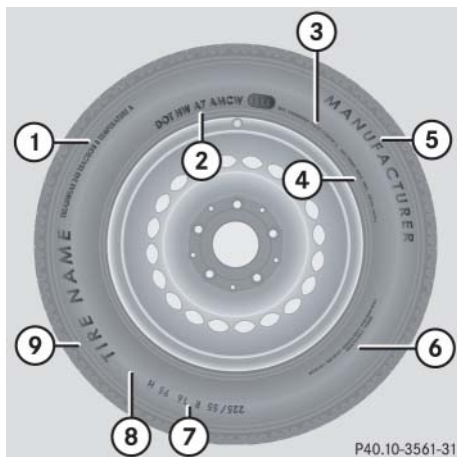


- ① Uniform Quality Grading Standards (▷ page 604)
- ② DOT, Tire Identification Number (TIN) (▷ page 602)
- ③ Maximum tire load (▷ page 603)
- ④ Maximum tire inflation pressure (▷ page 603)
- ⑤ Manufacturer
- ⑥ Tire ply material (▷ page 606)
- ⑦ Tire size designation, load and speed rating (▷ page 598)
- ⑧ Load identification (▷ page 601)
- ⑨ Tire name

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

For more information, see "Rims and tires" (▷ page 754).

#### Tire size designation, load and speed rating

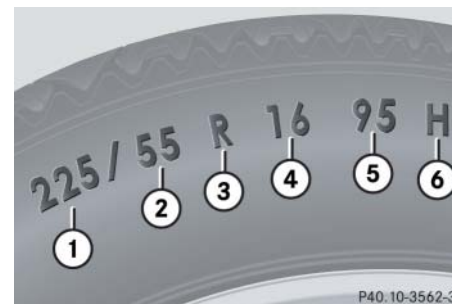

- ① Tire width
- ② Aspect ratio in %
- ③ Radial tire code
- ④ Rim diameter
- ⑤ Tire load rating
- ⑥ Tire speed rating

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

**General:**

Depending on the design standards used, the tire size molded into the sidewall may have no letter or a letter preceding the tire size designation.

No letter preceding the size designation (as illustrated above): Passenger car tire based on European design standards.

Letter “P” preceding the size designation: Passenger car tire based on U.S. design standards.

Letter “LT” preceding the size designation: Light Truck tire based on U.S. design standards.

Letter “T” preceding the size designation: Temporary spare tires which are high pressure compact spares designed for temporary emergency use only.

**Tire width**

The tire width ① (▷ page 598) indicates the nominal tire width in mm.

**Aspect ratio**

The aspect ratio ② (▷ page 598) is the dimensional relationship between tire section height and section width and is expressed in percentage. The aspect ratio is arrived at by dividing section height by section width.

**Tire code**

The tire code ③ (▷ page 598) indicates the tire construction type. The “R” stands for radial tire type. Letter “D” means diagonal or bias ply construction; letter “B” means belted-bias ply construction.

At the tire manufacturer’s option, any tire with a speed capability above 149 mph (240 km/h) can include a “ZR” in the size designation (for example: 245/40 ZR 18). For additional information, see “Tire speed rating” (▷ page 600).

**Rim diameter**

The rim diameter ④ (▷ page 598) is the diameter of the bead seat, not the diameter of the rim edge. Rim diameter is indicated in inches (in).

**Tire load rating**

The tire load rating ⑤ (▷ page 598) is a numerical code associated with the maximum load a tire can support.

For example, a load rating of 91 corresponds to a maximum load of 1356 lbs (615 kg) the tire is designed to support. See also “Maximum tire load” (▷ page 603) where the maximum load associated with the load index is indicated in kilograms and lbs.



## Operation

### Tires and wheels

#### Warning!



The tire load rating must always be at least half of the GAWR (▷ page 607) of your vehicle. Otherwise, tire failure may be the result which may cause an accident and/or serious personal injury to you or others.

Always replace rims and tires with the same designation, manufacturer and type as shown on the original part.

#### Warning!



Do not overload the tires by exceeding the specified load limit or total load limit as indicated on the Tire and Loading Information placard located on the driver's door B-pillar (▷ page 585). Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

For additional information on tire load rating, see "Load identification" (▷ page 601).

**i** Tire load rating ⑤ (▷ page 598) and tire speed rating ⑥ (▷ page 598) are also referred to as "service description".

#### Tire speed rating

The tire speed rating ⑥ (▷ page 598) indicates the approved maximum speed for the tire.

#### Warning!



Even when permitted by law, never operate a vehicle at speeds greater than the maximum speed rating of the tires.

Exceeding the maximum speed for which tires are rated can lead to sudden tire failure, causing loss of vehicle control and possibly resulting in an accident and/or personal injury and possible death, for you and for others.

**i** Tire load rating ⑤ (▷ page 598) and tire speed rating ⑥ (▷ page 598) are also referred to as "service description".

#### Summer tires

Index	Speed rating
Q	up to 100 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 112 mph (180 km/h)
T	up to 118 mph (190 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h)
W	up to 168 mph (270 km/h)
Y	up to 186 mph (300 km/h)
(Y)	above 186 mph (300 km/h)
ZR	above 149 mph (240 km/h)

- At the tire manufacturer's option, any tire with a speed capability above 149 mph (240 km/h) can include a "ZR" in the size designation (for example: 245/40 ZR18). To determine the maximum speed capability of the tire,

the service description for the tire must be referred to. The service description is comprised of the tire load rating ⑤ (▷ page 598) and the tire speed rating ⑥ (▷ page 598).

If your tire includes “ZR” in the size designation and no service description ⑤ and ⑥ (▷ page 598) is given, the tire manufacturer must be consulted for the maximum speed capability.

If a service description ⑤ and ⑥ (▷ page 598) is given, the speed capability is limited by the speed symbol in the service description.

Example: 245/40 ZR18 97Y.

In this example, “97Y” is the service description. The letter “Y” designates the speed rating and the speed capability of the tire is limited to 186 mph (300 km/h).

- Any tire with a speed capability above 186 mph (300 km/h) must include a “ZR” in the size designation AND the service description must be placed in parenthesis.


Example: 275/40 ZR 18 (99Y).

The “(Y)” speed rating in parenthesis designates the maximum speed capability of the tire as being above 186 mph (300 km/h). Consult the tire manufacturer for the actual maximum permissible speed of the tire.

All-season and winter tires

Index	Speed rating
Q M+S <sup>1</sup>	up to 100 mph (160 km/h)
T M+S <sup>1</sup>	up to 118 mph (190 km/h)
H M+S <sup>1</sup>	up to 130 mph (210 km/h)
V M+S <sup>1</sup>	up to 149 mph (240 km/h)

<sup>1</sup> or M+S  for winter tires

**i** Not all M+S rated tires provide special winter performance. Make sure the tires you use show M+S and the mountain/snowflake  marking on the tire sidewall. These tires meet specific snow traction performance requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) and have been designed specifically for use in snow conditions.

#### Load identification



① Load identification

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

## Operation

### Tires and wheels

In addition to tire load rating, special load identification ① may be molded into the tire sidewall following the letter designating the tire speed rating ⑥ (▷ page 598).

No specification given: absence of any text (like in above example) indicates a standard load (SL) tire.

XL (Extra Load): designates an extra load (or reinforced) tire.

Light Load: designates a light load tire.

C, D, E: designates load range associated with the maximum load a tire can carry at a specified pressure.


#### **DOT, Tire Identification Number (TIN)**

U.S. tire regulations require each new tire manufacturer or tire retreader to mold a TIN into or onto a sidewall of each tire produced.

The TIN is a unique identifier which facilitates efforts by tire manufacturers to notify purchasers in recall situations or other

safety matters concerning tires and gives purchasers the means to easily identify such tires.

The TIN is comprised of “Manufacturer’s identification mark”, “Tire size”, “Tire type code” and “Date of manufacture”.

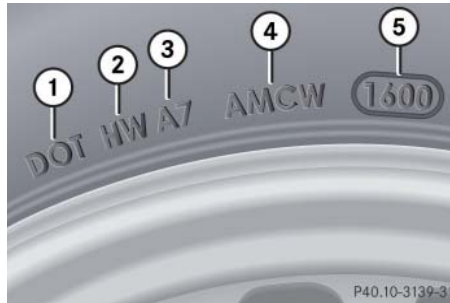

- ① DOT
- ② Manufacturer’s identification mark
- ③ Tire size
- ④ Tire type code (at the option of the tire manufacturer)
- ⑤ Date of manufacture

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

#### **DOT (Department of Transportation)**

A tire branding symbol ① (▷ page 602) which denotes the tire meets requirements of the U.S. Department of Transportation.

#### **Manufacturer’s identification mark**

The manufacturer’s identification mark ② (▷ page 602) denotes the tire manufacturer.

New tires have a mark with two symbols.

Retreaded tires have a mark with four symbols. For more information on retreaded tires (▷ page 582).

#### **Tire size**

The code ③ (▷ page 602) indicates the tire size.

#### **Tire type code**

The code ④ (▷ page 602) may, at the option of the manufacturer, be used as a descriptive code for identifying significant characteristics of the tire.


### Date of manufacture

The date of manufacture ⑤ (▷ page 602) identifies the week and year of manufacture.

The first two figures identify the week, starting with “01” to represent the first full week of the calendar year. The second two figures represent the year.

For example, “3202” represents the 32nd week of 2002.

### Maximum tire load

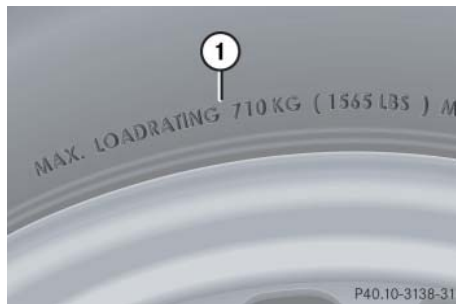

① Maximum tire load rating

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

The maximum tire load is the maximum weight the tires are designed to support.

### Warning!



Do not overload the tires by exceeding the specified load limit or total load limit as indicated on the Tire and Loading Information placard located on the driver’s door B-pillar (▷ page 585). Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

For more information on tire load rating (▷ page 599).

For information on calculating total and cargo load capacities (▷ page 587).

### Maximum tire inflation pressure



① Maximum permissible tire inflation pressure

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

This is the maximum permissible tire inflation pressure for the tire.

Always follow the recommended tire inflation pressure (▷ page 590) for proper tire inflation.

## Operation

### Tires and wheels

#### Warning!




Never exceed the max. tire inflation pressure. Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and/or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

#### Uniform Tire Quality Grading Standards (U.S. vehicles)

Tire manufacturers are required to grade tires based on three performance factors: treadwear, traction and temperature resistance.

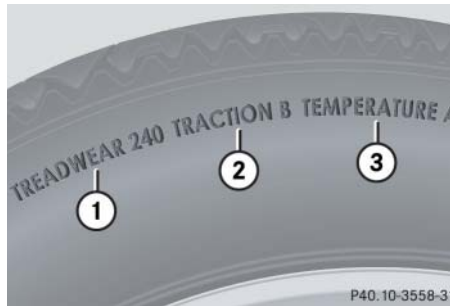

- ① Treadwear
- ② Traction
- ③ Temperature resistance

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

Quality grades can be found, where applicable, on the tire sidewall between tread shoulder and maximum section width. For example:

Treadwear	Traction	Temperature
200	AA	A

All passenger car tires must conform to federal safety requirements in addition to these grades.

#### Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half ( $1\frac{1}{2}$ ) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly

from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

**Traction**

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire’s ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

**Warning!**



The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

**Temperature**

The temperature grades are A (the highest), B, and C, representing the tire’s resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to the minimum level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

**Warning!**




The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause excessive heat build-up and possible tire failure.

## Operation

### Tires and wheels

#### Tire ply material

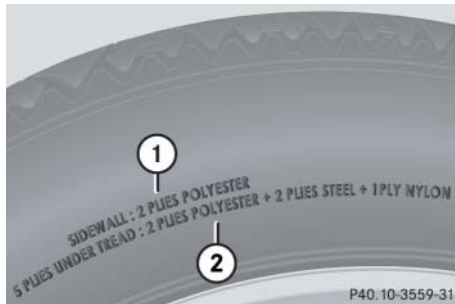

- ① Plies in sidewall
- ② Plies under tread

**i** For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

This marking tells you about the type of cord and number of plies in the sidewall and under the tread.

#### Tire and loading terminology

##### Accessory weight

The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

##### Air pressure

The amount of air inside the tire pressing outward on each square inch of the tire. Air pressure is expressed in pounds per square inch (psi), or kilopascal (kPa) or bars.

##### Aspect ratio

Dimensional relationship between tire section height and section width expressed in percentage.

##### Bar

Another metric unit for air pressure. There are 14.5038 pounds per square inch (psi) to 1 bar; there are 100 kilopascals (kPa) to 1 bar.

##### Bead

The tire bead contains steel wires wrapped by steel cords that hold the tire onto the rim.

##### Cold tire inflation pressure

Tire inflation pressure when your vehicle has been sitting for at least 3 hours or driven no more than 1 mile (1.6 km).

##### Curb weight

The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, and, if so equipped, air conditioning and additional optional equipment, but without passengers and cargo.

#### **DOT (Department of Transportation)**

A tire branding symbol which denotes the tire meets requirements of the U.S. Department of Transportation.

#### **GAWR (Gross Axle Weight Rating)**

The GAWR is the maximum permissible axle weight. The gross vehicle weight on each axle must never exceed the GAWR for the front and rear axle indicated on the certification label located on the driver's door B-pillar.

#### **GVW (Gross Vehicle Weight)**

The GVW comprises the weight of the vehicle including fuel, tools, spare wheel, installed accessories, passengers and cargo and, if applicable, trailer tongue load. The GVW must never exceed the GVWR indicated on the certification label located on the driver's door B-pillar.

#### **GVWR (Gross Vehicle Weight Rating)**

This is the maximum permissible vehicle weight of the fully loaded vehicle (weight of the vehicle including all options, passengers, fuel, and cargo and, if applicable, trailer tongue load). It is indicated on certification label located on the driver's door B-pillar.

#### **Kilopascal (kPa)**

The metric unit for air pressure. There are 6.9 kilopascals (kPa) to 1 psi; another metric unit for air pressure is bars. There are 100 kilopascals (kPa) to 1 bar.

#### **Maximum load rating**

The maximum load in kilograms and pounds that can be carried by the tire.

#### **Maximum loaded vehicle weight**

The sum of curb weight, accessory weight, total load limit, and production options weight.

#### **Maximum tire inflation pressure**

This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

#### **Normal occupant weight**

The number of occupants the vehicle is designed to seat, multiplied by 68 kilograms (150 lbs).

#### **Occupant distribution**

The distribution of occupants in a vehicle at their designated seating positions.

#### **Production options weight**

The combined weight of those installed regular production options weighing over 5 lbs (2.3 kilograms) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.



## Operation

### Tires and wheels

#### PSI (Pounds per square inch)

A standard unit of measure for air pressure  
-> bar, kilopascal (kPa).

#### Recommended tire inflation pressure

The recommended tire inflation pressure for normal driving conditions is listed on the Tire and Loading Information placard located on the driver's door B-pillar and provides best handling, tread life and riding comfort. If so equipped, supplemental information pertaining to special driving situations can be found on the tire inflation pressure label on the inside of the fuel filler flap.

#### Rim

A metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

#### Sidewall

The portion of a tire between the tread and the bead.

#### TIN (Tire Identification Number)

Unique identifier which facilitates efforts by tire manufacturers to notify purchasers in recall situations or other safety matters concerning tires and gives purchasers the means to easily identify such tires. The TIN is comprised of "Manufacturer's identification mark", "Tire size", "Tire type code" and "Date of manufacture".

#### Tire load rating

Numerical code associated with the maximum load a tire can support.

#### Tire ply composition and material used

This indicates the number of plies or the number of layers of rubber-coated fabric in the tire tread and sidewall. Tire manufacturers also must indicate the ply materials in the tire and sidewall, which include steel, nylon, polyester, and others.

#### Tire speed rating

Part of tire designation; indicates the speed range for which a tire is approved.

#### Total load limit

Rated cargo and luggage load plus 68 kilograms (150 lbs) times the vehicle's designated seating capacity.

#### Traction

Force exerted by the vehicle on the road via the tires. The amount of grip provided.

#### Tread

The portion of a tire that comes into contact with the road.

#### Treadwear indicators

Narrow bands, sometimes called "wear bars" that show across the tread of a tire when only  $\frac{1}{16}$  in (1.6 mm) of tread remains.

### Uniform Tire Quality Grading Standards

A tire information system that provides consumers with ratings for a tire's traction, temperature and treadwear. Ratings are determined by tire manufacturers using government testing procedures. The ratings are molded into the sidewall of the tire.

### Vehicle maximum load on the tire

Load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing it by two.

### Rotating tires

**Warning!**



Rotate front and rear wheels only if the tires are of the same dimension.

If your vehicle is equipped with mixed-size tires (different tire dimensions front vs. rear), tire rotation is not possible.

Tire rotation can be performed on vehicles with tires of the same dimension all around. If your vehicle is equipped with tires of the same dimension all around, tires can be rotated, observing a front-to-rear rotation pattern that will maintain the intended rotation (spinning) direction of the tire (▷ page 585).

In some cases, such as when your vehicle is equipped with mixed-size tires (different tire dimension front vs. rear), tire rotation is not possible.

If applicable to your vehicle's tire configuration, tires can be rotated according to the tire manufacturer's recommended intervals in the tire manufacturer's warranty pamphlet located in your vehicle literature portfolio. If none is available, tires should be rotated every 3000 to 6000 miles (5000 to 10000 km), or sooner if necessary, according to the degree of tire wear. The same rotation (spinning) direction must be maintained (▷ page 585).

Rotate tires before the characteristic tire wear pattern becomes visible (shoulder wear on front tires and tread center wear on rear tires).

Thoroughly clean the mounting face of wheels and brake disks, i.e. the inner side of the wheels/tires, during each rotation. Check for and ensure proper tire inflation pressure.

**Warning!**



Have the tightening torque checked after changing a wheel. Wheels could become loose if not tightened with a torque of 110 lb-ft (150 Nm).

Only use Genuine Mercedes-Benz wheel bolts specified for your vehicle's rims.

For information on wheel change, see the "Practical hints" section (▷ page 723).


## Operation

### Winter driving

Before the onset of winter, have your vehicle winterized at an authorized Mercedes-Benz Center. This service includes:

- Check of anticorrosion and antifreeze concentration.
- Addition of cleaning concentrate to the water of the windshield and headlamp cleaning system. Add MB Windshield Washer Concentrate “MB Summerfit” to a premixed windshield washer solvent/antifreeze which is formulated for below freezing temperatures (▷ page 772).
- Battery test. Battery capacity drops with decreasing ambient temperature. A well charged battery helps to make sure that the engine can be started, even at low ambient temperatures.
- Tire change.

### Winter tires

Always use winter tires at temperatures below 45°F (7°C) and whenever wintry road conditions prevail. Not all M+S rated tires provide special winter performance. Make sure the tires you use show the mountain/snowflake  marking on the tire sidewall. These tires meet specific snow traction performance requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) and have been designed specifically for use in snow conditions. Use of winter tires is the only way to achieve the maximum effectiveness of the ABS, EBP, ESP® and 4MATIC in winter operation.

For safe handling, make sure that all mounted winter tires are of the same make and have the same tread design.

### Warning!



Winter tires with a tread depth of less than  $\frac{1}{6}$  in (4 mm) must be replaced. They are no longer suitable for winter operation.

Always observe the speed rating of the winter tires installed on your vehicle. If the maximum speed for which your tires are rated is below the speed rating of your vehicle, you must place a notice to this effect where it will be seen by the driver. Such notices are available from your tire dealer or from any authorized Mercedes-Benz Center.

**Warning!**



If you use your spare tire when winter tires are fitted on the other wheels, be aware that the difference in tire characteristics may very well impair turning stability and that overall driving stability may be reduced.

Adapt your driving style accordingly.

Have the spare tire replaced with a winter tire at the nearest authorized Mercedes-Benz Center.

**Snow chains**

**!** When driving with snow chains, always select the raised level of the level control system Airmatic (▷ page 468) or ABC\* (▷ page 471). Other settings may result in damage to your vehicle.

**!** Even on vehicles with all-wheel-drive, use snow chains on rear tires only.

Some tire sizes do not leave adequate clearance for snow chains. To help avoid serious damage to your vehicle or tires, make sure that the use of snow chains is permissible as specified in the “Technical data” section of this Operator’s Manual, see “Rims and tires” (▷ page 754).

Snow chains should only be driven on snow-covered roads at speeds not to exceed 30 mph (50 km/h). Remove chains as soon as possible when driving on roads without snow.

Please observe the following guidelines when using snow chains:

- Use of snow chains is not permissible with all wheel/tire combinations (▷ page 754).
- Use snow chains in pairs and on rear wheels only. Follow the manufacturer’s mounting instructions.

**!** If snow chains are mounted to the front wheels, they may scrape against the body or axle components. The tires or the vehicle could be damaged as a result.

- Only use snow chains that are approved by Mercedes-Benz. Any authorized Mercedes-Benz Center will be glad to advise you on this subject.
- Use of snow chains may be prohibited depending on location. Always check local and state laws before installing snow chains.
- Do not use snow chains on the spare wheel (▷ page 754).

**i** All models except S 63 AMG: When driving with snow chains, you may wish to switch off the ESP® (▷ page 74) before setting the vehicle in motion. This will improve the vehicle’s traction.

**i** S 63 AMG: Do not switch off the ESP® when driving in snow or with snow chains mounted.

## Operation

### Maintenance

We strongly recommend that you have your vehicle serviced by an authorized Mercedes-Benz Center, in accordance with the Maintenance Booklet at the times called for by the maintenance service indicator.

**!** *Failure to have the vehicle maintained in accordance with the Maintenance Booklet and maintenance service indicator at the designated times/mileage will result in vehicle damage not covered by the Mercedes-Benz Limited Warranty.*

#### Maintenance service indicator message

The maintenance service indicator message will notify you when the next maintenance service is due.

Starting approximately 1 month before the next maintenance service is due, one of the following messages will appear in the multifunction display while you are driving or when you switch on the ignition (example service A):

“Next Service A in XXX miles (km)”

“Next Service A in XX days”

“Service A Due”

The maintenance services will be indicated by showing a service type A through type H in the multifunction display. Types A through H are classified based on estimated time needed to perform the maintenance service, ranging

from “Service A”  
(approximately 1 hour)

to “Service H”  
(approximately 8 hours)




Refer to Maintenance Booklet for a listing of maintenance services and intervals they need to be performed at.

**i** The Maintenance System in your vehicle tracks distance driven and the time elapsed since the last maintenance service and calculates other maintenance service work required.

**i** The maintenance service indicator message is automatically cleared

- after approximately 10 seconds when you switch on the ignition or when reaching the service threshold while driving
- after approximately 30 seconds, once the suggested maintenance service term has passed

You can also clear it yourself.

- ▶ **To clear the maintenance service indicator message:** Press  (▷ page 288).

The maintenance service indicator message is cleared and the standard display appears in the multifunction display (▷ page 291).

### Maintenance service term exceeded

If you have exceeded the suggested maintenance service term, you will see the following message in the multifunction display:

*“Service A Exceeded by XXX miles (km)  
Service A Exceeded by XX days”*






In addition, a signal sounds when the message appears.

Any authorized Mercedes-Benz Center will reset the maintenance service indicator following a completed maintenance service.

### Calling up the maintenance service indicator display

**i** The menu overview can be found on (▷ page 289).

You can call up the maintenance service indicator display at any time to check when the next maintenance service is due.

- ▶ Switch on the ignition (▷ page 370).  
The standard display of the control system appears (▷ page 291).
- ▶ Press  or  on multifunction steering wheel to select “Service” menu.
- ▶ Press  or  to select the maintenance service indicator display.
- ▶ Press .

The service deadline appears in the multifunction display.

## Operation

### Maintenance

**i** *If the battery is disconnected, the days of disconnection will not be included in the count shown by the maintenance service indicator. To arrive at the true maintenance service deadline, you will need to subtract these days from the days shown in the maintenance service indicator message or maintenance service indicator display.*

#### **Resetting the maintenance service indicator**

---

In the event that the maintenance service on your vehicle is not carried out by an authorized Mercedes-Benz Center, you can have the maintenance service indicator reset. The automotive maintenance facility carrying out the maintenance service will find the information for resetting the maintenance service indicator in the maintenance-relevant information for your vehicle. Such information is available from any authorized Mercedes-Benz Center or directly from Mercedes-Benz.

**i** *If the maintenance service indicator was inadvertently reset, have an authorized Mercedes-Benz Center correct it.*

*Only reset if the proper maintenance service has been performed. Resetting the system without performing the proper service as called for by the maintenance service indicator will result in engine damage and/or other vehicle damage not covered by the Mercedes-Benz Limited Warranty.*

## ▼ Vehicle care

### Cleaning and care of vehicle

Regular and proper care will help to maintain the value of your vehicle. The best way to protect your vehicle from harmful environmental influences is to wash it and use protective treatments regularly.

#### Warning!



Many cleaning products can be hazardous. Some are poisonous, others are flammable. Always follow the instructions on the particular container. Always open your vehicle's doors or windows when cleaning the inside.

Never use fluids or solvents that are not designed for cleaning your vehicle.

Always lock away cleaning products and keep them out of reach of children.

While in operation, even while parked, your vehicle is subjected to varying external influences which, if gone unchecked, can attack the paintwork as well as the vehicle underbody and cause lasting damage.

Such damage is caused not only by extreme and varying climatic conditions, but also by:

- Air pollution
- Road salt
- Tar
- Gravel and stone chipping

To avoid paint damage, you should immediately remove:

- Grease and oil
- Fuel
- Coolant
- Brake fluid
- Bird droppings
- Insects
- Tree resins, etc.

Frequent washing reduces and/or eliminates the aggressiveness and potency of the above adverse influences.

More frequent washings are necessary to deal with unfavorable conditions:

- near the ocean
- in industrial areas (smoke, exhaust emissions)
- during winter operation

You should check your vehicle from time to time for stone chipping or other damage. Any damage should be repaired as soon as possible to prevent corrosion.

In doing so, do not neglect the underbody of the vehicle. A prerequisite for a thorough check is a washing of the underbody followed by a thorough inspection. Damaged areas need to be re-undercoated.

Your vehicle has been treated at the factory with a wax-base rustproofing in the body cavities which will last for the lifetime of the vehicle. Post-production treatment is neither necessary nor recommended by Mercedes-Benz because of the possibility



of incompatibility between materials used in the production process and others applied later.

We have selected car-care products and compiled recommendations which are specially matched to our vehicles and which always reflect the latest technology. You can obtain Mercedes-Benz approved car-care products at an authorized Mercedes-Benz Center.

Scratches, corrosive deposits, corrosion or damage due to negligent or incorrect care cannot always be removed or repaired with the car-care products recommended here. In such cases it is best to seek aid at an authorized Mercedes-Benz Center.

The following topics deal with the cleaning and care of your vehicle and give important “how-to” information as well as references to Mercedes-Benz approved car-care products.

#### Power washer

**!** Follow the instructions provided by the power washer manufacturer on maintaining a distance between the vehicle and the nozzle of the power washer.

*Never use a round nozzle to power-wash tires. The intense jet of water can result in damage to the tire.*

*Always replace a damaged tire.*

*Always keep the jet of water moving across the surface. Do not aim directly at electrical parts, electrical connectors, seals, or other rubber parts.*

**i** Vehicles with KEYLESS-GO\*: *If a door handle is hit by a strong jet of water, and a SmartKey with KEYLESS-GO\* is in close proximity, i.e. within approximately 3 ft (approximately 1 m), the vehicle could be inadvertently locked or unlocked.*

#### Tar stains

Quickly remove tar stains before they dry and become more difficult to remove. A tar remover is recommended.

#### Paintwork, painted body components

**!** Affixing stickers, magnets, adhesive tape or similar materials to painted body components may damage the paintwork.

Mercedes-Benz approved Paint Care should be applied when water drops on the paint surface do not “bead up”. This should normally be done every 3 to 5 months, depending on the climate and washing detergent used.

Mercedes-Benz approved Paint Cleaner should be applied if the paint surface shows signs of embedded dirt (i.e. loss of gloss).

Do not apply any of these products or wax if your vehicle is parked in the sun or if the hood is still hot.

- ▶ Use the appropriate MB-Touch-Up Stick for quick and provisional repairs of minor paint damage (i.e. chips from stones, vehicle doors, etc.).

### Engine cleaning

Prior to cleaning the engine compartment, make sure to protect electrical components and connectors from contact with water and cleaning agents.

Corrosion protection, such as MB Anticorrosion Wax, should be applied to the engine compartment after every engine cleaning. Before applying, all control linkage bushings and joints should be lubricated. The poly-V-belt and all pulleys should be protected from any wax.

### Vehicle washing

In the winter, thoroughly remove all traces of road salt as soon as possible.

When washing the vehicle underbody, do not forget to clean the inner sides of the wheels.

**i** *Vehicles with KEYLESS-GO\*:*  
If a door handle is hit by a strong jet of water, and a SmartKey with KEYLESS-GO\* is in close proximity, i.e. within approximately 3 ft (approximately 1 m), the vehicle could be inadvertently locked or unlocked.

### Hand-wash

Do not use hot water or wash your vehicle in direct sunlight.

- ▶ Only use a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo.
- ▶ Thoroughly spray the vehicle with a diffused jet of water.

Direct only a very weak spray towards the ventilation intake.

- ▶ Use plenty of water and rinse the sponge and chamois frequently.
- ▶ Rinse with clean water and thoroughly dry with a chamois.

Do not allow cleaning agents to dry on the finish.

**!** *Do not use scouring agents on these parts. Never apply strong force and only use a soft, non-scratching cloth when cleaning the vehicle. Do not attempt to wipe the surface with a dry cloth or sponge.*

*Otherwise you may scratch or damage the paint.*

### Automatic car wash

You can have your car washed in an automatic car wash from the start. Automatic car washes without brushes are preferable.

- ▶ To protect the filter system, switch the automatic climate control to air recirculation mode (▷ page 506).

**!** *Do not clean your vehicle in an automatic touchless car wash which uses caustic spray. Otherwise the caustic spray will damage the paint or ornamental moldings.*

If the vehicle is very dirty, prewash it before running it through the automatic car wash.

**!** *Make sure that the windshield wiper switch is set to 0 (▷ page 408). Otherwise, e.g. the rain sensor could activate and cause the wipers to move unintentionally. This may lead to vehicle damage.*

*Due to the width of the vehicle, fold in exterior rear view mirrors prior to running the vehicle through an automatic car wash to prevent damage to the mirrors.*

## Operation

### Vehicle care

When taking the vehicle through an automatic conveyor type car wash, observe the following instructions.

#### Warning!



When leaving the SmartKey or SmartKey with KEYLESS-GO\* in the starter switch, do not leave children unattended in the vehicle. It is possible for children to switch on the ignition which could result in unsupervised use of vehicle equipment. Unsupervised use of vehicle equipment could result in an accident and/or serious personal injury.

Vehicles with SmartKey:

- ▶ With the vehicle at a standstill and the ignition switched on shift the automatic transmission to neutral position **N**.
- ▶ If engaged, manually release the electronic parking brake (▷ page 423).
- ▶ Switch off the ignition and leave the SmartKey in the starter switch.

Vehicles with KEYLESS-GO\*:

- ▶ With the vehicle at a standstill, depress the brake pedal and keep it pressed.
- ▶ Shift the automatic transmission to park position **P**.
- ▶ Release the brake pedal.
- ▶ Remove the KEYLESS-GO start/stop button from the starter switch (▷ page 371).
- ▶ Insert the SmartKey with KEYLESS-GO into the starter switch.
- ▶ With the ignition switched on shift the automatic transmission to neutral position **N**.
- ▶ If engaged, manually release the electronic parking brake (▷ page 423).
- ▶ Switch off the ignition and leave the SmartKey with KEYLESS-GO in the starter switch.

**i** After running the vehicle through an automatic car wash, wipe any wax off of the windshield (▷ page 622). This will prevent smears and reduce wiping noise which can be caused by residual wax on the windshield.

When leaving the car wash, make sure that the mirrors are folded out. Otherwise they may vibrate.

#### Ornamental moldings

For regular cleaning and care of ornamental moldings, use a damp cloth.

**!** Do not use chrome cleaner on ornamental moldings. Although ornamental moldings may have chrome appearance, they could be made of anodized aluminum that will be damaged when cleaned with chrome cleaner. Instead, use a damp cloth to clean those ornamental moldings.

For very dirty ornamental moldings of which you are sure are chrome-plated, use a chrome cleaner. If in doubt whether an ornamental molding is chrome-plated, contact an authorized Mercedes-Benz Center.

**Headlamps, tail lamps, side markers, turn signal lenses**

- ▶ Use a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo, with plenty of water.


**!** Only use window cleaning solutions that are suitable for plastic lamp lenses. Window cleaning solutions which are not suitable may damage the plastic lamp lenses of the headlamps. Therefore, do not use abrasives, solvents or cleaners that contain solvents.

Never apply strong force and only use a soft, non-scratching cloth when cleaning the lenses. Do not attempt to wipe dirty lenses with a dry cloth or sponge.

Otherwise you may scratch or damage the lens surface.

**Cleaning the DISTRONIC Plus\* / PRE-SAFE® Brake\* system sensors (USA only)**

The sensors are integrated in the front bumpers and cannot be seen from the outside.

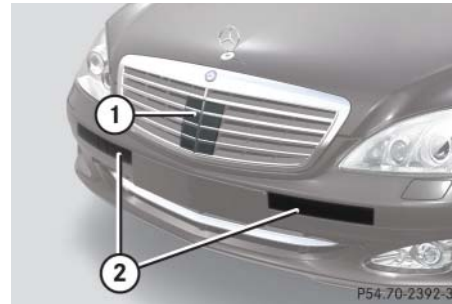


- ① Sensor cover
- ② Bumper area near sensors

- ▶ Switch off the ignition (▷ page 370).
- ▶ Use a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo, with plenty of water and a non-scratching cloth to clean sensor cover ①.

- ▶ Clean a wide area of the bumpers surrounding the sensor ②.

**!** To prevent scratches or damage, never apply strong force and only use a soft, non-scratching cloth when cleaning the sensor cover and/or bumper area near sensors. Do not attempt to wipe dirty sensors and/or bumper with a dry cloth or sponge.

**Cleaning the Parktronic\* system sensors**

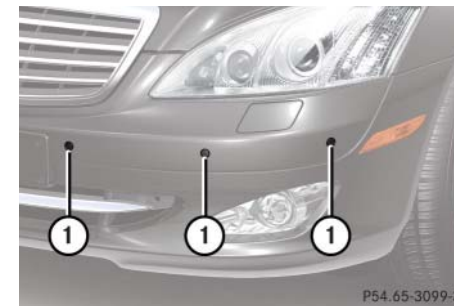

- ① Parktronic system\* sensors in front bumper



## Operation

### Vehicle care

- ▷▷ Use a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo, with plenty of water and a soft, non-scratching cloth to clean sensors ① on the bumpers.

**!** Do not apply strong pressure to the sensor covers. Applying strong pressure may damage the sensor covers.

Follow the instructions provided by the power washer manufacturer on maintaining a distance between the vehicle and the nozzle of the power washer.

**!** To prevent scratches, never apply strong force and only use a soft, non-scratching cloth when cleaning the sensors. Do not attempt to wipe dirty sensors with a dry cloth or sponge.

#### Cleaning the driving systems sensors

The sensors are integrated in the front and rear bumpers and cannot be seen from the outside. They work with the following systems:

- BAS Plus\*
- PRE-SAFE® Brake\*
- Blind Spot Assist\*
- Park Assist\*
- Advanced Parking Guidance\*




① Bumper area near sensors

- ▶ Switch off the ignition (▷ page 370).
- ▶ Use a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo, with plenty of water and a soft, non-scratching cloth to clean the bumper area near sensors.

**!** To prevent scratches or damage to the surface, never apply strong force and only use a soft, non-scratching cloth when cleaning the bumper area near sensors. Do not attempt to wipe a dirty bumper with a dry cloth or sponge.

**Cleaning the Rear View Camera\* lens**

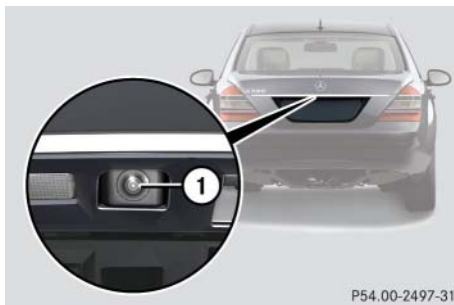

① Camera lens

- ▶ Only use clean water and a soft, non-scratching cloth to clean the camera lens ①.

Be careful not to apply wax to the camera lens ① when waxing the vehicle. If necessary, remove the wax using the Mercedes-Benz approved Car Shampoo with plenty of water.

**!** Do not clean the camera and the area around the camera:

- with a high-pressure cleaner
- with a dry cloth and high pressure
- with aggressive cleaning agents

You could otherwise damage the camera.

**Cleaning the windshield in front of the Night View Assist camera\***

**Warning!**



Please do not forget that your primary responsibility is to drive the vehicle. A driver's attention to the road must always be his/her primary focus when driving. For your safety and the safety of others, stop before trying to remove window fogging or cleaning the window in front of the Night View Assist camera.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

**!** Do not clean the lens of the Night View Assist camera. If the camera lens is dirty, please contact a qualified specialist workshop such as a Mercedes-Benz Center.




① Recessed handles of camera cover

- ▶ Use recessed handles ① to swing camera cover downward.



## Operation

### Vehicle care

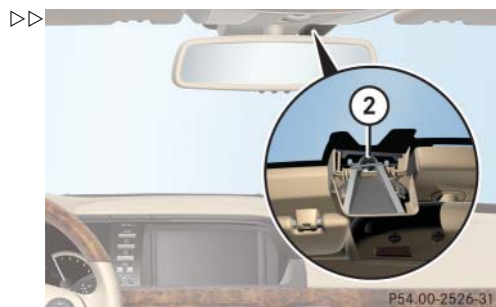

#### ② Camera

- ▶ Clean inside of windshield in front of camera ② with a soft, non-scratching cloth.

**!** *If you use a windshield cleaning product, make sure that none of the cleaning product comes into contact with the lens of the Night View Assist camera.*

- ▶ Use recessed handles ① to swing camera cover up.

#### Cleaning the windows and the wiper blades

**!** *The windshield wipers must be in a vertical position before folding them away from the windshield. They could otherwise damage the hood.*

*Never open the hood when the wiper arms are folded forward.*

- ▶ Make sure the hood is fully closed.

#### Placing wiper arms in vertical position

Vehicles with SmartKey:

- ▶ Turn SmartKey in starter switch position **1**.
- ▶ Turn combination switch to wiper setting **—** (▷ page 408).
- ▶ With wiper arm in vertical position, turn the SmartKey in starter switch to position **0**.

Vehicles with KEYLESS-GO\*:

- ▶ Make sure the vehicle's on-board electronics have status **1** (▷ page 372).
- ▶ Turn combination switch to wiper setting **—** (▷ page 408).
- ▶ Press KEYLESS-GO start/stop button repeatedly until windshield wipers start.
- ▶ Press KEYLESS-GO start/stop button when the wiper arms are in a vertical position.

**Cleaning****Warning!**

For safety reasons, switch off wipers and remove SmartKey from starter switch (vehicles with KEYLESS-GO\*: Make sure the vehicle's on-board electronics have status **0**) before cleaning the windshield and/or the wiper blades. Otherwise, the wiper motor could suddenly turn on and cause injury.

- ▶ Fold the wiper arms forward until they snap into place.
- ▶ **!** Do not pull on the wiper blade inserts. They could tear.
- ▶ Clean the wiper blade inserts with a clean cloth and detergent solution.
- ▶ Use a soft, clean cloth and a mild window cleaning solution on all outside and inside glass surfaces.

An automotive glass cleaner is recommended.

**!** Fold the windshield wiper arms back onto the windshield before turning the SmartKey in the starter switch or pressing the KEYLESS-GO\* start/stop button (vehicles with KEYLESS-GO\*).

Hold on to the wiper when folding the wiper arm back. If released, the force of the impact from the tensioning spring could crack the windshield.

**!** To clean the window interior, do not use a dry cloth, abrasives, solvents or cleaners containing solvents. Do not touch the inside of the front, rear or door windows with hard objects such as an ice scraper or ring. Doing so may damage the windows.

**Cleaning the panorama roof with tilt/sliding panel\***

The rear part of the tilt/sliding panel has a protective layer on the inside.

- ▶ Use a soft, clean cloth and a mild window cleaning solution.
- ▶ An automotive glass cleaner is recommended.

**!** Do not use a dry cloth, abrasives, solvents or cleaners containing solvents. Do not touch the protective layer with hard objects such as an ice scraper or ring. Never apply strong force and only use a soft, non-scratching cloth when cleaning the rear part of the tilt/sliding panel.

Otherwise you may scratch or damage the protective layer.

**Light alloy wheels**

If possible, clean wheels once a week.

- ▶ Use Mercedes-Benz approved Wheel Care, a soft bristle brush and a strong spray of water for cleaning the light alloy wheels.

**!** Only use acid-free cleaning materials. Acid may cause corrosion or damage the clear coat.

**!** The vehicle should not be parked for an extended period of time immediately after it has been cleaned, especially not after the wheel rims have been cleaned with wheel rim cleaner. Wheel rim cleaners can lead to increased corrosion of the brake disks and brake pads. Non-approved wheel cleaners may also damage the wheel paint if the car is not driven after cleaning.



## Operation

### Vehicle care

Therefore, the vehicle's brake system should always be warmed-up before it is parked after cleaning. To do so, please drive your vehicle for several minutes to allow the brakes to dry. When applying Mercedes-Benz approved Tire Care and Mercedes-Benz approved Wheel Care products, take care not to spray them on the brake disks.

#### Plastic and rubber parts

- ▶ Use a gentle dishwashing detergent or mild detergent for delicate fabrics as a washing solution.
- ▶ Wipe with a cloth moistened in a lukewarm solution.

The surface may temporarily change color. If this is the case, wait for it to dry.

#### Warning!



Do not use cleaners or cockpit care sprays containing solvents to clean the cockpit or the steering wheel. Cleaners containing solvents will make the surface porous and vehicle occupants could suffer serious injuries

from plastic parts coming loose in the event of air bag deployment.

**!** Do not use oil, wax or scouring agents on these parts.

Never apply strong force and only use a soft, non-scratching cloth when cleaning the surface. Do not attempt to wipe the surface with a dry cloth or sponge.

Otherwise you may scratch or damage the surface.

#### Hard plastic trim items

- ▶ Use Mercedes-Benz approved Interior Care, a soft, lint-free cloth and apply with light pressure.

**!** Never apply strong force and only use a soft, non-scratching cloth when cleaning the surface. Do not attempt to wipe the surface with a dry cloth or sponge.

Otherwise you may scratch or damage the surface.

#### Steering wheel

- ▶ Wipe with a damp cloth and dry thoroughly or clean with Mercedes-Benz approved Leather Care.

#### Carpets

- ▶ Use Mercedes-Benz approved Carpet and Fabric Care for cleaning the carpets.

#### Headliner and shelf below rear window

- ▶ Use a soft bristle brush or a dry-shampoo cleaner in case of excessive dirt.

#### Seat belts

- ▶ Only use clear, lukewarm water and soap.

**!** The webbing must not be treated with chemical cleaning agents. Do not dry the webbing at temperatures above 176°F (80°C) or in direct sunlight.

**Warning!**

Do not bleach or dye seat belts as this may severely weaken them. In a crash they may not be able to provide adequate protection.

**Upholstery**

Using aftermarket seat covers or wearing clothing that have the tendency to give off coloring (e.g. when wet, etc.) may cause the upholstery to become permanently discolored. By lining the seats with a proper intermediate cover, contact-discoloration will be prevented.

**Warning!**

Only use seat or head restraint covers which have been tested and approved by Mercedes-Benz for your vehicle model. Using other seat or head restraint covers may interfere with or prevent the activation of the active head restraints.

Contact an authorized Mercedes-Benz Center for availability.

**Leather upholstery**

- ▶ Wipe leather upholstery with a damp cloth and dry thoroughly or clean with Mercedes-Benz approved Leather Care.

Exercise particular care when cleaning perforated leather as its underside should not become wet.

**Wood trims**

- ▶ Dampen cloth using water and use damp cloth to clean wood trims in your vehicle.

**!** Do not use solvents like tar remover or wheel cleaner nor polishes or waxes as these may be abrasive.

**Chrome-plated exhaust tip\***

Regular cleaning and care of chrome-plated exhaust tips will help to maintain their shine and the classy appearance.

- ▶ Use Mercedes-Benz approved Chrome Polishing Paste each time the vehicle has been washed, especially during the winter.

**!** Do not use alkaline cleaners such as wheel cleaners as they could cause corrosion.



## Practical hints

What to do if ...?

Where will I find ...?

Unlocking/locking in an emergency

Resetting activated head restraints

Replacing SmartKey batteries

Replacing bulbs

Replacing wiper blades

Flat tire

Batteries

Jump starting

Towing the vehicle

Fuses




## Practical hints

### What to do if ...?

#### Lamps in instrument cluster





General information:

If any of the following lamps in the instrument cluster fails to come on during the bulb self-check when switching on the ignition, have the respective bulb checked and replaced if necessary.

Problem	Possible cause/consequence	Suggested solution
 The yellow Antilock Brake System (ABS) indicator lamp comes on while the engine is running.	<p>The ABS has detected a malfunction and has switched off. The BAS, ESP<sup>®</sup>, EBP and PRE-SAFE<sup>®</sup> are also switched off (see messages in multifunction display).</p> <p>The brake system is still functioning normally but without the ABS available.</p> <p>If the ABS control unit is malfunctioning, other systems such as Parktronic*, DISTRONIC Plus*, navigation system, Park Assist* and the automatic transmission may also be malfunctioning.</p>	<ul style="list-style-type: none"><li>▶ Continue driving with added caution. Wheels may lock during hard braking, reducing steering capability.</li><li>▶ Read and observe messages in the multifunction display (▷ page 642).</li><li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li></ul> <p>Failure to follow these instructions increases the risk of an accident.</p>





## Practical hints

### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
 <p>The yellow Antilock Brake System (ABS) indicator lamp comes on while the engine is running.</p>	<p>The charging voltage has fallen below 10 volts. The ABS has switched off.</p> <p>The battery may not be charged sufficiently.</p>	<p>When the voltage is above this value again, the ABS is operational again and the ABS indicator lamp should go out.</p> <p>If the ABS indicator lamp does not go out:</p> <ul style="list-style-type: none"> <li>▶ Have the generator (alternator) and the battery checked.</li> </ul> <p>When the voltage is above this value again, the ABS is operational again.</p>
<p><b>BRAKE</b> (USA only)</p>  <p>(Canada only)</p>   <p>The red brake warning lamp comes on while the engine is running. In addition, the yellow ABS malfunction indicator lamp, and the yellow ESP<sup>®</sup> warning lamp come on and an acoustic warning sounds.</p>	<p>A malfunction in the Electronic Brake Proportioning (EBP) was detected. The ABS, BAS, ESP<sup>®</sup> and PRE-SAFE<sup>®</sup> are also switched off (see messages in multifunction display).</p> <p>The brake system continues to function normally, but without electronic support.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution. Wheels may lock during hard braking, reducing steering capability.</li> <li>▶ Read and observe messages in the multifunction display (▷ page 642).</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of an accident.</p>

## Practical hints

### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
  The yellow ABS malfunction indicator lamp and the yellow ESP <sup>®</sup> warning lamp come on while the engine is running and an acoustic warning sounds.	ABS and ESP <sup>®</sup> are switched off due to a malfunction. The BAS, EBP and PRE-SAFE <sup>®</sup> are also switched off. The brake system is still functioning normally but without the ABS available.	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution. Wheels may lock during hard braking, reducing steering capability.</li> <li>▶ Read and observe messages in the multifunction display (▷ page 642).</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul> Failure to follow these instructions increases the risk of an accident.
 (USA only)  (Canada only) The red indicator lamp for the electronic parking brake flashes and/or the yellow warning lamp for the electronic parking brake is on.	The electronic parking brake is malfunctioning or defective.	<ul style="list-style-type: none"> <li>▶ Read and observe messages in the multifunction display (▷ page 642).</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul>

## Practical hints

### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
<b>⚠</b> The red brake warning lamp comes on while the engine is running and an acoustic warning sounds. <b>ⓘ</b> (USA only) <b>ⓘ</b> (Canada only)	There is insufficient brake fluid in the reservoir.	Risk of accident! <ul style="list-style-type: none"><li>▶ Carefully stop the vehicle in a safe location or as soon as it is safe to do so.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Contact an authorized Mercedes-Benz Center.</li><li>▶ Do not add brake fluid! This will not solve the problem.</li></ul>

### Warning!




Driving with the brake warning lamp illuminated can result in an accident. Have your brake system checked immediately if the brake warning lamp stays on. Do not add brake fluid before checking the brake system. Overfilling the brake fluid reservoir can result in spilling brake fluid on hot engine parts and the brake fluid catching fire. You can be seriously burned.

**!** *If you find that the brake fluid in the brake fluid reservoir has fallen to the minimum mark or below, have the brake system checked for brake pad thickness and leaks.*



## Practical hints


### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
 <p>The yellow engine malfunction indicator lamp comes on while driving.</p>	<p>There is a malfunction in:</p> <ul style="list-style-type: none"><li>• The fuel management system</li><li>• The ignition system</li><li>• The emission control system</li><li>• Systems which affect emissions</li></ul> <p>Such malfunctions may result in excessive emissions values and may switch the engine to Limp-Home Mode (emergency operation).</p>	<p>► Have the vehicle checked as soon as possible by an authorized Mercedes-Benz Center. An on-board diagnostic connector is used by the service station to link the vehicle to the shop diagnostics system. It allows the accurate identification of system malfunctions through the read-out of diagnostic trouble codes. It is located in the front left area of the footwell.</p>

**i** Some states may by law require you to visit a workshop as soon as the engine malfunction indicator lamp comes on. Check local requirements.




## Practical hints



### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
 The yellow engine malfunction indicator lamp comes on while driving.	A loss of pressure has been detected in the fuel system. The fuel cap may not be closed properly or the fuel system may be leaky.	<ul style="list-style-type: none"><li>▶ Check the fuel cap.</li></ul> If it is not closed properly: <ul style="list-style-type: none"><li>▶ Close the fuel cap.</li></ul> If it is closed properly: <ul style="list-style-type: none"><li>▶ Have the fuel system checked by an authorized Mercedes-Benz Center.</li></ul>
	Your fuel tank is empty.	<ul style="list-style-type: none"><li>▶ After refueling, start, turn off, and restart the engine three or four times in succession.</li></ul> The Limp-Home Mode is canceled. You do not need to have your vehicle checked.

## Practical hints




### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
 PRE-SAFE® Brake*: The red distance warning lamp comes on while driving.	You are too close to the vehicle in front of you to maintain selected speed.	<ul style="list-style-type: none"> <li>▶ Apply the brakes immediately to increase the following distance.</li> </ul>
 DISTRONIC Plus* or PRE-SAFE® Brake*: The red distance warning lamp comes on while driving and an acoustic warning sounds.	You are gaining too rapidly on the vehicle ahead of you.	<ul style="list-style-type: none"> <li>▶ Apply the brakes immediately.</li> </ul>
	DISTRONIC Plus* or PRE-SAFE® Brake* has recognized a stationary obstacle on your probable line of travel.	<ul style="list-style-type: none"> <li>▶ Apply the brakes immediately.</li> <li>▶ Carefully observe the traffic situation. You may need to brake or maneuver to avoid hitting an obstacle.</li> </ul>
 The yellow ESP® warning lamp flashes while driving.	<p>The ESP® or electronic traction system has come into operation because of detected traction loss in at least one tire.</p> <p>Cruise control and DISTRONIC Plus* are deactivated.</p>	<ul style="list-style-type: none"> <li>▶ When driving off, apply as little throttle as possible.</li> <li>▶ While driving, ease up on the accelerator.</li> <li>▶ Adapt your speed and driving to the prevailing road and weather conditions.</li> <li>▶ Do not deactivate the ESP®. Exceptions: (▷ page 74).</li> </ul> <p>Failure to follow these instructions increases the risk of an accident.</p>

Problem	Possible cause/consequence	Suggested solution
 The yellow ESP® warning lamp comes on while the engine is running.	<p>The ESP® is deactivated. Risk of accident!</p> <p>Adapt your speed and driving to the prevailing road, weather, and traffic conditions.</p> <hr/> <p>ESP® is switched off due to a malfunction. Risk of accident!</p> <p>Adapt your speed and driving to the prevailing road, weather, and traffic conditions.</p>	<ul style="list-style-type: none"> <li>▶ Switch the ESP® back on (▷ page 76). Exceptions: (▷ page 74).</li> </ul> <p>If the ESP® cannot be switched back on:</p> <ul style="list-style-type: none"> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <hr/> <ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Read and observe messages in the multifunction display (▷ page 642).</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul>
 The red seat belt telltale comes on for a maximum of 6 seconds after starting the engine.	<p>The seat belt telltale reminds you and your passengers to fasten your seat belts before driving off.</p>	<ul style="list-style-type: none"> <li>▶ Fasten your seat belts.</li> </ul> <p>Regardless of whether the seat belts are fastened or not, the seat belt telltale always comes on and remains lit for 6 seconds after starting the engine.</p>

## Practical hints

### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
 You hear a warning chime for a maximum of 6 seconds after starting the engine.	You have forgotten to fasten your seat belt.	<ul style="list-style-type: none"> <li>▶ Fasten your seat belt.</li> </ul> <p>The warning chime stops sounding.</p>
 The red seat belt telltale comes on while the vehicle is standing still and the engine is running or during driving.	You and/or your front passenger have forgotten to fasten your seat belts.	<ul style="list-style-type: none"> <li>▶ Fasten your seat belts.</li> </ul> <p>The seat belt telltale goes out.</p>
	There are items placed on the front passenger seat and therefore the system senses the front passenger seat as being occupied.	<ul style="list-style-type: none"> <li>▶ Remove the items from the front passenger seat and put them in a safe place.</li> </ul> <p>The seat belt telltale goes out.</p>
 During driving the red seat belt telltale flashes and you additionally hear an intermittent warning chime with increasing intensity.	The vehicle's speed once exceeded 15 mph (25 km/h) and you and/or your front passenger have forgotten to fasten your seat belts.	<ul style="list-style-type: none"> <li>▶ Fasten your seat belts.</li> </ul> <p>The seat belt telltale goes out and the warning chime stops sounding.</p>
	There are items placed on the front passenger seat and therefore the system senses the front passenger seat as being occupied.	<ul style="list-style-type: none"> <li>▶ Remove the items from the front passenger seat and put them in a safe place.</li> </ul> <p>The seat belt telltale goes out and the warning chime stops sounding.</p>


**i** After 60 seconds with an unfastened seat belt the warning chime stops sounding and the seat belt telltale illuminates continuously.

*The seat belt telltale will only go out if both, the driver and front passenger's seat belt are*

*fastened, or the vehicle is standing still and a front door is opened.*

## Practical hints

### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
 The red SRS indicator lamp comes on while the engine is running.	There is a malfunction in the supplemental restraint systems. The air bags or emergency tensioning devices (ETDs) could deploy unexpectedly or fail to activate in an accident.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.



### Warning!



In the event that a malfunction of the SRS is indicated as outlined above, the SRS may not be operational. For your safety, we strongly recommend that you contact an authorized Mercedes-Benz Center immediately to have the system checked; otherwise the SRS may not be deployed when needed in an accident, which could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could result in an accident and/or injury to you or to others.

## Practical hints

### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
 <p>USA only: Combination low tire pressure/TPMS malfunction telltale for the Advanced TPMS illuminates continuously.</p> <p>Canada only: Low tire pressure telltale for the Advanced TPMS illuminates continuously.</p>	<p>The Advanced TPMS detects a loss of pressure in at least one tire.</p>	<ul style="list-style-type: none"> <li>▶ Carefully bring the vehicle to a halt, avoiding abrupt steering and braking maneuvers. Observe the traffic situation around you.</li> <li>▶ Read and observe messages in the multifunction display (▷ page 642).</li> </ul> <p>If the tire inflation pressure in the respective tire(s) has (have) been corrected, the combination low tire pressure/TPMS malfunction telltale goes out after a few minutes of driving.</p>
 <p>USA only: Combination low tire pressure/TPMS malfunction telltale for the Advanced TPMS flashes for 60 seconds and then stays illuminated.</p>	<p>There is a malfunction in the Advanced TPMS.</p>	<ul style="list-style-type: none"> <li>▶ Read and observe messages in the multifunction display (▷ page 642).</li> <li>▶ Have the Advanced TPMS checked by an authorized Mercedes-Benz Center.</li> </ul> <p>After the malfunction has been remedied the combination low tire pressure/TPMS malfunction telltale goes out after a few minutes of driving.</p>

## Practical hints

### What to do if ...?

#### Warning!



Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or the tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or the tire inflation pressure label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure.

Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

USA only:

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.


TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.



## Practical hints


### What to do if ...?

#### Air bag off indicator lamp

Problem	Possible cause/consequence	Suggested solution
<p><b>PASS AIR BAG OFF</b> </p> <p>The front passenger front air bag off indicator lamp illuminates and remains illuminated with the weight of a typical adult or someone larger than a small individual on the front passenger seat.</p>	<p>The system is malfunctioning.</p>	<ul style="list-style-type: none"><li>▶ Have the system checked as soon as possible by an authorized Mercedes-Benz Center.</li><li>▶ Also read and observe any messages in the multifunction display and follow corrective steps (▷ page 642).</li></ul>

 

#### Warning!



If the  **PASS AIR BAG OFF** indicator lamp illuminates and remains illuminated with the weight of a typical adult or someone larger than a small individual on the front passenger seat, do not have any passenger use the front passenger seat until the system has been repaired.



## Practical hints

### What to do if ...?

Problem	Possible cause/consequence	Suggested solution
<p> </p> <p>The front passenger front air bag off indicator lamp does not illuminate and/or does not remain illuminated with the weight of a typical 12-month-old child in a standard child restraint or less on the front passenger seat.</p>	<p>The system is malfunctioning.</p>	<ul style="list-style-type: none"><li>▶ Make sure there is nothing between seat cushion and child seat and check installation of the child seat.</li><li>▶ Make sure no objects applying supplemental weight onto the seat are present.</li><li>▶ Make sure no objects which apply forces to the seat are present (e.g. objects such as books, briefcases etc. lodged behind or around the seat, head restraints pushing against roof etc.). The system may recognize such forces as supplemental weight.</li><li>▶ If the front passenger front air bag off indicator lamp remains out, have the system checked as soon as possible by an authorized Mercedes-Benz Center. Do not transport a child on the front passenger seat until the system has been repaired.</li><li>▶ Also read and observe any messages in the multifunction display and follow corrective steps (&gt; page 642).</li></ul>

### Warning!



If the   indicator lamp does not illuminate or remains out with the weight of a typical 12-month-old child in a standard child restraint or less on the front

passenger seat, do not transport a child on the front passenger seat until the system has been repaired.

## Practical hints

### What to do if ...?

#### Vehicle status messages in the multifunction display

Warning and malfunction messages appear in the multifunction display located in the instrument cluster.

Certain warning and malfunction messages are accompanied by an audible signal.

High-priority messages are shown in red on the multifunction display. Messages of lower priority are also shown in yellow or white.

Address these messages accordingly and follow the additional instructions given in this Operator's Manual.

Certain messages of high priority cannot be cleared from the multifunction display using **OK** or **←** on the multifunction steering wheel (▷ page 288).

Other messages of high priority and messages of less immediate priority can be cleared from the multifunction display using **OK** or **←**. They are then stored in the vehicle status message memory (▷ page 304). Remember that clearing a message will only make the message disappear. Clearing a message will not correct the condition that caused the message to appear.

#### Warning!



No messages will be displayed if either the instrument cluster or the multifunction display is inoperative.

As a result, you will not be able to see information about your driving conditions, such as speed or outside temperature, warning/indicator lamps, malfunction/warning messages or the failure of any systems. Driving characteristics may be impaired.

If you must continue to drive, please do so with added caution. Contact an authorized Mercedes-Benz Center as soon as possible.

#### Warning!



All categories of messages contain important information which should be taken note of and, where a malfunction is indicated, addressed as soon as possible at an authorized Mercedes-Benz Center.

Failure to repair condition noted may cause damage not covered by the Mercedes-Benz Limited Warranty, or result in property damage or personal injury.

**i** *Switching on the ignition causes all instrument cluster lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) as well as the multifunction display to come on. Make sure the lamps and multifunction display are in working order before starting your journey.*

On the pages that follow, you will find a compilation of the most important warning and malfunction messages that may appear in the malfunction display.

For your convenience the messages are divided into two sections:

- Text messages (> page 644)
- Symbol messages (> page 660)

## Practical hints

### What to do if ...?

#### Text messages

Display	Possible cause/consequence	Possible solution
<i>Apply Brake to Shift from 'P'</i>	You have tried to shift the automatic transmission to drive position <b>D</b> , reverse gear <b>R</b> or neutral position <b>N</b> without stepping on the brake.	▶ Step on brake.
<i>Check Child Seat Position See Oper. Manual (Canada only)</i>	The child seat is not positioned correctly.	▶ Fasten the seat in the correct position.
	The sensor for the child seat is malfunctioning.	▶ Have the sensor for child seat detection checked at an authorized Mercedes-Benz Center.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Cruise Control</i> --- mph (USA only)	You have tried to switch on cruise control below a speed of 20 mph (30 km/h).	▶ Drive faster than 20 mph (30 km/h) and save the speed.
<i>Cruise Control</i> --- kmh (Canada only)	ESP® is switched off.	▶ Switch on ESP® (▷ page 76).
	The automatic transmission is in park position <b>P</b> , reverse gear <b>R</b> or neutral position <b>N</b> .	▶ Shift the automatic transmission to drive position <b>D</b> (▷ page 426).
	The system is overheated.	▶ Wait until the system cools down.
	The vehicle is secured in place by the electronic parking brake.	▶ Release electronic parking brake (▷ page 422).
<i>Cruise Control Inoperative</i>	Cruise control is malfunctioning.	▶ Have cruise control checked by an authorized Mercedes-Benz Center.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<b>DISTRONIC PLUS</b> <i>Currently Unavailable</i> <i>See Oper. Manual</i>	DISTRONIC Plus* is switched off and is temporarily unavailable.  DISTRONIC Plus* is deactivated if: <ul style="list-style-type: none"> <li>the DISTRONIC Plus* cover in the radiator grille is dirty</li> <li>the radar sensors* do not sense any other vehicles or objects, i.e. road sign or similar to this, for a long time</li> <li>the system is overheated</li> <li>its function is impaired as a result of heavy precipitation or fog</li> <li>the battery voltage is insufficient</li> </ul>	<ul style="list-style-type: none"> <li>▶ Clean the DISTRONIC Plus* cover in the radiator grille (&gt; page 619).</li> <li>▶ Restart the vehicle.</li> <li>▶ Try activating DISTRONIC Plus* again later.</li> <li>▶ Wait until the system cools down or the battery recovers.</li> </ul> DISTRONIC Plus* will be operational again without you needing to restart the engine if: <ul style="list-style-type: none"> <li>the dirt (e.g. slush) loosens while you are driving</li> <li>the system detects that the radar sensors* are fully available again</li> <li>the message in the multifunction display disappears</li> </ul>
	DISTRONIC Plus* is switched off because the radar sensor system* is temporarily inoperative due to electromagnetic interference near television and radio transmitter stations, toll stations, speed measuring systems, etc.	<ul style="list-style-type: none"> <li>▶ Wait until the message in the multifunction display disappears.</li> </ul>
<b>DISTRONIC PLUS</b> <i>Inoperative</i>	DISTRONIC Plus* is malfunctioning. BAS Plus* and PRE-SAFE® Brake* are also not available.	<ul style="list-style-type: none"> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul>

## Practical hints

### What to do if ...?


Display	Possible cause/consequence	Possible solution
<i>DISTRONIC PLUS</i> <i>Override</i>	You have depressed the accelerator pedal, DISTRONIC Plus* is no longer controlling the speed of the vehicle.	▶ Release the accelerator pedal.
<i>DISTRONIC PLUS</i> --- mph (USA only) Canada only: <i>DISTRONIC PLUS</i> --- kmh (Canada only)	You have attempted to activate DISTRONIC Plus* at a speed below 20 mph (30 km/h) without the vehicle in front being displayed in the multifunction display (▷ page 454).	▶ Drive faster than 20 mph (30 km/h) and activate DISTRONIC Plus* again.
	ESP® is switched off.	▶ Switch on ESP® (▷ page 76).
	The automatic transmission is in park position <b>P</b> , reverse gear <b>R</b> or neutral position <b>N</b> .	▶ Shift the automatic transmission to drive position <b>D</b> (▷ page 426).
	The system is overheated.	▶ Wait until the system cools down.
	The vehicle is secured in place by the electronic parking brake.	▶ Release electronic parking brake (▷ page 422).
	The driver's door is open and the driver's seat belt is unbuckled.	▶ Close the driver's door and fasten your seat belt.
	The hood is open.	▶ Close the hood (▷ page 574).



## Practical hints



### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Door Open</i> <i>Vehicle Not in Park</i>	You have opened the driver's door and the automatic transmission is still in drive position <b>D</b> , reverse gear <b>R</b> or neutral position <b>N</b> .	► Before you leave the vehicle, make sure that the automatic transmission is shift to park position <b>P</b> (▷ page 426) and that the electronic parking brake is engaged (▷ page 422).

Display	Possible cause/consequence	Possible solution
<p><i>Front Passenger Airbag Disabled</i> See Oper. Manual</p>	<p>Front passenger front air bag is deactivated while driving even though an adult or someone larger than a small individual is occupying the front passenger seat. Forces acting on the seat may make the system sense a decrease in weight.</p>	<p>Stop the vehicle in a safe location as soon as possible and check the front passenger seat for the following:</p> <ul style="list-style-type: none"> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Switch off the ignition (▷ page 370).</li> <li>▶ Have the front passenger vacate the seat and exit the vehicle.</li> <li>▶ Adjust the seat in a height position (▷ page 373).</li> <li>▶ Make sure that no objects which apply forces to the seat are present (e.g. objects such as books, briefcases etc. lodged underneath, behind or around the seat). Such forces may cause the system to sense that an occupant of a lesser weight than actually present is on the front passenger seat.</li> <li>▶ Keep the seat unoccupied, close the front passenger door and switch on the ignition (▷ page 370).</li> </ul> <p>Monitor the  <b>PASS AIR BAG OFF</b> indicator lamp right of the instrument cluster (▷ page 51) and the multifunction display in the instrument cluster (▷ page 287) for the following:</p> <p>(Continued on next page)</p>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<p>Front Passenger Airbag Disabled See Oper. Manual</p>		<p>With the seat unoccupied and the ignition switched on (▷ page 370),</p> <ul style="list-style-type: none"> <li>the  <b>PASS AIR BAG OFF</b> indicator lamp right of the instrument cluster should illuminate and remain illuminated, indicating that the OCS (▷ page 47) has deactivated the air bag.</li> <li>the message “Front Passenger Airbag Enabled See Oper. Manual” or the message “Front Passenger Airbag Disabled See Oper. Manual” should not appear in the multifunction display at any time the seat is unoccupied. Wait at least 60 seconds for the system to complete the necessary check cycles and to make sure neither message appears in the multifunction display.</li> </ul> <p>If above conditions are met, you can occupy the front passenger seat again. Depending on the front passenger classification sensed by the OCS (▷ page 47), the  <b>PASS AIR BAG OFF</b> indicator lamp will remain illuminated or go out.</p> <p>If above conditions are not met, the system is not working properly. Have the system checked as soon as possible by an authorized Mercedes-Benz Center.</p>

#### Warning!




If the  **PASS AIR BAG OFF** indicator lamp remains illuminated with an adult occupant on the front passenger seat even after

performing the above corrective steps, do not have any passenger use the front passenger seat until the system has been repaired.


 
## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<p><i>Front Passenger Airbag Enabled</i> See Oper. Manual</p>	<p>Front passenger front air bag is activated while driving even though a child, small individual, or object below the system's weight threshold is on the front passenger seat, or the front passenger seat is empty. Objects on the seat or forces acting on the seat may make the system sense supplemental weight.</p>	<p>Stop the vehicle in a safe location as soon as possible and check the front passenger seat for the following:</p> <ul style="list-style-type: none"> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Switch off the ignition (▷ page 370).</li> <li>▶ Remove child and child restraint from front passenger seat and properly secure the child in rear seat employing the child restraint if necessary.</li> <li>▶ Remove any other items from on and around the front passenger seat and make sure the storage bag on the back of the front passenger seat is empty.</li> <li>▶ Make sure that no objects which apply forces to the seat are present (e.g. objects such as books, briefcases etc. lodged behind or around the seat, head restraints pushing against roof etc.). The system may recognize such forces as supplemental weight and sense that an occupant on the front passenger seat is of a greater weight than actually present.</li> <li>▶ Keep the seat unoccupied, close the front passenger door and switch on the ignition (▷ page 370).</li> </ul> <p>Monitor the  <b>PASS AIR BAG OFF</b> indicator lamp right of the instrument cluster (▷ page 51) and the multifunction display in the instrument cluster (▷ page 287) for the following:</p> <p>(Continued on next page)</p>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<p>Front Passenger Airbag Enabled See Oper. Manual</p>		<p>With the seat unoccupied and the ignition switched on (▷ page 370),</p> <ul style="list-style-type: none"> <li>the  <b>PASS AIR BAG OFF</b> indicator lamp right of the instrument cluster should illuminate and remain illuminated, indicating that the OCS (▷ page 47) has deactivated the air bag.</li> <li>the message “Front Passenger Airbag Enabled See Oper. Manual” or the message “Front Passenger Airbag Disabled See Oper. Manual” should not appear in the multifunction display at any time the seat is unoccupied. Wait at least 60 seconds for the system to complete the necessary check cycles and to make sure neither message appears in the multifunction display.</li> </ul> <p>If above conditions are met, you can occupy the front passenger seat again. Depending on the front passenger classification sensed by the OCS (▷ page 47), the  <b>PASS AIR BAG OFF</b> indicator lamp will remain illuminated or go out.</p> <p>If above conditions are not met, the system is not working properly. Have the system checked as soon as possible by an authorized Mercedes-Benz Center.</p>

#### Warning!



If the  **PASS AIR BAG OFF** indicator lamp remains illuminated with an adult occupant on the front passenger seat even after

performing the above corrective steps, do not have any passenger use the front passenger seat until the system has been repaired.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Next Service X Due in ... days Due in ... mls (km)</i>	Service X must be carried out in ... days or after ... miles (kilometers) (▷ page 612).	▶ Have the maintenance service carried out by an authorized Mercedes-Benz Center.
<i>Only Shift to Position 'P' When Vehicle Is Stationary</i>	You have tried to shift the automatic transmission to park position <b>P</b> using the gear selector lever although the vehicle is still in motion.	▶ Stop your vehicle as soon as it is safe to do so. ▶ Shift the automatic transmission to park position <b>P</b> . ▶ Engage the electronic parking brake (▷ page 422).
<i>Park Assist Currently Unavailable See Oper. Manual</i>	Park Assist* is deactivated because the area around the sensors* in the front or the rear bumper (▷ page 620) is dirty.	▶ Clean the front and rear bumper (▷ page 620).
	Park Assist* is deactivated because the battery voltage is insufficient.	▶ Have the battery checked by an authorized Mercedes-Benz Center.
	Park Assist* is switched off because the radar sensor system* is temporarily inoperative due to electromagnetic interference near television and radio transmitter stations, toll stations, speed measuring systems, etc.	▶ Wait until the message in the multifunction display disappears.
<i>Park Assist Inoperative</i>	Park Assist* is unavailable due to a malfunction.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Blind Spot Assist Currently Unavailable See Oper. Manual</i>	Blind Spot Assist* is deactivated because the area around the sensors* in the front or the rear bumper (▷ page 620) is dirty.	▶ Clean the front and rear bumper (▷ page 620).
	Blind Spot Assist* is deactivated because the battery voltage is insufficient.	▶ Have the battery checked by an authorized Mercedes-Benz Center.
	Blind Spot Assist* is switched off because the radar sensor system* is temporarily inoperative due to electromagnetic interference near television and radio transmitter stations, toll stations, speed measuring systems, etc.	▶ Wait until the message in the multifunction display disappears.
<i>Blind Spot Assist Inoperative</i>	Blind Spot Assist* is unavailable due to a malfunction.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Parking Guidance Currently Unavailable See Oper. Manual</i>	Advanced Parking Guidance* is deactivated because the area around the sensors* in the front or the rear bumper (▷ page 620) is dirty.	▶ Clean the front and rear bumper (▷ page 620).
	Advanced Parking Guidance* is deactivated because the battery voltage is insufficient.	▶ Have the battery checked by an authorized Mercedes-Benz Center.
	Advanced Parking Guidance* is switched off because the radar sensor system* is temporarily inoperative due to electromagnetic interference near television and radio transmitter stations, toll stations, speed measuring systems, etc.	▶ Wait to see if the interference is temporary or do not use Advanced Parking Guidance*. Try in a location where the interfering transmission might not be present.
<i>Parking Guidance Canceled</i>	Advanced Parking Guidance* has been canceled because: <ul style="list-style-type: none"> <li>• the vehicle is sliding</li> <li>• the bumper became dirty in the area of the sensors (▷ page 620)</li> <li>• there has been a malfunction</li> </ul>	▶ Use Advanced Parking Guidance* again later. If the parking space symbol is not shown in the multi-function display at a speed below 10 mph (16 km/h): <ul style="list-style-type: none"> <li>▶ Clean the bumpers (▷ page 620).</li> <li>or</li> <li>▶ Restart the engine.</li> <li>or</li> <li>▶ Contact an authorized Mercedes-Benz Center.</li> </ul>



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Parking Guidance Finished</i>	Advanced Parking Guidance* The vehicle is in the end position.	The display message disappears automatically.
<i>PRE-SAFE Inoperative See Oper. Manual</i>	PRE-SAFE® itself has failed. All other occupant safety systems, such as the air bags, are still available.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Radar Sensors Deactivated See Oper. Manual</i>	You attempt to activate DISTRONIC Plus*, Park Assist* or PRE-SAFE® Brake* even though you have switched off the radar sensors* on the vehicle.	▶ Check if the radar sensors* may be switched on (▷ page 307). ▶ Switch on the radar sensors* using the instrument cluster control system.
<i>Service X Due</i>	Service X must be carried out (▷ page 612).	▶ Have the maintenance service carried out by an authorized Mercedes-Benz Center.
<i>Service X Exceeded by X days by XXX mls (km)</i>	Service X must be carried within the next ... or before you have driven ... miles (kilometers) (▷ page 612).	▶ Have the maintenance service carried out by an authorized Mercedes-Benz Center as soon as possible.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Shift to P or N to Start Engine</i>	You have attempted to start the engine while the automatic transmission was set to reverse gear <b>R</b> or drive position <b>D</b> .	▶ Shift the automatic transmission to park position <b>P</b> or neutral position <b>N</b> (▷ page 426).
<i>Tire Pressure Monitor Inoperative</i>	The Advanced TPMS or a wheel sensor is malfunctioning.	▶ Have the Advanced TPMS checked by an authorized Mercedes-Benz Center.

#### Warning!



Do not drive with a flat tire. A flat tire affects the ability to steer or brake the vehicle. You may lose control of the vehicle. Continued driving with a flat tire will cause excessive heat build-up and possibly a fire.

Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and/or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated. Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Tire Pressure Monitor Inoperative No Wheel Sensors</i>	The Advanced TPMS is deactivated because wheels without proper sensors were installed.	<ul style="list-style-type: none"><li>▶ Have the wheel sensors installed by an authorized Mercedes-Benz Center.</li></ul> As soon as all wheels with sensors have been mounted, the Advanced TPMS is switched back on after driving for several minutes.
<i>Tire Pressure Monitor Currently Unavailable</i>	The Advanced TPMS is unable to monitor the tire inflation pressure due to: <ul style="list-style-type: none"><li>• a nearby radio interference source</li><li>• the on-board voltage is too low</li><li>• excessive wheel sensor temperatures</li></ul>	As soon as the causes for the malfunction are no longer present, the Advanced TPMS automatically becomes active again after a few minutes of driving.

## Practical hints


### What to do if ...?

Display	Possible cause/consequence	Possible solution
<i>Tire Pressures Displayed After Driving a Few Minutes</i>	The tire inflation pressure is being checked.	▶ Drive the vehicle for a few minutes.
<i>Service Required Do Not Shift Gears</i>	The automatic transmission cannot be shifted out of the set position because of a malfunction.	If the automatic transmission is shift to drive position <b>D</b> (▷ page 426): ▶ Without changing the automatic transmission from drive position <b>D</b> , contact an authorized Mercedes-Benz Center. If the automatic transmission is shift to neutral position <b>N</b> , reverse gear <b>R</b> or park position <b>P</b> : ▶ Do not drive. ▶ Consult an authorized Mercedes-Benz Center.

## Practical hints


### What to do if ...?

#### Symbol messages

Display	Possible cause/consequence	Possible solution
 <i>Malfunction Stop Vehicle!</i>	<p>You have started driving although the vehicle level is still too low.</p> <p>The vehicle is raised. The ABC* message goes out after a few seconds.</p>	<ul style="list-style-type: none"><li>▶ Stop your vehicle as soon as it is safe to do so.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Wait until the message disappears from the multifunction display. You may then drive off.</li></ul>
	<p>The vehicle is losing oil. The ABC* message is continuously shown.</p>	<ul style="list-style-type: none"><li>▶ Stop your vehicle as soon as it is safe to do so.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Call Roadside Assistance.</li></ul> <p>Or</p> <ul style="list-style-type: none"><li>▶ Contact an authorized Mercedes-Benz Center.</li></ul>



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Malfunction</i> <i>Stop Vehicle!</i>	ABC* is malfunctioning. The ABC* message is continuously shown.	<ul style="list-style-type: none"><li>▶ Do not turn steering wheel too far to avoid damaging the front fenders.</li><li>▶ Listen for scraping noises.</li><li>▶ Do not exceed a speed of 50 mph (80 km/h).</li><li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li></ul>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Malfunction</i>	The capability of the ABC* system is restricted. This can impair the handling.	<ul style="list-style-type: none"> <li>▶ Do not exceed a speed of 50 mph (80 km/h).</li> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul>
 <i>Vehicle rising</i> <i>Please wait a moment</i>	The vehicle's level is too low while at a standstill. The vehicle will be raised.	<ul style="list-style-type: none"> <li>▶ Do not drive off.</li> <li>▶ Wait until the message disappears from the multifunction display.</li> </ul> <p>You may then drive off.</p>
 <i>ABS and ESP</i> <i>Inoperative</i> <i>See Oper. Manual</i>	<p>ABS, ESP® as well as PRE-SAFE® are switched off due to a malfunction. BAS is also switched off.</p> <p>The brake system is still functioning normally but without the ABS available.</p> <p>BAS Plus* and PRE-SAFE® Brake* are also not available.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution. Wheels may lock during hard braking, reducing steering capability.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of an accident.</p>

## Practical hints



### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>ABS and ESP Currently Unavailable See Oper. Manual</i></p>	<p>ABS, ESP<sup>®</sup> as well as PRE-SAFE<sup>®</sup> are not available due to a malfunction. BAS is also switched off. It is possible that the self-diagnostics have not yet been completed.</p> <p>The brake system still functions normally.</p> <p>BAS Plus* and PRE-SAFE<sup>®</sup> Brake* are also not available.</p>	<p>► Drive a short distance with gentle turns above a speed of 12 mph (20 km/h).</p> <p>The message disappears when ABS and ESP<sup>®</sup> are again available.</p>
	<p>The ABS, ESP<sup>®</sup> as well as PRE-SAFE<sup>®</sup> were deactivated because of insufficient power supply. The charging voltage has fallen below 10 volts.</p> <p>The brake system still functions normally but without the ABS, ESP<sup>®</sup> and PRE-SAFE<sup>®</sup> available.</p> <p>BAS Plus* and PRE-SAFE<sup>®</sup> Brake* are also not available.</p>	<p>When the voltage is above this value again, the ABS, ESP<sup>®</sup> and PRE-SAFE<sup>®</sup> are operational again and the message in the multifunction display should disappear.</p> <p>If the message in the multifunction display does not disappear:</p> <p>► Have the generator (alternator) and the battery checked.</p>



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 (USA only)	There is insufficient brake fluid in the reservoir.	<b>Risk of accident!</b> <ul style="list-style-type: none"><li>▶ Carefully stop the vehicle in a safe location or as soon as it is safe to do so.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Contact an authorized Mercedes-Benz Center.</li><li>▶ Do not add brake fluid! This will not solve the problem.</li></ul>
 (Canada only)		

#### Warning!





Driving with the message “*Check Brake Fluid Level*” displayed can result in an accident. Have your brake system checked immediately. Do not add brake fluid before checking the brake system. Overfilling the brake fluid reservoir can result in spilling brake fluid on hot engine parts and the brake fluid catching fire. You can be seriously burned.

**!** If you find that the brake fluid in the brake fluid reservoir has fallen to the minimum mark or below, have the brake system checked for brake pad thickness and leaks.




## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<p><b>BRAKE</b></p> <p><i>Brake Immediately</i></p> <p>(USA only)</p>  <p>(Canada only)</p>	<p>A malfunction has occurred while DISTRONIC Plus* was switched on.</p>	<ul style="list-style-type: none"> <li>▶ While observing surrounding traffic conditions and when it is safe, immediately depress the brake pedal firmly until the warning message disappears.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> </ul>
<p><b>BRAKE</b></p> <p><i>EBR, ABS and ESP Inoperative</i> <i>See Oper. Manual</i></p> <p>(USA only)</p>  <p>(Canada only)</p>	<p>ESP®, EBP and ABS are switched off due to a malfunction. BAS is also switched off. As a result, PRE-SAFE® is also inoperative.</p> <p>BAS Plus* and PRE-SAFE® Brake* are also not available.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of an accident.</p>

## Practical hints



### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Service See Oper. Manual</i></p> <p>(USA only)</p>	<p>S 600 and S 65 AMG only:</p> <p>The brake system sensors are malfunctioning. The brake system continues to function normally with full brake force boost.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul>
 <p>(Canada only)</p>		
 <p><i>Check Brake Pad Wear</i></p>	<p>The brake pads have reached their wear limit.</p>	<ul style="list-style-type: none"> <li>▶ Have the brake pads replaced as soon as possible.</li> </ul>

**!** *Brake pad thickness must be visually checked by a qualified technician at the intervals specified in the Maintenance Booklet.*



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 (USA only)	<p>The red indicator lamp for the electronic parking brake is either on or off and the yellow warning lamp for the electronic parking brake comes on.</p> <p>The electronic parking brake is malfunctioning.</p>	<p>To release:</p> <ul style="list-style-type: none"><li>▶ Pull handle of electronic parking brake (▷ page 422).</li></ul> <p>or</p> <ul style="list-style-type: none"><li>▶ Carefully drive off (▷ page 422).</li><li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li></ul> <p>To engage:</p> <ul style="list-style-type: none"><li>▶ Switch off ignition and press handle for electronic parking brake until the warning message on the multifunction display disappears.</li></ul>
 (Canada only)		



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 (USA only)	<i>Parking Brake</i> <i>See Oper. Manual</i> The red indicator lamp for the electronic parking brake flashes. The power supply for the electronic parking brake was malfunctioning or the electronic parking brake was previously mechanically released.	▶ Pull handle for electronic parking brake (▷ page 422). or ▶ Carefully drive off (▷ page 422). or
 (Canada only)		▶ Press handle for electronic parking brake until the warning message disappears from the multifunction display.



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 (USA only)	<i>Parking Brake</i> <i>See Oper. Manual</i> The red indicator lamp for the electronic parking brake flashes and the yellow warning lamp for the electronic parking brake lights up. The electronic parking brake is malfunctioning.	<ul style="list-style-type: none"><li>▶ Switch ignition off and back on again, and engage or release electronic parking brake (▷ page 422).</li></ul> or <ul style="list-style-type: none"><li>▶ Carefully drive off (▷ page 422).</li><li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li></ul>
 (Canada only)		



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Parking Brake</i> <i>See Oper. Manual</i></p> <p>(USA only)</p>	<p>When you engage or release the electronic parking brake, the red indicator lamp for the electronic parking brake flashes for approx. 10 seconds. Afterward, it goes out or lights up continuously. The yellow warning lamp for the electronic parking brake lights up.</p>	<ul style="list-style-type: none"> <li>▶ Carefully drive off (▷ page 422).</li> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <p>In the event of overvoltage or undervoltage:</p> <ul style="list-style-type: none"> <li>▶ Remove the cause of the overvoltage or undervoltage, e.g. charge the battery or restart the engine.</li> <li>▶ Switch ignition off and back on again, and engage or release electronic parking brake (▷ page 422).</li> </ul> <p>If the electronic parking brake still cannot be released:</p> <ul style="list-style-type: none"> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul>
 <p>(Canada only)</p>	<p>The electronic parking brake is malfunctioning or overheated for example due to over- or undervoltage.</p>	<p>(Continued on next page)</p>

## Practical hints



### What to do if ...?

Display	Possible cause/consequence	Possible solution
 (USA only)	<i>Parking Brake</i> <i>See Oper. Manual</i>	If overheated: <ul style="list-style-type: none"> <li>▶ Let vehicle cool down, and do not engage electronic parking brake during this time.</li> </ul> or <ul style="list-style-type: none"> <li>▶ Switch ignition off and back on again, and engage or release electronic parking brake.</li> </ul>
 (Canada only)	<i>Parking Brake</i> <i>Inoperative</i> When you engage or release the electronic parking brake, the red indicator lamp for the electronic parking brake flashes and goes out after approx. 10 seconds. The yellow warning lamp for the electronic parking brake lights up. The electronic parking brake is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Switch ignition off and back on again, and engage electronic parking brake (▷ page 422).</li> </ul> If the electronic parking brake cannot be engaged: <ul style="list-style-type: none"> <li>▶ Shift the automatic transmission to park position <b>P</b> (▷ page 426).</li> <li>▶ Protect vehicle from rolling away while parked by using a chock from the vehicle tool kit (▷ page 707).</li> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul>




## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 (USA only)	<p><i>Please Release Parking Brake</i></p> <p>The red indicator lamp for the electronic parking brake flashes and you also hear a warning signal.</p> <p>You are driving with the electronic parking brake activated, or you are carrying out an emergency brake application with the electronic parking brake (▷ page 422).</p>	<ul style="list-style-type: none"> <li>▶ Release electronic parking brake.</li> <li>or</li> <li>▶ Carefully drive off (▷ page 422).</li> <li>or</li> <li>▶ Release the handle for electronic parking brake.</li> </ul>
 (Canada only)	<p><i>Please Release Parking Brake</i></p> <p>The red indicator lamp for the electronic parking brake flashes and the yellow warning lamp for the electronic parking brake comes on. You also hear a warning tone.</p> <p>The electronic parking brake is malfunctioning; braking action is restricted.</p>	<p>While driving:</p> <ul style="list-style-type: none"> <li>▶ Release the handle for electronic parking brake.</li> </ul> <p>While at a standstill:</p> <ul style="list-style-type: none"> <li>▶ Switch off ignition and press handle for electronic parking brake until the warning message disappears from the multifunction display.</li> </ul>





## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<p><b>PARK</b></p> <p><i>Turn On the Ignition to Release the Parking Brake</i></p> <p>(USA only)</p>	<p>The yellow indicator lamp for the electronic parking brake comes on.</p> <p>You have tried to release the electronic parking brake, but the ignition was not switched on.</p>	<p>▶ Switch on the ignition (▷ page 370).</p>
<p><b>(P)</b></p> <p>(Canada only)</p>		
<p><b>ESP</b></p> <p><i>Inoperative See Oper. Manual</i></p>	<p>ESP® as well as PRE-SAFE® are switched off due to a malfunction. In addition, the  warning lamp in the instrument cluster comes on.</p> <p>The ABS may not be operational and the following systems are not available:</p> <ul style="list-style-type: none"> <li>• BAS and BAS Plus*</li> <li>• PRE-SAFE® Brake*</li> <li>• DISTRONIC Plus*</li> <li>• Cruise control</li> <li>• Hill start assist system</li> </ul>	<p>▶ Continue driving with added caution.</p> <p>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</p> <p>Failure to follow these instructions increases the risk of an accident.</p>




## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Inoperative</i> <i>See Oper. Manual</i></p>	<p>S 600 and S 65 AMG only:</p> <p>ESP® as well as PRE-SAFE® are switched off due to a malfunction. In addition, the  and  (USA only) or  (Canada only) warning lamps come on in the instrument cluster.</p> <p>Brake force assistance is impaired and is sustained through an electric substitute function as long as the engine is running.</p> <p>The brake system continues to function normally. You will feel a pulsating effect at the brake pedal while braking.</p> <p>BAS Plus* and PRE-SAFE® Brake* are also not available.</p>	<ul style="list-style-type: none"><li>▶ Continue driving with added caution.</li><li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li></ul> <p>Failure to follow these instructions increases the risk of an accident.</p>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
<b>ESP</b> <i>Currently Unavailable</i> <i>See Oper. Manual</i>	<p>ESP® and PRE-SAFE® are temporarily unavailable. It is possible that the self-diagnostics have not yet completed.</p> <p>In addition, the yellow ESP® warning lamp  comes on.</p> <p>The brake system functions normally.</p> <p>BAS Plus* and PRE-SAFE® Brake* are also not available.</p>	<p>Synchronize the ESP®:</p> <ul style="list-style-type: none"> <li>▶ Drive a short distance with gentle turns at a speed above 12 mph (20 km/h).</li> </ul> <p>The message disappears when ESP® is again available.</p>
	<p><i>Currently Unavailable</i> <i>See Oper. Manual</i></p> <p>ESP® and PRE-SAFE® are switched off due to undervoltage. It is possible that the battery is not charged.</p> <p>The brake system functions normally.</p> <p>BAS Plus* and PRE-SAFE® Brake* are also not available.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of an accident.</p>
	<p><i>Currently Unavailable</i> <i>See Oper. Manual</i></p> <p>If the yellow ESP® warning lamp  flashes while driving and this message appears, the electronic traction system has switched off to prevent overheating of the drive wheel brakes.</p> <p>BAS Plus* and PRE-SAFE® Brake* are also not available.</p>	<p>As soon as the brakes have cooled off, the electronic traction system switches on again.</p> <p>The message in the multifunction display disappears and the ESP® warning lamp  goes out.</p>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>STOP, Car Too Low</i></p>	<p>You have started driving although the vehicle level was too low.</p> <p>The vehicle will be raised. The Airmatic warning lamp goes out after several seconds.</p>	<ul style="list-style-type: none"> <li>▶ Stop your vehicle as soon as it is safe to do so.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Wait until the message disappears from the multifunction display.</li> </ul> <p>You may then drive off.</p>
<p><i>STOP, Car Too Low</i></p>	<p>The Airmatic is malfunctioning.</p> <p>The Airmatic warning lamp lights up continuously.</p>	<ul style="list-style-type: none"> <li>▶ Stop and press the vehicle level control button to select a higher vehicle level (▷ page 468).</li> <li>▶ Do not turn steering wheel too far to avoid damaging the front fenders.</li> <li>▶ Listen for scraping noises.</li> <li>▶ Do not exceed a speed of 50 mph (80 km/h).</li> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <p>There is otherwise danger of an accident.</p>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Malfunction</i>	The capability of the Airmatic system is restricted. This can impair the handling.	<ul style="list-style-type: none"><li>▶ Do not exceed a speed of 50 mph (80 km/h).</li><li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li></ul>
<i>Vehicle Rising</i> <i>Please Wait a Moment</i>	Vehicles with Airmatic: The vehicle level is too low while at a standstill. The vehicle will be raised.	<ul style="list-style-type: none"><li>▶ Do not drive off.</li><li>▶ Wait until the message disappears from the multifunction display. You may then drive off.</li></ul>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
	<p>The battery is no longer charging. Possible causes:</p> <ul style="list-style-type: none"><li>• alternator malfunctioning</li><li>• broken poly-V-belt</li></ul>	<ul style="list-style-type: none"><li>▶ Stop the vehicle immediately in a safe location.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Check the poly-V-belt.</li></ul> <p>If it is broken:</p> <ul style="list-style-type: none"><li>▶ Do not continue to drive. Otherwise the engine will overheat due to an inoperative water pump which may result in damage to the engine.</li><li>▶ Notify an authorized Mercedes-Benz Center.</li></ul> <p>If it is intact:</p> <ul style="list-style-type: none"><li>▶ Drive immediately to the nearest authorized Mercedes-Benz Center.</li></ul>
	<p>There is a malfunction in the electronic system.</p>	<ul style="list-style-type: none"><li>▶ Have the system checked by an authorized Mercedes-Benz Center as soon as possible.</li></ul>

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Check Coolant Level See Oper. Manual</i></p>	The coolant level is too low.	<ul style="list-style-type: none"><li>▶ Add coolant (▷ page 579).</li><li>▶ If you have to add coolant frequently, have the cooling system checked by an authorized Mercedes-Benz Center.</li></ul>

#### Warning!



Do not spill antifreeze on hot engine parts. Antifreeze contains ethylene glycol which may burn if it comes into contact with hot engine parts. You could be seriously burned.


**!** *Do not ignore the low engine coolant level warning. Extended driving with the message and symbol displayed may cause serious engine damage not covered by the Mercedes-Benz Limited Warranty.*

*Do not drive without a sufficient amount of coolant in the cooling system. The engine will overheat, causing major engine damage.*



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Coolant Low</i> <i>Stop Vehicle</i> <i>Turn Engine Off</i></p>	The coolant is too hot.	<ul style="list-style-type: none"> <li>▶ Stop the vehicle in a safe location or as soon as it is safe to do so and immediately turn off the engine.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Only start the engine again after the message disappears. You could otherwise damage the engine.</li> <li>▶ Observe the coolant temperature gauge in the instrument cluster (▷ page 28).</li> </ul>

#### Warning!



- Driving when your engine is overheated can cause some fluids which may have leaked into the engine compartment to catch fire. You could be seriously burned.
- Steam from an overheated engine can cause serious burns which can occur just by opening the engine hood. Stay away from the engine if you see or hear steam coming from it.


Stop the vehicle in a safe location away from other traffic. Turn off the engine, get out of the vehicle and do not stand near the vehicle until the engine has cooled down.

**!** *The engine should not be operated with the coolant temperature above 248 °F (120 °C). Doing so may cause serious engine damage which is not covered by the Mercedes-Benz Limited Warranty.*

During severe operating conditions, e.g. stop-and-go traffic, the coolant temperature may rise close to 248 °F (120 °C).




## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Coolant Low</i> <i>Stop Vehicle</i> <i>Turn Engine Off</i></p>	<p>The poly-V-belt could be broken.</p>	<ul style="list-style-type: none"> <li>▶ Stop the vehicle in a safe location or as soon as it is safe to do so and immediately turn off the engine.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Check the poly-V-belt.</li> </ul> <p>If it is broken:</p> <ul style="list-style-type: none"> <li>▶ Do not continue to drive. Otherwise the engine will overheat due to an inoperative water pump which may result in damage to the engine.</li> <li>▶ Notify an authorized Mercedes-Benz Center.</li> </ul> <p>If it is intact:</p> <ul style="list-style-type: none"> <li>▶ Do not continue to drive the vehicle with this message displayed. Doing so could result in serious engine damage that is not covered by the Mercedes-Benz Limited Warranty.</li> <li>▶ Observe the coolant temperature gauge in the instrument cluster (▷ page 28).</li> </ul> <p>(Continued on next page)</p>




## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Coolant Low</i> <i>Stop Vehicle</i> <i>Turn Engine Off</i></p>		<ul style="list-style-type: none"> <li>▶ Restart the engine.</li> </ul> <p>If this message disappears from the multifunction display:</p> <ul style="list-style-type: none"> <li>▶ Drive immediately to the nearest authorized Mercedes-Benz Center.</li> </ul> <p>If this message does not disappear from the multifunction display:</p> <ul style="list-style-type: none"> <li>▶ Call Roadside Assistance.</li> </ul>
	The cooling fan for the coolant is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Observe the coolant temperature gauge in the instrument cluster (▷ page 28).</li> <li>▶ Have the fan replaced as soon as possible.</li> </ul>
	<p>You are driving with one or more doors open.</p> <p>The display symbol shows you which doors are open.</p>	<ul style="list-style-type: none"> <li>▶ Close the doors.</li> </ul>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Gas Cap Loose</i>	A loss of pressure has been detected in the fuel system. The fuel cap may not be closed properly or the fuel system may be leaky.	<ul style="list-style-type: none"><li>▶ Check the fuel cap (▷ page 570).</li></ul> If it is not closed properly: <ul style="list-style-type: none"><li>▶ Close the fuel cap.</li></ul> If it is closed properly: <ul style="list-style-type: none"><li>▶ Have the fuel system checked by an authorized Mercedes-Benz Center.</li></ul>
 <i>Reserve Fuel</i>	The fuel level has dropped below the reserve mark.	<ul style="list-style-type: none"><li>▶ Refuel at the next gas station (▷ page 570).</li></ul>
	You are driving with the hood open.	<ul style="list-style-type: none"><li>▶ Stop your vehicle as soon as it is safe to do so.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Close the hood (▷ page 574).</li></ul> There is otherwise danger of an accident.



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Key Not Detected</i></p>	<p>The SmartKey with KEYLESS-GO* is not recognized while the engine is running because the SmartKey with KEYLESS-GO* is not in the vehicle.</p>	<ul style="list-style-type: none"> <li>▶ Stop the vehicle in a safe location or as soon as it is safe to do.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Search for the SmartKey.</li> </ul> <p>Otherwise the vehicle cannot be centrally locked nor can the engine be started again after the engine is stopped.</p>
	<p>The SmartKey with KEYLESS-GO* is not recognized while the engine is running because there is strong radio-frequency interference.</p>	<ul style="list-style-type: none"> <li>▶ Stop the vehicle in a safe location or as soon as it is safe to do.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Remove KEYLESS-GO* button from the starter switch (▷ page 371).</li> <li>▶ Operate the vehicle with the SmartKey in the starter switch.</li> </ul>
	<p>The SmartKey with KEYLESS-GO* is momentarily not recognized.</p>	<ul style="list-style-type: none"> <li>▶ Change the position of the SmartKey in the vehicle.</li> <li>▶ If necessary, operate vehicle using SmartKey with KEYLESS-GO* in starter switch under KEYLESS-GO* button (▷ page 371).</li> </ul>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Close Doors to Lock Vehicle</i>	You wanted to lock the vehicle but not all doors were closed.	▶ Close doors and lock vehicle again.
 <i>Don't Forget Your Key</i>	This display appears (for a maximum of 60 seconds) if the driver's door is opened with the engine turned off and no SmartKey in the starter switch. This message is only a reminder.	▶ Take the SmartKey or SmartKey with KEYLESS-GO* with you when leaving the vehicle.
 <i>Take Your Key From Ignition</i>	You have forgotten to remove the SmartKey.	▶ Remove the SmartKey from the starter switch.
 <i>Replace Key Battery</i>	The batteries in the SmartKey with KEYLESS-GO* are discharged.	▶ Replace the batteries (▷ page 712).
 <i>Key Detected In Vehicle</i>	A SmartKey with KEYLESS-GO* left in the vehicle was recognized while locking the vehicle from the outside.	▶ Take the SmartKey with KEYLESS-GO* out of the vehicle.


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Key Not Detected</i>	The SmartKey with KEYLESS-GO* is momentarily not recognized.	<ul style="list-style-type: none"> <li>▶ Change the position of the SmartKey in the vehicle.</li> <li>▶ If necessary, operate vehicle using SmartKey with KEYLESS-GO* in starter switch under KEYLESS-GO* button (▷ page 371).</li> </ul>
 <i>Key Being Initialized... Please Wait</i>	The SmartKey with KEYLESS-GO* is being initialized in the vehicle.	<ul style="list-style-type: none"> <li>▶ Wait until the message disappears from the multifunction display.</li> </ul>
 <i>Remove "START" Button and Insert Key</i>	The KEYLESS-GO* system is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Remove KEYLESS-GO* button from the starter switch (▷ page 371).</li> <li>▶ Operate the vehicle with the SmartKey in the starter switch.</li> </ul>
 <i>Obtain a New Key</i>	The SmartKey with KEYLESS-GO* must be replaced.	<ul style="list-style-type: none"> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul>
 <i>Key Does Not Belong to Vehicle</i>	The SmartKey in the starter switch does not belong to your vehicle.	<ul style="list-style-type: none"> <li>▶ Remove the SmartKey from the starter switch.</li> </ul>

## Practical hints


### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Check Center Brake Lamp</i>	The high mounted brake lamp is malfunctioning. This message will only appear if a critical number of light emitting diodes have stopped working.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Left Cornering Light</i>	The left-hand corner-illuminating lamp is malfunctioning.	▶ Replace the bulb as soon as possible (▷ page 714).
 <i>Check Right Cornering Light</i>	The right-hand corner-illuminating lamp is malfunctioning.	▶ Replace the bulb as soon as possible (▷ page 714).
 <i>Check Left Low Beam</i>	The left low beam lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Right Low Beam</i>	The right low beam lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Active Headlamps Inoperative</i>	The active headlamps are malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.




## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Auto Lamp Function Inoperative</i>	The light sensor is malfunctioning. Daytime driving lamps are switched on.	<ul style="list-style-type: none"> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul> <p>To switch off the headlamps (U.S. vehicles only):</p> <ul style="list-style-type: none"> <li>▶ Switch off daytime running lamps in the instrument cluster control system (▷ page 306).</li> <li>▶ Turn the exterior lamp switch to position <b>0</b>.</li> </ul>
<i>Check Rear Left Turn Signal</i>	The left rear turn signal lamp is malfunctioning. A substitute bulb is being used.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Rear Right Turn Signal</i>	The right rear turn signal lamp is malfunctioning. A substitute bulb is being used.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Left Mirror Turn Signal</i>	The turn signal in the left exterior rear view mirror is malfunctioning. This message will only appear if a critical number of light emitting diodes have stopped working.	▶ Have the LEDs replaced as soon as possible.


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Check Right Mirror Turn Signal</i>	The turn signal in the right exterior rear view mirror is malfunctioning. This message will only appear if a critical number of light emitting diodes have stopped working.	▶ Have the LEDs replaced as soon as possible.
 <i>Check Front Left Turn Signal</i>	The left front turn signal lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Front Right Turn Signal</i>	The right front turn signal lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Left High Beam</i>	The left high beam lamp is malfunctioning.	▶ Replace the bulb as soon as possible (▷ page 714).
 <i>Check Right High Beam</i>	The right high beam lamp is malfunctioning.	▶ Replace the bulb as soon as possible (▷ page 714).
 <i>Check Left License Plate Lamp</i>	The left license plate lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Right License Plate Lamp</i>	The right license plate lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Please Switch Off Lights</i>	You are getting out of the vehicle and the lights are still switched on.	▶ Switch off the headlamps (▷ page 399).


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Turn Lights Off</i> or <i>Remove Key</i>	The exterior lamp switch is set to <b>A</b> and you have forgotten to take out the SmartKey. The parking lamps remain switched on.	<ul style="list-style-type: none"> <li>▶ Switch off the headlamps (▷ page 399).</li> <li>or</li> <li>▶ Remove the SmartKey from the starter switch.</li> </ul>
<i>Check Left Fog Lamp</i>	The left front fog lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Right Fog Lamp</i>	The right front fog lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Rear Left Fog Lamp</i>	The left rear fog lamp is malfunctioning. A substitute bulb is being used.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Front Left Parking Lamp</i>	The left front parking lamp is malfunctioning. A substitute bulb is being used.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Front Right Parking Lamp</i>	The right front parking lamp is malfunctioning. A substitute bulb is being used.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Left Reverse Lamp</i>	The left backup lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Right Reverse Lamp</i>	The right backup lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Check Front Left Sidemarker Lamp</i>	The front left side marker lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Front Right Sidemarker Lamp</i>	The front right side marker lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Rear Left Sidemarker Lamp</i>	The rear left side marker lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
 <i>Check Rear Right Sidemarker Lamp</i>	The rear right side marker lamp is malfunctioning.	▶ Contact an authorized Mercedes-Benz Center as soon as possible.







## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Check Left Tail and Brake Lamp</i>	<p>The left tail lamp/brake lamp is malfunctioning.</p> <p>This message will only appear if a critical number of light emitting diodes have stopped working. A substitute bulb is being used.</p>	▶ Contact an authorized Mercedes-Benz Center as soon as possible.
<i>Check Right Tail and Brake Lamp</i>	<p>The right tail lamp/brake lamp is malfunctioning.</p> <p>This message will only appear if a critical number of light emitting diodes have stopped working. A substitute bulb is being used.</p>	▶ Contact an authorized Mercedes-Benz Center as soon as possible.





## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Night View Assist Inoperative</i>	Night View Assist* is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Contact an authorized Mercedes-Benz Center as soon as possible.</li> </ul>
 <i>Night View Assist Currently Unavailable</i>	The temperature of the camera* is too high (▷ page 491).	<ul style="list-style-type: none"> <li>▶ Wait until the message “<i>Night View Assist Available Again</i>” appears.</li> </ul> <p>In addition you can:</p> <ul style="list-style-type: none"> <li>▶ Swing the camera* cover down (▷ page 621).</li> <li>▶ Adjust the air distribution of the automatic climate control so that air flows upward (▷ page 275).</li> </ul>
 <i>Night View Assist Lights Must Be Set to AUTO or ON</i>	You have tried to switch on Night View Assist*, but the light switch is not set to <b>A</b> or  .	<ul style="list-style-type: none"> <li>▶ Turn the exterior lamp switch to <b>A</b> or  (▷ page 399).</li> </ul>
 <i>Night View Assist Not in Reverse Gear</i>	You have tried to switch on Night View Assist* while the automatic transmission was in reverse gear <b>R</b> .	<ul style="list-style-type: none"> <li>▶ Shift the automatic transmission to park position <b>P</b>, neutral position <b>N</b> or drive position <b>D</b> (▷ page 426).</li> </ul>


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Night View Assist Lights ON or AUTO, Not in R Gear</i></p>	<p>You have tried to switch on Night View Assist* but the light switch is not set to <b>A</b> or .</p> <p>In addition, the automatic transmission is in reverse gear <b>R</b>.</p>	<ul style="list-style-type: none"> <li>▶ Turn the exterior lamp switch to <b>A</b> or  (▷ page 399).</li> <li>▶ Shift the automatic transmission to park position <b>P</b>, neutral position <b>N</b> or drive position <b>D</b> (▷ page 426).</li> </ul>
<p><i>Night View Assist Only When It Is Dark</i></p>	<p>You have tried to switch on Night View Assist* by daylight.</p>	<p>You can only switch on Night View Assist* when it is dark.</p>
 <p><i>Engine Oil Level Low Stop Vehicle Turn Engine Off</i></p>	<p>S 600 and S 65 AMG only:</p> <p>There is no oil in the engine. There is a danger of engine damage.</p>	<ul style="list-style-type: none"> <li>▶ Carefully bring the vehicle to a halt as soon as it is safe to do so in a safe location.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Turn off the engine.</li> <li>▶ Add engine oil (▷ page 578) and check the engine oil level (▷ page 575).</li> </ul>

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Check Engine Oil Level (Add 1 quart)</i> (USA only)</p> <p><i>Check Engine Oil Level (Add 1 Liter)</i> (Canada only)</p>	<p>S 600 and S 65 AMG only:</p> <p>The engine oil level is too low.</p>	<ul style="list-style-type: none"> <li>▶ Check the engine oil level (▷ page 575) and add engine oil as required (▷ page 578).</li> <li>▶ If you must add engine oil frequently, have the engine checked for possible leaks.</li> </ul>
<p><i>Check Engine Oil Level at Next Refueling</i></p>	<p>All models except S 600 and S 65 AMG:</p> <p>The engine oil level has dropped to approximately the minimum level.</p>	<ul style="list-style-type: none"> <li>▶ Check the engine oil level (▷ page 575) and add engine oil as required (▷ page 578).</li> <li>▶ If you must add engine oil frequently, have the engine checked for possible leaks.</li> </ul>

When the message “*Check Engine Oil Level at Next Refueling*” (all models except S 600 and S 65 AMG) or “*Check Engine Oil Level (Add 1 quart)*” (USA only) or “*Check Engine Oil Level (Add 1 Liter)*” (Canada only) (S 600 and S 65 AMG) appears while the engine is running and at operating temperature, the engine oil level has dropped to approximately the minimum level.

When this occurs, the warning is at first intermittent and then remains on if the oil level drops further.

Visually check for oil leaks. If there are no obvious oil leaks, drive to the nearest service station to refill engine oil to the required level with an approved oil.



For information on approved engine oils, refer to the Factory Approved Service Products pamphlet (USA only) or contact an authorized Mercedes-Benz Center.

**!** *Engine oil level warnings should not be ignored. Extended driving with the symbol displayed could result in serious engine damage that is not covered by the Mercedes-Benz Limited Warranty.*




## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Engine Oil Level Cannot Be Measured</i>	S 600 and S 65 AMG only: The measuring system is malfunctioning.	▶ Have the measuring system checked by an authorized Mercedes-Benz Center.
 <i>Engine Oil Level Too High</i>	S 600 and S 65 AMG only: You have added too much engine oil. There is a risk of damaging: <ul style="list-style-type: none"><li>• the engine</li><li>• the catalytic converter</li></ul>	▶ Have excess oil siphoned or drained off. Contact an authorized Mercedes-Benz Center.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>SRS Malfunction Service Required</i>	There is a malfunction in the supplemental restraint systems. The air bags or emergency tensioning devices (ETDs) could deploy unexpectedly or fail to activate in an accident.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.
 <i>Front Left SRS Malfunction Service Required</i>	Components of the driver's supplemental restraint system may not work properly.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.
 <i>Front Right SRS Malfunction Service Required</i>	Components of the front passenger's supplemental restraint system may not work properly.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.
 <i>Rear Left SRS Malfunction Service Required</i>	Components of the left rear passenger's supplemental restraint system may not work properly.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.

### Warning!




In the event that a malfunction of the SRS is indicated as outlined above, the SRS may not be operational. For your safety, we strongly recommend that you contact an authorized Mercedes-Benz Center

immediately to have the system checked; otherwise the SRS may not be deployed when needed in an accident, which could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could result in an accident and/or injury to you or to others.

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Rear Center SRS Malfunction Service Required</i>	Components of the center rear passenger's supplemental restraint system may not work properly.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.
 <i>Rear Right SRS Malfunction Service Required</i>	Components of the right rear passenger's supplemental restraint system may not work properly.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.
 <i>Left Side Curtain Airbag Malfunction Service Required</i>	The left side window curtain air bag may not work properly.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.
 <i>Right Side Curtain Airbag Malfunction Service Required</i>	The right side window curtain air bag may not work properly.	► Drive with added caution to the nearest authorized Mercedes-Benz Center.

#### Warning!






In the event that a malfunction of the SRS is indicated as outlined above, the SRS may not be operational. For your safety, we strongly recommend that you contact an authorized Mercedes-Benz Center

immediately to have the system checked; otherwise the SRS may not be deployed when needed in an accident, which could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could result in an accident and/or injury to you or to others.


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Tele Aid Inoperative</i>	One or more main functions of the Tele Aid system are malfunctioning.	<ul style="list-style-type: none"> <li>▶ Have the Tele Aid system checked by an authorized Mercedes-Benz Center.</li> </ul>
 <i>Check Tire Pressure</i>	The pressure is too low in one or more tires.	<ul style="list-style-type: none"> <li>▶ Carefully bring the vehicle to a halt, avoiding abrupt steering and braking maneuvers.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ Check and adjust tire inflation pressure as required (▷ page 593).</li> <li>▶ If necessary, change the wheel (▷ page 723).</li> </ul>
 <i>Tire Press. Warning Caution Tire Malfunction</i>	One or more tires are deflating.	<ul style="list-style-type: none"> <li>▶ Carefully bring the vehicle to a halt, avoiding abrupt steering and braking maneuvers.</li> <li>▶ Engage the electronic parking brake (▷ page 422).</li> <li>▶ If necessary, change the wheel (▷ page 723).</li> </ul>

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <p><i>Caution</i> <i>Tire Defect</i></p>	One or more tires are deflating. The respective tire is shown in the multifunction display.	<ul style="list-style-type: none"><li>▶ Carefully bring the vehicle to a halt, avoiding abrupt steering and braking maneuvers.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ If necessary, change the wheel (▷ page 723).</li></ul>

#### Warning!



Do not drive with a flat tire. A flat tire affects the ability to steer or brake the vehicle. You may lose control of the vehicle. Continued driving with a flat tire will cause excessive heat build-up and possibly a fire.


Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and/or unevenly, adversely affect handling and fuel economy, and are

more likely to fail from being overheated. Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.


## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Check Tire Pressure</i>	The pressure is too low in one or more tires.	<ul style="list-style-type: none"><li>▶ Carefully bring the vehicle to a halt, avoiding abrupt steering and braking maneuvers.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Check and adjust tire inflation pressure as required (▷ page 593).</li><li>▶ If necessary, change the wheel (▷ page 723).</li></ul>

## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Check Tires</i>	The pressure is too low in one or more tires. The respective tire is shown in the multi-function display.	<ul style="list-style-type: none"><li>▶ Carefully bring the vehicle to a halt, avoiding abrupt steering and braking maneuvers.</li><li>▶ Engage the electronic parking brake (▷ page 422).</li><li>▶ Check and adjust tire inflation pressure as required (▷ page 593).</li><li>▶ If necessary, change the wheel (▷ page 723).</li></ul>

#### Warning!



Do not drive with a flat tire. A flat tire affects the ability to steer or brake the vehicle. You may lose control of the vehicle. Continued driving with a flat tire will cause excessive heat build-up and possibly a fire.


Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and/or unevenly, adversely affect handling and fuel economy, and are

more likely to fail from being overheated. Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

## Practical hints

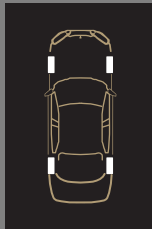


### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Wheel Sensor(s) Missing</i>	<p>One or more sensors malfunction (e.g. battery in one or more wheel sensor is empty).</p> <p>One or more wheels without wheel sensors mounted (e.g. spare tire).</p> <p>No pressure value is shown on the multifunction display for the tire in question.</p>	<ul style="list-style-type: none"><li>▶ Have the Advanced TPMS checked by an authorized Mercedes-Benz Center.</li><li>▶ Have the wheel sensors installed by an authorized Mercedes-Benz Center.</li></ul> <p>The tire pressure for the respective tire is shown in the multifunction display after a few minutes of driving.</p>
<i>Tire Pressure Please Rectify</i>	<p>The pressure is too low in one or more tires. Or the tire pressures of the individual wheels differ too radically from one another.</p>	<ul style="list-style-type: none"><li>▶ Check and adjust tire inflation pressure as required (▷ page 593).</li></ul>



## Practical hints

### What to do if ...?

Display	Possible cause/consequence	Possible solution
 <i>Shift to P</i>	You have attempted to turn off the engine with the KEYLESS-GO* start/stop button and opened the driver's door with the automatic transmission not shift to park position <b>P</b> .	<ul style="list-style-type: none"><li>▶ Shift the automatic transmission to park position <b>P</b> (▷ page 426).</li><li>or</li><li>▶ Close the driver's door.</li></ul>
	You are driving with the trunk open.	<ul style="list-style-type: none"><li>▶ Close the trunk (▷ page 512).</li></ul>
 <i>Check Washer Fluid</i>	The water level has dropped to approx. 1.1 US qts (1.0 l).	<ul style="list-style-type: none"><li>▶ Add washer fluid (▷ page 580).</li></ul>


▼ Where will I find ...?

**First aid kit**

**!** Always keep the storage compartment under the front passenger seat closed while the vehicle is in motion.

**i** Check expiration dates and contents for completeness at least once a year and replace missing/expired items.

The first aid kit is located in the storage compartment under the front passenger seat.

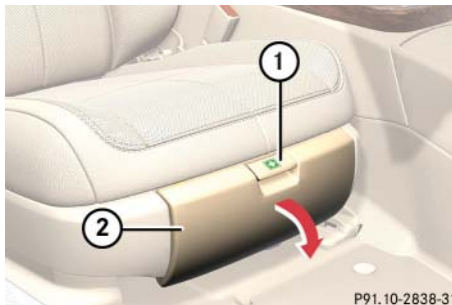

- ① Tab
- ② Cover

► Pull tab ① upward.

- Fold the covering forward in the direction of arrow.
- Remove the first aid kit.

**Vehicle jack, vehicle tool kit, luggage bowl, Minispare wheel**

The vehicle jack, Minispare wheel, the vehicle tools, and the luggage bowl are stored in the compartment underneath the trunk floor.

- Lift up trunk floor cover and engage trunk floor handle in upper edge of trunk.

You can now remove the tools and accessories.

**!** To prevent damage, always disengage trunk floor handle from trunk lid and lower trunk floor before closing the trunk.

The vehicle tool kit includes:

- Towing eye bolt
- Wheel wrench with socket wrench
- Alignment bolt
- Pair of gloves
- Fuse chart for the main fuse box
- Collapsible wheel chock
- Release tool for mechanically releasing the electronic parking brake

The spare wheel bolts are fixed at the Minispare wheel.

## Practical hints

### Where will I find ...?


#### Vehicle jack

##### Warning!




The jack is designed exclusively for jacking up the vehicle at the jack take-up brackets built into both sides of the vehicle. To help avoid personal injury, use the jack only to lift the vehicle during a wheel change. Never get beneath the vehicle while it is supported by the jack. Keep hands and feet away from the area under the lifted vehicle. Always firmly engage the electronic parking brake and block wheels before raising vehicle with jack.

Do not disengage electronic parking brake while the vehicle is raised. Be certain that the jack is always vertical (plumb line) when in use, especially on hills. Always try to use the jack on level surface. Make sure the jack arm is fully seated in the jack take-up bracket. Always lower the vehicle onto sufficient capacity jackstands before working under the vehicle.

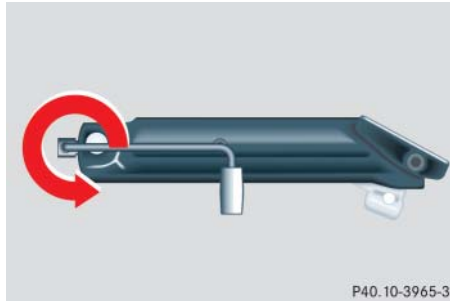

##### Storage position

- ▶ Remove vehicle jack from its compartment.
- ▶ Turn crank handle in direction of arrow as far as it will go.

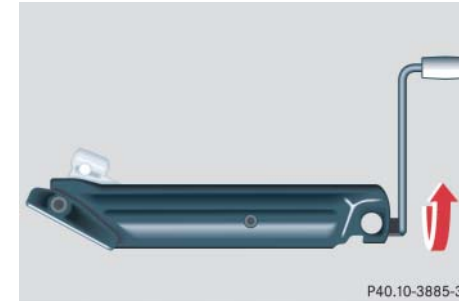

##### Operational position

- ▶ Turn crank handle clockwise.

Before storing the vehicle jack in its compartment:


- It should be fully collapsed.
- The handle must be folded in (storage position).

## Practical hints

### Where will I find ...?

#### Minispare wheel

The Minispare wheel is stored in the compartment underneath the trunk floor.

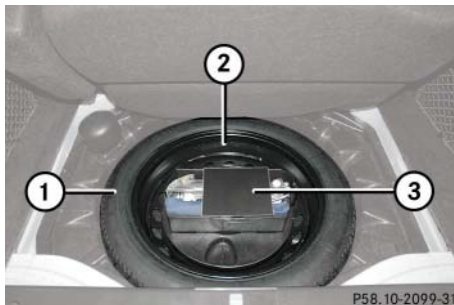


- ① Minispare wheel with spare wheel bolts in container on wheel rim
- ② Luggage bowl
- ③ Vehicle tool kit, jack and collapsible wheel chock

#### Removing the Minispare wheel

- ▶ Turn luggage bowl ② counterclockwise.
- ▶ Remove Minispare wheel ①.

#### Setting up the collapsible wheel chock

The collapsible wheel chock serves to additionally secure the vehicle, e.g. while changing the wheel.

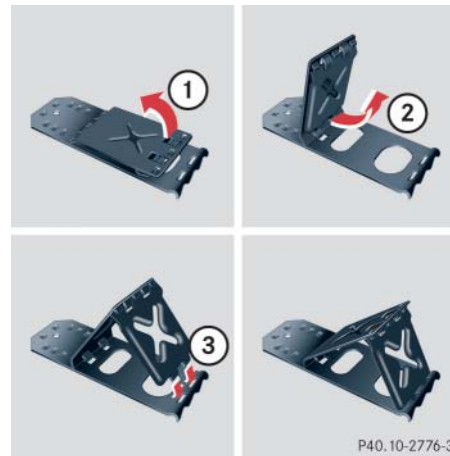

- ① Tilt the plates upward
- ② Fold the lower plate outward
- ③ Insert the plate

- ▶ Tilt both plates upward ①.
- ▶ Fold the lower plate outward ②.
- ▶ Guide the tabs of the lower plate all the way into the openings of the base plate ③.

For information on where to place wheel chocks when changing a wheel, see “Lifting the vehicle” (▷ page 724).

## Practical hints

### Unlocking/locking in an emergency


#### Unlocking the vehicle

If you cannot unlock the vehicle with the SmartKey or KEYLESS-GO\*, unlock the driver's door and the trunk using the mechanical key.

**i** *Unlocking the vehicle with the mechanical key and opening the driver's door or the trunk with the mechanical key will trigger the anti-theft alarm system (▷ page 82).*

*To cancel the alarm, insert the SmartKey or SmartKey with KEYLESS-GO\* in the starter switch.*


#### Removing the mechanical key

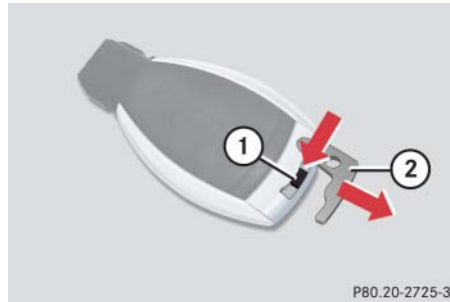

- ① Mechanical key locking tab
- ② Mechanical key

- ▶ Move locking tab ① in the direction of arrow.
- ▶ Slide mechanical key ② out of the housing.

#### Unlocking the driver's door

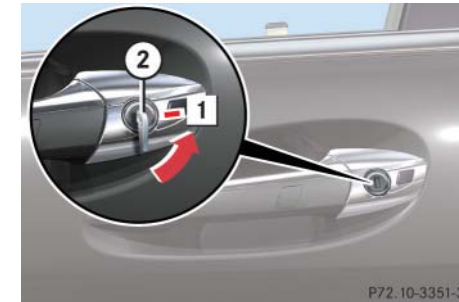


- 1 Unlocking
- ② Mechanical key

- ▶ Insert mechanical key ② into the driver's door lock until it stops.
- ▶ Turn mechanical key ② counterclockwise to position 1 and hold it there.
- ▶ Pull the door handle until the locking knob moves up.  
The driver's door is unlocked.
- ▶ Pull the door handle once more to open the driver's door.

Unlocking/locking in an emergency

Unlocking the trunk

A minimum height clearance of 6.0 ft (1.8 m) is required to open the trunk lid.

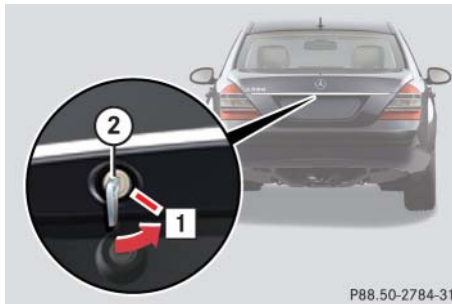

P88.50-2784-31

1 Unlocking in an emergency

② Mechanical key

- ▶ Insert the mechanical key ② into the trunk lid lock until it stops.
- ▶ Turn mechanical key ② all the way counterclockwise to position 1.  
The trunk opens.

**!** The trunk lid swings open upwards automatically. Always make sure that there is sufficient overhead clearance.

- ▶ Turn the mechanical key ② back and remove it from the trunk lid lock.

Locking the vehicle

If you cannot lock the vehicle with the SmartKey or KEYLESS-GO\*, do the following:

- ▶ Close the front passenger door, the rear right door and the trunk.

**i** If you cannot close the trunk with the remote trunk opening/closing\* switch, lower the trunk lid manually and close it with hands placed flat on the trunk lid until it is engaged in its lock.

- ▶ Open the driver's door and the rear left door.
- ▶ Press the central locking switch on the driver's door (▶ page 369).

The locking knobs of the front passenger door and the rear doors move down.

If the vehicle battery is disconnected or drained:

- ▶ Press down the locking knobs of the front passenger door and the rear doors manually.

- ▶ Exit the vehicle.
- ▶ Check whether the trunk is locked.
- ▶ If necessary, lock the trunk with the mechanical key (▶ page 517).
- ▶ Close the driver's door.
- ▶ Enter the vehicle through the rear left door.
- ▶ Press down the locking knob of the driver's door.

**!** To prevent inadvertent lockout, make sure to have the SmartKey or SmartKey with KEYLESS-GO\* with you before proceeding with the next step. The next step will lock the vehicle.

- ▶ Exit the vehicle.
- ▶ Close the rear left door.  
The vehicle is locked.

**i** This procedure does not arm the anti-theft alarm system nor does it lock the fuel filler flap.

## Practical hints

### Resetting activated head restraints

If the active head restraints (front seats) have been triggered in an accident, the active head restraints must be reset. Otherwise, the active head restraints cannot offer any additional protection in the event of another rear-end collision.

You can tell that the head restraints have been triggered when they have been moved forward and cannot be adjusted.

**i** For your convenience, we recommend that you have this work carried out by an authorized Mercedes-Benz Center.

You will find the reset tool for manually operating the head restraints in the Mercedes-Benz vehicle literature pouch.

#### Warning!



For safety reasons, have the active head restraints checked by an authorized Mercedes-Benz Center after a rear-end collision.

#### Warning!




When pushing back the head restraint cushion, take care that your fingers do not become caught between the head restraint cushion and the cover. Failing to do so may lead to injury.

For information on active head restraints, see “Active head restraints” (▷ page 56).

For information on head restraint adjustment, see “Head restraints” (▷ page 379).

### Head restraints (standard)

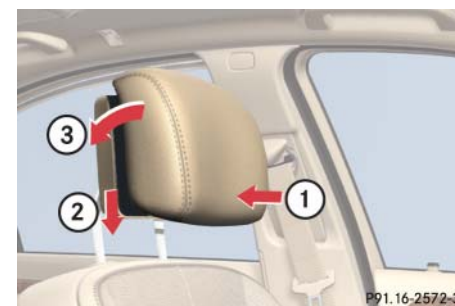

- ① Fold back
- ② Push down
- ③ Push back

- ▶ Push the head restraint cushion by the bottom, back as far as it will go ①.
- ▶ Push the head restraint cushion down into the guide as far as it will go ②.
- ▶ Fold the head restraint cushion by the top, back firmly until it engages ③.
- ▶ Repeat this procedure on the active head restraints for second head restraint.

**Luxury head restraints\***



- ▶ Take reset tool ① out of the Mercedes-Benz vehicle literature pouch.
- ▶ Guide reset tool ① into center of head restraint between head restraint cushion and rear head restraint cover.
- ! *Be careful not to damage upholstery.*
- ▶ Press reset tool ① forward in direction of arrow.

- ▶ Press reset tool downward until you hear the head restraint release mechanism audibly engage.
- ▶ Pull out reset tool ①.
- ▶ Firmly press head restraint cushion backward towards the rear of the vehicle until it engages.
- ▶ Repeat this procedure on the active head restraints for second head restraint.



## Practical hints

### Replacing SmartKey batteries

If the batteries in the SmartKey/SmartKey with KEYLESS-GO\* are discharged, the vehicle can no longer be locked or unlocked. It is recommended to have the batteries replaced at an authorized Mercedes-Benz Center.

#### Warning!



Batteries contain poisonous and corrosive substances. Therefore keep the batteries out of reach of children.

If a battery is swallowed, seek medical help immediately.

#### Warning!



SmartKey batteries contain Perchlorate material, which may require special handling and regard for the environment. Check with your local government's disposal guidelines.

California residents, see <http://www.dtsc.ca.gov/HazardousWaste/Perchlorate/index.cfm>.

Batteries contain materials that can harm the environment if disposed of improperly. Recycling of batteries is the preferred method of disposal. Many states require sellers of batteries to accept old batteries for recycling.


**i** When inserting the batteries, make sure they are clean and free of lint.

**i** When changing batteries, always replace both batteries.

*The required replacement batteries are available at any authorized Mercedes-Benz Center.*

Replacement batteries: Lithium, type CR 2025 or equivalent.

- ▶ Remove the mechanical key out of the SmartKey/SmartKey with KEYLESS-GO\* (▷ page 708).

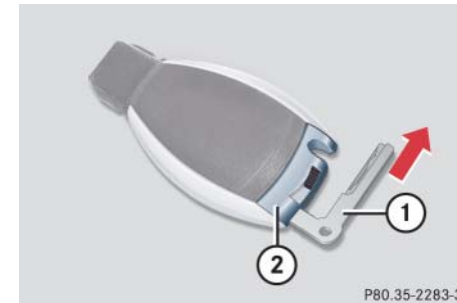


① Mechanical key

② Battery compartment

- ▶ Insert mechanical key ① into opening.
- ▶ Press mechanical key ① in direction of arrow.  
The battery compartment is unlatched.
- ▶ Pull battery compartment ② out of the housing.

## Practical hints

### Replacing SmartKey batteries

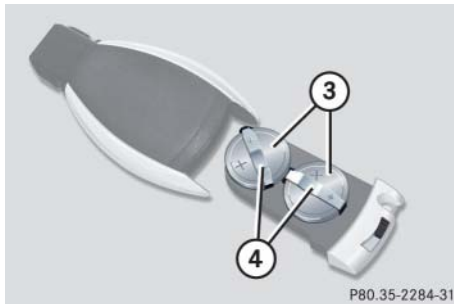

③ Batteries

④ Contact springs

- ▶ Pull out batteries ③.

- ▶ Using a line-free cloth, insert new batteries ③ under contact springs ④ with the positive terminal (+) side facing up.
- ▶ Return battery compartment ② into housing until it locks into place.
- ▶ Slide the mechanical key back into the SmartKey/SmartKey with KEYLESS-GO\*.
- ▶ Check the operation of the SmartKey/SmartKey with KEYLESS-GO\*.

## Practical hints

### Replacing bulbs

Safe vehicle operation depends on proper exterior lighting and signaling. It is therefore essential that all bulbs and lamp assemblies are in good working order at all times.

Correct headlamp adjustment is extremely important. Have headlamps checked and readjusted at regular intervals and when a bulb has been replaced. Contact an authorized Mercedes-Benz Center for headlamp adjustment.

**i** *If the headlamps or front fog lamps are fogged up on the inside as a result of high humidity, driving the vehicle a distance with the lights on should clear up the fogging.*

**i** *Substitute bulbs will be brought into use when the following lamps malfunction:*


- *Brake lamps*
- *Rear fog lamps*
- *Front parking lamps*
- *Tail lamps*
- *Turn signal lamps*

*Read and observe messages in the multifunction display (▷ page 642).*

## Practical hints

### Replacing bulbs

#### Bulbs

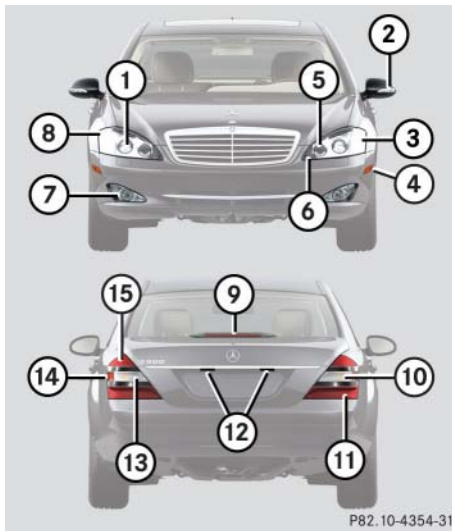

#### Front lamps

Lamp	Type
① Bi-Xenon headlamp: Low and high beam lamp <sup>1</sup>	D1S-35 W
② Additional turn signal lamp	LED
③ Parking and standing lamp	W 5 W
④ Side marker lamp	W 5 W
⑤ Bi-Xenon headlamp: High beam flasher lamp	H7-55 W
IR emitter* (for Night View Assist*)	H11-55 W
⑥ Corner-illuminating lamp	H7-55 W
⑦ Fog lamp	H11-55 W
⑧ Turn signal lamp	PY 24 W

<sup>1</sup> Bi-Xenon headlamps: Low beam and high beam use the same D1S-35W lamp. Do not replace the Bi-Xenon bulbs yourself. Contact an authorized Mercedes-Benz Center.

#### Rear lamps

Lamp	Type
⑨ High mounted brake lamp	LED
⑩ Turn signal lamp	HiP 16 W
⑪ Brake lamp/tail lamp and standing lamp	LED
⑫ License plate lamp	W 5 W
⑬ Backup lamp	HiP 16 W
⑭ Side marker lamp	LED
⑮ Rear fog lamp (driver's side only)	HiP 19 W

## Practical hints

### Replacing bulbs

#### Notes on bulb replacement

##### Warning!



Bulbs and bulb sockets can be very hot. Allow the lamp to cool down before changing a bulb.

Keep bulbs out of reach of children.

Halogen lamps contain pressurized gas. A bulb can explode if you:

- touch or move it when hot
- drop the bulb
- scratch the bulb

Wear eye and hand protection.

Because of high voltage in Xenon lamps, it is dangerous to replace the bulb or repair the lamp and its components. We recommend that you have such work done by a qualified technician.

- Only use 12-volt-bulbs of the same type and with the specified watt rating.
  - Switch lights off before changing a bulb to prevent short circuits.
  - Always use a clean lint-free cloth when handling bulbs.
  - Your hands should be dry and free of oil and grease.
  - If the newly installed bulb does not come on, contact an authorized Mercedes-Benz Center.
- the front side marker lamps
  - the high mounted brake lamps
  - the brake, tail and rear standing lamps
  - the rear side marker lamps
  - the rear fog lamp
  - the rear turn signal lamps
  - the rear side marker lamps
  - the license plate lamps

Have the LEDs and bulbs for the following lamps replaced by an authorized Mercedes-Benz Center:

- the Bi-Xenon lamps
- the front turn signal lamps
- the front fog lamps
- the additional turn signal lamps in the exterior rear view mirrors
- the parking and standing lamps


**!** Do not replace the LEDs yourself. You could otherwise damage the LEDs or parts of the vehicle. Only have the LEDs replaced by an authorized Mercedes-Benz Center.

**i** Have the headlamp adjustment checked regularly.

### Replacing bulbs for front lamps

Before you start to replace a bulb for a front lamp, do the following first:

- ▶ Turn the exterior lamp switch to **0** (▷ page 399).
- ▶ Open the hood (▷ page 573).

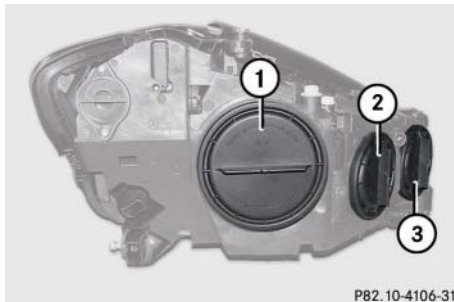


- ① Cover 1
- ② Cover 2
- ③ Cover 3

### Removing and installing washer fluid reservoir on left-hand side

#### Vehicles with Airmatic\*

You must remove the washer fluid reservoir in order to change the bulbs of the front headlamp on the left-hand side. The washer fluid reservoir is on the front left-hand side of the engine compartment.

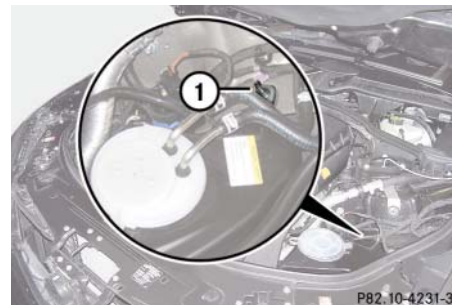

#### Washer fluid reservoir (example illustration from S 550)

- ① Retaining screw

#### Removing

- ▶ Turn retaining screw ① counterclockwise.
- ▶ Take washer fluid reservoir out of mounting.
- ▶ Place washer fluid reservoir to the side and do not disconnect any wires or cables.

#### Installing

- ▶ Guide washer fluid reservoir into mounting so that the bottom retaining lug slides into the rubber sleeve on the longitudinal member.
- ▶ Turn retaining screw ① clockwise.

## Practical hints

### Replacing bulbs

#### Bi-Xenon headlamps


##### Warning!



Do not remove the cover for the Bi-Xenon headlamp. Because of high voltage in Xenon lamps, it is dangerous to replace the bulb or repair the lamp and its components. We recommend that you have such work done by a qualified technician.

#### High beam flasher lamp

In vehicles with Bi-Xenon headlamps, you can only change the halogen bulb for the high-beam flasher lamp.

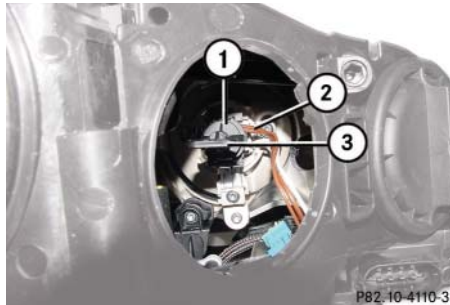

- ① Bulb holder
- ② Wire position
- ③ Grip

- ▶ Turn cover **2** (▷ page 717) counterclockwise and remove it.
- ▶ Turn bulb holder **①** counterclockwise until it disengages.
- ▶ Take out bulb holder **①**.

- ▶ Take bulb out of holder.
- ▶ Insert new bulb into holder and press it all the way down.

The tab of the bulb holder must be positioned on the upper left-hand side and wire **②** must point upward and to the right for the left headlamp, downward and to the left for the right headlamp.

- ▶ Turn bulb holder clockwise until it engages and grip **③** is in a horizontal position.

IR emitter\*




- ① Bulb holder
- ② Wire position

- ▶ Turn cover **2** (▷ page 717) counterclockwise and remove it.
- ▶ Turn bulb holder ① counterclockwise until it disengages.
- ▶ Take out bulb holder ①.
- ▶ Press both catches on left and right sides of bulb holder ① and take bulb out of holder.
- ▶ Insert new bulb into holder until it engages.

- ▶ Insert bulb holder ① into guide in headlamp. Wire ② must point downward and to the right.
- ▶ Turn bulb holder ① clockwise until it engages and wire ② points downward and to the left.

Corner-illuminating lamp

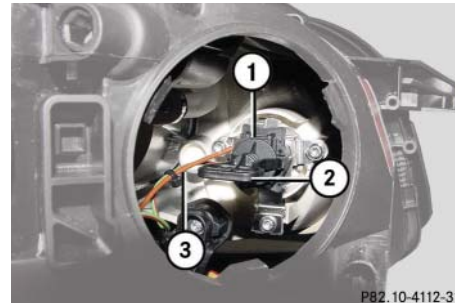

- ① Bulb holder
- ② Grip
- ③ Wire position

- ▶ Turn cover **3** (▷ page 717) counterclockwise and remove it.
  - ▶ Turn bulb holder ① counterclockwise until it disengages.
  - ▶ Take out bulb holder ①.
  - ▶ Take bulb out of holder.
  - ▶ Insert new bulb into holder and press it all the way down.
  - ▶ Insert bulb holder ① into guide in headlamp.
- The tab of the bulb holder must be positioned on the upper left-hand side and wire ③ must point downward and to the left for the left headlamp, upward and to the right for the right headlamp.
- ▶ Turn bulb holder ① clockwise until it engages and grip ② is in a horizontal position.



## Practical hints

### Replacing bulbs

#### **Additional turn signal lamp bulbs**

The additional turn signal lamps in the exterior rear view mirrors have LEDs.

If a malfunction occurs or LEDs fail to function, the entire turn signal unit must be replaced. Have the turn signal unit replaced by an authorized Mercedes-Benz Center.

#### **Front side marker lamp bulbs**

Since replacing the side marker lamp bulbs is a technically highly demanding process, we recommend you have the side marker lamp bulbs replaced by an authorized Mercedes-Benz Center.

▼ Replacing wiper blades

**Warning!**



For safety reasons, switch off wipers and remove SmartKey from starter switch (vehicles with KEYLESS-GO\*: Make sure the vehicle's on-board electronics have status **0**) before replacing a wiper blade. Otherwise, the wiper motor could suddenly turn on and cause injury.

**Warning!**



Wiper blades are components that are subject to wear and tear. Replace the wiper blades twice a year, preferably in the spring and fall. Otherwise the front window will not be properly wiped. As a result, you may not be able to observe surrounding traffic conditions and could cause an accident.

**!** To avoid damage to the hood:

- The wiper arms should only be folded forward when in the vertical position.
- Never open the hood when the wiper arm is folded forward.

**!** Hold on to the wiper when folding the wiper arm back. If released, the force of the impact from the tensioning spring could crack the windshield.

*Do not allow the wiper arms to contact the windshield glass without a wiper blade inserted.*

*For your convenience, we recommend that you have this work carried out by an authorized Mercedes-Benz Center.*


Placing wiper arms in vertical position



Wiper blades in vertical position

- ▶ Make sure the hood is fully closed.


Vehicles with SmartKey

- ▶ Turn SmartKey in starter switch position **1**.
- ▶ Turn combination switch to wiper setting  (> page 408).
- ▶ With wiper arm in vertical position, turn the SmartKey in starter switch to position **0**.

## Practical hints

### Replacing wiper blades


#### Vehicles with KEYLESS-GO\*

- ▶ Make sure the vehicle's on-board electronics have status 1 (▷ page 372).
- ▶ Turn combination switch to wiper setting  (▷ page 408).
- ▶ Press KEYLESS-GO start/stop button repeatedly until windshield wipers start.
- ▶ Press KEYLESS-GO start/stop button when the wiper arms are in a vertical position.

#### Removing wiper blades

**!** Do not pull on the wiper blade inserts. They could tear.

- ▶ Fold the wiper arm forward until it snaps into place.

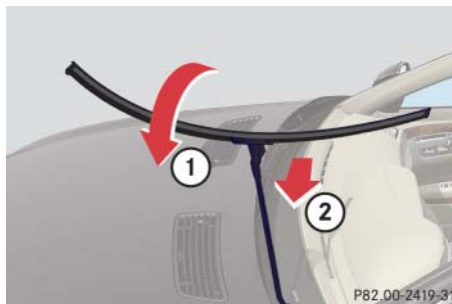

- ▶ Turn the wiper blade at a right angle to wiper arm (arrow ①).
- ▶ Slide the wiper blade sideways out of the retainer in the direction of arrow ②.

#### Installing wiper blades


- ▶ Slide the wiper blade onto wiper arm until it locks in place.
- ▶ Rotate the wiper blade into position parallel to wiper arm.
- ▶ Fold the wiper arm backward to rest on the windshield. Make sure you hold onto the wiper when folding the wiper arm back.

**!** Make certain that the wiper blades are properly installed. Improperly installed wiper blades may cause windshield damage.

▼ Flat tire

**Preparing the vehicle**

- ▶ Park the vehicle in a safe distance from moving traffic on a hard, flat surface when possible.
- ▶ Turn on the hazard warning flasher (▷ page 405).
- ▶ Turn the steering wheel so that the front wheels are in a straight ahead position.
- ▶ Shift the automatic transmission to park position **P**.
- ▶ Engage the electronic parking brake.
- ▶ Turn off the engine.
- ▶ Have any passenger exit the vehicle at a safe distance from the roadway.

 *Open the door only when conditions are safe to do so.*

- ▶ Vehicles with SmartKey: Remove the SmartKey from the starter switch.

Vehicles with KEYLESS-GO\*: Open the driver's door (this puts the starter switch in position **0**, same as with the SmartKey removed from the starter switch). The driver's door then can be closed again.

- ▶ Remove the KEYLESS-GO\* start/stop button from the starter switch.

**Mounting the spare wheel**

**Warning!**



The dimensions of the spare wheel are different from those of the road wheels. As a result, the vehicle handling characteristics change when driving with a spare wheel mounted. Adapt your driving style accordingly.

The spare wheel is for temporary use only. When driving with spare wheel mounted, ensure proper tire inflation pressure and do not exceed a vehicle speed of 50 mph (80 km/h).

Contact the nearest Mercedes-Benz Center as soon as possible to have the spare wheel replaced with a regular road wheel.

Never operate the vehicle with more than one spare wheel mounted.

Do not switch off the ESP® when a spare wheel is mounted.

## Practical hints

### Flat tire

#### Preparing the vehicle

- ▶ Prepare the vehicle as described (▷ page 723).
- ▶ Take vehicle tool kit tray and vehicle jack out of trunk (▷ page 705).
- ▶ Take the spare wheel from the wheel well under the trunk floor (▷ page 707).

#### Lifting the vehicle

##### Warning!



The jack is designed exclusively for jacking up the vehicle at the jack take-up brackets built into both sides of the vehicle. To help avoid personal injury, use the jack only to lift the vehicle during a wheel change. Never get beneath the vehicle while it is supported by the jack. Keep hands and feet away from the area under the lifted vehicle. Always engage the electronic parking brake and block wheels before raising vehicle with jack.

Do not disengage electronic parking brake while the vehicle is raised. Be certain that the jack is always vertical (plumb line) when in use, especially on hills. Always try to use the jack on level surface.

Make sure the jack arm is fully seated in the jack take-up bracket. Always lower the vehicle onto sufficient capacity jackstands before working under the vehicle.

- ▶ Prevent the vehicle from rolling away by blocking wheels with wheel chocks or other sizeable objects.


One wheel chock is included with the vehicle tool kit (▷ page 707).

When changing wheel on a level surface:

- ▶ Place the wheel chock in front of and another sizeable object behind the wheel that is diagonally opposite to the wheel being changed.

Always try lifting the vehicle using the jack on a level surface. However, should circumstances require you to do so on a hill, place the wheel chock and another sizeable object as follows:

- ▶ Place the wheel chock and another sizeable object on the downhill side blocking both wheels on the side of the vehicle not being worked on.

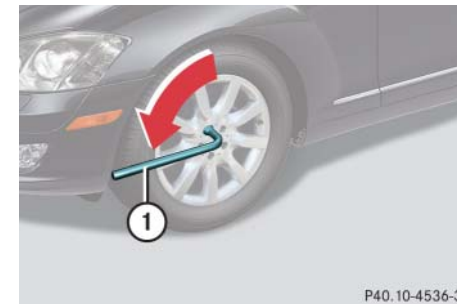


P40.10-4536-31

- ▶ Wheel wrench
- ▶ On wheel to be changed, loosen but do not yet remove the wheel bolts (approximately one full turn with wrench ①).

## Practical hints


### Flat tire

The jack take-up brackets are located directly behind the front wheel housings and in front of the rear wheel housings.

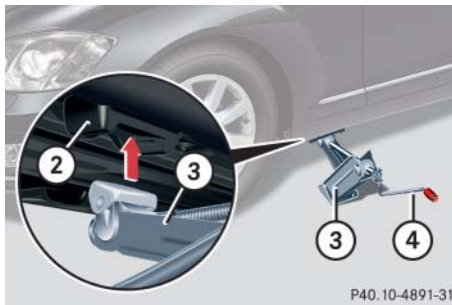

- ② Jack take-up bracket
- ③ Jack
- ④ Crank

- ▶ Place jack ② on firm ground.
- ▶ Position jack ③ under take-up bracket ② so that it is always vertical (plumb-line) as seen from the side, even if the vehicle is parked on an incline.

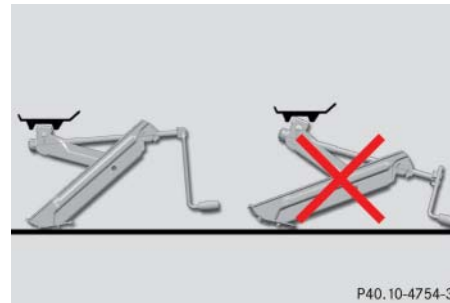

- ▶ Turn crank ④ clockwise until jack ③ is fully seated in take-up bracket ② and the jack base evenly meets the ground.
- ▶ Jack up the vehicle until the wheel is a maximum of 1.2 in (3 cm) from the ground. Never start engine while vehicle is raised.

#### Warning!



Position the jack only on the jack take-up brackets designed for this purpose. If the jack is not properly positioned, the vehicle may fall off the jack and cause serious personal injury or damage to the vehicle.

#### Warning!



The jack is intended only for lifting the vehicle briefly for wheel changes. It is not suited for performing maintenance work under the vehicle.

- Never start the engine when the vehicle is raised.
- Never lie down under the raised vehicle.

## Practical hints

### Flat tire

#### Removing the wheel



#### ① Alignment bolt

- ▶ Unscrew upper-most wheel bolt and remove.
- ▶ Replace this wheel bolt with alignment bolt ① supplied in the tool kit.
- ▶ Remove the remaining bolts.

**!** Do not place wheel bolts in sand or dirt. This could result in damage to the bolt and wheel hub threads.

- ▶ Remove the wheel.

#### Attaching the spare wheel

#### Warning!



Always replace wheel bolts that are damaged or rusted.

Never apply oil or grease to wheel bolts.

Damaged wheel hub threads should be repaired immediately. Do not continue to drive under these circumstances! Contact an authorized Mercedes-Benz Center or call Roadside Assistance.


Incorrect wheel bolts or improperly tightened wheel bolts can cause the wheel to come off. This could cause an accident. Make sure you are using the correct wheel bolts.

#### Warning!



Only use Genuine Mercedes-Benz wheel bolts. Other wheel bolts may come loose.

Do not tighten the wheel bolts when the vehicle is raised. Otherwise the vehicle could fall off the jack.

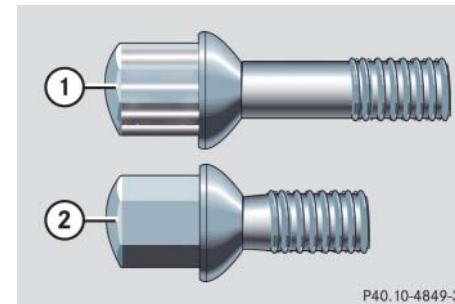

- ① Wheel bolt for light alloy rims and Minispare wheel with light alloy rim
- ② Wheel bolt for Minispare wheel with steel rim (located in trunk with spare wheel)

**!** Wheel bolts ② must be used when mounting a Minispare wheel with steel rim. The use of any wheel bolts other than wheel bolts ② for a Minispare wheel with steel rim will physically damage the vehicle's brakes.

Wheel bolts ① must be used when mounting a Minispare wheel with light alloy rim. The use of any wheel bolts other than wheel bolts ① for a Minispare wheel with light alloy rim will physically damage the vehicle's brakes.

**Warning!**



Make sure to use the original length wheel bolts when remounting the original wheel after it has been repaired.

- ▶ Clean contact surfaces of wheel and wheel hub.




- ▶ Guide the spare wheel onto the alignment bolt and push it on.

**!** To avoid paint damage, place wheel flat against hub and hold it there while installing first wheel bolt.

- ▶ Insert wheel bolts and tighten them slightly.
- ▶ Unscrew the alignment bolt, install the last wheel bolt and tighten slightly.

**Lowering the vehicle**

- ▶ Lower vehicle by turning crank counterclockwise until vehicle is resting fully on its own weight.
- ▶ Remove the jack.

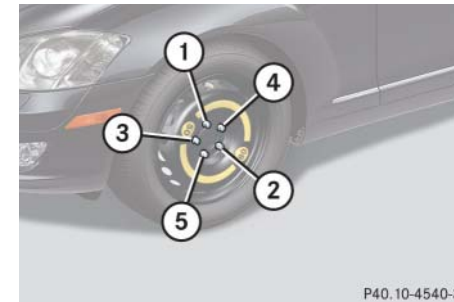


① - ⑤ Wheel bolts



## Practical hints

### Flat tire

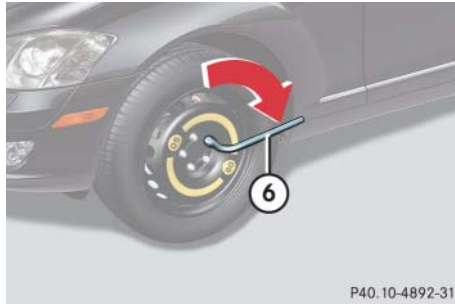

⑥ Wheel wrench

- ▶ Tighten the five wheel bolts evenly, following the diagonal sequence illustrated (① to ⑤), until all bolts are tight. Observe a tightening torque of 110 lb-ft (150 Nm).

### Warning!



Have the tightening torque checked after changing a wheel. The wheels could come loose if they are not tightened to a torque of 110 lb-ft (150 Nm).

- ▶ Fully collapse the jack, with handle folded in (storage position), (▷ page 706).
- ▶ Store the jack and the other vehicle tools in the designated storage space underneath the trunk floor (▷ page 705).

**i** *Vehicles with Advanced TPMS:  
Do not activate the tire inflation pressure monitor until a full size wheel/tire with functioning sensor has been placed back into service on the vehicle.*

▼ **Batteries**

Your vehicle is equipped with two batteries:

- The starter battery, located in the engine compartment
- The battery for electrical consumers (consumer battery), located in the trunk

**!** *Do not tow-start the vehicle.*

The batteries should always be sufficiently charged in order to achieve its rated service life. Refer to Maintenance Booklet for battery maintenance intervals.

If you use your vehicle mostly for short-distance trips, you will need to have the battery charge checked more frequently.

When replacing the batteries, always use batteries approved by Mercedes-Benz.

If you do not intend to operate your vehicle for an extended period of time, consult an authorized Mercedes-Benz Center about steps you need to observe.

**Warning!**



Observe all safety instructions and precautions when handling automotive batteries.



Risk of explosion.



Fire, open flames and smoking are prohibited when handling batteries. Avoid creating sparks.



Battery acid is caustic. Do not allow it to come into contact with skin, eyes or clothing.

Wear suitable protective clothing, especially gloves, apron and faceguard.



Wear eye protection.

Rinse any acid spills immediately with clear water. Contact a physician if necessary.



Keep children away.



Follow the instructions in this Operator's Manual.

Batteries contain materials that can harm the environment if disposed of improperly. Large 12-volt storage batteries contain lead. Recycling of batteries is the preferred method of disposal. Many states require sellers of batteries to accept old batteries for recycling.

## Practical hints

### Batteries

**!** *The consumer battery located in the trunk is a valve-regulated lead acid (VRLA) battery, also referred to as “fleece” battery. Such batteries do not require topping-up of the electrolyte level. VRLA batteries therefore do not have cell caps and the battery cover is non-removable. Do not attempt to open the consumer battery as otherwise the battery will be damaged.*

*Even though VRLA batteries do not require topping-up of the electrolyte level and cannot be opened to check the electrolyte level, the battery condition must be checked periodically by performing a battery conductance test. Refer to Maintenance Booklet for battery condition testing intervals.*

*As with any other battery, disconnect the consumer battery if you do not intend to operate your vehicle for an extended period of time to prevent battery discharge or connect an accessory battery charge unit expressly approved by Mercedes-Benz for your vehicle model to maintain the battery charge. Contact an authorized Mercedes-Benz Center for further information.*

**!** *The factory-equipped VRLA battery is leak-proofed. Only use a battery as replacement that has the same security features and is of identical size, voltage, and capacity as the factory-equipped battery.*

*The battery, the battery ventilation and the lateral plug must always be securely installed when the vehicle is in operation.*

#### Warning!



Failure to follow these instructions can result in severe injury or death.

Never lean over batteries while connecting, you might get injured.

Battery fluid contains sulfuric acid. Do not allow this fluid to come in contact with eyes, skin or clothing. In case it does, immediately flush affected area with water and seek medical help if necessary.

A battery will also produce hydrogen gas, which is flammable and explosive. Keep flames or sparks away from battery, avoid improper connection of jumper cables, smoking, etc.

#### Warning!



Do not place metal objects on the battery as this could result in a short circuit.

Use leak-proof battery only to avoid the risk of acid burns in the event of an accident.

Take care that you do not become statically charged, e.g. by wearing synthetic clothing or rubbing against textiles. For this reason, you also should not pull or push the battery over carpets or other synthetic materials.

Never touch the battery first. First touch the outside body of the vehicle in order to release any possible electrostatic charges.

Do not rub the battery with rags or cloths. The battery could explode if touched due to electrostatic charge or due to spark formation.


**!** Switch off the engine and switch off the vehicle's internal electrical functions (▷ page 732) before you disconnect or remove the battery's terminal clamps. You could otherwise destroy electronic assemblies such as the generator.

Have the battery checked regularly by an authorized Mercedes-Benz Center. Refer to Maintenance Booklet for maintenance intervals or contact an authorized Mercedes-Benz Center for further information.

**!** Do not connect any consumers directly to the starter battery. The starter battery will otherwise be discharged.

**i** Only replace a discharged battery with a battery recommended by Mercedes-Benz. The consumer battery is installed in the trunk in such a way that it is safeguarded as much as possible against mechanical destruction in the event of an accident.

**i** Remove SmartKey from starter switch (vehicles with KEYLESS-GO\*: Make sure the vehicle's on-board electronics have status 0) (▷ page 370) when you turn off the engine and no longer require any electrical consumers. The vehicle then uses very little power and the consumer battery is spared.

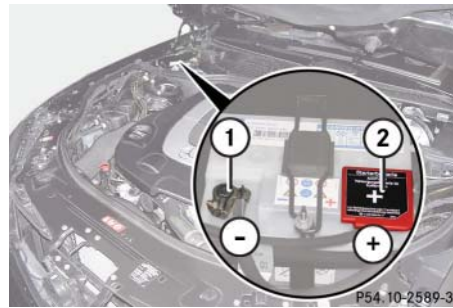

**Starter battery (example illustration from S 550)**

- ① Negative terminal
- ② Positive terminal

**i** If the consumer battery is discharged, you must use the mechanical key to unlock the vehicle (▷ page 708). Since the vehicle has a separate starter battery, however, you can still start the vehicle.

#### Disconnecting starter battery

**!** Always disconnect the starter battery in the order described below. You could otherwise damage the vehicle's electronics.

**!** Switch off the vehicle's internal electrical functions before disconnecting the starter battery. If the vehicle is stationary for more than one hour with the SmartKey removed, you do not need to switch off the vehicle's internal electrical functions.

- ▶ Secure vehicle in place with electronic parking brake (▷ page 422).
- ▶ Shift the automatic transmission to park position **P** (▷ page 426).

## Practical hints

### Batteries

#### Switching off vehicle's internal electrical functions

**i** Vehicles with KEYLESS-GO: remove the KEYLESS-GO button (▷ page 371) and use the SmartKey with KEYLESS-GO like a normal SmartKey.

- ▶ Turn off all electrical consumers.
- ▶ Turn SmartKey in starter switch to position **0**.
- ▶ Turn SmartKey in starter switch to position **1**.
- ▶ Wait for 30 seconds.

The vehicle's internal electrical functions are switched off.

- ▶ Turn SmartKey in starter switch to position **0**.

**!** Do not remove the SmartKey!

#### Disconnecting starter battery

- ▶ Open the hood (▷ page 573).
- ▶ Use a 10-mm open-end wrench to disconnect the battery negative lead.
- ▶ Remove cover ② (▷ page 731) from the positive terminal.
- ▶ Disconnect the battery positive lead.

#### Removing starter battery

**i** For your convenience, have the starter battery removed by a Mercedes-Benz Center.

- ▶ Pull out the battery ventilation hose from the battery (depending on battery arrangement in your vehicle model, the ventilation hose is located either on the left or right side of the battery).
- ▶ Fold bar on starter battery up.
- ▶ Take out the starter battery.

#### Charging battery

##### Warning!



Never charge a battery while still installed in the vehicle unless the accessory battery charge unit approved by Mercedes-Benz is being used. Gases may escape during charging and cause explosions that may result in paint damage, corrosion or personal injury.

An accessory battery charge unit specially adapted for Mercedes-Benz vehicles and tested and approved by Mercedes-Benz is available, permitting the charging of the battery in its installed position. Contact an authorized Mercedes-Benz Center for information and availability. Charge battery in accordance with the separate instructions for the accessory battery charger.

**i** Have the batteries charged by a Mercedes-Benz Center. If you charge the batteries yourself, follow the operating instructions for your charging device.

**!** Only use charging devices with a maximum charging voltage of 14.8 V.

### Starter battery

**Warning!**



During the charge procedure, there is a risk of acid burns due to gases escaping from the battery. Do not bend over the battery during the charge procedure.

- ▶ Connect the switched-off charging device to the terminals of the starter battery. Observe the operating instructions in the manual for the charging device while doing so.

### Reinstalling starter battery

- ▶ Install starter battery in engine compartment.
- ▶ Swing retaining bar down.

**!** The battery and the battery ventilation hose must always be securely installed when the vehicle is in operation.

### Reconnecting starter battery

**!** Always connect the starter battery in the order described below. Otherwise, the vehicle's electronics could be damaged.

**Warning!**



Do not drive without a properly installed and connected consumer battery.

Have any work on the consumer battery carried out by an authorized Mercedes-Benz Center.

- ▶ Make sure that the consumer battery in the trunk is correctly installed and connected.
- ▶ Turn SmartKey in starter switch to position **0** and remove.
- ▶ Connect the positive lead and fasten its cover ② (▷ page 731).
- ▶ Connect negative lead ① (▷ page 731).
- ▶ Attach ventilation tube.
- !** Never invert the terminal connections.
- !** Make sure that the battery has a plug where the ventilation tube is attached to it.
- ▶ Switch on the ignition (▷ page 370).
- ▶ Start the engine (▷ page 416).
- ▶ Check vehicle functions.

## Practical hints

### Jump starting

#### Warning!



Failure to follow these directions will cause damage to the electronic components, and can lead to a battery explosion and severe injury or death.

Never lean over batteries while connecting or jump starting, you might get injured.

Battery fluid contains sulfuric acid. Do not allow this fluid to come in contact with eyes, skin or clothing. In case it does, immediately flush affected area with water, and seek medical help if necessary.

A battery will also produce hydrogen gas, which is flammable and very explosive. Keep flames or sparks away from battery, avoid improper connection of jumper cables, smoking, etc.

Attempting to jump start a frozen battery can result in it exploding, causing personal injury.

Read all instructions before proceeding.

**!** Do not tow-start the vehicle.

**!** Jump starting should only be performed on the starter battery installed in the engine compartment.

*Avoid repeated and lengthy starting attempts.*

*Do not attempt to start the engine using a battery quick charge unit.*

*If engine does not run after several unsuccessful starting attempts, have it checked at the nearest authorized Mercedes-Benz Center.*

*Excessive unburned fuel generated by repeated failed starting attempts may damage the catalytic converter and may present a fire risk.*

*Make sure the jumper cables do not have loose or missing insulation.*

*Make sure the cable clamps do not touch any other metal part while the other end is still attached to a battery.*

If the starter battery is discharged, the engine can be started with jumper cables and the battery of another vehicle. Observe the following:

- Jump starting should only be performed when the engine and catalytic converter are cold.
- Do not start the engine if the battery is frozen. Let the battery thaw out first.
- Only use 12-volt battery to jump start your vehicle. Jump starting with a higher voltage battery could damage the vehicle's electrical system, which will not be covered by the Mercedes-Benz Limited Warranty.
- Only use jumper cables with sufficient cross-section and insulated terminal clamps.
- Always make sure that the jumper cables are not on or near pulleys, fans or other parts that move when an engine is started or running.

## Practical hints

### Jump starting

#### Warning!




Keep flames or sparks away from battery.  
Do not smoke.

Observe all safety instructions and precautions when handling automotive batteries (▷ page 729).

Jump starting should only be performed on the starter battery. The starter battery is located in the engine compartment on the passenger side (▷ page 731).

**i** Vehicles with KEYLESS-GO\*: remove the KEYLESS-GO button (▷ page 371) and use the SmartKey with KEYLESS-GO like a normal SmartKey.

- ▶ Make sure the two vehicles do not touch.
- ▶ Secure vehicle in place with electronic parking brake (▷ page 422).
- ▶ Shift the automatic transmission to park position **P** (▷ page 426).
- ▶ Turn off all electrical consumers, except hazard warning flashers or work lights.
- ▶ Open the hood (▷ page 573).
- ▶ Start the engine of the vehicle with the charged battery and run at idle speed.

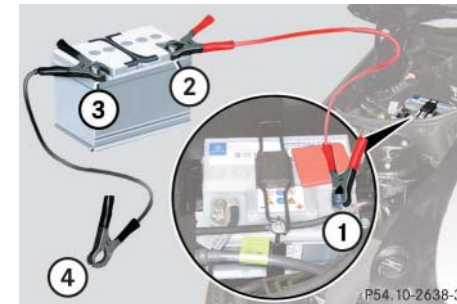

- ① Positive terminal of your vehicle's battery
- ② Positive terminal of other vehicle's battery
- ③ Negative terminal of other vehicle's battery
- ④ Negative clamp





## Practical hints

### Jump starting

- ▷▷▶ Remove red cover from positive terminal ①.
- ▶ Connect positive terminal ② of the charged battery with positive terminal ① of the discharged battery with the jumper cable. Clamp cable to charged battery ② first.
- ! *Never invert the terminal connections.*
- ▶ Connect negative terminal ③ of charged battery to jumper cables and attach other end ④ to a suitable ground point on the vehicle.
- ▶ Get into vehicle and start engine within 30 seconds.
- If the starting attempt does not succeed:
  - ▶ Turn the SmartKey in starter switch to position 0.
  - ▶ Take out the SmartKey.
  - ▶ Turn off engine of donor vehicle, restart it and let it run at idle speed for several minutes.
  - ▶ Disconnect the jumper cable during this time.
  - ▶ Reconnect jumper cable as described before.
  - ▶ Restart engine.
- ▶ While the engine is running, switch off several electrical consumers such as the blower.
- ▶ Disconnect jumper cables first from ground point ④ and negative terminal ③, then from positive terminals ① and ②.
- ▶ Have the battery checked at the nearest authorized Mercedes-Benz Center.

### ▼ Towing the vehicle

Mercedes-Benz recommends that the vehicle be transported with all wheels off the ground using flatbed or appropriate wheel lift/dolly equipment. This method is preferable to other types of towing.

**!** *To prevent damage during transport, do not tie down vehicle by its chassis or suspension parts.*

When circumstances do not permit the recommended towing methods, the vehicle may be towed with all wheels on the ground or front wheels raised (except vehicles with 4MATIC) only so far as necessary to have the vehicle moved to a safe location where the recommended towing methods can be employed.

**!** *Before towing the vehicle observe the following instructions:*

- *Do not tow-start the vehicle.*
- *Use flatbed or wheel lift/dolly equipment with the ignition switched off.*
- *Do not tow with sling-type equipment. Towing with sling-type equipment over bumpy roads will damage radiator and supports.*
- *Towing of the vehicle should only be done using the properly installed towing eye bolt. Never attach a tow cable, tow rope or tow rod to the vehicle chassis, frame or suspension parts. For more information see "Installing towing eye bolt" (▷ page 740).*

**i** *If the battery is disconnected or discharged*

- *the SmartKey will not turn in the starter switch*
- *the automatic transmission will remain locked in park position P.*

*For more information see "Batteries" (▷ page 729) or "Jump starting" (▷ page 734).*

## Practical hints

### Towing the vehicle

#### Towing with front wheels raised

**!** Vehicles with 4MATIC:

Do not tow with one axle raised. Doing so could damage the transfer case, which is not covered by the Mercedes-Benz Limited Warranty.

All wheels must be on or off the ground. Observe instructions for towing the vehicle with all wheels on the ground (▷ page 739).

#### Warning!



When leaving the SmartKey or SmartKey with KEYLESS-GO\* in the starter switch, do not leave children unattended in the vehicle. It is possible for children to switch on the ignition which could result in unsupervised use of vehicle equipment. Unsupervised use of vehicle equipment could result in an accident and/or serious personal injury.

- ▶ Vehicles with KEYLESS-GO\*: Remove the KEYLESS-GO start/stop button from the starter switch (▷ page 371).
- ▶ Insert the SmartKey into the starter switch.
- ▶ Switch on the ignition.
- ▶ Switch off the automatic central locking (▷ page 267).
- ▶ Depress the brake pedal.
- ▶ Shift the automatic transmission to neutral position **N**.
- ▶ If engaged, manually release the electronic parking brake.
- ▶ Switch off the ignition and leave the SmartKey in the starter switch.

**!** Keep in mind that it is important for the SmartKey to be left in starter switch with the ignition switched off. As soon as the SmartKey is removed from the starter switch the automatic transmission will shift to park position **P**.

**!** Make sure that the ignition is switched off. If the starter switch is in position **2**, active braking action through the ESP® may otherwise seriously damage the brake system.

**!** The vehicle may be towed only for distances up to 30 miles (50 km) and at a speed not to exceed 30 mph (50 km/h).

**Towing with all wheels on the ground**

**Warning!**



If circumstances require towing the vehicle with all wheels on the ground, always tow with a tow bar if:

- the engine will not run
- there is a malfunction in the brake system
- there is a malfunction in the power supply or in the vehicle's electrical system

This is necessary to adequately control the towed vehicle.

Prior to towing the vehicle with all wheels on the ground, make certain the SmartKey is in starter switch position **2**.

**Warning!**



With the engine not running, there is no power assistance for the brake and steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle. Adapt your driving accordingly.

- ▶ Switch on the ignition.
- ▶ Shift the automatic transmission to neutral position **N**.
- ▶ If engaged, manually release the electronic parking brake.

**!** *Keep in mind that it is important to have the ignition switched on. As soon as the SmartKey is removed from the starter switch or the SmartKey with KEYLESS-GO\* is removed from the vehicle, the automatic transmission will shift to park position **P**.*

**!** *The vehicle may be towed only for distances up to 30 miles (50 km) and at a speed not to exceed 30 mph (50 km/h).*

**i** *To signal turns while being towed with the hazard warning flasher in use, the ignition must be switched on. You can then activate the combination switch for the left or right turn signal in the usual manner – only the selected turn signal will operate.*

*Upon canceling the turn signal, the hazard warning flasher will operate again.*


## Practical hints

### Towing the vehicle

#### Installing towing eye bolt



① Cover on right side of front bumper

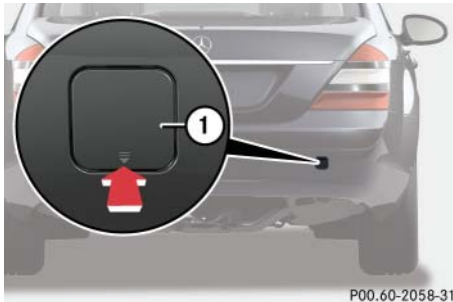

① Cover on right side of rear bumper

#### Removing cover

- ▶ Press mark on cover ① in the direction of arrow.
- ▶ Lift cover off to reveal the threaded hole for towing eye bolt.

#### Installing towing eye bolt

- ▶ Take towing eye bolt and wheel wrench out of the vehicle tool kit in the trunk (▷ page 705).
- ▶ Screw towing eye bolt clockwise into its stop and tighten with wheel wrench.

#### Removing towing eye bolt

- ▶ Loosen towing eye bolt counterclockwise with wheel wrench.
- ▶ Unscrew towing eye bolt.
- ▶ Store towing eye bolt and wheel wrench in the vehicle tool kit in the trunk.

#### Installing cover

- ▶ Fit cover ① and snap into place.

### ▼ Fuses

The electrical fuses in your vehicle serve to switch off malfunctioning power circuits.

If a fuse is blown, the component(s) and systems secured by that fuse will stop operating.

#### Warning!



Only use fuses approved by Mercedes-Benz with the specified amperage for the system in question and do not attempt to repair or bridge a blown fuse. Using other than approved fuses or using repaired or bridged fuses may cause an overload leading to a fire, and/or cause damage to electrical components and/or systems. Have the cause determined and remedied by an authorized Mercedes-Benz Center.

**!** Switch off the vehicle's internal electrical functions (▷ page 732) when you are working on the fuses.

**i** A blown fuse must be replaced by an appropriate spare fuse (recognizable by its color or the fuse rating given on the fuse) of the amperage recommended in the fuse chart. Any Mercedes-Benz Center will be glad to advise you on this subject.

If a newly inserted fuse blows again, have the cause determined and rectified by an authorized Mercedes-Benz Center.

A fuse chart explains the fuse allocation and fuse amperages. It is located in the trunk with the vehicle tool kit (▷ page 705).

**i** In case of a blown fuse contact Roadside Assistance or an authorized Mercedes-Benz Center.

The electrical fuses are located in different fuse boxes:

- in the dashboard on the passenger side (▷ page 743)
- in the dashboard on the driver's side (▷ page 743)
- behind the rear center armrest (▷ page 744)
- on the driver's side of the engine compartment (▷ page 742)
- on the passenger side of the engine compartment (▷ page 743)

## Practical hints

### Fuses


Before replacing fuses:

- ▶ Engage the electronic parking brake (▷ page 422).
- ▶ Make sure the automatic transmission is set to park position **P** (▷ page 426).  
The gear position indicator in the multi-function display should be on park position **P**.
- ▶ Turn off all electrical consumers.
- ▶ Turn off the engine (▷ page 424).
- ▶ Switch off the vehicle's internal electrical functions (▷ page 732).

### Fuse boxes in engine compartment

- ▶ Open the hood (▷ page 573).

### Box on the driver's side

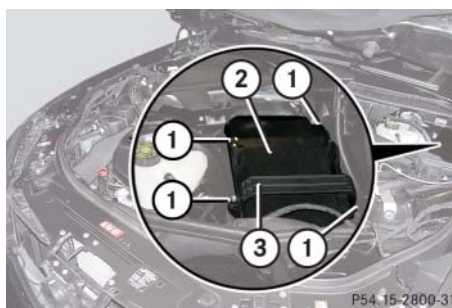

### Example illustration from S 550

- ① 4 screws
- ② Cover
- ③ Jumper

### Opening


- ▶ Take the crank from the Operator's Manual pouch.
- ▶ Loosen screws ① with crank.
- ▶ Remove jumper ③.
- ▶ Remove cover ②.

### Closing

- ▶ Attach cover ②.
- ▶ Attach jumper ③.
- ▶ Tighten screws ① with crank.

**!** The cover must fit properly, as otherwise moisture or dirt may impair the functionality of the fuses.

#### Box on the front passenger side

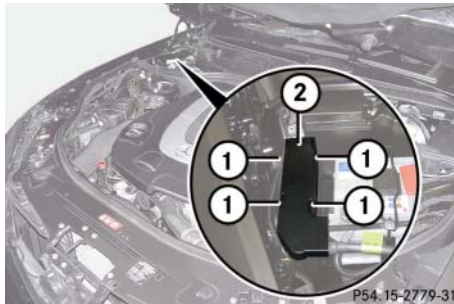

#### Example illustration from S 550

- ① Retaining lugs
- ② Cover

#### Opening

- ▶ Press retaining lugs ①.
- ▶ Remove cover ②.

#### Closing


- ▶ Attach cover ②.
- ▶ Press cover ② down manually.

**!** The cover must fit properly, as otherwise moisture or dirt may impair the functionality of the fuses.


#### Fuse boxes in passenger compartment

**!** Do not use sharp objects such as a screw driver to open the fuse box cover in the dashboard, as this could damage it.

#### Fuse boxes in dashboard

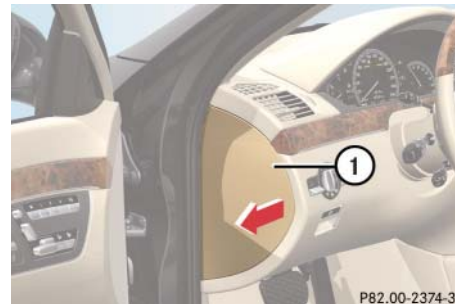

- ① Cover

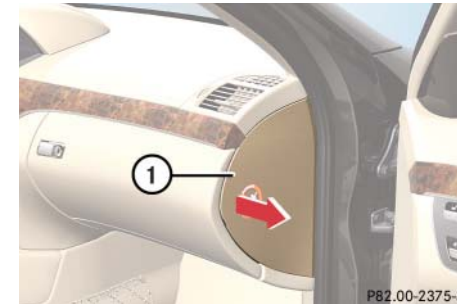

- ① Cover

#### Opening

- ▶ Open the respective door.
- ▶ Using your hands, pull cover ① in the direction of the arrow and remove.

#### Closing


- ▶ Hook cover ① into the opening at the front.
- ▶ Press cover ① back on until it engages.



## Practical hints

### Fuses

#### Fuse box in the rear passenger compartment

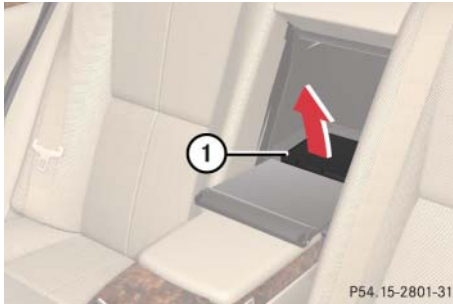

① Cover

#### Opening

- ▶ Swing down center armrest.
- ▶ Open cover behind center armrest.
- ▶ Pull cover ① forward in direction of arrow.

#### Closing

- ▶ Press cover ① backward and engage.

**!** Make sure that the seal in the cover is not damaged during opening or closing.

#### Emergency engine shut-down

If the engine cannot be turned off as described in the “Turning off the engine” section (▷ page 424), you may use the following emergency procedure.

- ▶ Take the fuse chart and the fuse extractor from the vehicle tool kit (▷ page 705).
- ▶ Find row “Emergency engine shut-down” in the fuse chart table to identify the fuses that have to be removed as well as their locations.
- ▶ Remove the respective fuses.

## Technical data

**Parts service**

**Warranty coverage**

**Identification labels**

**Layout of poly-V-belt drive**

**Engine**

**Rims and tires**

**Electrical system**

**Main dimensions and weights**

**Fuels, coolants, lubricants, etc.**



## Technical data

### Parts service

The “Technical data” section provides the necessary technical data for your vehicle.

All authorized Mercedes-Benz Centers maintain a stock of Genuine Mercedes-Benz Parts required for maintenance and repair work. In addition, strategically located parts distribution centers provide quick and reliable parts service.

More than 300 000 different parts for Mercedes-Benz models are available.

Genuine Mercedes-Benz Parts are subjected to stringent quality inspections. Each part has been specifically developed, manufactured or selected for and adapted to Mercedes-Benz vehicles.

Therefore, Genuine Mercedes-Benz parts should be installed.

**!** *The use of non-genuine Mercedes-Benz parts and accessories not authorized by Mercedes-Benz could damage the vehicle, which is not covered by the Mercedes-Benz Limited Warranty, or could compromise the vehicle's durability or safety.*

▼ **Warranty coverage**

Your vehicle is covered under the terms of the warranties printed in the Service and Warranty Information booklet. Your authorized Mercedes-Benz Center will exchange or repair any defective parts originally installed on the vehicle in accordance with the terms of the following warranties:

- New Vehicle Limited Warranty
- Emission System Warranty
- Emission Performance Warranty
- California, Maine, Massachusetts, and Vermont Emission Control Systems Warranty

Replacement parts and accessories are covered by the Mercedes-Benz Parts and Accessories warranties, copies of which are available at any authorized Mercedes-Benz Center.

**Loss of Service and Warranty Information Booklet**

---

Should you lose your Service and Warranty Information booklet, have an authorized Mercedes-Benz Center arrange for a replacement. It will be mailed to you.

## Technical data


### Identification labels



① Certification label (on driver's B-pillar)


The Vehicle Identification Number (VIN) can be found in the following locations:

- on the certification label
- embossed underneath a cover in the rear center armrest
- on the lower edge of the windshield

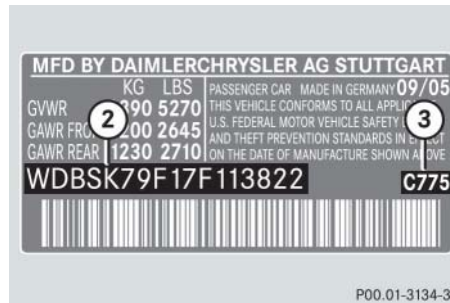

**Example certification label (U.S. vehicles)**


- ② VIN
- ③ Paintwork code

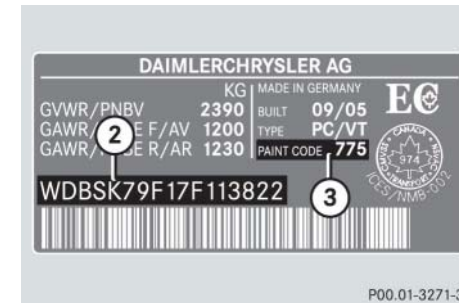

**Example certification label (Canada vehicles)**

- ② VIN
- ③ Paintwork code


**i** Data shown on certification label are for illustration purposes only. These data are specific to each vehicle and may vary from data shown in the illustration. Refer to certification label on vehicle for actual data specific to your vehicle.

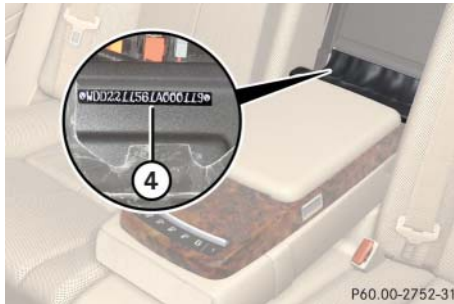

④ VIN

- Fold down rear center armrest.


VIN ④ is underneath a cover in the center armrest.

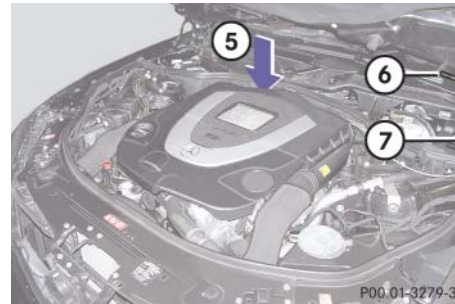

**Example illustration  
(all models except S 63 AMG and S 65 AMG)**

- ⑤ Engine number (engraved on engine)
- ⑥ VIN (lower edge of windshield)
- ⑦ Emission control information label, includes both federal and California certification exhaust emission standards

**i** When ordering parts, please specify vehicle identification and engine numbers.

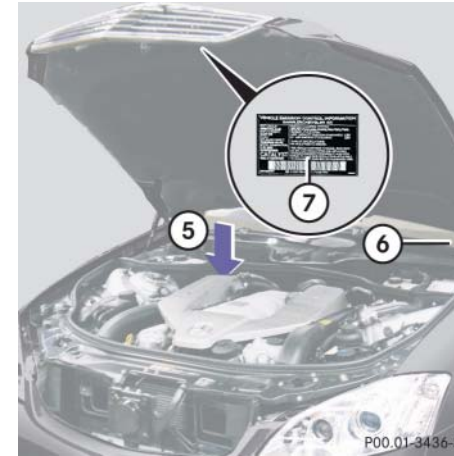


**S 63 AMG and S 65 AMG**

- ⑤ Engine number (engraved on engine)
- ⑥ VIN (lower edge of windshield)
- ⑦ Emission control information label, includes both federal and California certification exhaust emission standards

## Technical data


### Layout of poly-V-belt drive

#### S 450 4MATIC<sup>1</sup>, S 550 and S 550 4MATIC

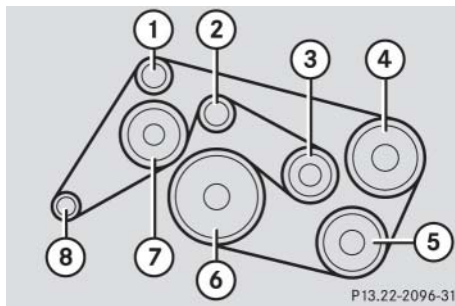


- ① Idler pulley
- ② Idler pulley
- ③ Automatic belt tensioner
- ④ Pump for power-steering assistance  
Vehicles with ABC\*: ABC\* tandem  
pump (pump for power-steering assistance and ABC\* chassis)
- ⑤ Air conditioning compressor
- ⑥ Crankshaft
- ⑦ Coolant pump
- ⑧ Generator (alternator)

#### S 63 AMG

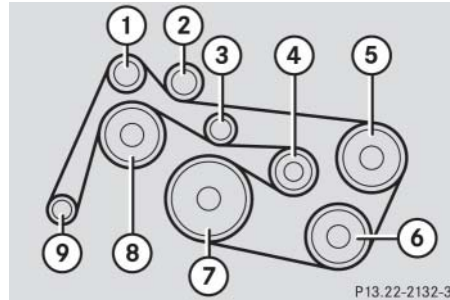

- ① Idler pulley
- ② Idler pulley
- ③ Idler pulley
- ④ Automatic belt tensioner
- ⑤ Pump for power-steering assistance
- ⑥ Air conditioning compressor
- ⑦ Crankshaft
- ⑧ Coolant pump
- ⑨ Generator (alternator)

#### S 600 and S 65 AMG

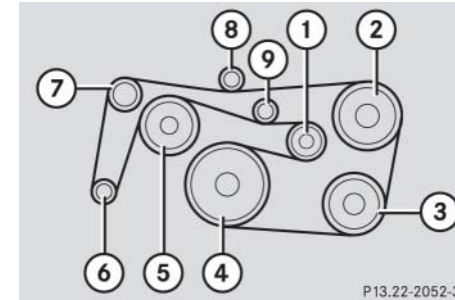

- ① Automatic belt tensioner
- ② ABC tandem pump (pump for  
power-steering assistance and ABC  
chassis)
- ③ Air conditioning compressor
- ④ Crankshaft
- ⑤ Coolant pump
- ⑥ Generator (alternator)
- ⑦ Idler pulley
- ⑧ Idler pulley
- ⑨ Idler pulley

<sup>1</sup> Canada only

## Technical data

### Engine

#### ▼ Engine

Model	S 450 4MATIC (221.184) <sup>1,2</sup>	S 550 (221.171) <sup>1</sup>
Engine	273	273
Mode of operation	4-stroke engine, gasoline injection	4-stroke engine, gasoline injection
No. of cylinders	8	8
Bore	3.66 in (92.90 mm)	3.86 in (98.00 mm)
Stroke	3.39 in (86.00 mm)	3.56 in (90.50 mm)
Total piston displacement	284.6 cu in (4 663 cm <sup>3</sup> )	333.3 cu in (5 461 cm <sup>3</sup> )
Compression ratio	10.5:1	10.7:1
Output acc. to SAE J 1349 <sup>3</sup>	335 hp/6 000 rpm (250 kW/6 000 rpm)	382 hp/6 000 rpm (285 kW/6 000 rpm)
Maximum torque acc. to SAE J 1349	391 lb-ft/2 700 - 5 000 rpm (460 Nm/2 700 - 5 000 rpm)	391 lb-ft/3 000 rpm (530 Nm/3 000 rpm)
Maximum engine speed	6 500 rpm	6 500 rpm
Firing order	1-5-4-2-6-3-7-8	1-5-4-2-6-3-7-8
Poly-V-belt	2 404 mm	2 404 mm

<sup>1</sup> The quoted data apply only to the standard vehicle. Contact an authorized Mercedes-Benz Center for the corresponding data of all special bodies and special equipment.

<sup>2</sup> Canada only

<sup>3</sup> Premium fuel required. Performance may vary with fuel octane rating.



## Technical data

### Engine

Model	S 550 4MATIC (221.186) <sup>1</sup>	S 600 (221.176) <sup>1</sup>
Engine	273	275
Mode of operation	4-stroke engine, gasoline injection	4-stroke engine, gasoline injection
No. of cylinders	8	12
Bore	3.86 in (98.00 mm)	3.23 in (82.00 mm)
Stroke	3.56 in (90.50 mm)	3.43 in (87.00 mm)
Total piston displacement	333.3 cu in (5461 cm <sup>3</sup> )	336.4 cu in (5513 cm <sup>3</sup> )
Compression ratio	10.5:1	9:1
Output acc. to SAE J 1349 <sup>2</sup>	382 hp/6000 rpm (285 kW/6000 rpm)	510 hp/5000 rpm (380 kW/5000 rpm)
Maximum torque acc. to SAE J 1349	391 lb-ft/2800 - 4800 rpm (530 Nm/2800 - 4800 rpm)	612 lb-ft/1800 - 3500 rpm (830 Nm/1800 - 3500 rpm)
Maximum engine speed	6500 rpm	5950 rpm
Firing order	1-5-4-2-6-3-7-8	1-12-5-8-3-10-6-7-2-11-4-9
Poly-V-belt	2404 mm	2370 mm

<sup>1</sup> The quoted data apply only to the standard vehicle. Contact an authorized Mercedes-Benz Center for the corresponding data of all special bodies and special equipment.

<sup>2</sup> Premium fuel required. Performance may vary with fuel octane rating.

## Technical data

### Engine

Model	S 63 AMG (221.077) <sup>1</sup>	S 65 AMG (221.179) <sup>1</sup>
Engine	156	275
Mode of operation	4-stroke engine, gasoline injection	4-stroke engine, gasoline injection
No. of cylinders	8	12
Bore	4.02 in (102.20 mm)	3.25 in (82.60 mm)
Stroke	3.72 in (94.60 mm)	3.66 in (93.00 mm)
Total piston displacement	378.8 cu in (6 208 cm <sup>3</sup> )	364.9 cu in (5 980 cm <sup>3</sup> )
Compression ratio	11.3:1	9:1
Output acc. to SAE J 1349 <sup>2</sup>	518 hp/6 800 rpm (386 kW/6 800 rpm)	603 hp/4 800 - 5 100 rpm (450 kW/4 800 - 5 100 rpm)
Maximum torque acc. to SAE J 1349	465 lb-ft/5 200 rpm (630 Nm/5 200 rpm)	738 lb-ft/2 000 - 4 000 rpm (1 000 Nm/2 000 - 4 000 rpm)
Maximum engine speed	7 200 rpm	5 950 rpm
Firing order	1-5-4-2-6-3-7-8	1-12-5-8-3-10-6-7-2-11-4-9
Poly-V-belt	2 360 mm	2 370 mm

<sup>1</sup> The quoted data apply only to the standard vehicle. Contact an authorized Mercedes-Benz Center for the corresponding data of all special bodies and special equipment.

<sup>2</sup> Premium fuel required. Performance may vary with fuel octane rating.

## Technical data

### Rims and tires

**!** Only use tires which have been tested and approved by Mercedes-Benz. Tires approved by Mercedes-Benz are developed to provide best possible performance in conjunction with the driving safety systems on your vehicle such as ABS or ESP®. Tires specially developed for your vehicle and tested and approved by Mercedes-Benz can be identified by finding the following on the tire's sidewall:

- MO = Mercedes-Benz Original equipment tires

AMG vehicles:

Does not apply to all approved tires on AMG vehicles. For information on tested and approved tires for AMG vehicles, contact an authorized Mercedes-Benz Center.

Using tires other than those approved by Mercedes-Benz may result in damage that is not covered by the Mercedes-Benz Limited Warranty.

**!** Using tires other than those approved by Mercedes-Benz can have detrimental effects, such as

- poor handling characteristics
- increased noise
- increased fuel consumption

Moreover, tires and rims not approved by Mercedes-Benz may, under load, exhibit dimensional variations and different tire deformation characteristics that could cause them to come into contact with the vehicle body or axle parts. Damage to the tires or the vehicle may be the result.

**i** Further information on tires and rims is available at any authorized Mercedes-Benz Center. A placard with the recommended tire inflation pressures is located on the driver's door B-pillar (▷ page 585). Some vehicles may have supplemental tire inflation pressure information for driving at high speeds (▷ page 591) or for vehicle loads less than the maximum loaded vehicle condition (▷ page 598). If such information is provided, it can be found on the placard located on the inside of the fuel filler flap.

The tire inflation pressure should be checked regularly and should only be adjusted on cold tires. Follow tire manufacturer's maintenance recommendation included with vehicle.

**i** The following pages also list the approved wheel rim and tire sizes for equipping your vehicles with winter tires. Winter tires are not available as standard or optional factory equipment, but can be purchased from an authorized Mercedes-Benz Center.

Depending on vehicle model and the standard or optional factory-equipped wheel rim/tire configuration on your vehicle (Appearance Package, Sport Package etc.), equipping your vehicle with winter tires approved for your vehicle model may also require the purchase of two or four wheel rims of the recommended size for use with these winter tires. Contact an authorized Mercedes-Benz Center for more information.

## Technical data

### Rims and tires

#### Same size tires


Model	S 450 4MATIC S 550 S 550 4MATIC	S 450 4MATIC* S 550 4MATIC*	S 600 S 550 (Sport Package*) S 600 (Sport Package*)
<b>Rims (light alloy)</b>	8.5 J x 18 H2	8.5 J x 19 H2	8.5 J x 18 H2
<b>Wheel offset</b>	1.69 in (43 mm)	1.69 in (43 mm)	1.69 in (43 mm)
<b>Summer tires<sup>1</sup></b>	–	255/40 R19 96Y	–

<sup>1</sup> Radial-ply tires.

## Technical data

### Rims and tires

<b>Model</b>	<b>S 63 AMG</b> <b>S 63 AMG (Performance Package*)</b> <b>S 65 AMG</b>
--------------	--

<b>Rims (light alloy)</b>	8.5 J x19 H2
<b>Wheel offset</b>	1.69 in (43 mm)
<b>Winter tires <sup>1,2,3</sup></b>	255/40 R19 100V XL (Extra Load) M+S 

<sup>1</sup> Radial-ply tires.

<sup>2</sup> For use with snow chains contact an authorized Mercedes-Benz Center.

<sup>3</sup> Not available as factory equipment.

## Technical data

### Rims and tires

#### Mixed size tires

Model	S 550* S 600	S 550* S 600*
<b>Front axle:</b>		
Rims (light alloy)	8.5 J x 18 H2	8.5 J x 19 H2
Wheel offset	1.69 in (43 mm)	1.69 in (43 mm)
Summer tires <sup>1</sup>	255/45 R18 99V	255/40 R19 96Y
<b>Rear axle:</b>		
Rims (light alloy)	9.5 J x 18 H2	9.5 J x 19 H2
Wheel offset	1.69 in (43 mm)	1.69 in (43 mm)
Summer tires <sup>1</sup>	275/45 R18 103V	275/40 R19 101Y

<sup>1</sup> Radial-ply tires.

## Technical data

### Rims and tires

Model	S 550 (Sport Package*) S 600 (Sport Package*)	S 63 AMG* S 65 AMG* S 63 AMG (Performance Package*)
<b>Front axle:</b>		
AMG rims (light alloy)	8.5 J x 19 H2	8.5 J x 20 H2
Wheel offset	1.69 in (43 mm)	1.69 in (43 mm)
Summer tires <sup>1</sup>	255/40 R19 96Y	255/35 ZR20 XL (Extra Load)
<b>Rear axle:</b>		
AMG rims (light alloy)	9.5 J x 19 H2	9.5 J x 20 H2
Wheel offset	1.69 in (43 mm)	1.69 in (43 mm)
Summer tires <sup>1</sup>	275/40 R19 101Y	275/35 ZR20 XL (Extra Load) <sup>2</sup>

<sup>1</sup> Radial-ply tires.

<sup>2</sup> Must not be used with snow chains.

Spare wheel

Model	S 450 4MATIC S 550 S 550 4MATIC S 600	S 550 (Sport Package*) S 600 (Sport Package*)	S 63 AMG S 63 AMG (Performance Package*) S 65 AMG
Rim (steel)	4.5 B x 19 H2	4.5 B x 19 H2	-
Rim (light alloy)	-	-	4.5 B x 19 H2
Wheel offset	1.38 in (35 mm)	1.38 in (35 mm)	1.38 in (35 mm)
Minispare tire <sup>1</sup>	T 155/70 R19 113M	T 155/70 R19 113M	T 155/70 R19 113M
Recommended tire inflation pressure	61 psi (4.2 bar)	61 psi (4.2 bar)	61 psi (4.2 bar)

<sup>1</sup> Must not be used with snow chains.

**!** Please compare the recommended tire inflation pressure for your vehicle with the tire inflation pressure on the yellow label located on the spare wheel rim.

If the tire inflation pressure on the yellow label on the spare wheel rim differs from the values given in this Operator's Manual, inflate the spare wheel tire to the recommended tire inflation pressure given on the yellow label on the spare wheel rim.

**i** Please note that the tire inflation pressure of the spare tire differs from the tire inflation pressure of the road tires.



## Technical data

### Electrical system

Model	S 450 4MATIC <sup>1</sup>	S 550 S 550 4MATIC	S 600
Generator (alternator)	14 V/220 A	14 V/220 A	14 V/220 A
Starter motor	12 V/1.7 kW	12 V/1.7 kW	12 V/1.7 kW
Starter battery	12 V/35 Ah	12 V/35 Ah	12 V/35 Ah
Electrical consumer battery	12 V/95 Ah	12 V/95 Ah	12 V/95 Ah
Spark plugs	NGK PLKR 6A Bosch Y 7 MPP 33	NGK PLKR 6A Bosch Y 7 MPP 33	NGK IFR 6Q-G
Electrode gap	0.031 in (0.8 mm)	0.031 in (0.8 mm)	0.028 in (0.7 mm)
Tightening torque	15 – 18 lb-ft (20 – 25 Nm)	15 – 18 lb-ft (20 – 25 Nm)	18 – 22 lb-ft (25 – 30 Nm)

<sup>1</sup> Canada only

## Technical data

### Electrical system

Model	S 63 AMG	S 65 AMG
Generator (alternator)	14 V/220 A	14 V/220 A
Starter motor	12 V/2.1 kW	12 V/1.7 kW
Starter battery	12 V/35 Ah	12 V/35 Ah
Electrical consumer battery	12 V/95 Ah	12 V/95 Ah
Spark plugs	- <sup>1</sup>	NGK IFR 6Q-G
Electrode gap	0.039 in (1.0 mm)	0.028 in (0.7 mm)
Tightening torque	15 – 18 lb-ft (20 – 25 Nm)	15 – 22 lb-ft (20 – 30 Nm)

<sup>1</sup> Contact an authorized Mercedes-Benz Center

## Technical data

### Main dimensions and weights

#### Main dimensions

<b>Model</b>	<b>S 450 4MATIC (221.184)<sup>1</sup></b> <b>S 550 (221.171)</b> <b>S 550 4MATIC (221.186)</b> <b>S 600 (221.176)</b> <b>S 63 AMG (221.077)</b> <b>S 65 AMG (221.179)</b>
<b>Overall vehicle length</b>	205.0 in (5210 mm)
<b>Overall vehicle width (exterior rear view mirrors folded out)</b>	83.2 in (2115 mm)
<b>Overall vehicle width (exterior rear view mirrors folded in)</b>	73.7 in (1928 mm)
<b>Overall vehicle height</b>	All models except S 63 AMG 58.46 in (1485 mm)
	S 63 AMG 58.0 in (1473 mm)
<b>Wheelbase</b>	124.6 in (3165 mm)
<b>Track, front</b>	63.2 in (1600 mm)
<b>Track, rear</b>	63.3 in (1606 mm)

<sup>1</sup> Canada only

## Technical data

### Main dimensions and weights

#### Weights

<b>Max. roof load</b>	220 lb (100 kg)
<b>Max. trunk load</b>	220 lb (100 kg)

## Technical data

### Fuels, coolants, lubricants, etc.

#### Capacities

---

Vehicle components and their respective lubricants must match. Therefore use only products tested and approved by Mercedes-Benz.

Please refer to the Factory Approved Service Products pamphlet (USA only), or inquire at an authorized Mercedes-Benz Center.

#### Warning!



Comply with all valid regulations with respect to handling, storing and disposing of service fluids. Otherwise you could endanger persons or the environment.

Keep service fluids out of the reach of children.

For health reasons, you should prevent service fluids from coming into direct contact with your skin or clothing.

If a service fluid is swallowed, contact a physician immediately.

## Technical data

### Fuels, coolants, lubricants, etc.

	Model	Capacity	Fuels, coolants, lubricants, etc.		
<b>Engine with oil filter</b>	S 450 4MATIC <sup>1</sup> S 550 S 550 4MATIC	8.98 US qt. (8.5 l)	Approved engine oils		
	S 600	9.51 US qt. (9.0 l)			
	S 63 AMG	9.25 US qt. (8.75 l)			
	S 65 AMG	9.51 US qt. (9.0 l)			
	<b>Automatic transmission</b>	S 450 4MATIC <sup>1</sup>		10.14 US qt. (9.6 l)	MB Automatic Transmission Fluid
		S 550		10.36 US qt. (9.8 l)	
S 550 4MATIC		10.14 US qt. (9.6 l)			
S 600		8.14 US qt. (7.7 l)			
S 63 AMG		9.25 US qt. (8.75 l)			
S 65 AMG		9.2 US qt. (8.7 l)			
<b>Rear axle</b>	S 450 4MATIC <sup>2</sup> S 550 S 550 4MATIC S 600	1.90 US qt. (1.8 l) 1.27 US qt. (1.2 l) 1.90 US qt. (1.8 l) 2.11 US qt. (2.0 l)	Hypoid gear oil SAE 85 W 90		

<sup>1</sup> Canada only

<sup>2</sup> Canada only

## Technical data

### Fuels, coolants, lubricants, etc.

	Model	Capacity	Fuels, coolants, lubricants, etc.
<b>Rear axle</b>	S 63 AMG	1.27 US qt. (1.2 l)	Fuchs Titan EG 5010 D
	S 65 AMG	1.69 US qt. (1.6 l)	
<b>Hydraulic system ABC*</b>	All models except vehicles with 4MATIC	4.2 US qt. (4.0 l)	MB ABC Fluid
<b>Power steering</b>	S 450 4MATIC <sup>1</sup> S 550 S 550 4MATIC	approx. 1.06 US qt. (1.0 l)	MB Power Steering Fluid (Chevron Texaco PSF 9109) <sup>1</sup>
	S 600	approx. 1.27 US qt. (1.2 l)	
	S 63 AMG	approx. 1.06 US qt. (1.0 l)	
	S 65 AMG	approx. 1.27 US qt. (1.2 l)	
<b>Front wheel hubs</b>	All models except vehicles with 4MATIC <sup>2</sup>	approx. 3.6 oz. (95 g) each	High-temperature roller bearing grease
<b>Brake system</b>	All models	approx. 0.63 US qt. (0.6 l)	MB Brake Fluid (DOT 4+)

<sup>1</sup> For detailed information, please refer to the Factory Approved Service Products pamphlet (USA only) or contact an authorized Mercedes-Benz Center.

<sup>2</sup> Vehicles with 4MATIC: All wheel hubs have a lifelong greasing and therefore do not need to be greased.

## Technical data

### Fuels, coolants, lubricants, etc.

		Model	Capacity	Fuels, coolants, lubricants, etc.
<b>Cooling system</b>	<b>Vehicles without rear passenger compartment climate control*</b>	S 450 4MATIC <sup>1</sup>	12.15 US qt. (11.5 l)	MB 325.0 Anticorrosion/Antifreeze
		S 550		
		S 550 4MATIC		
	<b>Vehicles with rear passenger compartment climate control*</b>	S 450 4MATIC <sup>1</sup>	13.84 US qt. (13.1 l)	
		S 550		
		S 550 4MATIC		
<b>Low temperature cooling system</b>	S 600	14.69 US qt. (13.9 l)		
	S 63 AMG	11.83 US qt. (11.2 l)		
	S 65 AMG	14.69 US qt. (13.9 l)		
	S 600	2.75 US qt. (2.6 l)	MB 325.0 Anticorrosion/Antifreeze	
	S 65 AMG	3.28 US qt. (3.1 l)		
<b>Fuel tank</b>	All models	23.78 US gal (90.0 l)	Premium unleaded gasoline: Minimum Posted Octane 91 (Avg. of 96 RON/86 MON)	
	<b>including a reserve of</b>	S 450 4MATIC <sup>1</sup>		2.9 US gal (11.0 l)
		S 550		
		S 550 4MATIC		
		S 600		
S 63 AMG	3.7 US gal (14.0 l)			
S 65 AMG	3.7 US gal (14.0 l)			

<sup>1</sup> Canada only



## Technical data

### Fuels, coolants, lubricants, etc.

	Model	Capacity	Fuels, coolants, lubricants, etc.
<b>Air conditioning system</b>	All models		R-134a refrigerant and special PAG lubricant oil (never R-12)
<b>Windshield washer</b>	All models	approx. 6.87 US qt (6.5 l)	MB Windshield Washer Concentrate <sup>1</sup>

<sup>1</sup> Use MB Windshield Washer Concentrate "MB SummerFit" and water for temperatures above freezing or MB Windshield Washer Concentrate "MB SummerFit" and commercially available premixed windshield washer solvent/antifreeze for temperatures below freezing point. Follow suggested mixing ratios (▷ page 774).

### Engine oils

Engine oils are specifically tested for their suitability in our engines and durability for our service intervals. Therefore, only use approved engine oils and oil filters required for vehicles with Maintenance System. For a listing of approved engine oils and oil filters, refer to the Factory Approved Service Products pamphlet (USA only), or contact an authorized Mercedes-Benz Center.

**!** *Using engine oils and oil filters of specification other than those expressly required for the Maintenance System, or changing of oil and oil filter at change intervals longer than those called for by the Maintenance System will result in engine or emission control system damage not covered by the Mercedes-Benz Limited Warranty.*

*Please follow Maintenance System recommendations for scheduled oil changes. Failure to do so will result in engine or emission control system damage not covered by the Mercedes-Benz Limited Warranty.*

### Engine oil additives

**!** *Do not blend oil additives with engine oil. They may damage the engine. Damage or malfunctions resulting from blending oil additives are not covered by the Mercedes-Benz Limited Warranty.*

### Air conditioning refrigerant

R-134a (HFC) refrigerant and special PAG lubricating oil are used in the air conditioning system.

**!** *Never use R-12 (CFC) or mineral-based lubricating oil. Otherwise damage to the system will occur.*

### Brake fluid

#### Warning!



During vehicle operation, the boiling point of the brake fluid is continuously reduced through the absorption of moisture from the atmosphere.

Under extremely strenuous operating conditions, this moisture content can lead to the formation of bubbles in the system, thus reducing the system's efficiency.

Therefore, the brake fluid must be replaced regularly. Refer to your vehicle's Maintenance Booklet for replacement interval.

Only brake fluid approved by Mercedes-Benz is recommended. Any authorized Mercedes-Benz Center will provide you with additional information.

## Technical data

### Fuels, coolants, lubricants, etc.

#### Premium unleaded gasoline

##### Warning!



Gasoline is highly flammable and poisonous. It burns violently and can cause serious personal injury.

Never allow sparks, flame or smoking materials near gasoline!

Turn off the engine before refueling.

Whenever you are around gasoline, avoid inhaling fumes and skin or clothing contact, extinguish all smoking materials.

Direct skin contact with fuels and the inhalation of fuel vapors are damaging to your health.

**!** To maintain the engine's durability and performance, premium unleaded gasoline must be used. If premium unleaded gasoline is not available and low octane fuel is used, follow these precautions:

- Have the fuel tank only partially filled with unleaded regular gasoline and fill up with premium unleaded gasoline as soon as possible.
- Avoid full throttle driving and abrupt acceleration.
- Do not exceed an engine speed of 3000 rpm if the vehicle is loaded with a light load such as two persons and no luggage.
- Do not exceed  $2/3$  of maximum accelerator pedal position if the vehicle is fully loaded or operating in mountainous terrain.

#### Fuel requirements

Only use premium unleaded fuel:

- The octane number (posted at the pump) must be 91 min. It is an average of both the Research Octane Number (RON) and the Motor Octane Number (MON):  $(RON+MON)/2$ . This is also known as the ANTI-KNOCK INDEX.

Unleaded gasoline containing oxygenates such as ethanol, IPA, IBA and TBA can be used provided the ratio of any one of these oxygenates to gasoline does not exceed 10%; MTBE must not exceed 15%.

The ratio of methanol to gasoline must not exceed 3% plus additional co-solvents.

Using mixtures of ethanol and methanol is not allowed. Gasohol, which contains 10% ethanol and 90% unleaded gasoline, can be used.

These blends must also meet all other fuel requirements, such as resistance to spark knock, boiling range, vapor pressure, etc.

#### Gasoline additives

A major concern among engine manufacturers is carbon build-up caused by gasoline. Mercedes-Benz recommends only the use of quality gasoline containing additives that prevent the build-up of carbon deposits.

After an extended period of using fuels without such additives, carbon deposits can build up especially on the intake valves and in the combustion area, leading to engine performance problems such as:

- Warm-up hesitation
- Unstable idle
- Knocking/pinging
- Misfire
- Power loss

In areas where carbon deposits may be encountered due to lack of availability of gasolines which contains these additives, Mercedes-Benz recommends the use of additives approved by us for use on Mercedes-Benz vehicles. Refer to the Factory Approved Service Products pamphlet (USA only) or contact an authorized Mercedes-Benz Center for a listing of approved product(s). Follow directions on product label.

Do not blend other fuel additives with fuel. This only results in unnecessary cost and may be harmful to the engine operation.

**!** *Damage or malfunction resulting from poor fuel quality or from blending additional fuel additives other than those tested and approved by us for use on Mercedes-Benz vehicles are not covered by the Mercedes-Benz Limited Warranty.*

#### Coolants

The engine coolant is a mixture of water and anticorrosion/antifreeze, which provides:

- Corrosion protection
- Freeze protection
- Boiling protection (by increasing the boiling point)

The cooling system was filled at the factory with a coolant providing freeze protection to approximately -22°F (-30°C) and corrosion protection.

**!** *Add premixed coolant solution only. Adding water and MB 325.0 Anticorrosion/Antifreeze separately from each other, could cause engine damage not covered by the Mercedes-Benz Limited Warranty.*

If the antifreeze mixture is effective to -22°F (-30°C), the boiling point of the coolant in the pressurized cooling system is reached at approximately 266°F (130°C).

## Technical data

### Fuels, coolants, lubricants, etc.

The coolant solution must be used year round to provide the necessary corrosion protection and increase boil-over protection. Refer to Maintenance Booklet for replacement interval.

Coolant system design and coolant used determine the replacement interval. The replacement interval published in the Maintenance Booklet is only applicable if MB 325.0 Anticorrosion/Antifreeze solution or other Mercedes-Benz approved products of equal specification are used to renew the coolant concentration or bring it back up to the proper level.

For information on other Mercedes-Benz approved products of equal specification, refer to the Factory Approved Service Products pamphlet (USA only) or contact an authorized Mercedes-Benz Center.

To provide important corrosion protection, the solution must be at least 50% anticorrosion/antifreeze (equivalent to freeze protection to approximately  $-35^{\circ}\text{F}$  [ $-37^{\circ}\text{C}$ ]).

If you use a solution that is more than 55% anticorrosion/antifreeze (freeze protection to approximately  $-49^{\circ}\text{F}$  [ $-45^{\circ}\text{C}$ ]), the engine temperature will increase due to the lower heat transfer capability of the solution. Therefore, do not use more than this amount of anticorrosion/ antifreeze.

If the coolant level is low, water and MB 325.0 Anticorrosion/Antifreeze should be used to bring it up to the proper level (have cooling system checked for signs of leakage).

The water in the cooling system must meet minimum requirements, which are usually satisfied by normal drinking water. If you are not sure about the water quality, consult an authorized Mercedes-Benz Center.

### Anticorrosion/antifreeze

Your vehicle contains a number of aluminum parts. The use of aluminum components in motor vehicle engines necessitates that anticorrosion/antifreeze coolant used in such engines be specifically formulated to protect the aluminum parts. Failure to use such anticorrosion/antifreeze coolant will result in a significantly shortened service life.

Therefore, the following product is strongly recommended for use in your vehicle: Mercedes-Benz 325.0 Anticorrosion/Antifreeze agent.

Before the start of the winter season (or once a year in hot southern regions), you should have the anticorrosion/antifreeze concentration checked. The coolant is also regularly checked each time you bring your vehicle to an authorized Mercedes-Benz Center for service.

## Technical data

### Fuels, coolants, lubricants, etc.

#### Anticorrosion/antifreeze quantity

Model		Approximate freeze protection	
		- 35°F (- 37°C)	- 49°F (- 45°C)
S 450 4MATIC <sup>1</sup> S 550 S 550 4MATIC	Vehicles without rear passenger compartment climate control*	6.1 US qt. (5.75 l)	6.68 US qt. (6.33 l)
	Vehicles with rear passenger compartment climate control*	6.92 US qt. (6.55 l)	7.61 US qt. (7.2 l)
S 600 (main cooling system)		7.34 US qt. (6.95 l)	8.08 US qt. (7.65 l)
S 600 (low temperature cooling system)		1.37 US qt. (1.3 l)	1.51 US qt. (1.43 l)
S 63 AMG		6.0 US qt. (5.6 l)	7.0 US qt. (6.16 l)
S 65 AMG (main cooling system)		7.4 US qt. (7.0 l)	8.14 US qt. (7.7 l)
S 65 AMG (low temperature cooling system)		1.64 US qt. (1.55 l)	1.81 US qt. (1.71 l)

<sup>1</sup> Canada only

## Technical data

### Fuels, coolants, lubricants, etc.

#### Windshield washer system and headlamp cleaning system

Both the windshield washer system and headlamp cleaning systems are supplied from the windshield washer reservoir.

The windshield washer reservoir has a capacity of approximately 6.87 US qt (6.5 l).

- ▶ Refill the reservoir with MB Windshield Washer Concentrate and water (or concentrate and commercially available premixed windshield washer solvent/antifreeze, depending on ambient temperatures).

#### Warning!



Washer solvent/antifreeze is highly flammable. Do not spill washer solvent/antifreeze on hot engine parts, because it may ignite and burn. You could be seriously burned.

#### Windshield and headlamp washer fluid mixing ratio

For temperatures above freezing point, use MB Windshield Washer Concentrate “MB SummerFit” and water:

- 1 part “MB SummerFit” to 100 parts water  
(1.34 fl oz [40 ml] “MB SummerFit” to 1 gal [4.0 l] water).

For temperatures below freezing point, use MB Windshield Washer Concentrate “MB SummerFit” and commercially available premixed windshield washer solvent/antifreeze:

- 1 part “MB SummerFit” to 100 parts solvent  
(1.34 fl oz [40 ml] “MB SummerFit” to 1 gal [4.0 l] solvent).

- A**
- ABC\* 470
    - Messages in display 660
    - Setting vehicle level 471
  - ABS 67
    - Indicator lamp 29, 67, 628
    - Messages in display 662
  - Accelerator position, automatic transmission 433
  - Accessory weight 606
  - Accident 421
  - Active headlamps 399
  - Adaptive Brake Lights (S 600, USA only) 69
  - Adaptive Damping System (Airmatic) 468
  - Additional turn signals 715
  - Address book (COMAND) 167
    - Calling up 168
    - Changing an entry 174
    - Creating an entry 168
    - Deleting an entry 175
    - Details about an entry 172
    - Displaying details about an entry in the phone book on the mobile phone 173
    - Importing data 179
    - Making a call 176
    - Menu overview 167
    - Searching for an entry 170
    - Starting route guidance 176
    - Voice entry 177
  - Address book (Voice Control) 330
  - ADS (Airmatic) 468
  - Advanced Parking Guidance\* 481
  - Air bags 42
    - Children 58
    - Front 46
    - Front passenger front air bag indicator lamp 51
    - OCS 47
    - Safety guidelines 44
    - Side impact 46
    - Window curtain 46, 47
  - Air conditioning, Refrigerant 768, 769
  - Air distribution
    - Adjusting 510
    - Adjusting (COMAND) 275
  - Air pressure 606
  - Air pressure see Tire inflation pressure
  - Air recirculation mode 506
  - Air vents 500
  - Air volume
    - Adjusting 504, 510
    - Adjusting (COMAND) 275
  - Airmatic 468
    - Messages in display 676
    - Setting vehicle level 469
  - Alarm
    - Audible alarm and flashing exterior lamps (Panic alarm) 66
  - Alarm system see Anti-theft alarm system
  - Alignment bolt (vehicle tool kit) 705, 726
  - Ambient lighting
    - COMAND menu 269
  - AMG menu (Control system instrument cluster) 296
  - AMG vehicles
    - Manual shift program mode 440
  - Antiglare
    - Rear view mirrors 390
  - Anti-theft systems 82
    - Alarm, visual and audible 82
    - Anti-theft alarm system 82
    - Immobilizer 82
  - Aquaplaning see Hydroplaning
  - Armrest 527, 528
  - Ashtrays 536



## Index

- Aspect ratio 606
  - Audio (COMAND) 116
    - CD mode 124
    - DVD mode 124
    - MP3 mode 124
  - Audio (Control system instrument cluster) 294
    - CD changer 295
    - CD/DVD changer 295
    - DVD changer 295
  - Audio AUX (COMAND) 129
  - Audio DVD
    - Fast forward/rewind (COMAND) 127
    - Menu overview (COMAND) 123
    - Pause function (COMAND) 125
    - Stop function (COMAND) 125
  - Auto-dimming, Rear view mirrors 390
  - Automatic climate control 501
    - Adjusting air distribution (COMAND) 275
    - Adjusting air flow from air vents (COMAND) 279
    - Adjusting air volume (COMAND) 275
    - Adjusting the footwell temperature (COMAND) 278
  - Air recirculation mode 506
  - Central climate control menu (COMAND) 276
  - Central menu for rear climate control\* (COMAND) 280
  - Defrosting 504
  - Operating the rear climate control\* from the front 279
  - Operating via COMAND 273
  - Rear window defroster 506
  - Selecting Mono mode (COMAND) 277
  - Setting temperature (COMAND) 274
  - Setting the temperature 504
  - Setting the temperature in the rear passenger compartment 510
  - Switching cooling on or off (COMAND) 276
- Automatic headlamp mode 306, 400
  - Automatic lighting control, Interior lighting 406
  - Automatic locking when driving 368
  - Automatic shift program 436
  - Automatic transmission
    - Accelerator position 433
    - Automatic shift program 436
  - Emergency operation (Limp-Home Mode) 443
  - Fluid 765
  - Fluid level 578
  - Gear ranges 435
  - Gear selector lever 426
  - Gear shifting malfunctions 443
  - Hill start assist system 434
  - Kickdown 433
  - Kickdown, manual shift program (AMG vehicles) 442
  - Manual shift program mode (AMG vehicles) 440
  - Program mode selector switch 436
  - Shifting procedure 429
  - Starting the engine 416
  - Steering wheel gearshift control 438
  - Transmission fluid 578
  - Transmission positions 430
- AUX
    - Audio 129
    - Video 130
  - AUX jacks 129

- B**
- Backup lamps
    - Replacing bulbs 715
  - Bar 606
  - BAS 69
  - Batteries, SmartKey
    - Checking battery condition 366
    - Replacing 712
  - Batteries, SmartKey with KEYLESS-GO\*
    - Checking battery condition 366
    - Replacing 712
  - Batteries, vehicle 729
    - Charging 732
    - Discharged, Jump starting 734
    - Disconnecting 731
    - For electrical consumers 729
    - For starter 729
    - Message in display 678
    - Reconnecting 733
    - Removing 732
  - Bead 606
  - Beverage holder see Cupholder
  - Blind Spot Assist\* 495
    - Messages in display 654
  - Bluetooth®
    - Settings (COMAND) 180
  - Brake assist system (BAS Plus) 70
  - Brake assist system (BAS) 69
  - Brake fluid 572, 766, 769
  - Brake lamp bulbs 715
  - Brake lamp, high mounted 715
  - Brake pads
    - Message in display 666
  - Brake warning lamp 29
  - Brakes 560
    - High-performance brake system (AMG vehicles only) 561
    - Warning lamp 29, 629
  - Break-in period 558
  - Bulbs, replacing 714
    - Additional turn signals 715
    - Brake lamps 715
    - Fog lamps 715
    - Front lamps 715
    - High beam 715
    - High mounted brake lamp 715
    - License plate lamps 715
    - Low beam 715
    - Parking and standing lamps 715
    - Rear fog lamp 715
    - Turn signal lamps 715
- C**
- California retail buyers and lessees, important notice for 15
  - Can holder see Cupholder
  - Capacities and recommended fuel/lubricants 764
  - Cargo area see Trunk
  - Cargo tie-down hooks 532
  - Carpets, Cleaning and care of 624
  - Catalytic converter 568
  - CD
    - Ejecting (COMAND) 122
    - Loading (COMAND) 120
    - Menu overview (COMAND) 123
    - Playback options (COMAND) 128
    - Selecting a medium (COMAND) 126
    - Selecting a track (COMAND) 126
  - CD (COMAND) 116
  - Central locking
    - Automatic 368
    - Locking/unlocking from inside 369
  - Central locking/unlocking switches 369
  - Certification label 748
  - Change of address or ownership 16

## Index

- Children in the vehicle 58
    - Air bags 58
    - Indicator lamp front passenger
      - front air bag off 51, 640
    - Infant and child restraint systems 59
    - LATCH-type child seat anchors 63
    - Override switch for rear passenger compartment 64
    - Tether attachment points 62
  - Chrome-plated exhaust tip\*,  
Cleaning 625
  - Cigarette lighter 537
  - Cockpit 26
  - COMAND
    - Adjusting volume 98
    - Audio AUX 129
    - Components 87
    - Controller 90
    - Display 88
    - Display illumination 89
    - Function buttons 88
    - Main menus 98
    - Menu overview 92
    - Navigation system 188
    - Operating 92
  - Operating safety 86
  - Operating seats 282
  - Phone book\* 158
  - Radio, FM/AM 102
  - Selecting sound settings 99
  - SMS messages 183
  - Surround sound 100
  - Switching off/on the
    - audio source 101
  - Switching on or off 87
  - Swiveling display 89
  - System settings 259
  - Telephone keypad\* 90
  - Telephone menu\* 141
  - Vehicle menu 264
  - Voice Control settings 261
- Combination switch 403
    - Corner-illuminating lamps 404
    - High beam flasher 403
    - Turn signals 420
    - Windshield wipers 408
  - Command list (Voice Control) 340
    - Address book commands 345
    - Audio commands 347
    - General commands 340
  - Navigation commands 343
  - Telephone\* commands 341
- Control system instrument cluster 287
    - Multifunction display 287
    - Multifunction steering wheel 288
  - Control system instrument cluster menus
    - AMG 296
    - Assistance\* 303
    - Audio 294
    - Navi 292
    - Service 304
    - Settings 305
    - Telephone\* 299
    - Trip 291
    - Vehicle status message memory 304
  - Coolant 579
    - Adding 580
    - Anticorrosion/antifreeze mixing
      - ratio and quantity 771
    - Checking level 579
    - Messages in display 679
    - Temperature 569
    - Temperature gauge 29, 444
  - Coolant level
    - Checking 579
  - Corner-illuminating lamps 404

- Cruise control 446
  - Activating 447
  - Canceling 448
  - Driving downhill 448
  - Driving uphill 448
  - Message in display 645
  - Setting current speed 447
  - Setting to last stored speed (“Resume” function) 450
- Cupholder
  - In front seat armrest 530
  - In rear seat armrest 530
- Curb weight 606
- D**
- Date
  - Setting (COMAND) 261
- Daytime running lamp mode 401
  - Setting 306
- Deceleration
  - With DISTRONIC Plus\* 455
- Deep water see Standing water
- Defrosting 504
- Delayed switch-off
  - Exterior lighting (COMAND) 264
  - Interior lighting (COMAND) 270
- Department of Transportation see DOT
- Destination entry (COMAND) 202
- Destination memory (COMAND) 251
- Difficulties
  - While driving 420
  - While starting 418
- Digital speedometer 292
  - Additional speedometer 306
- Dimensions, Vehicle 762
- Direction of rotation, Tires 585
- Displays
  - Additional speedometer 306
  - Digital speedometer 292
  - DISTRONIC Plus\* 454
  - Maintenance service indicator 612
  - Multifunction display 287
  - Vehicle status message see Multifunction display messages
- Distance
  - Decreasing in DISTRONIC Plus\* 465
  - Increasing in DISTRONIC Plus\* 465
  - Setting in DISTRONIC Plus\* 464
- Distance to Empty (Range) 292
- Distance warning lamp\* 29, 634
- DISTRONIC Plus\* 451
  - Activated 456
  - Activating 457
  - Calling up settings 455
  - Cleaning system sensor 619
  - Deactivated 456
  - Deactivating 463
  - Deceleration 455
  - Decreasing distance 465
  - Decreasing time interval 464
  - Displays in the
    - multifunction display 454
  - Distance warning lamp 29, 634
  - Driving hints 465
  - Increasing distance 465
  - Increasing time interval 464

## Index

- Intermittent signal tone 454
- Lever 457
- Menu 455
- Messages in display 646
- Sensor cover 619
- Setting a higher speed 461
- Setting a slower speed 462
- Setting following distance 464
- Setting the current speed 460
- Setting to last stored speed  
("Resume" function) 463
- Warning and indicator lamps 454
- Document holder 534
- Door
  - Control panel 34, 35, 38
  - Entry lamps 407
  - Inside door handle 367
  - Locking 360, 365
  - Locking with Tele Aid 550
  - Messages in display 648, 682
  - Opening from inside vehicle 367
  - Opening from outside 360, 364
  - Power closing assist 368
  - Unlocking 359, 364
  - Unlocking with Tele Aid 549
- DOT 607
- Downhill driving
  - Cruise control 448
- Drink holder see Cupholder
- Drinking and driving 559
- Drive-dynamic multicontour seats\*, front
  - Adjusting (COMAND) 285
- Driving 416
  - Abroad 567
  - Hydroplaning 563
  - In winter 565
  - Instructions 416, 559
  - Problems 420
  - Safety systems 67
  - Through standing water 566
  - With DISTRONIC Plus\* 465
- Driving maneuver (COMAND) 237
- Driving off 562
- Driving safety systems
  - 4MATIC 76
  - ABS 67
  - Adaptive Brake Lights  
(S 600, USA only) 69
  - BAS 69
  - BAS Plus 70
- EBP 72
- Electronic traction system 73
- ESP® 72
- Driving systems 446
  - ABC\* 470
  - Advanced Parking Guidance\* 481
  - Airmatic 468
  - Cruise control 446
  - DISTRONIC Plus\* 451
  - Driving safety systems 67
  - Park Assist\* 476
  - Parktronic system\* 472
  - Rear View Camera\* 487
  - Vehicle level control (ABC\*) 471
  - Vehicle level control (Airmatic) 469
- Driving tips 433
  - Kickdown 433
- DVD 116
  - Audio (COMAND) 116
  - Changer (COMAND) 120
  - Changer (Voice Control) 338
  - Ejecting (COMAND) 122
  - Loading (COMAND) 120
  - Playback options (COMAND) 128
  - Selecting a medium (COMAND) 126
  - Selecting a track (COMAND) 126

- Setting the audio format (COMAND) 128
- Video (COMAND) 132
- E**
- Easy-entry/exit feature 384
  - COMAND menu 268
- EBP 72
- Electrical fuses see Fuses
- Electrical outlet see Power outlet
- Electrical system, Technical Data 760
- Electronic Brake Proportioning see EBP
- Electronic parking brake 422
  - Indicator lamp 29, 630
  - Messages in display 667
  - Warning lamp 29, 630
- Electronic Stability Program see ESP®
- Electronic traction system 73
- Emergency call system 542
- Emergency calls, Tele Aid 544
- Emergency engine shut-down 744
- Emergency operation (Limp-Home Mode) 443
- Emergency operations
  - Locking the vehicle 708
  - Releasing from inside 516
  - Remote door lock 550
- Remote door unlock 549
- Unlocking the trunk 709
- Unlocking the vehicle 708
- Emergency tensioning device see ETD
- Emergency, In case of
  - Battery, Jump starting 734
  - First aid kit 705
  - Flat tire 723
  - Fuses 741
  - Roadside Assistance 15
  - Roadside Assistance (Tele Aid) 546
  - Towing the vehicle 737
- Emission control 568
- Emission control information label 749
- Emission control system warranties 14
- Engine
  - Belt layout 750
  - Cleaning 617
  - Compartment 573
  - Coolant 579, 767, 771
  - Malfunction indicator lamp 29, 632
  - Number 748, 749
  - Oil 578, 765, 769
  - Oils 575
  - Residual heat and ventilation 509
  - Starting 416
  - Technical data 751
  - Turning off 424
- Engine coolant see Coolant
- Engine oil 575
  - Adding 578
  - Additives 769
  - Checking level 575
  - Checking level (Dipstick) 577
  - Checking level (Instrument cluster control system) 575
  - Consumption 575
  - Dipstick 577
  - Filler neck 577, 578
  - Messages in display 576, 694
  - Recommended engine oils and oil filters 765
- ESP®
  - Four wheel electronic traction system with ESP® 76
- ESP® 72
  - Messages in display 662, 673
  - Warning lamp 29, 629, 634
- ETD 55
  - Safety guidelines 44

## Index

Exterior lighting  
  Delayed switch-off (COMAND) 264  
  Locator lighting (COMAND) 265  
Exterior rear view mirrors  
  Adjusting 388  
  Auto-dimming on the  
    driver's side 390  
  Fold in automatically when locking  
    (COMAND) 266  
  Lower mirror when reversing  
    (COMAND) 266  
  Power folding 389

## F

Favorite button 263  
First aid kit 705  
Flat tire 723  
  Jacking up the vehicle 724  
  Lowering the vehicle 727  
  Mounting the spare wheel 723  
  Preparing the vehicle 723  
Floor mats\* 538  
Fluids  
  Automatic transmission fluid 765  
  Brake fluid 766, 769  
  Capacities 764  
  Engine coolant 579, 767, 771  
  Engine oil 578, 765, 769  
  Power steering fluid 766  
  Windshield washer system and head-  
    lamp cleaning system 768, 774  
Fog lamps  
  Messages in display 690  
  Replacing bulbs 715  
Four wheel electronic traction system with  
  ESP® see 4MATIC  
4MATIC 76  
Front air bags 46

Front lamps  
  Replacing bulbs 715, 717  
Front lamps see headlamps  
Front passenger front air bag 46  
  Messages in display 649  
Front passenger front air bag off  
  indicator lamp 51, 640  
Fuel 571, 767, 770  
  Additives 771  
  Capacity, Fuel tank 767  
  Filling the tank 570  
  Fuel filler flap and cap 570  
  Fuel reserve warning lamp 29  
  Gauge 29  
  Premium unleaded gasoline 571,  
    767, 770  
  Requirements, Octane rating 770  
Fuel cap  
  Message in display 683  
Fuel consumption statistics  
  Since last reset 291  
  Since start 291  
Fuel filler flap 570  
  Locking/Unlocking 570

- Fuel tank
  - Capacity 767
  - Filler flap 570
- Fuels, coolants, lubricants etc.
  - Capacities 764
- Fuses 741
  - Fuse box in engine compartment 742
  - Fuse box in passenger compartment 743
  - Fuse boxes in dashboard 743
  - Fuse chart (vehicle tool kit) 705
  - Replacing 741
- G**
  - Garage door opener 551
  - Gasoline see Fuel
  - GAWR 607
  - Gear range
    - Automatic transmission 435
    - Limiting 435
    - Shifting into optimal 440
  - Gear selector lever 426
  - Gearshift pattern 426
  - Messages in display 648, 653, 657, 659, 704
  - Position 429
  - Shifting procedure 429
  - Transmission position 430
- Glove box 526
- Gloves, Vehicle tool kit 705
- GPS
  - Reception (COMAND) 192
  - Tele Aid 543
- Gross Axle Weight Rating see GAWR
- Gross Vehicle Weight Rating see GVWR
- Gross Vehicle Weight see GVW
- GVW 607
- GVWR 607
- H**
  - Hands-free microphone 33
  - Hard plastic trim items, cleaning 624
  - Hazard warning flasher 405
  - Head restraints 379
    - Adjustment 379
    - Folding back and placing upright rear head restraints 380
  - Front seat 379
  - Luxury active head restraints (S 600 only) 56
  - Rear seat 380
  - Resetting activated luxury active head restraints (S 600 only) 710
- Headlamp cleaning system 403, 580
  - Washer fluid 768, 774
- Headlamps
  - Automatic headlamp mode 306, 400
  - Cleaning lenses 619
  - Cleaning system 580
  - Low beam 400
  - Manual headlamp mode 306
  - Messages in display 687
  - Refilling washer fluid 581
- Headliner and shelf below rear window,
  - Cleaning and care of 624



## Index

Heated steering wheel\* 387  
Height adjustments  
    Vehicle level (ABC\*) 471  
High beam  
    Replacing bulbs 715  
High beam flasher 403  
High beam headlamp  
    Indicator lamp 29  
High mounted brake lamp 715  
High-performance brake system  
    (AMG vehicles only) 561  
Hood 573  
    Message in display 683  
    Opening 573  
Horn 27  
Hydroplaning 563

**I**  
Identification labels 748  
Identification Number, Vehicle (VIN) 749  
Ignition 370, 372  
    Switching on 370  
    Switching on, KEYLESS-GO\* 372  
Immobilizer 82  
Indicator lamps see Lamps,  
    indicator and warning  
Individualization  
    Voice Control 355  
Infant and child restraint systems see  
    Children in the vehicle  
Infrared reflecting windshield 556  
Inside door handle 367  
Instrument cluster 28, 444  
    Coolant temperature gauge 29, 444  
    Fuel gauge 29  
    Illumination 444, 492  
    Lamps 628  
    Multifunction display 287  
    Outside temperature indicator 445  
    Selecting the language  
        (COMAND) 262

Interior lighting 406  
    Activating automatic control 406  
    Ambient lighting (COMAND) 269  
    Deactivating automatic control 406  
    Delayed switch-off (COMAND) 270  
    In the rear 407  
    Reading lamps in the front 407  
    Reading lamps in the rear 407  
Interior rear view mirror  
    Adjusting 388  
    Auto-dimming 390  
Interior storage spaces see  
    Storage compartments  
**J**  
Jack 706, 724  
Jacking up the vehicle 724  
Jump starting 734

**K**

- Key, Mechanical 708
  - Loss of 366
- Key, SmartKey 358
  - Battery check lamp 358, 360
  - Factory setting 359
  - Global locking and unlocking 359
  - Lock button 358
  - Locking and unlocking 358
  - Loss of 366
  - Messages in display 685
  - Opening button for trunk 358
  - Panic button 66
  - Remote control 358
  - Restoring to factory setting 361
  - Selective setting 360
  - Starting the engine 417
  - Switching on ignition with 370
  - Turning off engine 425
  - Unlock button 358

## Key, SmartKey with KEYLESS-GO\* 361

- Battery check lamp 361, 365
  - Closing, Trunk 511
  - Factory setting 364
  - Global locking and unlocking 364
  - Important notes on using KEYLESS-GO\* 362
  - Lock button 361
  - Locking and unlocking 361
  - Loss of 366
  - Messages in display 684
  - Opening button for trunk 361
  - Panic button 66
  - Remote control 361
  - Restoring to factory setting 366
  - Selective setting 365
  - Starting the engine 417
  - Switching on ignition with 372
  - Turning off engine 425
  - Unlock button 361
- Kickdown 433
  - Kilopascal 607

**L**

- Labels 748
  - Certification 748
  - Emission control information 749
  - Tire and Loading Information 586
  - Vacuum line routing diagram 749
- Lamp bulbs, exterior 714
- Lamps, exterior
  - Front 715
  - Light sensor 688
  - Rear 715
- Lamps, indicator and warning
  - ABS 29, 67, 628
  - Air bag Off 46
  - Battery check lamp (SmartKey with KEYLESS-GO\*) 365
  - Battery check lamp (SmartKey) 360
  - Brake warning lamp 29
  - Brakes 629
  - Combination low tire pressure\* malfunction telltale 29, 638
  - Distance warning lamp\* 29, 634
  - DISTRONIC Plus\* 29, 454, 634
  - Electronic parking brake 29, 630
  - Engine diagnostics 29, 632
  - Engine malfunction 29, 632

## Index

- ESP® 29, 629, 634
- Front passenger front air bag off 51, 640
- High beam headlamp 29
- Maintenance service indicator 612
- Park Assist\* 29
- Parktronic\* 29
- Seat belt telltale 29, 635
- SRS 29, 637
- TPMS malfunction telltale 638
- TPMS\* malfunction telltale 29
- Turn signals 29
- Language (COMAND) 262
- LATCH-type child seat anchors see Children in the vehicle
- Lever
  - For automatic transmission (gear selector lever) 426
  - For cruise control 447
  - For DISTRONIC Plus\* 457
- License plate lamps
  - Messages in display 689
  - Replacing bulbs 715
- Light alloy wheels, Cleaning 623
- Light sensor
  - Message in display 688
- Lighter see Cigarette lighter
- Lighting 399
  - Automatic headlamp mode 400
  - COMAND display illumination 89
  - Corner-illuminating lamps 404
  - Daytime running lamp mode 401
  - Door entry lamps 407
  - High beam flasher 403
  - Instrument cluster illumination 444, 492
  - Interior 406
  - Low beam headlamps 400
  - Manual headlamp mode 400
  - Trunk 407
- Limp-Home Mode 443
- Loading see Vehicle loading
- Locator lighting (COMAND) 265
- Lock button
  - Door handle (KEYLESS-GO\*) 364, 415
  - Key, SmartKey 358
  - Key, SmartKey with KEYLESS-GO\* 361
- Locking 421
  - Automatic central locking (COMAND) 267
  - Vehicle in an emergency 709
- Locking knob 367
- Loss of
  - Key, Mechanical 366
  - Key, SmartKey 366
  - Key, SmartKey with KEYLESS-GO\* 366
  - Service and Warranty Information Booklet 747
- Low beam headlamps 400
  - Replacing bulbs 715
- Lowering
  - Vehicle 727
- Lubricants 764
- Lumbar support (COMAND) 283

- M**
- Maintenance 15, 612
    - Automatic Call (Tele Aid) 550
    - Calling up service indicator display 613
    - Clearing service indicator message 612
    - Maintenance System 612
    - Resetting service indicator 614
    - Service indicator message 612
    - Service term exceeded 613
  - Maintenance System 612
  - Manual headlamp mode 400
  - Manual shift program (AMG vehicles only)
    - Deactivating 442
  - MAXCOOL
    - Maximum cooling 506
  - Maximum load rating, Tires 607
  - Maximum loaded vehicle weight 591, 607
  - Maximum tire inflation pressure 603, 607
  - Maximum tire load rating 603
  - Memory function 392
  - Messages in display see
    - Multifunction display messages
  - Microphone, Hands-free 33
  - Minispare wheel 707, 723, 759
  - Mirrors
    - Activating exterior rear view mirror parking position 391
    - Adjusting 388
    - Auto-dimming for rear view mirrors 390
    - Exterior rear view mirrors 388
    - Interior rear view mirror 388
  - Mobile phone see Telephone\*
  - Modifications and alterations,
    - Operating safety 19
  - MON 571, 767
  - MP3
    - Menu overview (COMAND) 123
    - Operation (COMAND) 124
    - Playback options (COMAND) 128
    - Selecting a folder (COMAND) 127
    - Selecting a medium (COMAND) 126
    - Selecting a track (COMAND) 126
  - MP3 (COMAND) 116
  - Multicontour rear seats\* 383
  - Multicontour seats\*, front
    - Adjusting (COMAND) 283
  - Multifunction display 287
  - Multifunction display messages
    - ABC\* 660
    - ABS 662
    - Airmatic 676
    - Batteries, vehicle 678
    - Blind Spot Assist\* 654
    - Brake fluid 664
    - Brake pads 666
    - Coolant 680
    - Coolant level 679
    - Cruise control 645
    - DISTRONIC Plus\* 646
    - Doors 682
    - EBP (Electronic Brake Proportioning) 665
    - Electronic parking brake 667
    - Engine oil 575, 694
    - ESP® 662, 673
    - Fog lamps 690
    - Front passenger front air bag 649
    - Fuel cap 683
    - Gear selector lever 648, 653, 657, 659, 704
    - Headlamps 687
    - Hood 683
    - Key, SmartKey 685

## Index

Key, SmartKey with  
KEYLESS-GO\* 684  
Lamps, exterior 687  
License plate lamps 689  
Light sensor 688  
Night View Assist\* 693  
Park Assist\* 653, 655  
Parking lamps 690  
PRE-SAFE® 656, 663  
Restraint systems 697  
Side marker lamps 691  
SRS 697  
Tail lamps 692  
Tele Aid 699  
Trunk 704  
Windshield washer fluid 704  
Multifunction steering wheel 288

## N

Navigation system  
Menu overview (COMAND) 194  
Navigation system (COMAND) 188  
Basic settings 198  
Destination entry 202  
Destination memory 251  
Detour function (COMAND) 246  
Driving maneuver 237  
Hiding/showing the  
menu system 196  
Last destinations 258  
Map display 195  
Operation 195  
POI entry 229  
Real-time traffic 248  
Route guidance 237

Navigation system (Instrument cluster  
control system) 292  
Driving maneuver 293  
Navigation system (Voice Control) 320  
Neutral gear position, Automatic  
transmission 426, 430  
New vehicle break-in 558  
Night View Assist\* 491  
Cleaning the windshield in  
front of the camera 621  
Dirty or fogged-up windshield 493  
Image on multifunction display 492  
Malfunction 494  
Messages in display 693  
Removing condensation 493  
Switching on or off 491  
Normal occupant weight 607  
Number, Vehicle Identification (VIN) 749

- O**
- Occupant Classification System see OCS
  - Occupant distribution 607
  - Occupant safety 40
    - Air bags 42
    - Children and air bags 58
    - Children in the vehicle 58
    - Fastening the seat belt 395
    - Front passenger front air bag off indicator lamp 51
    - Infant and child restraint systems 59
    - LATCH-type child seat anchors 63
    - Seat belts 44, 395
  - OCS 47
    - Self-test 52
  - Odometer 291
  - Oil
    - Filler neck 578
  - Oil level see Engine oil
  - One-touch gearshifting 438
  - Operating safety 19
    - Voice Control 308
  - Ornamental moldings, Cleaning 618
  - Outside temperature indicator 29, 445
  - Overdue maintenance service 613
  - Overhead control panel 33
- Override switch** 64
- P**
- Paintwork, Cleaning 616
  - Panic alarm
    - Audible alarm and flashing exterior lamps 66
    - Panic button 66
  - Panorama roof with power tilt/sliding panel\* 521
    - Opening/closing 522
    - Synchronizing 524
  - Panorama roof with tilt/sliding panel\*
    - Cleaning 623
  - Parcel net in front passenger footwell 528
  - Park Assist\* 476
    - Cleaning system sensors 620
    - Messages in display 653, 655
    - System sensors 620
    - Warning indicators 29, 479
  - Parking 421, 562
  - Parking and standing lamps
    - Replacing bulbs 715
  - Parking lamps
    - Messages in display 690
  - Parking position
    - Exterior rear view mirrors 391
  - Parktronic system\* 472
  - Parktronic\*
    - Cleaning system sensors 619
    - Malfunctioning 476
    - System sensors 619
    - Warning indicators 29, 474
  - Parts service 746
  - PASS AIR BAG OFF indicator lamp see Front passenger front air bag off indicator lamp
  - Passenger compartment 567
  - Passenger safety see Occupant safety
  - PCMCIA card
    - Ejecting (COMAND) 122
    - Loading (COMAND) 121
  - Pedals 559
  - Plastic parts, cleaning 624
  - POIs 229
  - Poly-V-belt drive 750
    - Layout 750
  - Potential problems associated with underinflated and overinflated tires 597
  - Power assistance 559

## Index

- Power closing assist for doors and trunk lid 368
  - Power folding exterior rear view mirrors 389
  - Power outlet 538
  - Power tilt/sliding sunroof 518
    - Opening/closing 518
    - Synchronizing 520
  - Power washer 616
  - Power windows 410
    - Blocking of rear window operation 64
    - Cleaning 622
    - Opening/closing 410
  - Practical hints 642, 705
  - Premium unleaded gasoline 571, 767, 770
  - PRE-SAFE® 57
    - Message in display 656
    - Messages in display 663
  - PRE-SAFE® Brake\*
    - Intermittent signal tone 80
  - Preventive occupant safety see PRE-SAFE®
  - Problems
    - While driving 420
    - With vehicle 20
  - Product information 13
  - Production options weight 607
  - Program mode see Automatic transmission, Automatic shift program
  - Program mode selector switch
    - Automatic shift program 436
  - Proper use of the vehicle 19
  - PSI 608
  - Push-start see Tow-start
- R**
- RACETIMER see Control system instrument cluster menus, AMG
  - Radio
    - FM/AM operation (COMAND) 102
    - Saving stations, FM/AM (COMAND) 106
    - Selecting satellite radio channel (Instrument cluster control system) 295
    - Selecting stations 294
    - Submenu overview, FM/AM (COMAND) 102
    - Switching wavebands, FM/AM (COMAND) 103
    - Tuning in stations/channels 103
    - Voice Control 334
  - Radio transmitters, control and operation 567
  - Range (distance to empty) 292
  - Reading lamps in the front 407
  - Reading lamps in the rear 407
  - Real-time traffic (COMAND) 248
  - Rear door window
    - Blocking operation 64
  - Rear fog lamp
    - Replacing bulbs 715
  - Rear lamps see Tail lamps
  - Rear seats
    - Adjustment 373
    - Folding back and placing upright rear head restraints 380
    - Head restraints 379
    - Heating\* 377
    - Multicontour\* 383
    - Setting front passenger seat position from rear 377
    - Ventilation\* 378
  - Rear View Camera\* 487
    - Camera lens 487
    - Cleaning camera lens 621
    - Switching on 489
    - View through the camera 488

- Rear view mirrors see Mirrors
  - Rear window defroster 506
    - Activating 506
    - Deactivating 506
  - Recommended inflation pressure 608
  - Recovery services, Stolen vehicle (Tele Aid) 550
  - Refrigerant, Air conditioning 768, 769
  - Refueling 570
  - Regular checks 572
  - Remote
    - Door lock with Tele Aid 550
    - Door unlock with Tele Aid 549
    - Trunk opening/closing\* switch 511
  - Remote control, SmartKey 358
  - Remote control, SmartKey with KEYLESS-GO\* 361
  - Replacing
    - Bulbs 714
    - Front lamp bulbs 717
    - Rear lamp bulbs 715
  - Reporting safety defects 21
  - Reset (COMAND) 263
  - Residual engine heat and ventilation 509
  - Rest tool
    - Depository 710, 711
  - Restraint systems
    - Messages in display 697
    - See Children in the vehicle
    - See SRS
  - Reverse gear position, Automatic transmission 426, 430
  - Rims 608
    - And Tires 754
    - Tires and wheels 582
  - Roadside Assistance 15
    - Tele Aid 546
  - RON 571, 767
  - Roof rack\* 525
  - Route guidance (COMAND) 237
  - Route guidance (Instrument cluster control system) 292
  - Rubber parts, cleaning 624
- S**
- S 63 AMG
    - Manual shift program mode 440
  - S 65 AMG
    - Manual shift program mode 440
  - Safety
    - Driving safety systems 67
    - Occupant 40
    - Reporting defects 21
  - Safety belts see Seat belts
  - Satellite radio
    - Calling SIRIUS Service Center (COMAND) 115
    - Channel update (COMAND) 115
    - Operation (COMAND) 108
    - Selecting channel (Instrument cluster control system) 295
    - Selecting program category (COMAND) 111
    - Showing program info (COMAND) 115
    - Submenu overview (COMAND) 108
    - Tuning in channels (COMAND) 112, 114
    - Voice Control 335



## Index

- Seat belts 52
  - Children in the vehicle 58
  - Cleaning 624
  - Fastening 52, 395
  - Force limiter 55
  - Messages in display 697
  - Proper use of 54, 397
  - Safety guidelines 44
  - Telltale 29, 55, 635
- Seating capacity 586
- Seats 373
  - adjusting front passenger seat from driver's seat 376
  - Adjustment 373
  - Drive-dynamic multicontour\* in the front, Adjusting (COMAND) 285
  - Easy entry/exit feature 384
  - Folding back and placing upright rear head restraints 380
  - Head restraints 379
  - Heating\* 377
  - Lumbar support (COMAND) 283
  - Memory function 392
  - Multicontour\* in the front, Adjusting (COMAND) 283
  - Operating via COMAND 282
- Setting front passenger seat position from rear 377
- Ventilation\* 378
- Securing cargo
  - Cargo tie-down hooks 532
- Selector lever
  - Lock 416
- Selector lever see Gear selector lever
- Self-test
  - OCS 52
  - Tele Aid 543
- Service and warranty information 14
- Service intervals see Maintenance service indicator
- Service life, Tires 583
- Service see Maintenance
- Service system see Maintenance System
- Service, Parts 746
- Setting
  - Cruise control 447
  - DISTRONIC Plus\* time interval 464
  - Following distance in DISTRONIC Plus\* 464
  - Higher speed in cruise control 449
  - Higher speed in DISTRONIC Plus\* 461
  - Lower speed in cruise control 450
  - Lower speed in DISTRONIC Plus\* 462
  - Slower speed in cruise control 450
  - Slower speed in DISTRONIC Plus\* 462
  - Speed in DISTRONIC Plus\* 460
  - Suspension tuning (ABC\*) 470
  - Temperature (interior) 504
  - Temperature (rear passenger compartment) 510
  - To last stored speed ("Resume" function) in cruise control 450
  - To last stored speed in DISTRONIC Plus\* ("Resume" function) 463
  - Vehicle level control (ABC\*) 471
- Setting current speed 447
- Settings
  - Calling up DISTRONIC Plus\* 455
  - Control system in instrument cluster menus 305
  - Daytime running lamp mode 306
  - Resetting trip odometer 292
- Shelf below rear window, Cleaning and care of 624

- Shift program mode, Automatic transmission 436
- Shifting, Automatic transmission 426
- Side impact air bags 46
- Side marker lamps
  - Cleaning lenses 619
  - Messages in display 691
- Side windows see Power windows
- Sidewall 608
- SIRIUS Satellite Radio see Satellite radio
- SmartKey see Key, SmartKey
- SmartKey with KEYLESS-GO\* see Key, SmartKey with KEYLESS-GO\*
- SMS messages 183
- Snow chains 611
- Spare wheel 723, 759
  - Mounting 723
- Speed
  - Setting current 447
  - Setting to last stored speed in DISTRONIC Plus\* (“Resume” function) 463
- Speed settings
  - Cruise control 449, 450
  - DISTRONIC Plus\* 460, 461, 462
  - To last stored speed (“Resume” function) in Cruise control 450
- SRS 54
  - Indicator lamp 29, 637
  - Messages in display 697
- Standing water, Driving through 566
- Starter battery 731
- Starter switch 370
  - Positions 370
- Starting difficulties, Engine 418
- Starting, Engine 416
- Steering column 386
- Steering wheel
  - Adjustment 386
  - Cleaning 624
  - Easy entry/exit feature 384
  - Heated steering wheel\* 387
  - Power steering fluid 766
- Steering wheel gearshift control
  - Automatic transmission 438
- Stolen Vehicle Recovery services 550
- Storage compartments 526
  - Cupholder 530
  - Front armrest 527
  - Parcel net 528
  - Rear armrest 528
  - Ruffled storage pockets 530
- Storage compartment in front armrest 527
- Storage tray/telephone\* compartment in front armrest 527
- Under the front seats 527
- Storing tires 584
- Summer opening feature 412
- Sun visors 534
- Sunroof see Power tilt/sliding sunroof
- Sunshades
  - Extending or retracting rear window sunshade (COMAND) 271
  - Extending/retracting rear window sunshade 535
  - Opening or closing rear side window sunshades 412
- Suspension tuning
  - Setting (ABC\*) 470
  - Setting (Airmatic) 468
- Symbols used in this operator’s manual 18
- System settings (COMAND)
  - Bluetooth® settings 180
  - Display 259
  - Favorite button 263

## Index

- Menu overview 259
- Reset 263
- Setting the system language 262
- Time settings 259
- Voice Control settings (COMAND) 261
- T**
- Tachometer 445
  - Overspeed range 445
- Tail lamps
  - Cleaning lenses 619
  - Messages in display 692
- Tar stains 616
- Tele Aid 542
  - Automatic Maintenance Call 550
  - Call priority 548
  - Emergency calls 544
  - Hands-free microphone 33
  - Information 547
  - Information button 546
  - Initiating an emergency call manually 545
  - Messages in display 699
  - Remote door lock 550
  - Remote door unlock 549
  - Roadside Assistance 546
  - Roadside Assistance button 546
  - SOS button 545
  - Stolen Vehicle Recovery services 550
  - System self-check 543
- Telephone cradle
  - Changing 542
- Telephone\* 539
  - “911” emergency call (COMAND) 145
  - Accepting/ending a call (COMAND) 152
  - Answering/ending a call (Instrument cluster control system) 302
  - Call lists (COMAND) 150
  - Changing mobile phone cradle 542
  - Compartment 527
  - Dialing (Instrument cluster control system) 301
  - Entering the telephone number (COMAND) 153
  - Hands-free microphone 33
  - Inserting in cradle 540
  - Installing a different mobile phone cradle 542
  - Operation 299
  - Operation (COMAND) 141
  - Phone book (COMAND) 158
  - Phone book (Instrument cluster control system) 301
  - PIN (COMAND) 146
  - PIN2 (COMAND) 147
  - PUK / PUK2 (COMAND) 147
  - Redialing (COMAND) 154
  - Redialing (Instrument cluster control system) 302
  - Removing from cradle 541
  - Single call connection (COMAND) 155
  - Speed dialing (COMAND) 154
  - Submenu overview (COMAND) 148
  - Switching on/off (COMAND) 143
  - Transferring a call (COMAND) 157
  - Unlock code (COMAND) 147
  - Voice Control 313
- Temperature
  - Outside temperature indicator 29
  - Setting interior temperature (COMAND) 274
  - Tires 591
- Tie-down hooks, Trunk 532
- Tightening torque, Wheel bolts 728

- Tilt/sliding sunroof see Power tilt/sliding sunroof
- Time
  - Setting (COMAND) 259
- TIN 608
- Tire and Loading Information
  - Placard 586
- Tire Identification Number see TIN
- Tires 582
  - Advanced Tire Pressure Monitoring System (Advanced TPMS)\* 593
  - And Rims 754
  - And Wheels 582
  - Care and maintenance 583
  - Chains 611
  - Checking inflation pressure electronically with Advanced Tire Pressure Monitoring System (Advanced TPMS) 593
  - Cleaning 584
  - Cold tire inflation pressure 606
  - Combination low tire pressure malfunction telltale 29, 638
  - Direction of rotation 585
  - Driving instructions 563
- Important notes on tire inflation pressure 591
- Inflation pressure 590
- Information placard 586
- Inspection 583
- Load rating 599, 608
- Load rating, Maximum 603, 607
- Minispare wheel 707
- Ply composition and material used 608
- Problems under-/overinflation 590
- Retreads 582
- Rotating 609
- Service life 583
- Sizes 754
- Snow 610
- Spare wheel 759
- Speed rating 564, 600, 608
- Storing 584
- Temperature 591, 605
- Terminology 606
- Total load limit 608
- TPMS malfunction telltale 638
- TPMS\* malfunction telltale 29
- Traction 564, 608
- Tread depth 584
- Tread depth, Winter 610
- Treadwear indicators 608
- Vehicle maximum load on 609
- Wear pattern 609
- Winter 610
- Tools 705
- Top tether
  - Children in the vehicle 62
- Towing eye bolt (vehicle tool kit) 705, 740
- Towing the vehicle 737
- Tow-start 734, 737
- Traction 564, 605, 608
- Transmission see Automatic transmission
- Traveling abroad 567
- Tread 608
- Tread depth, Tires 584
- Tread depth, Winter tires 610
- Treadwear indicators 608
- Trip odometer 291
  - Resetting 292
- Troubleshooting
  - Voice Control 352

## Index

- Trunk
  - Closing 511, 708
  - Closing trunk from inside 511
  - Closing trunk from outside 511
  - Emergency release 516
  - Lighting 407
  - Message in display 704
  - Opening from inside 511
  - Opening from outside 511
  - Opening-height restriction (COMAND) 272
  - Power closing assist for trunk lid 368
  - Tie-down hooks 532
  - Unlocking in an emergency 708
  - Valet locking 517
- Tumbler holder see Cupholder
- Turn signal lamps
  - Cleaning lenses 619
  - Replacing bulbs 715
- Turn signals 420
  - Additional in mirrors 715
  - Front bulbs 715
  - Indicator lamp 29
  - Rear bulbs 715
- U**
  - Uniform Tire Quality Grading Standards 609
  - Uphill driving
    - Cruise control 448
  - Upholstery
    - Cleaning 625
  - Useful features 534
- V**
  - Valet locking 517
  - Vanity mirrors
    - In the sun visor 534
  - Vehicle
    - Batteries 729
    - Breaking-in period 558
    - Care 615
    - Dimensions 762
    - Individual settings, control system in instrument cluster 305
    - Locking/unlocking 358, 361
    - Locking/unlocking in an emergency 708
    - Lowering 727
    - Menu (COMAND) 264
    - Service battery 729
    - Towing 737
    - Washing 615, 617
    - Weights 763
  - Vehicle data recording 22
  - Vehicle jack 706, 724
  - Vehicle level
    - Changing (ABC\*) 471
    - Changing (Airmatic) 469
    - Setting (ABC\*) 471
    - Setting (Airmatic) 469
    - Setting, Automatic (ABC\*) 471
    - Setting, Automatic (Airmatic) 469
    - Setting, Manual (ABC\*) 471
    - Setting, Manual (Airmatic) 469
  - Vehicle level control (Airmatic) 469
  - Vehicle loading 525, 585
    - Cargo tie-down hooks 532
    - Instructions 525
    - Load limit 586
    - Roof rack\* 525
    - Terminology 606
  - Vehicle maximum load on the tire 609
  - Vehicle Recovery services, Stolen (Tele Aid) 550
  - Vehicle tool kit 705

- Video (COMAND) 132
- Video AUX
  - Screen settings 130
- Video AUX (COMAND) 130
- Video DVD
  - Operating (COMAND) 132
  - Operating (Control system) 295
  - Submenu overview 134
  - Switching to mode 134
  - Video game 140
- VIN 749
- Voice Control
  - Address book 330
  - Command list 340
  - DVD changer 338
  - Individualization 355
  - Individualization (COMAND) 261
  - Introduction 309
  - Navigation 320
  - Operating safety 308
  - Operation via the multifunction steering wheel 311
  - Radio 334
  - Switching help window on or off (COMAND) 261
  - Telephone 313
- Troubleshooting 352
- W**
- Warning indicators
  - Park Assist\* 479
  - Parktronic\* 474
- Warning sounds
  - DISTRONIC Plus\* 454
  - Drivers seat belts 55
  - Electronic parking brake 424
  - PRE-SAFE® Brake\* 80
  - Seat belt telltale 636
- Warranty coverage 747
- Washing the vehicle 615
- Wear pattern, Tires 609
- Weights, Vehicle 763
- Wheels
  - Change 723
  - Collapsible wheel chock 707
  - Minispare wheel 707
  - Removing 726
  - Rims and Tires 754
  - Sizes 754
  - Spare wheel 759
  - Tightening torque 728
  - Tires and wheels 582
- Window curtain air bags 46, 47
- Windows see Power windows
- Windshield
  - Cleaning 622
  - Cleaning wiper blades 622
  - Infrared reflecting 556
- Windshield washer fluid 768, 774
  - Mixing ratio 774
  - Refilling 580
  - Wiping with 409
- Windshield wipers 408
  - Cleaning wiper blades 622
  - Replacing wiper blades 721
  - Single wipe 409
- Winter driving 610
  - Snow chains 611
  - Tires 610
- Winter driving instructions 565
- Winter tires 610
- Wood trims, Cleaning 625
- Wrench, wheel (vehicle tool kit) 705
- X**
- Xenon headlamp see Headlamps



### Service and Literature

Your authorized Mercedes-Benz Center has trained technicians and Genuine Mercedes-Benz Parts to service your vehicle properly.  
For expert advice and quality service, contact an authorized Mercedes-Benz Center.

If you are interested in obtaining service literature for your vehicle, please contact an authorized Mercedes-Benz Center.  
We consider this the best way for you to obtain accurate information for your vehicle.

For further information you can find us on the Mercedes-Benz web-site [www.mbusa.com](http://www.mbusa.com) or [www.mercedes-benz.ca](http://www.mercedes-benz.ca).

#### Warning!



To help avoid personal injury, be extremely careful when performing any service work or repairs. Improper or incomplete service or the use of incorrect or inappropriate parts or materials may damage the vehicle or its equipment, which may in turn result in personal injury.

If you have any questions about carrying out any type of service, turn to the advice of an authorized Mercedes-Benz Center.

We reserve the right to make changes in design and equipment.  
Therefore, information, illustrations and descriptions in this Operator's Manual might differ from your vehicle.  
Reprinting, translation and copying, even of excerpts, is not permitted without our prior authorization in writing.

Press time July 31, 2007

GSP/TID

Printed in U.S.A



