



**>> Quick Guide.**

smart fortwo coupé and smart fortwo cabriolet



## Let the fun begin

This Quick Guide will quickly and efficiently inform you about the most important functions of your vehicle. It does not, however, in any way, replace the Operator's Manual.

This is especially significant with regard to warnings and cautions. This Quick Guide should only be used as a reference.

Therefore it is imperative that you read the Operator's Manual carefully and completely before your first drive, paying special attention to the chapter "Safety". Doing so will help you obtain the maximum pleasure from your vehicle and avoid endangering yourself and others.

Items of optional equipment are marked with an asterisk \*. The equipment in your vehicle may vary, depending on the model and availability.

smart is constantly updating its vehicles to the very latest state of the art and therefore reserves the right to introduce changes in design, equipment and technical features at any time. You cannot, therefore, base any claims on the data, illustrations or descriptions in this Quick Guide.

The Operator's Manual, Quick Guide and Maintenance/Warranty Booklet (USA only) or Service/Warranty Booklet (Canada only) belong to the vehicle. You should always keep these documents in the vehicle and make sure that you pass them on to the next owner if and when you come to sell your smart.

Please contact an authorized smart center if you have any further questions.

The Technical Documentation team at Daimler wishes you many happy hours at the wheel.

### Warning!

Various warning stickers are affixed to your vehicle. Their purpose is to draw your attention, and the attention of others, to various dangers. Therefore, do not remove

any warning stickers unless the sticker clearly states that you may do so. If you remove the warning stickers, you or others could be injured by failing to recognize certain dangers.

## Symbols

Trademarks®:

- ESP® is a registered trademark of Daimler.
- \* Optional equipment

### Warning!

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.


 Highlights hazards that may result in damage to your vehicle.

 Helpful hints or further information you may find useful.

- This symbol points to instructions for you to follow.
- A number of these symbols appearing in succession indicates a multiple-step procedure.
- This continuation symbol marks a warning or procedure which is continued on the next page.

<b>At a glance .....</b>	<b>2</b>
Cockpit .....	2
Steering wheel gearshift control .....	3
Instrument cluster (miles) .....	4
Miles .....	4
Instrument cluster (kilometers) .....	6
Kilometers .....	6
Center console .....	8
Overhead control panel .....	9
Door control panel .....	9
<b>Getting started .....</b>	<b>10</b>
Opening and closing .....	10
Key .....	10
Opening the upper tailgate on the coupé .....	10
Opening the lower tailgate on the coupé .....	10
Closing the tailgate(s) on the coupé .....	10
Opening the tailgate on the cabriolet .....	10
Opening and closing the rear soft top (cabriolet only) .....	11
Starter switch positions .....	11
Seats .....	11
Mirrors .....	11
Exterior rear view mirrors .....	11
Interior rear view mirror .....	12
Lighting .....	12
Low-beam headlamps .....	12
Combination switch (high beam, highbeam flasher and turn signals) ....	12
High beam and high-beam flasher .....	12
Turn signals .....	13
Windshield wipers .....	13
Switching windshield wipers on and off .....	13
Wiping with windshield washer fluid .....	13
Rear window wiper/washer (coupé only) .....	13
Driving and parking .....	14
Starting .....	14
Parking .....	14

&gt;&gt; At a glance.

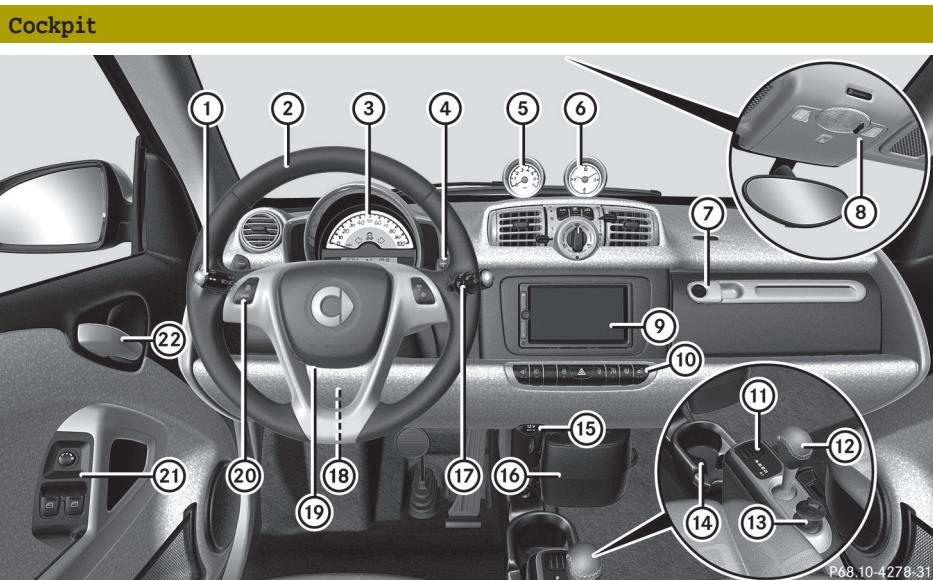

P68.10-4278.31

Function	Function
① Exterior lamp switch	⑬ Starter switch
② Steering wheel <sup>1</sup>	⑭ Cup holder
③ Instrument cluster	⑮ Auxiliary power outlet
④ Steering wheel gearshift control	⑯ Storage box*
⑤ Tachometer*	⑰ Wiper switch
⑥ Cockpit clock*	Cruise control switch* Control lever (control system)*
⑦ Glove box AUX/USB sockets*	⑱ On-board Diagnostics Socket (OBD)
⑧ Overhead control panel	⑲ Horn
⑨ Audio system*	⑳ Cruise control buttons*
⑩ Center console switches	㉑ Door control panel
⑪ Coin holder Retractable soft top switch <sup>2</sup>	㉒ Inside door handle
⑫ Gear selector lever	

<sup>1</sup> Model pure only: The steering wheel in this vehicle varies from steering wheel illustrated.<sup>2</sup> cabriolet only.

\* optional

### Steering wheel gearshift control



>> At a glance.


Function	
①	Multifunction display
②	Right shift paddle <sup>3</sup> : Upshift
③	Left shift paddle <sup>3</sup> : Downshift

**①** Model pure only:

The steering wheel in this vehicle varies from steering wheel illustrated.


<sup>3</sup> Model passion and BRABUS only.

>> At a glance.

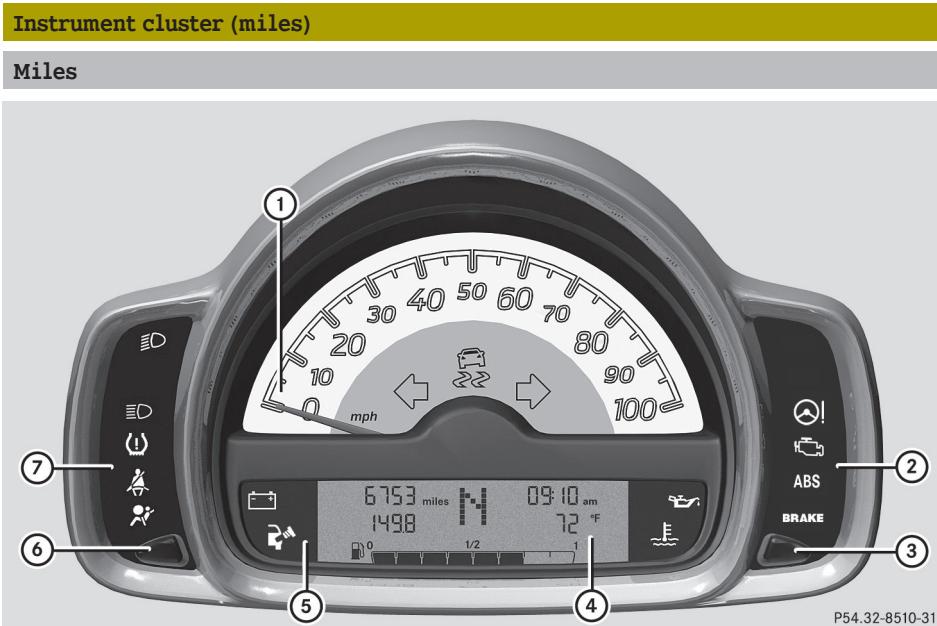

Instrument cluster (U.S. vehicles)

Function	
①	Speedometer
②	Right indicator and warning lamp display
③	Adjusting instrument cluster illumination Setting digital clock
④	Multifunction display
⑤	Center indicator and warning lamp display
⑥	Selecting display for status indicator Setting digital clock
⑦	Left indicator and warning lamp display

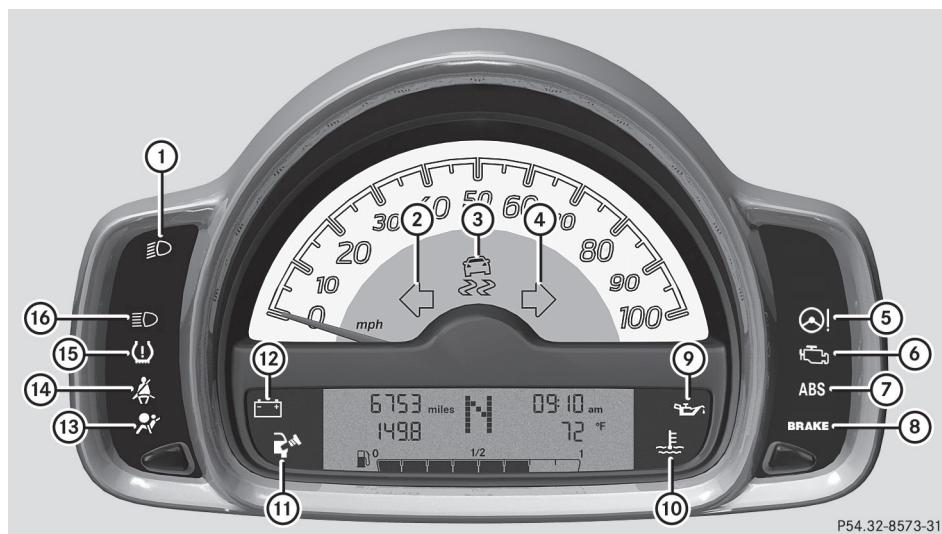Indicator and warning lamps

&gt;&gt; At a glance.


Function		Function	
①	Low-beam headlamp indicator lamp	⑩	Coolant temperature warning lamp
②	Left turn signal indicator lamp	⑪	Fuel cap indicator lamp
③	ESP® warning lamp	⑫	Battery indicator lamp
④	Right turn signal indicator lamp	⑬	SRS indicator lamp
⑤	EPS* warning lamp	⑭	Seat belt telltale
⑥	Engine malfunction indicator lamp	⑮	Combination low tire pressure/TPMS malfunction telltale*
⑦	ABS indicator lamp	⑯	High-beam headlamp indicator lamp
⑧	Brake warning lamp		
⑨	Engine oil pressure indicator lamp		

\* optional

>> At a glance.

Instrument cluster (kilometers)

Kilometers

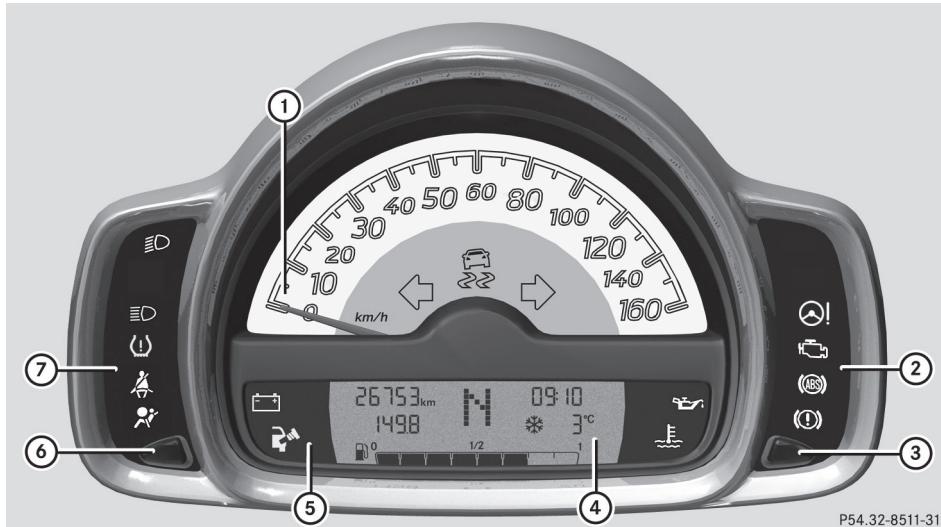

P54.32-8511-31


Instrument cluster (Canada vehicles)

Function	
①	Speedometer
②	Right indicator and warning lamp display
③	Adjusting instrument cluster illumination Setting digital clock
④	Multifunction display
⑤	Center indicator and warning lamp display
⑥	Selecting display for status indicator Setting digital clock
⑦	Left indicator and warning lamp display

## Instrument cluster (kilometers)

7

## Indicator and warning lamps

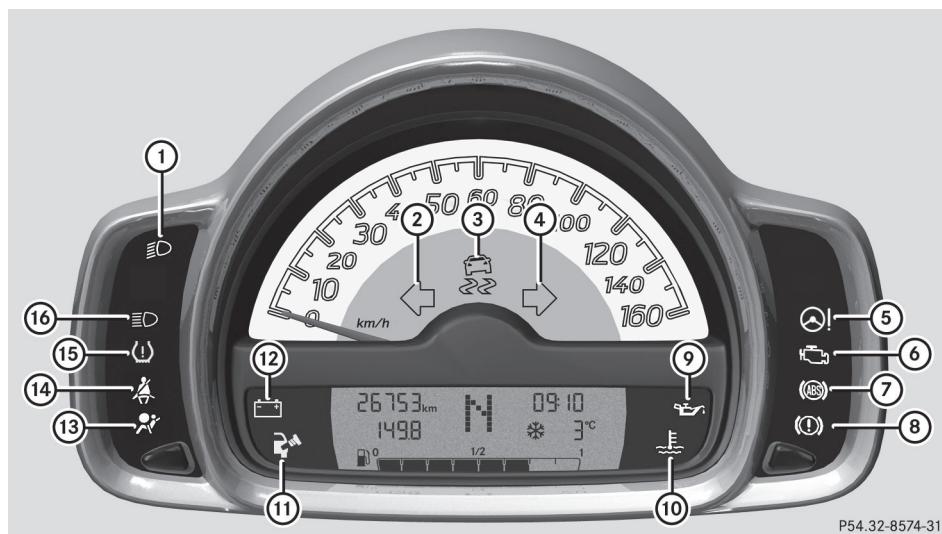

P54.32-8574-31



Function	
①	Low-beam headlamp indicator lamp
②	Left turn signal indicator lamp
③	ESP® warning lamp
④	Right turn signal indicator lamp
⑤	EPS* warning lamp
⑥	Engine malfunction indicator lamp
⑦	ABS indicator lamp
⑧	Brake warning lamp
⑨	Engine oil pressure indicator lamp
⑩	Coolant temperature warning lamp
⑪	Fuel cap indicator lamp
⑫	Battery indicator lamp
⑬	SRS indicator lamp
⑭	Seat belt telltale
⑮	Combination low tire pressure/TPMS malfunction telltale*
⑯	High-beam headlamp indicator lamp

&gt;&gt; At a glance.

\* optional

&gt;&gt; At a glance.

## Center console

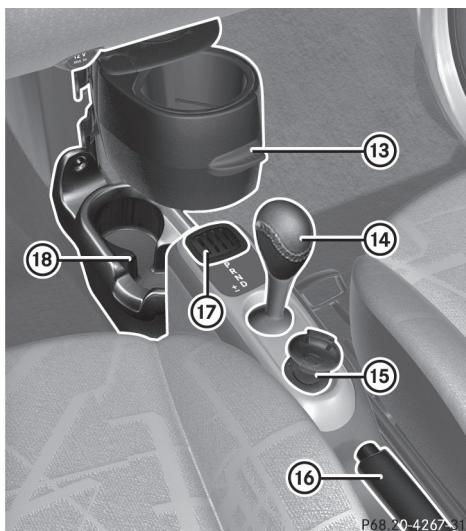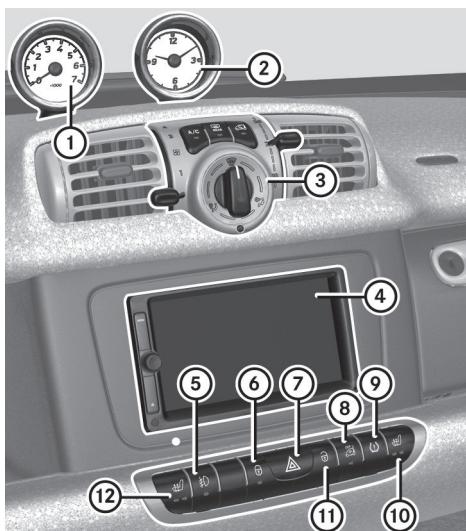

	Function
①	Tachometer*
②	Cockpit clock*
③	HVAC
④	Audio system*
⑤	Switching front fog lamps* on/off
⑥	Central locking switch
⑦	Hazard warning flasher switch
⑧	Switching tow-away protection*/ interior motion sensor* on/off
⑨	Restarting TPMS button
⑩	Switching seat heating* on/off, passenger side

	Function
⑪	Central unlocking switch
⑫	Switching seat heating* on/off, driver's side
⑬	Storage tray*
⑭	Gear selector lever
⑮	Starter switch
⑯	Parking brake lever
⑰	Coin holder Retractable soft top switch <sup>4</sup>
⑱	Cup holder

<sup>4</sup> cabriolet only.


\* optional

Overhead control panel



P82.00-2792-31

Door control panel

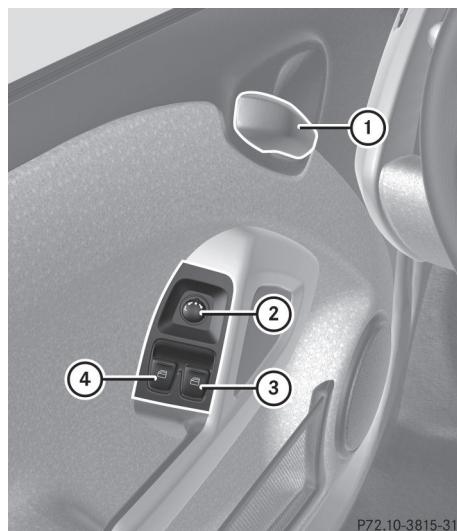

P72.10-3815-31

Function	
①	Passenger front air bag off indicator lamp
②	Switching interior lighting on/off
③	Interior rear view mirror

Function	
①	Inside door handle
②	Adjusting exterior rear view mirrors: Manually Electrically <sup>5</sup>
③	Opening and closing right side window: Manually Electrically <sup>5</sup>
④	Opening and closing left side window: Manually Electrically <sup>5</sup>


>> At a glance.

<sup>5</sup> Model passion and BRABUS only.

### >> Getting started.

### Opening and closing

#### Key

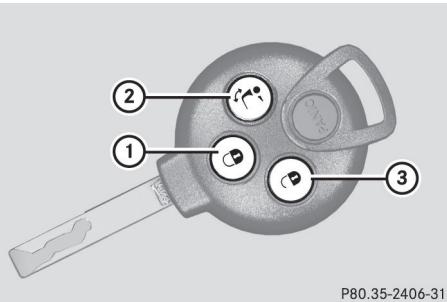


P80.35-2406-31

Key with remote control

- ① ④ Lock button
- ② ⑤ Opening the retractable soft top<sup>6</sup>/unlocking the upper tailgate<sup>7</sup>
- ③ ⑥ Unlock button


### Opening the upper tailgate on the coupé

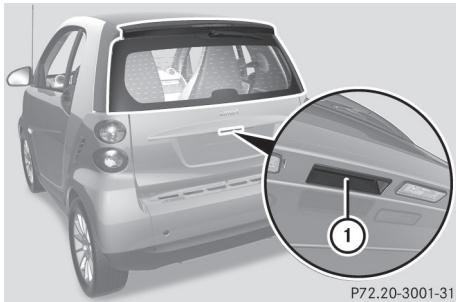

P72.20-3001-31

- ① Release handle in handle recess

### Opening the lower tailgate on the coupé

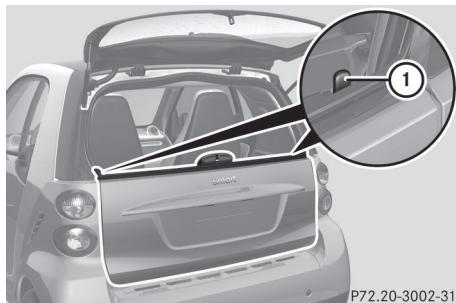

P72.20-3002-31


- ① Release levers

### Closing the tailgate(s) on the coupé



P72.20-3003-31

### Opening the tailgate on the cabriolet

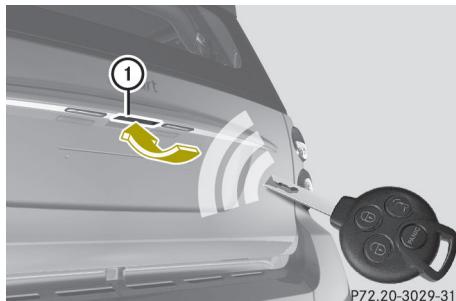


P72.20-3029-31

<sup>6</sup> cabriolet only.

<sup>7</sup> coupé only.


- ▶ Press button ① on the key twice.
- ▶ Pull the release handle in handle recess ① of the tailgate.  
The tailgate is unlocked.
- ▶ Swivel the tailgate downwards to open.

#### Opening and closing the rear soft top (cabriolet only)

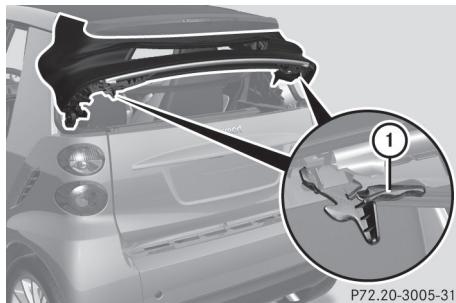

① Release levers

#### Seats

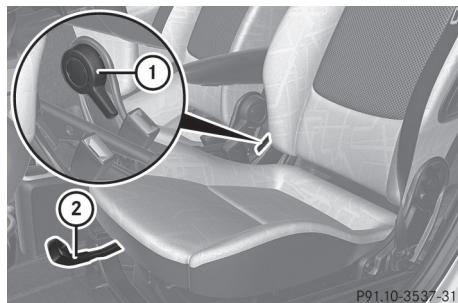


- ① Seat backrest tilt  
② Seat fore and aft adjustment

>> Getting started.

#### Mirrors

##### Exterior rear view mirrors

##### Manually adjustable exterior rear view mirrors

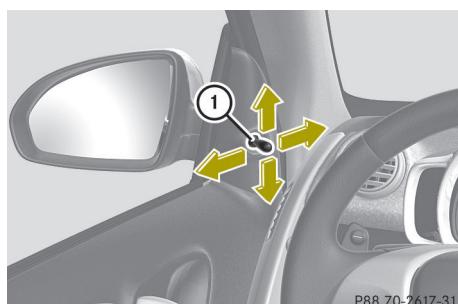

- ① Adjustment lever


##### Power exterior rear view mirrors

This feature is only available on the model passion and BRABUS.

#### Starter switch


0	For removing key
1	Ignition (power supply for all electrical consumers) and driving position
2	Starting

>> Getting started.

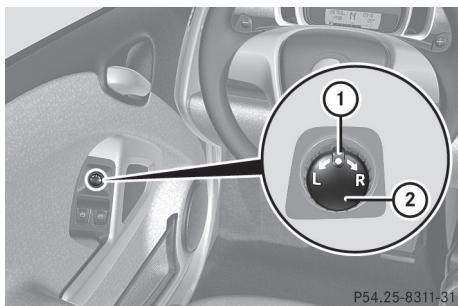

- ① Knob for selecting the mirror  
② Adjustment button


### Interior rear view mirror

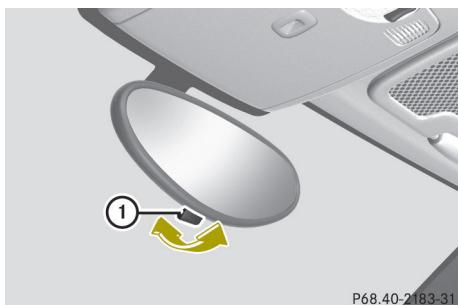

- ① Lever for selecting antiglare position

### Lighting

#### Low-beam headlamps

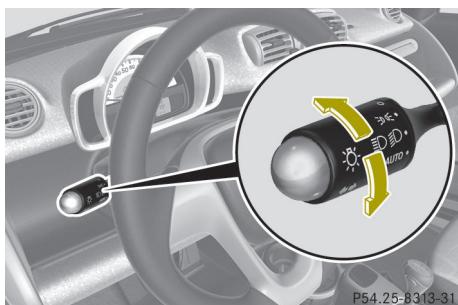


Exterior lamp switch (USA only)

- 0 Lamps off

Daytime running lamp mode\*

- Parking lamps  
 Low-beam headlamps or high-beam headlamps  
 Automatic headlamp mode\*

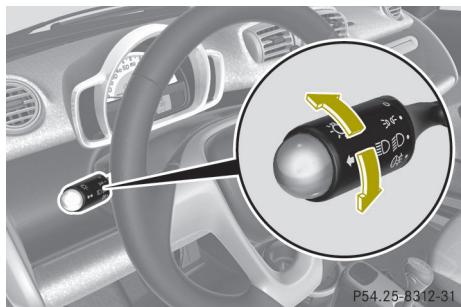


Exterior lamp switch (Canada only)

- 0 Lamps off  
Daytime running lamp mode  
 Parking lamps  
 Low-beam headlamps or high-beam headlamps

► **Switching on:** Turn the exterior lamp switch to position .

### Combination switch (high beam, highbeam flasher and turn signals)

#### High beam and high-beam flasher

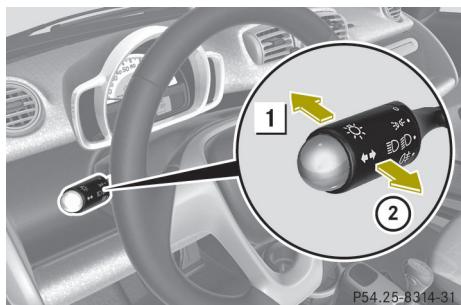


Combination switch

- ① High beam

- ② High-beam flasher

\* optional

### Turn signals

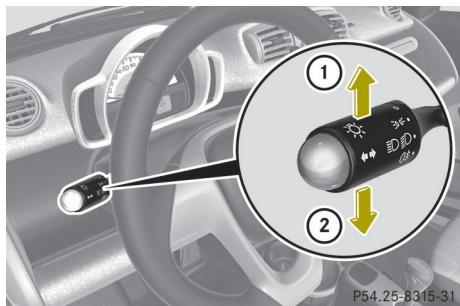


P54.25-8315-31

Combination switch

- ① Turn signals, right
- ② Turn signals, left

### Wiping with windshield washer fluid

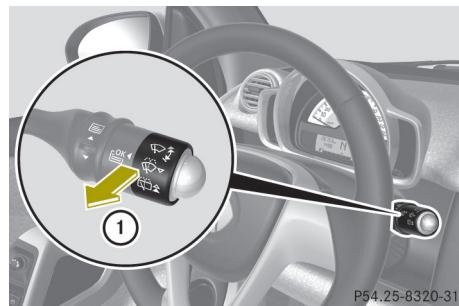


P54.25-8320-31

Wiper switch

- ① Wiping with windshield washer fluid

### Windshield wipers

#### Switching windshield wipers on and off

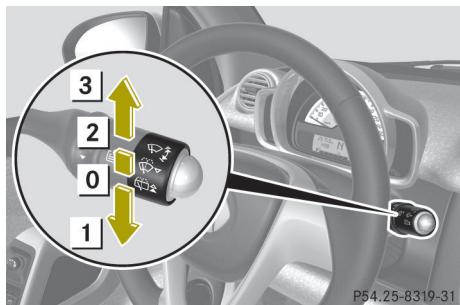


P54.25-8319-31

Wiper switch

- ① Windshield wipers off
- ② Intermittent wiping
- ③ Slow continuous wiping
- ④ Fast continuous wiping

### Rear window wiper/washer (coupe only)

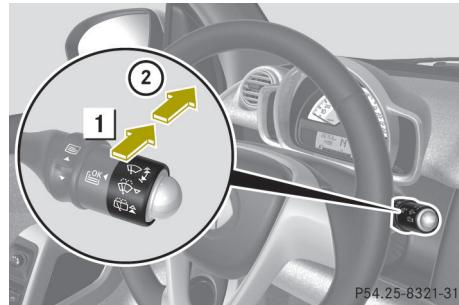

P54.25-8321-31


Wiper switch

- ① Rear window intermittent wiping
- ② Wiping rear window with windshield washer fluid

**i** The rear window wiper wipes one time when reverse gear **R** is engaged with the windshield wipers switched on.

## Driving and parking

### Starting

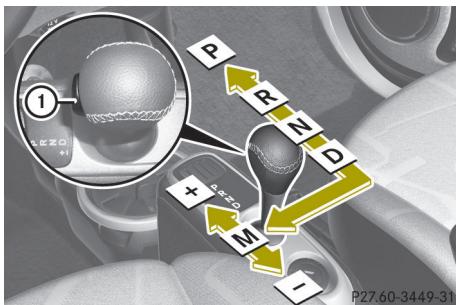

lamp **BRAKE** (USA only) or **(O)** (Canada only) in the instrument cluster comes on.

- ▶ Release the brake pedal.
- ▶ Turn the key to starter switch position **0** and remove the key from the starter switch.

Gearshift pattern for transmission


① Release button

<b>P</b>	Park position
<b>R</b>	Reverse gear
<b>N</b>	Neutral position
<b>D</b>	Drive position
<b>M</b>	Manual gear shifting
<b>+</b>	Upshifting
<b>-</b>	Downshifting

- ▶ Make sure the gear selector lever is set to park position **P**.  
The transmission position indicator should be on **P**.
- ▶ Do not depress the accelerator pedal.
- ▶ Turn the key to starter switch position **2** and release it again immediately.  
The engine starts automatically ("touch-start" function).


### Parking

- ▶ Properly stop and park the vehicle.
- ▶ Depress the brake pedal.
- ▶ Engage the parking brake.  
When the ignition is switched on or the engine is running, the brake warning

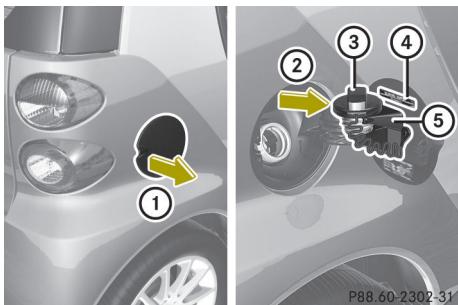**Refueling**

- ① Opening the fuel filler flap
- ② Inserting the fuel filler cap
- ③ Fuel filler cap
- ④ Fuel type label
- ⑤ Holder


- ▶ Fold both levers ② outward in direction of the arrows ③ as far as they will go.
- ▶ Lift the front end of service flap ①.
- ▶ Pull service flap ① forward slightly and remove it upwards as indicated by arrow ④.

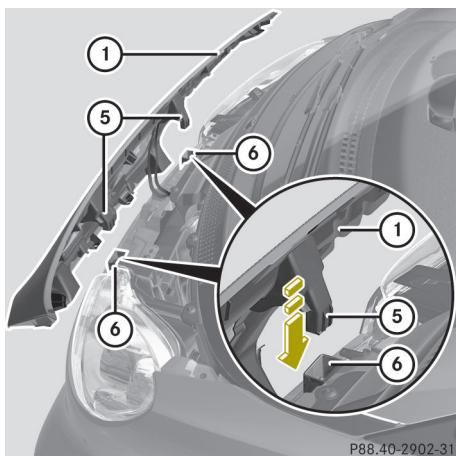

>> Operation.

**Service flap**

Remove the service flap to check the coolant level, windshield washer reservoir level, and brake fluid level.

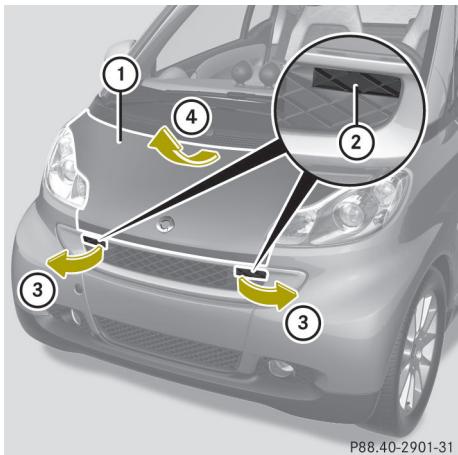

- ▶ Insert hooks ⑤ on the back of service flap ① completely into openings ⑥.

Where will I find ...?

**First-aid kit\***

The first-aid kit is located on the driver's side in the cargo compartment.

- i** Check expiration dates and contents for completeness at least once a year and replace missing/expired items.

>> Practical hints.

\* optional

## Service and Literature

Your authorized smart center has trained technicians and Genuine smart Parts to service your vehicle properly.

For expert advice and quality service, contact an authorized smart center.

For further information you can find us on the smart web-site [www.smartusa.com](http://www.smartusa.com) (USA only) or [www.thesmart.ca](http://www.thesmart.ca) (Canada only).

### **Warning!**

To help avoid personal injury, be extremely careful when performing any service work or repairs. Improper or incomplete service or the use of incorrect or inappropriate parts or materials may damage the vehicle or its equipment, which may in turn result in personal injury.

If you have any questions about carrying out any type of service, turn to the advice of an authorized smart center.

We reserve the right to make changes in design and equipment.

Therefore, information, illustrations and descriptions in this Quick Guide might differ from your vehicle.

Reprinting, translation and copying, even of excerpts, is not permitted without our prior authorization in writing.

Order no. 6522 0036 13  
Part no. 451 584 99 87  
Edition A 2011



[www.smart.com](http://www.smart.com)

smart - A Daimler brand