

# CLA Coupe Brief overview

Mercedes-Benz





#### ① Door handle

$\cup$	
	Locks the vehicle centrally
	Unlocks the vehicle centrally
2	Seat functions
	Adjusts the seat electrically
	Memory function and presets
3	Light switch
4	Steering wheel paddle shifters
5	Multifunction steering wheel buttons
6	DIRECT SELECT selector lever
7	Multimedia system display
8	Multimedia system

# (9) Upper control panel

- ∰ Seat heater
- Selects a DYNAMIC SELECT drive program
- A Hazard warning lights
- ECO start/stop function
- Parking Assist PARKTRONIC
- Automatic climate control

# (1) Multimedia system controller

- Back button
- ★ Favorites button
- (12 (P) Electric parking brake
- (13 S) Opens or closes the trunk lid
- Door control panel with controls for power windows and exterior mirror settings



# **Overhead control panel**

- 1 Sliding sunroof
  - Roller sunblind
- 2 Buttons for interior lighting and reading light
- (3) (3) Info call\* (mbrace system) E.g. for questions on vehicle operation.
- (4) **C**sos SOS button\* (mbrace system)
- (5) SF Breakdown assistance call\* (mbrace system)
- \* Not available in all countries



#### Overview

- (1) Combination switch for turn signals, high-beam headlamps and windshield wipers
- Lever for cruise control/Distance Pilot DISTRONIC



# Combination switch – windshield wiper functions

1 😱 Single wipe

4 5

- Wipes the windshield using washer fluid
- 1 0 Windshield wipers off
- 2 ••• Intermittent wiping, normal
- **3** •••• Intermittent wiping, frequent
  - Continuous wiping, slow
  - Continuous wiping, fast

# **Combination switch – lighting functions**

- High-beam headlamps or Adaptive Highbeam Assist
- (2) Turn signal, right
- ③ High-beam flasher
- ④ Turn signal, left





# Activating/deactivating

- Switches on with the current speed or calls up the last set speed
- 2 Deactivates Distance Pilot DISTRONIC

#### Changing the speed

- ③ Increases the speed or stores the current speed
- Decreases the speed or stores the current speed
- (5) Increases the specified minimum distance
- 6 Reduces the specified minimum distance

Distance Pilot DISTRONIC maintains a constant speed which has been stored. The lowest speed that can be set is 20 mph (30 km/h).

You can change the set speed:

- 1 mph (1 km/h) step: Briefly press the lever up or down.
- 5 mph (10 km/h) step: Press the lever up or down past the pressure point.

When Distance Pilot DISTRONIC is activated, one or two segments in the set speed range light up in the speedometer.

Using the controller on the DISTRONIC lever, you can change the specified minimum distance to the vehicle in front. The specified minimum distance depends on the currently driven speed.



#### Adjusting automatic climate control

You can adjust automatic climate control using the buttons on control panel (). If you change any settings, the lower edge of

display (2) briefly shows the current settings of automatic climate control.

#### Automatic climate control panel

- Defrosts the windshield
- ZONE Sets climate zones separately
- A/c Activates or deactivates the cooling function of automatic climate control.
- Defrosts the rear window
  - Reduces the airflow
- Se Increases the airflow
- **OFF** Completely activates or deactivates automatic climate control.
- AUTO Sets climate control to automatic mode
- Air-recirculation mode

The air in the interior will be recirculated. In air-recirculation mode, the windows can fog up more quickly.

- Residual heat with the engine off (Canada only)
- نز: Sets the air distribution
- MODE Sets the air distribution
- Maximum cooling (USA only)

#### **General notes**

Climate control regulates the temperature and the humidity in the vehicle interior and filters undesirable substances out of the air.

Climate control is only operational when the engine is running. Optimum operation is only achieved when the side windows and the roof are closed.

 
To prevent the windows from fogging up, please observe the following information:

- OFF Switch off automatic climate control only briefly
- \$

Switch on air-recirculation mode only briefly

- A/C Switch on the cooling function. In warm weather, the air inside the vehicle will be cooled. This function also dries the air inside the vehicle.
- **WMAX**

If necessary, briefly switch on the windshield defroster.



#### Buttons on the multifunction steering wheel



# Operating the menu of the on-board computer



- Scrolls through lists
  - Selects a submenu or function



Calls up the menu and menu bar

(3) OK Confirms the selected entry

(4) 🛨 Back button

#### Telephone/media functions

- 5 6
  - Accepts a telephone call
- 6 Rejects a telephone call Ends a call
- 8 Decreases the volume

## **Operating the Voice Control System**



🔥 Starts a dialog

← Cancels a dialog

#### Starting a dialog

The Voice Control System allows you to comfortably operate the majority of the multimedia system's functions.

► To say a command: Press the and say a command after the audible signal.

#### **Voice Control System help functions**

- General information: Say the *"Help Voice Control System"* command.
- Help for the current function: Say the "Help" command.
- Help for a specific system:

Say the help command for the desired system, e.g. *"Help telephone"*.

If you press the 3 button, the possible commands are shown in a help window. You can switch off the display of this help window in the multimedia system.

### Examples

#### Navigation commands

• "Enter destination"

A dialog for entering a destination in the navigation system will be started. Thereafter, say the destination address.

- "Nearest gas station" Many more categories for points of interest are available, e.g. restaurant or tourist attraction.
- "Navigate to John Doe" Start route guidance to a contact from your address book.

#### **Telephone commands**

- "Call John Doe" The telephone number of a stored contact is dialed.
- "New message" A dialog for entering a text message (SMS) will be started.

#### Audio commands

• "Station Z100"

If you are listening to the radio, you can say the name of a station to which you would like to listen.

• "Search for music"

A dialog in which you can search through your music files will be started.



You can operate the menus of the multimedia system using the controller.

- Controller: Turn or slide in the direction of the desired entry.
- Confirm your choice by pressing the controller.



Back button

Press and hold: Switches to the basic menu

\* Calls up or changes favorites



#### Direct buttons for the multimedia system

RADIO Radio menu	
Navigation menu	
MEDIA Media menu	
TEL Telephone menu	
Vehicle/system settings menu	



Example image: COMAND

# **Creating favorites**

- ① Adds a new favorite
- (2) Renames a selected favorite
- ③ Moves a selected favorite
- ④ Deletes a selected favorite

For rapid access to functions which are called up frequently, you can create up to 20 favorites.

# Adding a pre-defined favorite

- Press the \* button.
  The favorites are displayed.
- Slide the controller down. The menu bar is shown.
- Select Reassign and use the controller to select a category.
- Select a favorite and store it in the desired position.

# Adding your own favorite

You can create your own favorites, e.g. telephone numbers or navigation destinations. Example for a telephone number:

- Press the TEL button and select Name in the Telephone menu.
- Select a contact and display the telephone number.
- Press and hold the tavorites are displayed.
- Add a favorite at the desired position.

#### **Quickly storing radio stations**

If you are listening to the radio and the Radio menu is shown in the multimedia system:

- Press and hold the controller until the station list is shown.
- Select the desired preset in the station list and confirm.
  - A tone confirms the save.



# Example image: COMAND

#### Requirement

- Bluetooth<sup>®</sup> is switched on on the mobile phone (see the manufacturer's operator's manual).
- Bluetooth<sup>®</sup> is switched on on the multimedia system.

# Searching for a mobile phone

- ▶ Press the TEL button on the center console.
- Select Conn. Device 1.
- Audio 20: Select Connect New Device.
- Select Connect via Vehicle.
- Select the desired mobile phone.
- If possible, select the intended usage of the mobile phone (main or secondary phone).
- COMAND: Select Search for Phones.
- Select Start Search.
- Select the desired mobile phone.

If your mobile phone is not found, try searching on the mobile phone itself.

#### Authorizing a mobile phone

- A code is displayed in the multimedia system and on the mobile phone.
- If the codes match: If necessary, confirm in the multimedia system with Yes.
- Confirm the code on the mobile phone.

## Further information

Detailed information on  $\mathsf{Bluetooth}^{\textcircled{R}}$  connections with your mobile phone can be found at:

#### www.mercedes-benz.com/connect





#### **Connecting external media sources**

- ① SD card slot
- USB connections

The USB connection for Apple CarPlay<sup>TM</sup> and Android Auto<sup>TM</sup> is marked with the  $\square$  symbol.



# HANDS-FREE ACCESS

If you carry the KEYLESS-GO key on your person, you will be detected by a sensor.

Do not touch the bumper and maintain a distance of around 12 in (30 cm).

• **To open or close:** Kick into the sensor detection area below the bumper.

#### **Further information**

You can find further information on your vehicle at:

#### http://www.mbusa.com

If you have any questions, you can optionally also press the  $[]{}_{2}$  i button in the overhead control panel.





How-to videos

Operator's Manuals