

SLC Brief overview

Mercedes-Benz



Cockpit - overview



① Door handle Locks the vehicle centrally Unlocks the vehicle centrally

(2) Seat functions Adjusts the seat electrically

Memory function and presets 1 2 3

(3) Light switch

(4) Steering wheel paddle shifters (5) Multifunction steering wheel buttons


Make sure that you read the entire Operator's Manual. Otherwise, you may fail to recognize dangers.

Cockpit - overview

6 Multimedia system display (7) Multimedia system **8** Upper control panel ₩ Seat heater Selects a DYNAMIC SELECT drive program 暴 ESP® OFF A Hazard warning lights ECO start/stop function PARKTRONIC

Automatic climate control

- Selector lever 11) Transmission functions
- P Park position M Manual shifting Roadster functions
- Roof switch Operates all side windows
- (13) Multimedia system controller
 - * Favorites button Electric parking brake
- Door control panel with controls for power windows and exterior mirror settings

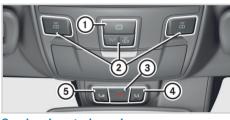

Overhead control panel


- 1 MAGIC SKY CONTROL
- 2 Buttons for interior lighting and reading light ③ **©SOS** SOS button* (mbrace system)
- 4 Si Info call* (mbrace system) E.g. for questions on vehicle operation.
- ⑤ SF Breakdown assistance call* (mbrace) system)

Note that your vehicle may not be equipped with all features described.


Lever on the steering wheel



- 1 Combination switch for turn signals, highbeam headlamps and windshield wipers Lever for electrical steering wheel
- adjustment Lever for cruise control/Distance Pilot
- DISTRONIC

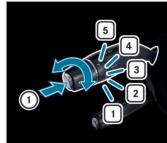

Combination switch - windshield wiper

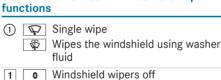 

••• Intermittent wiping, normal 3 Intermittent wiping, frequent 4 Continuous wiping, slow

5 Continuous wiping, fast

1 0



1 High-beam headlamps or

- Adaptive Highbeam Assist Plus Turn signal, right
- 3 High-beam flasher
- 4 Turn signal, left

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may fail to recognize dangers.

Activating/deactivating Changing the speed

- Switches on with the current speed or calls up the last set speed
- 2 Deactivates Distance Pilot DISTRONIC
- 3 Increases the speed or stores the current
- Decreases the speed or stores the current speed
- Increases the specified minimum distance 6) Reduces the specified minimum distance

Distance Pilot DISTRONIC maintains a constant

Distance Pilot DISTRONIC

speed which has been stored. The lowest speed that can be set is 20 mph

(30 km/h).You can change the set speed:

1 mph (1 km/h) step: Briefly press the lever up or down.

▶ 5 mph (10 km/h) step: Press the lever up or down past the pressure point.

When Distance Pilot DISTRONIC is activated, one or two segments in the set speed range light up in the speedometer. Using the controller on the DISTRONIC lever, you

can change the specified minimum distance to the vehicle in front. The specified minimum distance depends on the currently driven speed.


Note that your vehicle may not be equipped with all features described.

Adjusting climate control You can adjust automatic climate control using

Automatic climate control panel Defrosts the windshield

- Sets climate zones separately (Canada only)
- Activates or deactivates the cooling function of automatic climate control.
- Defrosts the rear window
- Reduces the airflow
- Increases the airflow
- Completely activates or deactivates automatic climate control.
- Air-recirculation mode
- The air in the interior will be recirculated. In air-recirculation mode, the windows can fog up more quickly.
- Residual heat with the engine off (Canada
- Maximum cooling (USA only) MAX
- Sets the air distribution

Climate control **General notes**

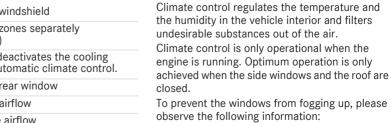

OFF Switch off automatic climate control only

briefly Switch on air-recirculation mode only

briefly

Switch on the cooling function.
In warm weather, the air inside the vehicle will be cooled. This function also dries the air inside the vehicle. If necessary, briefly switch on the

windshield defroster.



the buttons on control panel 1).

automatic climate control.

If you change any settings, the lower edge of

display 2 briefly shows the current settings of

Order no. P172 0106 13 Part no. 172 584 96 01 Edition A-2018




^{*} Not available in all countries

(10) Starts a dialog

Operating the Voice Control System





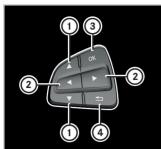

Operating the menu of the on-board


▼ Selects a submenu or function

2 Calls up the menu and menu bar

3 OK Confirms the selected entry

1 Scrolls through lists



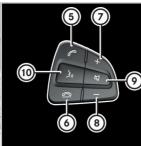

Telephone/media functions

6 Accepts a telephone call Rejects a telephone call

Ends a call + Increases the volume

 Decreases the volume Mute function

Voice Control System

Starting a dialog

computer

4 sack button

The Voice Control System allows you to comfortably operate the majority of the multimedia system's functions.

▶ To say a command: Press the 3, button and say a command after the audible signal.

Voice Control System help functions

- **General information:** Say the "Help Voice Control System" command.
- Help for the current function: Say the "Help" command.
- Help for a specific system: Say the help command for the desired system, e.g. "Help telephone".

If you press the 3, button, the possible commands are shown in a help window. You can switch off the display of this help window in the multimedia system.

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may fail to recognize dangers.

Examples

Navigation commands "Enter destination"

- A dialog for entering a destination in the navigation system will be started. Thereafter, say the destination address. "Nearest gas station"
- Many more categories for points of interest are available, e.g. restaurant or tourist attraction. "Navigate to John Doe"
- Start route guidance to a contact from your address book.

Telephone commands "Call John Doe"


- The telephone number of a stored contact is
- "New message" A dialog for entering a text message (SMS) will be started.

Audio commands

- "Station Z100" If you are listening to the radio, you can say the name of a station to which you would like to
- "Search for music"
- A dialog in which you can search through your music files will be started.

Note that your vehicle may not be equipped with all features described.

Overview of the multimedia system

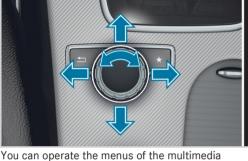

system using the controller. **Controller:** Turn or slide in the direction of the

- desired entry. Confirm your choice by pressing the controller.



Back button Press and hold: Switches to the basic menu

Calls up or changes favorites



Direct buttons for the multimedia system

RADIO Radio menu Navigation menu

Media menu

TEL Telephone menu

Sehicle/system settings menu

MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may fail to recognize dangers.

Operating the multimedia system

(1)(4)

4 Deletes a selected favorite

Example image: COMAND

Requirement

system.

frequently, you can create up to 20 favorites.

• Bluetooth[®] is switched on on the mobile phone

(see the manufacturer's operator's manual).

Bluetooth® is switched on on the multimedia

Adding a pre-defined favorite ▶ Press the ★ button.

- The favorites are displayed. Slide the controller down.
- The menu bar is shown.
- Select Reassign and use the controller to select a category.
- Select a favorite and store it in the desired position.

Adding your own favorite

You can create your own favorites, e.g. telephone numbers or navigation destinations. Example for a telephone number:

- Press the TEL button and select Name in the Telephone menu. Select a contact and display the telephone
- number. Press and hold the * button until the
- favorites are displayed. Add a favorite at the desired position.

Quickly storing radio stations If you are listening to the radio and the Radio

- menu is shown in the multimedia system: Press and hold the controller until the station
- list is shown. Select the desired preset in the station list and
- A tone confirms the save.

confirm.

Example image: COMAND **Creating favorites** Adds a new favorite 2 Renames a selected favorite 3 Moves a selected favorite

For rapid access to functions which are called up

Note that your vehicle may not be equipped with all features described.

Searching for a mobile phone

- Press the TEL button on the center console. Select Conn. Device 1.
- Audio 20: Select Connect New Device. Select Connect via Vehicle.
- Select the desired mobile phone. If possible, select the intended usage of the
- mobile phone (main or secondary phone).
- **COMAND:** Select Search for Phones.
- Select Start Search. Select the desired mobile phone.
- If your mobile phone is not found, try searching on the mobile phone itself.

Establishing a Bluetooth® connection

Authorizing a mobile phone ▶ A code is displayed in the multimedia system

- and on the mobile phone.
- If the codes match: If necessary, confirm in the multimedia system with Yes.
- Confirm the code on the mobile phone. **Further information**


Detailed information on Bluetooth® connections

with your mobile phone can be found at: www.mercedes-benz.com/connect



MARNING Make sure that you read the entire Operator's Manual. Otherwise, you may fail to recognize dangers.

Further information

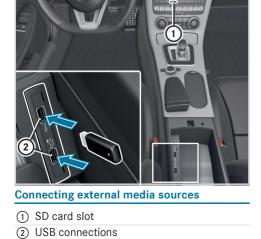

The USB connection for Apple CarPlay™ and Android Auto TM is marked with the \square symbol.

Further information about Mercedes-Benz vehicles and Daimler AG are available online at

Further information

http://www.mercedes-benz.com http://www.daimler.com

You can find further information on your vehicle

Further information on your vehicle

http://www.mbusa.com If you have any questions, you can optionally also

