




S-Class

Brief overview

Mercedes-Benz



Cockpit – overview

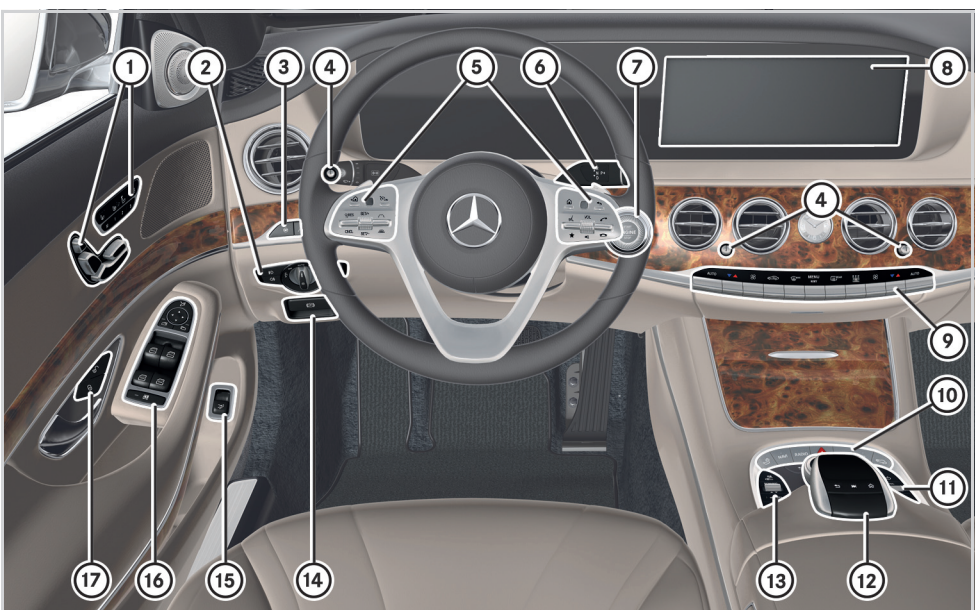

- 1

Seat functions
Adjusts the seat electrically
 Seat heating
 Seat ventilation
 Adjusts the front-passenger seat
 Memory function and presets

123
- 2

Light switch
Adjusts the instrument lighting
- 3

Driver assistance systems
 Active Steering Assist
 Active Lane Keeping Assist
 Night View Assist
 Head-up display
 Rear window roller sunblind
- 4

Adjusts the air vents:
open or closed
- 5

Multifunction steering wheel control panels
- 6

DIRECT SELECT lever for transmission position

WARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Cockpit – overview

- 7

Start/Stop button
- 8

Multimedia system display
- 9

Rocker switches for automatic climate control
- 10

Multimedia system controller with
 Seats menu
 Navigation menu
 Radio menu
 Media menu
 Telephone menu
 Vehicle menu
 Back button
 Shows main functions
- 11

Switches multimedia system on or off
 Adjusts the volume
Press: switches the sound on or off
 Lowers or raises the head restraints in the rear compartment
 Deactivates PARKTRONIC

- 12

Multimedia system touchpad
- 13

Driving functions
 ECO start/stop function
 DYNAMIC SELECT
 Vehicle level
 Active Parking Assist
- 14


Electric parking brake
- 15

Opens or closes the trunk lid
- 16

Door control panel with
controls for power windows, exterior mirror settings and the override feature for power windows and roller sunblinds for the side windows in the rear

- 17

Door handle
 Locks the vehicle centrally
 Unlocks the vehicle centrally

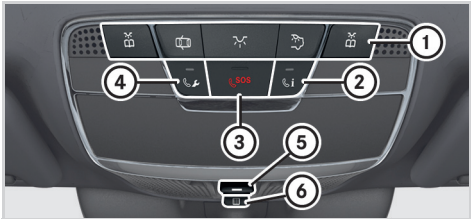

Overhead control panel

- 1

Buttons for interior lighting and reading light
- 2

MB Info call* (mbrace®)
E.g. for questions on vehicle operation
- 3

SOS button* (mbrace®)
- 4

Breakdown assistance call (mbrace®)*
- 5

Panoramic roof
 Front roller sunblind
- 6

MAGIC SKY CONTROL or
 Rear roller sunblind

* Not available in all countries

Note that your vehicle may not be fitted with all features described.

Lever on the steering wheel



Overview

- 1

Combination switch for turn signals, high-beam headlamps and windshield wipers
- 2

Lever for electrical steering column adjustment and steering wheel heating



Combination switch – windshield wiper functions

- 1

Single wipe
 Wipes with washer fluid
- 1

Windshield wipers off
- 2

Intermittent wiping, normal
- 3

Intermittent wiping, frequent
- 4

Continuous wiping, slow
- 5

Continuous wiping, fast

Combination switch – lighting functions

- 1

High-beam headlamps or Adaptive Highbeam Assist Plus
- 2


Turn signal, right
- 3

Headlamp flasher
- 4

Turn signal, left

WARNING Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

Active Distance Assistant DISTRONIC

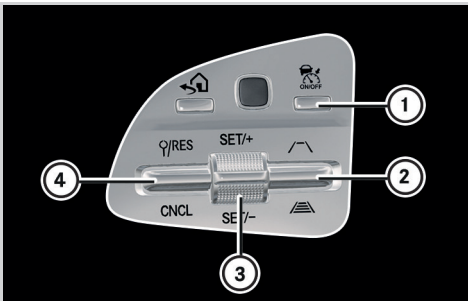

Activating/deactivating

- 1

Switches Active Distance Assist DISTRONIC on or off
- 3

Activates Active Distance Assist DISTRONIC with the current speed
- 4

Activates with the stored speed/pulls away with Active Distance Assist DISTRONIC
- CNCL

Deactivates Active Distance Assist DISTRONIC



Changing the speed/distance

- 2

Increases the specified minimum distance
 Reduces the specified minimum distance
- 3

Increases the speed
 Reduces the speed

Active Distance Assist DISTRONIC maintains a constant speed which has been stored. The lowest speed that can be set is 12 mph (20 km/h).

Note that your vehicle may not be fitted with all features described.

You can change the set speed:

- 1

1 mph step (1 km/h): briefly press rocker switch up or down.
- 2

5 mph step (10 km/h): push rocker switch up or down beyond the pressure point.

Using rocker switch , you can change the specified minimum distance to the vehicle in front. The specified minimum distance depends on the currently driven speed.

If rocker switch is pressed up twice, Active Distance Assist DISTRONIC is activated with the speed restriction displayed in the instrument cluster.

Climate control



Operating possibilities for climate control

You can set automatic climate control using:

- The rocker switches on control unit of the center console
- The climate control menu of the multimedia system

Air-conditioning function bar shows the most important settings and the status of automatic climate control.

Automatic climate control panel

- AUTO

Sets climate control to automatic mode
- ▼▲

Sets the temperature
- 888

Sets the airflow
At level 0: climate control off
- 888

Air-recirculation mode
The air in the vehicle interior is recirculated.
In air-recirculation mode, the windows can fog up more quickly.
- WASH

Defrosts the windshield
- MENU

Calls up the climate control menu
If you press and hold the button for approximately 4 seconds, automatic climate control is reset to the basic settings.
- REAR

Defrosts the rear window
- A/C

Cooling with air dehumidification
- RES

Residual heat with the engine off

Climate control menu of the multimedia system

- To call up the climate control menu:

press the rocker switch on the control panel up or down.
- A/C

Activates/deactivates the cooling and air dehumidification functions of the automatic climate control
- Climate Mode

Changes the air flow
- Air Distribution

Sets the air distribution for the driver and front passenger
- Footwell Temperature

Adjusts the temperature for the footwell separately
- Rear

Operates the automatic climate control in the rear
- SYNC

Changes settings for all climate zones in the vehicle simultaneously
- Ionization

Freshens the air in the vehicle interior using ionization
- Air Freshener

Sets the intensity of the perfume atomizer



Order no. P222 0114 13 Part no. 222 584 86 07 Edition A-2018

