



Operator's Manual  
G-Class



Mercedes-Benz



4635844681

Order No. 6515 4069 13 Part No. 463 584 46 81 USA Edition A 2006

Operator's Manual G-Class

G 500

G 55 AMG

Our company and staff congratulate you on the purchase of your new Mercedes-Benz.

Your selection of our product is a demonstration of your trust in our company name. Furthermore, it exemplifies your desire to own an automobile that will be as easy as possible to operate and provide years of service.

Your Mercedes-Benz represents the efforts of many skilled engineers and craftsmen. To help assure your driving pleasure, and also the safety of you and your passengers, we ask you to make a small investment of time:

- Please read this manual carefully, then return it to your vehicle where it will be handy for your reference.
- Please follow the recommendations contained in this manual. They are designed to acquaint you with the operation of your Mercedes-Benz.
- Please pay attention to the warnings and cautions contained in this manual. They are designed to help improve the safety of the vehicle operator and occupants.

We extend our best wishes for many miles of safe, pleasurable driving.

Mercedes-Benz USA, LLC  
A DaimlerChrysler Company

<b>Introduction</b> .....	9
Product information.....	9
Operator's Manual.....	10
Service and warranty information ..	10
Important notice for California retail buyers and lessees of Mercedes-Benz automobiles .....	11
Maintenance .....	12
Roadside Assistance .....	12
Change of address or ownership....	13
Operating your vehicle outside the USA or Canada.....	13
Where to find it.....	15
Symbols.....	16
Operating safety .....	17
Proper use of the vehicle .....	17
Problems with your vehicle.....	18
Reporting safety defects.....	19
Reporting safety defects .....	19
Vehicle data recording.....	20
Information regarding electronic recording devices.....	20

<b>At a glance</b> .....	21
Cockpit.....	22
Instrument cluster .....	24
Multifunction steering wheel .....	26
Center console .....	28
Upper part .....	28
Lower part .....	29
Overhead control panel .....	30
Door control panel.....	31

<b>Getting started</b> .....	33
Unlocking .....	34
Unlocking with the SmartKey .....	34
Adjusting .....	37
Seats .....	37
Steering wheel.....	40
Mirrors.....	41
Driving.....	43
Fastening the seat belt .....	43
Starting the engine .....	48
Switching on headlamps.....	51
Turn signals .....	52
Windshield wipers.....	53
Rear window wiper/washer .....	54
Problems while driving.....	55
Parking and locking.....	57
Parking brake .....	57
Switching off headlamps.....	58
Turning off engine.....	58

<b>Safety and Security</b> .....	61	<b>Controls in detail</b> .....	91	Lighting .....	110
Occupant safety .....	62	Locking and unlocking .....	92	Exterior lamp switch .....	110
Airbags .....	63	SmartKey .....	92	Combination switch .....	114
Seat belts .....	68	Opening the doors from the inside .....	96	Hazard warning flasher .....	115
Children in the vehicle .....	72	Opening the tailgate .....	97	Interior lighting .....	116
Blocking rear door window operation .....	78	Closing the tailgate .....	98	Rear interior lamps .....	117
Panic alarm .....	79	Automatic central locking .....	98	Cargo compartment lamps .....	118
Driving and safety systems .....	80	Locking and unlocking from the inside .....	99	Instrument cluster .....	120
ABS .....	80	Seats .....	100	Instrument cluster illumination ....	120
BAS .....	82	Easy-entry/exit feature .....	100	Coolant temperature display .....	120
4-ETS .....	83	Removing and installing front seat head restraints .....	101	Trip odometer .....	121
EBB .....	84	Synchronizing head restraints and seat adjustment fore and aft for front seats .....	102	Tachometer .....	121
ESP .....	84	Rear seat head restraints .....	102	Outside temperature indicator .....	122
Anti-theft systems .....	88	Multicontour seat* .....	104	Control system .....	123
Immobilizer .....	88	Heated seats .....	104	Multifunction display .....	123
Anti-theft alarm .....	88	Memory function .....	107	Multifunction steering wheel .....	124
Tow-away alarm .....	89	Storing positions into memory .....	108	Menus .....	126
		Recalling positions from memory .....	108	Standard display menu .....	128
		Storing exterior rear view mirror parking position .....	109	AUDIO menu .....	128
				NAVI menu .....	130
				Vehicle status message memory menu .....	131
				Settings menu .....	132
				Trip computer menu .....	145
				TEL menu .....	146

Automatic transmission.....	149	Climate control.....	168	Loading .....	187
Gear selector lever position .....	151	Setting the temperature.....	170	Roof rack .....	187
Driving tips.....	153	Adjusting air distribution		Cargo compartment cover .....	187
Gear ranges .....	154	and volume .....	171	Enlarged cargo compartment .....	188
One-touch gearshifting.....	155	Defrosting .....	172	Split rear seat bench .....	188
Emergency operation		Air recirculation .....	172	Partition net* (MB Accessory) .....	189
(Limp Home Mode) .....	156	Residual engine heat utilization ....	173	Loading instructions .....	192
Transfer case.....	157	Deactivating the climate control		Cargo tie-down rings.....	193
Transfer case position.....	157	system .....	173	Useful features.....	194
Switching transfer case.....	157	Air conditioning.....	174	Storage compartments .....	194
Differential locks .....	159	Rear passenger compartment		Ashtrays.....	198
A few words about differentials		adjustable air vents.....	174	Cigarette lighter.....	199
and differential locks.....	160	Power windows .....	175	Electrical outlet.....	200
Switching differential locks		Opening and closing the windows.	175	Floormats .....	201
on and off.....	161	Power tilt/sliding sunroof.....	178	Telephone* .....	201
Good visibility .....	163	Opening and closing the power		Tele Aid.....	202
Rear view mirrors.....	163	tilt/sliding sunroof.....	178	Garage door opener.....	210
Headlamp cleaning system .....	165	Driving systems.....	181	Heated steering wheel.....	215
Sun visors .....	165	Cruise control .....	181		
Rear window defroster .....	166	Rear Parking Assist* .....	184		

# Contents

<b>Operation</b> .....	217	At the gas station .....	239	Maximum tire inflation pressure ..	270
The first 1000 miles (1500 km) .....	218	Refueling .....	239	Uniform Tire Quality Grading	
Driving instructions .....	220	Check regularly and before		Standards (U.S. vehicles) .....	271
Drive sensibly – save fuel .....	220	a long trip .....	240	Tire ply material .....	273
Drinking and driving .....	220	Engine compartment .....	242	Tire and loading terminology .....	273
Pedals .....	220	Hood .....	242	Rotating tires .....	276
Power assistance .....	221	Engine oil .....	243	Winter driving .....	278
Brakes .....	221	Transmission fluid level .....	248	Winter tires .....	278
Driving off .....	222	Coolant level .....	248	Block heater (Canada only) .....	279
Parking .....	222	Windshield/rear window		Snow chains .....	279
Tires .....	223	washer system and headlamp		Maintenance .....	280
Hydroplaning .....	224	cleaning system .....	249	Clearing the maintenance	
Tire traction .....	224	Battery .....	251	service indicator .....	281
Tire speed rating .....	225	Tires and wheels .....	252	Maintenance service term	
Winter driving instructions .....	225	Important guidelines .....	252	exceeded .....	281
Standing water .....	226	Tire care and maintenance .....	253	Calling up the maintenance	
Passenger compartment .....	227	Direction of rotation .....	255	service indicator .....	281
Off-road driving .....	227	Loading the vehicle .....	255	Resetting the maintenance	
Control and operation of		Recommended tire inflation		service indicator .....	282
radio transmitters .....	235	pressure .....	260	Vehicle care .....	283
Driving abroad .....	236	Checking tire inflation pressure ...	261	Cleaning and care of the vehicle ..	283
Catalytic converter .....	236	Tire labeling .....	263		
Emission control .....	237	Load identification .....	267		
Coolant temperature .....	238	DOT, Tire Identification Number			
		(TIN) .....	268		
		Maximum tire load .....	269		

<b>Practical hints</b> .....	289	Opening/closing in an emergency .....	330	Jump starting.....	356
What to do if ... ..	290	Tilt/sliding sunroof .....	330	Towing the vehicle.....	358
Lamps in instrument cluster .....	290	Brush guard* .....	331	Transporting the vehicle .....	360
Lamp in center console.....	297	Lowering and raising brush guard .	332	Towing the vehicle - various	
Vehicle status messages in the		Replacing SmartKey batteries .....	333	problem scenarios .....	360
multifunction display.....	298	SmartKey .....	334	Front towing eye.....	361
Where will I find...? .....	323	Replacing bulbs .....	335	Rear towing eye.....	361
First aid kit .....	323	Bulbs.....	336	Freeing a stranded vehicle.....	361
Vehicle tool kit .....	323	Replacing bulbs for front lamps ...	338	Fuses.....	362
Vehicle jack.....	324	Replacing bulbs for rear lamps ....	343	Fuse box in passenger	
CD changer .....	324	Replacing wiper blades.....	346	compartment .....	362
Spare wheel .....	325	Removing wiper blades .....	346	Fuse box in battery box .....	362
Unlocking/locking in an emergency..	327	Installing wiper blades .....	347	Fuse box in front passenger	
Unlocking the vehicle.....	327	Flat tire .....	348	footwell.....	363
Locking the vehicle .....	328	Preparing the vehicle .....	348	Fuse box in middle tunnel.....	364
Fuel filler flap .....	328	Mounting the spare wheel .....	349		
Manually unlocking the		Battery.....	353		
transmission gear selector lever ..	329	Charging the battery .....	353		
		Disconnecting the battery.....	354		
		Reconnecting the battery.....	355		

<b>Technical data</b> .....	365	Fuels, coolants, lubricants, etc. ....	376	<b>Technical terms</b> .....	383
Parts service .....	366	Capacities .....	376		
Warranty coverage.....	367	Engine oils.....	377		
Loss of Service and Warranty		Engine oil additives .....	378	<b>Index</b> .....	389
Information Booklet.....	367	Air conditioning refrigerant .....	378		
Identification labels.....	368	Brake fluid.....	378		
Layout of poly-V-belt drive .....	369	Premium unleaded gasoline .....	378		
G 500 .....	369	Fuel requirements .....	379		
G 55 AMG.....	369	Gasoline additives.....	379		
Engine.....	370	Coolants.....	380		
Rims and tires.....	371	Anticorrosion/antifreeze.....	381		
Rims and Tires.....	372	Windshield/rear window			
Spare wheels.....	373	washer system and headlamp			
Electrical system.....	374	cleaning system .....	382		
Main dimensions, vehicle weights					
and ratings.....	375				
Main dimensions .....	375				
Vehicle weights and ratings .....	375				

## ▼ Product information

Please observe the following in your own best interest:

We recommend using genuine Mercedes-Benz parts as well as conversion parts and accessories explicitly approved by us for your vehicle model.

We have tested these parts to determine their reliability, safety and special suitability for Mercedes-Benz vehicles.

We are unable to make an assessment for other products and therefore cannot be held responsible for them, even if in individual cases an official approval or authorization by governmental or other agencies should exist. Use of such parts and accessories could adversely affect the safety, performance or reliability of your vehicle. Please do not use them.

Genuine Mercedes-Benz parts as well as conversion parts and accessories approved by us are available at your authorized Mercedes-Benz Light Truck Center where you will receive comprehensive information, also on permissible technical modifications, and where proper installation will be performed.

This Operator's Manual contains a great deal of useful information. We urge you to read it carefully and familiarize yourself with the vehicle before driving.

For your own safety and longer service life of the vehicle, we urge you to follow the instructions and warnings contained in this manual. Ignoring them could result in damage to the vehicle or personal injury to you or others. Vehicle damage caused by failure to follow instructions is not covered by the Mercedes-Benz Limited Warranty.

Your vehicle may have some or all of the equipment described in this manual. Therefore, you may find explanations for optional equipment not installed in your vehicle. If you have any questions about the operation of any equipment, your authorized Mercedes-Benz Light Truck Center will be glad to demonstrate the proper procedures.

We continuously strive to improve our product, and ask for your understanding that we reserve the right to make changes in design and equipment. Therefore, information, illustrations and descriptions in this Operator's Manual might differ from your vehicle.

Optional equipment is also described in this manual, including operating instructions wherever necessary. Since they are special-order items, the descriptions and illustrations herein may vary slightly from the actual equipment of your vehicle.

If there are any equipment details that are not shown or described in this Operator's Manual, your authorized Mercedes-Benz Light Truck Center will be glad to inform you of correct care and operating procedures.

The Operator's Manual and Maintenance Booklet are important documents and should be kept with the vehicle.

### Service and warranty information

---

The Service and Warranty Information Booklet contains detailed information about the warranties covering your Mercedes-Benz, including:

- New Light Truck Limited Warranty,
- Emission System Warranty,
- Emission Performance Warranty,
- California, Maine, Massachusetts, and Vermont Emission Control System Warranty (California, Maine, Massachusetts, and Vermont only),
- State Warranty Enforcement Laws (Lemon Laws).

### **Important notice for California retail buyers and lessees of Mercedes-Benz automobiles**

Under California law you may be entitled to a replacement of your vehicle or a refund of the purchase price or lease price, if Mercedes-Benz USA, LLC and / or its authorized repair or service facilities fail to fix one or more substantial defects or malfunctions in the vehicle that are covered by its express warranty after a reasonable number of repair attempts. During the period of 18 months from original delivery of the vehicle or the accumulation of 18 000 miles (approx. 29 000 km) on the odometer of the vehicle, whichever occurs first, a reasonable number of repair attempts is presumed for a retail buyer or lessee if one or more of the following occurs:

- (1) the same substantial defect or malfunction results in a condition that is likely to cause death or serious bodily injury if the vehicle is driven, that defect or malfunction has been subject to repair two or more times, and you have directly notified Mercedes-Benz USA, LLC in writing of the need for its repair,
- (2) the same substantial defect or malfunction of a less serious nature than category (1) has been subject to repair four or more times and you have directly notified us in writing of the need for its repair, or
- (3) the vehicle is out of service by reason of repair of the same or different substantial defects or malfunctions for a cumulative total of more than 30 calendar days.

Written notification should be sent to us, not a dealer, at Mercedes-Benz USA, LLC, Customer Assistance Center, One Mercedes Drive, Montvale, NJ 07645-0350.

#### Maintenance

---

The Maintenance Booklet describes all the necessary maintenance work which should be performed at regular intervals.

Always have the Maintenance Booklet with you when you take the vehicle to your authorized Mercedes-Benz Light Truck Center for service. The service advisor will record each service in the booklet for you.

#### Roadside Assistance

---

The Mercedes-Benz Roadside Assistance Program provides factory-trained technical help in the event of a breakdown. Calls to the toll-free Roadside Assistance number

**1-800-FOR-MERCEdes (in the USA)**  
**1-800-387-0100 (in Canada)**

will be answered by Mercedes-Benz Customer Assistance Representatives 24 hours a day, 365 days a year.

Roadside Assistance will be provided in accordance with standard program guidelines which include providing service to the vehicle up to a reasonable distance from a paved roadway. We will make every effort to assist in a breakdown situation, however, the accessibility of your vehicle will be determined by our authorized Mercedes-Benz Light Truck Center technician or the tow service provider on a case by case basis and may be a factor in our ability to respond.

Additional charges may be applicable for a breakdown location determined not to be a reasonably accessible roadside location as determined by our authorized technician and tow service provider.

For additional information refer to the Mercedes-Benz Roadside Assistance Program Brochure in your vehicle literature portfolio.

### **Change of address or ownership**

---

If you change your address, be sure to send in the “Change of Address Notice” found in the Service and Warranty Information Booklet, or simply call the Mercedes-Benz Customer Assistance Center (in the USA) at 1-800-FOR-MER-Cedes, or Customer Service (in Canada) at 1-800-387-0100. It is in your own interest that we can contact you should the need arise.

If you sell your Mercedes, please leave all literature with the vehicle to make it available to the next operator.

If you bought this vehicle used, be sure to send in the “Notice of Purchase of Used Truck” found in the Service and Warranty Information Booklet, or call the Mercedes-Benz Customer Assistance Center (in the USA) at 1-800-FOR-MER-Cedes, or Customer Service (in Canada) at 1-800-387-0100.

### **Operating your vehicle outside the USA or Canada**

---

If you plan to operate your vehicle in foreign countries, please be aware that:

- service facilities or replacement parts may not be readily available,
- unleaded gasoline for vehicles with catalytic converters may not be available; the use of leaded fuels will damage the catalyts,
- gasoline may have a considerably lower octane rating, and improper fuel can cause engine damage.

Certain Mercedes-Benz models are available for delivery in Europe under our European Delivery Program. For details, consult an authorized Mercedes-Benz Center or write to:

In the USA:

Mercedes-Benz USA, LLC  
European Delivery Department  
One Mercedes Drive  
Montvale, NJ 07645-0350

In Canada:

Mercedes-Benz Canada, Inc.  
European Delivery Department  
98 Vanderhoof Avenue  
Toronto, Ontario M4G 4C9

#### Warning!



This Sport Utility Vehicle is designed for both on-road and off-road use. It can go places and perform tasks for which conventional 2-wheel drive passenger cars are not intended. This vehicle will handle and maneuver differently from conventional passenger cars in driving conditions which may occur on streets, highways and off-road use.

This vehicle has a higher ground clearance and a higher center of gravity than many passenger cars. As with other vehicles of this type, if you make sharp turns at excessive speeds or abrupt maneuvers, the vehicle may roll over or may go out of control and crash. Utility vehicles have a significantly higher rollover rate than other types of vehicles. Failure to operate this vehicle safely may result in an accident, rollover of the vehicle, and severe or fatal injury.

Before you start to drive this vehicle, read the Operator's Manual. Take time to become familiar with the driving characteristics of this vehicle. Be sure you are familiar with all vehicle controls. Learn how your vehicle handles on different road surfaces. Do not attempt sharp turns at excessive speeds or abrupt maneuvers or other unsafe driving actions that can cause loss of vehicle control. When driving off-road or working the vehicle hard, do not overload it. And, always wear your seat belts at all times. In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt.

## ▼ Where to find it

This Operator's Manual is designed to provide comprehensive support information for you, the vehicle operator. Each section has its own reference color.

### At a glance

Here you will find an overview of all the controls that can be operated from the driver's seat.

### Getting started

Here you will find all the information you need for your first drive. You should read this section first if this is your first Mercedes-Benz vehicle or if you are renting or borrowing this vehicle.

### Safety and Security

Here you will find descriptions of the safety and security features of your vehicle.

### Controls in detail

Here you will find detailed information about the equipment installed on your vehicle. This section expands on the "Getting started" section and also describes technical innovations. If you are already familiar with the basic functions of your vehicle, this section will be of particular interest to you.

### Operation

Here you will find all the information you need for the proper operation of your vehicle.

### Practical hints

This section provides fast assistance for dealing with problems you may encounter.

### Technical data

All important technical data for your vehicle can be found in this section.

### Indexes

The glossary provides explanations of the most important technical terms.

The table of contents and the index are designed to help you find information quickly and easily.

The following publications are part of your vehicle documentation:

- this Operator's Manual
- the Maintenance Booklet

Separate operating instructions will be provided as required depending on the equipment options installed in your vehicle.

## Symbols

The following symbols are found in this Operator's Manual:

- \* Optional equipment is identified with an asterisk. Since standard equipment varies between models, the descriptions and illustrations in this manual may differ slightly from the actual equipment of your vehicle.

### Warning!



Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.



Highlights hazards that may result in damage to your vehicle.



Helpful hints or further information you may find useful.

- ▶ This symbol points to instructions for you to follow.
- ▶ A number of these symbols appearing in succession indicates a multiple-step procedure.
- ▷ Page This symbol tells you where to look for further information on a topic.
- ▷▷ This continuation symbol marks an interrupted procedure which will be continued on the next page.
- > In the glossary of technical terms, this symbol is used to indicate cross-references to term definitions.
- Display Words appearing in the multi-function display are printed in the type shown here.

## ▼ Operating safety

### Warning!



Work improperly carried out on electronic components and associated software could cause them to cease functioning. Because the vehicle's electronic components are interconnected, any modifications made may produce an undesired effect on other systems. Electronic malfunctions could seriously impair the operating safety of your vehicle.

See an authorized Mercedes-Benz Light Truck Center for repairs or modifications to electronic components.

Other improper work or modifications on the vehicle could also have a negative impact on the operating safety of the vehicle.

Some safety systems only function while the engine is running. You should therefore never turn off the engine while driving.

### Warning!



Heavy blows against the vehicle underbody or tires / wheels, for example when running over an obstacle, road debris or a pothole, may cause serious damage and impair the operating safety of your vehicle. If you feel a sudden significant vibration or ride disturbance, or you suspect that damage to your vehicle has occurred, you should turn on your hazard warning flashers, carefully slow down, and drive with caution to an area which is a safe distance from the road.

Inspect the vehicle underbody and tires / wheels for possible damage. If the vehicle appears unsafe, have it towed to the nearest authorized Mercedes-Benz Light Truck Center or other qualified maintenance or repair facility for further inspection or repairs.

## Proper use of the vehicle

Proper use of the vehicle requires that you are familiar with the following information and rules:

- the safety precautions in this manual
- the “Technical data” section in this manual
- traffic rules and regulations
- motor vehicle laws and safety standards

### Warning!



Various warning labels are attached to your vehicle. These warning labels are intended to make you and others aware of various risks. You should not remove any of these warning labels unless explicitly instructed to do so by information on the label itself. Removal of any of these labels may cause you and others to be unaware of certain risks which may result in an accident and/or personal injury.

### Problems with your vehicle

If you should experience a problem with your vehicle, particularly one that you believe may affect its safe operation, we urge you to immediately contact an authorized Mercedes-Benz Light Truck Center to have the problem diagnosed and corrected if required. If the matter is not handled to your satisfaction, please discuss the problem with the Mercedes-Benz Light Truck Center management, or if necessary contact us at one of the following addresses:

In the USA:

Customer Assistance Center  
Mercedes-Benz USA, LLC  
One Mercedes Drive  
Montvale, NJ 07645-0350

In Canada:

Customer Relations Department  
Mercedes-Benz Canada, Inc.  
98 Vanderhoof Avenue  
Toronto, Ontario, M4G 4C9

## ▼ Reporting safety defects

For the USA only:

The following text is published as required of manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 pursuant to the “National Traffic and Motor Vehicle Safety Act of 1966”.

### **Reporting safety defects**

---

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Mercedes-Benz USA, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Mercedes-Benz USA, LLC.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-888-327-4236 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

### Vehicle data recording

#### Information regarding electronic recording devices

---

(Including notice pursuant to California Code § 995.1)

Please note that your vehicle is equipped with devices that can record vehicle systems data and, if equipped with the Tele Aid system, may transmit some data in certain accidents.

This information helps, for example, to diagnose vehicle systems after a collision and to continuously improve vehicle safety. DaimlerChrysler may access the information and share it with others

- for safety research or vehicle diagnosis purposes
- with the consent of the vehicle owner or lessee
- in response to an official request by law enforcement or other government agency
- for use in dispute resolution involving DaimlerChrysler, its affiliates or sales/service organization and/or
- as otherwise required or permitted by law.

Please check the Tele Aid subscription service agreement for details regarding the information that may be recorded or transmitted via that system.

**Cockpit**

**Instrument cluster**

**Multifunction steering wheel**

**Center console**

**Overhead control panel**

**Door control panel**





P68.10-3141-31

	Item	Page
①	Combination switch	
	• Turn signals	52
	• Windshield wipers	53
	• High beam	52
②	Headlamp cleaning system	165
③	Cruise control lever	181
④	Instrument cluster	24
⑤	Lever for voice control system*, see separate operating instructions	

	Item	Page
⑥	Starter switch	35
⑦	Glove box	194
⑧	Multifunction steering wheel	26, 124, 215
⑨	Horn	
⑩	Steering wheel adjustment lever	40, 215
⑪	Exterior lamp switch	51, 110
⑫	Exterior rear view mirror adjustment	41

Instrument cluster



P54.32-2546-31

Item	Page
① <b>Reset button for:</b>	
• Resetting trip odometer	121
• Resetting individual or all settings	132, 133, 146, 282
• Instrument cluster illumination	120
②  Left turn signal indicator lamp	24
③  Engine malfunction indicator lamp (USA only)	294
 Engine malfunction indicator lamp (Canada only)	294
 Electronic Stability Program (ESP) warning lamp	84, 295
 High beam headlamp indicator lamp	52, 114

Item	Page
④  Right turn signal indicator lamp	24
⑤ <b>Fuel gauge with:</b>	
Fuel reserve warning lamp	24
 Supplemental Restraint System (SRS) indicator lamp	66, 296
 Seat belt telltale	68, 296
⑥ <b>Multifunction display with:</b>	123
Trip odometer	24
Main odometer	24
Transfer case program mode	157
Gear selector lever position	149
Outside temperature indicator	122
Clock (see COMAND operating instructions)	123

Item	Page
⑦ <b>Speedometer</b>	
⑧ <b>Tachometer with:</b>	
 Brake warning lamp (USA only)	50, 292
 Brake warning lamp (Canada only)	50, 292
 Antilock Brake System (ABS) indicator lamp	80, 290

## Multifunction steering wheel



Item	Page
① Multifunction display in speedometer	123
<b>Operating the control system:</b>	124
② Selecting a submenu or setting the volume: Press button	
 up / to increase	
 down/ to decrease	
③ Telephone*: Press button	
 to take a call, or to dial a call	
 to end a call, or to reject an incoming call	

Item	Page
④ Menu systems: Press button	
 for next menu	
 for previous menu	
⑤ Moving within a menu: Press button	
 for next display	
 for previous display	




G 55 AMG:

The steering wheel in this vehicle may vary from steering wheel shown.

However, multifunction steering wheel symbols and feature description apply to AMG vehicles as well.

## Center console

### Upper part

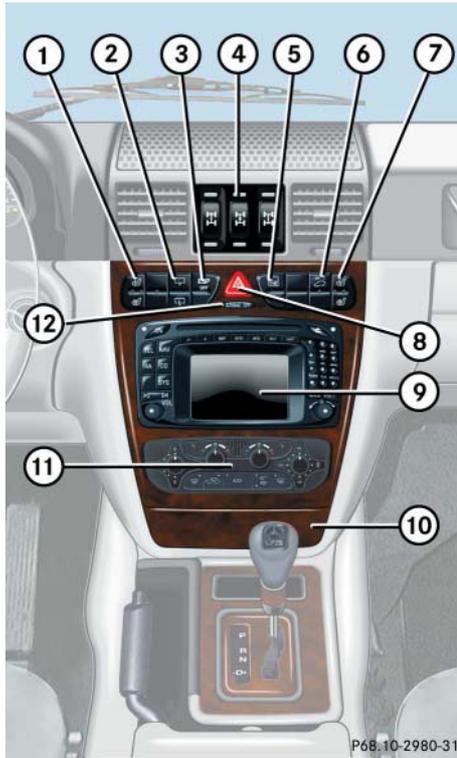

P68.10-2980-31

	Item	Page
①	Left front seat heater switch	104
②	Switch for rear window wiper/washer	54
③	ESP control switch	86
④	Differential lock switches	161
⑤	Central locking switch	99
⑥	Anti-theft alarm system indicator lamp	88
	Tow-away alarm switch	89
⑦	Right front seat heater switch	104

	Item	Page
⑧	Hazard warning flasher switch	115
⑨	COMAND system, see separate operating instructions	
⑩	Ashtray with lighter	198, 199
⑪	Climate control	168
⑫	 indicator lamp	74, 297

## Lower part



	Item	Page
①	Storage tray	
②	Gear selector lever for automatic transmission	49, 149
③	Transfer case switch	157
④	Parking brake lever	50, 57

## Overhead control panel



	Item	Page
①	Tele Aid (emergency call system)	202
②	Cargo compartment lamps	118
③	Right front reading lamp	116
④	Power tilt/sliding sunroof	178
⑤	Interior rear view mirror	41

	Item	Page
⑥	Signal transmitter buttons for garage door opener	210
⑦	Indicator lamp for garage door opener	210
⑧	Interior lighting control	116
⑨	Left front reading lamp	116

## ▼ Door control panel



P72.10-2593-31

Item	Page
① Switches for opening/closing power window	175
Switch for rear door window override	78
② Seat adjustment	37, 100
③ Door handle	96
④ Memory function (for storing seat, exterior mirrors and steering wheel settings)	107



## Getting started

Unlocking

Adjusting

Driving

Parking and locking




### Unlocking

The “Getting started” section provides an overview of the vehicle’s most basic functions. First-time Mercedes-Benz owners should pay special attention to the information given here.

If you are already familiar with the basic functions described here, the “Controls in detail” section will help you with further information. The corresponding page references are at the end of each segment.

#### Unlocking with the SmartKey

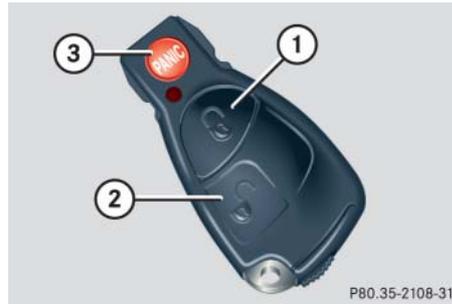

#### SmartKey with remote control

- ①  Lock button
- ②  Unlock button
- ③  Panic button (▷ page 79)

- ▶ Press unlock button  on the SmartKey.


All turn signal lamps flash once. The locking knobs in the doors move up.

The anti-theft alarm system is disarmed.

- ▶ Get in the vehicle and insert the SmartKey in the starter switch.

For more information, see “Locking and unlocking” (▷ page 92).

### Starter switch positions

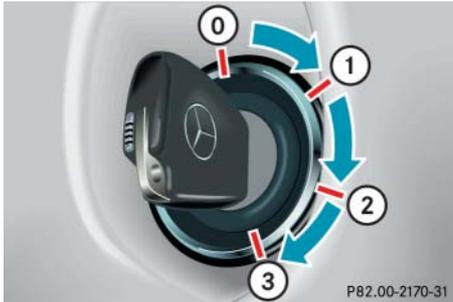

### Starter switch

- 0** For removing SmartKey  
The steering is locked when the SmartKey is removed from the starter switch.
- 1** Power supply for some electrical consumers, such as seat adjustment

- 2** Ignition (power supply for all electrical consumers) and driving position.  
All lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) in the instrument cluster come on. If a lamp in the instrument cluster fails to come on when the ignition is switched on, have it checked and replaced if necessary. If a lamp in the instrument cluster remains on after starting the engine or comes on while driving, see “Lamps in instrument cluster” (▷ page 290).
- 3** Starting position



When you switch on ignition, the indicator and warning lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) in the instrument cluster come on. The indicator and warning lamps (except high beam headlamp indicator lamp and turn signal indicator lamps if activated) will go out when the engine is running. This indicates that the respective systems are operational.



The SmartKey can only be removed from the starter switch with the gear selector lever in position **P**.

### Unlocking



If the SmartKey cannot be turned, the battery may not be sufficiently charged.

- Check the battery and charge it if necessary (▷ page 353).
- Get a jump start (▷ page 356).

To prevent accelerated battery discharge and a possible dead battery, always remove the SmartKey from the starter switch when the engine is not in operation.

#### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment may cause an accident and/or serious personal injury.

## ▼ Adjusting

### Warning!



All seat, head restraint, steering wheel, and rear view mirror adjustments, as well as fastening of seat belts, must be done before the vehicle is put into motion.

## Seats

### Warning!



Do not adjust the driver's seat while driving. Adjusting the seat while driving could cause the driver to lose control of the vehicle.

Never ride in a moving vehicle with the seat back in an excessively reclined position as this can be dangerous. You could slide under the seat belt in a collision. If you slide under it, the belt would apply force at the abdomen or neck. That could cause serious or fatal injuries.

The seat back and seat belts provide the best restraint when the wearer is in a nearly upright position and belts are properly positioned on the body. Your seat must be adjusted so that you can correctly fasten your seat belt (▷ page 43).

Never place hands under the seat or near any moving parts while a seat is being adjusted.

### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle.

Even with the SmartKey removed from the starter switch, the power seats can be operated when the respective door is open. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment may cause an accident and/or serious personal injury.

### Warning!



Children 12 years old and under must never ride in the front seat, except in a Mercedes-Benz authorized BabySmart<sup>TM</sup><sub>1</sub> compatible child seat, which operates with the BabySmart<sup>TM</sup> system installed in the vehicle to deactivate the passenger front airbag when it is properly installed. Otherwise they will be struck by the airbag when it inflates in a crash. If this happens, serious or fatal injury will result.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. Infants and small children must ride in the back seats and be seated in an appropriate infant or child restraint system, which is properly secured with the vehicle's seat belt and top tether strap, or secured via lower anchors and top tether strap, fully in accordance with the child seat manufacturer's instructions. ▷▷


<sup>1</sup> BabySmart<sup>TM</sup> is a trademark of Siemens Automotive Corp.

### Adjusting

- ▷▷ A child's risk of serious or fatal injuries is significantly increased if the child restraints are not properly secured in the vehicle and the child is not properly secured in the child restraint.

#### Seat adjustment

The seat adjustment switches are located in each front door.

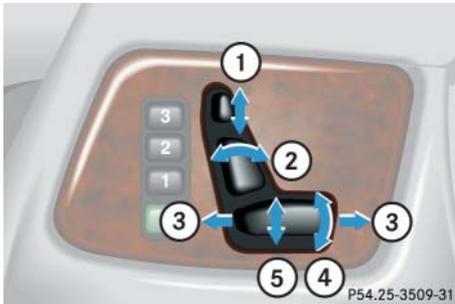

- ① Head restraint height
- ② Seat backrest tilt
- ③ Seat fore and aft adjustment
- ④ Seat cushion tilt
- ⑤ Seat height

- ▶ Switch on the ignition (▷ page 35).
- or
- ▶ Open the respective front door.

#### Seat fore and aft adjustment

- ▶ Press the switch forward or back in the direction of arrow ③.

Adjust to a comfortable seating position that still allows you to reach the accelerator/brake pedal safely. The position should be as far to the rear as possible, consistent with ability to properly operate controls.



When moving the seat, be sure that

- there are no items in the footwell or behind the seats
- the cup holder next to the armrest is removed (▷ page 196)
- the cup holder in the front passenger footwell is folded closed (▷ page 196)

Otherwise you could damage the seats and/or cup holders.

The memory function (▷ page 107) lets you store the setting for the seat position together with the setting for the steering wheel and the exterior rear view mirrors.

**Seat cushion tilt**

- ▶ Press the switch up or down in the direction of arrow ④ until your upper legs are lightly supported.

**Seat backrest tilt**

- ▶ Press the switch forward or backward in the direction of arrow ② until your arms are slightly angled when holding the steering wheel.

**Seat height**

- ▶ Press the switch up or down in the direction of arrow ⑤.

Make sure you have sufficient headroom.

**Head restraint height**

- ▶ Press the switch up or down in the direction of arrow ①.


**Warning!**

For your protection, drive only with properly positioned head restraints.

Adjust head restraint so that the center of the head restraint supports the back of the head at eye level. This will reduce the potential for injury to the head and neck in the event of an accident or similar situation.

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

Adjust head restraint to support the back of the head approximately at eye level.

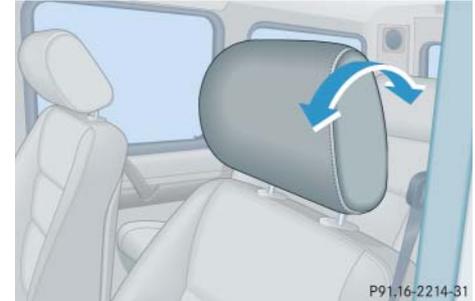**Head restraint tilt**

Manually adjust the angle of the head restraint.

- ▶ Push or pull on the upper edge of the head restraint cushion.

For more information, see “Seats” (▷ page 100).

## Adjusting

### Steering wheel

#### Warning!




Do not adjust the steering wheel while driving. Adjusting the steering wheel while driving could cause the driver to lose control of the vehicle.

When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle.

Even with the SmartKey removed from the starter switch, the steering wheel adjustment feature can be operated when the driver's door is open. Therefore, do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment may cause an accident and/or serious personal injury.

The lever is located on the steering column (lower left).

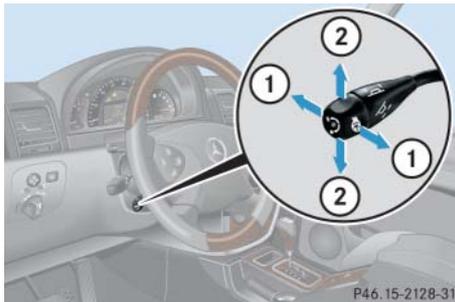

① Adjusting steering column, in or out

② Adjusting steering column, up or down

- ▶ Switch on the ignition (▷ page 35).

or

- ▶ Open the driver's door.

### Adjusting steering column in or out

- ▶ Move lever forward or back in the direction of arrow ① until a comfortable steering wheel position is reached with your arms slightly bent at the elbow.

### Adjusting steering column up or down

- ▶ Move lever up or down in the direction of arrow ②.

Make sure your legs can move freely and that all the displays (incl. malfunction and indicator lamps) on the instrument cluster are clearly visible.



The memory function (▷ page 107) lets you store the setting for the steering wheel together with the setting for the seat position and the exterior rear view mirrors.

For more information, see “Heated steering wheel” (▷ page 215).

## Mirrors

Adjust the interior and exterior rear view mirrors before driving so that you have a good view of the road and traffic conditions.

### Warning!



In case of an accident, liquid electrolyte may escape the mirror housing if the mirror glass breaks.

Electrolyte has an irritating effect. Do not allow the liquid to come into contact with eyes, skin, clothing, or the respiratory system. In case it does, immediately flush affected area with water, and seek medical help if necessary.



Electrolyte drops coming into contact with the vehicle paint finish can only be completely removed while in their liquid state and by applying plenty of water.

### Interior rear view mirror

- ▶ Adjust the interior rear view mirror manually.

## Exterior rear view mirrors


### Warning!



Exercise care when using the passenger-side exterior rear view mirror. The mirror surface is convex (outwardly curved surface for a wider field of view). Objects in mirror are closer than they appear. Check your interior rear view mirror or glance over your shoulder before changing lanes.

### Adjusting

The buttons are located above the exterior lamp switch.

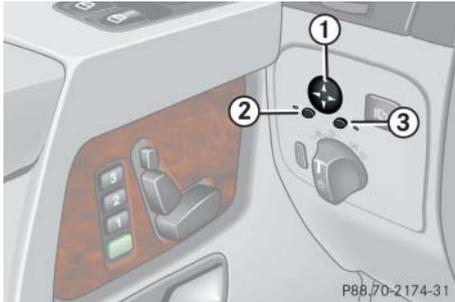

- ① Adjustment button
- ② Driver's side exterior rear view mirror
- ③ Passenger-side exterior rear view mirror

- ▶ Switch on the ignition (▷ page 35).
- ▶ Press switch ② or ③ to select the respective exterior rear view mirror.
- ▶ Push adjustment button ① up, down, left, or right according to the desired setting.



If an exterior rear view mirror housing is forcibly pushed forward (hit from the rear) or rearward (hit from the front), reposition it by applying firm pressure until it snaps into place. The exterior rear view mirror housing is now properly positioned and you can adjust the mirror normally.



At low ambient temperatures, the exterior rear view mirrors will be heated automatically.



The memory function (▷ page 107) lets you store the setting for the exterior rear view mirrors together with the settings for the steering wheel and the seat position.

For more information, see “Storing exterior rear view mirror parking position” (▷ page 109).

## ▼ Driving

### Warning!



Do not lay any objects in the driver's footwell. Be careful that floor mats or carpets in the driver's footwell have sufficient clearance for the pedals.

During sudden driving or braking maneuvers, the objects could get caught between the pedals. You could then no longer brake or accelerate.

### Fastening the seat belt

#### Warning!



Always fasten your seat belt before driving off. Always make sure your passengers are properly restrained, even those sitting in the rear and pregnant women.

Failure to wear and properly fasten and position your seat belt greatly increases your risk of injuries and their likely severity in an accident. You and your passengers should always wear seat belts.

If you are ever in an accident, your injuries can be considerably more severe without your seat belt properly buckled. Without your seat belt buckled, you are much more likely to hit the interior of the vehicle or be ejected from it. You can be seriously injured or killed.

In the same crash, the possibility of injury or death is lessened if you are wearing your seat belt. The airbags can only provide the protection they were designed to afford if the occupants are using their seat belts (▷ page 62).

#### Warning!



Children 12 years old and under must never ride in the front seat, except in a Mercedes-Benz authorized BabySmart™<sup>1</sup> compatible child seat, which operates with the BabySmart™ system installed in the vehicle to deactivate the passenger front airbag when it is properly installed. Otherwise they will be struck by the airbag when it inflates in a crash. If this happens, serious or fatal injury will result.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. Infants and small children must ride in back seats and be seated in an appropriate infant or child restraint system, which is properly secured with the vehicle's seat belt and top tether strap, or secured via lower anchors and top tether strap, fully in accordance with the child seat manufacturer's instructions.

<sup>1</sup> BabySmart™ is a trademark of Siemens Automotive Corp.

A child's risk of serious or fatal injuries is significantly increased if the child restraints are not properly secured in the vehicle and the child is not properly secured in the child restraint.

#### Warning!



Never ride in a moving vehicle with the seat backrest in an excessively reclined position as this can be dangerous. You could slide under the seat belt in a collision. If you slide under it, the belt would apply force at the abdomen or neck. That could cause serious or even fatal injuries. The seat backrest and seat belt provide the best restraint when the wearer is in a nearly upright position and the belt is properly positioned on the body.

#### Warning!



Never let more people ride in the vehicle than there are seat belts available. Be sure everyone riding in the vehicle is correctly restrained with a separate seat belt. Never use a seat belt for more than one person at a time.

#### Warning!



Read and observe the additional warning notices printed in the "Safety and Security" section (▷ page 66) and (▷ page 68).


### Front seat belts and rear outer seat belts



- ① Latch plate
- ② Buckle
- ③ Release button

- ▶ With a smooth motion, pull the belt from the belt outlet.
- ▶ Place the shoulder portion of the belt across the top of your shoulder and the lap portion across your hips.
- ▶ Push latch plate ① into buckle ② until it clicks.
- ▶ If necessary, tighten the lap portion to a snug fit by pulling shoulder portion up.

### Rear center seat belt

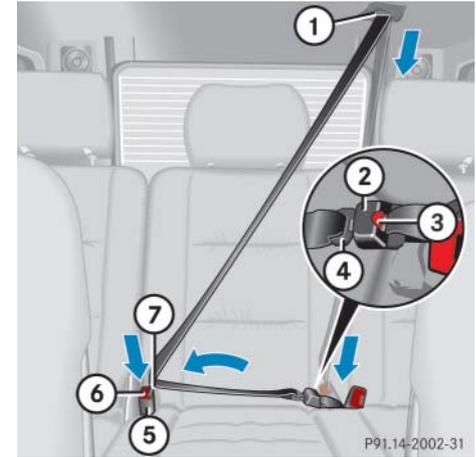

#### Overview

- ① Attachment for latch plates
- ② Buckle for fixed latch plate
- ③ Release button for fixed latch plate
- ④ Fixed latch plate
- ⑤ Buckle for free-sliding latch plate
- ⑥ Release button for free-sliding latch plate
- ⑦ Free-sliding latch plate


### Fastening the rear center seat belt



- ▶ Pull both latch plates ① and ② out of the attachment (▷ page 45).

The seat belt has two latch plates: Plate ① is fixed at the end of the belt. Latch plate ② is free-sliding across the belt.

- ▶ With a smooth motion, pull the belt from the belt outlet.

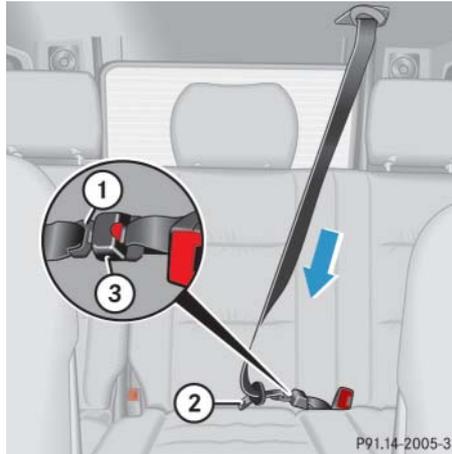

- ▶ Push fixed latch plate ① into buckle ③ until it clicks.



- ▶ Guide the seat belt at free-sliding latch plate ② across your body. Place the shoulder portion of the belt across the top of your shoulder and the lap portion across your hips.
- ▶ Push free-sliding latch plate ② into buckle ④ until it clicks.
- ▶ If necessary, tighten the lap portion to a snug fit by pulling shoulder portion up.

**Opening the rear center seat belt**

- ▶ Press release button ⑥ on buckle ⑤ for the free-sliding latch plate (▷ page 45).
- ▶ Press release button ③ on buckle ② for the fixed latch plate (▷ page 45).

**Storing the rear center seat belt**

- ▶ Allow rear center seat belt to retract to its end stop.
- ▶ Guide both latch plates ④ and ⑦ once after the other into attachment ① (▷ page 45).

**Warning!**

To help prevent the possibility of injury, always store the rear center seat belt latch plates in the attachment when the rear center seat belt is not in use.

**Proper use of seat belts**

- Do not twist the belt when fastening.
- Adjust seat belt so that the shoulder portion is located as close as possible to the middle of the shoulder (it should not touch the neck). Never pass the shoulder portion of the belt under your arm.
- Position the lap belt as low as possible on your hips (over hip joint) and not across the abdomen.
- Place the seat backrest on adjustable seat backrests in a nearly upright position.
- Never use a seat belt for more than one person at a time.
- Do not fasten a seat belt around a person and another object at the same time.
- When using a seat belt to secure infant or toddler restraints or children in booster seats, always follow the child seat manufacturer's instructions.

- Check your seat belt during travel to make sure it is properly positioned.
- Make sure the seat belt is always fitted snugly. Take special care of this when wearing loose clothing.

**Warning!**

Do not pass belts over sharp edges. They could tear.

Do not allow the belt to get caught in the door or in the seat adjustment mechanism. This could damage the belt.

Never attempt to make modifications to seat belts. This could impair the effectiveness of the belts.

Do not bleach or dye seat belts as this may severely weaken them. In a crash, they may not be able to provide adequate protection.

Damaged seat belts or belts that were highly stressed in an accident must be replaced. Contact an authorized Mercedes-Benz Light Truck Center.

#### Seat belt height adjustment

Adjust the height so that the upper part of the belt runs over the middle of the shoulder.



- ① Button for belt outlet height adjustment

#### Adjusting belt outlet higher

- ▶ Slide belt outlet upward.

The belt outlet engages in five various positions.

#### Adjusting belt outlet lower

- ▶ Pull and hold release button ①.
- ▶ Slide belt outlet in desired position.
- ▶ Let go of release button ①.

Please comply with the instructions for “Proper use of seat belts” (▷ page 47).

#### Starting the engine

##### Warning!



Inhalation of exhaust gas is hazardous to your health. All exhaust gas contains carbon monoxide, and inhaling it can cause unconsciousness and lead to death.

Do not run the engine in confined areas (such as garage) which are not properly ventilated. If you think that exhaust gas fumes are entering the vehicle while driving, have the cause determined and corrected immediately. If you must drive under these conditions, drive only with at least one window fully open.

## Automatic transmission



### Gearshift pattern for automatic transmission

- P** Park position with gear selector lever lock
- R** Reverse gear
- N** Neutral
- D** Drive position

For more information, see “Automatic transmission” (▷ page 149).

## Starting

- ▶ Place the gear selector lever in position **P**.
- ▶ Do not depress the accelerator.
- ▶ Turn the SmartKey in the starter switch to position **3** and hold until the engine starts (▷ page 35).



You can also use the “touch-start” function. Turn the SmartKey to position **3** and release it again immediately. The engine then starts automatically.

- ▶ Depress the brake pedal.

The gear selector lever lock is released.

For information on turning off the engine, see “Turning off engine” (▷ page 58).

## Starting difficulties

If the engine does not start as described, carry out the following steps:

- ▶ Turn SmartKey in starter switch to position **0** and repeat starting procedure.
- ▶ Remember that extended starting attempts can drain the battery.
- ▶ Get a jump start (▷ page 356).

If the engine does not start after several starting attempts, there could be a malfunction in the engine electronics or in the fuel supply system.

- ▶ Notify an authorized Mercedes-Benz Light Truck Center.

## Driving

### Parking brake



- ① Parking brake lever
- ② Release button

### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle.

Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could release the parking brake, which could result in an accident and/or serious personal injury.

- ▶ Release the parking brake by lifting lever ① up slightly, pressing button ② on the lever and moving lever ① down to the stop.

The warning lamp **BRAKE** (USA only) or **(P)** (Canada only) in the instrument cluster goes out.

### Driving

- ▶ Depress the brake pedal.
- ▶ Move gear selector lever to position **D** or **R**.

### Warning!



It is dangerous to shift the gear selector lever out of **P** or **N** if the engine speed is higher than idle speed. If your foot is not firmly on the brake pedal, the vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when the engine is idling normally and when your right foot is firmly on the brake pedal.



In order to avoid damaging the transmission,

- wait for the gear selection process to complete before setting the vehicle in motion.
- place the gear selector lever in position **P** or **R** only when the vehicle is stopped.

- ▶ Release the brake pedal.
- ▶ Carefully depress the accelerator.

Once the vehicle is in motion, the automatic central locking system engages and the locking knobs drop down.



If you hear a warning signal when driving off, you have forgotten to release the parking brake.

Release the parking brake.

After a cold start, the automatic transmission shifts at a higher revolution. This allows the catalytic converter to reach its operating temperature earlier.



Do not run cold engine at high engine speeds. Running a cold engine at high engine speeds may shorten the service life of the engine.



You can open the doors from inside. Open doors only when the conditions are safe to do so.

You can deactivate the automatic locking using the control system (▷ page 142).



Simultaneously depressing the accelerator pedal and applying the brake reduces engine performance and causes premature brake and drivetrain wear.

### Warning!



On slippery road surfaces, never downshift in order to obtain braking action. This could result in drive wheel slip and reduced vehicle control. Your vehicle's ABS will not prevent this type of loss of control.


For more information, see “Driving instructions” (▷ page 220).

For information on off-road driving, see “Off-road driving” (▷ page 227).

## Switching on headlamps

### Low beam headlamps

The exterior lamp switch is located on the dashboard to the left of the steering wheel.

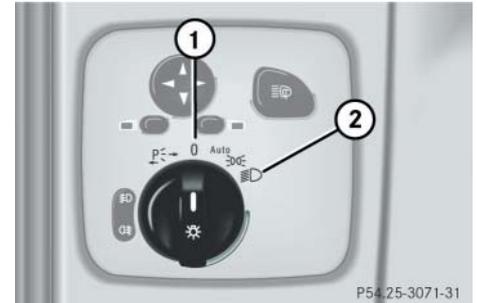

### Exterior lamp switch

- ① Off
  - ② Low beam headlamps on
- ▶ Turn exterior lamp switch to position .

## Driving

### High beam

The combination switch is located on the left of the steering column.



#### Combination switch

- ① High beam
- ② High beam flasher

- ▶ Push combination switch in direction of arrow ①.

The high beam headlamp indicator lamp  in the instrument cluster comes on (▷ page 24).

For more information on headlamps, see “Lighting” (▷ page 110).

### Turn signals

The combination switch is located on the left of the steering column.



#### Combination switch

- ① Turn signals, right
- ② Turn signals, left

- ▶ Press combination switch in direction of arrow ① or ②.

The corresponding turn signal indicator lamp  or  in the instrument cluster flashes (▷ page 24).

The combination switch resets automatically after major steering wheel movements.



To signal minor directional changes such as changing lanes, press combination switch only to point of resistance and release. The corresponding turn signals will flash three times.

## Windshield wipers

The combination switch is located on the left of the steering column.



### Combination switch

- ① Single wipe  
Wiping with windshield washer fluid
  - ② Switching on windshield wipers
- Switch on the ignition (▷ page 35).

### Switching on windshield wipers

- Turn the combination switch to the desired position depending on the intensity of the rain.
  - 0 Windshield wipers off
  - I Intermittent wiping
  - II Normal wiper speed
  - III Fast wiper speed



Intermittent wiping interval is dependent on wetness of windshield. Pauses between wipes are automatically controlled by the rain sensor.



Do not operate the wipers when the windshield is dry. Dust that accumulates on a windshield might scratch the glass and/or damage the wiper blades when wiping occurs on a dry windshield. If it is necessary to operate the wipers in dry weather conditions, always operate the wipers with windshield washer fluid (▷ page 54).

## Driving

### Intermittent wiping

- ▶ Set the combination switch to position I.



Intermittent wiping is interrupted when the vehicle is at a standstill and a front door is opened.

### Single wipe

- ▶ Press combination switch briefly in direction of arrow ①.

The windshield wipers wipe one time without washer fluid.

### Wiping with windshield washer fluid

- ▶ Push combination switch in direction of arrow ① past the resistance point.

The windshield wipers operate with washer fluid.

For information on filling up the washer reservoir, see “Windshield/rear window washer system and headlamp cleaning system” (▷ page 249).



If anything blocks the windshield wipers (leaves, snow, etc.), switch them off immediately.


- For safety reasons, withdraw SmartKey from starter switch before attempting to remove any blockage.
- Remove blockage.
- Turn the windshield wipers on again.

If windshield wipers fail to function at all in combination switch position I,

- set the combination switch to the next highest wiper speed.
- have the windshield wipers checked at the nearest authorized Mercedes-Benz Light Truck Center.

### Rear window wiper/washer

The rear window wiper / washer switch is located on the upper part of the center console.

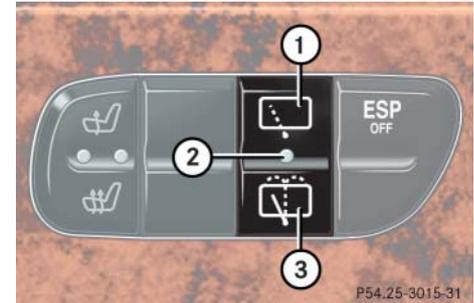

- ① Interval wiping on/off
- ② Indicator lamp
- ③ Simultaneous operation of wiper and washer



The rear window wiper will also automatically engage if

- the windshield wipers are engaged.
- the gear selector lever is placed in **R** “Reverse”.

- ▶ Switch on the ignition (▷ page 35).

### Interval wiping

#### **Switching on**

- ▶ Press upper half ① of the switch.  
Indicator lamp ② comes on.

#### **Switching off**

- ▶ Press upper half ① of the switch again.  
Indicator lamp ② goes out.

### Wiping with windshield washer fluid

- ▶ Press and hold lower half ③ of the switch.

The wiper operates with washer fluid. The rear window will be wiped for approximately another five seconds after the switch is released.

For information on filling up the washer reservoir, see “Windshield/rear window washer system and headlamp cleaning system” (▷ page 249).

### Problems while driving

#### **The engine runs erratically and misfires**

- An ignition cable may be damaged.
  - The engine electronics may not be operating properly.
  - Unburned gasoline may have entered the catalytic converter and damaged it.
- ▶ Give very little gas.
  - ▶ Have the problem repaired by an authorized Mercedes-Benz Light Truck Center as soon as possible.

### Driving

#### The coolant temperature is above 248°F (120°C)

The coolant is too hot and is no longer cooling the engine.

- ▶ Stop the vehicle as soon as possible and turn off the engine. Allow engine and coolant to cool.
- ▶ Check the coolant level and add coolant if necessary (▷ page 248).



Excessive coolant temperatures trigger a warning message in the multifunction display (▷ page 308).

#### In case of accident

If the vehicle is leaking gasoline:

- ▶ Do not start the engine under any circumstances.
- ▶ Notify local fire and/or police authorities.

If the extent of the damage cannot be determined:

- ▶ Notify an authorized Mercedes-Benz Light Truck Center.

If no damage can be determined on the

- major assemblies
- fuel system
- engine mount:
- ▶ Start the engine in the usual manner.

## ▼ Parking and locking

You have now completed your first drive. You have properly stopped and parked your vehicle. End your drive as follows.

### Warning!



With the engine not running, there is no power assistance for the brake and steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle.

### Warning!



Do not park this vehicle in areas where combustible materials such as grass, hay or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

To reduce the risk of personal injury as a result of vehicle movement, before turning off the engine and leaving the vehicle always:

- Keep right foot on brake pedal.
- Pull the parking brake lever up as many notches as possible.
- Move the gear selector lever to position **P**.
- Slowly release brake pedal.
- When parked on an incline, turn front wheels towards the road curb.
- Turn the SmartKey in the starter switch position **0** and remove the SmartKey from the starter switch.
- Take the SmartKey and lock vehicle when leaving.

## Parking brake



- ① Parking brake lever
- ② Release button

- ▶ Pull lever ① up as many notches as possible.

When the engine is running, the warning lamp **BRAKE** (USA only) or **(P)** (Canada only) in the instrument cluster will be illuminated.

### Parking and locking

#### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could release the parking brake and/or move the gear selector lever from position **P**, either of which could result in an accident and/or serious personal injury.

#### Warning!



Getting out of your vehicle with the gear selector lever not fully engaged in position **P** is dangerous. Also, when parked on an incline, position **P** alone may not prevent your vehicle from moving, possibly hitting people or objects.

Always set the parking brake in addition to shifting to position **P**.

When parked on an incline, turn front wheels towards the road curb.

#### Switching off headlamps

- ▶ Turn the exterior lamp switch to **0** (▷ page 51).

For more information, see “Exterior lamp switch” (▷ page 110).

#### Turning off engine

- ▶ Place the gear selector lever in position **P**.



Always set the parking brake in addition to shifting to position **P**.

On slopes, turn the front wheels towards the road curb.

- ▶ Turn SmartKey in the starter switch to position **0** and remove the SmartKey from the starter switch.

The immobilizer is activated.



The SmartKey can only be pulled out when:

- it has been turned to position **0** in the starter switch
- the gear selector lever for the automatic transmission is in position **P**

- ▶ Press the seat belt release button  (▷ page 45).

Allow the retractor to completely rewind the seat belt by guiding the latch plate.



With the SmartKey removed and the driver's door open, a warning sounds if the vehicle's exterior lamps are not switched off.

**Warning!**

To prevent possible personal injury, always keep hands and fingers away from the door openings when closing the doors. Be especially careful when small children are around.

Before closing doors, make sure there is no possibility of someone getting caught in a door during closing.

- ▶ After exiting the vehicle, press the lock button  on the SmartKey (▷ page 34).

With the hood, tailgate and all doors closed, all turn signal lamps flash three times. The locking knobs on the doors move down.

The anti-theft alarm system is armed.

**Warning!**

When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment may cause an accident and/or serious personal injury.

For more information, see “Locking and unlocking” (▷ page 92).



## Safety and Security

Occupant safety

Panic alarm

Driving and safety systems

Anti-theft systems



### Occupant safety

In this section you will learn the most important facts about the restraint systems of the vehicle.

The restraint systems are

- Seat belts
- Emergency tensioning device
- Airbags
- Child seats
- Child seat recognition
- Lower anchors and tethers for children (LATCH)

As independent systems, their protective effects work in conjunction with each other.



For information on infants and children traveling with you in the vehicle and restraint systems for infants and children, see “Children in the vehicle” (▷ page 72).

The **SRS** indicator lamp in the instrument cluster (▷ page 25) comes on:

- for about four seconds when you turn the SmartKey in the starter switch to position **1**.
- for about four seconds when you start the engine by turning the SmartKey.



The **SRS** indicator lamp remains lit if the SmartKey is turned to position **2** and left there. The indicator lamp will go out when you start the engine.

The **SRS** indicator lamp goes out shortly after you start the engine. This shows that the restraint systems are operational.

A malfunction in the system has been detected if the **SRS** indicator lamp:

- fails to extinguish after approximately four seconds.
- does not come on at all.
- comes on after the engine was started or while driving.

For safety reasons, we strongly recommend that you visit an authorized Mercedes-Benz Light Truck Center immediately to have the system checked.

For more information, see “Practical hints” (▷ page 296).

### Warning!



In the event that the **SRS** indicator lamp comes on during driving or does not come on at all, the SRS self-check has detected a malfunction. For your safety, we strongly recommend that you visit an authorized Mercedes-Benz Light Truck Center immediately to have the system checked; otherwise the SRS may not be activated when needed in an accident, which could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could also result in injury.

In addition, through improper work there is a risk of rendering the SRS inoperative or causing unintended airbag deployment. Work on the SRS must therefore only be performed by qualified technicians. Contact an authorized Mercedes-Benz Light Truck Center.

## Airbags

### Warning!



Airbags are designed to reduce the potential of injury in certain frontal (front airbags) impacts, which may cause significant injuries. However, no system available today can totally eliminate injuries and fatalities.

The activation of the airbags temporarily releases a small amount of dust from the airbags. This dust, however, is neither injurious to your health, nor does it indicate a fire in the vehicle. The dust might cause some temporary breathing difficulty for people with asthma or other breathing trouble. To avoid this, you may wish to get out of the vehicle as soon as it is safe to do so. If you have any breathing difficulty but cannot get out of the vehicle after the airbag inflates, then get fresh air by opening a window or door.

### Occupant safety

#### Warning!



The service life of the passenger front airbag extends to the date indicated on the label located on the driver side B pillar. To provide continued reliability after that date, they should be inspected by an authorized Mercedes-Benz Light Truck Center at that time and replaced when necessary.

#### Warning!



To reduce the risk of injury when the front airbags inflate, it is very important for the driver and front passenger to always be in a properly seated position and to wear your seat belt.

For maximum protection in the event of a collision always be in normal seated position with your back against the backrest. Fasten your seat belt and make sure it is properly positioned on your body (▷ page 68).

Since the airbag inflates with considerable speed and force, a proper seating and hands on steering wheel position will help to keep you at a safe distance from the airbag. Occupants who are unbelted, out of position or too close to the airbag can be seriously injured or killed by an airbag as it inflates with great force in the blink of an eye:

- Sit properly belted in a nearly upright position with your back against the backrest.

- Adjust the driver seat as far as possible rearward, still permitting proper operation of vehicle controls. The distance from the center of the driver's breastbone to the center of the airbag cover on the steering wheel must be at least ten inches (25 cm) or more. You should be able to accomplish this by a combination of adjustments to the seat and steering wheel. If you have any problems, please see an authorized Mercedes-Benz Light Truck Center.
- Do not lean with your head or chest close to the steering wheel or dashboard.
- Keep hands on the outside of steering wheel rim. Placing hands and arms inside the rim can increase the risk and potential severity of hand/arm injury when driver front airbag inflates.
- Adjust the front passenger seat as far as possible rearward from the dashboard when the seat is occupied.

- Always sit nearly upright, properly use the seat belts and appropriate size infant or child restraint system.
- Children 12 years old and under must never ride in the front seat, except in a Mercedes-Benz authorized BabySmart<sup>TM1</sup> compatible child seat, which operates with the BabySmart<sup>TM</sup> system installed in the vehicle to deactivate the passenger front airbag when it is properly installed. Otherwise they will be struck by the airbag when it inflates in a crash. If this happens, serious or fatal injury will result.

Failure to follow these instructions can result in severe injuries to you or other occupants.

If you sell your vehicle, it is important that you make the buyer aware of this safety information. Be sure to give the buyer this Operator's Manual.

<sup>1</sup> BabySmart<sup>TM</sup> is a trademark of Siemens Automotive Corp.

### Warning!



Accident research shows that the safest place for children in an automobile is in the rear seat. Should you choose to place a child 12 years old or under in the front passenger seat of your vehicle, you must properly use a BabySmart<sup>TM</sup> child restraint which will turn off the passenger front airbag (▷ page 74).



Airbags are designed to activate only in certain frontal (front airbags) impacts and in side (head protection window curtain airbags) impacts which exceed preset thresholds.

Only during these types of impacts, if of sufficient severity to meet the deployment thresholds, will they provide their supplemental protection.

The driver and passenger should always wear their seat belts. Otherwise it is not possible for the airbags to provide their supplemental protection.

In cases of other frontal impacts, angled impacts, roll-overs, other side impacts, rear collisions, or other accidents, the airbags will not be activated. The driver and passengers will then be protected by the fastened seat belts.

We caution you not to rely on the presence of the airbags in order to avoid wearing your seat belt.

### Occupant safety

Your vehicle was originally equipped with airbags that are designed to activate in certain impacts exceeding a preset threshold to reduce the potential and severity of injury. It is important to your safety and that of your passenger that you replace deployed airbags and repair any malfunctioning airbags to make sure the vehicle will continue to provide supplemental crash protection for occupants.

#### Safety guidelines for the seat belt, emergency tensioning device and airbag

##### Warning!



- Damaged seat belts or belts that were highly stressed in an accident must be replaced and their anchoring points must also be checked. Use only belts installed or supplied by an authorized Mercedes-Benz Light Truck Center.
- No modifications of any kind may be made to any components or wiring of the SRS. This includes changing or removing any component or part of the SRS, the installation of additional trim material, badges, etc. over the steering wheel hub, passenger front airbag cover, outboard sides of the front seat backrests, door trim panels, or door frame trims, and installation of additional electrical /electronic equipment on or near SRS components and wiring. Keep area between airbags and occupants free from objects (e.g. packages, purses, umbrellas, etc.).
- Airbags and emergency tensioning devices (ETDs) are designed to function on a one-time-only basis. An airbag or ETD that was activated must be replaced.
- Do not pass belts over sharp edges. They could tear.
- Do not make any modification that could change the effectiveness of the belts.
- Do not bleach or dye seat belts as this may severely weaken them. In a crash they may not be able to provide adequate protection.
- Never place your feet on the instrument panel, dashboard, or on the seat. Always keep both feet on the floor in front of the seat.
- Airbag system components will be hot after an airbag has inflated. Do not touch.

- In addition, improper repair work on the SRS creates a risk of rendering the SRS inoperative or causing unintended airbag deployment. Work on the SRS must therefore only be performed by qualified technicians. Contact an authorized Mercedes-Benz Light Truck Center.
- For your protection and the protection of others, when scrapping the airbag unit or emergency tensioning device, our safety instructions must be followed. These instructions are available from an authorized Mercedes-Benz Light Truck Center.
- Given the considerable deployment speed and the textile structure of the airbags, there is the possibility of abrasions or other injuries resulting from airbag deployment.

When you sell your vehicle we strongly urge you to give notice to the subsequent owner that it is equipped with an SRS by alerting them to the applicable section in the Operator's Manual.

### Warning!



In the event that the **SRS** indicator lamp comes on while driving, the SRS may not be operational. For your safety, we strongly recommend that you visit an authorized Mercedes-Benz Light Truck Center immediately to have the system checked; otherwise the SRS may not be activated when needed in an accident, which could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could also result in injury.

### Front airbags



- ① Driver airbag
- ② Passenger front airbag

Driver and front passenger airbags are deployed:

- in the event of certain frontal impacts
- if impact exceeds a preset deployment threshold

### Occupant safety

The airbags will not deploy in impacts which do not exceed the system's deployment thresholds. You will then be protected by the fastened seat belts.

The passenger front airbag will only be deployed if:

- the passenger seat is occupied
- the **AIRBAG OFF** indicator lamp in the center console is not lit (▷ page 74)
- the impact exceeds a preset deployment threshold



Do not place objects heavier than 20 lbs (9 kg) on the front passenger seat. This could cause the passenger front airbag to deploy in a crash which exceeds the system's deployment threshold.

### Window curtain airbags

The window curtain airbags ① deploy in the area of the side windows indicated by the arrows.



#### ① Window curtain airbag

The window curtain airbags are deployed:

- on the impacted side of the vehicle
- in impacts exceeding a preset deployment threshold
- independently of the front airbags

The window curtain airbags are not deployed in impacts which do not exceed the system's deployment threshold.

### Seat belts

When the engine is started, the seat-belt telltale  illuminates to remind you and your passengers to fasten your seat belts. If the driver's seat belt is not fastened before the engine is started, the seat belt telltale  illuminates and a warning chime sounds for approximately six seconds when the engine is started.

Always wear your seat belt. All vehicle occupants always need to have their seat belts fastened and wear them properly.

In addition, applicable motor vehicle safety laws require you to wear seat belts. Even where this is not the case, we strongly recommend that all vehicle occupants have their seat belts fastened and wear them properly.

For more information, see “Fastening the seat belt” (▷ page 43).



For information on infants and children traveling with you in the vehicle and restraint systems for infants and children, see “Children in the vehicle” (> page 72).

**Warning!**

Always fasten your seat belt before driving off. Always make sure your passengers are properly restrained, even those sitting in the rear and pregnant women.

Failure to wear and properly fasten and position your seat belt greatly increases your risk of injuries and their likely severity in an accident. You and your passengers should always wear seat belts.

If you are ever in an accident, your injuries can be considerably more severe without your seat belt properly buckled. Without your seat belt buckled, you are much more likely to hit the interior of the vehicle or be ejected from it. You can be seriously injured or killed.

In the same crash, the possibility of injury or death is lessened if you are properly wearing your seat belt. Airbags can only protect as they are designed if the occupants are properly wearing their seat belts.

**Warning!**

Never ride in a moving vehicle with the seat backrest in an excessively reclined position as this can be dangerous. You could slide under the seat belt in a collision. If you slide under it, the belt would apply force at the abdomen or neck. That could cause serious or even fatal injuries. The backrest and seat belt provide the best restraint when the wearer is in a nearly upright position and the belt is properly positioned on the body.

**Warning!**

Never let more people ride in the vehicle than there are seat belts available. Be sure everyone riding in the vehicle is correctly restrained with a separate seat belt. Never use a seat belt for more than one person at a time.

## Occupant safety

### Warning!



Damaged seat belts or belts that were highly stressed in an accident must be replaced and their anchoring points must also be checked.

Only use seat belts which have been approved by Mercedes-Benz.

Do not make any modifications to the seat belts. This can lead to unintended activation or to failure.

Do not bleach or dye seat belts as this may severely weaken them. In a crash, they may not be able to provide adequate protection.

Have all work carried out only by qualified technicians. Contact an authorized Mercedes-Benz Light Truck Center.

### Warning!



#### USE SEAT BELTS PROPERLY

- Seat belts can only work when used properly. Never wear seat belts in any other way than as described in this section, as that could result in serious injuries in case of an accident.
- Each occupant should wear their seat belt at all times, because seat belts help reduce the likelihood of and potential severity of injuries in accidents, including rollovers. The integrated restraint system includes SRS (driver airbag and passenger front airbag, head protection window curtain airbags for side windows), ETD (seat belt emergency tensioning device for driver's seat, front passenger seat and the outboard passenger seats). The system is designed to enhance the protection offered to properly belted occupants in certain frontal (front airbags and EDT) and side (window curtain airbags and ETD) impacts which exceed preset deployment thresholds.

- Never wear the shoulder belt under your arm, against your neck or off your shoulder. In a crash, your body would move too far forward. That would increase the chance of head and neck injuries. The belt would also apply too much force to the ribs or abdomen, which could severely injure internal organs such as your liver or spleen.
- Never wear belts over rigid or breakable objects in or on your clothing, such as eyeglasses, pens, keys, etc., as these might cause injuries.
- Position the lap belt as low as possible on your hips and not across the abdomen. If the belt is positioned across your abdomen, it could cause serious injuries in a crash.
- Never use a seat belt for more than one person at a time. Do not fasten a seat belt around a person and another person or other objects.

- Belts should not be worn twisted. In a crash, you wouldn't have the full width of the belt to manage impact forces. The twisted belt against your body could cause injuries.
- Pregnant women should also use a lap-shoulder belt. The lap belt portion should be positioned as low as possible on the hips to avoid any possible pressure on the abdomen.
- Never place your feet on the instrument panel, dashboard or on the seat. Always keep both feet on the floor in front of the seat.

### Emergency tensioning device (ETD), seat belt force limiter

The seat belts for the front and rear outer seats are equipped with emergency tensioning devices and belt force limiters.

The ETD is designed to activate in the following cases:

- in frontal or rear-end impacts exceeding a preset severity level
- if the restraint systems are operational and functioning correctly, see **SRS** indicator lamp (▷ page 62)



The ETDs for the front seats will only activate if the respective front seat belt is fastened (latch plate properly inserted into buckle).

The ETDs for the rear outer seats will activate with or without the respective seat belt fastened.

In an impact, emergency tensioning devices remove slack from the belts in such a way that the seat belts fit more snugly against the body.

### Warning!



An emergency tensioning device (ETD) that was activated must be replaced.

When disposing of the emergency tensioning device, our safety instructions must be followed. These are available at your authorized Mercedes-Benz Light Truck Center.



Do not place objects heavier than 20 lbs (9 kg) on the front passenger seat. This could cause the passenger front airbag and, with the seat belt fastened to secure the object, the ETD on the front passenger side to deploy in a crash which exceeds the system's deployment threshold.

### Occupant safety

#### Children in the vehicle

If an infant or child is traveling with you in the vehicle:

- Secure the child using an infant or child restraint appropriate to the age and size of the child.
- Make sure the infant or child is properly secured at all times while the vehicle is in motion.

Infant and child restraint seats and information on choosing an appropriate restraint system can be obtained from any Mercedes-Benz Light Truck Center.

#### Infant and child restraint systems

Use only a BabySmart™<sup>1</sup> compatible child restraint for the front passenger seat in this vehicle.

We recommend that all infants and children be properly restrained at all times while the vehicle is in motion. All lap-shoulder belts except the driver's seat belt and the rear center seat belt have special seat belt retractors for secure fastening of child restraints.

To fasten a child restraint, follow manufacturer's instructions for mounting child restraints. Then pull shoulder belt out completely and let it retract. During the seat belt retraction a ratcheting sound can be heard to indicate that the special seat belt retractor is activated. The belt is now locked. Push down on child restraint to take up any slack.

To deactivate, release seat belt buckle and let seat belt retract completely. The seat belt can again be used in the usual manner.



For more information on child seats with mounting fittings for tether anchorages, see "Installation of infant and child restraint system" (> page 76).

For information on LATCH-type child seat anchors, see (> page 77).

#### Warning!



Never release the seat belt buckle while the vehicle is in motion, since the special seat belt retractor will be deactivated.

<sup>1</sup> BabySmart™ is a trademark of Siemens Automotive Corp.



The use of infant or child restraints is required by law in all 50 states, the District of Columbia, the U.S. territories and all Canadian provinces.

Infants and small children should be seated in an appropriate infant or child restraint system properly secured by a lap-shoulder belt or, if so equipped, a child restraint lower anchorage system that complies with U.S. Federal Motor Vehicle Safety Standards 213 and 225 and Canadian Motor Vehicle Safety Standards 213 and 210.2.

A statement by the child restraint manufacturer of compliance with this standard can be found on the instruction label on the restraint and in the instruction manual provided with the restraint.

When using any infant or child restraint system, be sure to carefully read and follow all manufacturer's instructions for installation and use.

Please read and observe warning labels affixed to inside of vehicle and to infant or child restraints.

**Warning!**

Children 12 years old and under must never ride in the front seat, except in a Mercedes-Benz authorized BabySmart™ compatible child seat, which operates with the BabySmart™ System installed in the vehicle to deactivate the passenger front airbag when it is properly installed. Otherwise they will be struck by the airbag when it inflates in a crash. If this happens, serious or fatal injury can result.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions. Infants and small children must ride in back seats and be seated in an appropriate infant or child restraint system, which is properly secured with the vehicle's seat belt and top tether strap, or secured via lower anchors and top tether strap, fully in accordance with the child seat manufacturer's instructions.



### Occupant safety

- ▷▷ Infants and small children should never share a seat belt with another occupant. During an accident, they could be crushed between the occupant and seat belt.
- A child's risk of serious or fatal injuries is significantly increased if the child restraints are not properly secured in the vehicle and the child is not properly secured in the child restraint.

#### Warning!



Children too big for child restraint systems must ride in back seats using regular seat belts. Position shoulder belt across chest and shoulder, not face or neck. A booster seat may be necessary to achieve proper belt positioning for children from 41 lbs until they reach a height where a lap / shoulder belt fits properly without a booster.

When the child restraint is not in use, remove it from the vehicle or secure it with the seat belt to prevent the child restraint from becoming a projectile in the event of an accident.

Do not leave children unattended in the vehicle, even if the children are secured in a child restraint system. Unsupervised children in a child restraint system may use vehicle equipment and may cause serious personal injury.

### BabySmart™ airbag deactivation system



#### **AIRBAG OFF** indicator lamp

Special BabySmart™<sup>1</sup> compatible child seats, designed for use with the Mercedes-Benz system and available at any authorized Mercedes-Benz Light Truck Center are required for use with the BabySmart™ airbag deactivation system. With the special child seat properly installed, the passenger front airbag will not deploy.

<sup>1</sup> BabySmart™ is a trademark of Siemens Automotive Corp.

The  indicator lamp located in the center console will be illuminated, except with the SmartKey removed or in the starter switch position **0**.



The system does not deactivate the emergency tensioning device.

### Self-test BabySmart™ without special child seat installed

After turning the SmartKey in the starter switch to position **1** or **2**, the  indicator lamp located in the center console comes on for approximately six seconds and then goes out.

If the indicator lamp should not come on or is continuously lit, the system is not functioning. You must see an authorized Mercedes-Benz Light Truck Center before seating any child on the front passenger seat.

For more information, see “Practical hints” section (> page 297).

### Warning!



The BabySmart™ airbag deactivation system will ONLY work with a special child seat designed to operate with it. It will not work with child seats which are not BabySmart™ compatible.

Never place anything between seat cushion and child seat (e.g. pillow), since it reduces the effectiveness of the deactivation system. The bottom of the child seat must make full contact with the passenger seat cushion. An incorrectly mounted child seat could cause injuries to the child in case of an accident, instead of protecting the child.

Follow the manufacturer's instructions for installation of special child seats.

When using a BabySmart™ compatible child seat on the front passenger seat, the passenger front airbag will not deploy only if the  indicator lamp remains illuminated.

### Warning!



Make sure to check the indicator every time you use the special system child seat. Should the light go out while the restraint is installed, please check installation. If the light remains out, do not use the BabySmart™ restraint to transport children on the front passenger seat until the system has been repaired.


### Warning!




Do not place powered-on laptops, cell phones, electronic tags such as those used in ski passes and like electronic devices on the front passenger seat. Signals from such devices may interfere with the BabySmart™ system. Such signal interference, for example, may cause the  indicator lamp not to come on during self-test or be continuously lit, indicating that the system is not functioning.

## Occupant safety

### Installation of infant and child restraint system

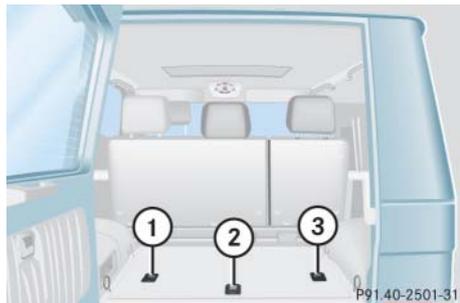

- ① Anchorage ring for rear left side seat
  - ② Anchorage ring for rear center seat
  - ③ Anchorage ring for rear right side seat
- ▶ Remove the cargo compartment cover blind (▷ page 187).
  - ▶ Remove the partition net\* (▷ page 189).
  - ▶ Guide top tether strap between head restraint and top of seat back. Head restraint must be installed and positioned such that the top tether strap can pass freely between the head restraint and top of seat back.

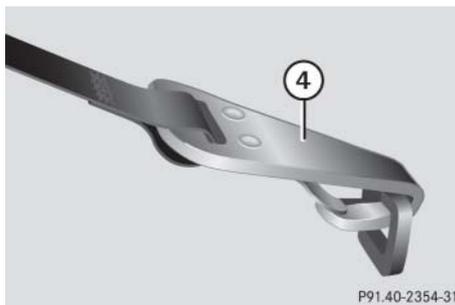

#### ④ Hook

- ▶ Securely fasten hook ④ to anchorage ring.



For safety, make sure the hook is attached to the ring beyond the safety catch, as illustrated.

Once the top tether anchorage hook is attached, the child restraint itself can be secured. Secure child restraint and tighten the top tether strap according to the child restraint manufacturer's instructions.

### Warning!



Use only the described anchorage rings for the respective child seat. Other lashing eyelets could tear in case of an accident. Make sure

- the fastening straps are not crossed or twisted.
- the hook is properly attached and is closed.

### Child seat anchors – LATCH type

This vehicle is provided with two LATCH (LOWER Anchors and Tethers for CHildren) type anchors (at each of the outer rear seats) for installation of a LATCH child seat with matching mounting fittings.



#### Anchors

Install a LATCH type child seat according to the manufacturer's instructions.

- ▶ Install child seat according to manufacturer's instructions.



With a child seat installed in the left rear seat, the seat belt for the center seat occupied by a passenger must operate freely.

Non-LATCH type child seats may also be used and can be installed using the vehicle's seat belt system. Install child seat according to the manufacturer's instructions.

#### Warning!



Install child seat according to manufacturer's instructions.

The child seat must be firmly attached in the right and left side anchors.

#### Warning!



An incorrectly mounted child seat may come loose during an accident which could result in serious injury or death to the child.

Damaged or impact-damaged child seats or child seat mounting fittings must be replaced.

Do not leave children unattended in the vehicle, even if the children are secured in a child restraint system.

Children too big for child restraint systems must ride in back seats using regular seat belts. Position shoulder belt across chest and shoulder, not face or neck. A booster seat may be necessary to achieve proper belt positioning for children from 41 lbs until they reach a height where a lap / shoulder belt fits properly without a booster.

## Occupant safety

### Blocking rear door window operation

The override switch is located in the driver's door.



① Override switch

### Activating override switch

- ▶ Slide override switch ① to the right.

A dot becomes visible. The functions in the rear are disabled.



Operation of the rear windows with the switches located in the driver's door is still possible.

### Deactivating override switch

- ▶ Slide override switch ① to the left.

The functions in the rear are enabled again.

For more information on power windows, see “Power windows” (> page 175).


### Warning!



Activate the override switch when children are riding in the back seats of the vehicle. The children may otherwise injure themselves, e.g. by becoming trapped in the window opening.

When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment can cause an accident and/or serious personal injury.

## ▼ Panic alarm

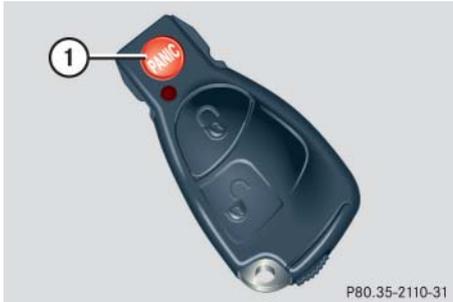① **PANIC** button

An audible alarm and blinking turn signal lamps will operate for approximately 2½ minutes.

- ▶ To activate: Press and hold button ① for at least one second.
- ▶ To deactivate: Press button ① again or insert SmartKey in starter switch.



USA only:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any unauthorized modification to this device could void the user's authority to operate the equipment.



Canada only:

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

### Driving and safety systems

In this section you will find information on the following driving safety systems:

- ABS (Antilock Brake System)
- BAS (Brake Assist System)
- 4-ETS (Electronic Traction System)
- EBB (Electronic Brake Booster)
- ESP (Electronic Stability Program)



In winter operation, the maximum effectiveness of the ABS, ESP, EBB, and 4-ETS is only achieved with winter tires or snow chains as required.

#### Warning!



The following factors increase the risk of accidents:

- Excessive speed, especially in turns
- Wet and slippery road surfaces
- Following another vehicle too closely

The ABS, BAS, ESP, and 4-ETS cannot reduce this risk.

Always adjust your driving style to the prevailing road and weather conditions.

### ABS

#### Warning!



Do not pump the brake pedal. Use firm, steady brake pedal pressure instead. Pumping the brake pedal defeats the purpose of ABS and significantly reduces braking effectiveness.

The ABS regulates the brake pressure so that the wheels do not lock during braking. This allows you to maintain the ability to steer your vehicle.

The ABS is functional above a speed of approximately 5 mph (8 km/h) independent of road surface conditions (as long as the differential locks are not engaged).

At the instant one of the wheels is about to lock up, a slight pulsation can be felt in the brake pedal, indicating that the ABS is in the regulating mode. Keep firm and steady pressure on the brake pedal while experiencing the pulsation.

Continuous steady brake pedal pressure yields the advantages provided by the ABS, namely braking power and the ability to steer the vehicle.

On slippery road surfaces, the ABS will respond even with light brake pressure. The pulsating brake pedal can be an indication of hazardous road conditions and functions as a reminder to take extra care while driving.

The  indicator lamp in the instrument cluster (▷ page 24) comes on when you turn the SmartKey to position **2**. It goes out when the engine is running.

### Braking

At the instant one of the wheels is about to lock up, a slight pulsation can be felt in the brake pedal, indicating that the ABS is in the regulating mode.

- ▶ Keep firm and steady pressure on the brake pedal while experiencing the pulsation.

### Emergency brake maneuver

- ▶ Keep continuous full pressure on the brake pedal.



If the ABS is malfunctioning, the BAS, EBB, ESP, and 4-ETS are also switched off.

Normal driving and braking functions are still available.

### LOW RANGE– ABS

During off-road driving a special low range system for the antilock brake system (ABS) is operational with transfer case in position LOW (▷ page 157).

An improved braking action (dig-in effect) is obtained for vehicle speeds up to 37 mph (60 km/h) through a change in the ABS control function.

For more information, see “Practical hints” (▷ page 290).

#### Warning!



The ABS cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase braking or steering efficiency beyond that afforded by the condition of the vehicle brakes and tires or the traction afforded. The ABS cannot prevent accidents, including those resulting from excessive speed in turns, following another vehicle too closely, or aquaplaning. Only a safe, attentive, and skillful driver can prevent accidents. The capabilities of an ABS equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

#### BAS

The Brake Assist System (BAS) operates in emergency situations. If you apply the brakes very quickly, the BAS automatically provides full brake boost, thereby potentially reducing braking distance. Apply continuous full braking pressure until the emergency braking situation is over. The ABS will prevent the wheels from locking.

When you release the brake pedal the brakes function again as normal. The BAS is then deactivated.

With the BAS malfunctioning, the ABS, ESP, and 4-ETS are also switched off.

#### Warning!



The BAS cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase braking efficiency beyond that afforded by the condition of the vehicle brakes and tires or the traction afforded. The BAS cannot prevent accidents, including those resulting from excessive speed in turns, following another vehicle too closely, or aquaplaning. Only a safe, attentive, and skillful driver can prevent accidents. The capabilities of a BAS equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

For more information, see "Practical hints" (▷ page 300).

## 4-ETS

The 4-ETS improves vehicle's ability to utilize available traction, especially under slippery road conditions. The brakes are applied to the spinning wheel and power is allowed to flow to the wheel(s) with traction.

The 4-ETS function is available between vehicle speeds of 0 mph (km/h) and 37 mph (60 km/h).

The ESP warning lamp  in the instrument cluster (> page 24) comes on when you switch on ignition (> page 35). It goes out when the engine is running.

The ESP warning lamp  starts to flash at any vehicle speed, as soon as the tires lose traction and the wheels begin to spin.

### Warning!



When you see the ESP warning lamp  flashing in the instrument cluster, then proceed as follows:

- While driving off, apply as little throttle as possible.
- While driving ease up on the accelerator.
- Adapt your speed and driving style to the prevailing road conditions.

Failure to observe these guidelines could cause the vehicle to skid.

The 4-ETS cannot prevent accidents resulting from excessive speed.



The engine must be shut off when

- the parking brake is being tested on a brake test dynamometer.
- the vehicle is being towed with one axle raised.

Otherwise, the 4-ETS will engage the brakes and seriously damage the brake system.

For more information, see “Practical hints” (> page 295).

#### EBB

The EBB enhances braking effectiveness by allowing the rear brakes to supply a greater proportion of the braking effort in straight line braking circumstances without a loss of vehicle stability.

#### ESP

The Electronic Stability Program (ESP) monitors the vehicle's traction (force of adhesive friction between the tires and the road surface) and handling.

The ESP recognizes when a wheel is spinning or if the vehicle starts to skid. By applying brakes to the appropriate wheel and by limiting engine output, the ESP works to stabilize the vehicle.

The ESP warning lamp  in the instrument cluster (▷ page 24) flashes when the ESP is engaged.

The ESP warning lamp  comes on when you switch on ignition (▷ page 35). It goes out when the engine is running.

#### Warning!



Never switch off the ESP when you see the ESP warning lamp  flashing in the instrument cluster. In this case proceed as follows:

- While driving off, apply as little throttle as possible.
- While driving ease up on the accelerator.
- Adapt your speed and driving style to the prevailing road conditions.

Failure to observe these guidelines could cause the vehicle to skid.

The ESP cannot prevent accidents resulting from excessive speed.

**Warning!**

The ESP cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase the traction afforded. The ESP cannot prevent accidents, including those resulting from excessive speed in turns, following another vehicle too closely, or aquaplaning. Only a safe, attentive, and skillful driver can prevent accidents. The capabilities of a ESP equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.



Driving the vehicle with varied size tires will cause the wheels to rotate at different speeds, possibly causing the ESP to activate. For this reason, all wheels, including the spare wheel, must have the same tire outside diameter.



The engine must be shut off when

- the parking brake is being tested on a brake test dynamometer.
- the vehicle is being towed with one axle raised.

Otherwise, the ESP will engage the brakes and seriously damage the brake system.



The ABS, BAS, and ESP are automatically switched off when the differential locks are switched on (▷ page 161).

### Switching off the ESP

#### Warning!



The ESP should not be switched off during normal driving other than in the circumstances described below. Disabling of the system will reduce vehicle stability in standard driving maneuvers.

To improve the vehicle's traction, turn off the ESP in driving situations where it would be advantageous to have the drive wheels spin and thus cut into surfaces for better grip such as:

- starting out on slippery surfaces and in deep snow in conjunction with snow chains
- sand or gravel
- when driving off-road

When the ESP is turned off,

- engine torque is not limited.
- the drive wheels can spin.




Avoid spinning of a drive wheel for an extended period of time with the ESP switched off. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.



Turn ESP on immediately if the aforementioned circumstances do not apply anymore.

The ESP control switch is located in the upper center console.

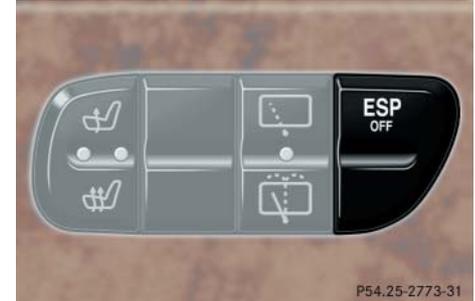

#### ESP on/off

- ▶ Press upper half of switch.

ESP is deactivated and the ESP warning lamp  in the instrument cluster comes on.

Even if the ESP has been turned off, it is still active in the following situations:

- when braking
- at vehicle speeds up to approximately 37 mph (60 km/h), if one wheel reaches the grip limit, e.g. when the street is icy on one side

The brake is applied until the wheel regains sufficient traction.

If one or more drive wheels are spinning, the ESP warning lamp  in the instrument cluster flashes, regardless of the speed.



If the ESP is switched off, it will be automatically activated when exceeding a vehicle speed of 37 mph (60 km/h) or exceeding a severity threshold of side acceleration.

### Warning!



When the ESP warning lamp  is illuminated continuously, the ESP is switched off.

Adapt your speed and driving to the prevailing road conditions and to the non-operating status of the ESP.

### Switching on the ESP

- ▶ Press lower half of switch.

The ESP warning lamp  in the instrument cluster goes out. You are now again in normal driving mode.

For more information, see “Practical hints” (▷ page 295).

### Anti-theft systems

#### Immobilizer

The immobilizer prevents unauthorized persons from starting your vehicle.

#### Activating

Removing the SmartKey from the starter switch activates the immobilizer.

#### Deactivating

Inserting the SmartKey in the starter switch deactivates the immobilizer.



In case the engine cannot be started (yet the vehicle's battery is charged), the system is not operational. Contact an authorized Mercedes-Benz Light Truck Center or call 1-800-FOR-MERCEdes (in the USA), or 1-800-387-0100 (in Canada).

#### Anti-theft alarm

Once the alarm system has been armed, a visual and audible alarm is triggered when someone opens

- a door
- the tailgate
- the hood

The alarm will stay on even if the activating element (a door, for example) is immediately closed.

The alarm system will also be triggered when

- someone attempts to raise the vehicle
- the vehicle is opened with the mechanical key
- someone opens a door from the inside
- someone opens the tailgate from the inside



If the alarm stays on for more than 20 seconds, an emergency call is initiated automatically by the Tele Aid system (▷ page 202) provided Tele Aid service was subscribed to and properly activated, and that necessary cellular service and GPS coverage are available.

#### Arming the alarm system

The alarm system is armed after locking the vehicle with the SmartKey. The turn signal lamps blink three times to indicate that the alarm system is being armed. A red lamp in the tow-away alarm switch begins to blink after arming the alarm system (▷ page 28).



If the turn signal lamps do not blink three times, one of the following elements may not be properly closed:

- a door
- the tailgate
- the hood

Close the respective element and lock the vehicle again.

### Disarming the alarm system

The alarm system is disarmed when you unlock your vehicle with the SmartKey. The turn signal lamps blink once to indicate that the alarm system is disarmed.



The alarm system will rearm automatically after approximately 40 seconds if neither a door nor the tailgate was opened.

### Canceling the alarm

To cancel the alarm:

- ▶ Press the  or  button on the SmartKey.

or

- ▶ Insert the SmartKey in the starter switch.

### Tow-away alarm

Once the tow-away alarm is armed, a visual and audible alarm will be triggered when someone attempts to raise the vehicle.



The tow-away protection alarm is triggered, for example, if the vehicle is lifted on one side.

If the alarm stays on for more than 20 seconds, an emergency call is initiated automatically by the Tele Aid system provided Tele Aid service was subscribed to and properly activated, and that necessary cellular service and GPS coverage are available.

### Anti-theft systems

#### Arming tow-away alarm


When you lock your vehicle, the tow-away alarm is automatically armed.

When you unlock your vehicle, the tow-away protection disarms automatically.

#### Disarming tow-away alarm

To prevent triggering the tow-away alarm feature, switch off the tow-away alarm before towing the vehicle, or when parking on a surface subject to movement, such as a ferry or auto train.

The switch is located on the center console.

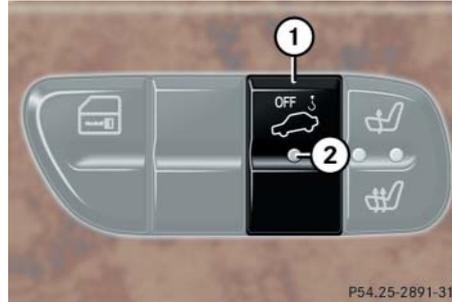

- ① Tow-away alarm off switch
- ② Indicator lamp

- ▶ Switch off the ignition and remove the SmartKey from the starter switch.



You cannot disarm the tow-away alarm when the ignition is switched on.

- ▶ Press upper half ① of the switch. Indicator lamp ② in the switch comes on briefly.

- ▶ Lock your vehicle with the SmartKey. The tow-away alarm remains disarmed until you lock your vehicle again.

#### Canceling the tow-away alarm

To cancel the alarm:

- ▶ Press the  or  button on the SmartKey.
- or
- ▶ Insert the SmartKey in the starter switch.

## Controls in detail

Locking and unlocking

Seats

Memory function

Lighting

Instrument cluster

Control system

Automatic transmission

Transfer case

Differential locks

Good visibility

Climate control

Power windows

Power tilt/sliding sunroof

Driving systems

Loading

Useful features



### Locking and unlocking

In the “Controls in detail” section you will find detailed information on how to operate the equipment installed in your vehicle. If you are already familiar with the basic functions of your vehicle, this section will be of particular interest to you.

To quickly familiarize yourself with the basic functions of the vehicle, refer to the “Getting started” section of this manual. The corresponding page numbers are given at the beginning of each segment.


### SmartKey

Your vehicle comes supplied with two SmartKeys, each with remote control and a removable mechanical key. The locking tabs for the mechanical key portion of the two SmartKeys are a different color to help distinguish each SmartKey unit.

The SmartKey provides an extended operating range. To prevent theft, however, it is advisable to only unlock the vehicle when you are in close proximity to it.

The SmartKey centrally locks and unlocks:

- the doors
- the tailgate
- the fuel filler flap

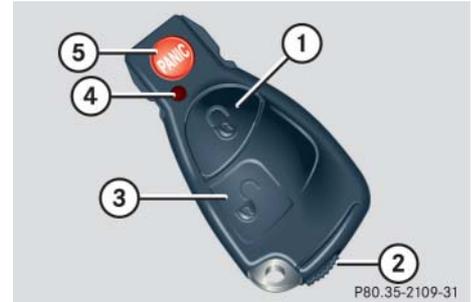

### SmartKey with remote control

- ① Lock button
- ② Locking tab for mechanical key
- ③ Unlock button
- ④ Battery check lamp
- ⑤ **PANIC** Panic button (▷ page 79)



You can also open and close the power windows (▷ page 176) and tilt/sliding sunroof (▷ page 179) using the SmartKey.



To prevent possible malfunction, avoid exposing the SmartKey to high levels of electromagnetic radiation.

#### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. It is possible for children to open a locked door from the inside, which could result in an accident and/or serious personal injury.



USA only:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any unauthorized modification to this device could void the user's authority to operate the equipment.



Canada only:

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

### Locking and unlocking

#### Factory setting

##### *Global unlocking*

- ▶ Press button .

All turn signal lamps flash once. The locking knobs on the doors move up.

The anti-theft alarm system is disarmed.

The vehicle will lock again automatically within approximately 40 seconds of unlocking if:

- neither door nor tailgate is opened
- the SmartKey is not inserted in the starter switch
- the central locking switch is not activated

##### *Global locking*

- ▶ Press button .

With the hood, tailgate and all doors closed, all turn signal lamps flash three times. The locking knobs on the doors move down.

The anti-theft alarm system is armed.

##### **Selective setting**

If you frequently travel alone, you may wish to reprogram the SmartKey so that pressing  only unlocks the driver's door and the fuel filler flap.

- ▶ Press and hold buttons  and  simultaneously for about five seconds until battery check lamp (4) blinks twice.

The SmartKey will then function as follows:

##### *Unlocking the driver's door and fuel filler flap*

- ▶ Press button  once.

All turn signal lamps flash once. The locking knobs on the doors move up.

The anti-theft alarm system is disarmed.

##### *Global unlocking*

- ▶ Press button  twice.

All turn signal lamps flash once. The locking knobs on the doors move up.

The anti-theft alarm system is disarmed.

**Global locking**

- ▶ Press button .

With the hood, tailgate and all doors closed, all turn signal lamps flash three times. The locking knobs on the doors move down.

The anti-theft alarm system is armed.

**Restoring to factory setting**

- ▶ Press and hold buttons  and  simultaneously for about six seconds until battery check lamp ④ blinks twice.



If you can no longer lock or unlock the vehicle with the SmartKey, then the batteries in the SmartKey are discharged, the SmartKey is malfunctioning or the vehicle battery is drained.

- Check the batteries in the SmartKey (▷ page 95) and replace them if necessary (▷ page 333).
- Use the mechanical key to unlock the driver's door (▷ page 327).
- Have the vehicle battery and the battery connections checked by an authorized Mercedes-Benz Light Truck Center (▷ page 353).
- Use the mechanical key to lock the driver's door and the tailgate (▷ page 328).

If the SmartKey is malfunctioning, contact an authorized Mercedes-Benz Light Truck Center.

**Checking the batteries**

- ▶ Press button  or .

Battery check lamp ④ comes on briefly to indicate that the SmartKey batteries are in order.



If battery check lamp ④ does not come on briefly during check, then the SmartKey batteries are discharged.

Replace the batteries (▷ page 333).

You can obtain the required batteries at any authorized Mercedes-Benz Light Truck Center.



If the batteries are checked within signal range of the vehicle, pressing the button  or  will lock or unlock the vehicle accordingly.

### Locking and unlocking

#### Loss of SmartKey or mechanical key


If you lose a SmartKey or mechanical key, you should do the following:

- ▶ Have the SmartKey deactivated by an authorized Mercedes-Benz Light Truck Center.
- ▶ Report the loss of the SmartKey or the mechanical key immediately to your car insurance company.
- ▶ If necessary have the mechanical lock replaced.

Your authorized Mercedes-Benz Light Truck Center will be glad to supply you with a replacement.

#### Opening the doors from the inside

You can open a locked door from the inside. Open door only when conditions are safe to do so.

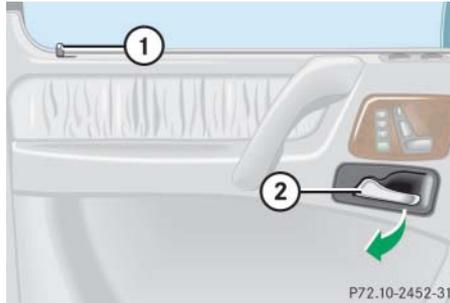

- ① Locking knob
- ② Inside door handle



If the vehicle has previously been locked with the SmartKey, opening a door or the tailgate from the inside will trigger the alarm.

To cancel the alarm do one the following:

- Press the  or  button on the SmartKey.
- Insert the SmartKey in the starter switch.

### Front doors

- ▶ Pull on door handle ② on the respective front door to open it.

If the door was locked, locking knob ① moves up.

### Rear doors

- ▶ Pull up locking knob ① on the respective rear door to unlock door.
- ▶ Pull on door handle ② on the unlocked door to open it.

### Opening the tailgate


#### Warning!



The tailgate swings open to one side. Always make sure there is sufficient clearance for the tailgate.

Only drive with the tailgate closed as otherwise exhaust fumes may enter the vehicle interior.

### Opening the tailgate from the outside

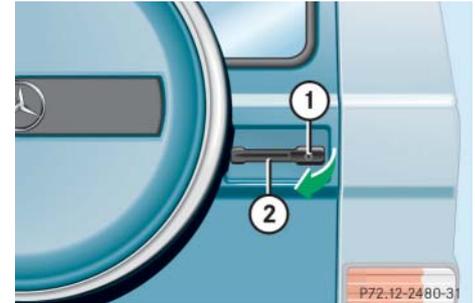

- ① Lock cylinder
- ② Handle


- ▶ Press lock cylinder ① and pull on tailgate handle ②.
- ▶ Open the tailgate to the side.



The vehicle must be unlocked.

### Locking and unlocking

#### Opening the tailgate from inside

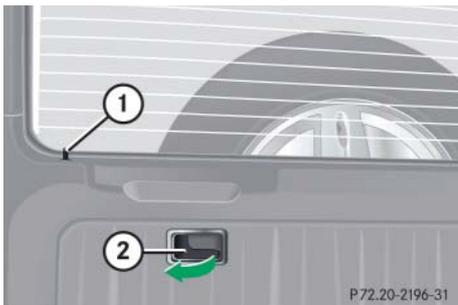

① Locking knob

② Inside door handle

- Pull on door handle ②.

If door was locked, pull up locking knob ① to unlock the tailgate. Then pull on door handle ② to open the tailgate.

#### Warning!



Do not leave children unattended in the vehicle. Unsupervised use of vehicle equipment may cause an accident and/or serious personal injury.

#### Closing the tailgate

#### Warning!



To prevent possible personal injury, always keep hands and fingers away from the tailgate opening when closing the tailgate. Be especially careful when small children are around.

#### Warning!



Only drive with the tailgate closed as otherwise exhaust fumes may enter the vehicle interior.



To prevent an inadvertent lockout, do not place the SmartKey in the cargo compartment.

#### Automatic central locking

The doors and the tailgate automatically lock when ignition is switched on and the wheels are turning at vehicle speeds of approximately 9 mph (15 km/h) or more.

You can open a locked door from the inside. Open door only when conditions are safe to do so.



The doors and the tailgate unlock automatically after an accident if the force of the impact exceeds a preset threshold.

To prevent the vehicle door locks from locking, deactivate the automatic central locking when the vehicle

- is pushed
- is on a test stand

You can deactivate the automatic locking mode using the control system (▷ page 142).

### Locking and unlocking from the inside

You can lock or unlock the vehicle from inside using the central locking switches. This can be useful, for example, if you want to unlock the passenger door from the inside or want to lock the vehicle before starting to drive.


The fuel filler flap cannot be locked or unlocked with the central locking switch.

#### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment may cause an accident and/or serious personal injury.

The central locking switch is located in the center console.

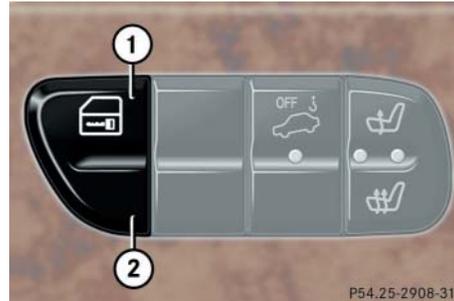

#### Central locking switch

- ① Locking
- ② Unlocking

#### Locking

- ▶ Press central locking switch ①.

If all the doors and the tailgate are closed, the vehicle locks.

#### Unlocking

- ▶ Press central locking switch ②.

The vehicle unlocks.



You can open a locked door from the inside. Open door only when conditions are safe to do so.

If the vehicle was previously centrally locked using the SmartKey, it will not unlock using the central locking switch.

If the vehicle was previously locked with the central locking switch

- while in the selective remote control mode, only the door opened from the inside is unlocked.
- while in the global remote control mode, the complete vehicle is unlocked when a door is opened from the inside.

### Seats

For more information on seat adjustment, see the “Getting started” section (▷ page 37).

#### Easy-entry/exit feature

This feature allows for easier entry into and exit from the vehicle.

The easy-entry/exit feature can be switched on or off, see “Activating easy-entry/exit feature” (▷ page 143).

When the SmartKey is inserted in the starter switch and the driver’s door is closed, the steering wheel returns to the last set position.

#### Warning!



You must make sure no one can become trapped or injured by the moving steering wheel when the easy-entry/exit feature is activated.

To stop steering wheel movement, do one of the following

- Move steering column lever (▷ page 40).
- Press memory position switch (▷ page 108).

Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could open the driver’s door and unintentionally activate the easy-entry/exit feature, which could result in an accident and/or serious personal injury.

When exiting the vehicle with the easy-entry/exit feature activated, the steering wheel tilts upwards when you

- remove the SmartKey from the starter switch,  
or
- open the driver’s door with the SmartKey in starter switch position **0** or **1**.



If the current position for the steering wheel is in the uppermost tilt position, the steering wheel will no longer be able to move upward when the easy-entry/exit feature is activated.

When entering the vehicle, with the easy-entry/exit feature activated, the steering wheel will return to its last set position when you

- close the driver's door with the ignition switched on,  
or
- insert the SmartKey into the starter switch with the driver's door closed.

### Removing and installing front seat head restraints

For more information on head restraint adjustment, see the "Getting started" section (▷ page 39).

#### Warning!



For your protection, drive only with properly positioned head restraints.

Adjust head restraint so that the head restraint supports the back of the head at eye level. This will reduce the potential for injury to the head and neck in the event of an accident or similar situation.

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

Do not interchange head restraints from front and rear seat.



Tilt the seat backrest rearward for easier removal and installation of the head restraints.

### Front seat head restraints



P54.25-2779-31

① Switch

#### Removing front seat head restraint

- ▶ Press switch ① upwards and hold until the head restraint is fully extended.
- ▶ Pull head restraint out.

#### *Installing front seat head restraint*

- ▶ Press switch ① upwards and hold for about five seconds.
- ▶ Press the head restraint down until it engages.
- ▶ Adjust head restraint to the desired position.

#### **Synchronizing head restraints and seat adjustment fore and aft for front seats**

If the power supply was interrupted (battery disconnected or discharged), the head restraints and the seat adjustment fore and aft are no longer adjusted automatically.

The head restraints and the seat adjustment fore and aft must be resynchronized:

- ▶ Switch on the ignition (▷ page 35).
- ▶ Move the seat completely forward (▷ page 38) and the head restraint fully down (▷ page 39) and hold the switches for approximately one second.

#### **Rear seat head restraints**


##### **Warning!**



For your protection, drive only with properly positioned head restraints.

Adjust head restraint so that the center of the head restraint supports the back of the head at eye level. This will reduce the potential for injury to the head and neck in the event of an accident or similar situation.

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

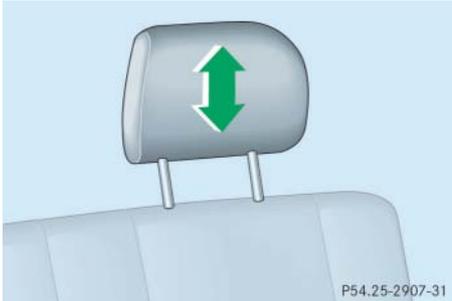**Head restraint height**

Manually adjust the height of the head restraint.

- ▶ Push or pull on the head restraint.


**Removing and installing rear seat head restraints****Warning!**

For your protection, drive only with properly positioned head restraints.

Adjust head restraint so that the center of the head restraint supports the back of the head at eye level. This will reduce the potential for injury to the head and neck in the event of an accident or similar situation.

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

Do not interchange head restraints from front and rear seat.

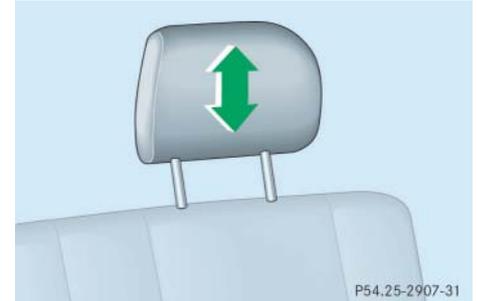**Removing rear seat head restraints**

- ▶ Pull out head restraint with both hands.



The head restraint(s) should be stored in a secure place.

**Installing rear seat head restraints**

- ▶ Insert the head restraint and push it down to the stop.


Ensure proper head restraint positioning (▷ page 39).

## Seats

### Multicontour seat\*

The multicontour seat has a movable seat cushion and inflatable air cushions built into the seat backrest to provide additional lumbar and side support.

The seat cushion movement and amount of seat backrest cushion height and curvature can be continuously varied with regulators on the right side of the seat after switching on ignition (▷ page 35).

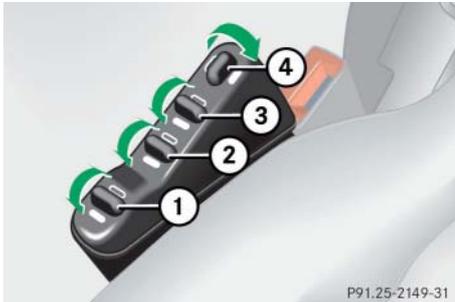

- ① Seat cushion length
- ② Backrest bottom
- ③ Backrest center
- ④ Backrest side bolsters

- ▶ Switch on the ignition (▷ page 35).

### Seat cushion length

- ▶ Adjust the seat cushion to the length of your upper leg using switch ①.

### Backrest contour

- ▶ Adjust the contour of the backrest to the desired position using switches ② and ③.


### Backrest side bolsters

- ▶ Adjust the backrest side bolsters so that they provide good lateral support using switch ④.

## Heated seats

### Driver's and front passenger seats

The switch is located in the center console.

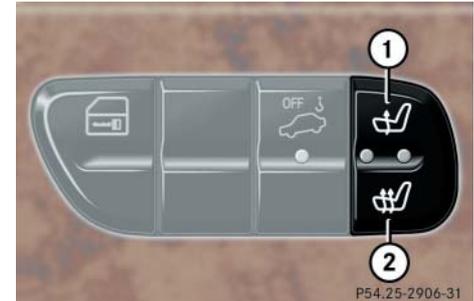

- ① Normal heating
- ② Rapid heating

- ▶ Switch on the ignition (▷ page 35).

**Switching on seat heating**

- ▶ Press upper switch position ①.

A red indicator lamp on the switch comes on.

**Switching off seat heating**

- ▶ Press upper switch position ① again.



The seat heater will automatically switch off after approximately 30 minutes.

**Switching on rapid seat heating**

- ▶ Press lower switch position ②.

Both red indicator lamps on the switch come on.



The system switches over to normal heating mode after approximately five minutes. Only one indicator lamp remains lit.

**Switching off rapid seat heating**

- ▶ Press lower switch position ② again.



If one or both of the lamps on the seat heater switch are flashing, there is insufficient voltage available since too many electrical consumers are turned on. The seat heater switches off automatically.

The seat heater will switch back on again automatically as soon as sufficient voltage is available.

## Seats

### Rear seats

The switch is located on the B (center) pillar.



① Normal heating

② Rapid heating

- ▶ Switch on the ignition (▷ page 35).

### Switching on seat heating

- ▶ Press upper switch position ①.

A red indicator lamp on the switch comes on.

### Switching off seat heating

- ▶ Press upper switch position ① again.



The seat heater will automatically switch off after approximately 30 minutes.

### Switching on rapid seat heating

- ▶ Press lower switch position ②.

Both red indicator lamps on the switch come on.



The system switches over to normal heating mode after approximately 5 minutes. Only one indicator lamp remains lit.

### Switching off rapid seat heating

- ▶ Press lower switch position ② again.



If one or both of the lamps on the seat heater switch are flashing, there is insufficient voltage available since too many electrical consumers are turned on. The seat heater switches off automatically.

The seat heater will switch back on again automatically as soon as sufficient voltage is available.

## ▼ Memory function



Prior to operating the vehicle, the driver should check and adjust the seat height, seat position fore and aft, and seat backrest angle if necessary, to ensure adequate control, reach and comfort. The head restraint should also be adjusted for proper height. See also the section on airbags (▷ page 63) for proper seat positioning.

In addition, adjust the steering wheel to ensure adequate control, reach, operation and comfort. Both the interior and exterior rear view mirrors should be adjusted for adequate rear vision.

Fasten seat belts. Infants and small children should be seated in a properly secured restraint system that complies with U.S. Federal Motor Vehicle Safety Standards 213 and 225 and Canadian Motor Vehicle Safety Standards 213 and 210.2.

The memory button and stored position switch are located on the door.

You can store up to three different settings per SmartKey.

The following settings are saved for each stored position:

- Driver's seat and seat backrest position, head restraint position
- Steering wheel position
- Driver's side exterior rear view mirror position
- Passenger-side exterior rear view mirror position

The following settings are not key-dependent. They are stored when using the buttons on the front passenger door:

- Front passenger seat and backrest position, head restraint position.


These key-dependent memory settings can be deactivated if desired (▷ page 144).

### Warning!



Do not activate the memory function while driving. Activating the memory function while driving could cause the driver to lose control of the vehicle.

### Memory function

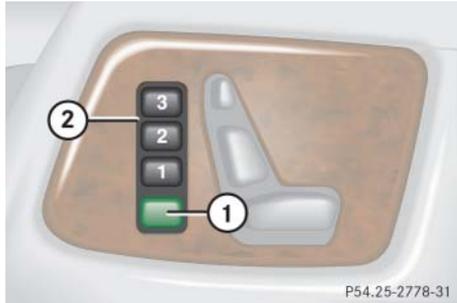

- ① Memory button
- ② Stored position buttons

▶ Switch on the ignition (▷ page 35).

or

▶ Open the respective door and insert the SmartKey in the starter switch.

#### Storing positions into memory

- ▶ Adjust the seats, steering wheel and exterior rear view mirrors to the desired position (▷ page 37).
- ▶ Press memory button ①.
- ▶ Release memory button and push position button ② within three seconds.

All the settings are stored at the selected position.

#### Recalling positions from memory

- ▶ Press and hold position button ② until the seat, steering wheel and rear view mirrors have fully moved to the stored positions.



Releasing the button immediately stops movement to the stored positions.

#### Warning!



Do not operate the power seats using the memory button if the seat backrest is in an excessively reclined position. Doing so could cause damage to front or rear seats.

First move seat backrest to an upright position.


### Storing exterior rear view mirror parking position

For easier parking, you can adjust the passenger-side exterior rear view mirror so that you can see the right rear wheel as soon as you engage reverse gear **R**.

For information on activating the parking position, see “Activating exterior rear view mirror parking position” (▷ page 164).



You can store a parking position for the passenger-side exterior rear view mirror for each SmartKey using the memory switch.

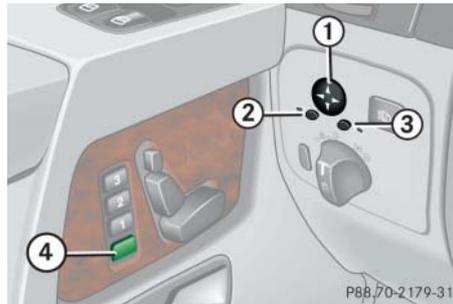

- ① Adjustment button
- ② Driver's side mirror
- ③ Passenger-side mirror
- ④ Memory button

- ▶ Switch on the ignition (▷ page 35).
- ▶ Press button ③.

The passenger-side exterior rear view mirror is selected.

- ▶ Adjust the exterior rear view mirror with button ① so that you see the rear wheel and the curb.
- ▶ Press memory button ④ on the door.
- ▶ Within three seconds, press bottom of adjustment button ① above the exterior lamp switch.

The parking position is stored if the mirror does not move.



If the mirror does move, repeat the above steps. After the setting is stored you can move the mirror again.

### Lighting

For information on how to switch on the headlamps and use the turn signals, see “Switching on headlamps” (▷ page 51) and “Turn signals” (▷ page 52).



If you drive in countries where vehicles drive on the other side of the road than the country in which the vehicle is registered, you must have the headlamps modified for symmetrical low beams. Relevant information can be obtained at your authorized Mercedes-Benz Light Truck Center.

### Exterior lamp switch

The exterior lamp switch is located on the dashboard to the left of the steering wheel.



- 0** Off  
Daytime running lamp mode (▷ page 112)
- AUTO** Automatic headlamp mode  
Daytime running lamp mode (▷ page 112)
-  Parking lamps (also tail lamps, license plate lamps, side marker lamps, instrument panel lamps)
-  Low beam headlamps (or high beam headlamps when the combination switch is pushed forward) and parking lamps
- P<=>** Standing lamps, right (turn left one stop)
- <-P<=** Standing lamps, left (turn left two stops)
- ** Indicator lamp for front fog lamps
- ** Indicator lamp for rear fog lamp



With the SmartKey removed from the starter switch and the driver's door open, a warning sounds if the parking lamps or low beam headlamps are switched on.

The message **TURN OFF LIGHTS!** appears in the multifunction display.

### Manual headlamp mode

The low beam headlamps and the parking lamps can be switched on and off with the exterior lamp switch.

### Automatic headlamp mode

The following lamps switch on and off automatically depending on the brightness of the ambient light:

- Low beam headlamps
- Tail and parking lamps
- License plate lamps
- Side marker lamps

### Warning!



If the exterior lamp switch is set to **AUTO**,

- the headlamps may switch off unexpectedly when the system senses bright ambient light, for example light from oncoming traffic.
- the headlamps will not be automatically switched on under foggy conditions.

To minimize risk to you and to others, activate headlamps by turning exterior lamp switch to  when driving or when traffic and /or ambient lighting conditions require you to do so.

In low ambient lighting conditions, only switch from position **AUTO** to  with the vehicle at a standstill in a safe location. Switching from **AUTO** to  will briefly switch off the headlamps. Doing so while driving in low ambient lighting conditions may result in an accident.

The automatic headlamp feature is only an aid to the driver. The driver is responsible for the operation of the vehicle's lights at all times.

- ▶ Turn the exterior lamp switch to position **AUTO**.

With the SmartKey in starter switch position **1** only the parking lamps will switch on and off automatically.

When the engine is running, the low beam headlamps, the tail and parking lamps, the license plate lamps, and the side marker lamps will switch on and off automatically.

### Lighting

#### Daytime running lamp mode

- ▶ Turn exterior lamp switch to position  or **AUTO**.

When the engine is running, the low beam headlamps are switched on.

In low ambient light conditions, the following lamps will switch on additionally:

- Tail and parking lamps
- License plate lamps
- Side marker lamps

For nighttime driving, you should turn the exterior lamp switch to position  to permit activation of the high beam headlamps.



With the daytime running lamp mode and the exterior lamp switch in position  you cannot switch on the high beam headlamps.

The high beam flasher is available at all times.

#### Canada only:

The daytime running lamp mode is mandatory and therefore in a constant mode.

Vehicles with automatic transmission\*: When the engine is running, and you shift from a driving position to position **N** or **P**, the low beam headlamps will switch off with a three-minute delay.

When the engine is running, and you

- turn the exterior lamp switch to position , the parking lamps switch on additionally.
- turn the exterior lamp switch to position , the manual headlamp mode has priority over the daytime running lamp mode.

The corresponding exterior lamps switch on (▷ page 110).

#### USA only:

By default, the daytime running lamp mode is deactivated. Activate the daytime running lamp mode using the control system, see “Setting daytime running lamp mode” (▷ page 138).

When the engine is running, and you turn the exterior lamp switch to position  or , the manual headlamp mode has priority over the daytime running lamp mode.

The corresponding exterior lamps switch on (▷ page 110).

### Locator lighting and night security illumination

The locator lighting and the night security illumination are described in the “Control system section”, see (▷ page 139) and (▷ page 140).

### Exterior rear view mirror lamps

If the vehicle is centrally unlocked in the darkness, the lamps in the exterior rear view mirrors come on.

If a door is opened, the lamp on this side goes out. If no doors are opened, the lamps will switch off:

- after a maximum of 40 seconds
- immediately, when you switch on the ignition (▷ page 35)

### Fog lamps

#### Warning!



In low ambient lighting or foggy conditions, only switch from position **AUTO** to  with the vehicle at a standstill in a safe location. Switching from **AUTO** to  will briefly switch off the headlamps. Doing so while driving in low ambient lighting conditions may result in an accident.



Fog lamps will operate with the parking lamps and/or low beam headlamps on. Fog lamps should only be used in conjunction with low beam headlamps. Consult your State or Province Motor Vehicle Regulations regarding allowable lamp operation.



Fog lamps cannot be switched on with the exterior lamp switch in position **AUTO**. For switching on the fog lamps, turn the exterior lamp switch to position  first.

### Front fog lamps

- ▶ Switch on the low beam headlamps (▷ page 110).
- ▶ Pull out the exterior lamp switch to first stop.

The front fog lamps switch on.

The green indicator lamp  in the exterior lamp switch comes on (▷ page 110).

- ▶ Push in the exterior lamp switch.

The front fog lamps switch off.

The green indicator lamp  in the exterior lamp switch goes out.

### Lighting

#### Rear fog lamp (driver's side only)

- ▶ Switch on the front fog lamps (▷ page 113).
- ▶ Pull out the exterior lamp switch to second stop.

The rear fog lamp switches on.

The yellow indicator lamp  in the exterior lamp switch comes on (▷ page 110).

- ▶ Push in the exterior lamp switch to first stop.

The rear fog lamp switches off.

The yellow indicator lamp  in the exterior lamp switch goes out.

The front fog lamps remain lit.

#### Combination switch

The combination switch is located on the left side of the steering column.



- ① High beam
- ② High beam flasher

#### High beam

- ▶ Turn the exterior lamp switch to position  or **AUTO** (▷ page 110).
- ▶ Push the combination switch in direction of arrow ① to switch on the high beam.

The high beam headlamp indicator lamp  in the instrument cluster comes on (▷ page 24).

- ▶ Pull the combination switch in direction of arrow ② to its original position to switch off the high beam.

The high beam headlamp indicator lamp  in the instrument cluster goes out.

#### High beam flasher

- ▶ Pull the combination switch briefly in direction of arrow ②.

## Hazard warning flasher

The hazard warning flasher can be switched on at all times, even with the SmartKey removed from the starter switch.

The hazard warning flasher switches on automatically when an airbag deploys.

The hazard warning flasher switch is located on the center console.



① Hazard warning flasher switch

## Switching on hazard warning flasher

- ▶ Press hazard warning flasher switch ①.

All the turn signal lamps are flashing.



With the hazard warning flasher activated and the combination switch set for either left or right turn, only the respective turn signals will operate when the SmartKey is in starter switch position **1** or **2**.

## Switching off hazard warning flasher

- ▶ Press hazard warning flasher switch ① again.



If the hazard warning flasher has been activated automatically, press hazard warning flasher switch ① once to switch it off.

## Lighting

### Interior lighting

The controls are located in the overhead control panel.



- ① Cargo compartment lamps
- ② Right reading lamp
- ③ Rocker switch for automatic control system
- ④ Left reading lamp



Leaving an interior light switch in the ON position for extended periods of time with the engine turned off could result in a discharged battery.

### Automatic control

#### Activating

- ▶ Move rocker switch ③ to center position.

The interior lighting switches on in darkness when you

- unlock the vehicle
- open a door
- remove the SmartKey from the starter switch

Additionally, entry lamps in the door trays will come on when you open a door.

The interior lighting switches off automatically following an adjustable time delay.

For more information, see “Setting interior lighting delayed shut-off” (▷ page 141).



If the door remains open, the interior lamps switch off automatically after approximately five minutes.

#### Deactivating

- ▶ Press the  symbol on rocker switch ③.

The interior lighting and the entry lamps remain switched off in darkness, even when you

- unlock the vehicle
- open a door
- remove the SmartKey from the starter switch

## Manual control

### Switching lamps on

- ▶ Press the  symbol on rocker switch ③.

The interior lighting remains on even when the doors are closed.

### Switching lamps off

- ▶ Move rocker switch ③ to center position to activate the automatic control.



To prevent the vehicle battery from being discharged, all interior lamps switch off automatically after approximately 30 minutes with the tailgate open.

If an interior lamp is switched on manually, it does not go out automatically. Before leaving the vehicle, make sure the interior lamps are switched off.

The rear interior lamps can be switched on with the SmartKey in starter switch position **0** or SmartKey removed from the starter switch for up to 30 minutes.

## Rear interior lamps

The rear interior lamps are located above the rear seat bench on the left and right side.



- ① The lamps are switched on continuously
- ② The lamps are switched off
- ③ Automatic function

## Lighting


### Cargo compartment lamps

#### Switching on and off



① Switch for cargo compartment lamps

- ▶ Press button  to switch cargo compartment lamps ② on/off.

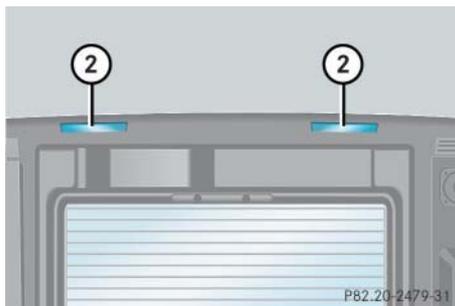

② Cargo compartment lamps

#### Switching on and off with the tailgate open

If the tailgate should remain open for a longer period of time, the cargo compartment lamps can be switched off separately.



- ① Door lock
- ② Lock cylinder

### Switching off

- ▶ Open the tailgate.
- ▶ Press door lock ① down until it engages (arrow).



Do not close the tailgate if the lock is engaged in down position. The lock could otherwise be damaged.

When locking the tailgate, it is important that the door lock be in the same original position as shown in the illustration.

To return the door lock ① to its original position, press lock cylinder ②.

### Switching on

- ▶ Press lock cylinder ② to activate the cargo compartment lamps again.

The cargo compartment lamps will switch on.

### Warning!



To prevent possible personal injury, always keep hands and fingers away from the tailgate opening when closing the tailgate. Be especially careful when small children are around.

Only drive with the tailgate closed as otherwise exhaust fumes may enter the vehicle interior.

### Instrument cluster

A full view illustration of the instrument cluster can be found in the “At a glance” section of this manual (▷ page 24).



#### ① Reset button

The instrument cluster is activated when you:

- Open a door.
- Switch on ignition.
- Press reset button ①.
- Switch on the exterior lamps.

You can change the instrument cluster settings in the Instrument cluster submenu of the control system (▷ page 136).

### Instrument cluster illumination

Use the reset button to adjust the illumination brightness for the instrument cluster.



The instrument cluster illumination is dimmed or brightened automatically to suit ambient light conditions.

The instrument cluster illumination will also be adjusted automatically when you switch on the vehicle's exterior lamps.

### To brighten illumination

- ▶ Turn reset button ① in the instrument cluster clockwise.

The instrument cluster illumination will brighten.

### To dim illumination

- ▶ Turn reset button ① in the instrument cluster counterclockwise.

The instrument cluster illumination will dim.


### Coolant temperature display

#### Warning!



- Driving when your engine is badly overheated can cause some fluids which may have leaked into the engine compartment to catch fire. You could be seriously burned.
- Steam from an overheated engine can cause serious burns and can occur just by opening the hood. Stay away from the engine if you see or hear steam coming from it.

Turn off the engine, get out of the vehicle and do not stand near the vehicle until the engine has cooled down.

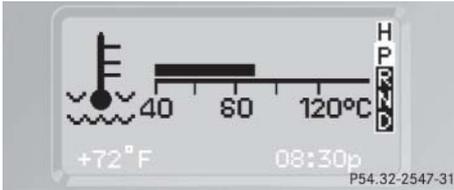

- ▶ Switch on the ignition (▷ page 35).
- ▶ Call up the trip odometer and main odometer (▷ page 123) by pressing button  or  on the multifunction steering wheel (▷ page 124).
- ▶ Press button  or  until the coolant temperature display appears.



Excessive coolant temperature triggers a warning in the multifunction display (▷ page 308).

During severe operating conditions, e.g. stop-and-go traffic, the coolant temperature may rise close to 248°F (120°C).

The engine should not be operated with the coolant temperature above 248°F (120°C). Doing so may cause serious engine damage which is not covered by the Mercedes-Benz Limited Warranty.

### Trip odometer

- ▶ Make sure you are viewing the trip odometer display (▷ page 123).
- ▶ If it is not displayed, press button  or  on the multifunction steering wheel (▷ page 124) until the trip odometer appears.
- ▶ Press and hold the reset button on the instrument cluster (▷ page 120) until the trip odometer is reset.

### Tachometer

The red marking on the tachometer denotes excessive engine speed.



Avoid driving at excessive engine speeds, as it may result in serious engine damage that is not covered by the Mercedes-Benz Limited Warranty.

To help protect the engine, the fuel supply is interrupted if the engine is operated within the red marking.

#### Outside temperature indicator

##### Warning!



The outside temperature indicator is not designed to serve as an ice-warning device and is therefore unsuitable for that purpose.

Indicated temperatures just above the freezing point do not guarantee that the road surface is free of ice. The road may still be icy, especially in wooded areas or on bridges.

The outside temperature is displayed in the multifunction display (▷ page 123). For information on how to select the unit of the displayed temperature, i.e. degrees Celsius (°C) or degrees Fahrenheit (°F), see “Selecting temperature display mode” (▷ page 136).

The temperature sensor is located in the front bumper area. Due to its location, the sensor can be affected by road or engine heat during idling or slow driving. This means that the accuracy of the displayed temperature can only be verified by comparison to a thermometer placed next to the sensor, not by comparison to external displays (e.g. bank signs, etc.).

When moving the vehicle into colder ambient temperatures (e.g. when leaving your garage), you will notice a delay before the lower temperature is displayed.

A delay also occurs when ambient temperatures rise. This prevents inaccurate temperature indications caused by heat radiated from the engine during idling or slow driving.

## ▼ Control system

The control system is activated as soon as the SmartKey in the starter switch is turned to position **1**. The control system enables you to

- call up information about your vehicle
- change vehicle settings

For example, you can use the control system to find out when your vehicle is next due for service, to set the language for messages in the instrument cluster display and much more.

### Warning!



A driver's attention to the road and traffic conditions must always be his/her primary focus when driving.

For your safety and the safety of others, selecting features through the multifunction steering wheel should only be done by the driver when traffic and road conditions permit it to be done safely.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

The control system relays information to the multifunction display.

## Multifunction display



- ① Trip odometer
- ② Main odometer
- ③ Outside temperature
- ④ Clock<sup>1</sup>
- ⑤ Current gear selector lever position
- ⑥ Transfer case program mode

<sup>1</sup> See separate operating instructions for the COMAND system for clock setting.

## Control system

### Multifunction steering wheel

The displays in the multifunction display and the settings in the control system are controlled by the buttons on the multifunction steering wheel.



- ① Multifunction display  
**Operating the control system:**
- ② Selecting a submenu or setting the volume:  
Press button  
 up / to increase  
 down / to decrease
- ③ Telephone\*:  
Press button  
 to take a call, or to dial a call  
 to end a call, or to reject an incoming call
- ④ Menu systems:  
Press button  
 for next menu  
 for previous menu
- ⑤ Moving within a menu:  
Press button  
 for next display  
 for previous display



G 55 AMG:

The steering wheel in this vehicle may vary from steering wheel shown. However, multifunction steering wheel symbols and feature description apply to AMG vehicles as well.

Pressing any of the buttons on the multifunction steering wheel will alter what is shown in the multifunction display.

The information available in the multifunction display is arranged in menus, each containing a number of functions or submenus.

The individual functions are then found within the relevant menu (radio or CD operations under AUDIO, for example). These functions serve to call up relevant information or to customize the settings for your vehicle.

It is helpful to think of the menus, and the functions within each menu, as being arranged in a circular pattern.

- If you press button  or  repeatedly, you will pass through each menu one after the other.
- If you press button  or  repeatedly, you will pass through each function display, one after the other, in the current menu.

In the SETTINGS... menu, instead of functions you will find a number of submenus for calling up and changing settings. For instructions on using these submenus, see the “Settings menu” section (▷ page 132).

The number of menus available in the system depends on which optional equipment is installed in your vehicle.




The headings used in the menus table are designed to facilitate navigation within the system and are not necessarily identical to those shown in the control system displays.

The first function displayed in each menu will automatically show you which part of the system you are in.

### Menus

This is what you will see when you scroll through the menus.

The table below provides an overview of the individual menus.

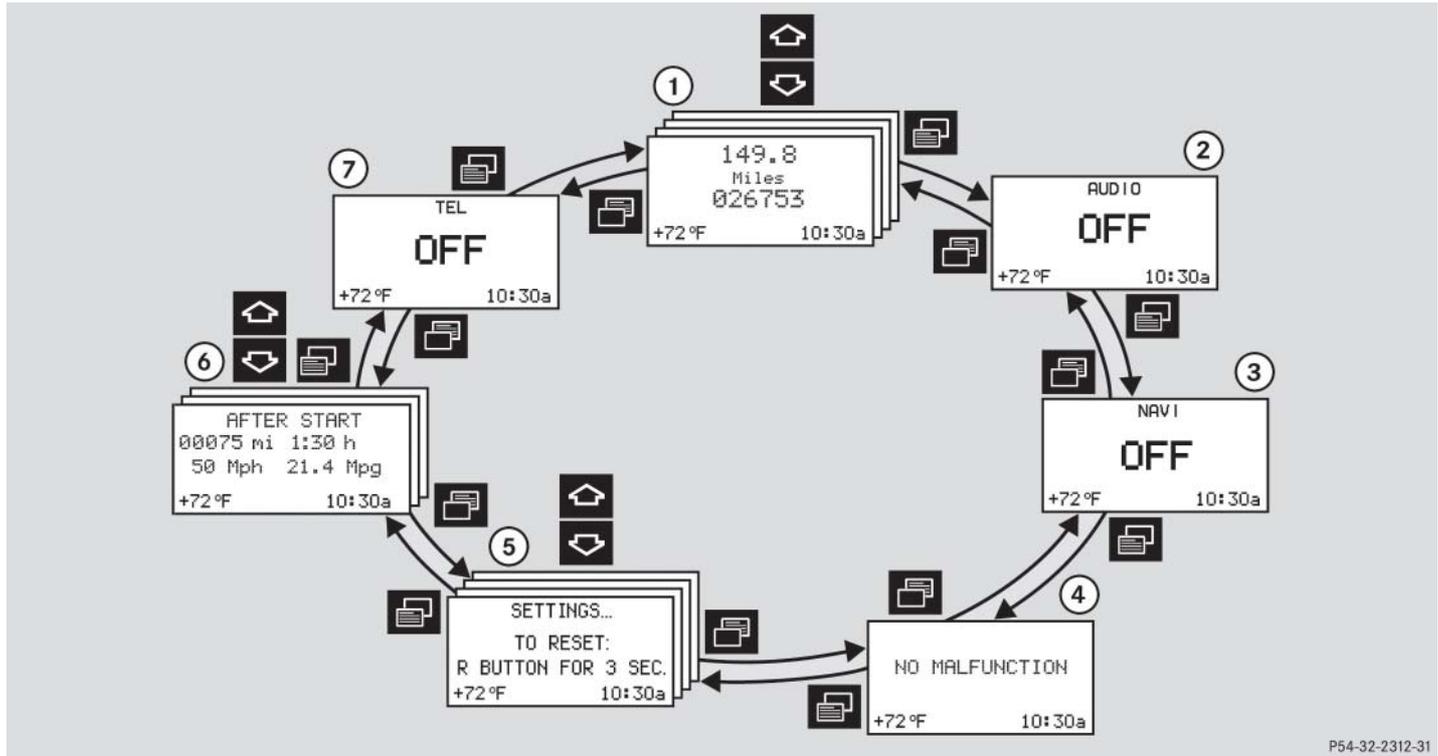

P54-32-2312-31

Menus, submenus and functions

	Menu ① Standard display	Menu ② AUDIO	Menu ③ NAVI	Menu ④ Vehicle status message memory	Menu ⑤ Settings	Menu ⑥ Trip computer	Menu ⑦ TEL
	(▷ page 128)	(▷ page 128)	(▷ page 130)	(▷ page 131)	(▷ page 132)	(▷ page 145)	(▷ page 146)
Commands/submenu	Coolant temperature display	Select radio station	Show route guidance instructions, current direction traveled	Call up vehicle malfunction, warning and system status messages stored in memory	Reset to factory settings	Fuel consumption statistics after start	Load phone book
	Digital speedometer	Select satellite radio station* (USA only)			Instrument cluster submenu	Fuel consumption statistics since the last reset	Search for name in phone book
	Call up maintenance service indicator	Operate CD player			Lighting submenu	Call up range	
	Check engine oil level				Vehicle submenu  Convenience submenu		

### Control system



The headings used in the menus table are designed to facilitate navigation within the system and are not necessarily identical to those shown in the control system displays.

The first function displayed in each menu will automatically show you which part of the system you are in.

#### Standard display menu

- ▶ Press button or to select the functions in the standard display menu.

The following functions are available:

Function	Page
Call up coolant temperature display	120
Call up digital speedometer	128
Call up maintenance service indicator	281
Check engine oil level	244

#### Display digital speedometer

- ▶ Press button twice.

The current vehicle speed is shown in the multifunction display.

#### AUDIO menu

The functions in the AUDIO menu operate the audio equipment which you currently have turned on.

If no audio equipment is currently turned on, the message AUDIO OFF is shown in the display.

The following functions are available:

Function	Page
Select radio station	129
Select satellite radio station* (USA only)	129
Operate CD player	130

### Select radio station

- ▶ Turn on COMAND and select radio. Refer to separate COMAND operating instructions.
- ▶ Press button  or  repeatedly until you see the currently tuned station in the display.



- ① Station
- ② Waveband setting
- ③ Setting for station selection using memory

- ▶ Press button  or  repeatedly until the desired station is found.

The type of search depends on the setting for the station tuning:

- The next stored station is selected (SP)
- Station search



You can only store new stations by using the corresponding feature on the radio. Refer to separate operating instructions.

You can also operate the radio in the usual manner.

### Select satellite radio station\* (USA only)

The satellite radio is treated as a radio application.

- ▶ Select satellite radio with the corresponding key on the COMAND control panel (SAT).
- ▶ Press button  or  repeatedly until you see the currently tuned station in the multifunction display.



- ① Channel name or number
  - ② SAT mode and preset number
  - ③ Setting for station selection using memory
- ▶ Press button  or  repeatedly until the desired channel is found.

### Control system



Additional optional satellite radio equipment and a subscription to satellite radio service provider are required for satellite radio operation. Contact an authorized Mercedes-Benz Light Truck Center for details and availability for your vehicle.

For more information, refer to separate COMAND operating instructions.



Satellite radio service may be unavailable or interrupted from time to time for a variety of reasons, such as environmental or topographic conditions and other things beyond the service provider's or our control. Service might also not be available in certain places (e.g. in tunnels, parking garages, or within or next to buildings) or near other technologies.

### Operate the CD player

- ▶ Turn on COMAND and select CD. Refer to separate COMAND operating instructions.
- ▶ Press button or repeatedly until the settings for the CD currently being played are shown in the display.



- ① Current track
- ② Current CD (for CD changer)

- ▶ Press button or repeatedly until the desired track is selected.



To select a CD from the magazine, press a number on the COMAND system key pad located in the center dashboard.

### NAVI menu

The NAVI menu contains the functions needed to operate your navigation system.

- ▶ Press button or repeatedly until you see the message NAVI in the display.
- If the navigation system is off, the message NAVI OFF is shown in the display.
- If the navigation system is on, the message NAVI READY is shown in the display.

Please refer to the COMAND manual for instructions on how to activate the route guidance system\*.

### Vehicle status message memory menu

Use the vehicle status message memory menu to scan malfunction and warning messages that may be stored in the system. Such messages appear in the multifunction display and are based on conditions or system status the vehicle's system has recorded.

#### Warning!



Malfunction and warning messages are only indicated for certain systems and are intentionally not very detailed. The malfunction and warning messages are simply a reminder with respect to the operation of certain systems and do not replace the owner's and/or driver's responsibility to maintain the vehicle's operating safety by having all required maintenance and safety checks performed on the vehicle and by bringing the vehicle to an authorized Mercedes-Benz Light Truck Center to address the malfunction and warning messages (▷ page 298).

- ▶ Press button  or  repeatedly until the vehicle status message memory appears in the multifunction display.

#### No vehicle status messages

If no conditions are recorded in memory, the message in the multifunction display is:

NO MALFUNCTION

#### Vehicle status messages have been recorded

If conditions have occurred causing status messages to be recorded, the number of messages appears in the multifunction display:



- ① Number of messages

- ▶ Press button  or .

The stored messages will now be displayed in order. See the “Practical hints” section for malfunction and warning messages (▷ page 298).

Should the vehicle's system record any conditions while driving, the number of messages will reappear in the multifunction display when the SmartKey in the starter switch is turned to position **0** or removed from the starter switch.



The vehicle status message memory will be cleared when you switch on ignition (▷ page 35). You will then only see high-priority messages in the multifunction display (▷ page 298).

### Control system

#### Settings menu

In the SETTINGS... menu there are two functions:

- The function TO RESET: R BUTTON FOR 3 SEC., with which you can reset all the settings to those set at the factory.
  - A collection of submenus with which you can make individual settings for your vehicle.
- ▶ Press button  or  repeatedly until the SETTINGS... menu is seen in the display.



#### Resetting all settings

You can reset all the functions of all submenus to the factory settings.

- ▶ Press the reset button in the instrument cluster (▷ page 120) for approximately three seconds.

In the display you will see the request to press the reset button again to confirm.

- ▶ Press the reset button again.

The functions of all the submenus will reset to factory settings.



The settings you have changed will not be reset unless you confirm the action by pressing the reset button a second time. Approximately five seconds after pressing the reset button for the second time, the SETTINGS... menu reappears in the display.

For safety reasons, the following functions are not reset while driving:

- the LIGHT CIRCUIT HEADLIGHT MODE function in the LIGHTING submenu
- the SETTINGS KEY-DEPENDENT function in the CONVENIENCE submenu

### Submenus in the Settings menu

- ▶ Press button .

In the display you see the collection of the submenus.



- ▶ Press button .

The selection marker moves to the next submenu.

The submenus are arranged by hierarchy. Scroll down with the  button, scroll up with the  button.

With the selection marker on the desired submenu, use the  button to access the individual functions within that submenu. Once within the submenu, you can use the  button to move to the next function or the  button to move to the previous function within that submenu.

The settings themselves are made with button  or .

### Resetting the functions of a submenu

For each submenu you can reset all the functions to the factory settings.

- ▶ Move to a function in the submenu.
- ▶ Press the reset button in the instrument cluster (▷ page 120) for approximately three seconds.

In the display you will see the request to press the reset button again to confirm.

- ▶ Press the reset button again.

All functions of the submenu will reset to factory settings ▷▷



The settings you have changed will not be reset unless you confirm the action by pressing the reset button a second time. Approximately five seconds after pressing the reset button for the second time, the `SETTINGS...` menu reappears in the display.

The table below shows what settings can be changed within the various menus. Detailed instructions on making individual settings can be found on the following pages.

<b>INSTRUMENT CLUSTER</b> (▷ page 136)	<b>LIGHTING</b> (▷ page 138)	<b>VEHICLE</b> (▷ page 142)	<b>CONVENIENCE</b> (▷ page 143)
Select time display mode	Set daytime running lamp mode (USA only)	Set station selection mode (radio)	Activate easy-entry/exit feature
Select temperature display mode	Set locator lighting	Set automatic locking	Set key-dependency
Select speedometer display mode	Set night security illumination		Set parking position for exterior rear view mirror
Select language	Set interior lighting delayed shut-off		
Select display (speed display or outside temperature)			

## Control system

### Instrument cluster submenu

Access the INSTRUMENT CLUSTER menu via the SETTINGS menu. Use the INSTRUMENT CLUSTER submenu to change the instrument cluster display settings. The following functions are available:

Function	Page
Select time display mode	136
Select temperature display mode	136
Select speedometer display mode	137
Select language	137
Select display (speed display or outside temperature)	138

### Selecting time display mode

- ▶ Move the selection marker with the **+** or **-** button to the INSTRUMENT CLUSTER submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: 12/24 HOUR.

The selection marker is on the current setting.




- ▶ Press **+** or **-** to set the 12h or 24h time display mode.

### Selecting temperature display mode

- ▶ Move the selection marker with the **+** or **-** button to the INSTRUMENT CLUSTER submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: TEMP. INDICATOR.

The selection marker is on the current setting.

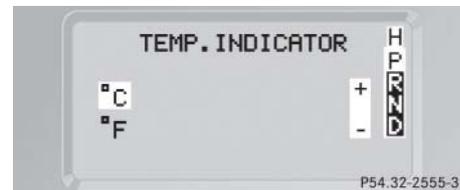

- ▶ Press **+** or **-** to set temperature unit to degrees Celsius (°C) or degrees Fahrenheit (°F).

### Selecting speedometer display mode

- ▶ Move the selection marker with the **+** or **-** button to the INSTRUMENT CLUSTER submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: DISPLAY VALUES IN.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to set speedometer unit to Km or Miles.

### Selecting language

- ▶ Move the selection marker with the **+** or **-** button to the INSTRUMENT CLUSTER submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: TEXT.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to select the language to be used for the multifunction display messages.

Available languages:


- German
- English
- French
- Italian
- Spanish

### Control system

#### Selecting display (speed display or outside temperature)

- ▶ Move the selection marker with the **+** or **-** button to the INSTRUMENT CLUSTER submenu.
- ▶ Press button **↶** or **↷** repeatedly until you see this message in the display: SELECT DISPLAY.

The selection marker is on the current setting.

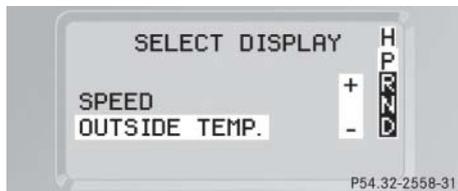

- ▶ Press **+** or **-** to select the display permanently shown in the multi-function display.

#### Lighting submenu

Access the LIGHTING submenu via the SETTINGS menu. Use the LIGHTING submenu to change the lamp and lighting settings on your vehicle. The following functions are available:

Function	Page
Setting daytime running lamp mode (USA only)	138
Setting locator lighting	139
Setting night security illumination	140
Setting interior lighting delayed shut-off	141

#### Setting daytime running lamp mode (USA only)



This function is not available in countries where the daytime running lamp mode is mandatory and therefore in a constant mode.

- ▶ Move the selection marker with the **+** or **-** button to the LIGHTING submenu.
- ▶ Press button **↶** or **↷** repeatedly until you see this message in the display: LIGHT CIRCUIT HEADLIGHT MODE.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to select manual operation or daytime running lamp mode (constant) activated.

With daytime running lamp mode activated and the exterior lamp switch in position **0** or **AUTO**, the low beam headlamps are switched on when the engine is running.

In low ambient light conditions the following lamps will switch on additionally:

- Parking lamps
- Tail lamps
- License plate lamps
- Side marker lamps

For more information on the daytime running lamp mode, see “Lighting” (▶ page 110).



For safety reasons, resetting the LIGHTING submenu to factory settings while driving (▶ page 132) will not deactivate the daytime running lamp mode.

The following message appears in the multifunction display:

LIGHTING - CANNOT BE TOTALLY RESET TO FACTORY SETTINGS WHILE DRIVING

### Setting locator lighting

With the locator lighting feature activated and the exterior lamp switch in position **AUTO**, the following lamps will switch on during darkness when the vehicle is unlocked with the SmartKey:

- Parking lamps
- Tail lamps
- License plate lamps
- Side marker lamps
- Front fog lamps


The locator lighting switches off when the driver's door is opened.

If you do not open a door after unlocking the vehicle with the SmartKey, the lamps will switch off automatically after approximately 40 seconds.

### Control system

- ▶ Move the selection marker with the **+** or **-** button to the LIGHTING submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: LOCATOR LIGHTING.

The selection marker is on the current setting.

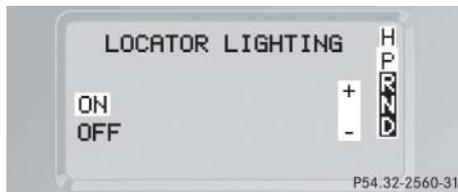

- ▶ Press **+** or **-** to switch the locator lighting function ON or OFF.
- ▶ Turn the exterior lamp switch to position **AUTO** when exiting the vehicle (▷ page 110).

The locator lighting feature is activated.

### Setting night security illumination (Headlamps delayed shut-off)

Use this function to set whether and how long you would like the exterior lamps to illuminate during darkness after exiting the vehicle and all doors closed.

With the delayed shut-off feature activated and the exterior lamp switch in position **AUTO** before the engine is turned off, the following lamps will switch on when the engine is turned off:

- Parking lamps
- Tail lamps
- License plate lamps
- Side marker lamps
- Front fog lamps

If after turning off the engine you do not open a door or do not close an opened door, the lamps will switch off automatically after approximately 60 seconds.



You can reactivate this function within ten minutes by opening a door.

- ▶ Move the selection marker with the **+** or **-** button to the LIGHTING submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: HEADLIGHTS DELAYED SHUT-OFF.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to select the desired lamp-on period.

You can select:

- 0 s, the delayed shut-off feature is deactivated.
- 15 s, 30 s, 45 s, or 60 s, select the desired lamp-on period.

- ▶ Turn the exterior lamp switch to position **AUTO** before turning off the engine.

The headlamps delayed shut-off feature is activated.

You can temporarily deactivate the delayed shut-off feature:

- ▶ Before exiting the vehicle, turn the SmartKey in the starter switch to position **0**.
- ▶ Then turn it to position **2** and back to position **0**.

The delayed shut-off feature is deactivated. It will reactivate as soon as you reinsert the SmartKey in the starter switch.

### Setting interior lighting delayed shut-off

Use this function to set whether and how long you would like the interior lighting to remain lit during darkness after you have removed the SmartKey from the starter switch.

- ▶ Move the selection marker with the **+** or **-** button to the LIGHTING submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: INT. LIGHTING DELAYED SHUT-OFF.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to select the desired lamp-on time period.

You can select:

- 0 s, the delayed shut-off feature is deactivated.
- 5 s, 10 s, 15 s, or 20 s, the interior lighting delayed shut-off feature is activated with the desired lamp-on period.

### Control system

#### Vehicle submenu

Access the VEHICLE submenu via the SETTINGS menu. Use the VEHICLE submenu to make general vehicle settings. The following functions are available:

Function	Page
Set station selection mode (radio)	142
Set automatic locking	142

#### Setting station selection mode

Use the PRESS BUTTON IN AUDIO MODE function to select the manual or memory station selection mode for the radio.

- ▶ Move the selection marker with the **+** or **-** button to the VEHICLE submenu.

- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: PRESS BUTTON IN AUDIO MODE.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to select the desired station selection mode. You can select:
  - STATION SEARCH
  - MEMORY selects next stored station

#### Setting automatic locking

Use this function to activate or deactivate the automatic central locking. With the automatic central locking system activated, the vehicle is centrally locked at vehicle speeds of approximately 9 mph (15 km/h).

- ▶ Move the selection marker with the **+** or **-** button to the VEHICLE submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: AUTOMATIC DOOR LOCK.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to switch function ON or OFF.

### Convenience submenu

Access the CONVENIENCE submenu via the SETTINGS menu. Use the CONVENIENCE submenu to change the settings for a number of convenience features. The following functions are available:

Function	Page
Activate easy-entry/exit feature	143
Set key-dependency	144
Set parking position for exterior rear view mirror	144

### Activating easy-entry/exit feature

Use this function to activate and deactivate the easy-entry/exit feature (▷ page 100).

#### Warning!



You must make sure no one can become trapped or injured by the moving steering wheel when the easy-entry/exit feature is activated.


To cancel steering wheel movement, do one of the following:

- Move steering column lever (▷ page 40).
- Press memory position switch (▷ page 108).

Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could open the driver's door and unintentionally activate the easy-entry/exit feature, which could result in an accident and/or serious personal injury.

- ▶ Move the selection marker with the **+** or **-** button to the CONVENIENCE submenu.
- ▶ Press button **↶** or **↷** repeatedly until you see this message in the display: EASY-ENTRY FEATURE ACTIVATE.

The selection marker is on the current setting.

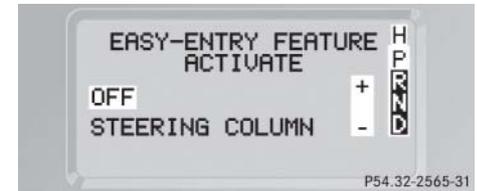

- ▶ Press **+** or **-** to change the easy-entry/exit setting.

The following settings are available for the easy-entry/exit feature

OFF	The easy-entry/exit feature is deactivated
STEERING COLUMN	The easy-entry/exit feature is activated

### Control system

#### Setting key-dependency

Use this function to set whether the memory settings for the seats, the steering wheel and the exterior mirrors should be stored separately for each SmartKey (▷ page 107).

- ▶ Move the selection marker with the **+** or **-** button to the CONVENIENCE submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: SETTINGS KEY-DEPENDENT.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to set key dependency to ON or OFF.



For safety reasons, resetting the SETTINGS KEY-DEPENDENT submenu to factory settings will not reset while driving.

In the display you will then see the message: CONVENIENCE - CANNOT BE TOTALLY RESET TO FACTORY SETTINGS WHILE DRIVING.

#### Setting parking position for exterior rear view mirror

Use the MIRROR SETTING WHEN PARKING function to select whether the passenger-side exterior rear view mirror should be turned downward during parking maneuvers when reverse gear is engaged. For more information, see “Activating exterior rear view mirror parking position” (▷ page 164).

- ▶ Move the selection marker with the **+** or **-** button to the CONVENIENCE submenu.
- ▶ Press button **▲** or **▼** repeatedly until you see this message in the display: MIRROR SETTING WHEN PARKING.

The selection marker is on the current setting.



- ▶ Press **+** or **-** to switch function ON or OFF.

### Trip computer menu

Use the trip computer menu to call up statistical data on your vehicle. The following information is available:

Function	Page
Fuel consumption statistics after start	145
Fuel consumption statistics since last reset	145
Call up range (distance to empty)	146

### Fuel consumption statistics after start

- ▶ Press button  or  repeatedly until you see the first function of the Trip computer menu.
- ▶ Press button  or  repeatedly until you see this message in the multi-function display: AFTER START.



- ① Time elapsed since start
- ② Average fuel consumption since start
- ③ Average speed since start
- ④ Distance driven since start

### Fuel consumption since last reset

- ▶ Press button  or  repeatedly until you see the first function of the Trip computer menu.
- ▶ Press button  or  repeatedly until you see this message in the display: AFTER RESET.



- ① Time elapsed since last reset
- ② Average fuel consumption since last reset
- ③ Average speed since last reset
- ④ Distance driven since last reset



### Control system



All statistics stored since the last engine start will be reset approximately four hours after the SmartKey in the starter switch is turned to position **0** or removed from the starter switch.

Resetting will not occur if you turn the SmartKey back to position **1** or **2** within this time period.

#### Resetting fuel consumption statistics

- ▶ Press button or repeatedly until you see the first function of the Trip computer menu.
- ▶ Press button or repeatedly until you see the reading that you want to reset in the display.
- ▶ Press and hold the reset button in the instrument cluster (▷ page 120) until the value is reset to 0.

#### Calling up range (distance to empty)

- ▶ Press button or repeatedly until you see the first function of the Trip computer menu.
- ▶ Press button or repeatedly until you see this message in the display: RANGE.

In the display you will see the calculated range based on the current fuel tank level.



#### TEL menu

##### Warning!



A driver's attention to the road and traffic conditions must always be his/her primary focus when driving. For your safety and the safety of others, we recommend that you pull over to a safe location and stop before placing or taking a telephone call. If you choose to use the telephone while driving, please use the hands-free device and only use the telephone when weather, road and traffic conditions permit.

Some jurisdictions prohibit the driver from using a cellular telephone while driving a vehicle.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or personal injury.

You can use the functions in the TEL menu to operate your telephone, provided it is connected to a hands-free system and switched on.

- ▶ Switch on the telephone and COMAND.
- ▶ Press button  or  on the steering wheel repeatedly until you see the TEL menu in the display.

Which messages will appear in the display field depends on whether your telephone is switched on or off:

- If the telephone is off, the message in the multifunction display is: TEL OFF.

- If the telephone is on:

The telephone will then search for a network. During this time the display is empty.

As soon as the telephone has found a network, READY is indicated in the display.



### ① Signal strength

This standby message indicates that your telephone is ready for use and you can operate it using the control system.

## Answering a call

When your telephone is ready to receive calls, you can answer a call at any time. In the display you will then see the message:



- ▶ Press button .

You have answered the call. In the display you see the length of the call.

## Ending a call

- ▶ Press button .

You have ended the call. In the display you will again see the standby message.

### Control system

#### Dialing a number from the phone book

If your telephone is ready to receive calls, you may select and dial a number from the phone book at any time.

- ▶ Press button  or  repeatedly until you see the TEL menu in the display.
- ▶ Press button  or .

The control system reads the phone book which is stored in the telephone. This may take up to 30 seconds. In the display you will see the message PLEASE WAIT!.

When the message PLEASE WAIT! disappears, the phone book has been loaded.

- ▶ Press button  or  repeatedly until the desired name appears in the display.

The stored names are displayed in ascending or descending alphabetical order.



If you press and hold  or  for longer than one second, the system scrolls rapidly through the list of names until you release the button again.

Cancel the quick search mode by pressing .

- ▶ Press button .

The system dials the selected phone number.

- If connection is successful, the name of the party you called and the duration of the call will appear in the display.



- If no connection is made, the control system stores the dialed number in the redial memory.

#### Redialing

The control system stores the most recently dialed phone numbers. This eliminates the need to search through your entire phone book.

- ▶ Press button  or  repeatedly until you see the TEL menu in the display.
- ▶ Press button .

In the display, you see the first number in the redial memory.

- ▶ Press button  or  repeatedly until the desired name appears in the display.
- ▶ Press button .

The control system dials the selected phone number.

### ▼ Automatic transmission


For more information on driving with an automatic transmission, see “Automatic transmission” (▷ page 49).

Your vehicle’s transmission adapts its gear shifting process to your individual driving style by continually adjusting the shift points up or down. These shift point adjustments are performed based on current operating and driving conditions.

If the operating conditions change, the automatic transmission reacts by adjusting its shift program.



During the brief warm-up, transmission upshifting is delayed. This allows the catalytic converter to heat up more quickly to operating temperature.

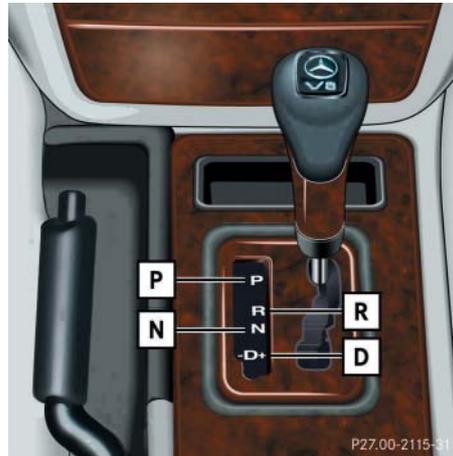

**Gearshift pattern for automatic transmission**

The automatic transmission selects individual gears automatically, depending on:

- the gear selector lever position **D** (▷ page 151) with gear ranges **4, 3, 2, 1** (▷ page 154)
- transfer case position (**HIGH** or **LOW**) (▷ page 157)
- the position of the accelerator pedal (▷ page 153)
- the vehicle speed

### Automatic transmission

The current gear range/gear selector lever position and the transfer case position H (**HIGH**) or L (**LOW**) appear in the multifunction display.



- ① Transfer case indicator
- ② Gear range/gear selector lever position

#### Warning!



It is dangerous to shift the gear selector lever out of **P** or **N** if the engine speed is higher than idle speed. If your foot is not firmly on the brake pedal, the vehicle could accelerate quickly forward or reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when the engine is idling normally and when your right foot is firmly on the brake pedal.



Allow engine to warm up under low load use. Do not place full load on the engine until the operating temperature has been reached.

Shift into reverse gear **R** or parking position **P** only when the vehicle is stopped.

When the gear selector lever is in position **D**, you can influence transmission shifting by

- limiting the gear range
- changing gears manually

**Gear selector lever position**

	Effect
<b>P</b>	<p><b>Park position</b></p> <p>Gear selector lever position when the vehicle is parked. Place gear selector lever in position <b>P</b> only when vehicle is stopped. The park position is not intended to serve as a brake when the vehicle is parked. Rather, the driver should always set the parking brake in addition to placing the gear selector lever in position <b>P</b> to secure the vehicle.</p>

	Effect
	<p>The SmartKey can only be removed from the starter switch with the gear selector lever in position <b>P</b>. With the SmartKey removed, the gear selector lever is locked in position <b>P</b>.</p> <p>If the vehicle's electrical system is malfunctioning, the gear selector lever could remain locked in position <b>P</b> (▷ page 329).</p>
<b>R</b>	<p><b>Reverse gear</b></p> <p>Place gear selector lever in position <b>R</b> only when vehicle is stopped.</p>

	Effect
<b>N</b>	<p><b>Neutral</b></p> <p>No power is transmitted from the engine to the drive axle. When the brakes are released, the vehicle can be moved freely (pushed or towed).</p> <p>Do not engage <b>N</b> while driving except:</p> <ul style="list-style-type: none"> <li>to coast when vehicle is in danger of skidding (e.g. on icy roads) when the ESP is deactivated or malfunctioning</li> <li>when you have to shift the transfer case</li> </ul>
<b>D</b>	<p><b>Drive</b></p> <p>The transmission shifts automatically. All five forward gears are available.</p>

### Automatic transmission



Coasting the vehicle, or driving for any other reason with gear selector lever in **N** can result in transmission damage that is not covered by the Mercedes-Benz Limited Warranty.

#### Warning!



Getting out of your vehicle with the gear selector lever not fully engaged in position **P** is dangerous. Also, position **P** alone is not intended to or capable of preventing your vehicle from moving, possibly hitting people or objects.

Always set the parking brake in addition to shifting to position **P** (▷ page 57).

When parked on an incline, turn the front wheels towards the road curb.

Do not park this vehicle in areas where combustible materials such as grass, hay or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

#### Warning!



When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could move the gear selector lever from position **P**, which could result in an accident and/or serious personal injury.

## Driving tips

### Accelerator position

Your driving style influences the transmission's shifting behavior:

Less throttle	Earlier upshifting
More throttle	Later upshifting

### Kickdown

Use kickdown when you want maximum acceleration.

- ▶ Press the accelerator past the point of resistance.

The transmission shifts into a lower gear.

- ▶ Ease on the accelerator when you have reached the desired speed.

The transmission shifts up again.

## Stopping

When you stop briefly, e.g. at traffic lights:

- ▶ Leave the transmission in gear.
- ▶ Hold the vehicle with the brake.

When you stop longer with the engine idling and/or on a hill:

- ▶ Set the parking brake.
- ▶ Move the gear selector lever to position **P**.

## Maneuvering

When you maneuver in tight areas, e.g. when pulling into a parking space:

- ▶ Control the vehicle speed by gradually releasing the brakes.
- ▶ Accelerate gently.
- ▶ Never abruptly step on the accelerator.

## Working on the vehicle

### Warning!



When working on the vehicle, set the parking brake and move gear selector lever to position **P**. Otherwise the vehicle could roll away.

### Automatic transmission

#### Gear ranges

With the gear selector lever in position **D**, you can select a gear range for the automatic transmission to operate within.

You can limit the gear range by pressing the gear selector lever to the left (**D-**), and reverse the gear range limit by pressing the gear selector lever to the right (**D+**).

The selected gear range will appear in the multifunction display (▷ page 150). If you press on the accelerator when the engine has reached its rpm limit, the transmission will upshift beyond any gear range limit selected.



If the transfer case is in off-road driving position **LOW**, the automatic transmission will not shift up automatically, even when the engine has reached the speed limit for that gear. There is a risk of damaging the engine.

It is very important to make sure the permissible engine speed is not exceeded.

	Effect
<b>4</b>	The transmission shifts through fourth gear only.
<b>3</b>	The transmission shifts through third gear only.  With this selection you can use the braking effect of the engine.
<b>2</b>	The transmission shifts through second gear only.  Allows the use of engine's braking power when driving <ul style="list-style-type: none"><li>• on steep downgrades</li><li>• in mountainous regions</li><li>• under extreme operating conditions</li></ul>
<b>1</b>	The transmission operates in first gear only.  For maximum use of engine's braking effect on very steep or lengthy downgrades.

## One-touch gearshifting

Even with an automatic transmission, you can change the gears manually and limit or extend the gear range for automatic shifting with the gear selector lever in position **D**.



Allow engine to warm up under low load use. Do not place full load on the engine until the operating temperature has been reached.

Shift into reverse gear **R** or parking position **P** only when the vehicle is stopped.

## Downshifting

### Warning!



On slippery road surfaces, never downshift in order to obtain braking action. This could result in drive wheel slip and reduced vehicle control. Your vehicle's ABS will not prevent this type of loss of control.

- ▶ Briefly press the gear selector lever to the left in the **D-** direction.

The transmission will shift from the current gear to the next lower gear as permitted by the shift program. This action simultaneously limits the gear range of the transmission (▷ page 154).



To avoid overrevving the engine when the gear selector lever is moved to the **D-** direction, the transmission will not shift to a lower gear if the engine's max. speed would be exceeded.

## Upshifting

- ▶ Briefly press the gear selector lever to the right in the **D+** direction.

The transmission will shift from the current gear to the next higher gear as permitted by the shift program. This action simultaneously extends the gear range of the transmission.

## Canceling gear range limit

- ▶ Press and hold the gear selector lever in the **D+** direction until **D** reappears in the multifunction display.

The transmission will shift from the current gear range directly to gear range **D**.

## Shifting into optimal gear range

- ▶ Press and hold the gear selector lever in the **D-** direction.

The transmission will automatically select the gear range suited for optimal acceleration and deceleration. This will involve shifting down one or more gears.

### Automatic transmission

#### Emergency operation (Limp Home Mode)

---

If vehicle acceleration worsens or the transmission no longer shifts, the transmission is most likely operating in limp home (emergency operation) mode. In this mode, only 2nd gear and reverse gear can be activated.

- ▶ Stop the vehicle.
- ▶ Move gear selector lever to **P**.
- ▶ Turn off the engine.
- ▶ Wait at least ten seconds before re-starting.
- ▶ Restart the engine.
- ▶ Move gear selector lever to position **D** (for second gear) or **R**.
- ▶ Have the transmission checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.

### ▼ Transfer case


For more information on off-road driving, see “Off-road driving” (▷ page 227).

#### Transfer case position

<b>H</b>	<b>HIGH</b> Road position
<b>L</b>	<b>LOW</b> Off-road position  This position is intended for driving off-road and step gradients.  The transmission will not upshift automatically to the next higher gear range when driving at the rpm limit.  The transfer case supports the engine’s driving force (approx. $\frac{1}{2}$ speed). Output is therefore increased.
<b>N</b>	<b>Neutral</b> No power is transmitted from the engine to the drive axle.

#### Switching transfer case

The switch is located in the center console.

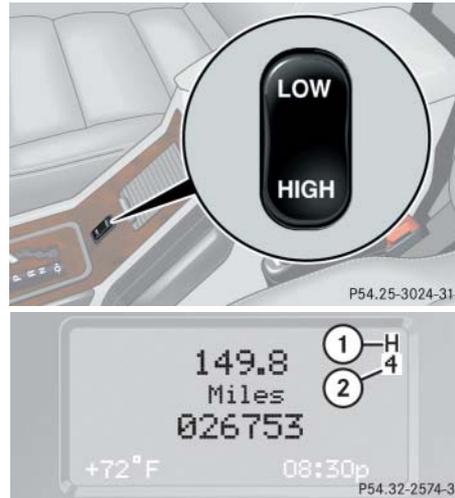

- ① Transfer case indicator
- ② Gear range indicator

Transfer case indicator ① in the multi-function display shows the gear position of the transfer case.

#### Switching from HIGH to LOW



The shift procedure can only be performed when:

- The engine is running.
- The gear selector lever for the automatic transmission is in position **N**.
- The vehicle is not at standstill.
- The vehicle speed does not exceed 25 mph (40 km/h).

- ▶ Press upper half (“LOW”) of the transfer case switch.

Once the shift is complete, gear position **L** is displayed in the transfer case indicator.



If the shift procedure does not take place press upper half (“LOW”) of the transfer case switch again.

- ▶ Put gear selector in **D**.

### Transfer case

#### Switching from LOW to HIGH



The shift procedure can only be performed when:

- The engine is running.
- The gear selector lever for the automatic transmission is in position **N**.
- The vehicle is not at standstill.
- The vehicle speed does not exceed 40 mph (70 km/h).

- ▶ Press lower half (“HIGH”) of the transfer case switch.

Once the shift is complete, gear position **H** is displayed in the transfer case indicator.



If the shift procedure does not take place press lower half (“HIGH”) of the transfer case switch again.

- ▶ Put gear selector in **D**.

#### Messages in the multifunction display

If a shift was not completed and the multifunction display shows one of the following messages:

- TC SHIFT CONDITIONS NOT FULFILLED  
The shift did not take place. At least one shift condition was not met.
- ▶ Repeat the shift procedure.
- TC IN NEUTRAL

The shift did not take place. The transfer case is in neutral. The gear position **N** is displayed in transfer case indicator

- ▶ Repeat the shift procedure.

#### Warning!



If TC is in neutral, transmission position **P** will not hold vehicle. The parking brake must be applied to hold vehicle in place.

- TC SHIFT - CANCELLED  
The shift did not take place.
- ▶ Repeat the shift procedure.
- TRANSFER CASE - VISIT WORKSHOP!  
There may be a malfunction in the system.
- ▶ Repeat the shift procedure.
- ▶ If the shift procedure still does not take place, have the vehicle checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.



If the SmartKey is in starter switch position **0** or **1**, an alarm will sound if the transfer case is in position **N** and the driver's door is opened.

Engage transfer case to gear position **HIGH** or **LOW**.

For more information, see “Practical hints” section (▶ page 321).

## ▼ Differential locks

For more information on off-road driving, see “Off-road driving” (▷ page 227).

Differential locks improve the vehicle’s tractive power off-road. Switch on differential locks:

- for off-road driving
- to turn the ABS off during off-road driving
- for driving through water
- when driving on deep snow and icy or fouled surfaces



Do not engage the front axle differential lock when driving around tight corners. This restricts steering ability.



When driving off-road, apply only moderate pressure to the accelerator pedal if the differential locks are switched on.

When running on a (single-axle) dynamometer – no matter how briefly – you must:

- raise the non-driven axle  
or
- disconnect its drive shaft  
and
- engage the transfer differential lock

Otherwise the transfer case can be damaged, which is not covered by the Mercedes-Benz Limited Warranty.

### Warning!



Never drive on pavement with differential locks engaged.

Steering control will be strongly affected with the differential locks activated.

The ABS, BAS, and ESP are switched off automatically when the transfer case differential lock is activated.

### Differential locks

#### A few words about differentials and differential locks

When a vehicle negotiates a turn, wheels on the outside of the curve must travel farther and rotate faster than the inside wheels. The differential, the operation of a set of gears that allows the powered wheels in a vehicle to turn at different speeds, makes this essential function possible.

The drawback is that the differential also sends most of the engine's power to the wheel with the least load or strain on it. For example, if one of a vehicle's powered wheels sits on a patch of snow and spins because there is no traction, all of the engine's power will go to that wheel because the power will take the path of least resistance. Meanwhile, the opposite wheel, sitting on dry pavement where it could get enough grip to start the vehicle moving, sits idle because it receives no power.

The Electronic Traction System (ETS) addresses this problem and provides for good control and steering ability by automatically slowing the slipping wheel and thus increasing the power to the other non-slipping drive wheels to get the vehicle moving. The ESP and ETS in this vehicle feature such intelligent limited-slip differential technology, ideally suited for on-road and light off-road driving. Transfer case position LOW (▷ page 157) also enhances off-road driving capabilities (▷ page 227).


More extreme off-road conditions may call for another solution, engaging a differential lock or preventing the differential from operating altogether. As part of its standard equipment, this vehicle comes with three differential locks: front, transfer case (center) and rear. Each can be engaged simply by pushing dashboard-mounted buttons in sequential order (center, rear, front) (▷ page 161). When the transfer case (center) differential is locked, half of the engine's power is automatically distributed to the front wheels and half to the

rear wheels. When the rear differential is locked, power going to the rear wheels is equally distributed, so that both rear wheels turn at the same speed and torque. When the front differential is locked, all four wheels now turn with equal power and torque. Please be aware that engaging the differential locks will significantly reduce the steering ability of the vehicle.

For your safety and the safety of others and to prevent damage to the vehicle, the differential locks must not be engaged when driving on paved roads. It is important to understand that during on-road/paved driving, differentials are absolutely necessary for providing the essential control and steering ability of the vehicle. The differential locks, therefore, must not be engaged when driving on paved roads and should only be used to the extent necessary to negotiate off-road conditions which cannot be handled by the systems (automatic 4-ETS, the ESP, manual switch position "LOW" of transfer case) this vehicle comes equipped with.

### Switching differential locks on and off

The switch is located in the center console.

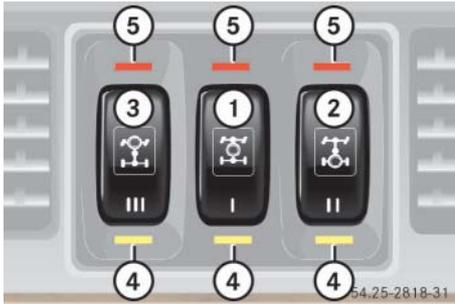

- ① Transfer case (center) differential lock
- ② Rear axle differential lock
- ③ Front differential lock
- ④ Engagement indicator lamps (yellow)
- ⑤ Function indicator lamps (red)



The differential locks can only be switched on in the sequence ①, ②, ③.

### Switching differential locks on



To avoid damage to the transfer case and differential locks:

- Engage differential locks only at low speed (walking speed, not more than 5 mph).
- Do not engage differential locks if the driving wheels are spinning due to lack of traction.
- Do not engage on paved roads.

### Transfer case differential lock

- ▶ Press switch ①.

The yellow engagement indicator lamp ④ for the transfer case differential lock comes on.

The ESP warning lamp  comes on.

When the differential lock engagement operation has been completed, the red function indicator lamp ⑤ comes on.

The message **ABS NOT AVAILABLE - DIFFERENTIAL LOCKED** appears in the multifunction display.

The ESP warning lamp  and the ABS  warning lamp in the instrument cluster come on.



### Differential locks

- ▷▷ Once the transfer case differential lock is switched on, you can now, if needed,
- switch on rear axle differential lock ②  
or
  - switch on rear axle differential lock ② and front differential lock ③.

#### Rear axle differential lock

- ▶ Press switch ②.

The yellow engagement indicator lamp ④ comes on first, followed by the red function indicator lamp ⑤.

The rear axle differential lock is switched on.

#### Front differential lock

- ▶ Press switch ③.

The yellow engagement indicator lamp ④ comes on first, followed by the red function indicator lamp ⑤.

The front differential lock is switched on.

#### Switching differential locks off

There are two different methods to disengage differential locks:

- You can switch the differential locks off in reverse order (③, ②, ①).
- To switch off all differential locks at the same time:
  - ▶ Press switch ①.

The yellow engagement indicator lamps ④ go out first. The red function indicator lamps ⑤ go out when the switching process has been carried out in the differential.

To activate the ESP, BAS, and ABS systems, drive again for three seconds using a constant driving style.

All messages in the multifunction display disappear. The ESP warning lamp  and the ABS  warning lamp in the instrument cluster go out.



If the function lamps do not go out when the differential locks are disengaged, bring vehicle to a stop and then continue driving. Changing the vehicle load can help to disengage locks.

#### Warning!



Always remember to disengage the differential locks when returning to drive on paved roads, see “A few words about differentials and differential locks” (▷ page 160).

## ▼ Good visibility

For information on windshield wipers, see “Windshield wipers” (▷ page 53) and for setting the exterior rear view mirrors, see “Mirrors” (▷ page 41).

### Rear view mirrors

#### Auto-dimming mirrors

The reflection brightness of the exterior rear view mirrors and the interior rear view mirror will respond automatically to glare when

- ignition is switched on, and
- incoming light from headlamps falls on the sensor in the interior rear view mirror

The interior rear view mirror will not react if

- reverse gear is engaged
- the interior lighting is turned on

#### Warning!



The auto-dimming function does not react if incoming light is not aimed directly at sensors in the interior rear view mirror.

The interior rear view mirror and the exterior rear view mirrors do not react, for example, when transporting cargo which covers the rear window.

Glare can endanger you and others.

#### Warning!



In case of an accident, liquid electrolyte may escape from the mirror housing if the mirror glass breaks.

Electrolyte has an irritating effect. Do not allow the liquid to come into contact with eyes, skin, clothing, or the respiratory system. In case it does, immediately flush affected area with water, and seek medical help if necessary.



Electrolyte drops coming into contact with the vehicle paint finish can be completely removed only while in the liquid state by applying plenty of water.

#### Warning!




Exercise care when using the passenger-side exterior rear view mirror. The mirror surface is convex (outwardly curved surface for a wider field of view). Objects in mirror are closer than they appear. Check your inside rear view mirror or glance over your shoulder before changing lanes.

#### Activating exterior rear view mirror parking position

Follow these steps to activate the mirror parking position so that the passenger-side exterior rear view mirror will be turned downward to the stored position.

The buttons are located above the exterior lamp switch.

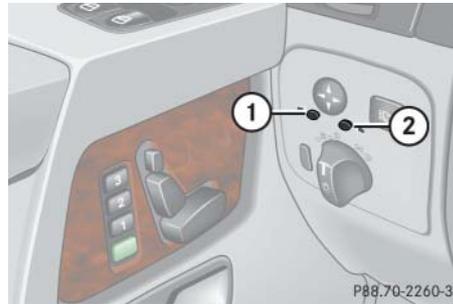

- ① Driver's side exterior rear view mirror button
- ② Passenger-side exterior rear view mirror button

- ▶ Make sure you have stored a parking position for the passenger-side exterior rear view mirror (▷ page 109).
- ▶ Make sure the MIRROR SETTING WHEN PARKING function in the CONVENIENCE submenu of the control system is switched to ON (▷ page 144).
- ▶ Switch on the ignition (▷ page 35).
- ▶ Press button ② for the passenger-side exterior rear view mirror.
- ▶ Place the gear selector lever in reverse gear **R**.

The passenger-side exterior rear view mirror will be turned downward to the stored position.

The exterior rear view mirror returns to its previously stored driving position:

- ten seconds after you put the gear selector lever out of position **R**
- immediately once you exceed a vehicle speed of approx. 6 mph (10 km/h)
- immediately when you press button ① for driver's side exterior rear view mirror

### Headlamp cleaning system

The switch is located to the left of the steering column.



#### ① Headlamp washer switch

- ▶ Switch on the ignition (▷ page 35).
- ▶ Press switch ①.

The headlamps will be cleaned with a high-pressure water jet.

### Sun visors

The sun visors help protect you from sun glare while driving.


#### Warning!



Do not use the vanity mirror while driving.


Keep the mirrors in the sun visors closed while vehicle is in motion. Reflected glare can endanger you and others.

### Good visibility

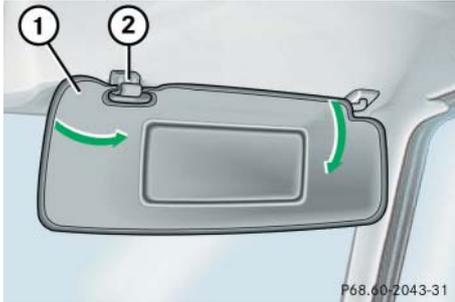

- ① Sun visor
- ② Mounting

- ▶ Swing sun visors ① down to protect against sun glare.
- ▶ If sunlight enters through a side window, disengage visor ① from inner mounting ② and pivot it to the side.

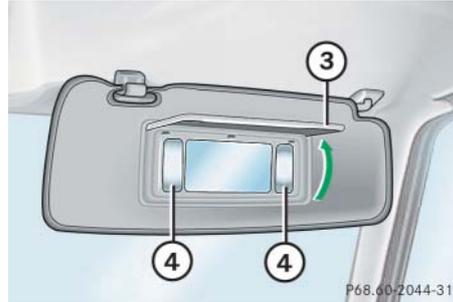

- ③ Mirror cover
- ④ Mirror lamp

- ▶ Make sure the ignition is switched on and that the sun visor is engaged in mounting ②.
- ▶ Open mirror cover ③.  
Mirror lamps ④ switch on.

### Rear window defroster

Switch on the ignition (▷ page 35).

### Activating

- ▶ Press button  in the control panel of the climate control.  
The indicator lamp in the button comes on.

## Deactivating

- ▶ Press button  in the control panel of the climate control.

The indicator lamp in the button goes out.



The rear window defroster uses a large amount of power. To keep the battery drain to a minimum, turn off the defroster as soon as the rear window is clear.



Heavy accumulation of snow and ice should be removed before activating the defroster.

The defroster is automatically turned off after approximately 6-17 minutes of operation depending on the outside temperature and vehicle speed.

If several power consumers are turned on simultaneously, or the battery is only partially charged, it is possible that the defroster will automatically turn itself off.


When this happens, the indicator lamp inside the switch starts blinking.

As soon as the battery has sufficient voltage, the defroster turns itself back on.



P68.10-3143-31

- ① Windshield defroster air vents
- ② Center air vent, adjustable
- ③ Thumbwheel for center air vent
- ④ Side air vent, adjustable
- ⑤ Side defroster air vent, fixed
- ⑥ Thumbwheel for side air vent
- ⑦ Footwell air vents
- ⑧ Climate control panel

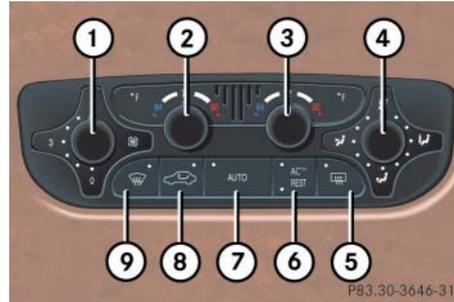

Climate control panel

- ① Air volume
- ② Temperature control, left (driver side)
- ③ Temperature control, right (passenger side)
- ④ Air distribution control
- ⑤ Rear window defroster (▷ page 166)
- ⑥ AC cooling on / off (**AC<sup>OFF</sup>**)  
Residual engine heat utilization (REST)
- ⑦ Air distribution and air volume (automatic mode)
- ⑧ Air recirculation
- ⑨ Defrosting



For draft-free ventilation, move the sliders for the center air vents to the middle position.

### Climate control

The climate control is operational whenever the engine is running. You can operate the climate control system in either the automatic or manual mode. The system cools or heats the interior depending on the selected interior temperature and the current outside temperature.

#### Warning!



When operating the climate control, the air that enters the passenger compartment through the air vents in the footwell can be very hot or very cold (depending on the set temperature). This may cause burns or frostbite on unprotected skin in the immediate area of the air vents. Always keep sufficient distance between unprotected parts of the body and the footwell air vents. If necessary, change the air flow using the air distribution controls to direct the air away from the footwell air vents (▷ page 171).

Nearly all dust particles, pollutants and odors are filtered out before outside air enters the passenger compartment through the air distribution system.

The air conditioning will not engage (no cooling) if the **AC<sup>OFF</sup>** mode is selected (▷ page 174).

#### Warning!



Follow the recommended settings for heating and cooling given on the following pages. Otherwise the windows could fog up, impairing visibility and endangering you and others.



If the vehicle interior is hot, ventilate the interior before driving off.

Keep the air intake grille in front of the windshield free of snow and debris.

### Setting the temperature

Use temperature controls ② and ③ to separately adjust the air temperature on each side of the passenger compartment. You should raise or lower the temperature setting in small increments, preferably starting at 72°F (22°C).



When operating the climate control system in automatic mode, you will only rarely need to adjust the temperature, air volume, and air distribution.

### Increasing

- ▶ Turn the temperature control a few degrees to the right.

The climate control system will correspondingly adjust the interior air temperature.

### Decreasing

- ▶ Turn the temperature control a few degrees to the left.

The climate control system will correspondingly adjust the interior air temperature.

### Adjusting air distribution and volume

Use air distribution control ④ (▷ page 169) to adjust the air distribution. The following symbols are found on the controls:

Symbol	Function
	Directs air through the center, side, and rear passenger compartment air vents
	Directs air to the windows
	Directs air into the entire vehicle interior
	Directs air to the footwells

### Adjusting manually

- ▶ Press the **AUTO** button.  
The indicator lamp on the button goes out.
- ▶ Select any of the six air volume speeds and the air distribution.

### Adjusting automatically

- ▶ Press the **AUTO** button.  
The indicator lamp on the button comes on. Air distribution and volume are adjusted automatically.

### Windshield fogged on the outside

- ▶ Switch the windshield wipers on.
- ▶ Switch to manual mode.
- ▶ Turn the air distribution control to  or .

### Climate control

#### Defrosting

##### Activating

- ▶ Press button .

The indicator lamp in the button illuminates.

The climate control automatically switches to the following functions:

- maximum blower and heat output
- air distribution to the windshield and the side windows
- rear ventilation is turned off

##### Deactivating

- ▶ Press the  button.

The indicator lamp in the button goes out. Defrosting is turned off.

#### Air recirculation

Switch to air recirculation mode to prevent unpleasant odors from entering the vehicle from the outside. This setting cuts off the intake of outside air and recirculates the air in the passenger compartment.

##### Warning!



When the outside temperature is below 41°F (5°C), only switch to air recirculation mode for short periods to prevent window fogging.

##### Activating

- ▶ Press button  briefly.

The indicator lamp in the button illuminates.



The air recirculation mode is activated automatically at high outside temperatures.

If you have turned off the air conditioner or the outside temperature is below 41°F (5°C), the air recirculation mode will not switch on automatically.

##### Deactivating

- ▶ Press button  briefly.

The indicator lamp in the button goes out.

The air recirculation mode is deactivated automatically:

- after 30 minutes if the outside temperature is above about 41°F (5°C)
- after 5 minutes if the outside temperature is below about 41°F (5°C)
- after 5 minutes if economy mode **AC<sup>OFF</sup>** is selected

### Residual engine heat utilization

---

With the engine switched off, it is possible to continue to heat or ventilate the interior for a short while, depending on the temperature setting of the climate control. Air volume and distribution are controlled automatically.

#### Activating

- ▶ Turn the SmartKey in starter switch to position **1** or **0** or remove it from the starter switch.
- ▶ Press button .

The indicator lamp in the button comes on.

Set the left and right temperature to your personal requirements.

#### Deactivating

- ▶ Press button  again to switch off.

The indicator lamp in the button goes out.

The residual heat is automatically turned off:

- when the SmartKey in starter switch is turned to position **2**
- after about 30 minutes
- if the battery voltage drops

### Deactivating the climate control system

---

#### Deactivating

- ▶ Set the air volume control switch to position **0**.

#### Reactivating

- ▶ Set the air volume control switch to any speed.

### Climate control

#### Air conditioning

The air conditioning is operational while the engine is running and cools the interior air to the temperature set by the operator.



Condensation may drip out from underneath the vehicle. This is normal and not an indication of a malfunction.

#### Deactivating

It is possible to deactivate the air conditioning (cooling) function of the climate control system. The air in the vehicle will then no longer be cooled or dehumidified.

- ▶ Press button .

The indicator lamp on the button  comes on.

#### Activating

Moist air can fog up the windows. You can dehumidify the air with the air conditioner.

- ▶ Press button  again.

The indicator lamp on the button  goes out.


The air conditioner uses the refrigerant R134a. This refrigerant is free of CFCs which are harmful to the ozone layer.



If the  button on the climate control panel starts to blink, this indicates that the air conditioner is losing refrigerant. The compressor has turned itself off. The air conditioner cannot be turned on again.

- Have the air conditioner checked at the nearest authorized Mercedes-Benz Light Truck Center.

#### Rear passenger compartment adjustable air vents

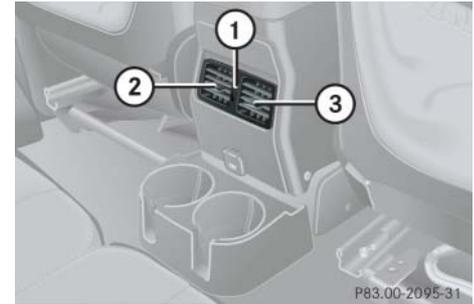


- ① Air volume control for center air vents
- ② Left center air vent, adjustable
- ③ Right center air vent, adjustable

### ▼ Power windows

#### Opening and closing the windows

The side windows are opened and closed electrically. Switches for operating all the side windows are located on the driver's door. The switches for the respective windows are located on the front passenger and the rear doors.

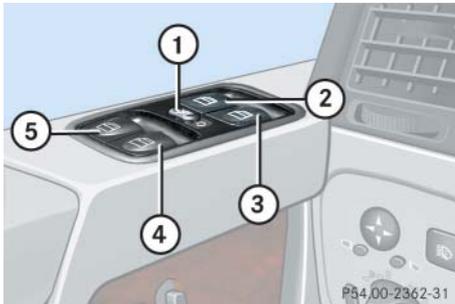

- ① Switch for rear door window override (▷ page 78)
- ② Left front window
- ③ Right front window
- ④ Right rear window
- ⑤ Left rear window

#### Warning!



When closing the windows, make sure there is no danger of anyone being harmed by the closing procedure.

The closing procedure can be immediately halted by releasing the switch or by releasing button  on the SmartKey.

When leaving the vehicle, always remove the SmartKey from starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment can cause an accident and/or serious personal injury.

- ▶ Turn SmartKey in the starter switch to position **1** or **2**.

#### Opening the windows

- ▶ Press switch ② to ⑤ to the resistance point.

The corresponding window will move downwards until you release the switch.

#### Closing the windows

- ▶ Pull on switch ② to ⑤.

The corresponding window will move upwards until you release the switch.

#### Fully opening windows (Express-open)

- ▶ Press switch ② to ⑤ past the resistance point and release.

The corresponding window opens completely.

#### Stopping windows

- ▶ Press or pull respective switch again.

### Power windows

#### Opening and closing windows with the SmartKey


The tilt/sliding sunroof (▷ page 178) will also be opened or closed when the power windows are operated with the SmartKey.

#### Warning!



Never operate the windows or tilt/sliding sunroof if there is the possibility of anyone being harmed by the opening or closing procedure.

In case the procedure causes potential danger, the procedure can be immediately halted by releasing the button on the SmartKey. To reverse direction of movement, press  for opening or  for closing.

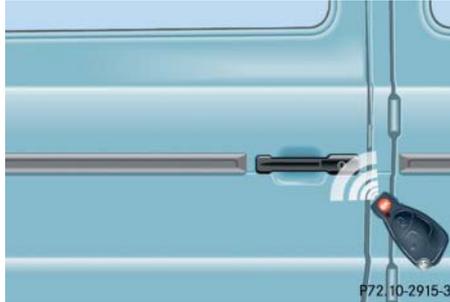

- ▶ Aim transmitter eye at the outside driver's door handle.

The SmartKey must be in close proximity to the door handle.

#### Opening (Summer opening feature)

- ▶ Press and hold button  after unlocking the vehicle.

The windows and tilt/sliding sunroof begin to open after approximately 1 second.

- ▶ Release transmit button to interrupt procedure.

### *Closing (Convenience feature)*

- ▶ Press and hold button  after locking the vehicle.

The windows and tilt/sliding sunroof begin to close after approximately 1 second.

- ▶ Release transmit button to interrupt procedure.

Make sure all side windows and the tilt/sliding sunroof are properly closed before leaving the vehicle.

### Warning!



When closing the windows and tilt/sliding sunroof, make sure that there is no danger of anyone being harmed by the closing procedure.

If potential danger exists, proceed as follows:

- Release button  to stop the closing procedure. To open, press and hold button . To continue the closing procedure after making sure that there is no danger of anyone being harmed by the closing procedure, press and hold button .

### Power tilt/sliding sunroof

#### Opening and closing the power tilt/sliding sunroof

The tilt/sliding sunroof is opened and closed electrically. The switch for the tilt/sliding sunroof is on the overhead control panel.



#### Sunroof switch

- ① Push up to raise sunroof at rear
- ② Pull down to lower sunroof at rear
- ③ Push forward to slide sunroof closed
- ④ Push back to slide sunroof open

#### Warning!



When closing the tilt/sliding sunroof, make sure there is no danger of anyone being harmed by the closing procedure.

The opening procedure of the tilt/sliding sunroof can be immediately halted by releasing the switch or, if the switch was moved past the resistance point and released, by moving the switch in any direction.

The closing procedure of the tilt/sliding sunroof can be immediately halted by releasing the switch.

The closing procedure can be immediately reversed by moving the switch in direction ① or ④.

In a vehicle rollover, occupants not wearing their seat belts or not wearing them properly may be thrown out of the opening. Such an opening also presents a potential for injury for occupants wearing their seat belts properly as entire body parts or portions of them may protrude from the passenger compartment.

When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment can cause an accident and/or serious personal injury.



To avoid damaging the seals, do not transport any objects with sharp edges which can stick out of the tilt/sliding sunroof.

Do not open the tilt/sliding sunroof if there is snow or ice on the roof, as this could result in malfunctions.

The tilt/sliding sunroof can be opened or closed manually should an electrical malfunction occur (▷ page 330).



You can also open or close the tilt/sliding sunroof using the SmartKey (summer opening/convenience closing feature) (▷ page 179).

- ▶ Switch on the ignition (▷ page 35).

### Opening and closing the tilt/sliding sunroof

- ▶ To open, close, raise, or lower the tilt/sliding sunroof, move the sunroof switch to resistance point in the required direction of arrows ① to ④.

Release the sunroof switch when the tilt/sliding sunroof has reached the desired position.

### Fully opening (Express-open) the tilt/sliding sunroof

- ▶ To open the tilt/sliding sunroof, move the sunroof switch past the resistance point in direction of arrow ④ and release.

The tilt/sliding sunroof opens completely.

### Stopping the tilt/sliding sunroof during Express-operation

- ▶ Move the sunroof switch in any direction.

### Opening and closing the tilt/sliding sunroof with the SmartKey

The power windows (▷ page 175) will also be opened or closed when you operate the tilt/sliding sunroof with the SmartKey.


#### Warning!



Never operate the windows or tilt/sliding sunroof if there is the possibility of anyone being harmed by the opening or closing procedure.

In case the procedure causes potential danger, the procedure can be immediately halted by releasing the button on the SmartKey. To reverse direction of movement, press  for opening or  for closing.

### Power tilt/sliding sunroof

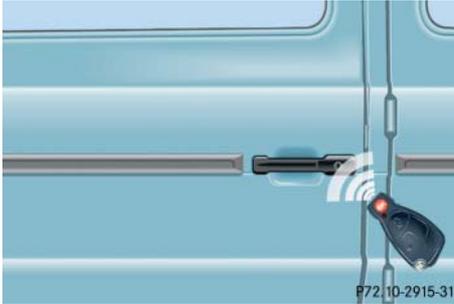

- ▶ Aim transmitter eye at the driver's door handle.  
The SmartKey must be in close proximity to the door handle.

#### *Opening (Summer opening feature)*

- ▶ Press and hold button  after unlocking the vehicle.  
The windows and tilt/sliding sunroof begin to open after approximately 1 second.
- ▶ Release transmit button to interrupt procedure.

#### *Closing (Convenience closing feature)*

- ▶ Press and hold button  after locking the vehicle.  
The windows and tilt/sliding sunroof begin to close after approximately 1 second.
- ▶ Release transmit button to interrupt procedure.

Make sure all side windows and the tilt/sliding sunroof are properly closed before leaving the vehicle.

#### Warning!



When closing the windows and tilt/sliding sunroof, make sure that there is no danger of anyone being harmed by the closing procedure.

If potential danger exists, proceed as follows:

- Release button  to stop the closing procedure. To open, press and hold button . To continue the closing procedure after making sure that there is no danger of anyone being harmed by the closing procedure, press and hold button .

## ▼ Driving systems

The driving systems of your vehicle are described on the following pages:

- Cruise control, with which the vehicle can maintain a preset speed.
- Rear Parking Assist\*, which assists your parking maneuvers.

For information on the BAS, ABS, ESP, 4-ETS, and EBB driving systems, see “Driving and safety systems” (▷ page 80).

### Cruise control

Cruise control automatically maintains the speed you set for your vehicle.

Use of cruise control is recommended for driving at a constant speed for extended periods of time. You can set or resume cruise control at any speed over 20 mph (30 km/h).

The cruise control function is operated by means of the cruise control lever.

The cruise control lever is the uppermost lever found on the left-hand side of the steering column (▷ page 23).



The cruise control should not be activated during off-road driving.

### Warning!




Cruise control is a convenience system designed to assist the driver during vehicle operation. The driver is and must always remain responsible for the vehicle speed and for safe brake operation.

Only use cruise control if the road, traffic and weather conditions make it advisable to travel at a steady speed.

- The use of cruise control can be dangerous on winding roads or in heavy traffic because conditions do not allow safe driving at a steady speed.
- The use of cruise control can be dangerous on slippery roads. Rapid changes in tire traction can result in wheel spin and loss of control.
- Deactivate cruise control when driving in fog.

The “Resume” function should only be operated if the driver is fully aware of the previously set speed and wishes to resume this particular preset speed.

### Driving systems

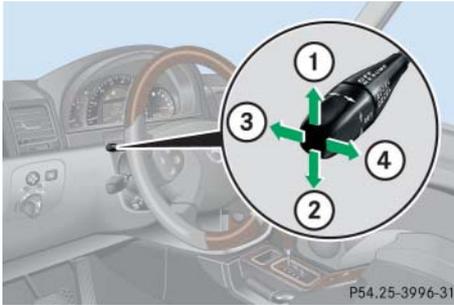

- ① Sets current or higher speed
- ② Sets current or lower speed
- ③ Cancels cruise control
- ④ Resumes at last set speed

#### Setting current speed

- ▶ Accelerate or decelerate to the desired speed.
- ▶ Briefly lift ① or depress ② the cruise control lever.

The current speed is set.

- ▶ Remove your foot from the accelerator pedal.

Cruise control is activated.



On uphill or downhill grades, cruise control may not be able to maintain the set speed. Once the grade eases, the set speed will be resumed.

#### Canceling cruise control

There are several ways to cancel cruise control:

- ▶ Step on the brake pedal.

Cruise control is canceled. The last set speed is stored for later use.

or

- ▶ Briefly push the cruise control lever to position ③.

Cruise control is canceled. The last set speed is stored for later use.



Moving gear selector lever to position **N** while driving also cancels cruise control. However, the gear selector lever should not be moved to position **N** while driving, except to coast when the vehicle is in danger of skidding (e.g. on icy roads).



The last stored speed is canceled when you turn off the engine.

### Setting a higher speed

- ▶ Lift cruise control lever to position ① and hold it up until the desired speed is reached.
- ▶ Release cruise control lever.  
The new speed is set.



Depressing the accelerator pedal does not deactivate cruise control. After brief acceleration (e.g. for passing), cruise control will resume the last speed set.

### Setting a lower speed

- ▶ Depress cruise control lever to position ② and hold it down until the desired speed is reached.
- ▶ Release cruise control lever.  
The new speed is set.



When you use the cruise control lever to decelerate, the transmission will automatically downshift if the engine's braking power does not brake the vehicle sufficiently.

### Fine adjustment in 1 mph (Canada: 1 km/h) increments

#### *Faster*

- ▶ Briefly tip cruise control lever in direction of arrow ①.

#### *Slower*

- ▶ Briefly tip cruise control lever in direction of arrow ②.

### Setting to last stored speed ("Resume" function)

#### Warning!



The speed stored in memory should only be set again if prevailing road conditions permit. Possible acceleration or deceleration differences arising from returning to preset speed could endanger yourself and others.

- ▶ Briefly push cruise control lever to position ④.  
Cruise control resumes the last set speed.
- ▶ Remove your foot from the accelerator pedal.

#### Rear Parking Assist\*

##### Warning!



Rear Parking Assist (rear Parktronic) is a supplemental system. It is not intended to, nor does it replace, the need for extreme care. The responsibility during parking and other critical maneuvers always rests with the driver.

Special attention must be paid to objects with smooth surfaces or low silhouettes (e.g. trailer couplings, painted posts, or street curbs). Such objects may not be detected by the system and can damage the vehicle.

The operational function of the Rear Parking Assist can be affected by dirty sensors, especially at times of snow and ice. See “Cleaning the Rear Parking Assist sensors” (▷ page 286).

Interference caused by other ultrasonic signals (e.g. working jackhammers or the air brakes of trucks) can cause the system to send erratic indications, and should be taken into consideration.

##### Warning!




Make sure no persons or animals are in the area in which you are maneuvering. You could otherwise injure them.

The Rear Parking Assist system is an electronic aid designed to assist the driver during parking maneuvers. It visually and audibly indicates the relative distance between the rear of the vehicle and an obstacle.

The Rear Parking Assist system is automatically activated when you switch on the ignition and shift the gear selector lever to position **R**.



The Rear Parking Assist system monitors the rear area of your vehicle by means of four sensors in the rear bumper.

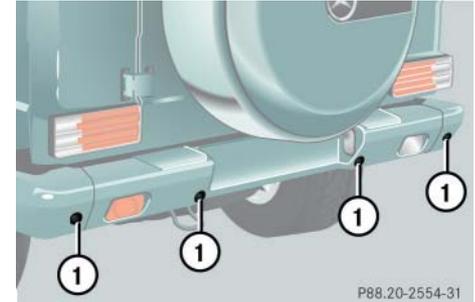

① Sensors

**Range of the sensors**

To function properly, the sensors must be free of dirt, ice, snow, and slush. Clean the sensors regularly, being careful not to scratch or damage them.

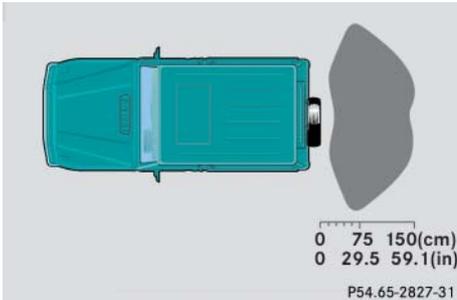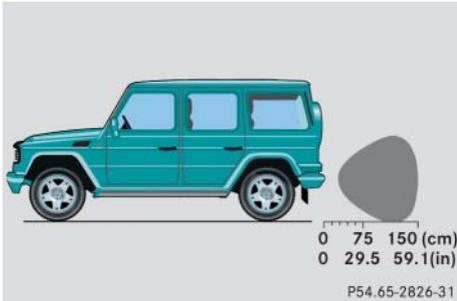

Center	<b>approx. 59.1 in (150 cm)</b>
Corners	<b>approx. 40 in (100 cm)</b>



During parking maneuvers, pay special attention to objects located above or below the height of the sensors (e.g. planters or trailer hitches). The Rear Parking Assist system will not detect such objects at close range and damage to your vehicle or the object may result.

Ultrasonic signals from outside sources (e.g. truck air brakes or jackhammers) may impair the operation of the Rear Parking Assist system.


**Minimum distance**

The minimum distance between the sensors and an obstacle is approximately 20 in (50 cm). If you encounter an obstacle in this range, all the warning lamps come on and you hear a warning signal. If the obstacle is closer than the minimum distance, the actual distance may no longer be indicated by the system.

### Driving systems

#### Warning indicator

Visual signals indicate to the driver the relative distance between the sensors and an obstacle. The warning indicator is located next to the tailgate.

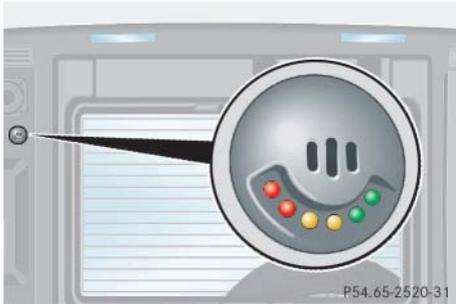

#### Warning indicator

As your vehicle approaches an object, one or more segments will come on, depending on the distance. When the sixth segment lights, you have reached the minimum distance.

An intermittent acoustic warning will sound when the first yellow segment comes on. This signal quickens with each additional segment lit. When all segments illuminate, the acoustic warning becomes a constant signal. The signal is canceled when the gear selector lever is placed in position **D** or **P**.

#### Rear Parking Assist malfunction

There is a malfunction in the Rear Parking Assist system if:

- a low warning tone sounds while the vehicle is reversing

The Rear Parking Assist sensors are dirty or malfunctioning.

- ▶ Clean the Rear Parking Assist system sensors (▷ page 286).
- ▶ Switch on the ignition again.

- no segments come on and no warning sounds

The Rear Parking Assist is malfunctioning.

- ▶ Have the Rear Parking Assist system checked by an authorized Mercedes-Benz Light Truck Center as soon as possible.

Malfunction may also be caused by interference from other radio or ultrasonic signals.

- ▶ Check the Rear Parking Assist operation at another location to rule out interference from outside radio or ultrasonic signals.

▼ **Loading**

**Roof rack**


This vehicle is not intended to carry items on its roof. Thus roof rails and any roof-mounted devices must not be used.

**Warning!**



Do not load items on the roof. It may cause instability during some maneuvers which could result in an accident.

**Cargo compartment cover**

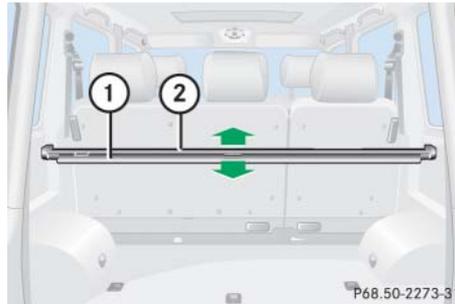


- ① Rear seat bench cover
- ② Tailgate cover
- ▶ Pull cover ① out. Hook it into the mountings on the rear seat bench.
- ▶ Pull cover ② out. Hook it into the mountings to the left and right of the tailgate.

**Rolling up the cover**

- ▶ Grip the cover strap and remove it from the mountings on both sides.
- ▶ Guide it slowly back into place.

**Removing and installing the cover**

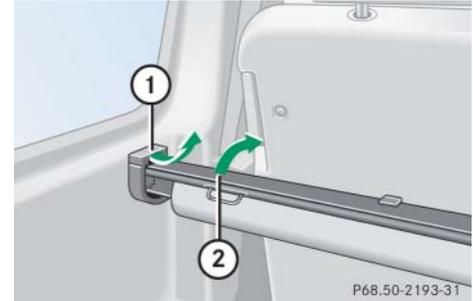

**Removing the cover**

- ▶ Open latch ① on right and left side in direction of arrow.
- ▶ Pull cover ② out upwards.

**Installing the cover**

- ▶ Place cover into recesses.
- ▶ Press right and left sides of cover down until it locks into place.

### Loading

#### Enlarged cargo compartment

The rear seat bench can be folded and lowered to increase the cargo compartment. The left, right or both seat backrests sections may be folded down according to need.

#### Warning!




Always lock seat backrest in its upright position when rear seat bench is occupied by passengers, or cargo is being carried behind the seat bench.

To help avoid personal injury from smaller objects flying in the occupant area during a collision or sudden maneuver, always use partition net when transporting cargo (▷ page 189).

For more information, see “Split rear seat bench” (▷ page 188).

#### Split rear seat bench

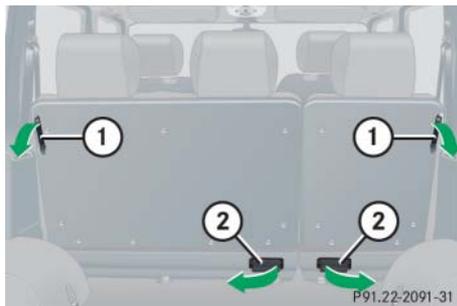

① Lever for seat backrest sections

② Lever for seat bench sections

The rear seat bench can be folded and lowered to enlarge the cargo compartment. The left, right or both seat backrest sections may be folded down as required.

#### Warning!



Failure to assure that seats and seat backrest are locked into place could result in an increased chance of injury in an accident.

Never place hands under seat or near any moving parts while a seat is being adjusted.

For safety reasons, the rear seat bench must only be adjusted when the vehicle is stationary.

Never ride vehicle with the tailgate open. Deadly carbon monoxide (CO) gases may enter vehicle interior resulting in unconsciousness and death.



Before folding the seat backrest forward and the rear seat bench down, be sure that all containers in the rear cup holder are removed.

**Folding seat backrest forward**

- ▶ Remove the head restraints (> page 102).
- ▶ Pull release lever ① in direction of arrow and fold seat backrest forward until it locks in place.

**Folding seat bench forward**

- ▶ Fold seat backrest forward.
- ▶ Pull release lever ② in direction of arrow and fold seat bench forward together with the seat backrest.

**Returning seat bench and seat backrest to sitting position**

- ▶ Fold up seat bench until it locks in place.
- ▶ Pull release lever ① and raise seat backrest until it locks in place.
- ▶ Check to make sure the seat is locked by pushing and pulling on the seat backrest.

**Warning!**

Failure to assure that seats and seat backrests are locked into place could result in an increased chance of injury in an accident.

**Partition net\* (MB Accessory)**

Use of the partition net is a particularly important safety factor when the vehicle is loaded higher than the top of the seat backrests with smaller objects.

While the partition net will help protect you from smaller objects, it cannot prevent the movement of large, heavier objects into the passenger area in an accident. Such items must be properly secured using the cargo tie-down rings in the cargo compartment floor.


The partition net can be installed behind the seat backrests of the rear seat bench, or behind the front seats if the rear seat bench is folded down.



Installation can be performed by opening the rear doors.

## Loading

### Installation behind rear seat bench

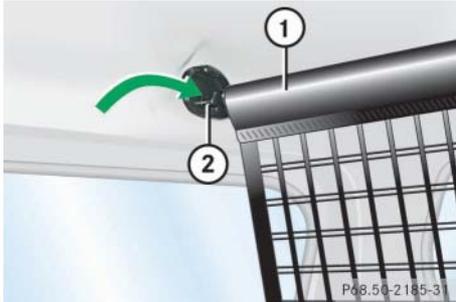


- ① Partition net
- ② Mounting

▶ Fold the rear seat bench forward (▷ page 188).




This cannot be done by folding the rear seat backrest forward.

▶ Hook partition net ① in mountings ② on both sides.

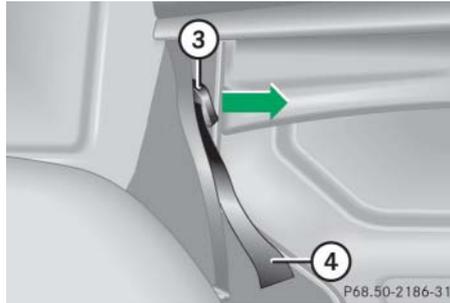

- ③ Lift tensioner
- ④ Tie down

Lift tensioner ③ on tie downs ④ must point in the direction of the arrow.

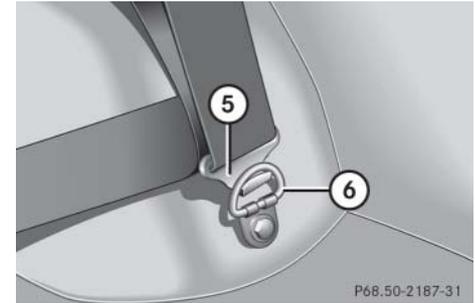

- ⑤ Hook
- ⑥ Ring

▶ Set the length of the tie downs ④ and lift tensioner ③ to the rings ⑥.

▶ Insert tie down hooks ⑤ in rings ⑥.

Pull on loose ends of tie downs until net is slightly tensioned.

▶ Fold up seat bench until it locks in place.

The partition net will be tightened by the rear seat bench cushion.


After driving a short period, check the tension of the partition net, retighten if necessary.

### Installation behind front seats



- ① Partition net
- ② Mounting

- ▶ Fold rear seat bench fully forward (▷ page 188).
- ▶ Engage partition net ① in mountings ②.

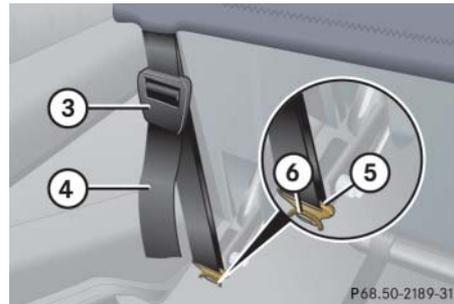

- ③ Lift tensioner
- ④ Tie down
- ⑤ Hook
- ⑥ Ring

Lift tensioner ③ must point in the direction of the cargo compartment.

- ▶ Set the length of tie downs ④ and lift tensioner ③ to the rings ⑥.
- ▶ Insert tie down hooks ⑤ in rings ⑥.
- ▶ Pull loose ends of tie downs ④ until net is tight.

After driving a short-distance, check the tension of the partition net, retighten if necessary.

### Removing partition net


- ▶ Lift tensioner upward to a horizontal position to release tensioning of strap.
- ▶ Disengage tie down hooks from rings.
- ▶ Remove partition net from mountings.

### Storing partition net

- ▶ Roll up partition net and secure it.
- ▶ Store partition net behind rear seat bench.

### Loading

#### Loading instructions

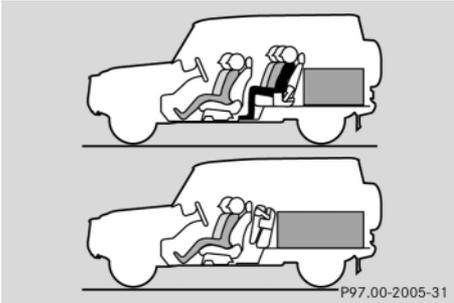

The gross vehicle weight which is the weight of the vehicle including fuel, tools, spare wheel, installed accessories, passengers and luggage / cargo must never exceed the Gross Vehicle Weight Rating (GVWR) for your vehicle. In addition, the load must be distributed in such a way so that the weight on each axle never exceeds the Gross Axle Weight Rating (GAWR) for the front and rear axle. The GVWR and GAWR for your vehicle are indicated on the certification label which can be found on the driver's door B-pillar (▷ page 368).

The handling characteristics of a fully loaded vehicle depend greatly on the load distribution. It is therefore recommended to load the vehicle according to the illustrations shown, with the heaviest items being placed towards the front of the vehicle.

#### Warning!



Always fasten items being carried as securely as possible using cargo tie-down rings and fastening materials appropriate for the weight and size of the load.

In an accident, during hard braking or sudden maneuvers, loose items will be thrown around inside the vehicle, and can cause injury to vehicle occupants unless the items are securely fastened in the vehicle.

To help avoid personal injury during a collision or sudden maneuver, always use partition net when transporting cargo.

Never ride vehicle with the tailgate open. Deadly carbon monoxide (CO) gases may enter vehicle interior resulting in unconsciousness and death.



- Always place items being carried against front or rear seat backrests, and fasten them as securely as possible.
- The heaviest portion of the cargo should always be kept as low as possible against front or rear seat backrest since it influences the handling characteristics of the vehicle.
- For additional safety when transporting cargo while the rear seats are unoccupied, fasten the outer seat belts crosswise into the opposite side buckles.
- Always pad off sharp edges.



The rear cargo compartment is the preferred place to carry objects. The enlarged cargo compartment (rear seats folded) should only be used for items which do not fit in the rear cargo compartment alone.

### Cargo tie-down rings



The cargo compartment is provided with four tie-down anchors.

Carefully secure cargo by applying even load on all rings with rope of sufficient strength to hold down the cargo.



### Warning!



While the partition net will help protect you from smaller objects, it cannot prevent the movement of large, heavier objects into the passenger area in an accident.

Such items must be properly secured using the cargo tie-down rings in the cargo compartment floor.

### Useful features

#### Storage compartments

##### Warning!



To help avoid personal injury during a collision or sudden maneuver, exercise care when storing objects in the vehicle. Put luggage or cargo in the cargo compartment if possible. Do not pile luggage or cargo higher than the seat backs.

Luggage nets cannot secure hard or heavy objects.

##### Warning!




Do not load items on the roof. It may cause instability during some maneuvers which could result in an accident.

##### Warning!



Keep compartment lids closed. This will help to prevent stored objects from being thrown about and injuring vehicle occupants during an accident and sudden maneuvers.

#### Glove box

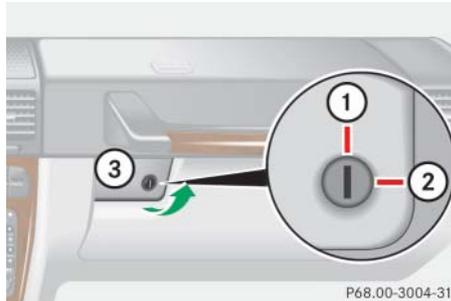

- ① Unlocked position
- ② Locked position
- ③ Handle

#### Opening the glove box

- ▶ Pull handle to open.

The glove box is illuminated with SmartKey in starter switch position **1** or **2** when opening the lid.

#### Closing the glove box

- ▶ Push lid up to close.




The glove box can be locked and unlocked with the mechanical key.



The glove box lid contains two cup holders.

**Storage compartments below the armrest**

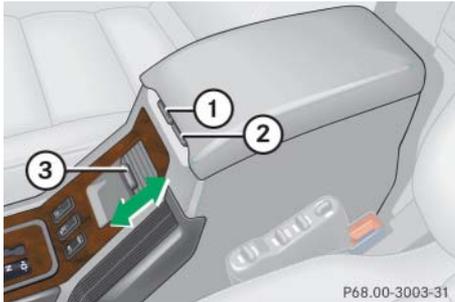

**Opening small compartment**

- ▶ Press button ① and lift armrest.

**Closing small compartment**

- ▶ Lower armrest until it engages in lock.



Located in the cover of the storage compartment is a storage area for small items such as checks.

**Opening large compartment**

- ▶ Press button ② and lift armrest.

**Closing large compartment**

- ▶ Lower armrest until it engages in lock.



In the large storage compartment there is a storage area for up to three CDs.

**Storage compartment in front of armrest**

**Opening**

- ▶ Slide cover ③ backward.

**Closing**

- ▶ Slide cover ③ forward.

#### Cup holders

##### Warning!



In order to help prevent spilling liquids on vehicle occupants and/or vehicle equipment, only use containers that fit into the cup holder. Use lids on open containers and do not fill containers to a height where the contents, especially hot liquids, could spill during braking, vehicle maneuvers, or in an accident. Liquids spilled on vehicle occupants may cause damage not covered by the Mercedes-Benz Limited Warranty.


When not in use, keep the cup holder closed. An open cup holder may cause injury to you or others when contacted during braking, vehicle maneuvers, or in an accident.

Keep in mind that objects placed in the cup holder may come loose during braking, vehicle maneuvers, or in an accident and be thrown around in the vehicle interior. Objects thrown around in the vehicle interior may cause an accident and/or serious personal injury.



The glove box lid also contains cup holders (> page 194).

#### Cup holder next to the armrest

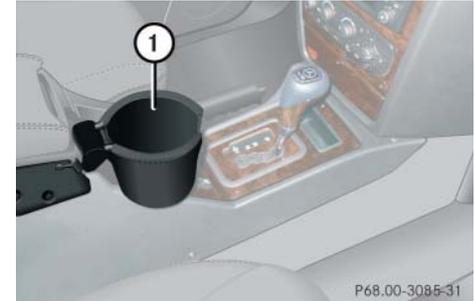

- ▶ Place cup holder bracket ① into recess.

If the cup holder is no longer in use, it can for example, be stored in the storage compartment below the armrest or in storage pouch on the door panel.

### Cup holder in front passenger footwell



- Swing bracket ① upwards until it clicks into place.



Fold the cup holder closed before moving the front passenger seat fully forward.

### Cup holder in rear passenger footwell



Before folding the seat backrest forward and the rear seat bench down, be sure that all containers in the rear cup holder are removed.

### Parcel net in front passenger footwell

A small convenience parcel net is located in the front passenger footwell. It is for small and light items, such as road maps, mail, etc.

#### Warning!



Do not place heavy or fragile objects, or objects having sharp edges in the parcel net.

In an accident, during hard braking or sudden maneuvers, they could be thrown around inside the vehicle and cause injury to vehicle occupants.



When large objects are stored in the parcel net, do not slide the seat fully forward, it could damage them.

### Useful features

#### Storage bags

Storage bags are located on the rear side of the front seats.

#### Warning!




Do not place heavy or fragile objects, or objects having sharp edges in the storage bags.

In an accident, during hard braking or sudden maneuvers, they could be thrown around inside the vehicle and cause injury to vehicle occupants.

#### Ashtrays

##### Center console ashtray

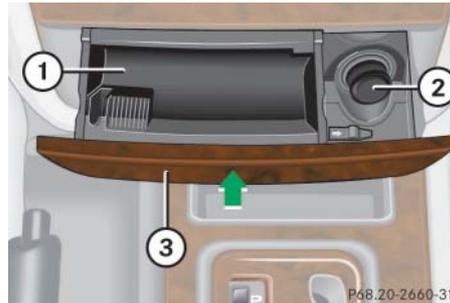

- ① Ashtray
- ② Cigarette lighter
- ③ Cover plate

##### Opening ashtray


- ▶ Briefly push the cover plate ③.  
The ashtray opens automatically.

##### Removing the ashtray insert

#### Warning!



Remove ashtray only with vehicle standing still. Turn off the engine and set the parking brake. Otherwise the vehicle might move as a result of unintended contact with the gear selector lever.

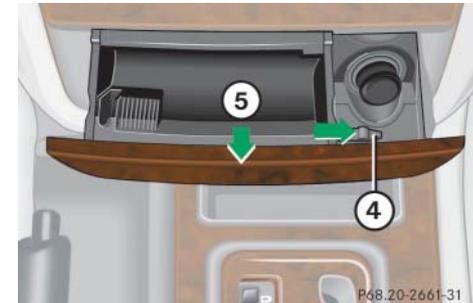

- ④ Sliding knob
- ⑤ Ashtray insert

- ▶ Press sliding knob ④ to the right.  
The insert will protrude a short distance.
- ▶ Remove insert ⑤ in direction of arrow.

### **Reinstalling the ashtray insert**

- ▶ Press the insert into the frame until it snaps into place.

### **Rear passenger compartment**



- ① Cover
- ② Catch
- ③ Ashtray insert

### **Opening ashtray**

- ▶ Pull at top of cover ①.

### **Removing the ashtray insert**


- ▶ Push down on catch ②.
- ▶ Pull out the ashtray insert ③.

### **Reinstalling the ashtray insert**

- ▶ Position the insert and close the cover.

### **Cigarette lighter**

The lighter socket can be used to accommodate electrical accessories up to a maximum of 180 W.

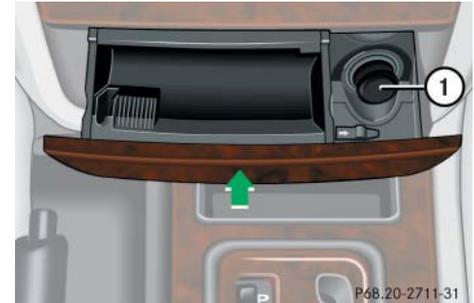

- ① Cigarette lighter

- ▶ Briefly touch the cover plate.  
The ashtray opens automatically.
- ▶ Switch on the ignition (▷ page 35).
- ▶ Push in cigarette lighter ①.  
The lighter will pop out automatically when hot.

#### Warning!



Never touch the heating element or sides of the lighter; they are extremely hot. Hold the knob only.

When leaving the vehicle, always remove the SmartKey from the starter switch, take it with you, and lock the vehicle. Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Unsupervised use of vehicle equipment may cause an accident and/or serious personal injury.

#### Electrical outlet



#### Electrical outlet in the rear passenger footwell



#### Electrical outlet on the left side (driver's side) of the cargo compartment

- ▶ Switch on the ignition (▷ page 35).
- ▶ Flip up cover and insert electrical plug (cigarette lighter type).



The electrical outlet can be used to accommodate electrical consumers (e.g. air pump, auxiliary lamps) up to a maximum of 180 W.

## Floormats

### Warning!



Whenever you are using floormats, make sure there is enough clearance and the floormats are securely fastened.

Floormats should always be securely fastened using the eyelets and retainer pins.

Before driving off, check that the floormats are securely in place and adjust them if necessary. A loose floormat could slip and hinder proper functioning of the pedals.

Do not place several floormats on top of each other as this may impair pedal movement.

## Telephone\*

### Warning!



Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or personal injury.

Radio transmitters, such as a portable telephone or a citizens band unit, should only be used inside the vehicle if they are connected to an antenna that is installed on the outside of the vehicle.

The external antenna must be approved by Mercedes-Benz. Please contact an authorized Mercedes-Benz Light Truck Center for information on the installation of an approved external antenna. Refer to the radio transmitter operation instructions regarding use of an external antenna.

### Warning!



Please do not forget that your primary responsibility is to drive the vehicle. A driver's attention to the road must always be his/her primary focus when driving. For your safety and the safety of others, we recommend that you pull over to a safe location and stop before placing or taking a telephone call.

If you choose to use the telephone<sup>1</sup> while driving, please use the hands-free device and only use the telephone when road, traffic and weather conditions permit. Some jurisdictions prohibit the driver from using a cellular telephone while driving a vehicle.

Only operate the COMAND (Cockpit Management and Data System)<sup>1</sup> if road, traffic and weather conditions permit.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

<sup>1</sup> Observe all legal requirements.

### Useful features

You can take and place telephone calls using the  and  buttons on the multifunction steering wheel. Use the control system for performing other telephone functions (▷ page 146).

See separate operating manual for information on how to operate the telephone.

### Tele Aid



The initial activation of the Tele Aid system may only be performed by completing the subscriber agreement and placing an acquaintance call using the SOS button. Failure to complete either of these steps will result in a system that is not activated. If the system is not activated, the indicator lamp in the SOS button stays on after switching on ignition and the message TELE AID EMERG. CALL - NOT ACTIVATED will be shown in the multifunction display for approx. 10 seconds.

If you have any questions regarding activation, please call the Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada).

### The Tele Aid system

(Telematic Alarm Identification on Demand)

The Tele Aid system consists of three types of response:

- Automatic and manual emergency
- Roadside Assistance and
- Information

The Tele Aid system is operational providing that the vehicle's battery is charged, properly connected, not damaged and cellular and GPS coverage is available.

The speaker volume of a Tele Aid call can be adjusted when using the volume control on the multifunction steering wheel. To raise, press button  and to lower, press button .

- ▶ To activate, press the SOS button, the Roadside Assistance button  or the Information button , depending on the type of response required.



The SOS button is located above the interior rear view mirror.

The Roadside Assistance button  and the Information button  are located below the center armrest cover.

Shortly after the completion of your acquaintance call, you will receive a user ID and password.

By visiting [www.mbusa.com](http://www.mbusa.com) and selecting “Tele Aid” (USA only), you will have access to account information, remote door unlock, profile and more.



The Tele Aid system utilizes the cellular network for communication and the GPS (Global Positioning System) satellites for vehicle location. If either of these signals are unavailable, the Tele Aid system may not function and if this occurs, assistance must be summoned by other means.

### System self-check

Initially, after switching on ignition, malfunctions are detected and indicated (the indicator lamps in the SOS button, the Roadside Assistance button  and the Information button  stay on longer than 10 seconds or do not come on). The message TELE AID - DRIVE TO WORKSHOP! appears for approx. ten seconds in the multifunction display.

### Warning!



If the indicator lamps in the SOS button, in the Roadside Assistance button and/or in the Information button do not come on during the system self-check or if any of these indicators remain illuminated constantly in red and/or the message TELE AID - DRIVE TO WORKSHOP is displayed in the multifunction display after the system self-check, a malfunction in the system has been detected.

If a malfunction is indicated as outlined above, the system may not operate as expected. Have the system checked at the nearest Mercedes-Benz Light Truck Center as soon as possible.

### Useful features

#### Emergency calls

An emergency call is initiated automatically:

- following an accident in which the emergency tensioning devices (ETDs) or airbags deploy
- if the anti-theft alarm or the tow-away alarm stays on for more than 20 seconds. See anti-theft alarm system (▷ page 88) and tow-away alarm (▷ page 89)

An emergency call can also be initiated manually by opening the cover next to the interior rear view mirror labeled SOS, then briefly pressing the button located under the cover. See below for instructions on initiating an emergency call manually.

Once the emergency call is in progress, the indicator lamp in the SOS button will begin to flash. The message EMERGENCY CALL - CONNECTING CALL appears in the multifunction display. When the connection is established, the message EMERGENCY CALL - CALL CONNECTED appears in the multifunction display. All information relevant to the emergency, such as the location of the vehicle (determined by the GPS satellite location system), vehicle model, identification number and color are generated.

A voice connection between the Response Center and the occupants of the vehicle will be established automatically soon after the emergency call has been initiated. When a voice connection is established the audio system mutes and the message TELE AID - EMERGENCY CALL ACTIVE appears in the multifunction display.

The Response Center will attempt to determine more precisely the nature of the accident provided they can speak to an occupant of the vehicle.

The Tele Aid system is available if:

- it has been activated and is operational. Activation requires a subscription for monitoring services, connection and cellular air time
- the relevant cellular phone network and GPS signals are available and pass the information on to the Response Center



Location of the vehicle on a map is only possible if the vehicle is able to receive signals from the GPS satellite network and pass the information on to the Response Center.

### Warning!



If the indicator lamp in the SOS button is illuminated continuously and there was no voice connection to the Response Center established, then the Tele Aid system could not initiate an emergency call (e.g. the relevant cellular phone network is not available). The message EMERGENCY CALL - CALL FAILED appears in the multifunction display for approx. 10 seconds.

Should this occur, assistance must be summoned by other means.

### Initiating an emergency call manually



- ① Cover
- ② SOS button

- ▶ Briefly press on cover ①.  
The cover opens.
- ▶ Press SOS button ② briefly.  
The indicator lamp in SOS button ② flashes until the emergency call is concluded.

- ▶ Wait for a voice connection to the Response Center.
- ▶ Close the cover ① after the emergency call is concluded.

### Warning!



If you feel at any way in jeopardy when in the vehicle (e.g. smoke or fire in the vehicle, vehicle in a dangerous road location), please do not wait for voice contact after you have pressed the emergency button. Carefully leave the vehicle and move to a safe location. The Response Center will automatically contact local emergency officials with the vehicle's approximate location if they receive an automatic SOS signal and cannot make voice contact with the vehicle occupants.

### Useful features

#### Roadside Assistance button

Located below the center armrest cover is the Roadside Assistance button .

- ▶ Press and hold the button (for longer than two seconds).

A call to a Mercedes-Benz Roadside Assistance dispatcher will be initiated. The button will flash while the call is in progress. The message `CONNECTING CALL` will appear in the multifunction display.

When the connection is established, the message `CALL CONNECTED` appears in the multifunction display. The Tele Aid system will transmit data generating the vehicle identification number, model, color and location (subject to availability of cellular and GPS signals).

A voice connection between the Roadside Assistance dispatcher and the occupants of the vehicle will be established. When a voice connection is established the audio

system mutes and the message `TELE AID - ROADSIDE ASSISTANCE CALL ACTIVE` appears in the multifunction display.

- ▶ Describe the nature of the need for assistance.

The Mercedes-Benz Roadside Assistance dispatcher will either dispatch a qualified Mercedes-Benz technician or arrange to tow your vehicle to the nearest Mercedes-Benz Light Truck Center. For services such as labor and/or towing, charges may apply. Refer to the Roadside Assistance manual for more information.

The following is only available in the USA:

- Sign and Drive services: Services such as jump start, a few gallons of fuel or the replacement of a flat tire with the vehicle spare tire are obtainable.



The indicator lamp in the Roadside Assistance button  remains illuminated in red for approx. ten seconds during the system self-check after switching on ignition (together with the SOS button and the Information button .

See system self-check (▷ page 203) when the indicator lamp does not come on in red or stays on longer than approximately ten seconds.

If the indicator lamp in the Roadside Assistance button  is illuminated continuously and there was no voice connection to the Response Center established, then the Tele Aid system could not initiate a Roadside Assistance call (e.g. the relevant cellular phone network was not available). The message `CALL FAILED` appears in the multifunction display.

Roadside Assistance calls can be terminated using the  button on the multifunction steering wheel.

### Information button

Located below the center armrest cover is the Information button .

- ▶ Press and hold the button (for longer than two seconds).

A call to the Customer Assistance Center will be initiated. The button will flash while the call is in progress. The message `INFO - CONNECTING CALL` will appear in the multifunction display.

When the connection is established, the message `INFO - CALL CONNECTED` appears in the multifunction display. The Tele Aid system will transmit data generating the vehicle identification number, model, color and location (subject to availability of cellular and GPS signals).

A voice connection between the Customer Assistance Center representative and the occupants of the vehicle will be established. When a voice connection is established the audio system mutes and the message `TELE AID - INFO CALL ACTIVE` appears in the multifunction display. Information regarding the operation of your vehicle, the nearest Mercedes-Benz Light Truck Center or Mercedes-Benz USA products and services is available to you.

For more details concerning the Tele Aid system, please visit [www.mbusa.com](http://www.mbusa.com) and use your ID and password (sent to you separately) to learn more (USA only).



The indicator lamp in the Information button  remains illuminated in red for approx. ten seconds during the system self-check after switching on ignition (together with the SOS button and the Roadside Assistance button .

See system self-check (▷ page 203) when the indicator lamp does not come on in red or stays on longer than approximately ten seconds.

If the indicator lamp in the Information button  is illuminated continuously and there was no voice connection to the Response Center established, then the Tele Aid system could not initiate an Information call (e.g. the relevant cellular phone network is not available). The message `INFO - CALL FAILED` appears in the multifunction display.

Information calls can be terminated using the  button on the multifunction steering wheel.

### Useful features



If the indicator lamps do not start flashing after pressing one of the buttons or remain illuminated (in red) at any time, the Tele Aid system has detected a fault or the service is not currently active, and may not initiate a call. Visit an Mercedes-Benz Light Truck Center and have the system checked or contact the Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada) as soon as possible.

#### Call priority

The Tele Aid system processes calls using the following priority.

- Automatic emergency – First priority
- Manual emergency – Second priority
- Roadside Assistance – Third priority
- Information – Fourth priority

Should a higher priority call be initiated while you are connected, an upgrade (alternating) tone will be heard and the appropriate indicator lamp will flash.

If certain information such as vehicle identification number or customer information is not available, the operator may need to retransmit.

During this time you will hear a beep and voice contact will be interrupted. Voice contact will resume once the retransmission is completed. Once a call is concluded, a beep will be heard and the appropriate indicator lamp will stop flashing. The COMAND system operation will resume.

If other service calls such as a Roadside Assistance call or Information call are active, an Emergency call is still possible. In this case, the Emergency call will take priority and override all other active calls.



The indicator lamp in the respective button flashes until the call is concluded. Calls can only be terminated by a Response Center or Customer Assistance Center representative, except Roadside Assistance and Information calls, which can also be terminated by pressing button  on the multifunction steering wheel.



If the indicator lamp continues to flash or the system does not reset, contact the Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada), or Mercedes-Benz Customer Assistance at 1-800-FOR-MERCEdes (1-800-367-6372) in the USA or Customer Service at 1-800-387-0100 in Canada.



When a Tele Aid call has been initiated, the COMAND system audio is muted and the selected mode (radio or CD) pauses. The optional cellular phone (if installed) switches off. If you must use this phone, the vehicle must be parked. Disconnect the coiled cord and place the call. The navigation system (if engaged) will continue to run. The display in the instrument cluster is available for use and spoken commands are only available by pressing the RPT button on the COMAND unit. A pop-up window will appear in the COMAND display to indicate that a Tele Aid call is in progress.

### Remote door unlock

In case you have locked your vehicle unintentionally (e.g. SmartKey inside vehicle), and the reserve key is not handy:

- ▶ Contact the Mercedes-Benz Response Center at 1-800-756-9018 (in the USA) or 1-888-923-8367 (in Canada).

You will be asked to provide your password which you provided when you completed the subscriber agreement.

- ▶ Then return to your vehicle and press the tailgate lock for minimum of 20 seconds until the SOS button is flashing.

The message **EMERGENCY CALL - CALL CONNECTED** appears in the multi-function display.

As an alternative, you may unlock the vehicle via Internet using the ID and password sent to you shortly after the completion of your acquaintance call.

### Useful features

The Response Center will then unlock your vehicle with the remote door unlocking feature.



The remote door unlock feature is available if the relevant cellular phone network is available.

The SOS button will flash and the message EMERGENCY CALL - CALL CONNECTED will appear in the multifunction display to indicate receipt of the door unlock command.

Once the vehicle is unlocked, a Response Center specialist will attempt to establish voice contact with the vehicle occupants.

If the tailgate lock was pressed for more than 20 seconds before door unlock authorization was received by the Response Center, you must wait 15 minutes before pressing the tailgate lock again.

### Stolen Vehicle Recovery services

In the event your vehicle was stolen:

- ▶ Report the incident to the police.  
The police will issue a numbered incident report.
- ▶ Pass this number on to the Mercedes-Benz Response Center along with your password issued to you when you subscribed to the service.


The Response Center will then attempt to covertly contact the vehicle's Tele Aid system. Once the vehicle is located, the Response Center will contact the local law enforcement and you. The vehicle's location will only be provided to law enforcement.

### Garage door opener

---

The built-in remote control is capable of operating up to three separately controlled devices, for example garage door openers, gate openers, or other devices compatible with HomeLink® or some other systems.

You can program the signal transmitter buttons.

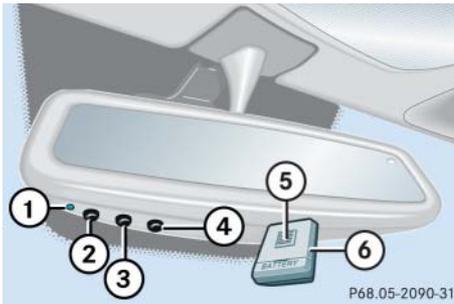

### Remote control integrated into the interior rear view mirror

- ① Indicator lamp
- ② ③ ④ Signal transmitter button
- ⑤ Hand-held transmitter button
- ⑥ Hand-held remote control transmitter (not part of the vehicle equipment)

### Warning!



Before programming the integrated remote control to a garage door opener or gate operator, make sure people and objects are out of the way of the device to prevent potential harm or damage. When programming a garage door opener, the door moves up or down. When programming a gate operator, the gate opens or closes.

Do not use the integrated remote control with any garage door opener that lacks safety stop and reverse features as required by U.S. federal safety standards (this includes any garage door opener model manufactured before April 1, 1982). A garage door that cannot detect an object - signaling the door to stop and reverse - does not meet current U.S. federal safety standards.



Certain types of garage door openers are incompatible with the integrated opener. If you should experience difficulties with programming the transmitter, contact an authorized Mercedes-Benz Light Truck Center, or call Mercedes-Benz Customer Assistance Center (in the USA only) at 1-800-FOR-MERCEdes, or Customer Service (in Canada) at 1-800-387-0100.

### Useful features



USA only:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any unauthorized modification to this device could void the user's authority to operate the equipment.



Canada only:

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

### Programming or reprogramming the integrated remote control

Step 1:

- ▶ Switch on the ignition (▷ page 35).

Step 2:

- ▶ If you have previously programmed an integrated signal transmitter button and wish to retain its programming, proceed to step 3. Otherwise, press and hold the two outer signal transmitter buttons ② and ④ and release them only when the indicator lamp ① begins to flash after approximately 20 seconds (do not hold the button for longer than 30 seconds). This procedure erases any previous settings for all three channels and initializes the memory. If you later wish to program a second and/or third hand-held transmitter to the remaining two signal transmitter buttons, do not repeat this step and begin directly with step 3.

## Step 3:

- ▶ Hold the end of the hand-held remote control transmitter ⑥ of the device you wish to train approximately 2 to 5 in (5 to 12 cm) away from the surface of the integrated remote control located on the overhead control panel, keeping the indicator lamp ① in view.

## Step 4:

- ▶ Using both hands, simultaneously press the hand-held transmitter button ⑤ and the desired integrated signal transmitter button (②, ③, or ④). Do not release the buttons until completing step 5.

The indicator lamp ① on the integrated remote control will flash, first slowly and then rapidly.



The indicator lamp ① flashes the first time the signal transmitter button is programmed. If this button has already been programmed, the indicator lamp will only start flashing after 20 seconds.

## Step 5:

- ▶ When the indicator lamp ① flashes rapidly, release both buttons.

## Step 6:

- ▶ Press and hold the just-trained integrated signal transmitter button and observe the indicator lamp ①.

If the indicator lamp ① stays on constantly, programming is complete and your device should activate when the integrated signal transmitter button is pressed and released.



If the indicator lamp ① blinks rapidly for about two seconds and then turns to a constant light, continue with programming steps 8 through 12 as your garage door opener may be equipped with the “rolling code” feature.

## Step 7:

- ▶ To program the remaining two buttons, repeat the steps above starting with step 3.

***Rolling code programming***

To train a garage door opener (or other rolling code devices) with the rolling code feature, follow these instructions after completing the “Programming” portion (steps 1 through 6) of this text. (A second person may make the following training procedures quicker and easier.)

## Step 8:

- ▶ Locate “training” button on the garage door opener motor head unit. >>

### Useful features

- ▷▷ Exact location and color of the button may vary by garage door opener brand. Depending on manufacturer, the “training” button may also be referred to as “learn” or “smart” button. If there is difficulty locating the transmitting button, refer to the garage door opener operator’s manual.

#### Step 9:

- ▶ Press “training” button on the garage door opener motor head unit.

The “training light” is activated.

You have 30 seconds to initiate the following step.

#### Step 10:

- ▶ Firmly press, hold for two seconds and release the programmed integrated signal transmitter button (②, ③, or ④).

#### Step 11:

- ▶ Press, hold for two seconds and release same button a second time to complete the training process.

Some garage door openers (or other rolling code equipped devices) may require you to perform this procedure a third time to complete the training.

#### Step 12:

- ▶ Confirm the garage door operation by pressing the programmed integrated signal transmitter button (②, ③, or ④).

#### Step 13:

- ▶ To program the remaining two buttons, repeat the steps above starting with step 3.

### ***Gate operator/Canadian programming***

Canadian radio-frequency laws require transmitter signals to “time-out” (or quit) after several seconds of transmission which may not be long enough for the integrated signal transmitter to pick up the signal during programming. Similar to this Canadian law, some U.S. gate operators are designed to “time-out” in the same manner.

If you live in Canada or if you are having difficulties programming a gate operator (regardless of where you live) by using the programming procedures, replace step 4 with the following:

#### Step 4:

- ▶ Continue to press and hold the integrated signal transmitter button (②, ③, or ④) while you press and re-press (“cycle”) your hand-held remote control transmitter ⑥ every two seconds until the frequency signal has been learned. Upon successful training, the indicator lamp ① will flash slowly and then rapidly after several seconds.
- ▶ Proceed with programming step 5 and step 6 to complete.

### Operation of integrated remote control

- ▶ Switch on the ignition (▷ page 35).
- ▶ Select and press the appropriate integrated signal transmitter button (②, ③, or ④) to activate the remote controlled device.

The integrated remote control transmitter continues to send the signal as long as the button is pressed – up to 20 seconds.

### Erasing the integrated remote control memory

- ▶ Switch on the ignition (▷ page 35).
- ▶ Simultaneously hold down the signal transmitter buttons ② and ④, for approximately 20 seconds, until the indicator lamp ① blinks rapidly. Do not hold for longer than 30 seconds.

The codes of all three channels are erased.



If you sell your vehicle, erase the codes of all three channels.

### Reprogramming a single integrated signal transmitter button


To program a device using a signal transmitter button previously trained, follow these steps:

- ▶ Press and hold the desired signal transmitter button (②, ③, or ④). Do not release the button.
- ▶ The indicator lamp will begin to flash after 20 seconds. Without releasing the integrated signal transmitter button, proceed with programming starting with step 3.

### Heated steering wheel

The steering wheel heater warms up the leather area of the steering wheel.

The lever with the heated steering wheel switch is on the lower left-hand side of the steering wheel.

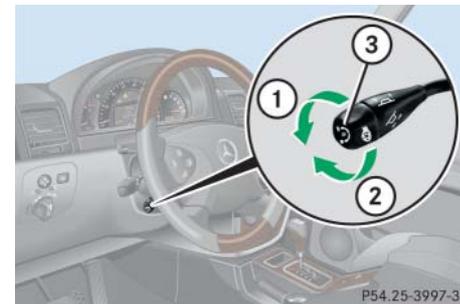

- ① Switching on
- ② Switching off
- ③ Indicator lamp

### Useful features

#### Switching on

- ▶ Switch on the ignition (▷ page 35).  
All lamps in the instrument cluster come on.
- ▶ Turn switch at the tip of lever in direction of arrow ①.

The steering wheel is heated. Indicator lamp ③ comes on.



The steering wheel heating is temporarily suspended while indicator lamp ③ remains on when

- the temperature of the vehicle interior is above 86°F (30°C)
- the temperature of the steering wheel is above 95°F (35°C)

When these conditions do not apply anymore, steering wheel heating continues.

#### Switching off

- ▶ Turn switch at the tip of lever in direction of arrow ②.

The steering wheel heater is turned off. Indicator lamp ③ goes out.



Indicator lamp ③ flashes or switches off in case of

- power surge or undervoltage
- steering wheel heating malfunction



The steering wheel heating switches off automatically when you remove the SmartKey from the starter switch.

The first 1000 miles (1500 km)

Driving instructions

At the gas station

Engine compartment

Battery

Tires and wheels

Winter driving

Maintenance

Vehicle care



### The first 1000 miles (1500 km)

In the “Operation” section you will find detailed information on operating, maintaining and caring for your vehicle.

The more cautiously you treat your vehicle during the break-in period, the more satisfied you will be with its performance later on.

- Drive your vehicle during the first 1000 miles (1500 km) at varying but moderate vehicle and engine speeds.
- During this period, avoid heavy loads (full throttle driving) and excessive engine speeds (no more than  $\frac{2}{3}$  of maximum rpm in each gear).
- Avoid accelerating by kick-down.
- Do not attempt to slow the vehicle down by shifting to a lower gear using the gear selector lever.
- Select positions **3**, **2**, or **1** only when driving at moderate speeds (for hill driving).

After 1000 miles (1500 km) you may gradually increase vehicle and engine speeds to the permissible maximum.



Additional instructions for AMG vehicles:

- During the first 1000 miles (1500 km), do not exceed a speed of 85 mph (140 km/h).
- During this period, avoid engine speeds above 4500 rpm in each gear.



#### G 55 AMG:

For better protection of the front and rear differential, the oil must be changed after a break-in period of 1900 miles (3000 km).

Changing oil in the front and rear differential increases the service life and helps reduce noise from the differential locks.

See Maintenance Booklet for additional information and Factory Approved Service Products pamphlet for information on the approved service product required to perform the front and rear axle oil change.

All of the above instructions, as may apply to your vehicle type, also apply when driving the first 1000 miles (1500 km) after the engine, the transfer case, the front differential or the rear differential has been replaced.



Always obey applicable speed limits.

### Driving instructions

#### Drive sensibly – save fuel

Fuel consumption, to a great extent, depends on driving habits and operating conditions.

To save fuel you should:

- Keep tires at the recommended inflation pressures.
- Remove unnecessary loads.
- Allow engine to warm up under low load use.
- Avoid frequent acceleration and deceleration.
- Have all maintenance work performed at the intervals specified in the Maintenance Booklet and as required by the maintenance service display. Contact an authorized Mercedes-Benz Light Truck Center.

Fuel consumption is also increased by driving in cold weather, in stop-and-go traffic, on short trips and in hilly area.

#### Drinking and driving

##### Warning!



Drinking and driving and/or taking drugs and driving are very dangerous combinations. Even a small amount of alcohol or drugs can affect your reflexes, perceptions and judgment.

The possibility of a serious or even fatal accident are greatly increased when you drink or take drugs and drive.

Do not drink or take drugs and drive or allow anyone to drive who has been drinking or taking drugs.

#### Pedals

##### Warning!



Keep driver's foot area clear at all times. Objects stored in this area may impair pedal movement.

## Power assistance

### Warning!



With the engine not running, there is no power assistance for the brake and steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle.

## Brakes

### Warning!



After driving in heavy rain for some time without applying the brakes or through water deep enough to wet brake components or salty road conditions, the first braking action may be somewhat reduced and increased pedal pressure may be necessary to obtain expected braking effect. Maintain a safe distance from vehicles in front.

Resting your foot on the brake pedal will cause excessive and premature wear of the brake pads.

It can also result in the brakes overheating, thereby significantly reducing their effectiveness. It may not be possible to stop the vehicle in sufficient time to avoid an accident.

To help prevent brake disk corrosion after driving on wet road surfaces (particularly salted roads), it is advisable to brake the vehicle with considerable force prior to parking. The heat generated serves to dry the brakes.

If your brake system is normally only subjected to moderate loads, you should occasionally test the effectiveness of the brakes by applying above-normal braking pressure at higher speeds. This will also enhance the grip of the brake pads.



Be very careful not to endanger other road users when you apply the brakes.

Refer to the description of the Brake Assist System (BAS) (▷ page 82).

If the parking brake is released and the brake warning lamp in the instrument cluster stays on and there is no audible warning (EBB), the brake fluid level in the reservoir is too low.

Brake pad wear or a leak in the system may be the reason for low brake fluid in the reservoir.

Have the brake system inspected immediately. Contact an authorized Mercedes-Benz Light Truck Center.

All checks and service work on the brake system should be carried out by qualified technicians only. Contact an authorized Mercedes-Benz Light Truck Center.

Install only brake pads and brake fluid recommended by Mercedes-Benz.

## Driving instructions

### Warning!



If other than recommended brake pads are installed, or other than recommended brake fluid is used, the braking properties of the vehicle can be degraded to an extent that safe braking is substantially impaired. This could result in an accident.



When driving down long and steep grades, relieve the load on the brakes by selecting gear range **3**, **2**, or **1** on the automatic transmission to use the engine's braking power (▷ page 154). This helps prevent overheating of the brakes and reduces brake pad wear.

After hard braking, it is advisable to drive on for some time, rather than immediately park, so the air stream will cool down the brakes faster.

### Driving off

Apply the brakes to test them briefly after driving off. Perform this procedure only when the road is clear of other traffic.

Warm up the engine smoothly. Do not place full load on the engine until the operating temperature has been reached.

When starting off on a slippery surface, do not allow a drive wheel to spin for an extended period with the ESP switched off. Doing so may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.

To ensure sufficient traction during off-road driving, activate differential locks as needed (▷ page 161).

### Parking

### Warning!



Do not park this vehicle in areas where combustible materials such as grass, hay or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

To reduce the risk of personal injury as a result of vehicle movement, before turning off the engine and leaving the vehicle always:

- Keep right foot on brake pedal.
- Pull the parking brake lever up as many notches as possible.
- Move the selector lever to position **P**.
- Slowly release brake pedal.
- When parked on an incline, turn front wheel towards the road curb.

The treadwear indicator appears as a solid band across the tread.

- Turn the SmartKey in the starter switch to position **0** and remove the SmartKey from the starter switch.
- Take the SmartKey and lock vehicle when leaving.



Set the parking brake whenever parking or leaving the vehicle. In addition, move gear selector lever to position **P**. When parking on hills, turn front wheel towards the road curb.

## Tires

### Warning!



If you feel a sudden significant vibration or ride disturbance, or you suspect that possible damage to your vehicle has occurred, you should turn on the hazard warning flashers, carefully slow down, and drive with caution to an area which is a safe distance from the road.

Inspect the tires and the vehicle underbody for possible damage. If the vehicle or tires appear unsafe, have it towed to the nearest Mercedes-Benz Light Truck Center or tire dealer for repairs.

Treadwear indicators (TWI) are required by law. These indicators are located in six places on the tread circumference and become visible at a tread depth of approximately  $\frac{1}{16}$  in (1.6 mm), at which point the tire is considered worn and should be replaced.

### Warning!



Although the applicable federal motor vehicle safety laws consider a tire to be worn when the treadwear indicators (TWI) become visible at approximately  $\frac{1}{16}$  in (1.6 mm), we recommend that you do not allow your tires to wear down to that level. As tread depth approaches  $\frac{1}{8}$  in (3.0 mm), the adhesion properties on a wet road are sharply reduced.

Depending upon the weather and/or road surface (conditions), the tire traction varies widely.

Specified tire inflation pressures must be maintained. This applies particularly if the tires are subject to high loads (e.g. high speeds, heavy loads, high ambient temperatures).

### Driving instructions

#### Warning!



Do not drive with a flat tire. A flat tire affects the ability to steer or brake the vehicle. You may lose control of the vehicle. Continued driving with a flat tire or driving at high speed with a flat tire will cause excessive heat build-up and possibly a fire.

#### Hydroplaning

Depending on the depth of the water layer on the road, hydroplaning may occur even at low speeds and with new tires. Reduce vehicle speed, avoid track grooves in the road and apply brakes cautiously in the rain.

#### Tire traction

The safe speed on a wet, snow covered or icy road is always lower than on a dry road.

You should pay particular attention to the condition of the road whenever the outside temperatures are close to the freezing point.

#### Warning!



If ice has formed on the road, tire traction will be substantially reduced. Under such weather conditions, drive, steer and brake with extreme caution.

Mercedes-Benz recommends winter tires (▷ page 278) with a minimum tread depth of approximately  $\frac{1}{6}$  in (4 mm) for the winter season for all four wheels to ensure normal balanced handling characteristics. On packed snow, they can reduce your stopping distance as compared with summer tires.

Stopping distance, however, is still considerably greater than when the road is not covered with snow or ice. Exercise appropriate caution.



Avoid spinning of a drive wheel. This may cause serious damage to the drivetrain which is not covered by the Mercedes-Benz Limited Warranty.

## Tire speed rating

Regardless of the tire speed rating, local speed limits should be obeyed. Use prudent driving speeds appropriate to prevailing conditions.

### Warning!



Even when permitted by law, never operate a vehicle at speeds greater than the maximum speed rating of the tires.

Exceeding the maximum speed for which tires are rated can lead to sudden tire failure, causing loss of vehicle control and possibly resulting in an accident and/or serious injury and possible death, for you and for others.

Your vehicle is factory equipped with “V”-rated tires, which have a speed rating of 149 mph (240 km/h).

An electronic speed limiter prevents your vehicle from exceeding a speed of 130 mph (210 km/h).



For information on speed rating for winter tires, see “Winter driving” (▷ page 278).

For additional general information on tire speed markings on tire sidewall, see “Tire speed rating” (▷ page 275).

## Winter driving instructions

The most important rule for slippery or icy roads is to drive sensibly and to avoid abrupt acceleration, braking and steering maneuvers. Do not use the cruise control system under such conditions.

When the vehicle is in danger of skidding, move gear selector lever to position **N**. Try to keep the vehicle under control by corrective steering action.



For information on driving with snow chains, see “Snow chains” (▷ page 279).

### Warning!



On slippery road surfaces, never downshift in order to obtain braking action. This could result in drive wheel slip and reduced vehicle control. Your vehicle’s ABS will not prevent this type of control loss.



### Driving instructions

- ▷▷ Do not engage the transfer case in position **LOW** when driving on ice or packed snow. At speeds below 18 mph (30 km/h) vehicle steering is adversely affected by the **LOW RANGE – ABS** (▷ page 81).

Road salts and chemicals can adversely affect braking efficiency. Increased pedal force may become necessary to produce the normal brake effect.

Depressing the brake pedal periodically when traveling at length on salt-strewn roads can bring road-salt-impaired braking efficiency back to normal.

If the vehicle is parked after being driven on salt-treated roads, the braking efficiency should be tested as soon as possible after driving is resumed.

#### Warning!



Make sure not to endanger any other road users when carrying out these braking maneuvers.

#### Warning!



If the vehicle becomes stuck in snow, make sure snow is kept clear of the exhaust pipe and from around the vehicle with the engine running. Otherwise, deadly carbon monoxide (CO) gases may enter vehicle interior resulting in unconsciousness and death.

To assure sufficient fresh air ventilation, open a window slightly on the side of the vehicle not facing the wind.

#### Warning!



The outside temperature indicator is not designed to serve as an ice-warning device and is therefore unsuitable for that purpose. Indicated temperatures just above the freezing point do not guarantee that the road surface is free of ice.

For more information, see “Winter driving” (▷ page 278).

### Standing water



Do not drive through flooded areas or water of unknown depth. Before driving through water, determine its depth. Never accelerate before driving into water. The bow wave could force water into the engine and auxiliary equipment, thus damaging them.

If you must drive through standing water, drive slowly to prevent water from entering the passenger compartment or the engine compartment. Water in these areas could cause damage to electrical components or wiring of the engine or transmission, or could result in water being ingested by the engine through the air intake, causing severe internal engine damage. Any such damage is not covered by the Mercedes-Benz Limited Warranty.

For more information, see “Driving through water” (▷ page 231).

## Passenger compartment

### Warning!



Always fasten items being carried as securely as possible.

In an accident, during hard braking or sudden maneuvers, loose items will be thrown around inside the vehicle, and cause injury to vehicle occupants unless the items are securely fastened in the vehicle.

The rear cargo compartment is the preferred place to carry objects. Always use partition net when transporting cargo. Partition net cannot secure hard or heavy objects. Always fasten items being carried as securely as possible using the cargo tie-down rings in the cargo compartment floor and fastening material.

Do not load items on the roof. It may cause instability during some maneuvers which could result in an accident. This vehicle is not intended to carry items on its roof. Thus roof rails and roof mounted ski or bike holders must not be used.

## Off-road driving

### Warning!



Do not load items on the roof. It may cause instability during some maneuvers which could result in an accident.

### Warning!



Drive slowly in unknown terrain. This will make it easier to recognize unexpected obstacles and avoid damage to the vehicle.

To help avoid the vehicle rolling over, never turn it around on steep inclines. If the vehicle cannot complete the attempted climb, back it down in reverse gear.

Do not drive along the side of a slope (danger of vehicle rollover). If in doing so the vehicle begins to show a tendency to roll, immediately steer into a line of gravity (straight up or downhill).



### Driving instructions

▷▷ Never let the vehicle roll backwards in idle. You may lose control of the vehicle if you use only the brake.

Sand, dirt, mud and other material having friction property can cause exceptional wear and tear as well as brake failure.

Have the brakes checked for dirt build-up and cleaned. There is otherwise a risk that full braking power may not be available in an emergency.

Read this chapter carefully before you begin off-road travel.

Familiarize yourself with the vehicle characteristics and gear changing before you attempt any difficult terrain off-road driving. We recommend that you start out with easy off-road travel.

#### Special driving features for off-road driving

The following driving features are available for specific kind of operation:

- ABS (▷ page 80)
- ESP (▷ page 84)
- 4-ETS (▷ page 83)
- Differential lock (▷ page 159)
- Transfer case (▷ page 157)

#### Off-road driving rules

- ▶ Engage the transfer case in position **LOW** before driving under off-road conditions (▷ page 157).
- ▶ If necessary activate differential locks (▷ page 161).

The ABS, BAS and ESP are switched off automatically when the differential locks are activated.

- ▶ Fasten items being carried as securely as possible (▷ page 192).



Whenever driving in off-road mode, we recommend:

- Keeping doors, tailgate, windows and tilt/sliding sunroof closed.
- Switching cruise control off.



Observe the following during off-road driving:

- Adjust vehicle speed to condition of terrain. The more uneven, rutty, and steeper the terrain, the lower the speed should be. Drive through water slowly at an even speed, avoiding a bow wave.
- Be especially careful when driving in unknown territory. It may be necessary to get out of the vehicle and scout the path you intend to take.
- Watch out for obstacles, such as rocks, holes, tree stumps, and ruts.

- Avoid excessive engine speeds – drive at moderate engine speeds (max. 3000 rpm).
- Before driving through water, determine its depth.
- Do not stop vehicle while immersed in water, and do not shut off the engine.
- In sandy soil, drive at a steady speed as allowed by conditions. This helps overcome the vehicle rolling resistance and reduces the likelihood of the vehicle sinking into the ground.
- Do not initiate jumps with the vehicle. It interrupts the forward momentum of the vehicle.
- Always drive on slopes with the engine running and the vehicle in gear.
- Inspect the vehicle for possible damage after each off-road trip.

### Checklist before off-road driving

#### *Engine oil level*

- Check the engine oil level (> page 244). The display ENGINE OIL LEVEL - OK must appear in the multi-function display.

Only then can the vehicle obtain a trouble-free oil supply, even on steep gradients.

#### *Tires*

- Check the tread depth and maintain specified tire inflation pressure (a placard with the recommended tire inflation pressures is located on the driver's door B-pillar (> page 255)).
- Check tires for possible damage and remove foreign objects.
- Replace missing valve caps.

#### *Rims*


- Dented or bent rims can cause tire inflation pressure loss and damage the tire beads. For this reason, check and, if necessary, change rims before driving off-road.

#### *Vehicle tool kit*

- Check if the vehicle jack is functional.
- In all cases take the vehicle tool kit, a strong tow rope, a shovel, and a small plank (to put under the vehicle jack on sandy soil) with you.

## Driving instructions

### Driving in steep terrain

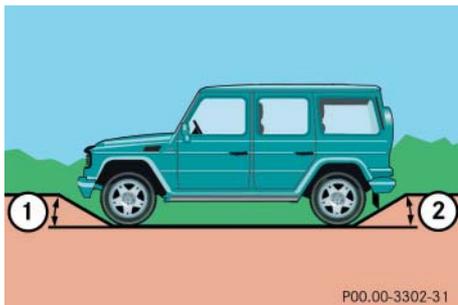

#### Slope angle

- ① 27°
- ② 36°
- Comply with the warnings (▷ page 227) and rules for off-road driving (▷ page 228).

- Driving on embankments, slopes and other steep inclines should only be done straight up or downhill, i.e. in the line of gravity. Maximum vehicle climbing ability is a 80% grade which is equivalent to a slope angle of approximately 38 degrees. Keep in mind that the climbing ability of the vehicle depends on terrain conditions.
- Select gear range **2** or **1** on the automatic transmission (▷ page 154).
- Drive slowly.
- Utilize the engine's braking power when descending a slope, observe the engine speed (do not overrev the engine). Apply the brake as needed.
- Check the brakes after a lengthy down-grade drive.

### *Traction in steep terrain*

Be easy on the accelerator and watch for continuous wheel traction when driving in steep terrain.



The 4-ETS helps greatly when starting out on a steep incline when the front wheels have then the tendency to slip due to the weight shifting away the front axle. The 4-ETS recognizes the situation and limits the torque for the front wheels by braking them. Simultaneously the torque for the rear wheels is provided.

**Driving across a hilltop**

Decelerate just ahead of a hilltop (do not select gear range **N**), to prevent the vehicle from speeding up too much after climbing a hill.

Use the momentum of the vehicle to drive across the hilltop.

After climbing a hill, driving in this manner prevents the vehicle from:

- losing ground contact when cresting hills
- losing its forward momentum
- speeding up too much after climbing the hill

**Driving downhill**

- Select gear range **1** on the automatic transmission (▷ page 154).
- Drive downhill observing the same rules as driving uphill (▷ page 230).




Only apply the service brake if the vehicle is traveling straight downhill, i.e. in the line of gravity.



The special LOW RANGE – ABS setting allows for precise and brief (cyclical) blocking of the front wheels, permitting them to dig into loose ground.

Remember that, when stopped, the front wheels slide across a surface and thus lose their ability to steer the vehicle.

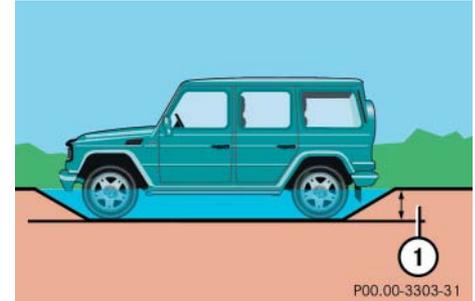**Driving through water**

① 19 in (48 cm)

- Before driving through water, determine its depth.

It should not be deeper than approximately 19 in (48 cm).

Make sure you check the water bed. The ground surface may not be firm which may result in deeper waters than expected when driving the vehicle through it.

### Driving instructions

- Comply with the warnings (▷ page 227) and rules for off-road driving (▷ page 228).
- Switch off the exterior lamps as well as the climate control.
- Select gear range **2** or **1** on the automatic transmission (▷ page 154).
- Enter the water only at a shallow spot, driving at walking speed.



Never accelerate before driving into the water. The bow wave could force water into the engine and auxiliary equipment, thus damaging them.

- Do not stop vehicle while immersed in water, and do not shut off the engine.  
There is a very high level of driving resistance in water. The surface is slippery and may not be firm, making pulling away in water difficult and dangerous.
- Clean mud off the tire tread after driving through water.
- To dry the brakes, apply pressure to the brake pedal several times after leaving the water.

### Crossing obstacles



If possible, use the assistance of a second person outside the vehicle to scout the path you intend to take and check for adequate ground clearance when you cross obstacles with your vehicle. The person assisting you outside the vehicle should always be a safe distance away from the vehicle and positioned so that he or she cannot get hurt in case of any unexpected vehicle movement.

After off-road driving or crossing obstacles, inspect vehicle for any damage, especially vehicle underbody and suspension components. Failure to do so can adversely affect the vehicle's future performance, including increased chance of an accident.

- Check the vehicle clearance before crossing obstacles.
- Comply with the warnings (> page 227) and rules for off-road driving (> page 228).
- Select gear range **1** on the automatic transmission (> page 154).
- Cross obstacles (e.g. tree stumps or big rocks) very slowly by aiming one of the front wheels at the center of the obstacle, and repeat same with the rear wheel.



Special attention is needed when you cross obstacles on a steep incline.

The vehicle could slide sideways as a result of its possible slanted position which in turn may result in the vehicle tipping or rolling over.

### Ruts



A number of off-road tracks or other by-roads have deep ruts. If the vehicle does not have enough ground clearance:

- it could be damaged
- the underside of the vehicle may come down on a surface and remain stuck

After off-road driving or crossing obstacles, inspect vehicle for any damage, especially vehicle underbody and suspension components. Failure to do so can adversely affect the vehicle's future performance, including increased chance of an accident.

- Check the vehicle clearance before driving in ruts.
- Comply with the warnings (> page 227) and rules for off-road driving (> page 228).
- Select gear range **1** on the automatic transmission (> page 154).
- Drive slowly next to the ruts rather than through them if at all possible.

## Driving instructions

### Returning from off-road driving

#### Warning!



Never drive on pavement with activated differential locks. Engaged front axle differential locks limits ability to move around curves.

If you feel a sudden significant vibration or ride disturbance, or you suspect that possible damage to your vehicle has occurred, you should turn on the hazard warning flashers, carefully slow down, and drive with caution to an area which is a safe distance from the roadway.

Inspect the tires and under the vehicle for possible damage. If the vehicle or tires appear unsafe, have it towed to the nearest Mercedes-Benz Light Truck Center or tire dealer for repairs.

Damage to the vehicle negatively influences driving comfort and poses the risk of accident to you and other drivers.

Off-road driving increases strain on the vehicle.

We recommend that you inspect the vehicle for possible damage after each off-road trip. Recognizing any damage and a subsequent timely repair reduces the chance of a possible breakdown or accident later on.

Proceed as follows:

- Switch the transfer case in position **HIGH** (▷ page 157).
- Disengage differential locks (▷ page 162).

- Remove excessive dirt from tires, wheels, wheel housings, and underbody.

For instance, after driving in mud, clean the radiator, chassis, engine, brakes, and wheels from extreme dirt using a strong jet of water.

- Inspect frame, oil pan, brake hoses, etc., as well as vehicle underbody for possible damage.
- Check tires for possible damage and remove foreign objects. Clean all exterior lamps and conduct a brake test.

- Clean all exterior lamps and check them for possible damage.
- Check for brush or branches caught in the underbody.

They could increase the possibility of a fire, as well as cut fuel and/or brake lines, puncture rubber bellows of the axles or drive shafts.

- After continued operation in mud, sand, water or other dirty conditions, clean the brake discs, wheels, brake pads, and check and clean axle joints.
- Conduct a brake test.

### Control and operation of radio transmitters

#### COMAND, radio and telephone\*

##### Warning!



Do not forget that your primary responsibility is to drive the vehicle safely. Only operate the COMAND, radio or telephone<sup>1</sup> if road, traffic and weather conditions permit.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

<sup>1</sup> Observe all legal requirements.

### Telephones and two-way radios

##### Warning!



Never operate radio transmitters equipped with a built-in or attached antenna (i.e. without being connected to an external antenna) from inside the vehicle while the engine is running. Doing so could lead to a malfunction of the vehicle's electronic system, possibly resulting in an accident and/or personal injury.

Radio transmitters, such as a portable telephone or citizens band unit should only be used inside the vehicle if they are connected to an antenna that is installed on the outside of the vehicle.

Refer to the radio transmitter operation instructions regarding use of an external antenna.

### Driving instructions

#### Driving abroad

---

Abroad, there is an extensive Mercedes-Benz service network at your disposal. If you plan to drive into areas which are not listed in the index of a Mercedes-Benz Light Truck Center directory, you should request pertinent information from an authorized Mercedes-Benz Light Truck Center.

#### Catalytic converter

---

Your Mercedes-Benz is equipped with monolithic-type catalytic converters, an important element in conjunction with the oxygen sensors to achieve substantial control of the pollutants in the exhaust emissions. Keep your vehicle in proper operating condition by following our recommended maintenance instructions as outlined in your Maintenance Booklet.



To prevent damage to the catalytic converters, use only premium unleaded gasoline in this vehicle.

Any noticeable irregularities in engine operation should be repaired promptly. Otherwise, excessive unburned fuel may reach the catalytic converter, causing it to overheat and potentially start a fire.

**Warning!**

As with any vehicle, do not idle, park or operate this vehicle in areas where combustible materials such as grass, hay or leaves can come into contact with the hot exhaust system, as these materials could be ignited and cause a vehicle fire.

**Emission control**

Certain engine systems serve to keep the toxic components of the exhaust gases within permissible legal limits.

These systems, of course, will function properly only when maintained strictly according to factory specifications. Any adjustments on the engine should, therefore, be carried out only by qualified Mercedes-Benz Light Truck Center authorized technicians. Engine adjustments should not be altered in any way. Moreover, the specified service jobs must be carried out regularly according to Mercedes-Benz servicing requirements. For details refer to the Maintenance Booklet.

**Warning!**

Inhalation of exhaust gas is hazardous to your health. All exhaust gas contains carbon monoxide, and inhaling it can cause unconsciousness and lead to death.

Do not run the engine in confined areas (such as a garage) which are not properly ventilated. If you think that exhaust gas fumes are entering the vehicle while driving, have the cause determined and corrected immediately. If you must drive under these conditions, drive only with at least one window fully open at all times.

### Driving instructions

#### Coolant temperature

During severe operating conditions, e.g. stop-and-go city traffic, the coolant temperature may rise to approx. 248°F (120°C).

The engine should not be operated with the coolant temperature above 248°F (120°C). Doing so may cause serious engine damage which is not covered by the Mercedes-Benz Limited Warranty.



Excessive coolant temperatures trigger a warning message in the multifunction display (▷ page 308).

#### Warning!



- Driving when your engine is badly overheated can cause some fluids which may have leaked into the engine compartment to catch fire. You could be seriously burned.
- Steam from an overheated engine can cause serious burns and can occur just by opening the hood. Stay away from the engine if you see or hear steam coming from it.

Turn off the engine, get out of the vehicle and do not stand near the vehicle until the engine has cooled down.

At the gas station

▼ At the gas station

Refueling

**Warning!**




Gasoline is highly flammable and poisonous. It burns violently and can cause serious injury. Whenever you are around gasoline, avoid inhaling fumes and skin contact, extinguish all smoking materials. Never allow sparks, flame or smoking materials near gasoline!

Failure to remove the fuel cap slowly could result in personal injury.

The fuel filler flap is located on the right-hand side of the vehicle towards the rear.

Locking/unlocking the vehicle with the remote control automatically locks/unlocks the fuel filler flap.

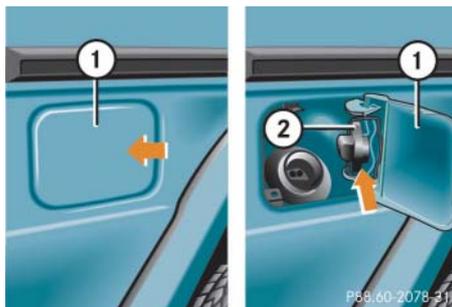

- ① Fuel filler flap (including a placard on the inner side with supplemental tire inflation pressure information)
  - ② Fuel cap
- ▶ Turn off the engine.
  - ▶ Remove the SmartKey from the starter switch.
  - ▶ Open fuel filler flap ① by pushing at the point indicated by the arrow.
  - ▶ Turn fuel cap ② to the left and hold on to it until possible pressure is released.
  - ▶ Take off fuel cap ② and set it in the recess on fuel filler flap ①.

- ▶ To prevent fuel vapors from escaping into open air, fully insert filler nozzle unit.
- ▶ Only fill your tank until the filler nozzle unit cuts out – **do not top up or overfill.**

**Warning!**



Overfilling of the fuel tank may create pressure in the system which could cause a gas discharge. This could cause the gas to spray back out when removing the fuel pump nozzle, which could cause personal injury.

- ▶ Replace fuel cap ② by turning it clockwise until it audibly engages.
- ▶ Close fuel filler flap ①.



### At the gas station



The fuel filler cap is tethered to the fuel filler neck. Do not drop the cap. It could damage the vehicle paint finish.

When refueling the vehicle, make certain that no gasoline comes into contact with plastic tail lamp to prevent damaging the lens.



Use only premium unleaded gasoline with a minimum Posted Octane Rating of 91 (average of 96 RON/86 MON). Information on gasoline quality can normally be found on the fuel pump.

More information on gasoline can be found in the Factory Approved Service Products pamphlet.



Leaving the engine running and the fuel cap open can cause the  malfunction indicator lamp (USA only) or the  malfunction indicator lamp (Canada only) to illuminate.


See also “Practical hints” section (▷ page 294).

### Check regularly and before a long trip



#### G 500

- ① Coolant
- ② Brake fluid

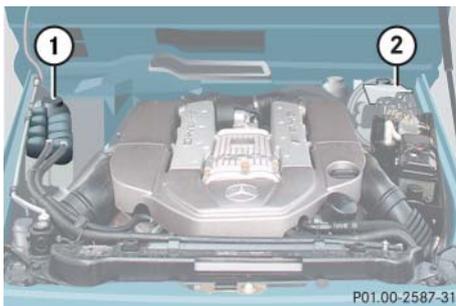**G 55 AMG**

- ① Coolant
- ② Brake fluid



Opening the hood, see (▷ page 242).

**Coolant**

For normal replenishing, use water (potable water quality). For more information, see “Coolant level” (▷ page 248) and see “Fuels, coolants, lubricants, etc.” (▷ page 376).

**Brake fluid**

If you find that the brake fluid in the brake fluid reservoir has fallen to the minimum mark or below, have the brake system checked for brake pad thickness and leaks immediately. Notify an authorized Mercedes-Benz Light Truck Center immediately. Do not add brake fluid as this will not solve the problem. For more information, see “Practical hints” (▷ page 292).

**Engine oil level**

For more information on engine oil, see “Engine oil” (▷ page 243).

**Tire inflation pressure**

For more information, see “Checking tire inflation pressure” (▷ page 261).

**Vehicle lighting**

Check function and cleanliness. For information on replacing light bulbs, see “Replacing bulbs” (▷ page 335).

For more information, see “Exterior lamp switch” (▷ page 110).

**Windshield/rear window washer system and headlamp cleaning system**

For more information on refilling the reservoir, see “Windshield/rear window washer system and headlamp cleaning system” (▷ page 249).

## Engine compartment

### Hood

#### Warning!



Do not pull the release lever while the vehicle is in motion. Otherwise the hood could be forced open by passing air flow.

### Opening

The pull release lever is under the driver's side of the instrument panel.



① Release lever

- ▶ Pull release lever ① upward.  
The hood is unlocked.



To avoid damage to the windshield wipers or hood, open the hood only with wipers in parked position.



- ② Safety hook
- ▶ Lift hood up slightly.
- ▶ Pull safety hook ② in direction of arrow and open hood.

#### Warning!



To help prevent personal injury, stay clear of moving parts when the hood is open and the engine is running. Make sure the hood is properly closed before driving. When closing the hood, use extreme caution not to catch hands or fingers.

The radiator fan may continue to run for approximately 30 seconds or even restart after the engine has been turned off. Stay clear of fan blades.

#### Warning!



If you see flames or smoke coming from the engine compartment, or if the coolant temperature display indicates that the engine is overheated, do not open the hood. Move away from vehicle and do not open the hood until the engine has cooled down. If necessary, call the fire department.

**Warning!**

The engine is equipped with a transistorized ignition system. Because of the high voltage, it is dangerous to touch any components (ignition coils, spark plug sockets, diagnostic socket) of the ignition system

- with the engine running
- while starting the engine
- if ignition is “on” and the engine is turned manually

**Closing****Warning!**

Be careful that you do not close the hood on anyone.

- ▶ Lower hood and let it drop into lock from a height of approximately 0.7 ft (20 cm).

The hood will lock audibly.

- ▶ Check to make sure the hood is fully closed.

If you can raise the hood at a point above the turn signals to the left and right of the hood, then it is not properly closed. Open it again and let it drop with somewhat greater force.



Do not push the hood closed manually, as this could damage it.

**Engine oil**

The amount of oil your engine needs will depend on a number of factors, including driving style. Higher oil consumption can occur when

- the vehicle is new
- the vehicle is driven frequently at higher engine speeds

Engine oil consumption checks should only be made after the vehicle break-in period.



Do not use any special lubricant additives, as these may damage the drive assemblies. Using special additives not approved by Mercedes-Benz may cause damage not covered by the Mercedes-Benz Limited Warranty. More information on this subject is available at any Mercedes-Benz Light Truck Center.

## Engine compartment

### Checking engine oil level with the control system

When checking the oil level

- the vehicle must be parked on level ground
- with the engine at operating temperature, the vehicle must have been stationary for at least five minutes with the engine turned off
- with the engine not at operating temperature yet, the vehicle must have been stationary for at least 30 minutes with the engine turned off

To check the engine oil level via the multifunction display, do the following:


- ▶ Switch on the ignition (▷ page 35).

The standard display (▷ page 123) should appear in the multifunction display.

- ▶ Press button  or  on the steering wheel until the following message is seen in the multifunction display:

ENGINE OIL LEVEL  
MEASURING NOW

MEASURE. CORRECT  
ONLY IF VEH. LEVEL

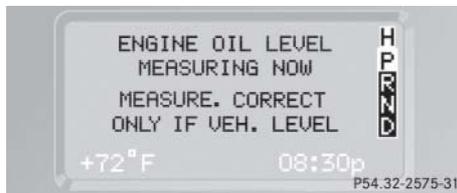

One of the following messages will subsequently appear in the indicator:

- ENGINE OIL LEVEL  
OK
- ADD 1.0 Qt. TO  
REACH MAX. OIL LEVEL!  
(Canada: 1.0 LITER)

- ADD 1.5 Qts. TO  
REACH MAX. OIL LEVEL!  
(Canada: 1.5 LITERS)
- ADD 2.0 Qts. TO  
REACH MAX. OIL LEVEL!  
(Canada: 2.0 LITERS)



If you want to interrupt the checking procedure, press the  or  button on the multifunction steering wheel.

- ▶ If necessary, add engine oil.

For adding engine oil see (▷ page 247).

For more information on engine oil, see the “Technical data” section (▷ page 376) and (▷ page 377).

**Other display messages**

If the SmartKey is not turned to position **2** in the starter switch, the following message will appear:

FOR ENGINE OIL LEVEL  
SWITCH ON IGNITION!

- ▶ Switch on the ignition (▷ page 35).

If you see the message:

OBSERVE WAITING PERIOD

- ▶ If engine is at operating temperature, wait five minutes before repeating check procedure.
- ▶ If engine is not at operating temperature yet, wait 30 minutes before repeating check procedure.

If you see the message:

ENGINE OIL LEVEL  
NOT WHEN ENGINE ON!

- ▶ Turn off the engine.
- ▶ If the engine is at operating temperature, wait five minutes before checking oil.
- ▶ If the engine is not at operating temperature yet, you must wait 30 minutes before checking oil.

If there is excess engine oil with the engine at normal operating temperature, the following message will appear:

ENGINE OIL LEVEL  
REDUCE OIL LEVEL

- ▶ Have excess oil siphoned or drained off. Contact an authorized Mercedes-Benz Light Truck Center.



Excess oil must be siphoned or drained off. It could cause damage to the engine and catalytic converter not covered by the Mercedes-Benz Limited Warranty.



Perform the engine oil level check with the dipstick if it cannot be completed with the control system (▷ page 246).

In this case we recommend that you have the system checked at a Mercedes-Benz Light Truck Center.

For more information on messages in the multifunction display concerning engine oil, see the “Practical hints” section (▷ page 311).

## Engine compartment

### Checking engine oil level with the oil dipstick

When checking the oil level the vehicle must


- be parked on level ground
- be at normal operating temperature
- have been stationary for at least 5 minutes with the engine turned off



The engine oil level can be checked by either the oil dipstick or via the multifunction display in the instrument cluster (▷ page 244). The amount of engine oil needed is shown more precisely in the multifunction display.

To check the engine oil level with the oil dipstick, do the following:

- ▶ Open the hood (▷ page 242).
- ▶ Pull out oil dipstick ① (▷ page 247).
- ▶ Wipe oil dipstick ① clean.
- ▶ Fully insert oil dipstick ① into the dipstick guide tube.
- ▶ Pull out oil dipstick ① again after approximately three seconds to obtain accurate reading.

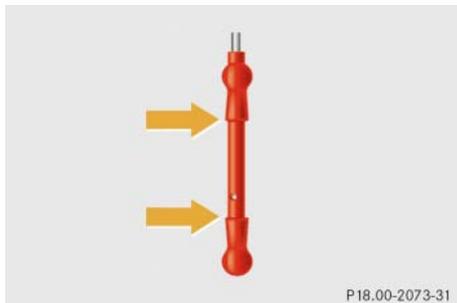

### Oil dipstick

The oil level is correct when it is between the lower (min) and upper (max) mark of the oil dipstick.



The filling quantity between the upper and lower marks on the oil dipstick is approximately 2.1 US qt. (2.0 l).

- ▶ If necessary, add engine oil.

For adding engine oil, see (▷ page 247).


For more information on engine oil, see the “Technical data” section (▷ page 376) and (▷ page 377).

For more information on messages in the multifunction display concerning engine oil, see the “Practical hints” section (▷ page 311).

### Adding engine oil

Only use approved engine oils and oil filters required for vehicles with Maintenance System (U.S. vehicles) or FSS (Canada vehicles). For a listing of approved engine oils and oil filters, refer to the Factory Approved Service Products pamphlet in your vehicle literature portfolio, or contact an authorized Mercedes-Benz Light Truck Center.

Using engine oils and oil filters of specification other than those expressly required for the Maintenance System (U.S. vehicles) or FSS (Canada vehicles), or changing of oil and oil filter at change intervals longer than those called for by the Maintenance System (U.S. vehicles) or FSS (Canada vehicles) will result in engine damage not covered by the Mercedes-Benz Limited Warranty.

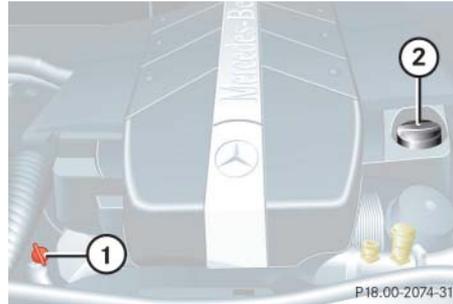

#### G 500

- ① Oil dipstick
- ② Oil filler cap



#### G 55 AMG

- ① Oil dipstick
- ② Oil filler cap

- ▶ Unscrew oil filler cap ② from filler neck.
- ▶ Add engine oil as required. Be careful not to overfill with oil.

Be careful not to spill any oil when adding. Avoid environmental damage caused by oil entering the ground or water.



## Engine compartment



Excess oil must be siphoned or drained off. It could cause damage to the engine and catalytic converter not covered by the Mercedes-Benz Limited Warranty.

- ▶ Screw oil filler cap ② back on filler neck.

For more information on engine oil, see the “Technical data” section (▷ page 376) and (▷ page 377).

### Transmission fluid level

The transmission fluid level does not need to be checked. The transmission has a permanent supply of automatic transmission fluid.

If you notice transmission fluid loss or gear shifting malfunctions, have an authorized Mercedes-Benz Light Truck Center check the automatic transmission.

### Coolant level

The engine coolant is a mixture of water and anticorrosion/antifreeze.

When checking the coolant level,

- the vehicle must be parked on level ground.
- the engine must be cool. The coolant level should reach the Cold Level mark (plastic bridge) in the reservoir.


### Warning!



In order to avoid any possibly serious burns:

- Use extreme caution when opening the hood if there are any signs of steam or coolant leaking from the cooling system, or if the coolant temperature display indicates that the coolant is overheated.
- Do not remove pressure cap on coolant reservoir if coolant temperature is above 158°F (70°C). Allow engine to cool down before removing cap. The coolant reservoir contains hot fluid and is under pressure.
- Using a rag, slowly open the cap approximately  $\frac{1}{2}$  turn to relieve excess pressure. If opened immediately, scalding hot fluid and steam will be blown out under pressure.
- Do not spill antifreeze on hot engine parts. Antifreeze contains ethylene glycol which may burn if it comes into contact with hot engine parts.

The coolant expansion tank is located on the passenger side of the engine compartment.

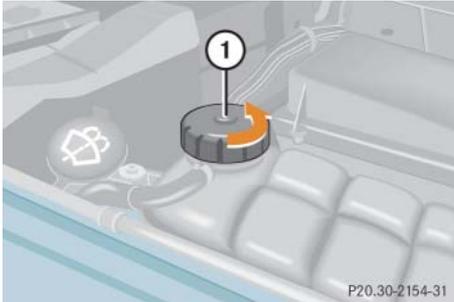

① Cap

- ▶ Using a rag, turn the cap slowly approximately one half turn to the left to release any excess pressure.
- ▶ Continue turning the cap to the left and remove it.
- ▶ Check coolant level.

The coolant level is correct if the level


- for cold coolant: reaches the top of the mark (plastic bridge) visible through the filling opening
- for warm coolant: is approx. 0.6 in (1.5 cm) higher

- ▶ Add coolant as required.
- ▶ Replace and tighten cap until you hear it click a few times.

For more information on coolant, see “Coolants” (> page 380).

### Windshield/rear window washer system and headlamp cleaning system

The windshield washer reservoir is located in the engine compartment on the passenger side. It holds approximately 5.3 US qt (5.0 l). The headlamp cleaning system is also supplied from the windshield washer reservoir.

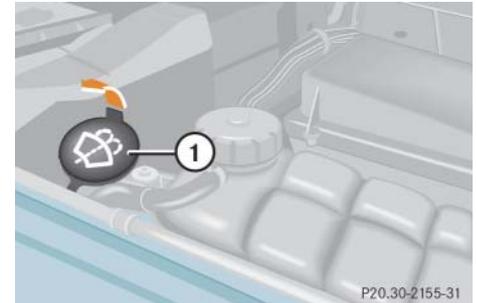

① Cap

### Engine compartment

- ▶ Use the tab to pull cap ① upwards.
- ▶ Check washer solvent level and add washer solvent as required.
- ▶ Press cap ① on the filler neck until it has completely engaged.

Add MB Windshield Washer Concentrate “S” to the water during all seasons.

- At temperatures above freezing point, use MB Windshield Washer Concentrate “S” to prevent smearing.
- If there is a danger of frost, use MB Windshield Washer Concentrate “S” and commercially available pre-mixed windshield washer solvent/antifreeze to prevent water from freezing on the windshield and the reservoir from being damaged.

Premix the windshield washer fluid in a suitable container, adapting the mixing ratio to the outside temperature (▷ page 382).

#### Warning!



Washer solvent / antifreeze is highly flammable. Do not spill washer solvent / antifreeze on hot engine parts, because it may ignite and burn. You could be seriously burned.



Only use washer fluid which is suitable for plastic lenses. Improper washer fluid can damage the plastic lenses of the headlamps.

▼ **Battery**

The battery is located in front of the rear seat bench and below the cup holder. Jump starting terminals are located in the left side of the engine compartment (▷ page 357). Refer to Maintenance Booklet for battery maintenance intervals.

The battery should always be sufficiently charged in order to achieve its rated service life.

If you use your vehicle less than approximately 200 miles (300 km) per month, mostly for short-distance trips, or if it is not used for long periods of time, you will need to have the battery charge checked more frequently and corrected if necessary.

When replacing batteries, always use batteries approved by Mercedes-Benz.

If you do not intend to operate your vehicle for an extended period of time, consult an authorized Mercedes-Benz Light Truck Center about steps you need to observe.

	Observe all safety instructions and precautions when handling automotive batteries.
	Risk of explosion
	Keep flames or sparks away from battery. Do not smoke.
	Battery acid is caustic. Do not allow it to come into contact with skin, eyes or clothing.  In case it does, immediately flush affected area with clear water and seek medical help if necessary.
	Wear eye protection.
	Keep children away.
	Follow the instructions in this Operator's Manual.

Batteries contain materials that can harm the environment if disposed of improperly. Recycling of batteries is the preferred method of disposal. Many states require sellers of batteries to accept old batteries for recycling.



If the battery is discharged

- you will no longer be able to turn the SmartKey in the starter switch
- the gear selector lever will remain locked in position **P**

For more information, see “Battery” (▷ page 353).

### Tires and wheels

See an authorized Mercedes-Benz Light Truck Center for information on tested and recommended rims and tires for summer and winter operation. They can also offer advice concerning tire service and purchase.

#### Warning!



Replace rims or tires with the same designation, manufacturer and type as shown on the original part. See an authorized Mercedes-Benz Light Truck Center for further information. If incorrectly sized rims and tires are mounted:

- The wheel brakes or suspension components can be damaged.
- The operating clearance of the wheels and the tires may no longer be correct.

#### Warning!



Worn, old tires can cause accidents. If the tire tread is badly worn, or if the tires have sustained damage, replace them.

When replacing rims, only use genuine Mercedes-Benz wheel bolts specified for the particular rim type. Failure to do so can result in the bolts loosening and possibly an accident.

Retreaded tires are not tested or recommended by Mercedes-Benz, since previous damage cannot always be recognized on retreads. The operating safety of the vehicle cannot be assured when such tires are used.

#### Important guidelines

- Only use sets of tires and rims of the same type and make.
- Tires must be of the correct size for the rim.
- Break in new tires for approximately 60 miles (100 km) at moderate speeds.
- Regularly check the tires and rims for damage. Dented or bent rims can cause tire inflation pressure loss and damage to the tire beads.
- If vehicle is heavily loaded, check tire inflation pressure and correct as required.
- Do not allow your tires to wear down too far. Adhesion properties on wet roads are sharply reduced at tread depths under  $\frac{1}{8}$  in (3 mm).
- When replacing individual tires, you should mount new tires on the front wheels first (on vehicles with same-sized wheels all around).

## Tire care and maintenance

### Warning!



Regularly check the tires for damage. Damaged tires can cause tire inflation pressure loss. As a result, you could lose control of your vehicle.

Worn, old tires can cause accidents. If the tire tread is badly worn, or if the tires have sustained damage, replace them.

Regularly check your tire inflation pressure at least once a month. For more information on checking tire inflation pressure see “Recommended tire inflation pressure” (▷ page 260).

## Tire inspection

Every time you check your tire inflation pressure, you should also inspect your tires for the following:

- excessive treadwear (▷ page 254)
- cord or fabric showing through the tire’s rubber
- bumps, bulges, cuts, cracks or splits in the tread or side of the tire

Replace the tire if you find any of the above conditions.

Make sure you also inspect the spare tire periodically for condition and inflation. Spare tires will age and become worn over time even if never used, and thus should be inspected and replaced when necessary.

## Life of tire

The service life of a tire is dependent upon varying factors including but not limited to:

- Driving style
- Tire inflation pressure
- Distance driven

### Warning!



Tires and spare tire should be replaced after six years, regardless of the remaining tread.

### Tires and wheels

#### Tread depth

Do not allow your tires to wear down too far. Adhesion properties on wet roads are sharply reduced at tread depths under  $\frac{1}{8}$  in (3 mm).

Treadwear indicators (TWI) are required by law. These indicators are located in six places on the tread circumference and become visible at a tread depth of approximately  $\frac{1}{16}$  in (1.6 mm), at which point the tire is considered worn and should be replaced.

Recommended minimum tire tread depth:

- Summer tires  $\frac{1}{8}$  in (3 mm)
- Winter tires  $\frac{1}{6}$  in (4 mm)


#### Warning!



Although the applicable federal motor safety laws consider a tire to be worn when the treadwear indicators (TWI) become visible at approximately  $\frac{1}{16}$  in (1.6 mm), we recommend that you do not allow your tires

to wear down to that level. As tread depth approaches  $\frac{1}{8}$  in (3 mm), the adhesion properties on a wet road are sharply reduced.

Depending upon the weather and/or road surface (conditions), the tire traction varies widely.

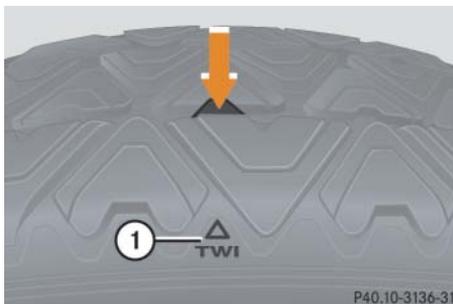

① TWI (Tread Wear Indicator)

The treadwear indicator appears as a solid band across the tread.

#### Storing tires



Keep unmounted tires in a cool, dry place with as little exposure to light as possible. Protect tires from contact with oil, grease and gasoline.

#### Cleaning tires



Never use a round nozzle to power wash tires. The intense jet of water can result in damage to the tire.

Always replace a damaged tire.

## Direction of rotation

Unidirectional tires offer added advantages, such as better hydroplaning performance. To benefit, however, you must make sure the tires rotate in the direction specified.

An arrow on the sidewall indicates the intended direction of rotation (spinning) of the tire.




Spare wheels may be mounted against the direction of rotation (spinning) even with a unidirectional tire for temporary use only until the regular drive wheel has been repaired or replaced. Always observe and follow applicable temporary use restrictions and speed limitations indicated on the spare wheel.

## Loading the vehicle

Two labels on your vehicle show how much weight it may properly carry.

- The Tire and Loading Information placard can be found on the driver's door B-pillar. This placard tells you important information about the number of people that can be in the vehicle and the total weight that can be carried in the vehicle. It also contains information on the proper size and recommended tire inflation pressures for the original equipment tires on your vehicle.
- The Certification label, also found on the driver's door B-pillar tells you about the gross weight capacity of your vehicle, called the Gross Vehicle Weight Rating (GVWR). The GVWR includes the weight of the vehicle, all occupants, fuel and cargo. The Certification label also tells you about the front and rear axle weight capacity, called the Gross Axle Weight Rating (GAWR). The GAWR is the total allowable weight that can be

carried by a single axle (front or rear). Never exceed the GVWR or GAWR for either the front axle or rear axle.

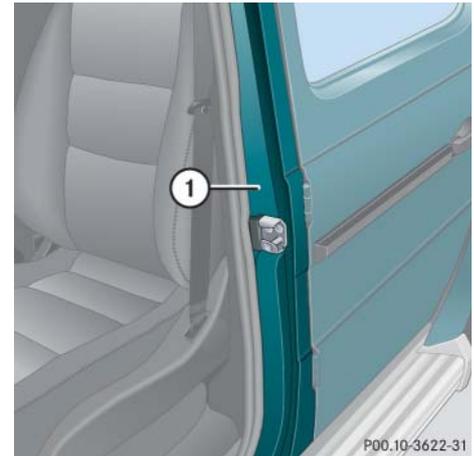

① Driver's door B-pillar

Following is a discussion on how to work with the information contained on the placard with regards to loading your vehicle.

## Tires and wheels

### Tire and Loading Information

#### Warning!



Do not overload the tires by exceeding the specified load limit as indicated on the placard on the driver's door B-pillar. Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

#### Tire and Loading Information placard



Data shown on placard example are for illustration purposes only. Load limit data are specific to each vehicle and may vary from data shown in the illustrations below. Refer to placard on vehicle for actual data specific to your vehicle.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	P195/70R14	200KPA, 29PSI	
REAR	P195/70R14	200KPA, 29PSI	
SPARE	T125/70D15	420KPA, 60PSI	

SEATING CAPACITY TOTAL 5 \* FRONT 2 \* REAR 3

The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.\*

P40.00-2062-31

- ① Load limit information on the Tire and Loading Information placard

The placard showing the load limit information is located on the driver's door B-pillar.

- ▶ Locate the statement “The combined weight of occupants and cargo should never exceed XXX kilograms or XXX lbs.” on this placard.

The combined weight of all occupants, cargo/luggage and trailer tongue load (if applicable) should never exceed the weight referenced in that statement.


### Seating capacity

The seating capacity gives you important information on the number of occupants that can be in the vehicle. Observe front and rear seating capacity.

Never let more people ride in the vehicle than there are designated seating positions and seat belts available. Be sure everyone riding in the vehicle is correctly restrained with a separate seat belt.



Data shown on placard example are for illustration purposes only. Load limit data are specific to each vehicle and may vary from data shown in the following illustration. Refer to placard on vehicle for actual data specific to your vehicle.

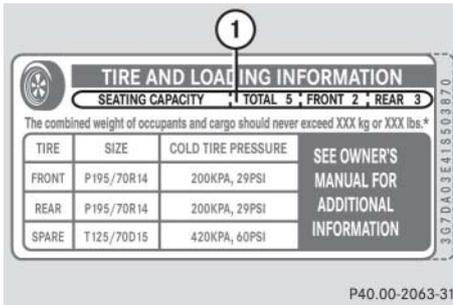

**Placard**

① Seating capacity

**Steps for determining correct load limit**

The following steps have been developed as required of all manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 pursuant to the “National Traffic and Motor Vehicle Safety Act of 1966”.

**Step 1**

- ▶ Locate the statement “The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.” on your vehicle’s placard.

**Step 2**

- ▶ Determine the combined weight of the driver and passengers that will be riding in your vehicle.

**Step 3**

- ▶ Subtract the combined weight of the driver and passengers from XXX kilograms or XXX lbs.

**Step 4**

- ▶ The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the “XXX” amount equals 1400 lbs and there will be five 150 lbs passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs (1400-750 (5 x 150) = 650 lbs).

**Step 5**

- ▶ Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.

**Step 6 (if applicable)**

- ▶ If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle (▷ page 259).

The following table shows examples on how to calculate total and cargo load capacities with varying seating configurations and number and size of occupants. The following examples use a load limit of 1500 lbs. **This is for illustration purposes only.** Make sure you are using the actual load limit for your vehicle stated on the vehicle’s placard (▷ page 256).

## Tires and wheels

Example	Combined weight limit of occupants and cargo from placard	Number of occupants (driver and passengers)	Seating configuration	Occupants weight	Combined weight of all occupants	Available cargo/luggage and trailer tongue weight (total load limit or vehicle capacity weight from placard minus combined weight of all occupants)
1	1500 lbs	5	front: 2 rear: 3	Occupant 1: 150 lbs Occupant 2: 180 lbs Occupant 3: 160 lbs Occupant 4: 140 lbs Occupant 5: 120 lbs	750 lbs	1500 lbs - 750 lbs = 750 lbs
2	1500 lbs	3	front: 1 rear: 2	Occupant 1: 200 lbs Occupant 2: 190 lbs Occupant 3: 150 lbs	540 lbs	1500 lbs - 540 lbs = 960 lbs
3	1500 lbs	1	front: 1	Occupant 1: 150 lbs	150 lbs	1500 lbs - 150 lbs = 1350 lbs

The higher the weight of all occupants, the less cargo and luggage load capacity is available.

For more information, see “Trailer tongue load” (> page 259).

***Certification label***

Even after careful determination of the combined weight of all occupants, cargo and the trailer tongue load (if applicable) (▷ page 259) as to not exceed the permissible load limit, you must make sure that your vehicle never exceeds the Gross Vehicle Weight Rating (GVWR) and the Gross Axle Weight Rating (GAWR) for either the front or rear axle. You can obtain the GVWR and GAWR from the Certification label. The Certification label can be found on the driver's door B-pillar (▷ page 255).

**Gross Vehicle Weight Rating (GVWR):** The total weight of the vehicle, all occupants, all cargo, and the trailer tongue load (▷ page 259) must never exceed the GVWR.

**Gross Axle Weight Rating (GAWR):** The total allowable weight that can be carried by a single axle (front or rear).

To assure that your vehicle does not exceed the maximum permissible weight limits (GVWR and GAWR for front and rear axle), have the loaded vehicle (including driver, passengers and all cargo and, if applicable, trailer fully loaded) weighed on a suitable commercial scale.

***Trailer tongue load***

The tongue load of any trailer is an important weight to measure because it affects the load you can carry in your vehicle. If a trailer is towed, the tongue load must be added to the weight of all occupants riding and any cargo you are carrying in the vehicle. The tongue load typically is ten percent of the trailer weight and everything loaded in it.

If an approved Mercedes-Benz trailer hitch is available for your G-Class vehicle model, consult the instructions included in the trailer hitch kit for vehicle towing capacity, permissible gross trailer weight, trailer tongue weight rating, and instructions on loading and towing a trailer.

## Tires and wheels

### Recommended tire inflation pressure

#### Warning!



Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and / or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

Your vehicle is equipped with either the Tire and Loading Information placard located on the driver's door B-pillar (▷ page 255).

The tire inflation pressure should be checked regularly and should only be adjusted on cold tires. The tires can be considered cold if the vehicle has been parked for at least three hours or driven less than one mile (1.6 km).


Follow recommended cold tire inflation pressures listed on placard.

Keeping the tires properly inflated provides the best handling, tread life and riding comfort.

In addition to the tire placard on the driver's door B-pillar, also consult the fuel filler flap for any additional information pertaining to special driving situations. For more information, see "Important notes on tire inflation pressure" (▷ page 261).



Data shown on placard example are for illustration purposes only. Tire data are specific to each vehicle and may vary from data shown in the illustrations below. Refer to placard on vehicle for actual data specific to your vehicle.

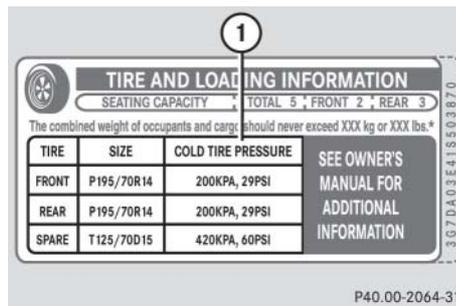

- ① Tire and Loading Information placard with recommended cold tire inflation pressures

The placard lists the recommended cold tire inflation pressures for maximum loaded vehicle weight. The tire inflation pressures listed apply to the tires installed as original equipment.

## Important notes on tire inflation pressure

### Warning!



If the tire inflation pressure repeatedly drops:

- Check the tires for punctures from foreign objects.
- Check to see whether air is leaking from the valves or from around the rim.

Tire temperature and tire inflation pressure are also increased while driving, depending on the driving speed and the tire load.

If you will be driving your vehicle at high speeds of 100 mph (160 km/h) or higher, where it is legal and conditions allow, consult the placard on the inside of the fuel filler flap on how to adjust the cold tire inflation pressure. If you do not adjust the tire inflation pressure, excessive heat can build up and result in sudden tire failure.

Be sure to readjust the tire inflation pressure for normal driving speeds. You should wait until the tires are cold before adjusting the tire inflation pressure.

Some vehicles may have supplemental tire inflation pressure information for vehicle loads less than the maximum loaded vehicle condition. If such information is provided, it can be found on the placard located on the inside of the fuel filler flap.

Tire inflation pressure changes by approximately 1.5 psi per 18°F (0.1 bar per 10°C) of air temperature change. Keep this in mind when checking tire inflation pressure where the temperature is different from the outside temperature.

## Checking tire inflation pressure

Regularly check your tire inflation pressure at least once a month.

Check and adjust the tire inflation pressure when the tires are cold. The tires can be considered cold if the vehicle has been parked for at least three hours or driven less than one mile (1.6 km).

If you check the tire inflation pressure when the tires are warm (the vehicle has been driven for several miles or sitting less than three hours), the reading will be approximately 4 psi (0.3 bar) higher than the cold reading. This is normal. Do not let air out to match the specified cold tire inflation pressure. Otherwise, the tire will be underinflated.

Follow the steps below to achieve correct tire inflation pressure:

- ▶ Remove the cap from the valve on one tire.
- ▶ Firmly press a tire gauge onto the valve.



### Tires and wheels

- ▷▷ Read tire inflation pressure on tire gauge and check against the recommended tire inflation pressure on the placard on the driver's door B-pillar (▷ page 255). If necessary, add air to achieve the recommended tire inflation pressure.



If you have overfilled the tire, release tire inflation pressure by pushing the metal stem of the valve with e.g. a tip of a pen. Then recheck the tire inflation pressure with the tire gauge.

- ▶ Install the valve cap.
- ▶ Repeat this procedure for each tire.



The recommended tire inflation pressures for your vehicle can be found on the tire placard located on the driver's door B-pillar. The tire inflation pressures are not listed in the Operator's Manual.

#### Warning!



Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and /or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

Do not overload the tires by exceeding the specified load limit as indicated on the placard on the driver's door B-pillar. Overloading the tires can overheat them, possibly causing a blowout.

#### Potential problems associated with underinflated and overinflated tires

##### *Underinflated tire inflation pressure*

Underinflated tires can:

- cause excessive and uneven tire wear
- adversely affect fuel economy
- lead to tire failure from being overheated
- adversely affect handling characteristics

#### Warning!



Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and /or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

**Overinflated tire inflation pressure**

Overinflated tires can:

- adversely affect handling characteristics
- cause uneven tire wear
- be more prone to damage from road hazards
- adversely affect ride comfort
- increase stopping distance

**Warning!**


Follow recommended tire inflation pressures.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

**Tire labeling**

Besides tire name (sales designation) and manufacturer name, a number of markings can be found on a tire.

Following are some explanations for the markings on your vehicle's tires:

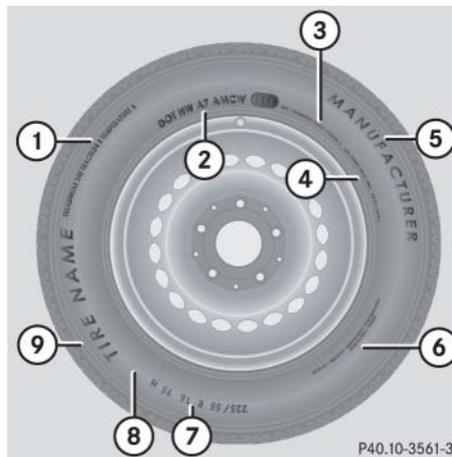

- ① Uniform Quality Grading Standards (▷ page 271)
- ② DOT, Tire Identification Number (TIN) (▷ page 268)
- ③ Maximum tire load (▷ page 269)
- ④ Maximum tire inflation pressure (▷ page 270)
- ⑤ Manufacturer
- ⑥ Tire ply material (▷ page 273)
- ⑦ Tire size designation, load and speed rating (▷ page 264)
- ⑧ Load identification (▷ page 267)
- ⑨ Tire name




For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

For more information, see “Rims and tires” (▷ page 371).

## Tires and wheels

### Tire size designation, load and speed rating

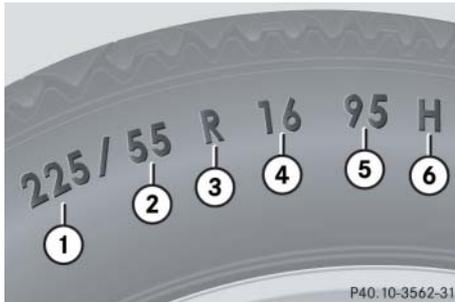

- ① Tire width
- ② Aspect ratio in %
- ③ Radial tire code
- ④ Rim diameter
- ⑤ Tire load rating
- ⑥ Tire speed rating



For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

General:

Depending on the design standards used, the tire size molded into the sidewall may have no letter or a letter preceding the tire size designation.

No letter preceding the size designation (as illustrated above): Passenger car tire based on European design standards.

Letter “P” preceding the size designation: Passenger car tire based on U.S. design standards.

Letter “LT” preceding the size designation: Light Truck tire based on U.S. design standards.

Letter “T” preceding the size designation: Temporary spare tires which are high pressure compact spares designed for temporary emergency use only.

### **Tire width**

The tire width ① (▷ page 264) indicates the nominal tire width in mm.

### **Aspect ratio**

The aspect ratio ② (▷ page 264) is the dimensional relationship between tire section height and section width and is expressed in percentage. The aspect ratio is arrived at by dividing section height by section width.

### **Tire code**

The tire code ③ (▷ page 264) indicates the tire construction type. The “R” stands for radial tire type. Letter “D” means diagonal or bias ply construction; letter “B” means belted-bias ply construction.

At the tire manufacturer’s option, any tire with a speed capability above 149 mph (240 km/h) can include a “ZR” in the size designation (for example: 245/40 ZR 18). For additional information, see “Tire speed rating” (▷ page 266).

### **Rim diameter**

The rim diameter ④ (▷ page 264) is the diameter of the bead seat, not the diameter of the rim edge. Rim diameter is indicated in inches (in).

### **Tire load rating**

The tire load rating ⑤ (▷ page 264) is a numerical code associated with the maximum load a tire can support.

For example, a load rating of 91 corresponds to a maximum load of 1356 lbs (615 kg) the tire is designed to support. See also “Maximum tire load” (▷ page 269) where the maximum load associated with the load index is indicated in kilograms and lbs.

#### **Warning!**



The tire load rating must always be at least half of the GAWR (▷ page 274) of your vehicle. Otherwise, tire failure may be the result which may cause an accident and/or serious personal injury to you or others.

Always replace rims and tires with the same designation, manufacturer and type as shown on the original part.

#### **Warning!**



Do not overload the tires by exceeding the specified load limit as indicated on the placard located on the driver’s door B-pillar. Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

For additional information on tire load rating, see “Load identification” (▷ page 267).



Tire load rating ⑤ (▷ page 264) and Tire speed rating ⑥ (▷ page 264) are also referred to as “service description”.

## Tires and wheels

### Tire speed rating

The tire speed rating ⑥ (▷ page 264) indicates the approved maximum speed for the tire.

#### Warning!



Even when permitted by law, never operate a vehicle at speeds greater than the maximum speed rating of the tires.

Exceeding the maximum speed for which tires are rated can lead to sudden tire failure, causing loss of vehicle control and possibly resulting in an accident and/or personal injury and possible death, for you and for others.



Tire load rating ⑤ (▷ page 264) and Tire speed rating ⑥ (▷ page 264) are also referred to as “service description”.

### Summer tires

Index	Speed rating
Q	up to 100 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 112 mph (180 km/h)
T	up to 118 mph (190 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h)
W	up to 168 mph (270 km/h)
Y	up to 186 mph (300 km/h)
(Y)	above 186 mph (300 km/h)
ZR	above 149 mph (240 km/h)

- At the tire manufacturer’s option, any tire with a speed capability above 149 mph (240 km/h) can include a “ZR” in the size designation (for example: 245/40 ZR18). To determine the maximum speed capability of the tire, the service description for the tire must be referred to. The service description

is comprised of the tire load rating ⑤ (▷ page 264) and the tire speed rating ⑥ (▷ page 264).

If your tire includes “ZR” in the size designation and no service description ⑤ and ⑥ (▷ page 264) is given, the tire manufacturer must be consulted for the maximum speed capability.

If a service description ⑤ and ⑥ (▷ page 264) is given, the speed capability is limited by the speed symbol in the service description.

Example: 245/40 ZR18 97Y.

In this example, “97Y” is the service description. The letter “Y” designates the speed rating and the speed capability of the tire is limited to 186 mph (300 km/h).

- Any tire with a speed capability above 186 mph (300 km/h) must include a “ZR” in the size designation AND the service description must be placed in parenthesis. Example: 275/40 ZR 18 (99Y). The “(Y)” speed rating in parenthesis designates the maximum speed capability of the tire as being above 186 mph (300 km/h). Consult the tire manufacturer for the actual maximum permissible speed of the tire.

All-season and winter tires

Index	Speed rating
Q M+S <sup>1</sup>	up to 100 mph (160 km/h)
T M+S <sup>1</sup>	up to 118 mph (190 km/h)
H M+S <sup>1</sup>	up to 130 mph (210 km/h)
V M+S <sup>1</sup>	up to 149 mph (240 km/h)

<sup>1</sup> or M+S  for winter tires.



Not all M+S rated tires provide special winter performance. Make sure the tires you use show M+S and the mountain/snowflake  marking on the tire sidewall. These tires meet specific snow traction performance requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) and have been designed specifically for use in snow conditions.

Load identification



① Load identification



For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

### Tires and wheels

In addition to tire load rating, special load information may be molded into the tire sidewall following the letter designating the tire speed rating ⑥ (▷ page 266).

No specification given: absence of any text (like in above example) indicates a standard load (SL) tire.

XL (Extra Load): designates an extra load (or reinforced) tire.

Light Load: designates a light load tire.


C, D, E: designates load range associated with the maximum load a tire can carry at a specified pressure.

#### **DOT, Tire Identification Number (TIN)**

U.S. tire regulations require each new tire manufacturer or tire retreader to mold a TIN into or onto a sidewall of each tire produced.

The TIN is a unique identifier which facilitates efforts by tire manufacturers to notify purchasers in recall situations or other safety matters concerning tires and gives purchasers the means to easily identify such tires.

The TIN is comprised of “Manufacturer’s identification mark”, “Tire size”, “Tire type code” and “Date of manufacture”.

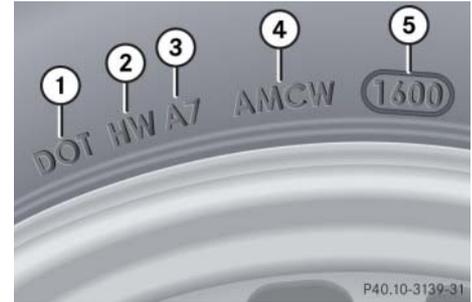

- ① DOT
- ② Manufacturer’s identification mark
- ③ Tire size
- ④ Tire type code (at the option of the tire manufacturer)
- ⑤ Date of manufacture



For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

**DOT (Department of Transportation)**

A tire branding symbol ① (▷ page 268) which denotes the tire meets requirements of the U.S. Department of Transportation.

**Manufacturer's identification mark**

The manufacturer's identification mark ② (▷ page 268) denotes the tire manufacturer.

New tires have a mark with two symbols.

Retreaded tires have a mark with four symbols. For more information on retreaded tires (▷ page 252).

**Tire size**

The code ③ (▷ page 268) indicates the tire size.

**Tire type code**

The code ④ (▷ page 268) may, at the option of the manufacturer, be used as a descriptive code for identifying significant characteristics of the tire.

**Date of manufacture**

The date of manufacture ⑤ (▷ page 268) identifies the week and year of manufacture.

The first two figures identify the week, starting with "01" to represent the first full week of the calendar year. The second two figures represent the year.

For example, "3202" represents the 32nd week of 2002.

**Maximum tire load**

## ① Maximum tire load rating



For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

The maximum tire load is the maximum weight the tires are designed to support.

### Warning!



Do not overload the tires by exceeding the specified load limit as indicated on the placard located on the driver's door B-pillar. Overloading the tires can overheat them, possibly causing a blowout. Overloading the tires can also result in handling or steering problems, or brake failure.

For more information on tire load rating (▷ page 265).

For information on calculating total and cargo load capacities (▷ page 257).

### Maximum tire inflation pressure



- ① Maximum permissible tire inflation pressure



For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

This is the maximum permissible tire inflation pressure for the tire.

Always follow the recommended tire inflation pressure (▷ page 260) for proper tire inflation.

### Warning!




Never exceed the max. tire inflation pressure. Follow recommended tire inflation pressures.

Do not underinflate tires. Underinflated tires wear excessively and / or unevenly, adversely affect handling and fuel economy, and are more likely to fail from being overheated.

Do not overinflate tires. Overinflated tires can adversely affect handling and ride comfort, wear unevenly, increase stopping distance, and result in sudden deflation (blowout) because they are more likely to become punctured or damaged by road debris, potholes etc.

## Uniform Tire Quality Grading Standards (U.S. vehicles)

Tire manufacturers are required to grade tires based on three performance factors: treadwear, traction and temperature resistance.

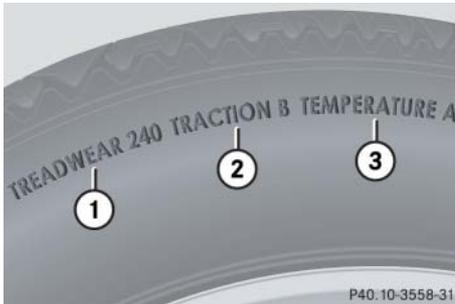

- ① Treadwear
- ② Traction
- ③ Temperature resistance



For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

Quality grades can be found, where applicable, on the tire sidewall between tread shoulder and maximum section width. For example:

Treadwear	Traction	Temperature
200	AA	A

All passenger car tires must conform to federal safety requirements in addition to these grades.

## Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half ( $1\frac{1}{2}$ ) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

### Tires and wheels

#### Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

#### Warning!



The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

#### Temperature


The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

#### Warning!



The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause excessive heat build-up and possible tire failure.

## Tire ply material

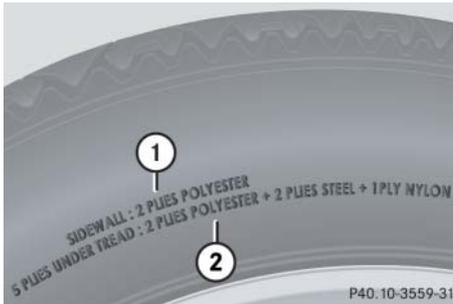

- ① Plies in sidewall
- ② Plies under tread



For illustration purposes only. Actual data on tires are specific to each vehicle and may vary from data shown in above illustration.

This marking tells you about the type of cord and number of plies in the sidewall and under the tread.

## Tire and loading terminology

### Accessory weight

The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

### Air pressure

The amount of air inside the tire pressing outward on each square inch of the tire. Air pressure is expressed in pounds per square inch (psi), or kilopascal (kPa) or bars.

### Aspect ratio

Dimensional relationship between tire section height and section width expressed in percentage.

### Bar

Another metric unit for air pressure. There are 14.5038 pounds per square inch (psi) to 1 bar; there are 100 kilopascals (kPa) to 1 bar.

### Bead

The tire bead contains steel wires wrapped by steel cords that hold the tire onto the rim.

### Cold tire inflation pressure

Tire inflation pressure when your vehicle has been sitting for at least three hours or driven no more than one mile (1.6 km).

### Curb weight

The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, and, if so equipped, air conditioning and additional optional equipment, but without passengers and cargo.

### Tires and wheels

#### **DOT (Department of Transportation)**

A tire branding symbol which denotes the tire meets requirements of the U.S. Department of Transportation.

#### **GAWR (Gross Axle Weight Rating)**

The GAWR is the maximum permissible axle weight. The gross vehicle weight on each axle must never exceed the GAWR for the front and rear axle indicated on the Certification label located on the driver's door B-pillar.

#### **GTW (Gross Trailer Weight)**

The GTW is the weight of the trailer plus the weight of all cargo, equipment, luggage etc. loaded on the trailer.

#### **GVW (Gross Vehicle Weight)**

The GVW comprises the weight of the vehicle including fuel, tools, spare wheel, installed accessories, passengers and cargo and, if applicable, trailer tongue load. The GVW must never exceed the GVWR indicated on the Certification label located on the driver's door B-pillar.

#### **GVWR (Gross Vehicle Weight Rating)**

This is the maximum permissible vehicle weight of the fully loaded vehicle (weight of the vehicle including all options, passengers, fuel, and cargo and, if applicable, trailer tongue load). It is indicated on Certification label located on the driver's door B-pillar.

#### **Kilopascal (kPa)**

The metric unit for air pressure. There are 6.9 kPa to 1 psi; another metric unit for air pressure is bars. There are 100 kilopascals (kPa) to 1 bar.

#### **Maximum load rating**

The maximum load in kilograms and pounds that can be carried by the tire.

#### **Maximum loaded vehicle weight**

The sum of curb weight, accessory weight, vehicle capacity weight and production options weight.

#### **Maximum tire inflation pressure**

This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

#### **Normal occupant weight**

The number of occupants the vehicle is designed to seat, multiplied by 68 kilograms (150 lbs).

#### **Occupant distribution**

The distribution of occupants in a vehicle at their designated seating positions.

**Production options weight**

The combined weight of those installed regular production options weighing over 5 lbs (2.3 kilograms) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, heavy duty battery, and special trim.

**PSI (Pounds per square inch)**

A standard unit of measure for air pressure  
-> bar, kilopascal (kPa).

**Recommended tire inflation pressure**

Recommended tire inflation pressure listed on placard located on driver's door B-pillar for normal driving conditions. Provides best handling, tread life and riding comfort.

**Rim**

A metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

**Sidewall**

The portion of a tire between the tread and the bead.

**TIN (Tire Identification Number)**

Unique identifier which facilitates efforts by tire manufacturers to notify purchasers in recall situations or other safety matters concerning tires and gives purchases the means to easily identify such tires. The TIN is comprised of "Manufacturer's identification mark", "Tire size", "Tire type code" and "Date of manufacture".

**Tire load rating**

Numerical code associated with the maximum load a tire can support.

**Tire ply composition and material used**

This indicates the number of plies or the number of layers of rubber-coated fabric in the tire tread and sidewall. Tire manufacturers also must indicate the ply materials in the tire and sidewall, which include steel, nylon, polyester, and others.

**Tire speed rating**

Part of tire designation; indicates the speed range for which a tire is approved.

**Traction**

Force exerted by the vehicle on the road via the tires. The amount of grip provided.

**Tread**

The portion of a tire that comes into contact with the road.

### Tires and wheels

#### Treadwear indicators

Narrow bands, sometimes called “wear bars” that show across the tread of a tire when only  $\frac{1}{16}$  in (1.6 mm) of tread remains.

#### TWR (Tongue Weight Rating)

Maximum permissible weight on trailer tongue.

#### Uniform Tire Quality Grading Standards

A tire information system that provides consumers with ratings for a tire’s traction, temperature and treadwear. Ratings are determined by tire manufacturers using government testing procedures. The ratings are molded into the sidewall of the tire.

#### Vehicle capacity weight

Rated cargo and luggage load plus 68 kilograms (150 lbs) times the vehicle’s designated seating capacity.

#### Vehicle maximum load on the tire

Load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing it by two.

#### Rotating tires

##### Warning!



Rotate front and rear wheels only if the tires are of the same dimension.

If your vehicle is equipped with mixed-size tires (different tire dimensions front vs. rear), tire rotation is not possible.

Tire rotation can be performed on vehicles with tires of the same dimension all around. If your vehicle is equipped with tires of the same dimension all around, tires can be rotated, observing a a front-to-rear rotation pattern that will maintain the intended rotation (spinning) direction of the tire (▷ page 255).

In some cases, such as when your vehicle is equipped with mixed-size tires (different tire dimension front vs. rear), tire rotation is not possible.

If applicable to your vehicle’s tire configuration, tires can be rotated according to the tire manufacturer’s recommended intervals in the tire manufacturer’s warranty pamphlet located in your vehicle literature portfolio. If none is available, tires should be rotated every 3000 to 6000 miles (5000 to 10000 km), or sooner if necessary, according to the degree of tire wear. The same rotation (spinning) direction must be maintained (▷ page 255).

Rotate tires before the characteristic tire wear pattern becomes visible (shoulder wear on front tires and tread center wear on rear tires).

Thoroughly clean the mounting face of wheels and brake disks, i.e. the inner side of the wheels/tires, during each rotation. Check for and ensure proper tire inflation pressure.

**Warning!**

Have the tightening torque checked after changing a wheel. Wheels could become loose if not tightened with a torque of 97 lb-ft (130 Nm).

Only use genuine Mercedes-Benz wheel bolts specified for your vehicle's rims.

For information on wheel change, see "Flat tire" (> page 348).

### Winter driving

Before the onset of winter, have your vehicle winterized at an authorized Mercedes-Benz Light Truck Center. This service includes:

- Check of anticorrosion and antifreeze concentration.
- Addition of cleaning concentrate to the water of the windshield and headlamp cleaning system. Add MB Concentrate “S” to a premixed windshield washer solvent/antifreeze which is formulated for below freezing temperatures (> page 382).
- Battery test. Battery capacity drops with decreasing ambient temperature. A well charged battery helps to make sure that the engine can be started, even at low ambient temperatures.
- Tire change. Mercedes-Benz recommends M+S rated radial-ply tires with a minimum tread depth of approximately  $\frac{1}{6}$  in (4 mm) on all four wheels for the winter season.

### Winter tires

Always use winter tires at temperatures below 45°F (7°C) and whenever wintry road conditions prevail. Not all M+S rated tires provide special winter performance. Make sure the tires you use show M+S and the mountain/snowflake  marking on the tire sidewall. These tires meet specific snow traction performance requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) and have been designed specifically for use in snow conditions. Using winter tires is the only way to achieve the maximum effectiveness of the ABS and ESP in winter operation.

For safe handling, make sure that all mounted winter tires are of the same make and have the same tread design.

#### Warning!



Winter tires with a tread depth under  $\frac{1}{6}$  in (4 mm) must be replaced. They are no longer suitable for winter operation.

Always observe the speed rating of the winter tires installed on your vehicle. If the maximum speed for which your tires are rated is below the speed rating of your vehicle, you must place a notice to this effect where it will be seen by the driver. Such notices are available from your tire dealer or from any authorized Mercedes-Benz Light Truck Center.

**Warning!**

If you use your spare tire when winter tires are fitted on the other wheels, be aware that the difference in tire characteristics may very well impair turning stability and that overall driving stability may be reduced. Adapt your driving style accordingly.

Have the spare tire replaced with a winter tire at the nearest authorized Mercedes-Benz Light Truck Center.

**Block heater (Canada only)**

The engine is equipped with a block heater.

The electrical cable may be installed at an authorized Mercedes-Benz Light Truck Center.

**Snow chains**

Snow chains should only be driven on snow-covered roads at speeds not to exceed 30 mph (50 km/h). Remove chains as soon as possible when driving on roads without snow.



When driving with snow chains, you may wish to deactivate the ESP (▷ page 84) before setting the vehicle in motion. This will improve the vehicle's traction.

Please observe the following guidelines when using snow chains:

- Use of snow chains is not permissible with all wheel/tire combinations.
- Snow chains should only be used on the rear wheels. Follow the manufacturer's mounting instructions.
- Only use snow chains that are approved by Mercedes-Benz. Your authorized Mercedes-Benz Light Truck Center will be glad to advise you on this subject.
- Use of snow chains may be prohibited depending on location. Always check local and state laws before installing snow chains.

### Maintenance

In the “Operation” section you will find detailed information on operating, maintaining, and caring for your vehicle.

We strongly recommend that you have your vehicle serviced by an authorized Mercedes-Benz Light Truck Center, in accordance with the Maintenance Booklet at the times called for by the maintenance service indicator display.

Failure to have the vehicle maintained in accordance with the Maintenance Booklet and maintenance service indicator at the designated times/mileage will result in vehicle damage not covered by the Mercedes-Benz Limited Warranty.

The maintenance service indicator will notify you when your next maintenance service is due.

Starting approximately one month before maintenance service is due, one of the following messages will appear in the multi-function display while you are driving or when you switch on the ignition (example service A):

SERVICE A IN XX DAYS  
SERVICE A IN XX MILES (KM)  
SERVICE A DUE NOW!



The type of maintenance service due is indicated in the speedometer display field:



Basic service (A)



Extended service (B)



Vehicles equipped with FSS (Flexible Service System) only (Canada vehicles): The interval between maintenance services depends on your driving habits. A gentle driving style, moderate engine speeds and the avoidance of short-distance trips will lengthen the interval between maintenance services.

### Clearing the maintenance service indicator

The maintenance service indicator is automatically cleared

- after ten seconds when you switch on the ignition or when reaching the maintenance service threshold while driving
- after 30 seconds, once the suggested maintenance service term has passed

You can also clear it yourself.

- ▶ Press the reset button on the instrument cluster (▷ page 25).

### Maintenance service term exceeded

If you have exceeded the suggested maintenance service term, you will see the following message in the multifunction display:

SERVICE A EXCEEDED BY XX DAYS  
SERVICE A EXCEEDED BY XX MILES (KM)

In addition, a signal sounds when the message appears.

Any authorized Mercedes-Benz Light Truck Center will reset the maintenance service indicator following a completed maintenance service.

### Calling up the maintenance service indicator

- ▶ Switch on the ignition (▷ page 35).

The standard display of the control system appears (▷ page 123).

- ▶ Press button  or  on the multifunction steering wheel until the maintenance service indicator with the service symbol  or  and the service deadline appears in the multifunction display.



If the battery is disconnected, the days of disconnection will not be included in the count shown by the maintenance service indicator. To arrive at the true maintenance service deadline, you will need to subtract these days from the days shown in the maintenance service indicator.

Do not confuse the maintenance service indicator with the engine oil level indicator .

#### Resetting the maintenance service indicator

---

In the event that the maintenance service on your vehicle is not carried out by an authorized Mercedes-Benz Light Truck Center, you can have the maintenance service indicator reset. The automotive maintenance facility carrying out the maintenance service will find the information for resetting the maintenance service indicator in the maintenance-relevant information for your vehicle. Such information is available from either your authorized Mercedes-Benz Light Truck Center or directly from Mercedes-Benz.



If the maintenance service indicator was inadvertently reset, have an authorized Mercedes-Benz Light Truck Center correct it.

Only reset if the proper maintenance service has been performed. Resetting the system without performing the proper maintenance service as called for by the maintenance service indicator will result in engine damage and/or other vehicle damage not covered by the Mercedes-Benz Limited Warranty.

## ▼ Vehicle care

### Cleaning and care of the vehicle

#### Warning!



Many cleaning products can be hazardous. Some are poisonous, others are flammable. Always follow the instructions on the particular container. Always open your vehicle's doors or windows when cleaning the inside.

Never use fluids or solvents that are not designed for cleaning your vehicle.

While in operation, even while parked, your vehicle is subjected to varying external influences which, if gone unchecked, can attack the paintwork as well as the underbody and cause lasting damage.

Such damage is caused not only by extreme and varying climatic conditions, but also by:

- Air pollution
- Road salt
- Tar
- Gravel and stone chipping

To avoid paint damage, you should immediately remove:

- Grease and oil
- Fuel
- Coolant
- Brake fluid
- Bird droppings
- Insects
- Tree resins, etc.

Frequent washing reduces and/or eliminates the aggressiveness and potency of the above adverse influences.

More frequent washings are necessary to deal with unfavorable conditions:

- Near the ocean
- In industrial areas (smoke, exhaust emissions)
- During winter operation

You should check your vehicle from time to time for stone chipping or other damage. Any damage should be repaired as soon as possible to prevent corrosion.

In doing so, do not neglect the underbody of the vehicle. A prerequisite for a thorough check is a washing of the underbody followed by a thorough inspection. Damaged areas need to be re-undercoated.

Your vehicle has been treated at the factory with a wax-base rustproofing in the body cavities which will last for the lifetime of the vehicle. Post-production treatment is neither necessary nor recommended by Mercedes-Benz because of the possibility of incompatibility between materials used in the production process and others applied later.

### Vehicle care

We have selected car-care products and compiled recommendations which are specially matched to our vehicles and which always reflect the latest technology. You can obtain Mercedes-Benz approved car-care products at an authorized Mercedes-Benz Light Truck Center.

Scratches, corrosive deposits, corrosion or damage due to negligent or incorrect care cannot always be removed or repaired with the car-care products recommended here. In such cases it is best to seek aid at an authorized Mercedes-Benz Light Truck Center.

The following topics deal with the cleaning and care of your vehicle and give important “how-to” information as well as references to Mercedes-Benz approved car-care products.

#### Power washer

When using a power washer for cleaning the vehicle, always observe manufacturer’s operating instructions.



Never use a round nozzle to power-wash tires. The intense jet of water can result in damage to the tire.

Always replace a damaged tire.

Always keep the jet of water moving across the surface. Do not aim directly at electrical parts, electrical connectors, sensors, seals, or other rubber parts.

#### Tar stains

Quickly remove tar stains before they dry and become more difficult to remove. A tar remover is recommended.

#### Paintwork, painted body components

Mercedes-Benz approved Paint Care should be applied when water drops on the paint surface do not “bead up”, normally every three to five months, depending on climate and washing detergent used.

Mercedes-Benz approved Paint Cleaner should be applied if the paint surface shows signs of dirt embedding (i.e. loss of gloss).

Do not apply any of these products or wax if your vehicle is parked in the sun or if the hood is still hot.

- ▶ Use the appropriate MB-Touch-Up Stick for quick and provisional repairs of minor paint damage (i.e. chips from stones, vehicle doors, etc.).

### Engine cleaning

Prior to cleaning the engine compartment, make sure to protect electrical components and connectors from the intrusion of water and cleaning agents.

Corrosion protection, such as MB Anticorrosion Wax should be applied to the engine compartment after every engine cleaning. Before applying, all control linkage bushings and joints should be lubricated. The poly-V-belt and all pulleys should be protected from any wax.

### Vehicle washing

Do not use hot water or wash your vehicle in direct sunlight. Use only a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo.

Thoroughly spray the vehicle with a diffused jet of water. Direct only a very weak spray towards the ventilation intake. Use plenty of water and rinse the sponge and chamois frequently.

Rinse with clear water and thoroughly dry with a chamois. Do not allow cleaning agents to dry on the finish.

Due to the width of the vehicle, fold in exterior rear view mirrors prior to running the vehicle through an automatic car wash to prevent damage to the mirrors.

In the winter, thoroughly remove all traces of road salt as soon as possible.

When washing the underbody, do not forget to clean the inner sides of the wheels.

### Ornamental moldings


For regular cleaning and care of very dirty chrome-plated parts, use a chrome cleaner.

### Headlamps, tail lamps, side marker, turn signal lenses

► Use a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo, with plenty of water.

To prevent scratches, never apply strong force and use only a soft, non-scratchy cloth when cleaning the lenses. Do not attempt to wipe dirty lenses with a dry cloth or sponge.

### Cleaning the Rear Parking Assist sensors\*

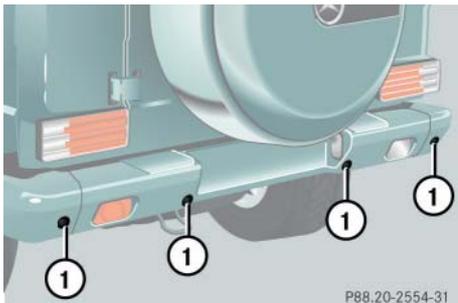

#### ① Sensor

- ▶ Use a mild car wash detergent, such as Mercedes-Benz approved Car Shampoo, with plenty of water to clean sensors ①.

To prevent scratches, never apply strong force and use only a soft, non-scratchy cloth when cleaning the sensors. Do not attempt to wipe dirty sensors with a dry cloth or sponge.

### Wiper blades

- ▶ Fold wiper arms forward.

#### Warning!



For safety reasons, switch off wipers and remove SmartKey from starter switch before cleaning the wiper blades. Otherwise, the wiper motor can suddenly turn on and cause injury.

- ▶ Clean the wiper blade inserts with a clean cloth and detergent solution.



Fold the windshield wiper arms back onto the windshield before turning the SmartKey in the starter switch.

Hold on to the wiper when folding the wiper arm back. If released, the force of the impact from the tensioning spring could crack the windshield.

### Window cleaning

- ▶ Fold wiper arms forward.

#### Warning!



For safety reasons, switch off wipers and remove SmartKey from starter switch before cleaning the windshield. Otherwise, the wiper motor can suddenly turn on and cause injury.

- ▶ Use a window cleaning solution on all glass surfaces.

An automotive glass cleaner is recommended.



Fold the windshield wiper arms back onto the windshield before turning the SmartKey in the starter switch.

Hold on to the wiper when folding the wiper arm back. If released, the force of the impact from the tensioning spring could crack the windshield.

### Light alloy wheels

Mercedes-Benz approved Wheel Care should be used for regular cleaning of the light alloy wheels.

If possible, clean wheels once a week with Mercedes-Benz approved Wheel Care, using a soft bristle brush and a strong spray of water.

Follow instructions on container.



Only use acid-free cleaning materials. Acid may cause corrosion or damage the clear coat.

### Instrument cluster

Use a gentle dishwashing detergent or mild detergent for delicate fabrics as a washing solution. Wipe with a cloth moistened in lukewarm solution. Do not use scouring agents.

### Steering wheel and gear selector lever

Wipe with a damp cloth and dry thoroughly or clean with Mercedes-Benz approved Leather Care.

### Cup holder

Use a gentle dishwashing detergent or mild detergent for delicate fabrics as a washing solution. Wipe with a cloth moistened in lukewarm solution. Do not use scouring agents.

### Hard plastic trim items

Pour Mercedes-Benz approved Interior Care onto soft lint-free cloth and apply with light pressure.

### Headliner

Clean with soft bristle brush, or use a dry-shampoo cleaner in case of excessive dirt.

### Seat belts

The webbing must not be treated with chemical cleaning agents. Use only clear, lukewarm water and soap. Do not dry the webbing at temperatures above 176°F (80°C) or in direct sunlight.

### Warning!



Do not bleach or dye seat belts as this may severely weaken them. In a crash they may not be able to provide adequate protection.

### Vehicle care

#### **Upholstery**

Using aftermarket seat covers or wearing clothing that have the tendency to give off coloring (e.g. when wet, etc.) may cause the upholstery to become permanently discolored. By lining the seats with a proper intermediate cover, contact-discoloration will be prevented.

#### ***Leather upholstery***

Wipe leather upholstery with a damp cloth and dry thoroughly or clean with Mercedes-Benz approved Leather Care. Exercise particular care when cleaning perforated leather as its underside should not become wet.

#### ***Cloth upholstery***

Clean with soft bristle brush, or use a dry-shampoo cleaner in case of excessive dirt.

#### **MB Tex upholstery**

Pour Mercedes-Benz approved Interior Care onto soft lint-free cloth and apply with light pressure.

#### **Plastic and rubber parts**

Do not use oil or wax on these parts.

#### **Illuminated door sill panels**

Use a gentle dishwashing detergent or mild detergent for delicate fabrics as a washing solution. Wipe with a cloth moistened in lukewarm solution. Do not use scouring agents.

#### **Wood trims**

Dampen cloth using water and use damp cloth to clean wood trims in your vehicle. Do not use solvents like tar remover or wheel cleaner nor polishes or waxes as these may be abrasive.



## Practical hints

What to do if ...

Where will I find...?

Unlocking/locking in an emergency

Opening/closing in an emergency

Brush guard\*

Replacing SmartKey batteries

Replacing bulbs

Replacing wiper blades

Flat tire

Battery

Jump starting

Towing the vehicle

Fuses

### What to do if ...

#### Lamps in instrument cluster

General information:

If any of the following lamps in the instrument cluster fails to come on during the

bulb self-check when switching on ignition, have the respective bulb checked and replaced if necessary.

Problem	Possible cause	Suggested solution
 <p>The yellow ABS indicator lamp comes on while driving.</p>	<p>You engaged the differential locks. The ABS, ESP, BAS, EBB and 4-ETS are switched off.</p> <p>The ABS has detected a malfunction and has switched off. The ESP, BAS, EBB and 4-ETS are also switched off (see messages in display).</p> <p>If the ABS control unit is malfunctioning, other systems such as the navigation system or Rear Parking Assist* may also malfunction.</p> <p>The brake system is still functioning normally but without the ABS available.</p>	<ul style="list-style-type: none"> <li>▶ The driving systems will switch on again after the differential locks have been disengaged.</li> <li>▶ Continue driving with added caution. Wheels will lock during hard braking reducing steering capability.</li> <li>▶ Read and observe messages in the multifunction display (▷ page 300).</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of an accident.</p>

Problem	Possible cause	Suggested solution
 <p>The yellow ABS indicator lamp comes on while driving.</p>	<p>The ABS has switched off because charging voltage has fallen below 10 volts. The battery may not be charged.</p>	<ul style="list-style-type: none"> <li>▶ Turn off unnecessary electric consumers.</li> </ul> <p>When the battery voltage is above this value again, the ABS is operational again.</p> <ul style="list-style-type: none"> <li>▶ Note the messages in the multifunction display (▷ page 298).</li> </ul>

### What to do if ...

Problem	Possible cause	Suggested solution
<p><b>BRAKE</b> (USA only)</p> <p> (Canada only)</p> <p>The red brake warning lamp comes on while driving and you hear a warning sound.</p>	You are driving with the parking brake set.	<ul style="list-style-type: none"> <li>▶ Release the parking brake (▷ page 50).</li> <li>▶ Also note the messages in the multi-function display (▷ page 298).</li> </ul>
<p>The red brake warning lamp comes on while driving.</p>	There is insufficient brake fluid in the reservoir.	<ul style="list-style-type: none"> <li>▶ Risk of accident! Carefully stop the vehicle and notify an authorized Mercedes-Benz Light Truck Center. Do not add brake fluid! This will not solve the problem.</li> <li>▶ Also note the messages in the multi-function display (▷ page 298).</li> </ul>

### Warning!



Driving with the brake warning lamp illuminated can result in an accident. Have your brake system checked immediately if the brake warning lamp stays on.

Do not add brake fluid before checking the brake system. Overfilling the brake fluid reservoir can result in spilling brake fluid on hot engine parts and the brake fluid catching fire. You could be seriously burned.



If you find that the brake fluid in the brake fluid reservoir has fallen to the minimum mark or below, have the brake system checked for brake pad thickness and leaks.

Problem	Possible cause	Suggested solution
<p> (USA only)</p> <p> (Canada only)</p> <p> The red brake warning lamp and the yellow ABS indicator lamp come on when the engine is running and you hear a warning sound for approximately five seconds.</p>	<p>The EBB has detected a malfunction and has switched off. You should be prepared for your vehicle to perform differently than normal when braking.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> <li>▶ Also note the messages in the multi-function display (▷ page 298).</li> </ul> <p>Failure to follow these instructions increases the risk of accidents.</p>

### What to do if ...

Problem	Possible cause	Suggested solution
<p><b>CHECK ENGINE</b> (USA only)</p> <p> (Canada only)</p> <p>The yellow engine malfunction indicator lamp comes on while driving.</p>	<p>There is a malfunction of:</p> <ul style="list-style-type: none"> <li>• The fuel management system</li> <li>• The ignition system</li> <li>• The emission control system</li> <li>• Systems which impact emissions</li> </ul> <p>Such malfunctions may result in excessive emissions values and may switch the engine to its limp-home mode. Serious damage can occur to the emission system.</p> <p>A loss of pressure has been detected in the fuel system. The fuel cap may not be closed properly or the fuel system may be leaky.</p> <p>Your fuel tank is empty.</p>	<p>▶ Have the vehicle checked as soon as possible by an authorized Mercedes-Benz Light Truck Center.</p> <p>An on-board diagnostic connector is used by the service station to link the vehicle to the shop diagnostics system. It allows the accurate identification of system malfunctions through the readout of diagnostic trouble codes. It is located near the hood lock release on the upper left of footwell.</p> <p>▶ Check the fuel cap (▷ page 239).</p> <p>If it is not closed properly:</p> <p>▶ Close the fuel cap.</p> <p>If it is closed properly:</p> <p>▶ Have the fuel system checked by an authorized Mercedes-Benz Light Truck Center.</p> <p>▶ After refueling start, turn off and restart the engine three or four times in succession.</p> <p>The limp-home mode is canceled. You do not need to have your vehicle checked.</p>

Problem	Possible cause	Suggested solution
 <p>The yellow ESP warning lamp comes on and remains on while driving.</p>	<p>You engaged the differential locks. The ABS, ESP, BAS, EBB and 4-ETS are switched off.</p>	<ul style="list-style-type: none"> <li>▶ The driving systems will switch on again after the differential locks have been disengaged.</li> <li>▶ Also note the messages in the multi-function display (▷ page 298).</li> </ul>
	<p>The ESP is deactivated.</p> <p>Risk of accident! Adapt your speed and driving to the prevailing road conditions.</p>	<ul style="list-style-type: none"> <li>▶ Turn the ESP back on (▷ page 87).</li> </ul> <p>If the ESP cannot be turned back on, have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</p>
	<p>The ESP is deactivated because of interrupted power supply. The ABS may still be operational. The ESP has to be synchronized.</p>	<ul style="list-style-type: none"> <li>▶ Note the messages in the multifunction display (▷ page 298).</li> </ul>
	<p>The ESP, ABS, BAS, EBB or 4-ETS has detected a malfunction. All driving systems are switched off.</p> <p>Risk of accident! Adapt your speed and driving to the prevailing road conditions.</p>	<ul style="list-style-type: none"> <li>▶ Note the messages in the multifunction display (▷ page 298).</li> </ul>

### What to do if ...

Problem	Possible cause	Suggested solution
 The red seat belt telltale illuminates briefly after starting the engine.	The warning lamp reminds you to fasten seat belts.	<ul style="list-style-type: none"> <li>▶ Fasten your seat belt.</li> </ul>
The yellow fuel tank reserve warning lamp illuminates while driving.	The fuel level has gone below the reserve mark.	<ul style="list-style-type: none"> <li>▶ Refuel at the next gas station.</li> <li>▶ Also note the messages in the multifunction display (▷ page 298).</li> </ul>
The yellow fuel tank reserve warning lamp is blinking.	The fuel cap is not closed tight.	<ul style="list-style-type: none"> <li>▶ Check the fuel cap.</li> </ul>
 The red SRS indicator lamp comes on while driving.	There is a malfunction in the restraint systems. The airbags or emergency tensioning device (ETD) could deploy unexpectedly or fail to activate in an accident.	<ul style="list-style-type: none"> <li>▶ Drive with added caution to the nearest authorized Mercedes-Benz Light Truck Center.</li> </ul>

### Warning!



In the event a malfunction of the SRS is indicated as outlined above, the SRS may not be operational.

For your safety, we strongly recommend that you visit an authorized Mercedes-Benz Light Truck Center immediately to have the system checked; otherwise the SRS may not be activated when needed in an accident.

This could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could also result in an accident and/or injury to you or to others.

## Lamp in center console

Problem	Possible cause	Suggested solution
 The indicator lamp comes on.	A BabySmart™ <sup>1</sup> child seat is installed on the front passenger seat. Therefore the passenger front airbag is switched off.  The system is malfunctioning when there is no BabySmart™ child seat installed on the front passenger seat.	<ul style="list-style-type: none"> <li>▶ Have the system checked as soon as possible by an authorized Mercedes-Benz Light Truck Center.</li> </ul>
 The indicator lamp does not come on with a BabySmart™ child seat properly installed on the front passenger seat.	The system is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Make sure there is nothing between seat cushion and child seat and check installation of the child seat.</li> <li>▶ If the light remains out, have the system checked as soon as possible by an authorized Mercedes-Benz Light Truck Center.</li> </ul> <p>Do not use the BabySmart™ restraint to transport children on the front passenger seat until the system has been repaired.</p>

<sup>1</sup> BabySmart™ is a trademark of Siemens Automotive Corp.

### What to do if ...

#### Vehicle status messages in the multifunction display

Warning and malfunction messages appear in the multifunction display located in the instrument cluster.

Certain warning and malfunction messages are accompanied by an audible signal.

Address these messages accordingly and follow the additional instructions given in this Operator's Manual.

Selecting the vehicle status message memory menu in the control system (▷ page 131) displays both cleared and uncleared messages.

High-priority messages appear in the multifunction display in red color.

Certain messages of high priority cannot be cleared from the multifunction display using the reset button (▷ page 120) or button , , , or  on the steering wheel.

Other messages of high priority and messages of less immediate priority (regular display colors) can be cleared from the multifunction display using the reset button (▷ page 25) or button , , , or  on the steering wheel. They are then stored in the vehicle status message memory (▷ page 131). Remember that clearing a message will only make the message disappear. Clearing a message will not correct the condition that caused the message to appear.

#### Warning!



All categories of messages contain important information which should be taken note of and, where a malfunction is indicated, addressed as soon as possible at an authorized Mercedes-Benz Light Truck Center.

Failure to repair condition noted may cause damage not covered by the Mercedes-Benz Limited Warranty, or result in property damage or personal injury.

**Warning!**

No messages will be displayed if either the instrument cluster or the multifunction display is inoperative. Systems that have a significant influence on handling performance may not be functioning.

Contact your nearest authorized Mercedes-Benz Light Truck Center.



Switching on ignition (> page 35), causes all instrument cluster lamps (except high beam headlamp indicator lamp and turn signal indicator lamps unless activated) as well as the multifunction display to come on. Make sure the lamps and multifunction display are all in working order before starting your journey.

On the pages that follow, you will find a compilation of the most important warning and malfunction messages that may appear in the multifunction display.

For your convenience the messages are divided into two sections:

- Text messages (> page 300)
- Symbol messages (> page 304)

## What to do if ...

### Text messages

Display symbol	Display message	Possible cause	Possible solution
ABS	ABS SYSTEM VISIT WORKSHOP!	<p>The ABS has detected a malfunction and has switched off. The ESP, BAS, EBB and 4-ETS are also deactivated.</p> <p>The brake system is still functioning normally but without the ABS available. Wheels will lock during hard braking, reducing steering capability.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>
	VISIT WORKSHOP! DISPLAY MALFUNCTION:	<p>The ABS or the ABS display is malfunctioning.</p> <p>Wheels will lock in hard braking reducing steering capability.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>
BAS	BRAKE ASSIST VISIT WORKSHOP!	<p>The BAS has detected a malfunction and switched off.</p> <p>The brake system is still functioning normally but without the BAS available. Wheels will lock in hard braking reducing steering capability.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>

Display	Display message	Possible cause	Possible solution
BAS	VISIT WORKSHOP! DISPLAY MALFUNCTION:	The BAS or the BAS display is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>
DIFFERENTIAL LOCK	ABS NOT AVAILABLE DIFFERENTIAL LOCKED	You have engaged the differential locks.	<ul style="list-style-type: none"> <li>▶ The ABS switches on again after the differential locks have been disengaged.</li> </ul>
ESP	VISIT WORKSHOP! DISPLAY MALFUNCTION:	The ESP or the ESP display is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>
	ESP NOT AVAILABLE	The ESP is temporarily unavailable. The self-diagnosis has not been completed.	The display will clear itself after driving a short-distance at more than approximately 12 mph (20 km/h).

### What to do if ...

Display	Display message	Possible cause	Possible solution
ESP	ESP NOT AVAILABLE	The charging voltage has fallen below 10 volts and the ESP has switched off.	<ul style="list-style-type: none"> <li>▶ When the voltage is above this value again, the ESP is operational again.</li> <li>▶ If necessary, have the generator (alternator) and battery checked.</li> </ul>
		<p>The ESP is deactivated because of a malfunction or interrupted power supply. The ABS and BAS might not be operational. The system must be resynchronized.</p>	<ul style="list-style-type: none"> <li>▶ Synchronize the ESP. With vehicle stationary and the engine running, turn the steering wheel completely to the left and then to the right to synchronize the ESP.</li> </ul> <p>If the ESP message does not go out:</p> <ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>



When synchronizing the ESP, make sure you can turn the steering wheel in

both directions as far as it will go without the wheels hitting any objects, e.g. a road curb.

Display	Display message	Possible cause	Possible solution
ESP	ESP VISIT WORKSHOP!	<p>The ESP is switched off due to a malfunction or an interruption in the power supply.</p> <p>The brake system is still functioning normally but without ESP, ABS and BAS available.</p> <p>If in addition the ABS is malfunctioning, only partial engine output will be available.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>

## What to do if ...

### Symbol messages

Display symbol	Display message	Possible cause	Possible solution
	BATTERY/ALTERNATOR VISIT WORKSHOP!	The battery was charged with a battery charger or jump started.	▶ Have the battery checked at a service station.
		The battery is no longer charging. Possible causes: <ul style="list-style-type: none"> <li>• alternator malfunctioning</li> <li>• broken poly-V-belt</li> </ul>	▶ Stop immediately and check the poly-V-belt.  If it is broken: ▶ Do not continue to drive. Otherwise the engine will overheat due to an inoperative water pump which may result in serious engine damage not covered by the Mercedes-Benz Limited Warranty. Notify an authorized Mercedes-Benz Light Truck Center.  If it is intact: ▶ Turn off unnecessary electric consumers. ▶ Drive immediately to the nearest authorized Mercedes-Benz Light Truck Center.
	UNDervOLTAGE ENGINE ON!	The battery has insufficient voltage.	▶ Start the engine.

Display symbol	Display message	Possible cause	Possible solution
	UNDervOLTAGE SWITCH CONSUMERS OFF!	The battery has insufficient voltage.	► Have the battery checked at a service station.
	BRAKE WEAR VISIT WORKSHOP!	The brake pads have reached their wear limit.	► Have the brake pads replaced as soon as possible.
	BRAKE FLUID VISIT WORKSHOP!	There is insufficient brake fluid in the reservoir.	► Risk of accident! Stop the vehicle and notify an authorized Mercedes-Benz Light Truck Center. Do not add brake fluid! This will not solve the problem.

**Warning!**



Driving with the message BRAKE FLUID VISIT WORKSHOP displayed can result in an accident. Have your brake system checked immediately.

Do not add brake fluid before checking the brake system. Overfilling the brake fluid reservoir can result in spilling brake fluid on hot engine parts and the brake fluid catching fire. You can be seriously burned.



If you find that the brake fluid in the brake fluid reservoir has fallen to the minimum mark or below, have the brake system checked for brake pad thickness and leaks.



Brake pad thickness must be visually checked by a qualified technician at the intervals specified in the Maintenance Booklet.

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	ELEC. BRAKE BOOST. VISIT WORKSHOP!	<p>The EBB has detected a malfunction and has switched off.</p> <p>The brake system is still functioning normally but without the EBB available.</p>	<ul style="list-style-type: none"> <li>▶ Continue driving with added caution.</li> <li>▶ Have the system checked at an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul> <p>Failure to follow these instructions increases the risk of accident.</p>
<b>BRAKE</b> (USA only)  (Canada only)	PARK. BRAKE RELEASE BRAKE!	You are driving with the parking brake set.	<ul style="list-style-type: none"> <li>▶ Release the parking brake (▷ page 50).</li> </ul>

Display symbol	Display message	Possible cause	Possible solution
	COOLANT CHECK LEVEL!	The coolant level is too low.	<ul style="list-style-type: none"> <li>▶ Add coolant (▷ page 248).</li> <li>▶ If you have to add coolant frequently, have the cooling system checked by an authorized Mercedes-Benz Light Truck Center.</li> </ul>

**Warning!**



Do not spill antifreeze on hot engine parts. Antifreeze contains ethylene glycol which may burn if it comes into contact with hot engine parts. You could be seriously burned.



Do not ignore the low engine coolant level warning. Extended driving with the message and symbol displayed may cause serious engine damage not covered by the Mercedes-Benz Limited Warranty.

Do not drive without sufficient amount of coolant in the cooling system. The engine will overheat causing serious engine damage.

Observe the coolant temperature display (▷ page 120).

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	COOLANT STOP, ENGINE OFF!	The coolant is too hot.	<ul style="list-style-type: none"><li>▶ Stop the vehicle and turn off the engine.</li><li>▶ Only start the engine again after the message disappears. You could otherwise damage the engine.</li></ul>

#### Warning!



Driving when your engine is badly overheated can cause some fluids which may have leaked into the engine compartment to catch fire. You could be seriously burned.

Steam from an overheated engine can cause serious burns and can occur just by opening the hood. Stay away from the engine if you see or hear steam coming from it.

Turn off the engine, get out of the vehicle and do not stand near the vehicle until the engine has cooled down.

During severe operating conditions and stop-and-go city traffic, the coolant temperature may rise close to 248°F (120°C).



The engine should not be operated with the coolant temperature above 248°F (120°C). Doing so may cause serious engine damage which is not covered by the Mercedes-Benz Limited Warranty.

Display symbol	Display message	Possible cause	Possible solution
	COOLANT STOP, ENGINE OFF!	The poly-V-belt could be broken.	<ul style="list-style-type: none"> <li>▶ Stop the vehicle and immediately turn off the engine.</li> <li>▶ Check the poly-V-belt.</li> </ul> <p>If it is broken:</p> <ul style="list-style-type: none"> <li>▶ Do not continue to drive. Otherwise the engine will overheat due to an inoperative water pump which may result in damage to the engine. Notify an authorized Mercedes-Benz Light Truck Center.</li> </ul> <p>If it is in order:</p> <ul style="list-style-type: none"> <li>▶ Do not continue to drive the vehicle with this message displayed. Doing so could result in serious engine damage that is not covered by the Mercedes-Benz Limited Warranty.</li> <li>▶ Observe the coolant temperature display (▷ page 120).</li> <li>▶ Drive immediately to the nearest authorized Mercedes-Benz Light Truck Center.</li> </ul>

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	COOLANT VISIT WORKSHOP!	The cooling fan for the coolant is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Observe the coolant temperature display (▷ page 120).</li> <li>▶ Have the fan replaced as soon as possible.</li> </ul>
	CRUISE CONTROL VISIT WORKSHOP!	Cruise control is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Visit an authorized Mercedes-Benz Light Truck Center.</li> </ul>
	DOOR OPEN!	You are attempting to drive with one or more doors open.	<ul style="list-style-type: none"> <li>▶ Close the doors.</li> </ul>
	ENGINE AIR FILTER VISIT WORKSHOP!	The engine air filter is clogged and must be replaced.	<ul style="list-style-type: none"> <li>▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul>

Display symbol	Display message	Possible cause	Possible solution
	<p>USA only: ADD 1.0 Qt. ENGINE OIL WHEN NEXT REFUELING!</p> <p>Canada only: ADD 1.0 LITER ENG. OIL WHEN NEXT REFUELING!</p>	The engine oil level is too low.	<p>► Add engine oil (▷ page 247) and check the engine oil level (▷ page 244).</p>

When the ADD 1.0 QT. ENG. OIL - WHEN NEXT REFUELLING! (Canada: 1.0 LITER) message appears while the engine is running and at operating temperature, the engine oil level has dropped to approximately the minimum level.

When this occurs, the warning will first come on intermittently and then stay on if the oil level drops further.

Visually check for oil leaks. If no obvious oil leaks are noted, drive to the nearest service station where the engine oil should be topped to the required level with an approved oil specified in the Factory Approved Service Products pamphlet.



The engine oil level warnings should not be ignored. Extended driving with the symbol displayed could result in serious engine damage that is not covered by the Mercedes-Benz Limited Warranty.

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	ENGINE OIL LEVEL REDUCE OIL LEVEL!	You have added too much engine oil. There is a risk of damaging the engine or the catalytic converter.	<ul style="list-style-type: none"> <li>▶ Have oil siphoned or drained off. Observe all legal requirements with respect to its disposal.</li> </ul>
	ENGINE OIL LEVEL STOP, ENGINE OFF!	There is no oil in the engine. There is a danger of engine damage.	<ul style="list-style-type: none"> <li>▶ Carefully bring the vehicle to a halt as soon as possible.</li> <li>▶ Turn off the engine.</li> <li>▶ Add engine oil (▷ page 247) and check the engine oil level (▷ page 244).</li> </ul>
	ENGINE OIL VISIT WORKSHOP!	It may be that there is water in the engine oil.	<ul style="list-style-type: none"> <li>▶ Have the oil checked.</li> </ul>
	ENGINE OIL LEVEL VISIT WORKSHOP!	The engine oil has dropped to a critical level.	<ul style="list-style-type: none"> <li>▶ Check the engine oil level (▷ page 244) and add oil as required (▷ page 247).</li> <li>▶ If you must add engine oil frequently, have the engine checked for possible leaks.</li> </ul>
		The measuring system is malfunctioning.	<ul style="list-style-type: none"> <li>▶ Have the measuring system checked by an authorized Mercedes-Benz Light Truck Center.</li> </ul>

Display symbol	Display message	Possible cause	Possible solution
	RESERVE FUEL GO TO GAS STATION	The fuel level has dropped below the reserve mark.	▶ Refuel at the next gas station (▷ page 239).
	CHECK GAS CAP SEE OPERATOR'S MANUAL	A loss of pressure has been detected in the fuel system. The fuel cap may not be closed properly or the fuel system may be leaky.	▶ Check the fuel cap (▷ page 239). If it is not closed properly: ▶ Close the fuel cap. If it is closed properly: ▶ Have the fuel system checked by an authorized Mercedes-Benz Light Truck Center.
	HOOD OPEN!	You are driving with the hood open.	▶ Close the hood (▷ page 243).
	REMOVE KEY!	You have forgotten to remove the SmartKey.	▶ Remove the SmartKey from the starter switch.
	REPLACE KEY DRIVE TO WORKSHOP!	No additional code available for SmartKey.	▶ Visit an authorized Mercedes-Benz Light Truck Center.

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	3RD BRAKE LIGHT CHECK LIGHT!	The high mounted brake lamp is malfunctioning. This message will only appear if all light emitting diodes have stopped working.	▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	ADD. TURN SIG., L CHECK LIGHT!	The left turn signal in the exterior rear view mirror is malfunctioning. This message will only appear if all light emitting diodes have stopped working.	▶ Have the LEDs replaced as soon as possible.
	ADD. TURN SIG., R CHECK LIGHT!	The right turn signal in the exterior rear view mirror is malfunctioning. This message will only appear if all light emitting diodes have stopped working.	▶ Have the LEDs replaced as soon as possible.
	AUTOM. LIGHT ON REMOVE KEY!	You have left the SmartKey in the starter switch.	▶ Remove the SmartKey from the starter switch.
	BRAKE LIGHT DRIVE TO WORKSHOP!	Brake lamp illumination is delayed or lamp is permanently on.	▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	BRAKE LIGHT, L CHECK LIGHT!	The left brake lamp is malfunctioning.	▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.

Display symbol	Display message	Possible cause	Possible solution
	BRAKE LIGHT, R CHECK LIGHT!	The right brake lamp is malfunctioning.	► Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	FRONT FOGLIGHT, L CHECK LIGHT!	The left front fog lamp is malfunctioning.	► Replace the bulb as soon as possible.
	FRONT FOGLIGHT, R CHECK LIGHT!	The right front fog lamp is malfunctioning.	► Replace the bulb as soon as possible.
	FR. L. PARK. LAMP CHECK LIGHT! BACK-UP LIGHT ON!	The left parking lamps are malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.
	FR. R. PARK LAMP CHECK LIGHT! BACK-UP LIGHT ON!	The right parking lamps are malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.
	HIGH BEAM, L CHECK LIGHT!	The left high beam lamp is malfunctioning.	► Replace the bulb as soon as possible.
	HIGH BEAM, R CHECK LIGHT!	The right high beam lamp is malfunctioning.	► Replace the bulb as soon as possible.

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	LIGHT SENSOR DRIVE TO WORKSHOP!	The lamp sensor is malfunctioning. The headlamps switch on automatically.	<ul style="list-style-type: none"> <li>▶ In the control system, set lamp operation to manual (▷ page 138).</li> <li>▶ Switch on headlamps using the exterior lamp switch (▷ page 110).</li> <li>▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.</li> </ul>
	LICENSE PLATE LIGHT, L CHECK LIGHT!	The left license plate lamp is malfunctioning.	▶ Replace the bulb as soon as possible.
	LICENSE PLATE LIGHT R CHECK LIGHT!	The right license plate lamp is malfunctioning.	▶ Replace the bulb as soon as possible.
	LIGHTS TURN OFF LIGHTS!	The display appears if the driver's door is opened with the engine shut off and no SmartKey in the starter switch.	<ul style="list-style-type: none"> <li>▶ Insert SmartKey in the starter switch.</li> <li>▶ Switch off the lights (▷ page 110).</li> </ul>
	LOW BEAM, L CHECK LIGHT!	The left low beam lamp is malfunctioning.	▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	LOW BEAM, R CHECK LIGHT!	The right low beam lamp is malfunctioning.	▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.

Display symbol	Display message	Possible cause	Possible solution
	MARKER LIGHT, FL CHECK LIGHT!	The left front side marker lamp is malfunctioning.	► Replace the bulb as soon as possible.
	MARKER LIGHT, FR CHECK LIGHT!	The right front side marker lamp is malfunctioning.	► Replace the bulb as soon as possible.
	REAR FOGLIGHT CHECK LIGHT!	The rear fog lamp is malfunctioning.	► Replace the bulb as soon as possible.
	REAR FOGLIGHT TURN OFF BACK-UP LIGHT ON!	A lamp is malfunctioning. A backup bulb is being used.	► Turn the rear fog lamp off.
	REVERSE LIGHT, R CHECK LIGHT!	The right backup lamp is malfunctioning.	► Replace the bulb as soon as possible.
	TAIL LIGHT, L CHECK LIGHT! BACK-UP LIGHT ON!	The left tail lamp is malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.
	TAIL LIGHT, R CHECK LIGHT! BACK-UP LIGHT ON!	The right tail lamp is malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.
	TURN SIG., LF CHECK LIGHT! BACK-UP LIGHT ON!	The left front turn signal lamp is malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	TURN SIG., RF CHECK LIGHT! BACK-UP LIGHT ON!	The right front turn signal lamp is malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.
	TURN SIG., LR CHECK LIGHT! BACK-UP LIGHT ON!	The left rear turn signal lamp is malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.
	TURN SIG., RR CHECK LIGHT! BACK-UP LIGHT ON!	The right rear turn signal lamp is malfunctioning. A backup bulb is being used.	► Replace the bulb as soon as possible.
	VISIT WORKSHOP! DISPLAY MALFUNCTION	The display for the lamps or the system is malfunctioning.	► Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	TURN SIG. MIRROR, L CHECK LIGHT!	The left turn signal in the side mirror is malfunctioning. This message will only appear if all light emitting diodes have stopped working.	► Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	TURN SIG. MIRROR, R CHECK LIGHT!	The right turn signal in the side mirror is malfunctioning. This message will only appear if all light emitting diodes have stopped working.	► Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.

Display symbol	Display message	Possible cause	Possible solution
<b>SRS</b>	RESTRAINT SYSTEM SERVICE	The system is malfunctioning. The airbags or emergency tensioning device (ETD) could deploy unexpectedly or fail to activate in an accident.	► Drive with added caution to the nearest authorized Mercedes-Benz Light Truck Center.
	RESTRAINT SYSTEM DRIVE TO WORKSHOP!	The system is malfunctioning. The airbags or emergency tensioning device (ETD) could deploy unexpectedly or fail to activate in an accident.	► Drive with added caution to the nearest authorized Mercedes-Benz Light Truck Center.

**Warning!**



In the event a malfunction of the SRS is indicated as outlined above, the SRS may not be operational.

For your safety, we strongly recommend that you visit an authorized Mercedes-Benz Light Truck Center immediately to have the system checked.

Otherwise the SRS may not be activated when needed in an accident, which could result in serious or fatal injury, or it might deploy unexpectedly and unnecessarily which could also result in injury.

### What to do if ...

Display symbol	Display message	Possible cause	Possible solution
	SEAT BELT SYSTEM DRIVE TO WORKSHOP!	The seat belt system is malfunctioning.	▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	TC IN NEUTRAL	No gear has been selected in the transfer case, it is in <b>NEUTRAL</b> .	▶ Engage transfer case to gear position <b>HIGH</b> or <b>LOW</b> (▷ page 157).

### Warning!



If the transfer case is in **NEUTRAL**, the **P** position of the transmission will not hold the vehicle. The parking brake must be applied to hold vehicle in place.

Display symbol	Display message	Possible cause	Possible solution
	TC SHIFT CANCELLED	The shift process in the transfer case was canceled because of a malfunction.	▶ Repeat the shift process (▷ page 157).
	TC SHIFT CONDITIONS NOT FULFILLED	You have not met the shift conditions for a selection process in the transfer case.	▶ Repeat the shift process (▷ page 157).
	TRANSFER CASE VISIT WORKSHOP!	The transfer case is malfunctioning.	▶ Do not switch the transfer case on. ▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	CLOSE SUNROOF!	You have opened the driver's door with the SmartKey removed from the starter switch and the sliding portion of the tilt/sliding sunroof open.	▶ Close the tilt/sliding sunroof (▷ page 178).
	CLOSE SUNROOF!	You have opened the driver's door with the SmartKey removed from the starter switch and the tilting portion of the tilt/sliding sunroof open.	▶ Close the tilt/sliding sunroof (▷ page 178).
	TELE AID DRIVE TO WORKSHOP!	One or more main functions of the Tele Aid system are malfunctioning.	▶ Have the Tele Aid system checked by an authorized Mercedes-Benz Light Truck Center.

### What to do if ...

Display		Possible cause	Possible solution
	FUNCTION NOT AVAILABLE!	This display appears if button  or  on the multifunction steering wheel is pressed and the vehicle is not equipped with a telephone.	
	TRUNK OPEN!	This message will appear whenever the tailgate is open.	▶ Close the tailgate.
	VISIT WORKSHOP! DISPLAY MALFUNCTION:	The instrument cluster display is malfunctioning.  Some systems themselves may also have failed.	▶ Continue driving with added caution. ▶ Visit an authorized Mercedes-Benz Light Truck Center as soon as possible.
	VISIT WORKSHOP! DISPLAY MALFUNCTION:	Certain electronic systems are unable to relay information to the control system. The following systems may have failed: <ul style="list-style-type: none"> <li>• Coolant temperature display</li> <li>• Tachometer</li> <li>• Cruise control display</li> </ul>	▶ Have the electronic systems checked by an authorized Mercedes-Benz Light Truck Center.
	WASHER FLUID CHECK LEVEL!	The fluid level has dropped to about $\frac{1}{3}$ of total reservoir capacity.	▶ Add washer fluid (▷ page 382).

▼ Where will I find...?

**First aid kit**

The first aid kit is stored in the storage pocket in the front passenger door.




① First aid kit



Check expiration dates and contents for completeness at least once a year and replace missing/expired items.

**Vehicle tool kit**

The vehicle tool kit is stored under a small floor mat and a cover in the rear footwell.

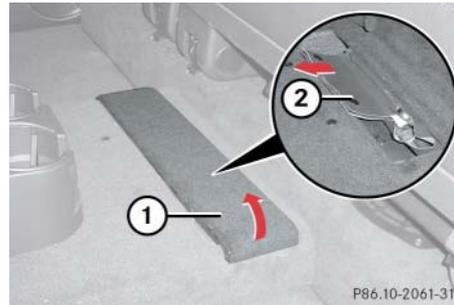

① Cover

② Tab

- ▶ Fold cover ① to the side.
- ▶ Pull vehicle tool kit out using tab ②.


The following is included:

- Vehicle tool kit
- Wheel wrench
- Fuse extractor

### Where will I find...?

#### Vehicle jack

The vehicle jack is under the rear bench seat on the passenger side.

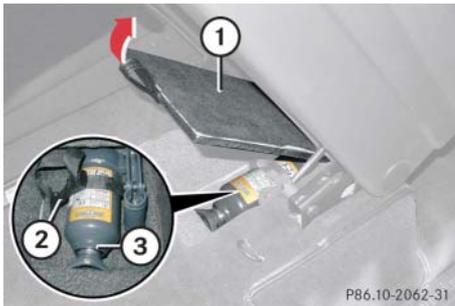

- ① Cover
- ② Tab
- ③ Vehicle jack

- ▶ Fold the rear bench seat forward (▷ page 189).
- ▶ Open cover ①.
- ▶ Open tab ② and remove vehicle jack ③.

#### Warning!



The jack is designed exclusively for jacking up the vehicle under the axle housing. To help avoid personal injury, use the jack only to lift the vehicle during a wheel change. Never get beneath the vehicle while it is supported by the jack. Keep hands and feet away from the area under the lifted vehicle. Always firmly set parking brake and block wheels before raising vehicle with jack.

Do not disengage parking brake while the vehicle is raised. Be certain that the jack is always vertical (plumb line) when in use, especially on hills. Always try to use the jack on level surface. Make sure the jack is positioned correctly under the axle housing. Always lower the vehicle onto sufficient capacity jackstands before working under the vehicle.

Please also observe the safety guidelines in the “Flat tire” section (▷ page 348) when using the jack.

#### CD changer

The CD changer is located on the left side of the cargo compartment.



#### CD changer




For CD changer instructions, see separate COMAND operator's manual.

## Spare wheel


The spare wheel is located under a cover on the outside of the vehicle's tailgate. For information on rim and tire specifications, see (▷ page 371) and (▷ page 373).

### Removing cover

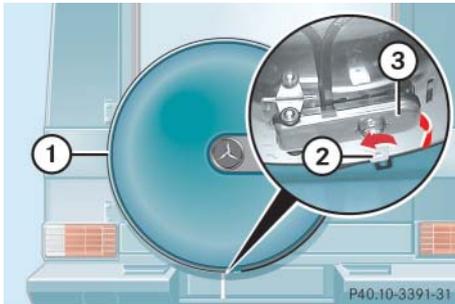


- ① Cover ring
- ② Key
- ③ Tab

- ▶ Open lock for cover ring ① with key ② for the spare wheel cover.
- ▶ Fold tab ③ downwards.

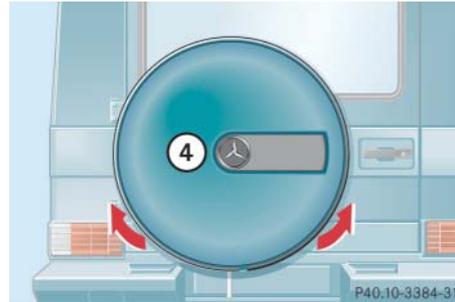

- ④ Cover plate
- ▶ Pull cover ring ① slightly outwards in direction of arrows and remove.
- ▶ Pull cover plate ④ upward towards you.

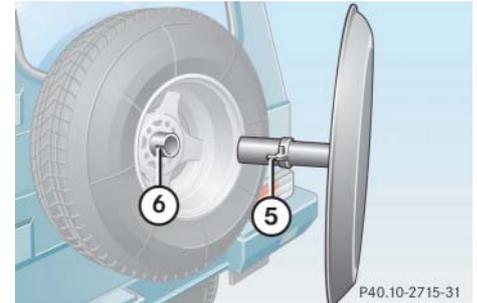

- ⑤ Catch
- ⑥ Recess

### i

When replacing cover plate ④, make sure catch ⑤ engages in recess ⑥. Make sure the lock faces downwards when mounting cover ring ①.

For safety reasons, check regularly that the spare wheel is securely fastened.

### Where will I find...?

#### Removing the spare wheel



① Mounting screws

- ▶ Unscrew mounting screws ①.
- ▶ Remove the spare wheel.

#### Warning!



Make sure no one is injured when removing the spare wheel.

Grip wheel from the sides.  
Keep hands from beneath the wheel.



After changing the wheel, secure the replaced wheel on the spare wheel carrier. Make sure the wheel cannot come loose.

Cover the wheel with the cover plate.

Repair or replace damaged tire as soon as possible and return spare tire as original spare.

For more information on changing the wheel, see “Flat tire” (▷ page 348).

Unlocking/locking in an emergency

▼ **Unlocking/locking in an emergency**

**Unlocking the vehicle**

If you cannot unlock the vehicle with the SmartKey, open the driver's door and the tailgate using the mechanical key.

The passenger door cannot be unlocked manually.



Unlocking your vehicle with the mechanical key will trigger the anti-theft alarm system. To cancel the alarm, do one of the following:

- Press button or on the SmartKey.
- Insert the SmartKey in the starter switch.



P80.35-2111-31

- ① Mechanical key locking tab
- ② Mechanical key


- ▶ Move locking tab ① in direction of arrow and slide the mechanical key ② out of the housing.

**Unlocking the driver's door**

- ▶ Unlock the door with the mechanical key. To do so, push the mechanical key in the lock until it stops and turn it to the left.

**Unlocking the tailgate**

If you are unable to unlock the tailgate with the SmartKey, open the tailgate with the mechanical key as follows:

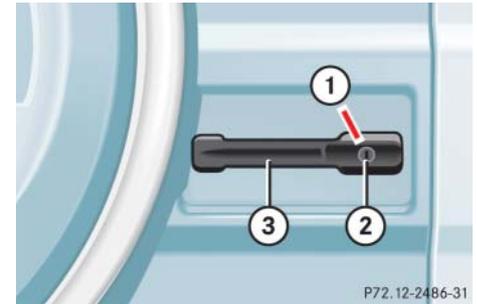

P72.12-2486-31

- ① Unlocking in an emergency
- ② Lock cylinder
- ③ Handle

- ▶ Insert the mechanical key into lock cylinder ②.
- ▶ Turn the mechanical key counterclockwise to position ① and release it.
- ▶ Remove the mechanical key.



### Unlocking/locking in an emergency

- ▷▷ Press lock cylinder ② and pull on tailgate handle ③.
- ▶ Open the tailgate to the side.

#### Warning!



The tailgate swings open to one side. Always make sure there is sufficient clearance for tailgate.



Unlocking your vehicle with the mechanical key will trigger the anti-theft alarm system. To cancel the alarm, do one of the following:

- Press button  or  on the SmartKey.
- Insert the SmartKey in the starter switch.


### Locking the vehicle

If you cannot lock the vehicle with the SmartKey, lock it with the mechanical key as follows:

- ▶ Close the passenger door, the rear doors and the tailgate.
- ▶ Press the central locking switch in the center console (▷ page 99).
- ▶ Check to see whether the locking knobs on the doors have moved down.
- ▶ If necessary, push them down manually.
- ▶ Slide the mechanical key ② out of the SmartKey.
- ▶ Lock the driver's door with the mechanical key.
- ▶ Check if the tailgate is locked. If necessary lock the tailgate with the mechanical key.

### Fuel filler flap

The emergency release is in the cargo compartment behind the rear panel trim.

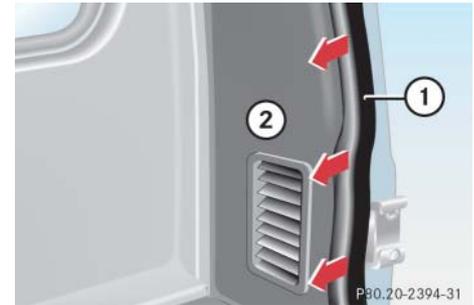

① Edge protection

② Rear panel trim

- ▶ Open the tailgate.
- ▶ Remove edge protection ① from the door pillar.
- ▶ Remove rear panel trim ②.

Unlocking/locking in an emergency



P80.20-2395-31


③ Release strap

▶ Pull strap ③ upwards.

The fuel filler flap is unlocked and can be opened.

**Manually unlocking the transmission gear selector lever**

In case of power failure the transmission gear selector lever can be manually unlocked, e.g. to tow the vehicle.

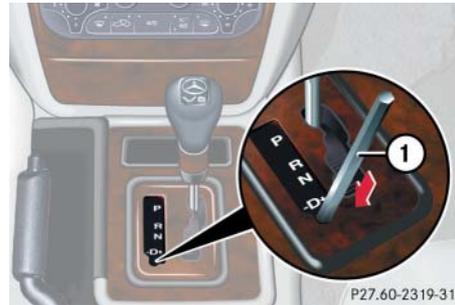

P27.60-2319-31

① Pin

- ▶ Insert a pin ①, e.g. ball point pen, into the covered opening.
- ▶ Perform the following two steps simultaneously:
  - ▶ Push pin ① down.
  - ▶ Move gear selector lever from position **P**.
- ▶ Remove pin ①.

The cover returns to its closed position after moving the gear selector lever to positions **D+** and **D-**.




The gear selector lever is locked again when moving it to position **P**.

### Opening/closing in an emergency

#### Tilt/sliding sunroof

You can open or close the tilt/sliding sunroof manually in case of power failure.

The tilt/sliding sunroof drive is located on the left side (driver's side) of the cargo compartment behind the rear panel trim.

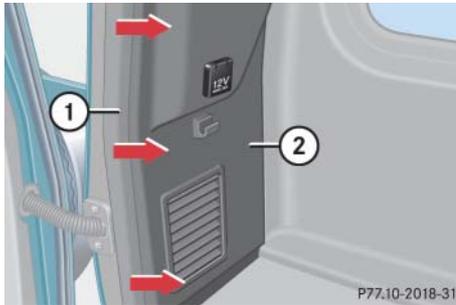


① Edge protection

② Rear panel trim

- ▶ Take the vehicle tool kit out from its storage compartment (▷ page 323).
- ▶ Open the tailgate.
- ▶ Remove edge protection ① from door pillar.

- ▶ Remove rear panel trim ②.

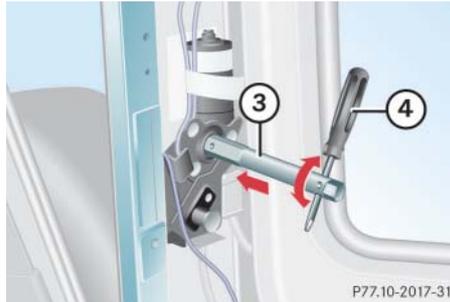

③ Key (vehicle tool kit)

④ Screwdriver (vehicle tool kit)



Do not disconnect electrical connectors.

- ▶ Fit key ③ into hexagon nut of drive.
- ▶ Insert screwdriver ④ into the key as a lever.

- ▶ Turn screwdriver ④ clockwise to:
  - slide sunroof closed
  - raise sunroof at the rear
- ▶ Turn screwdriver ④ counterclockwise to:
  - slide sunroof open
  - lower sunroof at the rear

## ▼ Brush guard\*

**Warning!**

The brush guard is designed solely to enhance the appearance of the vehicle and help protect grille and headlights from minor mishaps, either on- or off-road. Since the safety characteristics are limited in the event of an accident, brush guards are not intended to prevent injury or damage in the event of an accident. Also check state and local regulations on installation and use.

Raise and lower brush guard in an open space with plenty of room.

To help prevent personal injury when opening or closing the brush guard, use extreme caution not to trap hands or feet.


The brush guard must be in raised and locked position while driving.



Only lower brush guard to clean head lamps or to replace bulbs.

### Brush guard\*

#### Lowering and raising brush guard

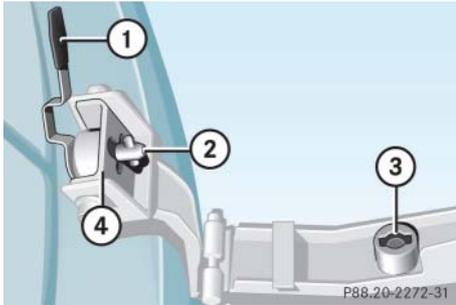

- ① Locking and unlocking handle
- ② Quick lock
- ③ Lock
- ④ End stop joint

#### Lowering

- ▶ While holding brush guard firmly, open quick lock ② using locking and unlocking handle ①.
- ▶ Gently lower brush guard until it reaches its fully lowered position.

#### Raising and securing

- ▶ Flip up brush guard until it contacts end stop joint ④.  
Quick lock stop pin ② must engage the cross slot recess in lock ③.
- ▶ Now turn quick lock ② so that quick lock makes contact with end stop joint ④.
- ▶ Lock quick lock ② on both sides of brush guard using locking and unlocking handle ①.



Make sure both quick stop pins ② are seated fully in lock ③.

## Replacing SmartKey batteries

## ▼ Replacing SmartKey batteries

If the batteries in the SmartKey are discharged, the vehicle can no longer be locked or unlocked. It is recommended to have the batteries replaced at an authorized Mercedes-Benz Light Truck Center.

**Warning!**

Keep the batteries out of reach of children.

If a battery is swallowed, seek medical help immediately.

Batteries contain materials that can harm the environment if disposed of improperly. Recycling of batteries is the preferred method of disposal. Many states require sellers of batteries to accept old batteries for recycling.



When inserting the batteries, make sure they are clean and free of lint.



When replacing batteries, always replace both batteries.


The required replacement batteries are available at any Mercedes-Benz Light Truck Center.

### Replacing SmartKey batteries

#### SmartKey

Replacement batteries: Lithium, type CR 2025 or equivalent.


- ▶ Remove mechanical key (▷ page 327).

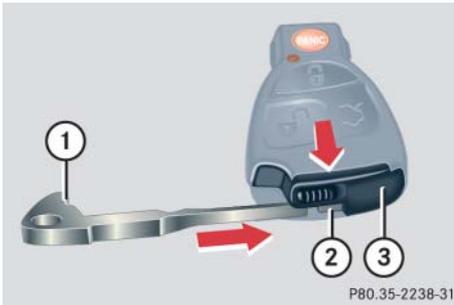

- ① Mechanical key
- ② Slide
- ③ Battery compartment

- ▶ Insert mechanical key ① in direction of arrow in side opening.
- ▶ Using mechanical key ①, push gray slide ② to unlatch battery compartment ③.
- ▶ Pull battery compartment ③ out of the housing in direction of arrow.
- ▶ Remove the discharged batteries in direction of arrow.

- ▶ Using a lint-free cloth, insert new batteries ④ under contact spring ⑤ with the positive terminal (+) facing up.
- ▶ Return battery compartment ② into the housing until it locks into place.
- ▶ Slide mechanical key ① back into the SmartKey.
- ▶ Check the operation of the SmartKey.

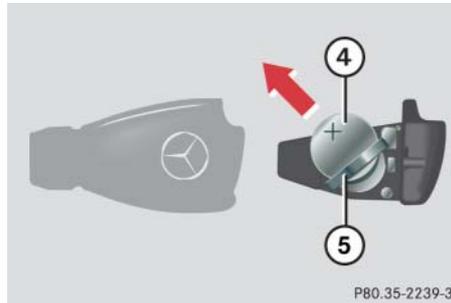

- ④ Battery
- ⑤ Contact spring

## ▼ Replacing bulbs

Safe vehicle operation depends on proper exterior lighting and signaling. It is therefore essential that all bulbs and lamp assemblies are in good working order at all times.

Correct headlamp adjustment is extremely important. Have headlamps checked and readjusted at regular intervals and when a bulb has been replaced. See an authorized Mercedes-Benz Light Truck Center for headlamp adjustment.




If the headlamps or front fog lamps are fogged up on the inside as a result of high humidity, driving the vehicle a distance with the lights on should clear up the fogging.



Backup bulbs will be brought into use when lamps malfunction. Observe the messages in the multifunction display (> page 298).

## Replacing bulbs

### Bulbs

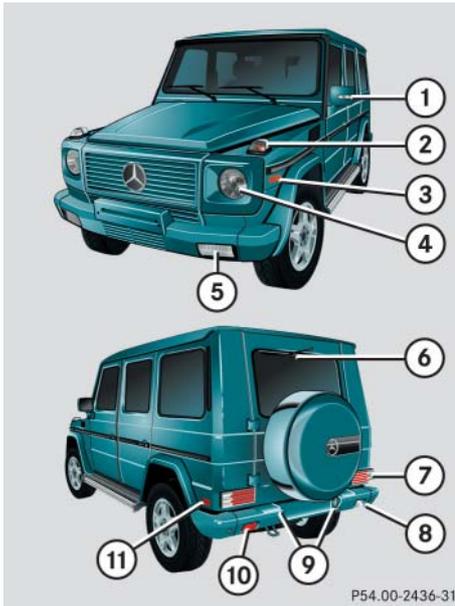

### Front lamps

	Lamp	Type
①	Additional turn signal lamp	LED
②	Turn signal lamp	1 156 NA
③	Side marker lamp	T 4 W
④	High and low beam	H4 60 (55 W)
	Parking and standing lamp	T 4 W
⑤	Fog lamp	H3 (55 W)

### Rear lamps

	Lamp	Type
⑥	High mounted brake lamp	LED
⑦	Turn signal lamp	PY 21 W
	Brake lamp	P 21 W
	Tail, parking and standing lamp	R 5 W
⑧	Backup lamp	P 21 W
⑨	License plate lamps	C 5 W
⑩	Rear fog lamp	P 21 W
⑪	Side marker lamp	T 4 W

**Warning!**

Bulbs and bulb sockets can be very hot. Allow the lamp to cool down before changing a bulb.

Keep bulbs out of reach of children.

Halogen lamps contain pressurized gas.

A bulb can explode if you:

- touch or move it when hot
- drop the bulb
- scratch the bulb

Wear eye and hand protection.

**Notes on bulb replacement**

- Use only 12 volt bulbs of the same type and with the specified watt rating.
- Switch lights off before changing a bulb to prevent short circuits.
- Always use a clean lint-free cloth when handling bulbs.
- Your hands should be dry and free of oil and grease.
- If the newly installed bulb does not come on, visit an authorized Mercedes-Benz Light Truck Center.

Have the LEDs for the following lamps replaced by an authorized Mercedes-Benz Light Truck Center.

- Additional turn signals in the exterior rear view mirrors
- High mounted brake lamp
- Lamps in the exterior rear view mirrors



Have the headlamp adjustment checked regularly by a Mercedes-Benz Light Truck Center.

Do not turn the headlamp adjusting screws. If the adjusting screws are turned, the headlamp adjustment must be checked by a Mercedes-Benz Light Truck Center.

### Replacing bulbs

#### Replacing bulbs for front lamps



For vehicles with brush guard\*:  
Fold the brush guard\* down before  
replacing bulbs (▷ page 331).

G 55 AMG:

Remove the protective grille before  
replacing the bulbs.

Before you start to replace a bulb for a  
front lamp, do the following first:


- ▶ Turn the exterior lamp switch to  
position **0** (▷ page 110).

#### Headlamp unit



**Left headlamp, right headlamp laterally  
reversed**

- ① Securing screw (trim panel)
- ② Headlamp trim panel
- ③ Headlamp

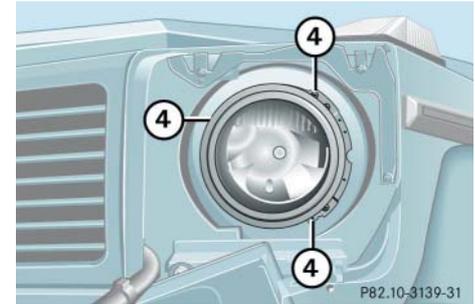

- ④ Securing screw (headlamp)


**Removing**

- ▶ Loosen and remove securing screws ①.
- ▶ Remove headlamp trim panel ② and seal.
- ▶ Loosen and remove headlamp-securing screws ④.
- ▶ Remove headlamp ③.


**Installing**

- ▶ Insert headlamp ③ and install and tighten headlamp-securing screws ④.
- ▶ Install headlamp trim panel ② and seal.
- ▶ Install and tighten securing screws ①.

**Headlamp bulbs**

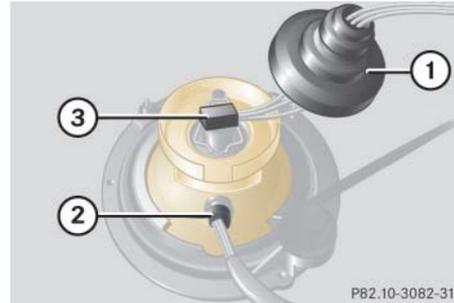

- ① Protection cover
- ② Electrical connector for parking and standing lamp bulb
- ③ Electrical connector for high and low beam bulb

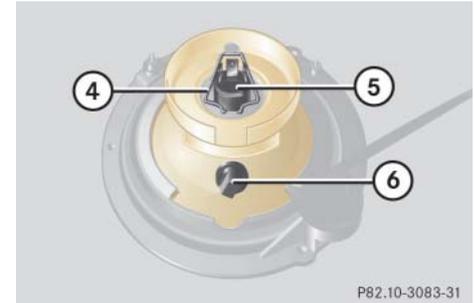

- ④ Retainer spring
- ⑤ High and low beam bulb
- ⑥ Parking and standing lamp bulb socket

### Replacing bulbs


#### *High and low beam bulb*

- ▶ Remove protection cover ①.
- ▶ Pull off electrical connector ③.
- ▶ Unclip retainer spring ④.
- ▶ Remove bulb ⑤.
- ▶ Insert the new bulb so that its socket locates in the recess of the lamp housing.
- ▶ Clip on retainer spring ④.
- ▶ Plug electrical connector ③ onto bulb ⑤.
- ▶ Reinstall protection cover ①.

#### *Parking and standing lamp bulb*

- ▶ Pull off electrical connector ② from bulb socket ⑥.
- ▶ Turn bulb socket ⑥ counterclockwise out of the lamp housing.
- ▶ Insert a new bulb into bulb socket ⑥.
- ▶ Insert bulb socket ⑥ into the lamp housing and turn clockwise until it engages.
- ▶ Plug electrical connector ② onto bulb socket ⑥.

#### Front fog lamp

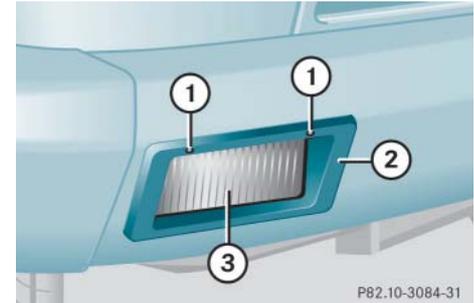

#### **Right front fog lamp, left front fog lamp laterally reversed**

- ① Securing screw (trim panel)
- ② Front fog lamp trim panel
- ③ Front fog lamp



P82.10-3085-31

- ④ Securing screw (front fog lamp)
- ⑤ Adjusting screw (front fog lamp)


**Removing**

- ▶ Loosen and remove securing screws ①.
- ▶ Remove front fog lamp trim panel ② and seal.
- ▶ Loosen and remove front fog lamp-securing screws ④.
- ▶ Remove front fog lamp ③.

**Installing**

- ▶ Insert front fog lamp ③ and install and tighten front fog lamp-securing screws ④.
- ▶ Reinstall seal and front fog lamp trim panel ②.
- ▶ Install and tighten securing screws ①.

**Front fog lamp bulb**

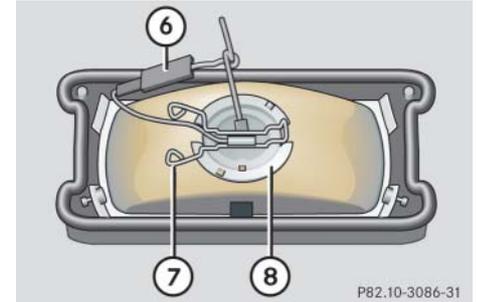

P82.10-3086-31

- ⑥ Electrical connector
- ⑦ Retainer spring
- ⑧ Bulb socket
- ▶ Pull off electrical connector ⑥.
- ▶ Unclip retainer spring ⑦.
- ▶ Pull out bulb socket ⑧.
- ▶ Insert the new bulb so that the base locates in the recess on the holder.
- ▶ Clip in retainer spring ⑦.
- ▶ Plug electrical connector ⑥ together.


### Replacing bulbs

#### Front turn signal lamp



G 55 AMG:


Remove the protective grille before replacing bulbs.

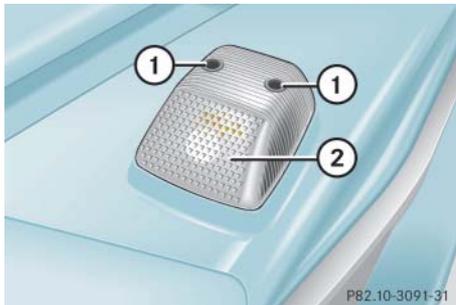

① Securing screw

② Turn signal lens

- ▶ Loosen and remove securing screws ①.
- ▶ Remove turn signal lens ②.

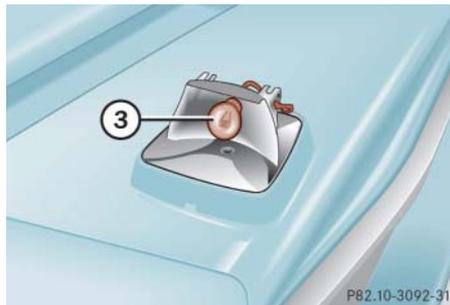

③ Bulb


- ▶ Press bulb ③ gently into the socket, turn counterclockwise and remove it.
- ▶ Press new bulb ③ gently into the socket and turn clockwise until it engages.
- ▶ Reinstall turn signal lens ②.
- ▶ Install and tighten securing screws ①.



Do not overtighten securing screws ①. Otherwise turn signal lens ② could be damaged.

#### Side marker lamp

The following description applies to both, the front and the rear side marker lamps.

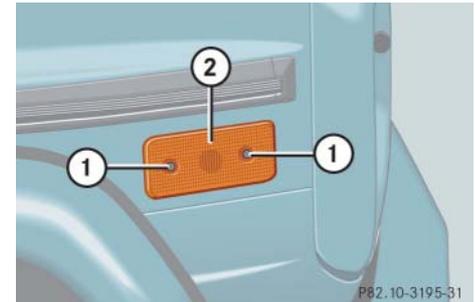


#### Front side marker shown

① Securing screw

② Side marker lamp housing

- ▶ Loosen and remove securing screws ①.
- ▶ Remove side marker lamp housing ②.

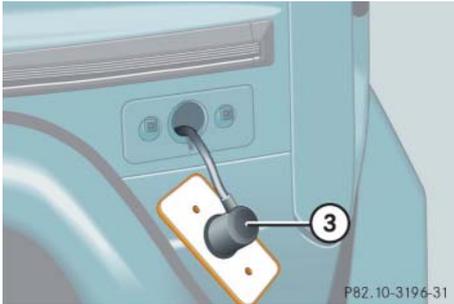

③ Dust cover



④ Bulb

- ▶ Remove dust cover ③.
- ▶ Press catch aside and pull out the bulb socket with the bulb from side marker lamp housing ②.
- ▶ Press gently onto bulb ④ and turn counterclockwise out of its bulb socket.
- ▶ Press new bulb ④ gently into the bulb socket and turn clockwise until it engages.
- ▶ Insert the bulb socket back into side marker lamp housing ②.
- ▶ Reinstall dust cover ③.
- ▶ Reinstall side marker lamp housing ②.
- ▶ Install and tighten securing screws ①.



Do not overtighten securing screws ①. Otherwise side marker lamp housing ② could be damaged.

### Replacing bulbs for rear lamps

Before you start to replace a bulb for a rear lamp, do the following first:

- ▶ Turn the exterior lamp switch to position **0** (▷ page 110).

### Tail lamp unit




G 55 AMG:

Remove the protective grille before replacing bulbs.

### Replacing bulbs



- ① Securing screw
- ② Tail lamp lens

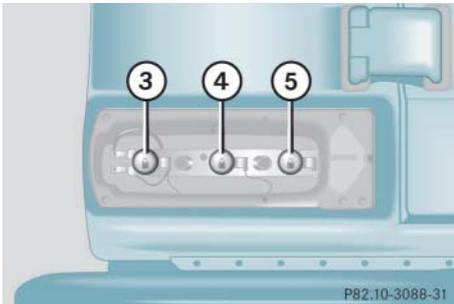


- ③ Turn signal lamp bulb
- ④ Tail lamp bulb
- ⑤ Brake lamp bulb

- ▶ Loosen and remove securing screws ①.
- ▶ Remove tail lamp lens ②.
- ▶ Press gently onto respective bulb ③, ④, or ⑤ and turn counterclockwise out of its bulb socket.
- ▶ Press the new bulb gently into its bulb socket and turn clockwise until it engages.
- ▶ Reinstall tail lamp lens ②.
- ▶ Install and tighten securing screws ①.



Do not overtighten securing screws ①. Otherwise tail lamp lens ② could be damaged.

### Rear fog lamp/Backup lamp

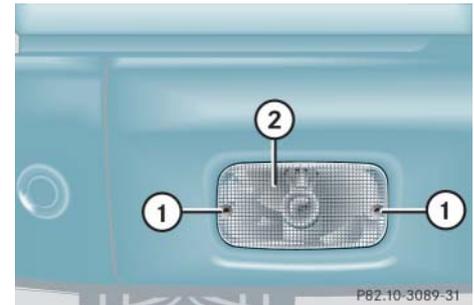

- ① Securing screw
- ② Lamp lens




- ③ Bulb

- ▶ Loosen and remove securing screws ①.
- ▶ Remove lamp lens ②.
- ▶ Press gently onto bulb ③ and turn counterclockwise out of its bulb socket.
- ▶ Press new bulb ③ gently into the bulb socket and turn clockwise until it engages.
- ▶ Reinstall lamp lens ②.
- ▶ Install and tighten securing screws ①.




Do not overtighten securing screws ①. Otherwise lamp lens ② could be damaged.

License plate lamp

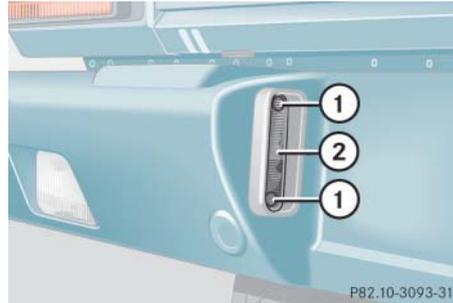

- ① Securing screw
- ② License plate lamp lens (with bulb socket)

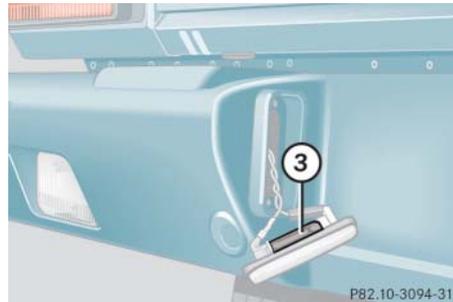

- ③ Tubular bulb

- ▶ Loosen and remove securing screws ①.
- ▶ Remove license plate lamp lens ②.
- ▶ Replace tubular bulb ③.
- ▶ Reinstall license plate lamp lens ②.
- ▶ Install and tighten securing screws ①.



Do not overtighten securing screws ①. Otherwise license plate lamp lens ② could be damaged.

### Replacing wiper blades

#### Warning!



For safety reasons, switch off wipers and remove SmartKey from starter switch before replacing a wiper blade. Otherwise, the motor could suddenly turn on and cause injury.



Never open the hood when the wiper arm is folded forward.

Hold on to the wiper when folding the wiper arm back. If released, the force of the impact from the tensioning spring could crack the windshield.

Do not allow the wiper arms to contact the windshield glass without a wiper blade inserted.


Make certain that the wiper blades are properly installed. Improperly installed wiper blades may cause windshield damage.

The wiper with air spoiler should be mounted on the driver's side.

For your convenience, you should have this work carried out by an authorized Mercedes-Benz Light Truck Center.

### Removing wiper blades

- ▶ Fold the wiper arm forward.

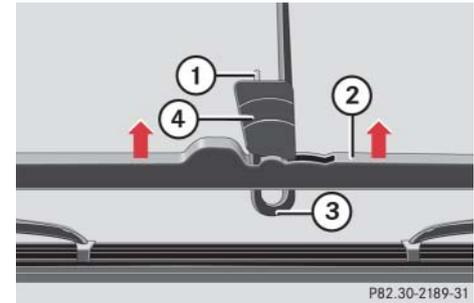


- ① Safety tab
- ② Wiper blade
- ③ Wiper arm
- ④ Attachment link

Replacing wiper blades

- ▶ Turn wiper blade ② at a right angle to wiper arm ③.
- ▶ Press safety tab ① of attachment link ④ down and slide wiper blade ② from the end of wiper arm ③.
- ▶ Remove wiper blade ②.

Installing wiper blades

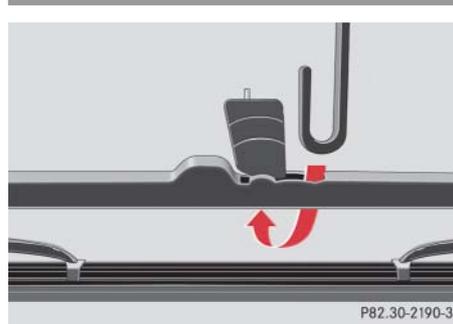

- ▶ Guide wiper blade ② so that opening goes through wiper arm ③.
- ▶ Press wiper blade ② into arch of wiper arm ③ until safety tab ① engages in attachment link ④.
- ▶ Fold the wiper arm back to rest on the windshield.

### Flat tire

#### Preparing the vehicle

- ▶ Park the vehicle as far as possible from moving traffic on a hard surface.
- ▶ Turn on the hazard warning flashers.
- ▶ Turn the steering wheel so that the front wheels are in a straight ahead position.
- ▶ Set the parking brake (▷ page 57).
- ▶ Move the gear selector lever to **P**.
- ▶ Turn off the engine (▷ page 58).
- ▶ Have any passenger exit the vehicle at a safe distance from the roadway.
- ▶ Remove the vehicle tool kit (▷ page 323) and the jack (▷ page 324).
- ▶ Remove the spare wheel from the spare wheel mounting bracket (▷ page 325).

#### Warning!



For your safety, remove spare wheel from the spare wheel mounting bracket before undertaking any further steps.

#### Information on spare wheel

When you replace the vehicle's tires, you can use the spare wheel as a regular wheel if:

- it is not more than six years old
- rim and tire are the same model as the regular wheels

#### Warning!



If the spare tire is more than six years old or is not the same model as the regular tires, have the spare tire replaced with a new tire at the nearest Mercedes-Benz Light Truck Center.

Never operate the vehicle with more than one spare tire.

#### Warning!



G 55 AMG:

Vehicles with different tire dimensions on the front and rear axle: rim and tire size of spare wheel and normal wheel differ. Handling will be adversely affected when the spare wheel is used.

Do not exceed the maximum speed of 50 mph (80 km/h).

## Mounting the spare wheel

- ▶ Prepare the vehicle (▷ page 348).

## Lifting the vehicle

- ▶ Prevent the vehicle from rolling away by blocking wheels with wheel chocks (not included) or other sizable objects.

When changing wheel on a level surface:

- ▶ Place one chock in front of and one behind the wheel that is diagonally opposite to the wheel being changed.

Always try lifting the vehicle using the jack on a level surface. However, should circumstances require you to do so on a hill, place the wheel chocks as follows:

- ▶ Place chocks on the downhill side blocking both wheels of the axle not being worked on.

## Warning!



The jack is designed exclusively for jacking up the vehicle under the axle housing. To help avoid personal injury, use the jack only to lift the vehicle during a wheel change. Never get beneath the vehicle while it is supported by the jack. Keep hands and feet away from the area under the lifted vehicle. Always firmly set parking brake and block wheels before raising vehicle with jack.

Do not disengage parking brake while the vehicle is raised. Be certain that the jack is always vertical (plumb line) when in use, especially on hills. Always try to use the jack on level surface. Make sure the jack is positioned correctly under the axle housing. Always lower the vehicle onto sufficient capacity jackstands before working under the vehicle.

If the vehicle is not raised as described, it could slip off the jack as a result of vibrations (e.g. opening or closing a door or the tailgate).




P40.10-2178-31

## Wheel wrench


- ▶ On wheel to be changed, loosen but do not yet remove the wheel bolts (approximately one full turn with wrench).

### Flat tire

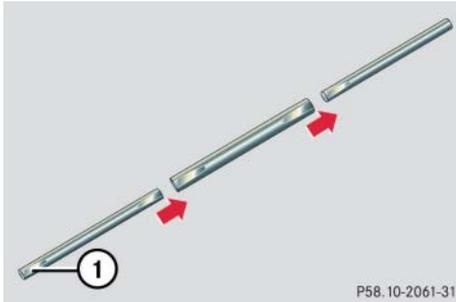

#### Pump handle (three pieces)

- ① Indent for activation of release bolt ②
- ▶ Assemble the pump handle for the jack. The pump handle is located in the vehicle tool kit.

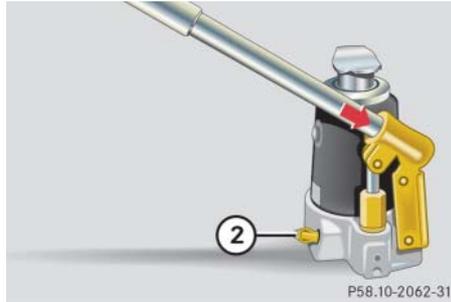


#### Jack

- ② Release bolt
- ▶ Close release bolt ②.

To do so, turn indent ① to the right in the pump lever until its stop.



Never turn release bolt ② more than one or two revolutions. Hydraulic fluid can otherwise escape.

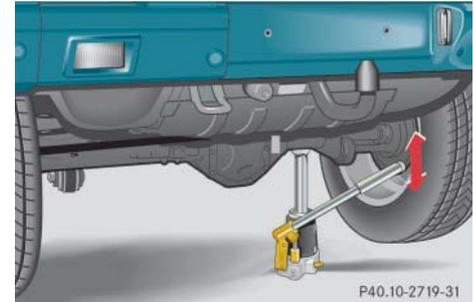

- ▶ Place jack on firm ground.
- ▶ Position jack under the axle housing, so that it is always vertical (plumb-line) as seen from the side, even if the vehicle is parked on an incline.  
Be certain the jack arm is positioned correctly under the axle housing (axle must fall into jack contour).
- ▶ Jack up the vehicle by pumping (arrow) until the wheel is clear of the ground.

#### Warning!



Never start engine while vehicle is raised.

### Removing the wheel

- ▶ Remove the wheel bolts.



Do not place wheel bolts in sand or dirt. This could result in damage to the bolt and wheel hub threads.

- ▶ Remove the wheel.

#### Warning!



Make sure no one is injured when removing the wheel.

Grip wheel from the sides.  
Keep hands from beneath the wheel.

### Mounting the new wheel

- ▶ Clean contact surfaces of wheel and wheel hub.
- ▶ Push the wheel onto the wheel hub and press firmly.
- ▶ Insert wheel bolts and tighten them slightly.

#### Warning!



Always replace wheel bolts that are damaged or rusted.

Never apply oil or grease to wheel bolts.

Damaged wheel hub threads should be repaired immediately. Do not continue to drive under these circumstances! Contact an authorized Mercedes-Benz Light Truck Center or call Roadside Assistance.

Incorrect wheel bolts or improperly tightened wheel bolts can cause the wheel to come off. This could cause an accident. Make sure to use the correct wheel bolts.

#### Warning!



Use only genuine equipment Mercedes-Benz wheel bolts. Other wheel bolts may come loose.

Do not tighten the wheel bolts when the vehicle is raised. Otherwise the vehicle could tip over.

### Flat tire


#### Lowering the vehicle

- ▶ Using the pump handle, open the lowering screw on the jack approximately one turn (▷ page 350).

The vehicle is resting fully on its own weight.

- ▶ Remove the jack.

After use, disassemble pump handle (▷ page 350) and store jack in the designated storage compartment (▷ page 324).

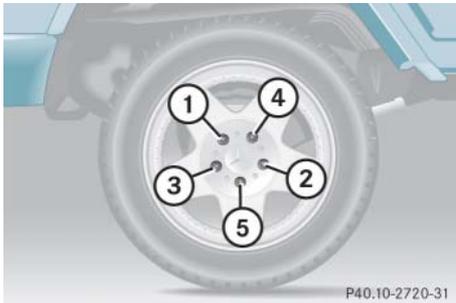

① - ⑤ Wheel bolts

- ▶ Tighten the five wheel bolts evenly, following the diagonal sequence illustrated (① to ⑤), until all bolts are tight. Observe a tightening torque of 97 lb-ft (130 Nm).

#### Warning!



Have the tightening torque checked after changing a wheel as soon as possible. The wheels could come loose if they are not tightened to a torque of 97 lb-ft (130 Nm).

- ▶ Press the jack piston in again and close the lowering screw. Store the jack (▷ page 324) and the other vehicle tools (▷ page 323).
- ▶ After changing the wheel, secure the damaged wheel on the spare wheel mounting bracket (▷ page 326). Make sure the wheel cannot come loose.
- ▶ Check the tire inflation pressure and correct it if necessary.

A table with the tire pressure values for your vehicle is located on the fuel filler flap.

## ▼ Battery

The battery is located in front of the rear seat bench and below the cup holder

### Warning!



Failure to follow these instructions can result in severe injury or death.

Observe all safety instructions and precautions when handling automotive batteries (▷ page 251).

Never lean over batteries while connecting, you might get injured.

Battery fluid contains sulfuric acid. Do not allow this fluid to come in contact with eyes, skin or clothing. In case it does, immediately flush affected area with water and seek medical help if necessary.

A battery will also produce hydrogen gas, which is flammable and explosive. Keep flames or sparks away from battery, avoid improper connection of jumper cables, smoking, etc.

### Warning!



Do not place metal objects on the battery as this could result in a short circuit.

Use leak-proof battery only to avoid the risk of acid burns in the event of an accident.

Batteries contain materials that can harm the environment if disposed of improperly. Large 12 volt storage batteries contain lead.

Recycling of batteries is the preferred method of disposal. Many states require sellers of batteries to accept old batteries for recycling.

## Charging the battery

### Warning!



Never charge a battery while still installed in the vehicle unless the accessory battery charge unit\* approved by Mercedes-Benz is being used. Gases may escape during charging and cause explosions that may result in paint damage, corrosion or personal injury.

An accessory battery charge unit\* specially adapted for Mercedes-Benz vehicles and tested and approved by Mercedes-Benz is available, permitting the charging of the battery in its installed position. Contact an authorized Mercedes-Benz Light Truck Center for information and availability. Charge battery in accordance with the separate instructions for the accessory battery charger\*.

### Battery

Have the battery removed at a Mercedes-Benz Light Truck Center.



Have the battery checked regularly by an authorized Mercedes-Benz Light Truck Center.

Refer to Maintenance Booklet for maintenance intervals or contact an authorized Mercedes-Benz Light Truck Center for further information.

If you charge the battery yourself, make sure to comply with the operating instructions for your battery charger.

### Disconnecting the battery



Never loosen or detach battery terminal clamps while the engine is running or the SmartKey is in the starter switch. Otherwise the alternator and other electronic components could be severely damaged.

- ▶ Read and observe safety instructions and precautions (▷ page 251) and (▷ page 353).
- ▶ Turn off all electrical consumers.
- ▶ Disconnect the battery negative lead.
- ▶ Remove the cover from the positive terminal.
- ▶ Disconnect the battery positive lead.
- ▶ Remove the breather hose from the battery.

### Warning!



With a disconnected battery

- you will no longer be able to turn the SmartKey in the starter switch
- the gear selector lever will remain locked in position **P**

## Reconnecting the battery

- ▶ Turn off all electrical consumers.
- ▶ Connect the positive lead and fasten its cover.
- ▶ Connect the negative lead.



Never invert the terminal connections.

- ▶ Install the breather hose.



The battery, its filler caps and the vent tube must always be securely installed when the vehicle is in operation.



The following procedures must be carried out following any interruption of battery power (e.g. due to reconnection):

- Set the clock (see COMAND operator's manual).
- Resynchronize the front seat head restraints and seat adjustment fore, aft (▷ page 102).
- Synchronize the ESP (▷ page 302).

### Jump starting

#### Warning!



Failure to follow these directions will cause damage to the electronic components, and can lead to a battery explosion and severe injury or death.

Never lean over batteries while connecting or jump starting, you might get injured.

Battery fluid contains sulfuric acid. Do not allow this fluid to come in contact with eyes, skin or clothing. In case it does, immediately flush affected area with water, and seek medical help if necessary.

A battery will also produce hydrogen gas, which is flammable and very explosive. Keep flames or sparks away from battery, avoid improper connection of jumper cables, smoking, etc.

Attempting to jump start a frozen battery can result in it exploding, causing personal injury.

Read all instructions before proceeding.

If the battery is discharged, the engine can be started with jumper cables and the battery of another vehicle. Observe the following:

- Jump starting should only be performed when the engine and catalytic converter are cold.
- Do not start the engine if the battery is frozen. Let the battery thaw out first.
- Only use 12 volt battery to jump start your vehicle. Jump starting with a more powerful battery could damage the vehicle's electrical system, which will not be covered by the Mercedes-Benz Limited Warranty.
- Use only jumper cables with sufficient cross-section and insulated terminal clamps.
- Always make sure the jumper cables are not on or near pulleys, fans, or other parts that move when an engine is started or running.



Avoid repeated and lengthy starting attempts.

Do not attempt to start the engine using a battery quick charge unit.

If engine does not run after several unsuccessful starting attempts, have it checked at the nearest authorized Mercedes-Benz Light Truck Center.

Excessive unburned fuel generated by repeated failed starting attempts may damage the catalytic converter and may present a fire risk.

Make sure the jumper cables do not have loose or missing insulation.

Make sure the cable clamps do not touch any other metal part while the other end is still attached to a battery.



Do not tow-start the vehicle.

#### Warning!




Keep flames or sparks away from battery.  
Do not smoke.

Observe all safety instructions and precautions when handling automotive batteries (▷ page 251) and (▷ page 353).

The jump-start contacts are located in the engine compartment.

- ▶ Make sure the two vehicles do not touch.
- ▶ Turn off all electrical consumers.
- ▶ Apply parking brake.
- ▶ Shift gear selector lever to position **P**.

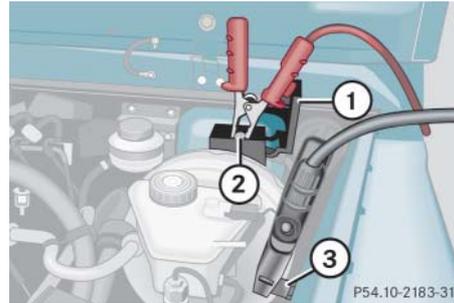

- ① Cover
  - ② Positive (+) terminal
  - ③ Negative (-) terminal
- ▶ Open cover ① of the positive terminal of both vehicles.

- ▶ Connect the positive terminal ② and the positive terminal of the charged battery with the jumper cable. Clamp cable to charged battery first.
- ▶ Start engine of the vehicle with the charged battery and run at idle speed.
- ▶ Connect negative terminal ③ and the negative terminal of the charged battery with the jumper cable. Clamp cable to charged battery first.
- ▶ Start the engine of the disabled vehicle.

Now you can again turn on the electrical consumers. Do not turn on the lights under any circumstances.

- ▶ Remove the jumper cables first from the negative terminals on each battery and then from the positive terminals on each battery.

You can now turn on the lights.

- ▶ Have the battery checked at the nearest authorized Mercedes-Benz Light Truck Center.

### Towing the vehicle

Mercedes-Benz recommends that the vehicle be transported with all wheels off the ground using flatbed or appropriate wheel lift/dolly equipment. This method is preferable to other types of towing.



Use flatbed or wheel lift/dolly equipment, with SmartKey in starter switch turned to position **0**.

Do not tow with sling-type equipment. Towing with sling-type equipment over bumpy roads will damage radiator and supports.

To prevent damage during transport, do not tie down vehicle by its chassis or suspension parts. Use the towing eyes.

Switch off the ESP (▷ page 86), tow-away alarm (▷ page 89) and the automatic central locking (▷ page 142).

When circumstances do not permit the recommended towing methods, the vehicle may be towed with all wheels on the

ground only so far as necessary to have the vehicle moved to a safe location where the recommended towing methods can be employed.



When towing the vehicle with all wheels on the ground, the gear selector lever must be in position **N** and the SmartKey must be in starter switch position **2**.

When towing the vehicle with all wheels on the ground, the vehicle may be towed only for distances up to 30 miles (50 km) and at a speed not to exceed 30 mph (50 km/h).

If the vehicle is towed with one axle raised (observe instructions regarding flexible drive shaft and propeller shafts), the engine must be shut off (SmartKey in starter switch position **1**). Otherwise, the 4-ETS may become engaged which may cause loss of towing control.



Do not tow-start the vehicle.

#### Warning!



Prior to towing the vehicle with all wheels on the ground, make sure the SmartKey is in starter switch position **2**.

If the SmartKey is left in the starter switch position **0** for an extended period of time, it can no longer be turned in the switch. In this case, the steering is locked. To unlock, remove SmartKey from starter switch and re-insert.

Always tow with a tow bar if:

- the engine will not run
- there is a malfunction in the power supply or in the vehicle's electrical system

as that will be necessary to adequately control the towed vehicle.

**Warning!**

With the engine not running, there is no power assistance for the brake and steering systems. In this case, it is important to keep in mind that a considerably higher degree of effort is necessary to brake and steer the vehicle. Adapt your driving accordingly.



The gear selector lever will remain locked in position **P** and the SmartKey will not turn in the starter switch if the battery is disconnected or discharged. For more information, see “Battery” (▷ page 353) and “Jump starting” (▷ page 356).

For information on manually unlocking transmission gear selector lever, see (▷ page 329).



To signal turns while being towed with hazard warning flasher in use, turn SmartKey in starter switch to position **2** and activate combination switch for left or right turn signal in usual manner – only the selected turn signal will operate. Upon canceling the turn signal, the hazard warning flasher will operate again.



When towing the vehicle with all wheels on the ground, note the following:

With the automatic central locking activated and the SmartKey in starter switch position **2**, the vehicle doors lock if the wheels are turning at vehicle speeds of approx. 9 mph (15 km/h) or more.

To prevent the vehicle doors from locking, deactivate the automatic central locking (▷ page 142).

Towing of the vehicle should only be done using the towing eye. Never attach tow cable, tow rope or tow rod to vehicle chassis, frame or suspension parts.

### Towing the vehicle

#### Transporting the vehicle

When transporting the vehicle, you can use the towing eyes for pulling the vehicle onto a trailer or transporter.

- ▶ Move the gear selector lever to position **N**.
- ▶ Shift the transfer case to neutral position **N**.
- ▶ To avoid damaging the vehicle, it should only be tied down on the wheels / wheel rims, not on chassis components such as the transverse link or trailing arm.

#### Towing the vehicle - various problem scenarios



When removing drive shaft, place M10 nuts on bolts as distance sleeves and tighten using M8 nuts. Always install new self-locking nuts when reinstalling the drive shaft.

- ▶ Comply with all towing information (▷ page 358).

#### In case of engine damage, transmission damage or malfunctions in electrical equipment

- ▶ Move the gear selector lever to position **N**.
- ▶ Shift the transfer case to neutral position **N**.

#### In case of transfer case damage or for towing vehicle distances exceeding 30 miles (50 km)

The propeller shafts to the drive axles must be removed.

#### In case of front axle damage


Raise the front axle when towing. The propeller shaft between the rear axle and the transfer case must be removed.

#### In case of rear axle damage

When the rear axle is raised, the vehicle can only be towed with a wheel lift or a dolly placed under its front wheels.

### Front towing eye


In the front, the towing eye is located on the driver's side under the bumper.

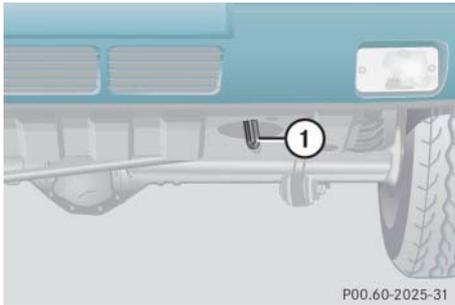

① Towing eye

### Rear towing eye

In the rear, the towing eye is located on the driver's side under the bumper.

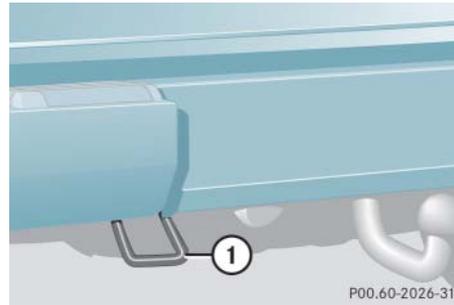

① Towing eye

### Freeing a stranded vehicle

Freeing a stranded vehicle, on which the wheels are dug into sand or mud, should be done with the greatest of care, especially if the vehicle is heavily loaded.

Avoid pulling the vehicle jerkily or diagonally, since it could result in damage to the chassis alignment.

Never try to free a vehicle that is still coupled to a trailer.

If possible, a vehicle should be pulled backward in its own previously made tracks.

### Fuses



Only install fuses that have been tested and approved by Mercedes-Benz and that have the specified amperage rating.

Never attempt to repair or bridge a blown fuse. Have the cause determined and remedied by an authorized Mercedes-Benz Light Truck Center.

The fuse box is located on the left side of the cockpit in the passenger compartment. It contains:


- Fuse chart
- Spare fuses
- Special spare extractor

Additional fuses are located in:

- Battery box
- Front passenger footwell under the cockpit
- Middle tunnel

### Fuse box in passenger compartment

#### Opening

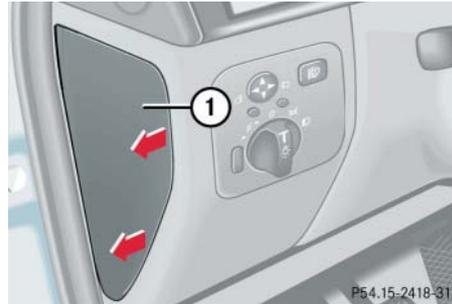

- ① Cover



Do not use sharp objects such as a screw driver to open fuse box cover ① in the dashboard, as this could damage it.

- ▶ Open the driver's door.
- ▶ Remove cover ① in direction of arrows.

### Fuse box in battery box

The battery box is located under the cover in the rear footwell.


Replacement of fuses can only be performed by a Mercedes-Benz Light Truck Center.

## Fuse box in front passenger footwell



We recommend having the fuses changed at a Mercedes-Benz Light Truck Center.


### Opening

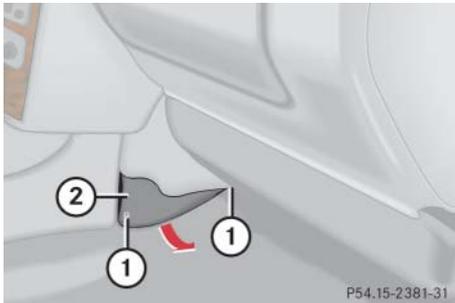

① Mounting screw

② Cover


- ▶ Unscrew mounting screws ①.
- ▶ Remove cover ② in direction of arrows.

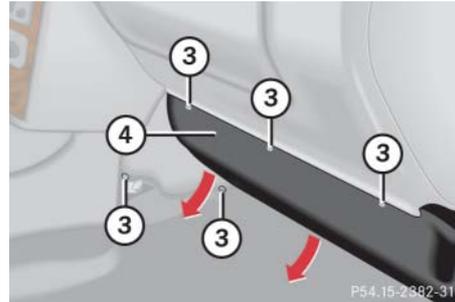

③ Mounting screw

④ Cover

- ▶ Unscrew mounting screws ③.
- ▶ Remove cover ④ in direction of arrows.

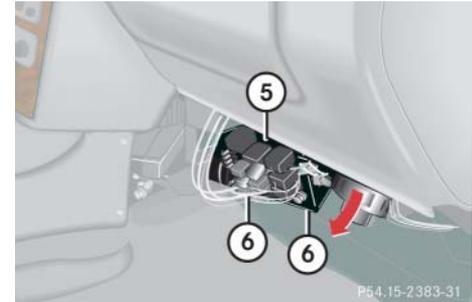

⑤ Fuse box

⑥ Mounting screw

To make changing the fuses easier, fuse box ⑤ can be folded down slightly:

- ▶ Unscrew mounting screws ⑥.
- ▶ Fold fuse box ⑤ downward.


### Fuses

#### Fuse box in middle tunnel



We recommend having the fuses changed at a Mercedes-Benz Light Truck Center.

#### Removing front end stops

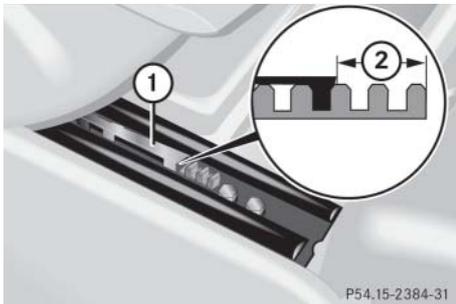

#### Front end stop on the right seat rail, left seat rail laterally reversed

- ① Front end stop
- ② Spacing

- ▶ Remove both front end stops ① of the front passenger seat tracks with a screwdriver.
- ▶ Move front passenger seat fully forward.



When reinstalling front passenger seat track stops, place end stops in correct position. For your safety, maintain proper spacing ②.


#### Warning!



Do not drive the vehicle when the front end stops are not correctly installed. Failure to reinstall stops as indicated may result in serious injury in certain frontal crashes.

Adjust the front passenger seat as far as possible rearward from the dashboard when the seat is occupied. Comply with information on occupant safety (▷ page 62).

#### Opening fuse box

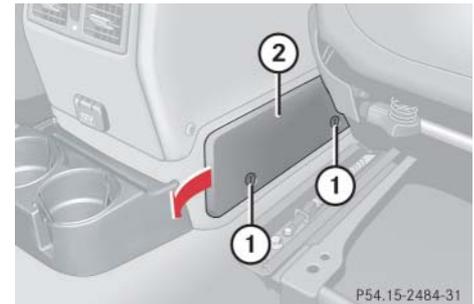

- ① Mounting screw
- ② Cover

- ▶ Unscrew mounting screws ①.
- ▶ Remove cover ② in direction of arrows.



## Technical data

Parts service

Warranty coverage

Identification labels

Layout of poly-V-belt drive

Engine

Rims and tires

Electrical system

Main dimensions, vehicle weights and ratings

Fuels, coolants, lubricants, etc.

The “Technical data” section provides the necessary technical data for your vehicle.

All authorized Mercedes-Benz Light Truck Centers maintain a stock of genuine Mercedes-Benz parts required for maintenance and repair work. In addition, strategically located parts distribution centers provide quick and reliable parts service.

More than 300 000 different parts for Mercedes-Benz models are available.

Genuine Mercedes-Benz parts are subjected to stringent quality inspections. Each part has been specifically developed, manufactured or selected for and adapted to Mercedes-Benz vehicles.

Therefore, genuine Mercedes-Benz parts should be installed.



The use of non-genuine Mercedes-Benz parts and accessories not authorized by Mercedes-Benz could damage the vehicle, which is not covered by the Mercedes-Benz Limited Warranty, or could compromise the vehicle’s durability or safety.

## ▼ Warranty coverage

Your vehicle is covered under the terms of the warranties printed in the Service and Warranty Information booklet. Your authorized Mercedes-Benz Light Truck Center will exchange or repair any defective parts originally installed in the vehicle in accordance with the terms of the following warranties:

- New vehicle limited Warranty
- Emission system Warranty
- Emission performance Warranty
- California, Maine, Massachusetts, and Vermont emission control systems Warranty


Replacement parts and accessories are covered by the Mercedes-Benz Parts and Accessories warranties, copies of which are available at any Mercedes-Benz Light Truck Center.

## Loss of Service and Warranty Information Booklet


---

Should you lose your Service and Warranty Information booklet, have an authorized Mercedes-Benz Light Truck Center arrange for a replacement. It will be mailed to you.

### Identification labels

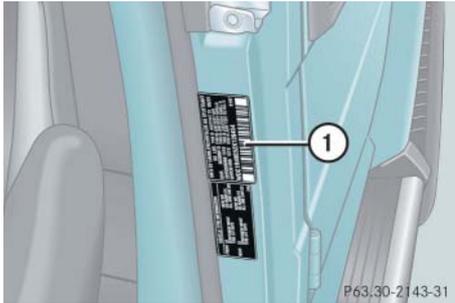

- ① Certification label (includes Paintwork code), located on the driver's door B-pillar

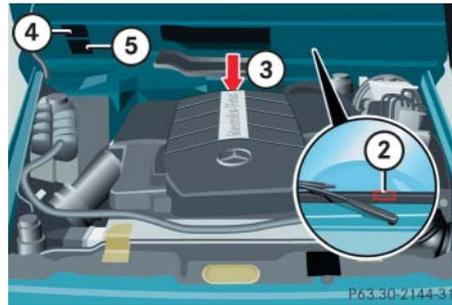

- ② Vehicle Identification Number (VIN) (lower edge of windshield)
- ③ Engine number (engraved on engine)
- ④ Emission control information label, includes both federal and California certification exhaust emission standards
- ⑤ Vacuum line routing diagram label




When ordering parts, please specify vehicle identification and engine numbers.

Layout of poly-V-belt drive

▼ **Layout of poly-V-belt drive**


For dimensions of the poly-V-belt, see technical data (▷ page 370).

**G 500**

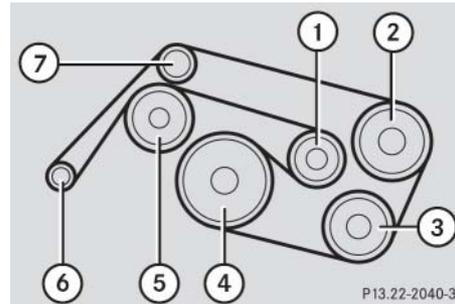

- ① Automatic belt tensioner
- ② Power steering pump
- ③ Air conditioning compressor
- ④ Crankshaft
- ⑤ Coolant pump
- ⑥ Generator (alternator)
- ⑦ Idler pulley

**G 55 AMG**

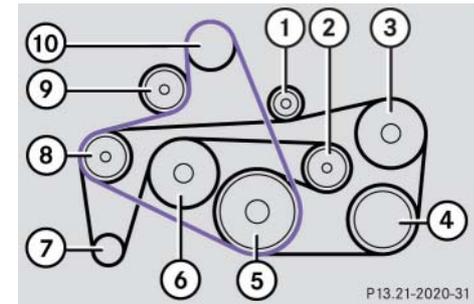

**The G 55 AMG has two poly-V-belts (belt one shown in purple/belt two shown in black).**

- ① Idler pulley
- ② Automatic belt tensioner
- ③ Power steering pump
- ④ Air conditioning compressor
- ⑤ Crankshaft
- ⑥ Coolant pump
- ⑦ Generator (alternator)
- ⑧ Idler pulley
- ⑨ Automatic belt tensioner
- ⑩ Supercharger

## Engine

	<b>G 500 (463.249)<sup>1</sup></b>	<b>G 55 AMG (463.271)<sup>1</sup></b>
<b>Engine</b>	113	113
<b>Mode of operation</b>	4-stroke engine, gasoline injection	4-stroke engine, gasoline injection
<b>No. of cylinders</b>	8	8
<b>Bore</b>	3.82 in (97.00 mm)	3.82 in (97.00 mm)
<b>Stroke</b>	3.31 in (84.00 mm)	3.60 in (92.00 mm)
<b>Total piston displacement</b>	303.0 cu in (4966 cm <sup>3</sup> )	331.8 cu in (5439 cm <sup>3</sup> )
<b>Compression ratio</b>	10:1	9:1
<b>Output acc. to SAE J 1349</b>	292 hp / 5500 rpm <sup>2</sup> (218 kW / 5500 rpm)	469 hp / 6100 rpm <sup>2</sup> (350 kW / 6100 rpm)
<b>Maximum torque acc. to SAE J 1349</b>	336 lb-ft / 2800 - 4000 rpm (456 Nm / 2800 - 4000 rpm)	516 lb-ft / 2650 - 4000 rpm (700 Nm / 2650 - 4000 rpm)
<b>Maximum engine speed</b>	6300 rpm	6500 rpm
<b>Firing order</b>	1-5-4-2-6-3-7-8	1-5-4-2-6-3-7-8
<b>Poly-V-belt</b>	2380 mm	Belt one: 1289 mm Belt two: 2449 mm

<sup>1</sup> The quoted data apply only to the standard vehicle. See an authorized Mercedes-Benz Light Truck Center for the corresponding data of all special bodies and special equipment.

<sup>2</sup> Premium fuel required. Performance may vary with fuel octane rating.

## ▼ Rims and tires

Use only tires and rims which have been specifically developed for your vehicle and tested and approved by Mercedes-Benz. Other tires and rims can have detrimental effects, such as:

- Poor handling characteristics
- Increased noise
- Increased fuel consumption



Moreover, tires and rims not approved by Mercedes-Benz may, under load, exhibit dimensional variations and different tire deformation characteristics that could cause them to come into contact with the vehicle body or axle parts. Damage to the tires or the vehicle may be the result.



Further information on tires and rims is available at any authorized Mercedes-Benz Light Truck Center. A placard with the recommended tire inflation pressures is located on the driver's door B-pillar. Some vehicles may have supplemental tire inflation pressure information for driving at high speeds (▷ page 261) or for vehicle loads less than the maximum loaded vehicle condition. If such information is provided, it can be found on the placard located on the inside of the fuel filler flap. The tire inflation pressure should be checked regularly and should only be adjusted on cold tires. Follow tire manufacturer's maintenance recommendation included with vehicle.

**Rims and tires****Rims and Tires**

	<b>G 500</b>	<b>G 55 AMG</b>
<b>Rims (light alloy)</b>	7 <sup>1</sup> / <sub>2</sub> J x 18 H2	9 <sup>1</sup> / <sub>2</sub> J x 18 EH2
<b>Wheel offset</b>	1.69 in (43 mm)	1.97 in (50 mm)
<b>All season tires (radial-ply tires)</b>	265/60 R18 110V M+S	285/55 R18 113V M+S <sup>1</sup>

<sup>1</sup> Must not be used with snow chains.

Spare wheels

	G 500	G 55 AMG
Rims (light alloy)	7 <sup>1</sup> / <sub>2</sub> J x18 H2	7 <sup>1</sup> / <sub>2</sub> J x18 H2
Wheel offset	1.69 in (43 mm)	1.69 in (43 mm)
All season tires (radial-ply tires)	265/60 R18 110V M+S	265/60 R18 110V M+S

**Electrical system**

	<b>G 500</b>	<b>G 55 AMG</b>
<b>Generator (alternator)</b>	14 V/150 A	14 V/180 A
<b>Starter motor</b>	12 V/1.7 kW	12 V/1.7 kW
<b>Battery</b>	12 V/90 Ah	12 V/90 Ah
<b>Spark plugs</b>	Bosch F 8 DPER Beru 14 FGH 8 DPUR X 2	NGK ILFR6A
<b>Electrode gap</b>	0.039 in (1.0 mm)	0.039 in (1.0 mm)
<b>Tightening torque</b>	15 – 22 lb-ft (20 – 30 Nm)	15 – 22 lb-ft (20 – 30 Nm)

Main dimensions, vehicle weights and ratings

▼ Main dimensions, vehicle weights and ratings

Main dimensions

	G 500	G 55 AMG
Overall vehicle length (inc. spare wheel)	185.6 in (4715 mm)	185.6 in (4715 mm)
Overall vehicle width	71.3 in (1811 mm)	73.4 in (1864 mm)
Overall vehicle height	77.8 in (1977 mm)	77.8 in (1977 mm)
Wheel base	112.2 in (2850 mm)	112.2 in (2850 mm)
Ground clearance	8.3 in (211 mm)	8.3 in (211 mm)
Turning radius	523.6 in (13.3 m)	523.6 in (13.3 m)
Track, front and rear	59.6 in (1515 mm)	59.1 in (1501 mm)

Vehicle weights and ratings

	G 500	G 55 AMG
Gross Vehicle Weight Rating <sup>1</sup>	6615 lb (3000 kg)	6615 lb (3000 kg)
Gross Axle Weight Rating, front <sup>2</sup>	3110 lb (1410 kg)	3200 lb (1450 kg)
Gross Axle Weight Rating, rear <sup>2</sup>	3965 lb (1800 kg)	3965 lb (1800 kg)

<sup>1</sup> GVWR is the maximum permissible vehicle weight. Gross Vehicle Weight (GVW) comprises weight of vehicle including fuel, tools, spare wheel, installed accessories, passengers, cargo and trailer tongue. It must never exceed the GVWR.

<sup>2</sup> GAWR is the maximum permissible axle weight.

## Fuels, coolants, lubricants, etc.

### Capacities

Vehicle components and their respective lubricants must match.

Therefore use only products tested and approved by Mercedes-Benz.

Please refer to the Factory Approved Service Products pamphlet, or inquire at an Mercedes-Benz Light Truck Center.

	Model	Capacity	Fuels, coolants, lubricants, etc.
<b>Engine with oil filter</b>	G 500	8.5 US qt (8.0 l)	Approved engine oils
	G 55 AMG	9.0 US qt (8.5 l)	
<b>Automatic transmission</b>		9.0 US qt (8.5 l)	MB Automatic Transmission Fluid
<b>Transfer case</b>		2.96 US qt (2.8 l)	MB part no. A 001 989 28 03 10
<b>Differential lock mechanism</b>		0.47 - 0.63 US qt (0.45 - 0.6 l)	Brake fluid DOT 3+4, SAE J1703
<b>Front axle</b>	G 500	1.5 US qt (1.4 l)	Hypoid gear oil SAE 85W-90 Hypoid gear oil Castrol SAF-XJ
	G 55 AMG	1.5 US qt (1.4 l)	
<b>Rear axle</b>	G 500	1.9 US qt (1.8 l)	Hypoid gear oil SAE 85W-90 Hypoid gear oil Castrol SAF-XJ
	G 55 AMG	1.9 US qt (1.8 l)	
<b>Power steering</b>		approx. 1.06 US qt (1.0 l)	MB Power Steering Fluid, or approved Dexron III ATF
<b>Front wheel hubs</b>		approx. 1.5 oz (43 g) each	High temperature roller bearing grease
<b>Fuel tank</b>	G 500	25.4 US gal (96.0 l)	Premium unleaded gasoline: Minimum Posted Octane 91 (average of 96 RON / 86 MON)
	G 55 AMG	25.1 US gal (95.0 l)	
<b>including a reserve of</b>		3.4 US gal (13.0 l)	

Fuels, coolants, lubricants, etc.

	Model	Capacity	Fuels, coolants, lubricants, etc.
<b>Cooling system</b>	G 500	approx. 12.7 US qt (12.0 l)	MB Anticorrosion/Antifreeze
	G 55 AMG	approx. 13.4 US qt (12.7 l)	
<b>Air conditioning system</b>			R-134a refrigerant and special PAG lubricant oil (never R-12)
<b>Windshield/rear window washer system and headlamp cleaning system</b>		approx. 7.9 US qt (7.5 l)	MB Windshield Washer Concentrate and water <sup>1</sup>

<sup>1</sup> Use MB Windshield Washer Concentrate “S” and water for temperatures above freezing point or MB Windshield Washer Concentrate “S” and commercially available premixed windshield washer solvent / antifreeze for temperatures below freezing point. Follow suggested mixing ratios (▷ page 382).

**Engine oils**

Engine oils are specifically tested for their suitability in our engines and durability for our service intervals. Therefore, only use approved engine oils and oil filters required for vehicles with Maintenance System (U.S. vehicles) or FSS (Canada vehicles). For a listing of approved engine oils and oil filters, refer to the Factory Approved Service Products pamphlet, or contact an authorized Mercedes-Benz Light Truck Center.

Using engine oils and oil filters of specification other than those expressly required for the Maintenance System (U.S. vehicles) or FSS (Canada vehicles), or changing of oil and oil filter at change intervals longer than those called for by the Maintenance System (U.S. vehicles) or FSS (Canada vehicles) will result in engine damage not covered by the Mercedes-Benz Limited Warranty.

Please follow Maintenance System (U.S. vehicles) or FSS (Canada vehicles) recommendations for scheduled oil changes. Failure to do so will result in engine damage not covered by the Mercedes-Benz Limited Warranty.

### Fuels, coolants, lubricants, etc.

#### Engine oil additives

Do not blend oil additives with engine oil. They may damage the engine. Damage or malfunctions resulting from blending oil additives are not covered by the Mercedes-Benz Limited Warranty.

#### Air conditioning refrigerant

R-134a (HFC) refrigerant and special PAG lubricating oil are used in the air conditioning system. Never use R-12 (CFC) or mineral-based lubricating oil. Otherwise damage to the system will occur.

#### Brake fluid

During vehicle operation, the boiling point of the brake fluid is continuously reduced through the absorption of moisture from the atmosphere.

#### Warning!



Under extremely strenuous operating conditions, this moisture content can lead to the formation of bubbles in the system, thus reducing the system's efficiency.

Therefore, the brake fluid must be replaced every two years, preferably in the spring.

Only brake fluid approved by Mercedes-Benz is recommended. Your authorized Mercedes-Benz Light Truck Center will provide you with additional information.

#### Premium unleaded gasoline

#### Warning!



Gasoline is highly flammable and poisonous. It burns violently and can cause serious injury. Whenever you are around gasoline, avoid inhaling fumes and skin contact, extinguish all smoking materials. Never allow sparks, flame or smoking materials near gasoline!



To maintain the engine's durability and performance, premium unleaded gasoline must be used. If premium unleaded is not available and low octane fuel is used, follow these precautions:

- Have the fuel tank only partially filled with unleaded regular and fill up with premium unleaded as soon as possible.
- Avoid full throttle driving and abrupt acceleration.
- Do not exceed an engine speed of 3000 rpm if the vehicle is loaded with a light load such as two persons and no luggage.
- Do not exceed  $\frac{2}{3}$  of maximum accelerator pedal position if the vehicle is fully loaded or operating in mountainous terrain.

### Fuel requirements

Only use premium unleaded fuel:

- The octane number (posted at the pump) must be 91 min. It is an average of both the Research (R) octane number and the Motor (M) octane number:  $(R+M) / 2$ . This is also known as the ANTI-KNOCK INDEX.

Unleaded gasoline containing oxygenates such as ethanol, IPA, IBA and TBA can be used provided the ratio of any one of these oxygenates to gasoline does not exceed 10%; MTBE must not exceed 15%.

The ratio of methanol to gasoline must not exceed 3% plus additional cosolvents.

Using mixtures of ethanol and methanol is not allowed. Gasohol, which contains 10% ethanol and 90% unleaded gasoline, can be used.

These blends must also meet all other fuel requirements, such as resistance to spark knock, boiling range, vapor pressure, etc.

### Gasoline additives

A major concern among engine manufacturers is carbon build-up caused by gasoline. Mercedes-Benz recommends only the use of quality gasoline containing additives that prevent the build-up of carbon deposits.

After an extended period of using fuels without such additives, carbon deposits can build up especially on the intake valves and in the combustion area, leading to engine performance problems such as:

- Warm-up hesitation
- Unstable idle
- Knocking/pinging
- Misfire
- Power loss

### Fuels, coolants, lubricants, etc.

In areas where carbon deposits may be encountered due to lack of availability of gasolines which contain these additives, Mercedes-Benz recommends the use of additives approved by us for use on Mercedes-Benz vehicles. Refer to Factory Approved Service Products pamphlet for a listing of approved product(s). Follow directions on product label.

Do not blend other specific fuel additives with fuel. This only results in unnecessary cost and may be harmful to the engine operation.

Damage or malfunction resulting from poor fuel quality or from blending additional fuel additives other than those tested and approved by us for use on Mercedes-Benz vehicles listed in the Factory Approved Service Products pamphlet are not covered by the Mercedes-Benz Limited Warranty.

### Coolants

The engine coolant is a mixture of water and anticorrosion / antifreeze, which provides:

- Corrosion protection
- Freeze protection
- Boiling protection (by increasing the boiling point)

The cooling system was filled at the factory with a coolant providing freeze protection to approximately  $-35^{\circ}\text{F}$  ( $-37^{\circ}\text{C}$ ) and corrosion protection.

If the antifreeze mixture is effective to  $-22^{\circ}\text{F}$  ( $-30^{\circ}\text{C}$ ), the boiling point of the coolant in the pressurized cooling system is reached at approximately  $266^{\circ}\text{F}$  ( $130^{\circ}\text{C}$ ).

The coolant solution must be used year round to provide the necessary corrosion protection and increase boil-over protection. Refer to Maintenance Booklet for replacement interval.

Coolant system design and coolant used determine the replacement interval. The replacement interval published in the Maintenance Booklet is only applicable if MB 325.0 anticorrosion/antifreeze solution or other Mercedes-Benz approved products of equal specification (see Factory Approved Service Products pamphlet) are used to renew the coolant concentration or bring it back up to the proper level.

To provide important corrosion protection, the solution must be at least 45% anticorrosion/antifreeze (equivalent to freeze protection to approx.  $-22^{\circ}\text{F}$  [ $-30^{\circ}\text{C}$ ]).

If you use a solution that is more than 55% anticorrosion/antifreeze (freeze protection to approx.  $-49^{\circ}\text{F}$  [ $-45^{\circ}\text{C}$ ]), the engine temperature will increase due to the lower heat transfer capability of the solution. Therefore, do not use more than this amount of anticorrosion/antifreeze.

If the coolant level is low, water and MB anticorrosion/antifreeze should be used to bring it up to the proper level (have cooling system checked for signs of leakage). Please make sure the mixture is in accordance with label instructions.

The water in the cooling system must meet minimum requirements, which are usually satisfied by normal drinking water. If you are not sure about the water quality, consult an authorized Mercedes-Benz Light Truck Center.

### Anticorrosion/antifreeze

Your vehicle contains a number of aluminum parts. The use of aluminum components in motor vehicle engines necessitates that anticorrosion/antifreeze coolant used in such engines be specifically formulated to protect the aluminum parts. (Failure to use such anticorrosion/antifreeze coolant will result in a significantly shortened service life.)

Therefore, the following product is strongly recommended for use in your vehicle: Mercedes-Benz 325.0 anticorrosion/antifreeze agent.

Before the start of the winter season (or once a year in hot southern regions), you should have the anticorrosion/antifreeze concentration checked. The coolant is also regularly checked each time you bring your vehicle to an authorized Mercedes-Benz Light Truck Center for service.

#### Anticorrosion/antifreeze quantity

Model	Approx. freeze protection	
	- 35°F (- 37°C)	- 49°F (- 45°C)
<b>G 500</b>	6.35 US qt (6.0 l)	7.0 US qt (6.6 l)
<b>G 55 AMG</b>	6.76 US qt (6.4 l)	7.4 US qt (7.0 l)

### Fuels, coolants, lubricants, etc.

#### Windshield/rear window washer system and headlamp cleaning system

The windshield washer reservoir is located in the engine compartment on the front passenger side. It holds approximately 5.3 US qt (5.0 l). The headlamp cleaning system is also supplied from the windshield washer reservoir.

- ▶ Refill the reservoir with MB Windshield Washer Concentrate “S” to and water (or concentrate and commercially available premixed windshield washer solvent / antifreeze, depending on ambient temperatures) (> page 382).

#### Warning!



Washer solvent / antifreeze is highly flammable. Do not spill washer solvent / antifreeze on hot engine parts, because it may ignite and burn. You could be seriously burned.

#### Washer fluid mixing ratio

For temperatures above freezing point use MB Windshield Washer Concentrate “S” and water:

- 1 part “S” to 100 parts water  
(1.34 fl oz [40 ml] “S” to 1 gallon [4.0 l] water)

For temperatures below freezing point, use MB Windshield Washer Concentrate “S” and commercially available premixed windshield washer solvent / antifreeze:

- 1 part “S” to 100 parts solvent  
(1.34 fl oz [40 ml] “S” to 1 gallon [4.0 l] solvent)

**ABS**

(Antilock Brake System)

Prevents the wheels from locking up during braking so that the vehicle can continue to be steered.

**Accessory weight**

(▷ page 273)

**Air pressure**

(▷ page 273)

**Aspect ratio**

(▷ page 273)

**BabySmart<sup>TM</sup>1 airbag deactivation system**

This system detects if a special system compatible child restraint seat is installed on the front passenger seat. The system will automatically deactivate the passenger front airbag when such a seat is properly installed (indicator lamp  in the center console comes on).

**BabySmart<sup>TM</sup> compatible child seats**

Special restraint system for children. The sensor system for the passenger seat prevents deployment of the passenger front airbag if a BabySmart<sup>TM</sup> compatible child seat is installed. See an authorized Mercedes-Benz Light Truck Center for availability.

**BAS**

(Brake Assist System)

System for potentially reducing braking distances in emergency braking situations. The system is activated when it senses an emergency based on how fast the brake is applied.

**Bar**

(▷ page 273)

**Bead**

(▷ page 273)

**CAC**

(Customer Assistance Center)

Mercedes-Benz customer service center, which can help you with any questions about your vehicle and provide assistance in the event of a breakdown.

**CAN system**

(Controller Area Network)

Data bus network serving to control vehicle functions such as door locking or windshield wiping.

**Cockpit**

All instruments, switches, buttons and indicator/warning lamps in the passenger compartment needed for vehicle operation and monitoring.

**Cold tire inflation pressure**

(▷ page 273)

<sup>1</sup> BabySmart<sup>TM</sup> is a trademark of Siemens Automotive Corp.

### **COMAND**

(Cockpit Management and Data System)

Information and operating center for vehicle sound and communications systems, including the radio and the navigation system, as well as other optional equipment (CD changer, telephone, etc.).

### **Control system**

The control system is used to call up vehicle information and to change component settings. Information and messages appear in the multifunction display. The driver uses the buttons on the multifunction steering wheel to navigate through the system and to adjust settings.

### **Differential locks**

On slippery surfaces, differential locks prevent one wheel of an axle from spinning while the other wheel stands still, resulting in driving force no longer being transferred.

### **Cruise control**

Driving convenience system that automatically maintains the vehicle speed set by the driver.

### **Curb weight**

(▷ page 273)

### **DOT**

(Department of Transportation)  
(▷ page 274)

### **Engine number**

The number set by the manufacturer and placed on the cylinder block to uniquely identify each engine produced.

### **Engine oil viscosity**

Measurement for the inner friction (viscosity) of the oil at different temperatures. The higher the temperature an oil can tolerate without becoming thin, or the lower the temperature it can tolerate without becoming viscous, the better the viscosity.

### **ESP**

(Electronic Stability Program)  
Improves vehicle handling and directional stability.

### **ETD**

(Emergency Tensioning Device)  
Device which deploys in certain frontal and rear collisions exceeding the system's threshold to tighten the seat belts.  
->SRS

### **FSS (Canada vehicles)**

(Flexible Service System)  
Maintenance service indicator in the speedometer display that informs the driver when the next vehicle maintenance service is due. FSS evaluates engine temperature, oil level, vehicle speed, engine speed, distance driven and the time elapsed since your last service, and calls for the next maintenance service accordingly.

**GAWR**

(Gross Axle Weight Rating)  
 (▷ page 274)

**Gear range**

Number of gears which are available to the automatic transmission for shifting. The automatic gear shifting process can be adapted to specific operating conditions using the gear selector lever.

**GPS**

(Global Positioning System)  
 Satellite-based system for relaying geographic location information to and from vehicles equipped with special receivers. Employs CD digital maps for navigation.

**GVW**

(Gross Vehicle Weight)  
 (▷ page 274)

**GTW**

(Gross Trailer Weight)  
 (▷ page 274)

**GVWR**

(Gross Vehicle Weight Rating)  
 (▷ page 274)

**Instrument cluster**

The displays and indicator/warning lamps in the driver's field of vision, including the tachometer, speedometer, engine temperature and fuel gauge.

**Kickdown**

Depressing the accelerator past the point of resistance shifts the transmission down to the lowest possible gear. This very quickly accelerates the vehicle and should not be used for normal acceleration needs.

**Kilopascal (kPa)**

(▷ page 274)

**Line of fall**

The direct line that an object moves downhill when influenced by the force of gravity alone.

**Locking knob**

Button on the door which indicates whether the door is locked or unlocked. Pushing the locking knob down on an individual door from inside will lock that door.

**Maintenance System (U.S. vehicles)**

Maintenance service indicator in the speedometer display that informs the driver when the next vehicle maintenance service is due. The Maintenance System tracks distance driven and the time elapsed since your last maintenance service, and calls for the next maintenance service accordingly.

**Maximum load rating**

(▷ page 274)

**Maximum loaded vehicle weight**

(▷ page 274)

**Maximum tire inflation pressure**

(▷ page 274)

### Memory function\*

Used to store three individual seat, steering wheel and mirror positions for each SmartKey.

### MON

(Motor Octane Number)

The Motor Octane Number for gasoline as determined by a standardized method. It is an indication of a gasoline's ability to resist undesired detonation (knocking). The average of both the MON (Motor Octane Number) and →RON (Research Octane Number) is posted at the pump, also known as ANTI-KNOCK INDEX.

### Multifunction display

A display field in the instrument cluster used to present information provided by the control system.

### Normal occupant weight

(▷ page 274)

### Overspeed range

Engine speeds within the red marking of the tachometer dial. Avoid this engine speed range, as it may result in serious engine damage that is not covered by the Mercedes-Benz Limited Warranty.

### Poly-V-belt drive

Drives engine-components (alternator, AC compressor, etc.) from the engine.

### Power train

Collective term designating all components used to generate and transmit motive power to the drive axles, including

- Engine
- Clutch/torque converter
- Transmission
- Transfer case
- Drive shaft
- Differential
- Axle shafts/axles

### Production options weight

(▷ page 275)

### PSI

(Pounds per square inch)

(▷ page 275)

### Recommended tire inflation pressure

(▷ page 275)

### Rear Parking Assist\*

System which uses visual and acoustic signals to assist the driver during parking maneuvers.

### REST

(Residual engine heat utilization)  
Feature that uses the engine heat stored in the coolant to heat the vehicle interior for a short time after the engine has been turned off.

### Restraint system

Seat belts, belt tensioner, airbags and child seat restraint systems. As independent systems, their protective functions complement one another.

**Rim**

(▷ page 275)

**RON**

(Research Octane Number)

The Research Octane Number for gasoline as determined by a standardized method. It is an indication of a gasoline’s ability to resist undesired detonation (knocking). The average of both the →MON (Motor Octane Number) and RON (Research Octane Number) is posted at the pump, also known as ANTI-KNOCK INDEX.

**Shift lock**

When the vehicle is parked, this lock prevents the transmission gear selector lever from being moved out of position **P** without key turned and brake pedal depressed.

**Sidewall**

(▷ page 275)

**SRS**

(Supplemental Restraint System)

Seat belts, emergency tensioning device and airbags. Though independent systems, they are closely interfaced to provide effective occupant protection.

**Tele Aid System**

(Telematic Alarm Identification on Demand)

The Tele Aid system consists of three types of response: automatic and manual emergency, roadside assistance and information. Tele Aid is initially activated by completing a subscriber agreement and placing an acquaintance call.

The Tele Aid system is operational provided that the vehicle’s battery is charged, properly connected, not damaged and cellular and GPS coverage is available.

**Telematics\***

A combination of the terms “telecommunications” and “informatics”.

**Tightening torque**

Force times lever arm (e.g. a lug wrench) with which threaded fasteners such as wheel bolts are tightened.

**TIN**

(Tire Identification Number)

(▷ page 275)

**Tire load rating**

(▷ page 265)

**Tire ply composition and material used**

(▷ page 275)

**Tire speed rating**

(▷ page 275)

**Traction**

(▷ page 275)

### **Transfer case**

Speed of rotation/torque converter that works together with the ->automatic transmission. In the LOW mode off-road position, the transfer case decreases the output rotational speed of the ->automatic transmission by approximately half. This results in a corresponding increase of torque on the drive axles.

The vehicle then has nearly double the driving force but drives only approximately half as fast.

### **Tread**

(▷ page 275)

### **Treadwear indicators**

(▷ page 276)

### **TWR**

(Tongue Weight Rating)

(▷ page 276)

### **Uniform Tire Quality Grading Standards**

(▷ page 276)

### **Vehicle capacity weight**

(▷ page 276)

### **Vehicle maximum load on the tire**

(▷ page 276)

### **VIN**

(Vehicle Identification Number)

The number set by the manufacturer and placed on the body to uniquely identify each vehicle produced.

### **Voice control system\***

Voice control system for car phones, portable cell phones and audio systems (radio, CD, etc.).

- A**
- ABS 25, 80, 383
    - LOW RANGE mode 81
    - Malfunction indicator lamp 290, 291
    - Messages in display 300
    - Warning lamp 290, 291
  - Accelerator position (Automatic transmission) 153
  - Accessory weight 273
  - Accident
    - In case of 56
  - Activating
    - Air conditioning (cooling) 174
    - Air recirculation mode 172
    - Anti-theft alarm system 88
    - Central locking (control system) 142
    - Defrost 172
    - Easy-entry/exit feature 143
    - ESP 87
    - Exterior headlamps 51
    - Exterior lamps 111
    - Exterior rear view mirror parking position 164
    - Headlamps 51
    - Rear window defroster 166
    - Windshield wipers 53
  - Adding
    - Coolant 249
    - Engine oil 247
  - Additional turn signals 336
  - Adjusting 37
    - Air distribution 171
    - Air volume 171
    - Backrest tilt 39
    - Exterior rear view mirror 41
    - Head restraint height 39
    - Head restraint height, rear seats 103
    - Head restraint tilt 39
    - Instrument cluster illumination 120
    - Interior rear view mirror 41
    - Mirrors 41
    - Multicontour seat\* 104
    - Seat cushion length 104
    - Seat cushion tilt 39
    - Seat fore and aft adjustment 38
    - Seat height 39
    - Seats 37
    - Steering column in/out 40
    - Steering column up/down 40
    - Steering wheel 40
  - Air conditioning (cooling)
    - Turning off 174
    - Turning on 174
  - Air conditioning refrigerant 378
  - Air distribution
    - Adjusting 171
  - Air pressure 273
  - Air pressure see Tire inflation pressure
  - Air recirculation mode 172
    - Activating 172
    - Deactivating 172
  - Air volume
    - Adjusting 171
  - AIRBAG OFF indicator lamp 297
  - Airbags 63
    - BabySmart™ airbag deactivation system 74, 383
    - Front 67
    - Safety guidelines 66
    - Window curtain airbags 68

- Alarm
  - Audible 79, 88
  - Canceling 89, 90
  - Visual 88
- Alarm system
  - Anti-theft 88
- Anticorrosion/antifreeze 381
- Antilock brake system (ABS) 383
- Anti-theft alarm system
  - Arming 88
  - Canceling alarm 89
  - Disarming 89
- Anti-theft systems 88
  - Anti-theft alarm system 88
  - Tow-away alarm 89
- Aquaplaning see Hydroplaning
- Armrest
  - Storage compartment below 195
  - Storage compartment in front of 195
- Ashtrays 198
- Aspect ratio 273
- At the gas station 239
- ATF (automatic transmission fluid) 248
- AUDIO menu 128
  - Selecting radio station 129
- Auto-dimming for rear view mirror 163
- Automatic central locking
  - Activating/deactivating (control system) 142
- Automatic climate control
  - Deactivating 174
- Automatic headlamp mode 111
- Automatic locking when driving 98
- Automatic transmission 149
  - Accelerator position 153
  - Emergency operation (Limp Home Mode) 156
  - Fluid level 248
  - Gear ranges 154
  - Gear selector lever position 149, 151
  - Gear shifting malfunctions 156
  - Kickdown 153
  - Manual shifting 155
  - One-touch gearshifting 155
  - Transmission fluid 248
- B**
- BabySmart™
  - Airbag deactivation system 74, 383
  - Compatible child seats 74, 383
  - Self-test 75
- Backup lamps 336
  - Bulbs 336
  - Replacing bulbs 344
- Bar 273
- BAS 80, 82, 383
  - Messages in display 300
- Batteries
  - SmartKey (replacing) 333
- Batteries, SmartKey
  - Check lamp 95
  - Checking 95
- Battery box
  - Fuse box in 362
- Battery discharged
  - Jump starting 356

- Battery, vehicle 251, 353
  - Charging 353
  - Disconnecting 354
  - Messages in display 304, 305
  - Reconnecting 355
- Bead 273
- Block heater (Canada only) 279
- Blocking rear door window operation 78
- B-pillar 368
- Brake assist system (BAS) 383
- Brake fluid 241, 378
- Brake lamp bulbs, left and right 336
- Brake lamp, high mounted 336
- Brake pads
  - Message in display 305
- Brakes 221
  - Warning lamp 292, 293
- Break-in period 218
- Brush guard\* 331
  - Lowering 332
  - Raising and securing 332
- Bulbs, replacing
  - Additional turn signals 336
  - Backup lamps 336, 344
  - Brake lamps 336, 344
  - Front fog lamps 336, 340
  - Front lamps 335, 336
  - Front turn signal lamps 336, 342
  - High and low beam 338
  - High beam lamps 336
  - High mounted brake lamp 336
  - License plate lamps 336, 345
  - Low beam lamps 336
  - Parking lamps 336, 338
  - Rear fog lamp 336, 344
  - Rear turn signal lamps 336
  - Side marker lamps 336, 342
  - Standing lamps 336, 338
  - Tail lamp assemblies 336
  - Tail lamp unit 343
- C**
  - CAC (Customer Assistance Center) 383
  - Call priority
    - Tele Aid 208
  - Calling up
    - Maintenance service indicator 281
    - Range (distance to empty) 146
  - CAN system 383
  - Capacities
    - Fuels, coolants, lubricants, etc. 376
  - Cargo area see Cargo compartment
  - Cargo compartment
    - Tailgate 97, 98
    - Tie-down rings 193
  - Cargo compartment cover 187
    - Installing 187
    - Removing 187
  - Cargo tie-down rings 193
  - Catalytic converter 236
  - CD changer 324
  - CD player
    - Operating 130

- Center console 28
  - AIRBAG OFF indicator lamp 297
  - Lower part 29
  - Upper part 28
- Centigrade
  - Setting temperature units 136
- Central locking
  - From inside 99
  - Switch 99
  - Switching on/off (control system) 142
  - Unlocking from inside 99
- Certification label 368
- Changing
  - Key setting 143
- Charging
  - Vehicle battery 353
- Checking
  - Coolant level 241, 248
  - Oil level 241, 243
- Checklist
  - Off-road driving 229
- Child safety 72
  - Infant and child restraint systems 62, 72
  - LATCH child seat anchors 77
- Child safety switch see Blocking of rear door window operation
- Cigarette lighter 199
- Cleaning
  - Cup holders 287
  - Gear selector lever 287
  - Hard plastic trim items 287
  - Headlamps 165
  - Headliner 287
  - Illuminated door sill panels 288
  - Instrument cluster 287
  - Leather upholstery 288
  - Light alloy wheels 287
  - MB Tex upholstery 288
  - Plastic and rubber parts 288
  - Rear Parking Assist sensors\* 286
  - Seat belts 287
  - Steering wheel 287
  - Windows 286
  - Windshield 54
  - Wiper blades 286
  - Wood trims 288
- Cleaning tires 254
- Climate control 168
  - Adjusting 171
  - Defogging windshield 171
  - Defrosting 172
  - Rear window defroster 166
  - Setting the temperature 170
- Clock 25
- Closing
  - Glove box 194
  - Hood 243
  - Side windows 175
  - Tailgate 98
  - Tilt/sliding sunroof 178, 330
  - Tilt/sliding sunroof with SmartKey 179
  - Windows 175
  - Windows with SmartKey 176
- Closing tilt/sliding sunroof
  - In an emergency 330
- Cockpit 22, 383
- Cockpit management and data system (COMAND) 384
- Cold tire inflation pressure 273
- COMAND 384

- COMAND see separate operating instructions
- Combination switch 23, 114
  - High beam flasher 52, 114
  - High beam headlamps 114
  - Turn signals 52
  - Windshield wipers 53
- Control and operation of radio transmitters 235
- Control system 123, 384
  - AUDIO menu 128
  - Convenience submenu 143
  - Display digital speedometer 128
  - Functions 125, 127
  - Instrument cluster submenu 136
  - Lighting submenu 138
  - Menus 126, 127
  - Multifunction display 123
  - Multifunction steering wheel 124
  - NAVI menu 130
  - Satellite radio (USA only) 129
  - Selecting radio system 129
- Settings menu 132
- Standard display menu 128
- Submenus 125, 127
- TEL menu 146
- Trip computer menu 145
- Vehicle status message memory menu 131
- Vehicle submenu 142
- Convenience feature 177
- Convenience submenu 143
  - Activating easy-entry/exit feature 143
  - Setting key-dependency 144
  - Setting parking position for exterior rear view mirror 144
- Coolant 248, 380
  - Adding 249
  - Anticorrosion/antifreeze quantity 380
  - Capacities 376
  - Checking level 248
  - Messages in display 307, 308, 309
  - Temperature 238
  - Temperature display 120
  - Warning lamp 307
- Coolant level
  - Checking 241, 248
- Crossing obstacles 232
- Cruise control 181, 384
  - Canceling 182
  - Driving downhill 182
  - Driving uphill 182
  - Fine adjustment 183
  - Messages in display 310
  - Setting current speed 182
  - Setting speed 183
- Cruise control lever 181
- Cup holder
  - In rear passenger footwell 197
- Cup holders 196
  - Cleaning 287
  - In front passenger footwell 197
  - In glove box lid 196
  - Next to the armrest 196
- Curb weight 273
- Customer Assistance Center (CAC) 383

**D**

- Data recording (vehicle) 20
- Daytime running lamp mode 112
  - Setting 138, 139
- Deactivating
  - Air conditioning (cooling) 174
  - Air recirculation mode 172
  - Alarm 89
  - Anti-theft alarm system 89
  - Central locking (control system) 142
  - Cruise control 182
  - Defrost 172
  - ESP 86
  - Exterior lamps 111
  - Exterior lamps delayed shut-off 140
  - Headlamps 58
  - Immobilizer 88
  - Interior lighting delayed shut-off 141
  - Rear window defroster 167
  - Tow-away alarm 90
- Deep water see Standing water
- Defogging
  - Windshield 171
- Defrosting 172
- Delayed shut-off
  - Exterior lamps 140
  - Interior lighting 141
- Department of Transportation see DOT
- Dialing
  - A number (telephone) 148
- Differential locks 159, 384
  - Switching off 162
  - Switching on 161
- Difficulties
  - While driving see Problems while driving
  - With starting 49
- Digital speedometer 128
- Direction of rotation (tires) 255
- Discharged battery
  - Jump starting 356
- Disconnecting
  - Vehicle battery 354
- Display
  - Selecting 138
- Displays
  - Digital speedometer 128
  - Maintenance service indicator 280
  - Messages 245, 298
  - Selecting 138
  - Showing vehicle status messages 131
- Distance to empty (range)
  - Calling up 145
- Door control panel 31
- Door handle 31
- Door sill panels
  - Cleaning 288
- Door unlock
  - With Tele Aid 209
- Doors
  - Messages in display 310
  - Opening from the inside 96
  - Opening from the outside 94
- DOT 274
- Downhill driving
  - Cruise control 182
- Downshifting 155
- Drink holders see Cup holders
- Drinking and driving 220

## Driving

- General instructions 43, 220
- In winter 225
- Problems 55
- Safety systems 80
- Through standing water 226
- Driving abroad 236
- Driving and safety systems
  - 4-ETS 83
  - ABS 80
  - BAS 82
  - EBB 84
  - ESP 84
- Driving instructions 220
  - Passenger compartment 227
- Driving off 222
- Driving systems 181
  - Cruise control 181
  - Driving safety systems 80
- Driving through water 231

**E**

- Easy-entry/exit feature 100
  - Activating 143
- EBB 80, 84
- Electrical fuses 362
- Electrical outlet 200

## Electrical system

- Technical data 374
- Electronic Brake Booster (EBB) 84
- Electronic Stability Program see ESP
- Electronic Traction System (ETS) 83
- Emergency call system 202
- Emergency calls
  - Initiating an emergency call 205
  - With Tele Aid 204
- Emergency operation (Limp Home Mode) 156
- Emergency operations
  - Closing tilt/sliding sunroof 330
  - Locking the vehicle 328
  - Opening tilt/sliding sunroof 330
  - Remote door unlock 209
  - Unlocking the tailgate 327
  - Unlocking the vehicle 327
- Emergency tensioning device see ETD
- Emission control 237
- Emission control information label 368
- Ending
  - A call (telephone) 147

## Engine

- Compartment 242
- Message in display 294
- Starting with SmartKey 49
- Technical data 370
- Turning off with SmartKey 58
- Engine air filter
  - Messages in display 310
- Engine cleaning 285
- Engine compartment 242
  - Hood 242
- Engine malfunction indicator lamp 25, 294
- Engine number 384
- Engine oil 243, 377
  - Adding 247
  - Additives 378
  - Checking level 243
  - Consumption 243
  - Display messages 312
  - Messages in display 245, 311
  - Oil dipstick 247
  - Viscosity 384

- Engine oil level see Oil level
- Enlarged cargo compartment 188
- ESP 25, 80, 84, 384
  - Messages in display 302
  - Switching off 86
  - Switching on 87
  - Synchronizing 302
  - Warning lamp 295
- ETD 62, 71, 384
  - Safety guidelines 66
- Exterior lamp switch 110
- Exterior lamps
  - Delayed shut-off 140
- Exterior rear view mirrors
  - Adjusting 41
  - Parking position for 144
- F**
- Fahrenheit
  - Setting temperature units 136
- Fastening the seat belts 43
- Fine adjustment
  - Cruise control 183
- First aid kit 323
- Flat tire 348
  - Lowering the vehicle 352
  - Mounting the spare wheel 349
  - Spare wheel 325
- Flexible Service System (FSS, Canada vehicles) 384
- Fog lamp, rear 114, 336
- Fog lamps, front 113
  - Messages in display 315
- 4-ETS 80, 83
- Front airbags 67
- Front axle differential lock
  - Switching on 162
- Front fog lamps
  - Replacing bulbs 336, 340
- Front lamps
  - Messages in display 314, 316
  - Replacing bulbs 336, 338
  - Switching on 110
- Front seat head restraints
  - Installing 102
  - Removing 101
- Front towing eye 361
- Front turn signal lamp
  - Replacing bulbs 342
- FSS (Flexible Service System, Canada vehicles) 384
- Fuel 240
  - Additives 379
  - Fuel reserve warning lamp 296
  - Gasoline additives 379
  - Premium unleaded gasoline 240, 376, 378
  - Refueling 239
  - Requirements 379
  - Reserve warning 25
  - Technical data 376
- Fuel additives 379
- Fuel consumption statistics
  - After start 145
  - Since last reset 145
- Fuel filler flap 239
  - Locking 239
  - Opening 328
  - Unlocking 239
- Fuel requirements 379
- Fuel reserve tank
  - Message in display 313
- Fuel tank
  - Capacity 376
  - Filler flap 239

Fuels, coolants, lubricants, etc.

Capacities 376

Functions (control system) 125, 127

Resetting 133

Fuse box 362, 363, 364

Fuses 362

Fuse box in battery box 362

Fuse box in front passenger  
footwell 363

Fuse box in middle tunnel 364

Fuse box in passenger  
compartment 362

## G

Garage door opener 30, 210

Gasoline see Fuel

Gasoline additives 379

GAWR 274

Gear range 385

Automatic transmission 154

Limiting 154

Shifting into optimal 155

Transfer case 157

Gear range limit

Canceling 155

Gear selector lever

Cleaning 287

Position 151

Position (automatic  
transmission) 149

Global

Locking 94

Unlocking 94

Global Positioning System (GPS) 385

Glove box 23, 194

Closing 194

Opening 194

Good visibility 163

GPS 385

Gross Axle Weight Rating see GAWR

Gross Trailer Weight see GTW

Gross Vehicle Weight Rating see GVWR

Gross Vehicle Weight see GVW

GTW 274

GVW 274

GVWR 274

## H

Hard plastic trim items

Cleaning 287

Hazard warning flasher 115

Head restraints 101

Power seats 39

Synchronizing 102

Headlamp cleaning system 249

Headlamps

Automatic control 111

Cleaning 285

Cleaning system 165, 249

Switching off 58

Switching on 51

Washer fluid 382

Washer system 382

Headlight switch-off delay see Delayed  
switch-off, exterior lamps

Headliner

Cleaning 287

Heated seats 104

Heated steering wheel 215

Height adjustment

Head restraints 39

Seat belts 48

Steering wheel 40

- High beam flasher 52, 114
- High beam headlamps
  - Messages in display 315
  - Replacing bulbs 336, 338
  - Switching on 114
- High mounted brake lamp 336
- Hood 242
  - Closing 243
  - Messages in display 313
  - Opening 242
- Hydroplaning 224
- I**
- Identification labels 368
  - Certification label 368
  - Vehicle identification number (VIN) 368
- Ignition
  - Switching on 49
- Ignition (Position in starter switch) 35
- Immobilizer 88
  - Activating 88
  - Deactivating 88
- Infant and child restraint systems 72
  - Installing 76
  - LATCH child seat anchors 77
- Information
  - Button for Tele Aid 207
- Inside rear view mirror
  - Auto-dimming 163
- Installing
  - Cargo compartment cover 187
  - Infant and child restraint systems 76
  - Wiper blades 347
- Instructions
  - Loading 192
- Instrument cluster 24, 120, 385
  - Cleaning 287
  - Coolant temperature display 120
  - Illumination 120
  - Lamps in 296
  - Multifunction display 123
  - Outside temperature indicator 122
  - Selecting language 137
- Instrument lighting 120
- Instruments and controls see Cockpit
- Interior lighting 116
  - Delayed shut-off 141
  - Manual operation 117
- Interior rear view mirror
  - Adjusting 41
- Intermittent wiping 54
- Interval wiping 55
  - Switching off 55
  - Switching on 55
- J**
- Jack 324
- Jump starting 356
- K**
- Key, mechanical 327
- Key, SmartKey
  - Battery check lamp 94
  - Checking the batteries 95
  - Factory setting 94
  - Global locking 94
  - Global unlocking 94
  - Loss of 96
  - Positions in starter switch 35
  - Remote controls 92
  - Restoring to factory setting 95
  - Selective setting 94
  - Starting the engine 49
  - Unlocking with 34
- Key-dependency memory
  - Settings 144
- Keys 92
- Kickdown 385

- Kickdown (Automatic transmission) 153
- Kilometers/miles in speedometer 137
- Kilopascal 274
- Km/h or mph in speedometer 137
- L**
- Labels, identification 368
- Lamp bulbs, exterior 335
- Lamps, exterior
  - Front 336
  - Light sensor 316
  - Messages in display 314, 316
  - Rear 336
  - Replacing bulbs for rear 343
- Lamps, indicator and warning
  - ABS 290, 291
  - Battery (SmartKey) 94
  - Brakes 292, 293
  - CHECK ENGINE 294
  - Engine diagnostics 294
  - ESP 295
  - Fuel reserve 296
  - Instrument cluster 296
  - Maintenance service indicator 280
  - Seat belts 296
  - SRS 63
  - Turn signals 25
- Language
  - Multifunction display 137
  - Setting 137
- LATCH child seat anchors 77
- Layout of poly-V-belt drive 369
- Leather upholstery
  - Cleaning 288
- License plate lamps
  - Messages in display 316
  - Replacing bulbs 336, 345
- Light alloy wheels
  - Cleaning 287
  - Technical data 372, 373
- Light sensor 316
- Lighter see Cigarette lighter
- Lighting 110
  - Automatic headlamp mode 111
  - Combination switch 114
  - Daytime running lamp mode 112
  - Exterior lamp switch 110
  - Front fog lamps 113
  - High beam flasher 114
  - High beams 114
  - Instrument cluster illumination 120
  - Interior 116
  - Locator lighting 113
- Low beams 110
- Manual headlamp mode 111
- Night security illumination 113
- Parking lamps 110
- Rear fog lamp 114
- Settings (control system) 138
- Limiting the gear range 154
- Limp Home Mode 156
- Line of fall 385
- Loading 187
  - Cargo compartment cover 187
  - Cargo tie-down rings 193
  - Instructions 192
  - Partition net\* 189
  - Roof rack 187
  - Split rear bench seat 188
- Loading terminology 273
- Loading the vehicle 255
- Locator lighting 113
  - Setting 139
- Locking 57, 92
  - Fuel filler flap 239
  - Global, SmartKey 94
  - Vehicle in an emergency 328
- Locking knob 385
- Loss of keys 96

- Loss of Service and Warranty Information
  - Booklet 367
- Low beam headlamps
  - Messages in display 316
  - Replacing bulbs 336, 338
- LOW RANGE - ABS 81
- Lowering
  - Vehicle 352
- Lubricants
  - Technical data 376
- M**
- Main dimensions 375
- Maintenance 280
- Maintenance service
  - Basic service (Service A) 280
  - Calling up the maintenance service indicator 281
  - Extended service (Service B) 280
  - Overdue 281
  - Types 281
  - When due 280
- Maintenance service indicator 280
  - Calling up 281, 282
  - Clearing 281, 282
- Maintenance System (U.S. vehicles) 385
- Malfunction
  - Displaying 131
  - Rear Parking Assist\* 186
- Manual headlamp mode 111
- Manual operations
  - Fuel filler flap 328
  - Interior lighting control 117
  - Locking the vehicle 328
  - Tilt/sliding sunroof 330
  - Unlocking the driver's door 327
  - Unlocking the tailgate 327
  - Unlocking transmission gear selector lever 329
- Maximum inflation pressure 274
- Maximum load rating 274
- Maximum loaded vehicle weight 274
- MB Tex upholstery
  - Cleaning 288
- Mechanical key 327
- Memory function 107, 386
  - Recalling positions from memory 108
  - Storing exterior rear view mirror parking positions 109
  - Storing key dependent settings 108
- Menus 125
  - AUDIO 128
  - In control system 126, 127
  - NAVI 130
  - Settings menu 132
  - Standard display 128
  - Submenus 125
  - TEL 146
  - Trip computer 145
  - Vehicle status message memory 131
- Messages in the multifunction display
  - Symbol messages 304
  - Text messages 300
- Middle tunnel
  - Fuse box in 364
- Miles/kilometers in speedometer
  - Setting 137

## Mirrors

- Activating exterior rear view mirror parking position 164
  - Adjusting 41
  - Auto-dimming for rear view mirror 163
  - Exterior rear view mirror 41
  - Exterior rear view mirror parking positions 144
  - Interior rear view mirror 41
  - Storing exterior rear view mirror parking position 109
- MON 240
- MON (Motor Octane Number) 386
- Monitoring reach
- Rear Parking Assist\* 185
- Mph or km/h in speedometer setting 137
- Multicontour seat\* 104
- Multifunction display 123, 386
- Selecting language 137
  - Standard display 127

## Multifunction display messages

- ABS 300
- BAS 300
- Battery 304, 305
- Brake fluid 305
- Brake pads 305
- Check engine 294
- Coolant 307, 308, 309
- Cruise control 310
- Display 322
- Doors 310
- Engine 294
- Engine air filter 310
- Engine oil 311
- ESP 302
- Fuel reserve tank 313
- Hood 313
- Key 313
- Lamps 314, 316
- Parking brake 306
- Sunroof 321
- Tailgate 322
- Tele Aid 321
- Telephone\* 322
- Washer fluid 322

- Multifunction steering wheel 26, 124
- Buttons 124

**N**

- Navigation system

  - Operating 130
  - See separate COMAND operating instructions

- Night security illumination 113

  - Setting 140

- Normal occupant weight 274

**O**

- Occupant distribution 274
- Occupant safety 62

  - Airbags 63
  - Children in the vehicle 72
  - Fastening the seat belt 43
  - Infant and child restraint systems 72
  - LATCH child seat anchors 77
  - Seat belts 43, 66

- Odometer, main 25

- Off-road driving 227
    - Checklist 229
    - Crossing obstacles 232
    - Driving through water 231
    - Returning 234
    - Rules 228
    - Special driving features 228
    - Steep terrain 230
  - Oil
    - Adding 247
    - Consumption 243
    - Dipstick 243
    - Oil dipstick 247
    - Viscosity 384
  - Oil level
    - Checking 241
  - One-touch gearshifting 155
    - Canceling gear range limit 155
    - Downshifting 155
    - Upshifting 155
  - Opening
    - Ashtray 198
    - Doors from the inside 96
    - Fuel filler flap 239
    - Fuel filler flap manually 328
    - Glove box 194
    - Hood 242
    - Side windows 175
    - Tailgate 97, 98
    - Tilt/sliding sunroof 178, 330
    - Tilt/sliding sunroof in an emergency 330
    - Tilt/sliding sunroof with SmartKey 179
    - Windows 175
    - Windows with SmartKey 176
  - Operating
    - CD player 130
    - COMAND see separate operating instructions
    - Navigation system 130
    - Radio 129
    - Radio transmitters 235
    - Telephone 146
  - Operator's Manual 10
  - Ornamental moldings 285
  - Outside temperature indicator 122
  - Overdue maintenance service 281
  - Overhead control panel 30
  - Overspeed range 386
- P**
- Paintwork 284
  - Paintwork code 368
  - Panic alarm 79
    - Panic button on SmartKey 79
  - Parcel net
    - In front passenger footwell 197
  - Parking 57, 222
  - Parking brake 50, 57
    - Engaging 57
    - Message in display 306
    - Releasing 50
  - Parking lamp, front
    - Replacing bulbs 338
  - Parking lamps
    - Replacing bulbs 336
    - Switching on 110
  - Parking position
    - Exterior rear view mirrors 109, 144, 164
  - Parktronic see Rear Parking Assist\*
  - Partition net\* 189
    - Installing behind front seats 191
    - Installing behind rear seat bench 190
    - Removing 191
  - Parts service 366

- Passenger compartment 227
  - Fuse box in 362
  - Interior lighting 116
  - Interior rear view mirror 41
  - Parcel net in front passenger footwell 197
  - Storage bags 198
- Passenger footwell
  - Fuse box in 363
- Passenger safety see Occupant safety
- Pedals 220
- Phone book
  - Loading 148
  - Quick search 148
- Phone number
  - Dialing 148
  - Redialing 148
- Plastic and rubber parts
  - Cleaning 288
- Poly-V-belt drive 386
  - Layout 369
- Positions (memory function)
  - Recalling from memory 108
  - Storing into memory 108
- Potential problems associated with under-inflated and overinflated tires 262
- Power assistance 221
- Power seat
  - Adjusting backrest tilt 39
  - Adjusting head restraint height 39
  - Adjusting head restraint tilt 39
  - Adjusting seat cushion tilt 39
  - Adjusting seat height 39
  - Seat fore and aft adjustment 38
- Power tilt/sliding sunroof 178
- Power train 386
- Power washer 284
- Power windows 175
  - Blocking of rear door window operation 78
  - Convenience feature 177
  - Side windows 175
  - Summer opening feature 176
- Practical hints
  - First aid kit 323
  - Fuses 362
  - Lamp in center console 297
  - Lamps in instrument cluster 290
  - Messages in the display 298
  - Spare wheel 325
  - Towing the vehicle 358
  - Vehicle jack 324
  - Vehicle tool kit 323
- Premium unleaded gasoline 378
- Problems
  - While driving 55
- Product information 9
- Production options weight 275
- PSI 275, 276
- Q**
- Quick search
  - Phone book 148
- R**
- Radio
  - Satellite (USA only) 129
  - Selecting stations 129
  - Station search 129
  - Station selection setting 142

- Radio transmitters, control and operation 235
- Range (distance to empty)
  - Calling up 146
- Range of sensor
  - Rear Parking Assist\* 185
- Reading lamp 30
- Rear axle differential lock
  - Switching on 162
- Rear bench seat
  - Foldable 188
- Rear door window
  - Blocking operation 78
- Rear fog lamp
  - Replacing bulbs 344
- Rear lamps see Tail lamps
- Rear Parking Assist\* 184, 386
  - Cleaning sensors 286
  - Malfunction 186
  - Monitoring reach 185
  - Warning indicators 186
- Rear seat head restraints 102
  - Installing 103
  - Removing 103
- Rear towing eye 361
- Rear view mirror auto-dimming 163
- Rear view mirrors see Mirrors
- Rear window defroster 166
  - Activating 166
  - Deactivating 167
- Rear window wiper/washer 54
- Recommended inflation pressure 275
- Reconnecting
  - Vehicle battery 355
- Recovery services
  - For stolen vehicle 210
- Refrigerant
  - Air conditioning 378
- Refueling 239
- Regular checks 240
- Remote controls
  - SmartKey 92
- Remote door unlock
  - With Tele Aid 209
- Removing
  - Cargo compartment cover 187
  - Wheel 351
  - Wiper blades 346
- Replacing
  - Brake lamp bulbs 336
  - Bulbs 335
  - Front lamp bulbs 338
  - Rear lamp bulbs 336, 343
  - SmartKey batteries 333
  - Wiper blades 346
- Resetting
  - All functions (control system) 132
  - All functions of a submenu 133
  - Fuel consumption 145
  - Maintenance service indicator 282
  - Trip odometer 121
- Residual heat utilization 386
- REST (Residual engine heat utilization) 386
- Restraint systems 62, 386
  - Airbags 62
  - Child seat recognition 62
  - Child seats 62
  - Emergency Tensioning Device (ETD) 62
  - Lower anchors and tethers for children (LATCH) 62
  - Seat belts 62

- Restraint systems see Infant and child restraint systems
- Returning from off-road driving 234
- Rim 275
- Rims 371
- Roadside Assistance see Tele Aid
- RON 240
- RON (Research Octane Number) 387
- Roof rack 187
- Rubber parts, cleaning 288
- S**
- Safety
  - Occupant 62
- Safety belts see Seat belts
- Safety systems
  - Driving 80
- Satellite radio (USA only) 129
- Searching
  - Radio station 129
- Seat adjustment
  - Synchronizing 102
- Seat backrest
  - Folding forward 189
  - Returning to sitting position 189
- Seat belt force limiter 71
- Seat belt height adjustment 48
- Seat belts 62, 68
  - Cleaning 287
  - Fastening 43
  - Height adjustment 48
  - Proper use of 47, 70
  - Safety guidelines 66
  - Warning lamp 296
- Seat bench
  - Folding forward 189
  - Returning to sitting position 189
- Seat cushion length
  - Adjusting 104
- Seating capacity 256
- Seats 100
  - Adjusting 37
  - Easy entry/exit feature 100
  - Heater 104
  - Multicontour seat\* 104
  - Split rear bench seat 188
- Selecting
  - Display 138
- Selector lever 25
  - Lock 49, 149
  - Position (automatic transmission) 25
- Self-test
  - BabySmart™ airbag deactivation system 75
  - Tele Aid 203
- Service
  - Parts 366
- Service and Warranty Booklet
  - Loss of 367
- Service life (tires) 253
- Service System see Maintenance

- Setting
  - Clock 25
  - Convenience functions 143
  - Cruise control 182
  - Daytime running lamp mode 138, 139
  - Higher speed in cruise control 183
  - Individual vehicle settings 132
  - Instrument lighting 120
  - Interior lighting delayed shut-off 141
  - Key-dependent memory 144
  - Lamps and lighting (control system) 138
  - Language, multifunction display 137
  - Locator lighting 139
  - Lower speed in cruise control 183
  - Miles/kilometers in speedometer 137
  - Night security illumination 140
  - Parking position for exterior rear view mirrors 144
  - Slower speed in cruise control 183
  - Speed in cruise control 183
  - Speedometer display mode 137
  - Station selection mode 142
  - Temperature (interior) 170
  - Temperature indicator 136
  - Time display mode 136
  - Units
    - Speedometer 137
    - Temperature 136
    - Time 136
  - Setting current speed 182
- Settings
  - Convenience functions 143
  - Factory, SmartKey 94
  - Individual (SmartKey) 144
  - Lighting (control system) 138
  - Menus and submenus 125
  - Resetting all (control system) 132
  - Resetting in the submenu 133
  - Selective 94
- Settings menu
  - Functions in 132
  - Individual vehicle settings 132
  - Submenus 133
- Shift lock 387
- Shifting
  - Gear selector lever positions 151
- Shifting into optimal
  - Gear range 155
- Side marker lamps 336
  - Replacing bulbs 336, 342
- Side markers
  - Cleaning 285
- Side windows
  - Automatic opening 175
  - Cleaning 286
  - Closing 175, 176
  - Closing with SmartKey 176
  - Opening 175, 176
  - Opening fully 175
  - Opening with SmartKey 176
  - Stopping 175
- Sidewall 275
- Signal strength (telephone) 147
- Simultaneous wiping and washing
  - Windshield wipers 54
- Single wipe 54
- SmartKey 92
  - Locking and unlocking 92
  - Opening and closing the tilt/sliding sunroof with 179
  - Opening and closing windows with 176
  - Replacing batteries 333
  - Unlocking with 34

- Snow chains 279
- Spare parts see Parts service
- Spare wheel 325
  - Mounting 349
- Speed
  - Setting current 182
- Speed settings
  - Cruise control 183
- Speedometer 25
  - Setting units 137
- Speedometer display mode
  - Selecting 137
- Split rear bench seat 188
- SRS 70, 387
  - Indicator lamp 296
- Standing lamp, front
  - Replacing bulbs 338
- Standing lamps
  - Replacing bulbs 336
- Standing water
  - Driving instructions 226
- Starter switch 23, 35
  - Positions 35
- Starting difficulties 49
- Starting position 35
- Starting the engine 48
- Station (radio)
  - Search 129
- Station selection
  - Setting 142
- Steep terrain 230
- Steering column
  - Adjusting in /out 40
  - Adjusting up/down 40
- Steering wheel
  - Adjusting 40
  - Adjusting in/out 40
  - Adjusting up/down 40
  - Buttons 26
  - Cleaning 287
  - Heated 215
- Stolen vehicle
  - Stolen Vehicle Recovery services 210
- Stopping
  - Tilt/sliding sunroof 179
  - Windows 175
- Storage bags
  - In rear passenger compartment 198
- Storage compartments 194
  - Armrest 195
  - Below armrest 195
  - Cup holders 196, 197
  - Glove box 194
  - In front of armrest 195
  - Parcel net in front passenger footwell 197
  - Storage bags 198
- Storage spaces
  - Cup holders 195
- Storing (memory function)
  - Positions into memory 108
- Storing tires 254
- Submenus
  - Convenience 143
  - For settings 125
  - In control system 127
  - Instrument cluster 136
  - Lighting 138
  - Resetting functions in Control system 133
  - Selecting 133
  - Settings menu 133
  - Vehicle 142
- Summer opening feature 176

Sun visors 165

Sunroof

Messages in display 321

Supplemental Restraint System (SRS) 387

Switching

Transfer case 157

Switching off

Automatic central locking (control system) 142

Delayed (exterior lamps) 140

Differential locks 162

Engine 58

ESP 86

Headlamps 58

Heated steering wheel 216

Switching on

Automatic central locking (control system) 142

Differential locks 161

ESP 87

Front axle differential lock 162

Headlamps 51

Heated steering wheel 216

Rear axle differential lock 162

Transfer case differential lock 161

Windshield wipers 53

Symbol messages

Multifunction display 304

Synchronizing

ESP 302

Head restraints 102

Seat adjustment 102

## T

Tachometer 25, 121

Displaying gear range 154

Overspeed range 121

Tail lamps 343

Cleaning 285

Replacing bulbs 336

Tailgate

Closing 98

Message in display 322

Opening 97, 98

Tailgate lock 324

Unlocking in an emergency 327

Tar stains 284

Technical data

Air conditioning refrigerant 378

Brake fluid 378

Coolant 376

Coolants 380

Electrical system 374

Engine 370

Engine oil 377

Engine oil additives 378

Fuel requirements 379

Fuels 376

Gasoline additives 379

Lubricants 376

Main dimensions 375

Premium unleaded gasoline 378

Rims and tires 371

Weights and ratings 375

Windshield and headlamp washer system 377, 382

- Tele Aid 202
  - Call priority 208
  - Emergency calls 204
  - Information 207
  - Initiating an emergency call
    - manually 205
  - Messages in display 321
  - Remote door unlock 209
  - Roadside Assistance 206
  - Stolen Vehicle Recovery
    - services 210
  - System self-check 203
  - Tele Aid System 202
- Tele Aid System 387
- Telematics\* 387
- Telephone
  - Answering a call 147
  - Dialing a number from the phone
    - book 148
  - Ending a call 147
  - Loading phone book 148
  - Operating 146
  - Redialing 148
- Telephone\* 26, 201
  - Messages in display 322
- Temperature
  - Display mode 136
  - Setting interior temperature 170
  - Setting units in display 136
  - Tires 261
- Text messages
  - Multifunction display 300
- Tie-down rings (cargo compartment) 193
- Tightening torque 387
- Tightening torque (wheel bolts) 352
- Tilt/sliding sunroof 178
  - Closing 178, 330
  - Closing with SmartKey 179
  - Opening 178, 330
  - Opening with SmartKey 179
  - Stopping 179
- Time
  - Setting display mode 136
- Time display mode
  - Setting 136
- TIN 275
- Tire
  - Vehicle maximum load on 276
- Tire and Loading Information 256
- Tire and loading terminology 273
- Tire care and maintenance 253
- Tire Identification Number see TIN
- Tire inflation pressure
  - Checking 260, 261
- Tire inspection 253
- Tire load rating 275
- Tire ply composition and material
  - used 275
- Tire speed rating 225, 266, 275
- Tire terminology 273
- Tire traction 224
- Tires 252, 371
  - Direction of rotation 255
  - Driving instructions 223
  - Retreads 252
  - Rims and tires 371
  - Rotating 276
  - Service life 253
  - Temperature 261, 272
  - Tread depth 254, 278
  - Wear pattern 277
  - Winter 278
- Tools 323
- Tow-away alarm 28, 89
  - Arming 89
  - Disarming 89
  - Disarming for transport 89

- Tow-away alarm system
  - Canceling alarm 90
- Towing eye, front 361
- Towing eye, rear 361
- Towing the vehicle 358
  - Stranded vehicle 361
- Towing the vehicle - various problem scenarios 360
- Traction 275
- Transfer case 157, 388
  - Gear range 157
  - Messages in the multifunction display 158
  - Switching 157
- Transfer case differential lock
  - Switching on 161
- Transmission gear selector lever 329
  - Unlocking manually 329
- Transmission see Automatic transmission
- Tread 275
- Tread depth 254
- Tread depth (tires) 278
- Treadwear indicators 276
- Trip computer 145
- Trip odometer
  - Resetting 121
- Trunk see Cargo compartment
- Turn signal lamps
  - Replacing bulbs 336
- Turn signals 23, 52
  - Additional in mirrors 336
  - Cleaning lenses 285
  - Front bulbs 336
  - Indicator lamps 25
  - Rear bulbs 336
- Turning off
  - Engine 58
- U**
- Uniform Tire Quality Grading Standards 276
- Units
  - Setting speedometer units 137
  - Setting temperature units 136
  - Setting time units 136
- Unlocking 34, 92
  - Driver's door in an emergency 327
  - Fuel filler flap 239
  - Global 94
  - In an emergency 327
  - Selective settings 94
  - Tailgate in an emergency 327
  - Transmission gear selector lever manually 329
  - Vehicle in an emergency 209
  - With the SmartKey 34
- Uphill driving
  - Cruise control 182
- Upshifting 155
- Useful features 194
  - Ashtrays 198
  - Cigarette lighter 199
  - Electrical outlet 200
  - Floor mats 201
  - Storage compartments 194
  - Tele Aid 202
  - Telephone\* 201

**V**

## Vehicle

- Data recording 20
  - Individual settings 132, 135
  - Locking 28
  - Locking in an emergency 328
  - Lowering 352
  - Service battery 353
  - Towing 358
  - Unlocking 28
  - Unlocking in an emergency 327
- Vehicle battery 353
- Vehicle capacity weight 276
- Vehicle care 283
- Cup holders 287
  - Engine cleaning 285
  - Gear selector lever 287
  - Hard plastic trim items 287
  - Headlamps 285
  - Instrument cluster 287
  - Leather upholstery 288
  - Light alloy wheels 287
  - MB Tex upholstery 288
  - Ornamental moldings 285
  - Paintwork 284
  - Plastic and rubber parts 288
  - Power washer 284
  - Seat belts 287
  - Side markers 285
  - Steering wheel 287
  - Tail lamps 285
  - Tar stains 284
  - Turn signals 285
  - Vehicle washing 285
  - Window cleaning 286
  - Wiper blades 286
  - Wood trims 288
- Vehicle data recording 20
- Vehicle identification number (VIN) 368
- Vehicle jack 324
- Vehicle loading terminology 273
- Vehicle maximum load on the tire 276
- Vehicle status message memory 131
- Calling up 131
  - Clearing 131
- Vehicle tool kit 323
- Vehicle washing 285
- VIN (Vehicle Identification Number) 368, 388
- Voice control system\* 388

**W**

- Warning indicators
- Rear Parking Assist\* 186
- Warning sounds
- Drivers seat belts 68
  - Exterior lighting 111
  - Maintenance service indicator 281
  - Parking brake 50
- Warranty coverage 367
- Washer fluid see Windshield washer fluid
- Washing the vehicle 284
- Wear pattern (tires) 277
- Weights and ratings 375
- Wheel change
- Tightening torque 352
- Wheels
- Tires and wheels 252
- Window curtain airbags 68
- Windows see Side windows
- Windshield
- Defogging 171
  - Replacing wiper blades 346
  - Washer fluid 249, 382
  - Washer system 382

- Windshield washer fluid 382
  - Message in display 322
  - Mixing ratio 382
  - Refilling 249
  - Wiping with 54
- Windshield washer system 382
- Windshield wipers 23, 53
  - Fast wiper speed 53
  - Intermittent wiping 54
  - Interval wiping 55
  - Rear window wiper/washer 54
  - Replacing wiper blades 346
  - Single wipe 54
  - Switching on 53
  - Wiping with windshield washer fluid 54
- Winter driving 278
  - Block heater (Canada only) 279
  - Snow chains 279
  - Tires 278
- Winter driving instructions 225
- Winter tires 278
- Wiper blades
  - Cleaning 286
  - Installing 347
  - Removing 346
  - Replacing 346
- Wiper/washer
  - Rear window 54
- Wiping
  - And washing simultaneously 54
  - Interval 53, 55
  - With windshield washer fluid 54
- Wood trims
  - Cleaning 288





## Service and Literature

Your authorized Mercedes-Benz Light Truck Center has trained technicians and original Mercedes-Benz parts to service your vehicle properly. For expert advice and quality service, see an authorized Mercedes-Benz Light Truck Center.

If you are interested in obtaining service literature for your vehicle, please contact an authorized Mercedes-Benz Light Truck Center. We consider this the best way for you to obtain accurate information for your vehicle.

For further information you can find us on the Mercedes-Benz web-site [www.mbusa.com](http://www.mbusa.com) or [www.mercedes-benz.ca](http://www.mercedes-benz.ca).

### Warning!



To help avoid personal injury, be extremely careful when performing any service work or repairs. Improper or incomplete service or the use of incorrect or inappropriate parts or materials may damage the vehicle or its equipment, which may in turn result in personal injury.

If you have questions about carrying out any type of service, turn to the advice of an authorized Mercedes-Benz Light Truck Center.

We reserve the right to modify the technical details of the vehicle as given in the data and illustrations of this Operator's Manual. Reprinting, translation and copying, even of excerpts, is not permitted without our prior authorization in writing.

Title illustration no. P00.01-2285-31

Press time March 06, 2006

GSP/TIP

Printed in Germany

