

Disclaimer

The following online version of the Operator's Manual describes all models as well as all the standard and optional equipment of your vehicle. Country-specific differences in the language variants are possible. Note that your vehicle may not be fitted with all features described. This is also the case for safety-relevant systems and functions. Please contact your authorized Mercedes-Benz dealer if you would like to have a printed Operator's Manual for other vehicle models and vehicle model years. The online version is the currently valid Operator's Manual. Possible variations to your vehicle may not be taken into account because Mercedes-Benz is constantly updating its vehicles and equipment in line with the current state of the art and introducing changes to the design and equipment.

Please also read the printed Operator's Manual, any supplementary documents and the digital Operator's Manual in the vehicle.

Copyright

All Rights Reserved. All texts, images, graphics, are subject to Copyright and other laws for the protection of intellectual property. They may not be copied for commercial purposes or for transmission, nor changed and used on other websites.



AMG

GLE

Mercedes-AMG Supplement

Mercedes-Benz



Thank you for purchasing a Mercedes-AMG

Before you first drive off, read this Operator's Manual carefully and familiarize yourself with your vehicle. For your own safety and a longer operating lifespan of the vehicle, follow the instructions and warning notices in this Operator's Manual. Disregarding them may lead to damage to the vehicle or injury to people.

Damage to the vehicle resulting from the disregard of the instructions is not covered by the Mercedes-Benz Limited Warranty.

The standard equipment and product description of your vehicle may vary and depends on the following factors:

- Model
- Order
- National version
- Availability

Mercedes-AMG reserves the right to introduce changes in the following areas:

- Design
- Equipment

- Technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

The following documents are integral parts of the vehicle:

- Digital Operator's Manual
- Printed Operator's Manual
- Maintenance Booklet
- Equipment-dependent Supplements

Keep these documents in the vehicle at all times. If you sell the vehicle, always pass all of the documents on to the new owner.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

1675848720



Symbols	3	MBUX multimedia system	23
		AMG TRACK PACE	23
At a glance	4	Wheels and tires	29
Cockpit	4	Changing a wheel	29
General notes	6	Technical data	30
Operator's Manual	6	Operating fluids	30
		Vehicle data	33
Driving and parking	7	Trailer hitch	37
Driving	7	Display messages and warning/indicator lamps	40
DYNAMIC SELECT switch	9	Display messages	40
Automatic transmission	10	Warning and indicator lamps	41
Driving and driving safety systems	11	Index	44
Instrument Display and on-board computer	19		
Notes on the Instrument Display and on-board computer	19		
Calling up displays on the Performance menu	19		
Function of the Head-up Display	21		

In this Operator's Manual, you will find the following symbols:

⚠ DANGER Danger due to not observing the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

▶ Observe the warning notices.

🌿 ENVIRONMENTAL NOTE Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behavior or environmentally responsible disposal.

▶ Observe environmental notes.

! NOTE Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

▶ Observe notes on material damage.

i These symbols indicate useful instructions or further information that could be helpful to you.

▶ Instruction


(→ page) Further information on a topic

Display Information on the multifunction display/media display

↗▶ Highest menu level, which is to be selected in the multimedia system

▶▶ Relevant submenus, which are to be selected in the multimedia system

* Indicates a cause

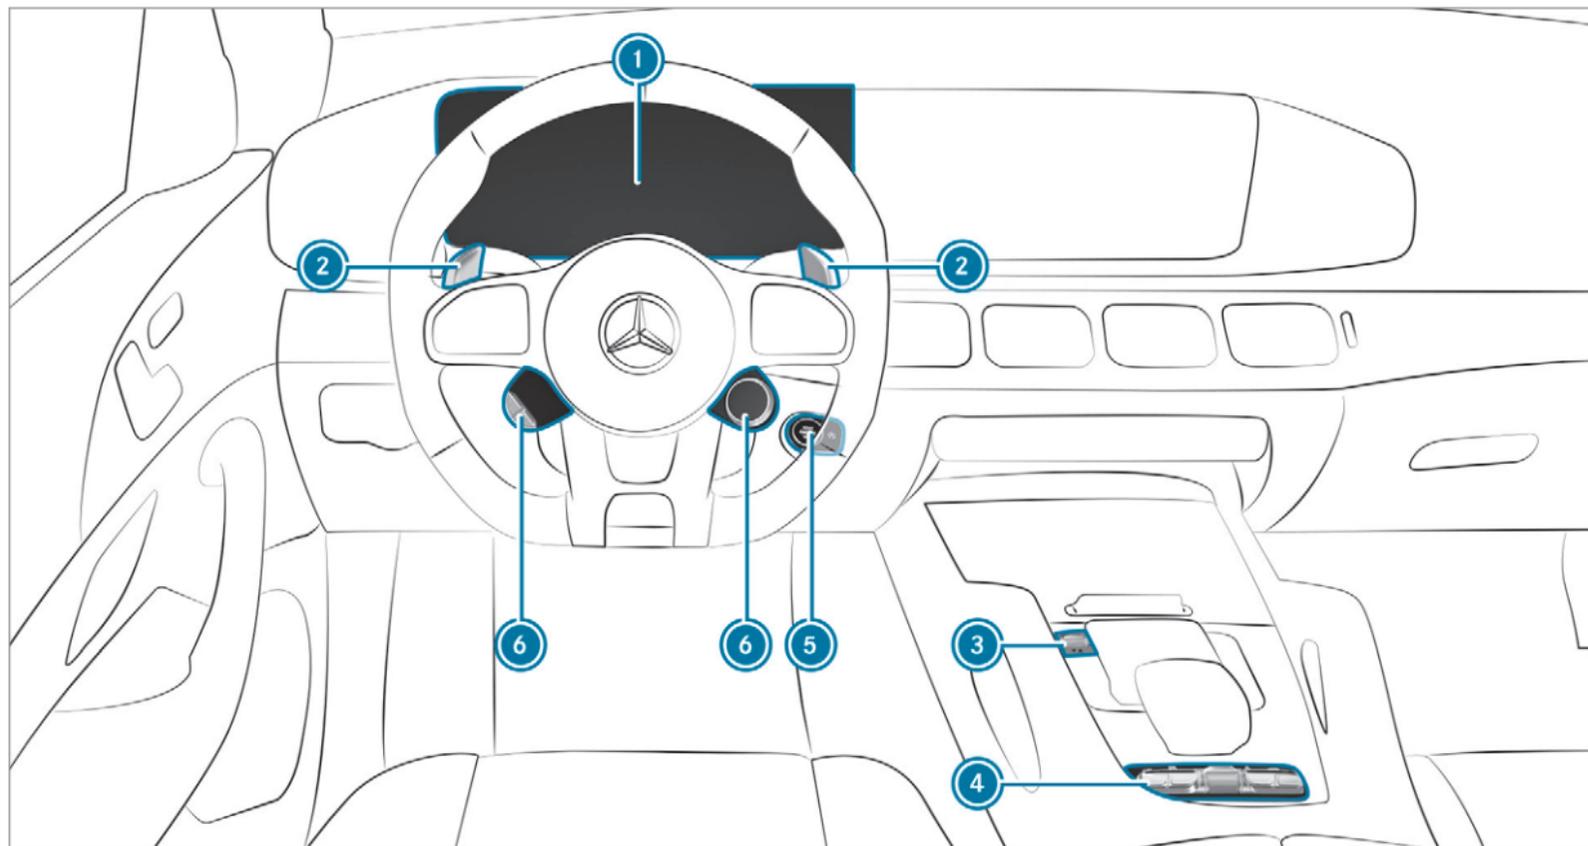

Left-hand-drive vehicles

①	Instrument display	→	19	 Vehicle level	→	17
②	Steering wheel gearshift paddles	→	10	 Suspension tuning	→	16
③	DYNAMIC SELECT switch	→	9	 AMG Performance exhaust system	→	7
④	Switch panel for:			⑤ Start/stop button	→	7
	Manual gearshifting	→	10	⑥ AMG steering-wheel buttons	→	8
	ESP®	→	11			

Operator's Manual

This Supplement provides information on all the important functions of your AMG vehicle that are either not described or differ from the descriptions in the vehicle Operator's Manual. This information supplements or replaces the corresponding sections in the vehicle Operator's Manual. Under no circumstances does the Supplement replace the Operator's Manual.

This Supplement describes all models, and standard and optional equipment for your vehicle, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This is also the case for systems and functions relevant to safety. Therefore, the equipment on your vehicle may differ from that in the descriptions and illustrations.


The original purchase contract documentation for your vehicle contains a list of all of the systems in your vehicle.

Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

The Operator's Manual, the Supplement and the Maintenance Booklet are important documents and should be kept in the vehicle.

Driving

Function of Emotion Start

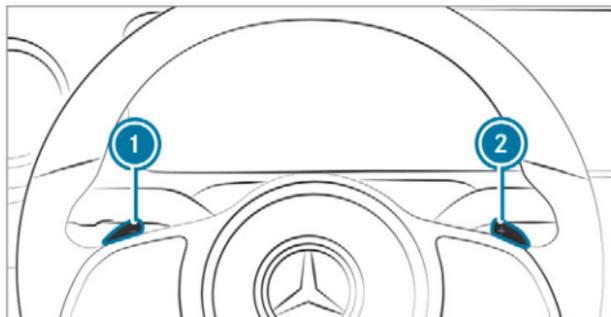

- ▶ Start the vehicle with the start/stop button and simultaneously pull one of the steering wheel gearshift paddles ① or ②.
 - The idle speed is increased briefly when starting the engine.
 - The exhaust gas flaps are opened (sporty characteristic powerful) (→ page 7).

Follow the instructions for starting the vehicle in the vehicle Operator's Manual.


AMG Performance exhaust system

Function of the AMG Performance exhaust system

Changing the position of the exhaust gas flaps allows you to select the sound characteristics of the AMG Performance exhaust system:

- **Balanced:** closed exhaust gas flaps for a comfortable sound characteristic
- **Powerful:** open exhaust gas flaps for a sporty sound characteristic

Operating the AMG Performance exhaust system

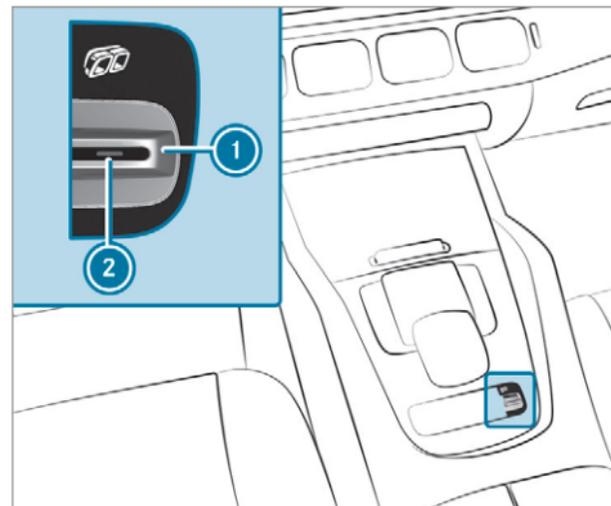

- ▶ Pull rocker switch ①.
The sporty characteristic (powerful) is selected when indicator lamp ② lights up.

Information on the AMG ceramic high-performance composite brake system


The brake system is designed for heavy loads. This may lead to noise when braking. This effect can also occur after washing the vehicle.

The noise depends on the following factors:

- Speed
- Brake force
- Environmental conditions, e.g. temperature and air humidity

i Have the brake system checked at a qualified specialist workshop after it has been subjected to extreme loads.

Function of the AMG steering-wheel buttons

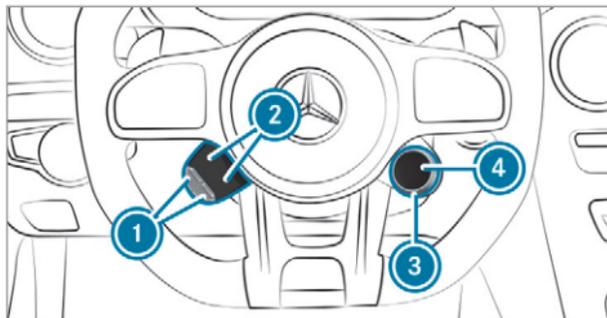

The AMG steering-wheel buttons are two additional control elements on the steering wheel.

You can assign two vehicle functions of your choice to the left control element. You can change between the available functions by pressing display switches **2** repeatedly. Display switch **2** shows the currently selected functions.

The following functions are available:

- ESP® (→ page 11)
- AMG active adaptive sport suspension system (→ page 14)

- AMG Performance exhaust system (→ page 7)
- Manual gearshifting (→ page 10)
- AMG Dynamics (→ page 9)
- ECO start/stop function (see the vehicle's Operator's Manual)

If you have assigned a function to one of display switches **2**, you can operate this function with corresponding button **1**.

The assignment of display switch **2** remains stored even after a new engine start, but the operating status of the respective function is reset to the basic setting.

You can change between the drive programs with control knob **3**. The drive program selected appears in display switch **4**. Press display switch **4** to go directly to the drive program  (→ page 9).

DYNAMIC SELECT switch

Function of the DYNAMIC SELECT switch

Use the DYNAMIC SELECT switch to change between the following drive programs.

The drive program selected appears in the multi-function display of the on-board computer.

Slippery

- Optimized pulling away and driving characteristics in wintry and slippery road conditions

Comfort

- Comfortable driving style
- Balance between traction and stability
- Recommended for city driving and stop-and-go traffic

Individual

- Individual settings

Sport

- Sporty driving characteristics
- Balance between stability and sportiness

- Only suitable for good road conditions, a dry road surface and a clear stretch of road

Sport+

- Particularly sporty driving characteristics
- Accentuates the vehicle's own understeering and oversteering characteristics
- Only suitable for good road conditions, a dry road surface and a clear stretch of road

Race

- Racetrack-oriented driving characteristics
- All vehicle systems set for maximum sportiness
- Particularly firm suspension tuning of the AMG active adaptive sport suspension system
- Must not be used on public roads
- Only suitable for use on cordoned off race circuits

Sand

- Intervenes later if there is oversteering or understeering, thus improving traction

- Optimized for driving on sand
- Not suitable for use on public roads

Trail

- Intervenes later if there is oversteering or understeering, thus improving traction
- Suitable for easily negotiable off-road terrain, such as dirt tracks, gravel or sandy surfaces
- Not suitable for use on public roads

 The drive program  is only available for the Mercedes-AMG GLE 63 S 4MATIC+ model.

Depending on the drive program selected, the following vehicle characteristics will change:

- Drive
- AMG Dynamics:
 - The agility functions are automatically selected depending on the drive program.
 - The steering, shift timing point, drive and stabilization functions are adapted to the selected drive program.

- When ESP® is activated, agility function Pro is selected in drive program . The Master function is automatically selected when ESP® is deactivated.


- Position of the exhaust gas flaps
- Suspension tuning
- Availability of Glide mode
- 4MATIC+ all-wheel drive

- ① You can change the following vehicle characteristics using the buttons on the center console:

- Position of the exhaust gas flaps
- Suspension tuning
- ESP®

Automatic transmission

Manual gearshifting

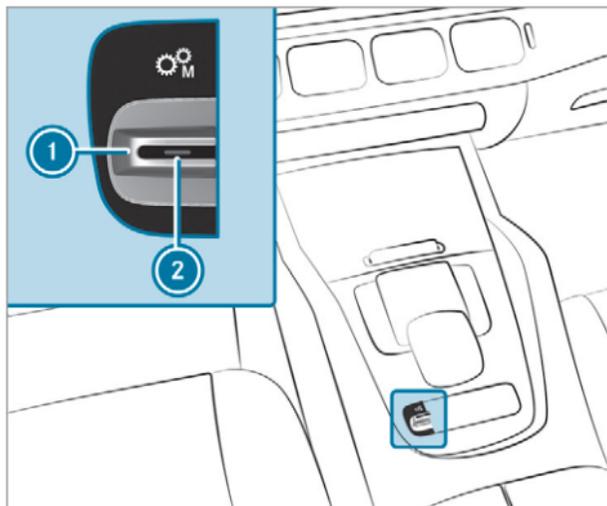

► **To activate/deactivate:** pull rocker switch

①.

If indicator lamp ② is lit, manual shifting is activated. The current gear is displayed in the multifunction display.

- ① To permanently shift the gears manually in drive program  using the steering wheel gearshift paddles, select the **M** (Manual) setting for the transmission.


Shifting up and down

! **NOTE** Damage to the engine due to shifting up too late


The automatic transmission does not shift up in manual mode even when the engine's limiting speed is reached.

The fuel supply is interrupted in order to prevent the engine from overrevving.

► Shift up before the engine speed reaches the red area in the tachometer.

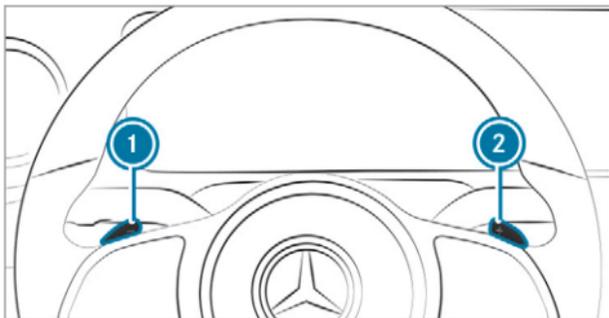

- ▶ **To shift up:** pull steering wheel gearshift paddle ②.
- ▶ **To shift down:** pull steering wheel gearshift paddle ①.

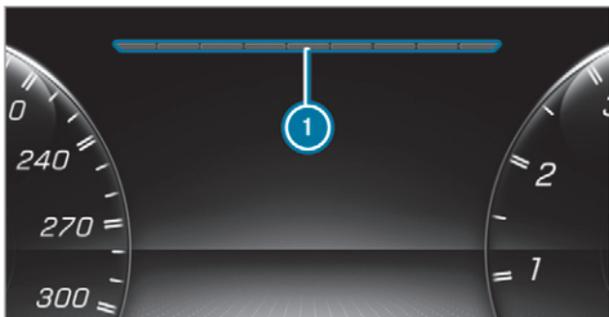

If the engine speed is too high or too low, you cannot change gear using the steering wheel gearshift paddles. In this case, segments ① light up red.

Glide mode function

With an anticipatory driving style, Glide mode helps you to reduce fuel consumption.

Glide mode is characterized by the following:

- The combustion engine is switched off. All of the vehicle functions remain active.
- The  symbol appears in the multifunction display.

Glide mode is activated if the following conditions are met:

- ECO start/stop function is switched on.
- Drive program  is selected with the drive setting "Moderate" or "Reduced".
- The speed is within a suitable range.
- The road's course is suitable, e.g. no steep uphill or downhill inclines or tight curves.

- The condition of charge of the battery is sufficient.
- You are no longer depressing the accelerator or brake pedal.

Glide mode is deactivated again if one of the conditions is no longer met.

Driving and driving safety systems

Functions of ESP®

⚠ WARNING Risk of skidding if ESP® is malfunctioning

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- ▶ Drive on carefully.
- ▶ Have ESP® checked at a qualified specialist workshop.

You can select between the following modes of the Electronic Stability Program (ESP®):

- ESP® ON

- ESP® SPORT
- ESP® OFF

Characteristics when ESP® is activated

ESP® monitors and improves driving stability and traction, particularly in the following situations:

- When pulling away on wet or slippery road.
- When braking.
- **Vehicles with trailer hitch:** in trailer operation from speeds of 40 mph (65 km/h), if the vehicle/trailer combination begins to sway from side to side.
- When there is a strong crosswind and a driving speed of approximately 47 mph (75 km/h) to 125 mph (200 km/h).

ESP® can stabilize the vehicle by intervening in the following ways:

- One or more wheels are braked.
- The engine output is adapted according to the situation.

ESP® is activated every time the engine is started regardless of whether ESP® was in ESP®

SPORT or deactivated before the engine was switched off.

If the  ESP® warning lamp flashes in the instrument cluster, one or several wheels has reached its grip limit:

- Adapt the driving style to suit the prevailing road and weather conditions.
- Do not deactivate ESP® under any circumstances.
- Only depress the accelerator pedal as far as is necessary.

Characteristics of ESP® SPORT

 **WARNING** Risk of skidding if ESP® SPORT is used incorrectly

When you activate ESP® SPORT, there is an increased risk of skidding and having an accident.

 Activate ESP® SPORT only in the circumstances described below.

When ESP® SPORT is activated, the  and  warning lamps light up continuously in the instrument cluster.

Select ESP® SPORT when the vehicle's own oversteering and understeering characteristics are desired, e.g. on cordoned off roads.

Driving with ESP® SPORT or with ESP® deactivated requires an extremely qualified and experienced driver.

If ESP® SPORT is activated and one or more wheels start to spin, the  ESP® warning lamp on the instrument cluster flashes. ESP® then only stabilizes the vehicle to a limited degree.

ESP® SPORT also has the following characteristics:

- ESP® only improves driving stability to a limited degree.
- ETS/4ETS traction control is still active.
- The engine's torque is only restricted to a limited degree and the drive wheels can spin.

The spinning of the wheels results in a cutting action for better traction on loose surfaces.

- ESP® continues to provide assistance when the brakes are firmly applied.
- **Vehicles with trailer hitch:** stabilization of the vehicle/trailer combination is no longer active.
- Crosswind Assist is no longer active.

Characteristics when ESP® is deactivated

⚠ WARNING Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilization.

▶ ESP® should only be deactivated in the following situations.

When ESP® is deactivated, the  and  warning lamps light up continuously in the instrument cluster.

Deactivating ESP® has the following effects:

- Driving stability will no longer be improved.
- The drive wheels could spin.
- ETS/4ETS traction control is still active.
- **Vehicles with trailer hitch:** stabilization of the vehicle/trailer combination is no longer active.
- Crosswind Assist is no longer active.

i Even when ESP® is deactivated, you are still assisted by ESP® when braking hard.

It may be best to activate ESP® SPORT or deactivate ESP® in the following situations:

- When using snow chains.
- In deep snow.
- On sand or gravel.

i Spinning the wheels results in a cutting action, which enhances traction.

i Activate ESP® as soon as the situations described above no longer apply. ESP® will otherwise not be able to stabilize the vehicle

if the vehicle starts to skid or a wheel starts to spin.

If the  ESP® warning lamp lights up continuously even when ESP® is activated, ESP® is not available due to a malfunction.

Observe any information which is displayed in the instrument cluster:

- Indicator and warning lamps
- Display messages


ETS/4ETS (Electronic Traction System)

ETS/4ETS traction control is part of ESP®.

ETS/4ETS can improve the vehicle's traction by intervening in the following ways:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

Activating/deactivating ESP® (Electronic Stability Program)

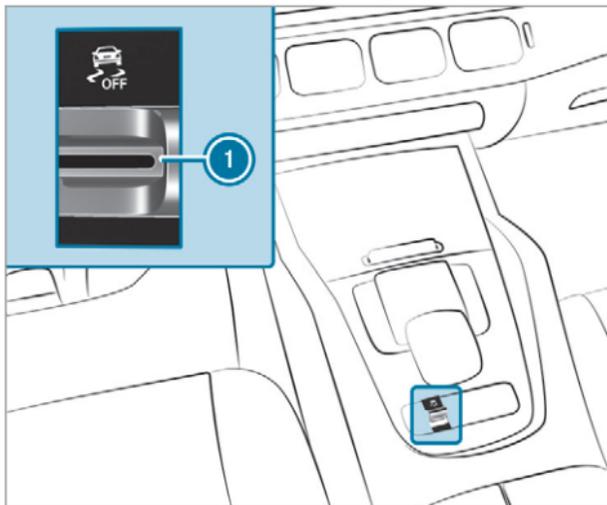

- ▶ **To activate ESP® SPORT:** briefly pull rocker switch ①. The  and  warning lamps appear in the instrument cluster.

- ▶ **To deactivate ESP®:** pull and hold rocker switch ① until the  and  warning lamps appear in the instrument cluster.

- ① **Mercedes-AMG GLE 63 S 4MATIC+:** when you deactivate ESP® in the  drive program, AMG Dynamics automatically switches to the **Master** level.

- ▶ **To activate ESP®:** briefly pull rocker switch ①. The ,  and  warning lamps go out.

Observe the information on warning lamps and display messages which are shown in the instrument cluster.

AMG adaptive sport suspension system +

Function of AMG adaptive sport suspension system +

The AMG adaptive sport suspension system + is an air suspension system with variable damping for improved driving characteristics. The all-round level control system ensures the best possible suspension and constant ground clearance,

even with a laden vehicle. When driving at speed, the vehicle is lowered automatically to improve driving safety and to reduce fuel consumption. You also have the option of manually adjusting the vehicle level.

The damping is set individually for each wheel and is affected by the following factors:

- Driving style, e.g. sporty
- Road condition, e.g. bumps
- The individual selection of **Sport**, **Sport +** or **COMFORT**

The AMG adaptive sport suspension system + includes the following components and functions:

- Air suspension with variable spring rate and automatic level control
- Speed-dependent lowering to reduce fuel consumption
- Manually selectable high-level setting for greater ground clearance
- ADS PLUS (Adaptive Damping System with constant damping force adjustment)

- DYNAMIC SELECT switch and level button
- Rocker switch for suspension settings

Suspension setting and vehicle level per drive program

Drive program :

- The suspension setting and the all-wheel drive 4MATIC+ are adapted for sporty performance on fine, loose surfaces.
- The vehicle is set to high level (+1).
- The vehicle is lowered to the normal level (0) when driving at speeds of 43 mph (70 km/h) or above.

Drive program :

- The suspension setting and the all-wheel drive 4MATIC+ are adapted for driving in areas with no firm road surfaces.
- The vehicle is set to high level (+1).
- The vehicle is lowered to the normal level (0) when driving at speeds of 43 mph (70 km/h) or above.

Drive programs  and :

- The suspension setting is comfortable.
- The vehicle is set to the normal level (0).
- The vehicle is lowered to the low level (-1) when driving at speeds of 75 mph (120 km/h) or above.
- The vehicle is once again raised to the normal level (0) in the following situations:
 - you are driving at less than 50 mph (80 km/h).
 - you are driving for an extended period of time at less than 75 mph (120 km/h).
- 4MATIC+ is dynamically synchronized.

Drive programs ,  and :

- The suspension setting is even firmer.
- The vehicle is set to low level (-1).
- The vehicle is not lowered any further if you are traveling at higher speeds.
- 4MATIC+ is more dynamically synchronized.

Drive programs , and :

- The suspension setting is even firmer.

- The vehicle is set to low level (-1).
- The vehicle is not lowered any further if you are traveling at higher speeds.
- 4MATIC+ is more dynamically synchronized.

Differences between different vehicle levels compared to the normal level (0):

- **High level (+1):** approximately +2.2 in (+55 mm)
- **Low level (-1):** approximately -0.4 in (-10 mm)

In addition, you can select the setting in every drive program using the  rocker switch in the center console. After a drive program is changed, the automatic suspension setting of the drive program is reactivated.

AMG active adaptive sport suspension system

Function of AMG active adaptive sport suspension system

The AMG active adaptive sport suspension system additionally supplements the functions of

the AMG adaptive sport suspension system + with an active roll stabilization system. Depending on the selected driving program, the suspension setting is adapted to the driving situation by influencing the vehicle's roll behavior with active stabilizers. As a result, the driving comfort and safety of the vehicle are noticeably improved. The stabilizers on the front and rear axle can also be controlled separately to influence more dynamic handling.

Suspension setting per driving program

Drive program :

- Roll movements are significantly reduced.
- Traction is improved for driving on sand.

Drive program :

- Roll movements are reduced.
- The suspension setting is designed for improved off-road performance.
- Traction is improved for driving off-road and on loose surfaces.

Drive programs  and :

- The lean is reduced during cornering.

- Roll movements caused by uneven road surfaces are compensated for.

Drive programs ,  and :

- The lean is significantly reduced during cornering.
- Roll movements caused by uneven road surfaces are compensated for.
-  and : the driving characteristics become even more agile through targeted interventions.

Drive program :


- Individual settings of the suspension setting via AMG Dynamics
 - Basic: reduction of lean during cornering
 - Advanced: increased reduction of lean during cornering
 - Pro: significantly increased reduction of lean during cornering
 - Pro plus: significantly increased reduction of lean during cornering and increased agility of the vehicle's handling through targeted interventions by the system

Selecting the suspension setting

In **COMFORT** mode, the driving characteristics of your vehicle are comfortable. Select this suspension setting if you prefer a comfortable driving style.

SPORT driving mode ensures a firmer suspension. Select this suspension setting when employing a sporty driving style, e.g. on winding country roads.

SPORT+ driving mode ensures a very firm suspension.

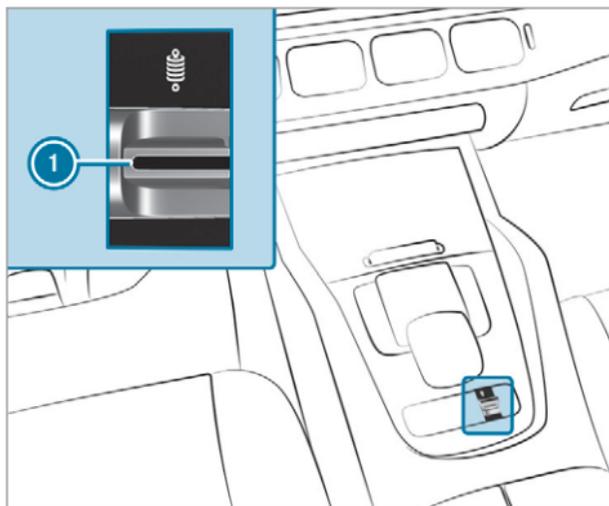

- ▶ Pull rocker switch ①.
The currently selected suspension setting is shown as a display message in the media display.

Setting the vehicle level

- ⚠ **WARNING** Risk of accident because vehicle level is too high

Driving characteristics may be impaired. The vehicle can drift outwards, for example, when steering or cornering.

- ▶ Choose a vehicle level which is suited to the driving style and the road surface conditions.


- ⚠ **WARNING** Risk of entrapment from vehicle lowering

When lowering the vehicle, people could become trapped if their limbs are between the vehicle body and the tires or underneath the vehicle.

- ▶ Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when the vehicle is being lowered.

Requirements:

- The vehicle has been started.
- The vehicle must not be moving faster than 40 mph (65 km/h).

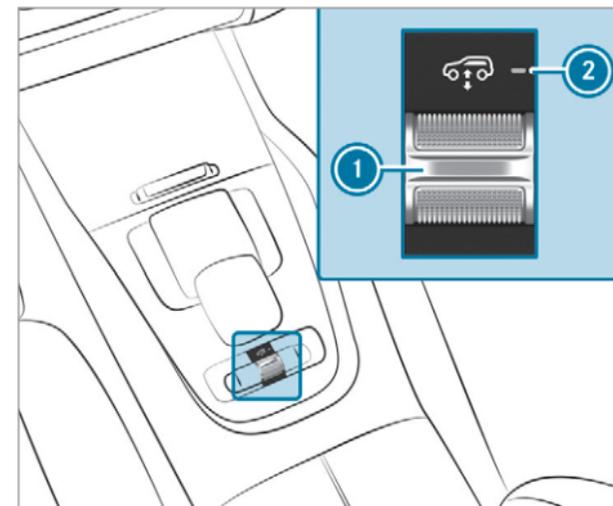

- ▶ **To raise the vehicle:** push rocker switch ① forwards.
- ▶ **To lower the vehicle:** pull rocker switch ①.

The selected vehicle level appears in the media display.

When indicator lamp  lights up, the set vehicle level does not correspond to the standard level of the selected drive program.

The vehicle sets itself to the standard level of the selected drive program when you switch drive programs.

Notes on the Instrument Display and on-board computer

Additional notes regarding your Mercedes-AMG vehicle:

- **Vehicles with an Instrument Display (standard):** if you activate manual gearshifting, (→ page 10) the upshift bar will appear on the multifunction or Head-up Display. In addition, the transmission position **M** (manual) and the current gear will appear on the transmission position display of the multifunction display.
- Additional note regarding the indicator and warning lamps: the vehicle is also equipped with the ESP® , ESP® OFF  and ESP® SPORT  indicator and warning lamps (→ page 42).

You can select the following display content in vehicles with a Widescreen Cockpit:

- Tachometer with gear display
- Date and time
- Warm-up

- AMG TRACK PACE
- G-meter
- Engine data
- SETUP
- Trip computer
- Navigation
- Media
- Telephone

AMG TRACK PACE is displayed on the left-hand section of the display. The warm-up, engine data, SETUP and G-meter menus are displayed on the right-hand section of the display.

Calling up displays on the Performance menu

On-board computer:


↳ Performance

▶ **To select a display:** swipe upwards or downwards on the left-hand Touch Control.

Displays on the Performance menu:

- Warm-up


- Engine data
- SETUP
- G-meter

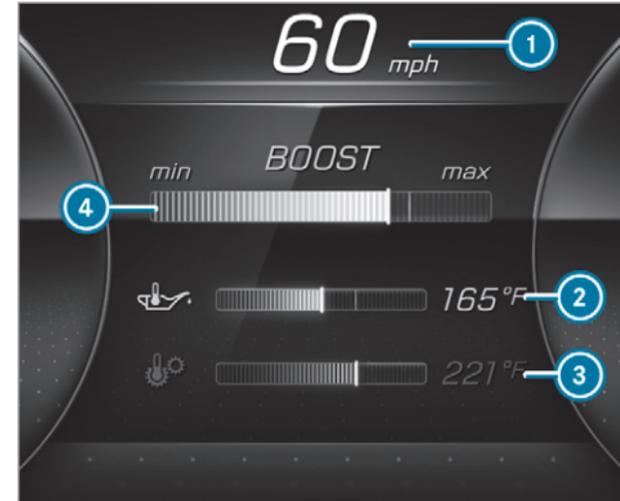

Warm-up (example)

- ① Digital speedometer
- ② Engine oil temperature
- ③ Transmission oil temperature
- ④ Boost pressure

If the engine or transmission is not at normal operating temperature, the multifunction display will show temperature ② or ③ in blue. Avoid using the full engine power output during this time.

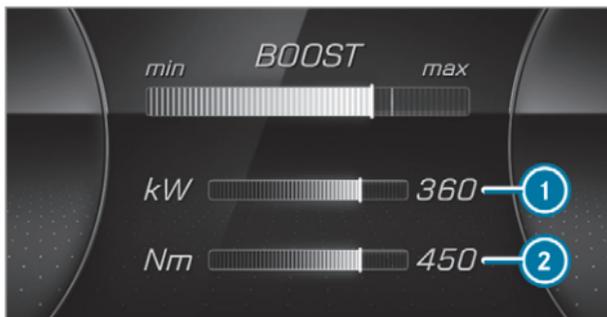

Engine data (example)

- ① Current power output
- ② Current torque

When the current power output ① or the current torque ② reaches the maximum value, the digital value will briefly be stationary. The bar display will continue.



SETUP in Mercedes-AMG vehicles (example)

- ① Drive system setting:
Reduced/Moderate/Sport/Dynamic/Sand/Trail/Race
- ② Transmission position:
D/M
- ③ AMG DYNAMICS:
Basic/Advanced/Pro/Master/Slide/Traction
- ④ Suspension tuning:
Comfort/Sport/Sport+/Sand/Trail
- ⑤ Exhaust system:
Balanced/Powerful

Resetting the G-meter

While the vehicle is in motion, the G-meter shows the forces that are exerted on the vehicle occupants both laterally and in the direction of travel. The maximum values are represented by red markings.



G-meter (example)

- ▶ Press the left-hand Touch Control.
- ▶ Select **Yes**.
- ▶ Press the left-hand Touch Control.


Function of the Head-up Display

The Head-up Display projects the following information into the driver's field of vision above the cockpit, for example:

- The vehicle speed
- Information from the navigation system
- Information from the driving systems and driving safety systems
- Some warning messages

Depending on the vehicle's equipment, different content can be shown in the three areas of the Head-up Display.

Mercedes-AMG display content

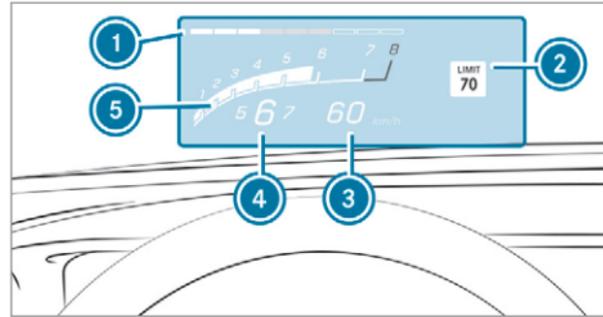

- 1 Protection from reaching the overrevving range
- 2 Detected instructions and traffic signs
- 3 Current speed
- 4 Currently selected gear; gearshift options for manual shifting
- 5 Current engine speed

Depending on the vehicle's equipment, you can select further AMG displays in addition to the standard displays on the [Display Content](#) menu.

In vehicles with AMG TRACK PACE, you can display additional content:

- Speed and gear display
 - Lap and sector times
 - Acceleration and braking
 - Track layout graphics
- i** The content that can be displayed will vary depending on the settings.

When you receive a call, the  [Incoming Call](#) message will appear on the Head-up Display.

In audio mode, the station name or track will be shown temporarily when the audio source is being actively operated.

System limits

The visibility of the displays will be affected by the following conditions:

- Seat position
- Image position setting
- Ambient light
- Wet road surface
- Objects on the display cover

- Polarization in sunglasses
- ① In extreme sunlight, sections of the display may appear washed out. You can correct this by switching the Head-up Display off and on again.

AMG TRACK PACE

Function of AMG TRACK PACE

With AMG TRACK PACE, the driving characteristics on race tracks can be analyzed and optimized. You can drive previously stored race tracks (e.g. Hockenheimring), or new tracks can be recorded and stored. The driven lap times are stored for every track. These can be analyzed and compared to other lap times to achieve the best possible race results. Additionally, acceleration and braking procedures can be measured and stored.

Please note: use AMG TRACK PACE only on closed off routes outside the public traffic area. Adapt your driving style to your personal performance and environmental conditions. As the driver, you are solely responsible for driving your vehicle. Park your vehicle safely before operating the application.

Setting Track Race

Multimedia system:

↳ TRACK PACE ▶▶ Track Race

Recording a new track

- ▶ Select  **New Track** .
- ▶ Select  **Start Record**. at the desired starting point.
The track recording starts at this point.

During track recording, sectors can be set to divide up the track.

- ▶ Select  **Set Sector**.
- ▶ Select  **Stop Recording** to end track recording or cross the starting line again.
- ▶ Confirm the prompt with .
- ▶ Select the weather.

 The temperature is determined automatically.

- ▶ After ending, select  to save the track.
- ▶ Enter a name.

- ▶ Press  to confirm.
The track is saved under the name entered.

Searching by track name

- ▶ Select  **All Tracks** .
- ▶ Enter the track name.
Tracks with the searched name are displayed.

Measuring time on a saved track

- ▶ Select  **All Tracks** .
- ▶ Select the desired track.
- ▶ Select .
- ▶ Select **Start Race** if you are already stood at the starting line.

or

- ▶ Select **Navigate to** for navigation to the starting line.

Timekeeping begins automatically when the starting line has been crossed.

-  When  is selected, the track display can be switched to AR.
- ▶ Select  **Stop Race** to end timekeeping.

- ▶ Confirm the prompt with .
- ▶ Select the weather.
- ▶ Select  **Save Track** to save the times driven for this track.

Showing displays during Track Race

The following displays can be shown:

- Tire temperature
- Mini map
- Sector overview
- Engine data
- G-force display
- Lap overview

- ▶ Select  **Start Race**.

- ▶ Select  **Setup**.
- ▶ Pull the desired display from the grid on the left or right edge of the media display. The displays are shown during the Track Race.

By selecting  on the active display, you can deactivate this.

- ▶ Select  to return to the navigation map view.

Displaying the analysis

- ▶ Select  **All Tracks** . An overview of all the driven tracks appears.
- ▶ Select a track.
- ▶ Select a session.

The following data is displayed:

- Lap and sector times
- Average and maximum permissible speed
- Driver

- Vehicle
 - Date
 - Weather
 - ▶ Select **Compare to Rec.** to use a different session as a reference value.
 - ▶ Select  to return to the overview.
 - ▶ Select  **Diagram**.
 - ▶ Set parameters  and .
- The analysis is displayed.



- ① Lap overview
- ② Parameter 1
- ③ Parameter 2
- ④ Trajectory of parameter 1 (e.g. time)
- ⑤ Trajectory of parameter 2 (e.g. speed)
- ⑥ The following values can be set for parameters 1 and 2, for example:
 - Speed

- Longitudinal/lateral acceleration
- Steering angle
- Engine speed
- Engine oil/tire temperature

Based on the analysis you can check and optimize driving characteristics for any position on the track.

Exporting tracks (USB)

- ▶ Select  **Tracks**.
An overview of all stored tracks appears.
- ▶ Select the desired track.
- ▶ Select options  for the desired track.
- ▶ Select **Export**.
The selected track can be exported to a USB storage device connected to the vehicle.

Editing tracks and recordings

- ▶ Select  **Tracks**.
- ▶ Select the desired track.
- ▶ Select options  for the desired track.
- ▶ Select **Rename** or **Delete**.

or

- ▶ Select a track.
- ▶ Highlight the desired recording.
- ▶ Select  options.
- ▶ Select **Export to...** or **Delete**.

Setting Drag Race

Multimedia system:

 **TRACK PACE** ▶▶ **Drag Race**

Measuring acceleration

- ▶ Select  **Drag Options**.
- ▶ Select **Acceleration**.
- ▶ Set a starting speed or select **Automatic**. Measurement begins as soon as the specified starting speed has been reached.

- ▶ Set a target speed. Measurement stops as soon as the specified target speed has been reached.
- ▶ Pull away and start the measurement. Measurement begins when the vehicle accelerates.

Measurement can be stopped early by stopping the vehicle.

Quarter-mile race

- ▶ Select  **Drag Options**.
- ▶ Select **Quarter Mile**.
- ▶ Set a target distance. Measurement stops as soon as the specified target distance has been reached.
- ▶ Pull away and start the measurement. Measurement begins when the vehicle accelerates. Timing runs until the target distance or a maximum of one mile has been traveled.

Measurement can be stopped early by stopping the vehicle.

Measuring braking

- ▶  **Drag Options**
- ▶ Select **Braking**.
- ▶ Set a starting speed or select **Automatic**.
- ▶ Pull away and start the measurement.
- ▶ Brake to a standstill. Measurement is incremental, in steps of 5 mph (10 km/h) to a standstill. If the braking procedure is started e.g. at a speed of 58 mph (157 km/h), measurement starts as soon as 55 mph (150 km/h) has been reached.

Storing and calling up measurement values

If measurement is completed or canceled, a prompt appears asking whether the measurement should be saved.

- ▶ Confirm the prompt with to save.

Calling up saved measurements

- ▶ Select  **History**.
- ▶ Select **Acceleration**, **Quarter Mile** or **Braking**.

- ▶ Select a measurement.
The desired measurement is displayed in detail.

or

- ▶ Delete a measurement.

Calling up the telemetry display

Multimedia system:

↳ TRACK PACE ▶ Telemetry

The telemetry display shows current vehicle data as a digital value and as a diagram. Up to three parameters can be selected that are to be shown in the display.

For example:

- Engine speed
 - Wheel angle
 - Speed
 - Steering angle
- ▶ Set the desired parameters.

- ▶ Set the time.
The set parameters are evaluated in the diagram for the time set.

Configuring AMG TRACK PACE

Requirements:

To connect a mobile device to the TRACK PACE app:

- The TRACK PACE app is installed on the mobile end device.
- The mobile end device is connected to the multimedia system via Wi-Fi.

Multimedia system:

↳ TRACK PACE ▶ Options

Connecting a mobile device via the TRACK PACE app

The TRACK PACE app makes it possible to record videos and to synchronize them with stored tracks.

- ▶ Select TRACK PACE App.

- ▶ Select **AUTHORIZE NEW DEVICE**.
Available devices are displayed.
- ▶ Start the TRACK PACE app on the device to be connected and follow the instructions.
- ▶ Confirm the authorization prompt.
- ▶ Scan the QR code on the media display.
The device is authorized.

De-authorizing the mobile device

- ▶ Select TRACK PACE App.
- ▶ Select **De-authorize device**.
- ▶ Select a device.
- ▶ Confirm the message prompt with Yes.
The device is de-authorized.

Setting the TRACK PACE display in the Head-up Display

- ▶ Select **HUD Content**.
 - ▶ Activate or deactivate the desired contents.
The contents in the Head-up Display are adapted.
- i** For further information on the Head-up Display, see (→ page 21).

Setting acoustic feedback

- ▶ Select [Acoustic feedback](#).
A scale with values from 0 to 85 is shown.
- ▶ Select a setting.

▶ Activate or deactivate the function.

Displaying statistics

- ▶ Select [Statistics](#).
Statistics on the current user profile are displayed.
The following data is displayed:
 - Driving time
 - Track driven
 - Tracks recorded
 - Track Races recorded
 - Laps recorded
 - Drag Races recorded
 - Maximum design speed

Activating the ambient light

If this function is active, the vehicle interior is lit red or green depending on Delta Time.

- ▶ Select [Ambient light](#).

Changing a wheel

- ▶ Be sure to also observe the notes on changing a wheel in the Operator's Manual of your vehicle.

Vehicles with AMG Driver's Package:

⚠ WARNING Risk of accident caused by non-approved tire types

If you use tire types that have not been adapted to changes made to the factory speed limit, this can have the following consequences:

- The tires are not suitable for high speeds and the corresponding driving dynamics.
- The tires wear unevenly and affect the roadworthiness of the vehicle.
- ABS, ESP® and cruise control operation are restricted.

This can jeopardize road safety.

- ▶ Only use tire types that have been approved for the maximum permissible speed set and the vehicle.

Vehicles with AMG ceramic high-performance composite braking system:

! NOTE Damage to the ceramic brake disc when changing a wheel

Mercedes-AMG vehicles with ceramic brake discs: during removal and repositioning of the wheel, the wheel rim can strike the ceramic-brake disc and damage it.

- ▶ Take particular care.
- ▶ Ask another person for assistance or use a second alignment bolt.

- ▶ When changing the wheel, avoid exerting any force on the brake discs. This can lead to impaired comfort during braking.

Operating fluids

Fuel

Information on fuel grades for Mercedes-AMG vehicles

Observe the information on service products in the vehicle Operator's Manual.

! NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel with low-sulfur spark-ignition engine fuel.

This fuel may contain up to 10% ethanol by volume. Your vehicle is suitable for use with E10 fuel.

Never refuel with one of the following fuels:

- Diesel
- Gasoline with more than 10% ethanol by volume, e.g. E15, E85, E100

- Gasoline with more than 3% methanol by volume, e.g. M15, M30, M85, M100
- Gasoline with additives containing metal

If you have accidentally refueled with the wrong fuel:

- ▶ Do not switch the ignition on.
- ▶ Consult a qualified specialist workshop.

If the available fuel is not sufficiently low in sulfur, this can produce unpleasant odors.

Only refuel using premium-grade unleaded gasoline with at least 91 AKI/95 RON.

As a temporary measure, if the recommended fuel is not available, you may also use regular unleaded gasoline. When doing this, note the octane number on the vehicle on the information label in the fuel filler flap (see the vehicle's Operator's Manual). Filling up with regular unleaded gasoline can reduce engine output and increase fuel consumption.

Never refuel using gasoline with an even lower RON.

! NOTE Premature engine wear through unleaded regular gasoline

Impairment of the longevity and performance of the engine.

If unleaded premium grade gasoline is unavailable and you have to refuel using unleaded regular gasoline:

- ▶ Only fill the fuel tank to half full with unleaded regular gasoline and refill as soon as possible with unleaded premium grade gasoline.
- ▶ Do not drive at the maximum design speed.
- ▶ Avoid sudden acceleration and engine speeds over 3000 rpm.

Further information on fuel is available at the following locations:

- At a gas station
- At a qualified specialist workshop
- **USA only:** at <https://www.mbusa.com>

Tank content and reserve fuel

Model	Total capacity
Mercedes-AMG GLE 53 4MATIC+ (SUV)	22.5 gal (85.0 liters)
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Model	Of which reserve
Mercedes-AMG GLE 53 4MATIC+ (SUV)	2.3 gal (9.0 liters)
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	

Model	Total capacity
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	22.5 gal (85.0 liters)
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	
Model	Of which reserve
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	3.1 gal (12.0 liters)
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	

Quality and capacity of engine oil

Gasoline engines	MB-Freigabe or MB-Approval
Mercedes-AMG GLE 53 4MATIC+ (SUV)	229.51, 229.52, 229.61 229.71*
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	229.5*
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	

* Recommended for lowest possible fuel consumption (lowest SAE viscosity class in each case; observe possible restrictions of the approved SAE viscosity classes).

To achieve the lowest possible fuel consumption, it is recommended to use the engine oil specifi-

cations marked in the table for the lowest SAE viscosity class. Possible restrictions of the approved SAE viscosity classes must be observed.

**Mercedes-AMG GLE 63 S 4MATIC+ (SUV),
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe):**

Use only engine oils of viscosity class SAE 0W-40 or SAE 5W-40.

The following values refer to an oil change, including the oil filter.

Missing values were not available at the time of going to press.

Model	Capacity
Mercedes-AMG GLE 53 4MATIC+ (SUV) Mercedes-AMG GLE 53 4MATIC+ (Coupe)	9.0 US qt (8.5 liters)
Mercedes-AMG GLE 63 S 4MATIC+ (SUV) Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	10.0 US qt (9.5 liters)

Coolant capacity

Model	Capacity
Mercedes-AMG GLE 53 4MATIC+ (SUV) Mercedes-AMG GLE 53 4MATIC+ (Coupe)	Canada: 20.4 US qt (19.4 liters) USA: 20.0 US qt (18.9 liters)
Mercedes-AMG GLE 63 S 4MATIC+ (SUV) Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	17.0 US qt (16.1 liters)

Filling capacity for refrigerant and PAG oil

Missing values were not available at the time of going to press.

Model	Refrigerant
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	
Mercedes-AMG GLE 53 4MATIC+ (SUV)	23.9 ± 0.4 oz (680 ± 10 g)
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	

Model	PAG oil
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	
Mercedes-AMG GLE 53 4MATIC+ (SUV)	4.2 ± 0.4 oz (120 ± 10 g)
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	2.8 ± 0.4 oz (80 ± 10 g)


Vehicle data

Vehicle dimensions


The heights specified may vary as a result of the following factors:

- Tires
- Load

- Condition of the suspension
- Optional equipment

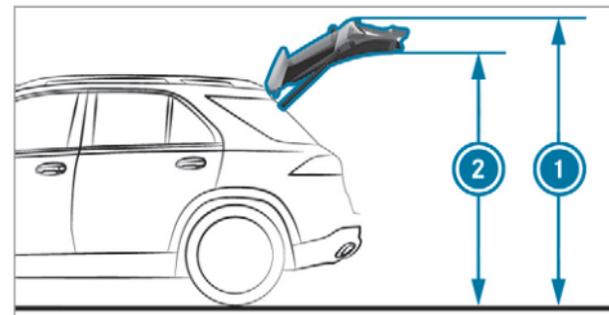

Mercedes-AMG GLE SUV

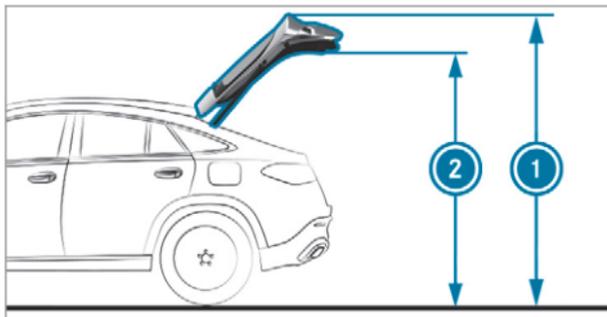

Mercedes-AMG GLE Coupe

Missing values were not available at the time of going to press.

Height when opened and headroom

Model	① Height when opened	② Head- room
Mercedes-AMG GLE 53 4MATIC+ (SUV)	86.7 in (2203 mm)	77.6 in (1972 mm)
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)		
Mercedes-AMG GLE 53 4MATIC+ (Coupe)		
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)		

Vehicle dimensions

Mercedes-AMG GLE 53 4MATIC+ (SUV)	
Vehicle length	Canada: 194.4 in (4937 mm) USA: 195.0 in (4954 mm)
Vehicle width including outside mirrors	84.9 in (2157 mm)
Vehicle height	70.2 in (1782 mm)
Wheelbase	117.9 in (2995 mm)
Turning radius	40.75 ft (12.42 m)
Maximum ground clearance	
Minimum ground clearance	

Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	
Vehicle length	195.0 in (4954 mm)
Vehicle width including out- side mirrors	84.9 in (2157 mm)
Vehicle height	70.2 in (1782 mm)
Wheelbase	117.9 in (2995 mm)
Turning radius	40.75 ft (12.42 m)
Maximum ground clearance	
Minimum ground clearance	

Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Vehicle length	195.3 in (4961 mm)
Vehicle width including out- side mirrors	Canada: 84.9 in (2156 mm) USA: 84.9 in (2157 mm)
Vehicle height	67.7 in (1720 mm)
Wheelbase	115.6 in (2935 mm)
Turning radius	40.81 ft (12.44 m)
Maximum ground clearance	
Minimum ground clearance	

Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	
Vehicle length	195.3 in (4961 mm)
Vehicle width including out- side mirrors	84.9 in (2156 mm)
Vehicle height	67.7 in (1720 mm)
Wheelbase	115.6 in (2935 mm)
Turning radius	40.81 ft (12.44 m)
Maximum ground clearance	
Minimum ground clearance	

Weights and loads

Please observe the following notes for the specified vehicle data:

- Items of optional equipment increase the curb weight and reduce the payload.

Roof load

Model	Maximum roof load
Mercedes-AMG GLE 53 4MATIC+ (SUV)	Canada: 165.3 lb (75 kg) USA: 220.5 lb (100 kg)
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	220.5 lb (100 kg)


Model	Maximum roof load
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	Canada: 165.3 lb (75 kg) USA: 220.5 lb (100 kg)
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	165.3 lb (75 kg)

Off-road driving vehicle data


Angle of approach/departure

The specified values are maximum values for vehicles that are ready to drive.

Observe the notes on driving in mountainous terrain in the vehicle Operator's Manual.

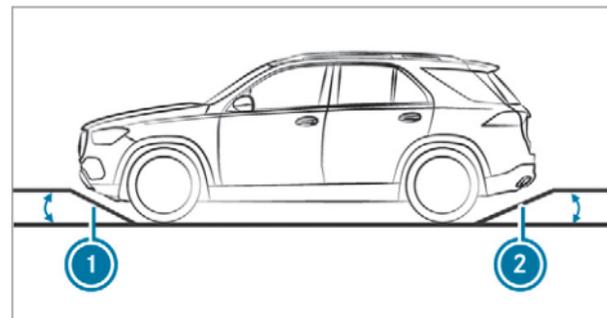

Mercedes-AMG GLE SUV

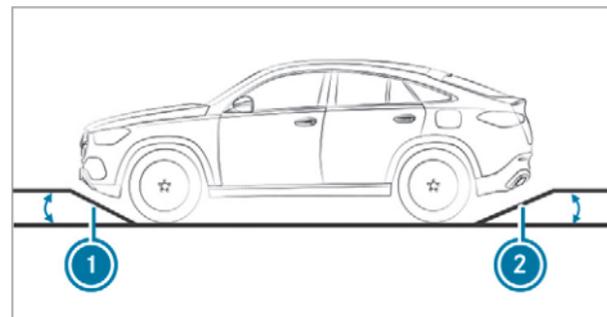

Mercedes-AMG GLE Coupe

Missing values were not available at the time of going to press.

Model	① Front	② Rear
Mercedes-AMG GLE 53 4MATIC+ (SUV)	21°	20°
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	21°	20°
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	18°	19°
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	18°	20°

Maximum gradient climbing ability

The vehicle's gradient climbing ability depends on the weight distribution in the vehicle, the terrain conditions and the road surface conditions.

The specified value applies in the following cases:

- The vehicle is ready to drive

- The road surface conditions and thus traction are good

A gradient climbing ability of 100% corresponds to an incline of 45°.

Observe the notes on driving in mountainous terrain in the vehicle Operator's Manual.

Missing values were not available at the time of going to press.

Model	Maximum gradient climbing ability
Mercedes-AMG GLE 53 4MATIC+ (SUV)	80%
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	

Trailer hitch

General notes on the trailer hitch

Modifications to the engine cooling system may be necessary, depending on the vehicle model. The retrofitting of a trailer hitch is only permissible if a towing capacity is specified in your vehicle documents.

Further information can be obtained at a qualified specialist workshop.

Towing capacity

Model	Towing capacity, braked
Mercedes-AMG GLE 53 4MATIC+ (SUV)	7716.2 lbs (3500 kg)
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	

Maximum tongue weight and load capacity

<p>! NOTE Damage caused by the trailer coming loose</p> <p>If the tongue weight used is too low, the trailer may come loose.</p> <ul style="list-style-type: none"> ▶ The tongue weight must not be below 110.2 lbs (50 kg). ▶ Use a tongue weight that is as close as possible to the maximum permissible tongue weight.
<p>! NOTE Damage caused by the bicycle rack coming loose</p> <p>When using a bicycle rack, both the maximal tongue weight and the maximal load capacity should be observed.</p> <ul style="list-style-type: none"> ▶ Do not exceed the permissible load capacity.

Missing values were not available at the time of going to press.

Tongue weight

Model	Maximum tongue weight
Mercedes-AMG GLE 53 4MATIC+ (SUV)	599.6 lbs (272 kg)
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	

Load capacity

Model	Maximum load
Mercedes-AMG GLE 53 4MATIC+ (SUV)	
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	

Axle load	
Mercedes-AMG GLE 53 4MATIC+ (SUV)	3637.6 lbs (1650 kg) (3858.1 lbs (1750 kg))*
Mercedes-AMG GLE 63 S 4MATIC+ (SUV)	3637.6 lbs (1650 kg) (3858.1 lbs (1750 kg))*
Mercedes-AMG GLE 53 4MATIC+ (Coupe)	
Mercedes-AMG GLE 63 S 4MATIC+ (Coupe)	3858.1 lbs (1750 kg)

*Seven-seater vehicle.

Permissible rear axle load (trailer operation)

Missing values were not available at the time of going to press.

Display messages

Driving systems

Display messages	Possible causes/consequences and ► Solutions
 <p data-bbox="53 401 376 464">Malfunction Drive at Max. 50 mph</p>	<p data-bbox="466 288 1896 350">* The AMG adaptive sport suspension system + or AMG active adaptive sport suspension system is malfunctioning. The vehicle's handling characteristics may be affected.</p> <ul style="list-style-type: none"> <li data-bbox="486 363 1222 391">► Do not drive at speeds greater than 50 mph (80 km/h). <li data-bbox="486 405 1024 433">► Consult a qualified specialist workshop.
<p data-bbox="53 495 396 588">AMG Suspension System Function Limited See Operator's Manual</p>	<p data-bbox="466 495 1855 557">* One or more main functions of the AMG adaptive sport suspension system + or the AMG active adaptive sport suspension system is malfunctioning.</p> <p data-bbox="486 570 1821 598">The system is outside the operating temperature range or the on-board electrical system voltage is too low. Once the cause of the problem is no longer present, the system will be available again.</p> <div data-bbox="492 667 1917 891" style="border: 1px solid black; padding: 5px;"> <p data-bbox="502 677 1892 739">! NOTE The vehicle's suspension and damping behavior is restricted. The vehicle body may tilt heavily to the side during cornering.</p> <ul style="list-style-type: none"> <li data-bbox="506 764 778 792">► Drive on carefully. <li data-bbox="506 806 1167 833">► Reduce speed considerably before taking a bend. <li data-bbox="506 847 989 875">► Avoid sudden steering movements. </div> <ul style="list-style-type: none"> <li data-bbox="486 912 758 940">► Drive on carefully.

Display messages	Possible causes/consequences and ► Solutions
	<ul style="list-style-type: none"> ► Reduce speed considerably before taking a curve. ► Avoid sudden steering movements.

Warning and indicator lamps

Driving systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 <p data-bbox="118 640 439 702">Suspension warning lamp (yellow)</p>	<p data-bbox="519 526 1974 588">*The yellow AMG adaptive sport suspension system + or AMG active adaptive sport suspension system warning lamp is lit.</p> <p data-bbox="519 591 1974 653">There is a malfunction in the AMG adaptive sport suspension system + or the AMG active adaptive sport suspension system.</p> <ul style="list-style-type: none"> ► Note the messages on the multifunction display.

Driving safety systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	<p>* The yellow ESP[®] OFF warning lamps are lit while the engine is running. ESP[®] is deactivated.</p> <p>Other driving systems and driving safety systems may also be inoperative.</p> <div style="background-color: #f0f0f0; padding: 5px; margin: 10px 0;"> <p>▲ WARNING Risk of skidding when driving with ESP[®] deactivated</p> </div> <p>ESP[®] does not act to stabilize the vehicle. The availability of further driving safety systems is also limited.</p> <ul style="list-style-type: none"> ▶ Drive on carefully. ▶ Deactivate ESP[®] only for as long as the situation requires. <p>If ESP[®] cannot be activated, ESP[®] is malfunctioning.</p> <ul style="list-style-type: none"> ▶ Have ESP[®] checked immediately at a qualified specialist workshop. <p>► Observe the notes on deactivating ESP[®] (→ page 11).</p>
	<p>* ESP[®] SPORT is activated while the engine is running.</p> <p>When ESP[®] SPORT is activated, ESP[®] will stabilize the vehicle only to a limited extent.</p> <div style="background-color: #f0f0f0; padding: 5px; margin: 10px 0;"> <p>▲ WARNING Risk of skidding if ESP[®] SPORT is used incorrectly</p> </div> <p>When you activate ESP[®] SPORT, there is an increased risk of skidding and having an accident.</p>

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	<ul style="list-style-type: none"><li data-bbox="533 187 1984 239">▶ Activate ESP® SPORT only in the circumstances described below.<li data-bbox="533 260 1984 296">▶ Observe the notes on activating ESP® SPORT(→ page 11).

A

AMG

- Menu (on-board computer)..... 19
- Steering wheel control element..... 8
- Steering-wheel buttons..... 8

AMG active adaptive sport suspension system

- Selecting the suspension setting..... 16
- Setting the vehicle level..... 17
- Suspension..... 15

AMG adaptive sport suspension system +

- Suspension..... 14

AMG ceramic high-performance composite brake system

- 8

AMG Performance adjustable exhaust system

- Function..... 7
- Operating..... 7

AMG Performance steering wheel..... 8**AMG TRACK PACE**

- Configuring..... 27
- Drag Race..... 26

- Function..... 23
- Telemetry display..... 27
- Track Race..... 23

Automatic transmission

- Drive programs..... 9
- DYNAMIC SELECT switch..... 9
- Manual gearshifting..... 10
- Oil temperature (on-board computer, Performance menu)..... 19
- Steering wheel paddle shifters..... 10

Axle load

- Towing a trailer..... 39

B

Bicycle rack

- Load capacity..... 38

Boost pressure (on-board computer, Performance menu)..... 19**Brakes**

- AMG ceramic high-performance composite brake system..... 8

C

Changing a wheel

- Installing a new wheel..... 29
- Removing a wheel..... 29

Changing gears

- Manually..... 10

Climate control

- Filling capacity for PAG oil..... 32
- Refrigerant filling capacity..... 32

Cockpit

- Overview..... 4

Coolant (engine)

- Capacity..... 32

D

Dashboard

- see Cockpit

Display messages

-  [Malfunction Drive at Max. 50 mph](#)..... 40
- [AMG Suspension System Function Limited See Operator's Manual](#)..... 40

Drag Race
 Setting..... 26

Drive programs
 see DYNAMIC SELECT

Driving safety system
 ESP® (Electronic Stability Program)..... 11

Driving system
 AMG adaptive sport suspension system + 14

Driving system
 see AMG active adaptive sport suspension system

Driving tips
 AMG ceramic high-performance composite brake system..... 8

DYNAMIC SELECT
 Drive programs..... 9
 Function..... 9

E

E10..... 30

Emotion Start
 Starting the vehicle..... 7

Engine oil
 Capacity..... 31
 MB-Freigabe or MB-Approval..... 31
 Quality..... 31
 Temperature (on-board computer, Performance menu)..... 19

ESP® (Electronic Stability Program)
 Activating/deactivating..... 14
 ESP® SPORT..... 11
 Function/notes..... 11
 Status display (on-board computer, Performance menu)..... 19

ESP® SPORT
 Function/notes..... 11

F

Fuel
 E10..... 30
 Flexible fuel vehicles..... 30
 Fuel reserve..... 31
 Gasoline..... 30
 Quality (gasoline)..... 30
 Sulfur content..... 30
 Tank content..... 31

G

G-meter (on-board computer, Performance menu)..... 19

Gasoline..... 30

Gear display (on-board computer, Performance menu)..... 19

Glide mode..... 11

H

Head-up Display
 Function..... 21

I

Instrument display
 AMG displays..... 19

L

Lowered suspension
 see AMG active adaptive sport suspension system

M**Menu (on-board computer)**

- AMG displays..... 19
- Performance..... 19

O**On-board computer**

- AMG menu..... 19
- Performance menu..... 19

Operating fluids

- Fuel (gasoline)..... 30

Operator's Manual

- Vehicle equipment..... 6

P**Performance (on-board computer, Performance menu)**

19

Power output (on-board computer, Performance menu)

19

R**Reserve**

- Fuel..... 31

Roof load..... 36

S**Selecting a gear**

see Changing gears

SETUP (on-board computer, Performance menu)

19

Shift paddles

see Steering wheel paddle shifters

Sports exhaust

see AMG Performance adjustable exhaust system

Start/Stop button

Emotion Start..... 7

Steering wheel paddle shifters..... 10

Sulfur content..... 30

Suspension

- AMG adaptive sport suspension system +..... 14
- Selecting the suspension setting..... 16
- Setting the vehicle level..... 17

Suspension

see AMG active adaptive sport suspension system

Suspension level

Setting..... 17

T**Tank content**

- Fuel..... 31
- Reserve (fuel)..... 31

Technical data

- Axle load (trailer operation)..... 39
- Notes (trailer hitch)..... 37
- Tongue weight..... 38
- Towing capacity (trailer operation)..... 38

Telemetry display

Calling up..... 27

Temperature

- Engine oil (on-board computer, Performance menu)..... 19
- Transmission oil (on-board computer, Performance menu)..... 19

Tires

Installing..... 29

Removing.....	29
Tongue weight	38
Torque (on-board computer, Performance menu)	19
Track Race	
Setting.....	23
Trailer tow hitch	
Axle load.....	39
General notes.....	37
Tongue weight.....	38
Towing capacity.....	38
Trunk lid	
Opening dimensions.....	33

V

Vehicle

Equipment.....	6
Starting (Emotion Start).....	7

Vehicle data

Angle of approach/departure.....	36
Maximum gradient-climbing capability....	36
Roof load.....	36
Turning circle.....	33

Vehicle height.....	33
Vehicle length.....	33
Vehicle width.....	33
Wheelbase.....	33
Vehicle dimensions	33

W

Warm-up (on-board computer, Performance menu)	19
--	----

Warning/indicator lamp

 Suspension warning lamp (yellow).....	41
---	----

Wheels

Installing.....	29
Removing.....	29

Publication details

Internet

Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

<https://www.mbusa.com> (USA only)

<https://www.mercedes-benz.ca> (Canada only)

Documentation team

©Mercedes-Benz AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

Vehicle manufacturer

Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart

Germany



1675848720

Order no. P167 0466 13 Part no. 167 584 87 20
Edition A 2022